

自动剪线高速平缝机

HIGH SPEED SINGLE NEEDLE FLATBED LOCKSTITCH
SEWING MACHINE WITH AUTOMATIC THREAD TRIMMER

8700-7/8900-7 SERIES

King Special

零件样本


Parts Book

CONTENTS

目 录

1.ARM BED COMPONENTS 机壳分组件	1
2.MAIN SHAFT COMPONENTS 上轴挑线杆分组件	5
3.NEEDLE BAR & HOOK DRIVING SHAFT COMPONENTS	7
针杆传动轴分组件	
4.HAND LIFTER COMPONENTS 提压脚分组件	9
5.FEED MECHANISM COMPONENTS 送料分组件	11
6.THREAD TRIMMER COMPONENTS 剪线部件	15
7.AUTOMTIC REVERSE FEED COMPONENTS 自动倒送料部件	19
8.WIPER COMPONENTS 拨线器组件	21
9.OIL LUBRICATION COMPONENTS 润滑部件	23
10.OIL LUBRICATION COMPONENTS 油盘分组件	25
11.BELT COVER BOBBIN WINGER COMPONENTS	27
绕线器、皮带罩分组件	
12.THREAD STAND COMPONENTS 线架分组件	29
13.ACCESSORIES 附件	31


1. 机壳分组件 ARM BED COMPONENTS

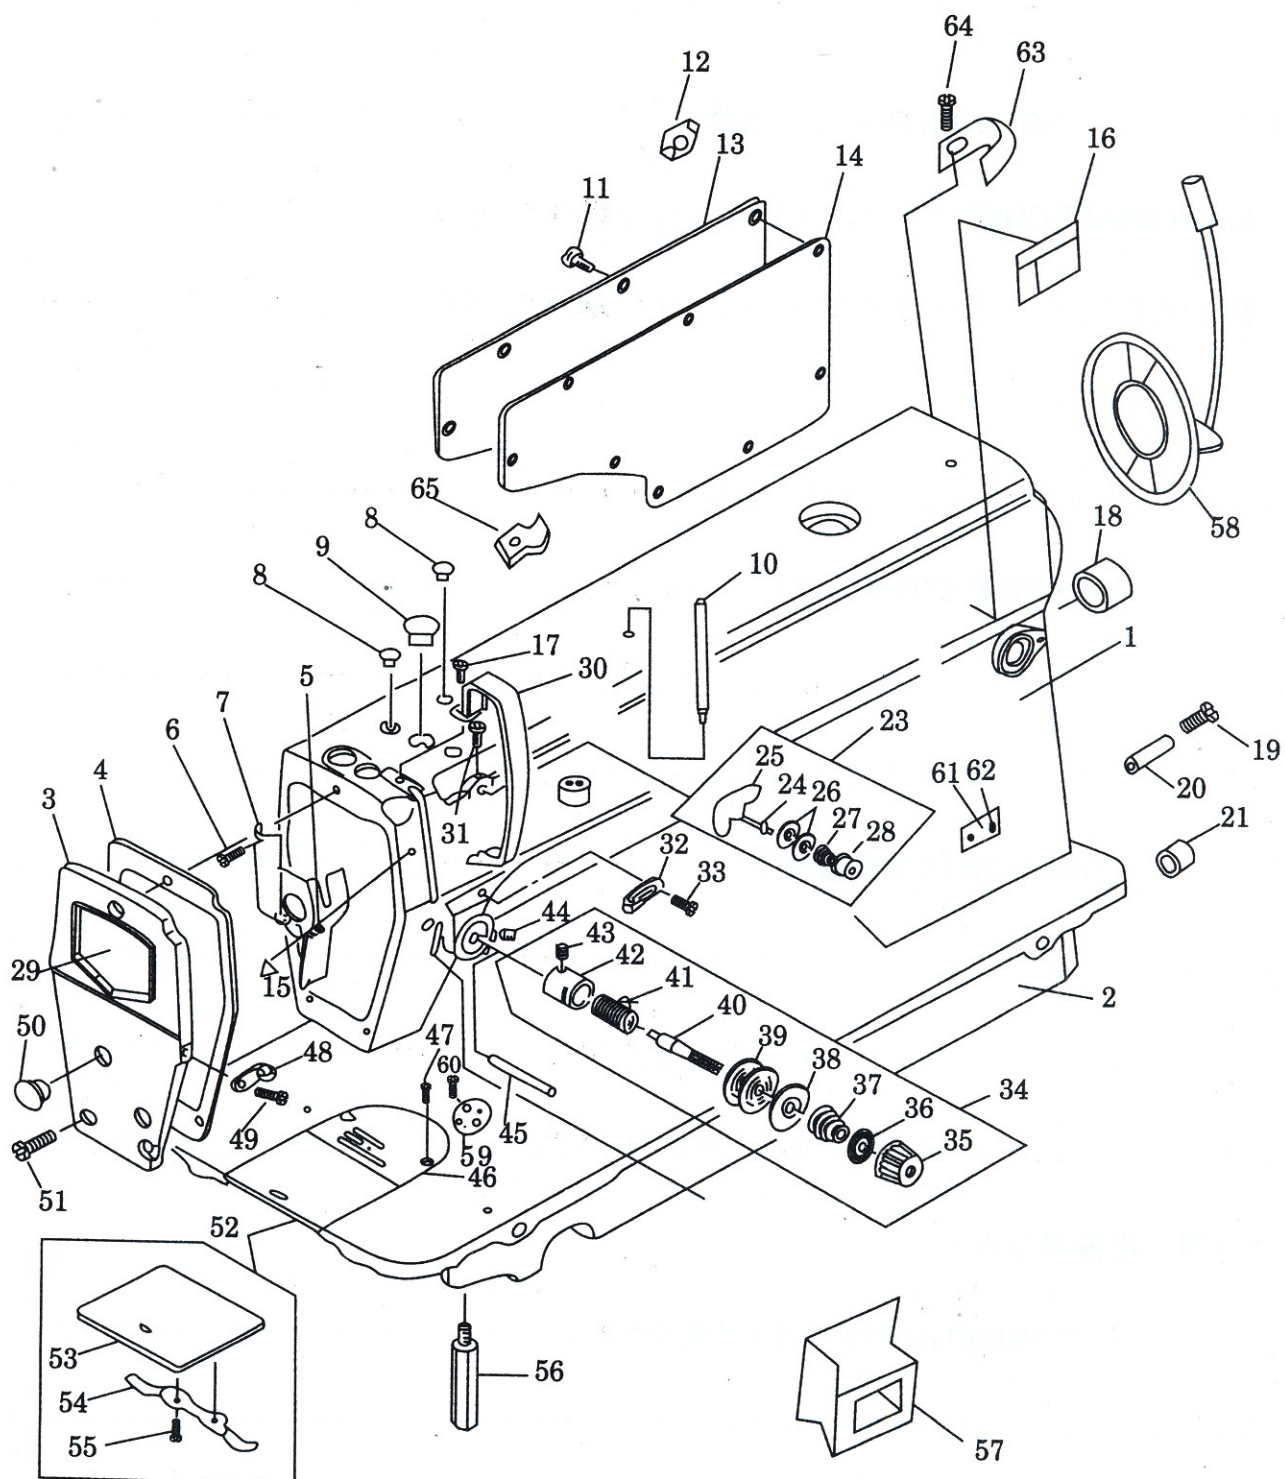

一、机头部件 ARM AND BED COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
1	101-01-01-02	机头	ARM	1	
2	109-01-01-02	底板	BED	1	
3	101-01-07	面板	FACE PLATE ARM	1	
4	101-01-09	面板垫	BRAND PLATE GASKET	1	
5	101-08-35	面部防油板油线	OIL WICK	1	
6	101-08-36	面部防油板螺钉	SCREW SM 1/8" x44 L=4	1	
7	101-08-34	面部防油板	ARM OIL SHIELD ASM,	1	
8	101-01-12	挑线连杆销螺孔塞	RUBBER PLUG	2	
9	101-01-11	针杆曲柄螺孔塞	RUBBER PLUG	1	
10	109-01-07	过线柱	NEEDLE THREAD GUIDE PIN	1	
11	101-01-06	后窗板螺钉	SCREW SM3/16x28 L=9	8	
12	109-01-09	上电线压线板	CORD HOLDER	1	
13	101-01-04	后窗板	SIDE PLATE	1	
14	101-01-05	后窗板垫	SIDE PLATE GUIDE	1	
15	109-01-12	注意标签	ATTENTION SEAL	1	
16	101-01-18	安全指示牌	SAFETY INDICATION SEAL	1	
17	101-02-30	挑线杆护罩螺钉	SCREW SM3/16" x28L=6	1	
18	101-01-02	送料调节器孔塞	RUBBER PLUG	1	
19	109-01-17	螺钉SM3/8X28/12	SCREW	1	
20	109-01-18	限位圈	LIMIT PLACE BUSHING	1	
21	101-01-03	下轴工艺孔塞	RUBBER PLUG	1	
22	109.01-20	双孔橡胶塞	DOUBLE HOLES RUBBER PLUG	1	
23	109.01-21	小夹线器组件	PRE-TENSION ASSY	1	
24	109.01-22	导线柱	NEEDLE THREAD GUIDE PIN	1	
25	109.01-23	上过线板	THROUGH THREAD PLATE	1	
26	109.01-24	夹线板	THREAD GUIDE DISC	2	
27	109.01-25	夹线弹簧	TENSION SPRING	1	
28	109.01-26	夹线螺母	TENSION NUT	1	
29	101-01-08	商标牌	PLATE WITH TRADEMARK	1	
30	101-02-29	挑线杆护罩	THREAD TAKE-UP LEVER COVER	1	
31	101-02-30	三眼线勾螺钉	THREE-HOLE THREAD EYELET SCREW	1	
32	101-03-16	右线勾	ARM THREAD GUIDE (RIGHT)	1	
33	101-03-17	右线勾螺钉	ARM THREAD GUIDE SCREW	1	
34	101-03-22	大夹线器组件	PRE-TENSION ASSY	1	
35	101-03-28	夹线螺母	TENSION NUT	1	
36	101-03-27	夹线制动板	TENSION DISC STOPPER	1	
37	101-03-26	夹线簧	TENSION SPRING	1	
38	101-03-25	松线板	TENSION DISC HOLDER	1	
39	101-03-24	夹线板	THREAD GUIDE DISC	2	
40	101-03-21	夹线螺钉(柱)	TENSION POST	1	
41	101-03-20	挑线簧	TAKE-UP SPRING	1	
42	101-03-19	挑线簧调节座	TENSION POST SOCKET	1	
43	101-03-22	夹线座紧固螺钉	SCREW SM9/64X40X5.5	1	
44	101-03-29	夹线器螺钉	SCREW SM15/64X28X7	1	
45	101-03-23	松线钉	THREAD RELEASE PIN	1	


1. 机壳分组件 ARM BED COMPONENTS

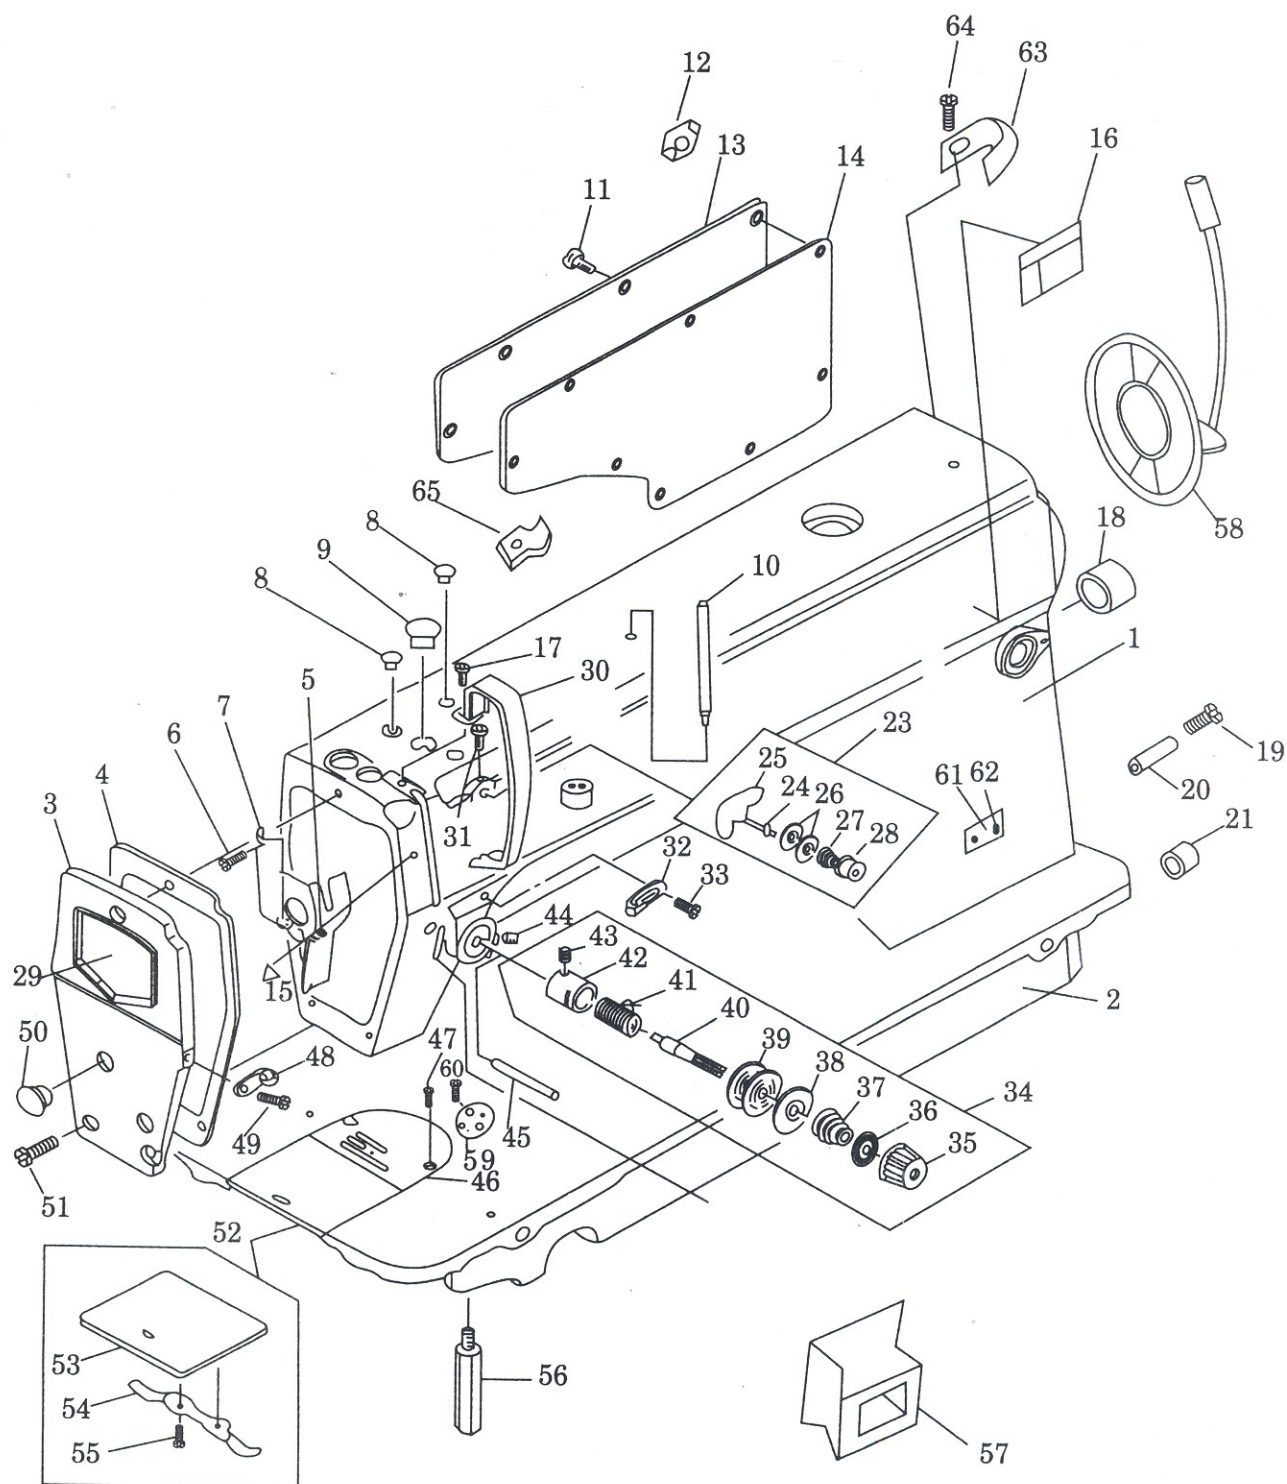

一、机头部件 ARM AND BED COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
46	109.01-44	针板	NEEDLE PLATE	1	
47	101-06-37	针板螺钉	SCREW SM11/64" X40X8.5	2	
48	101-03-18	左线勾	ARM THREAD GUIDE (LEFT)	1	
49	101-03-17	左线勾螺钉	ARM THREAD GUIDE SCREW	1	
50	101-01-10	面板调节螺孔塞	RUBBER PLUG	2	
51	101-01-06	面板螺钉	SCREW SM3/16x28 L=9	3	
52	101-06-39	推板组件	SLIDE PLATE ASM	1	
53	101-06-39-1	推板	SLIDE PLATE	1	
54	101-06-40	推板簧	SLIDE PLATE SPRING	1	
55	101-06-41	推板簧螺钉	SCREW SM3/32" X56X9	2	
56	101-01-15	底板支座	BED SCREW STUD SM15/64X28	4	
57	109.01-57	橡胶垫板	RUBBER BOARD	1	
58	109.01-73	信号器	ANNOUNCIATOR	1	
59	101-01-17	按装板	RULER STOP SEAT	1	
60	101-01-16	按装板定位螺钉	SCREW SM11/64" X40X5.5	2	
61	109.01-74	型号牌	MODEL PLATE	1	
62	101-01-14	型号牌铆钉	MODEL PLATE RIVET	2	
63	109.01-70	下电线勾线板	CORD HOLDER	1	
64	109-01-29	螺钉	SCREW	1	
65	109.01-71	左电线勾线板	CORE HOLDER	1	


2、上轴挑线杆分组件 MAIN SHAFT COMPONENTS

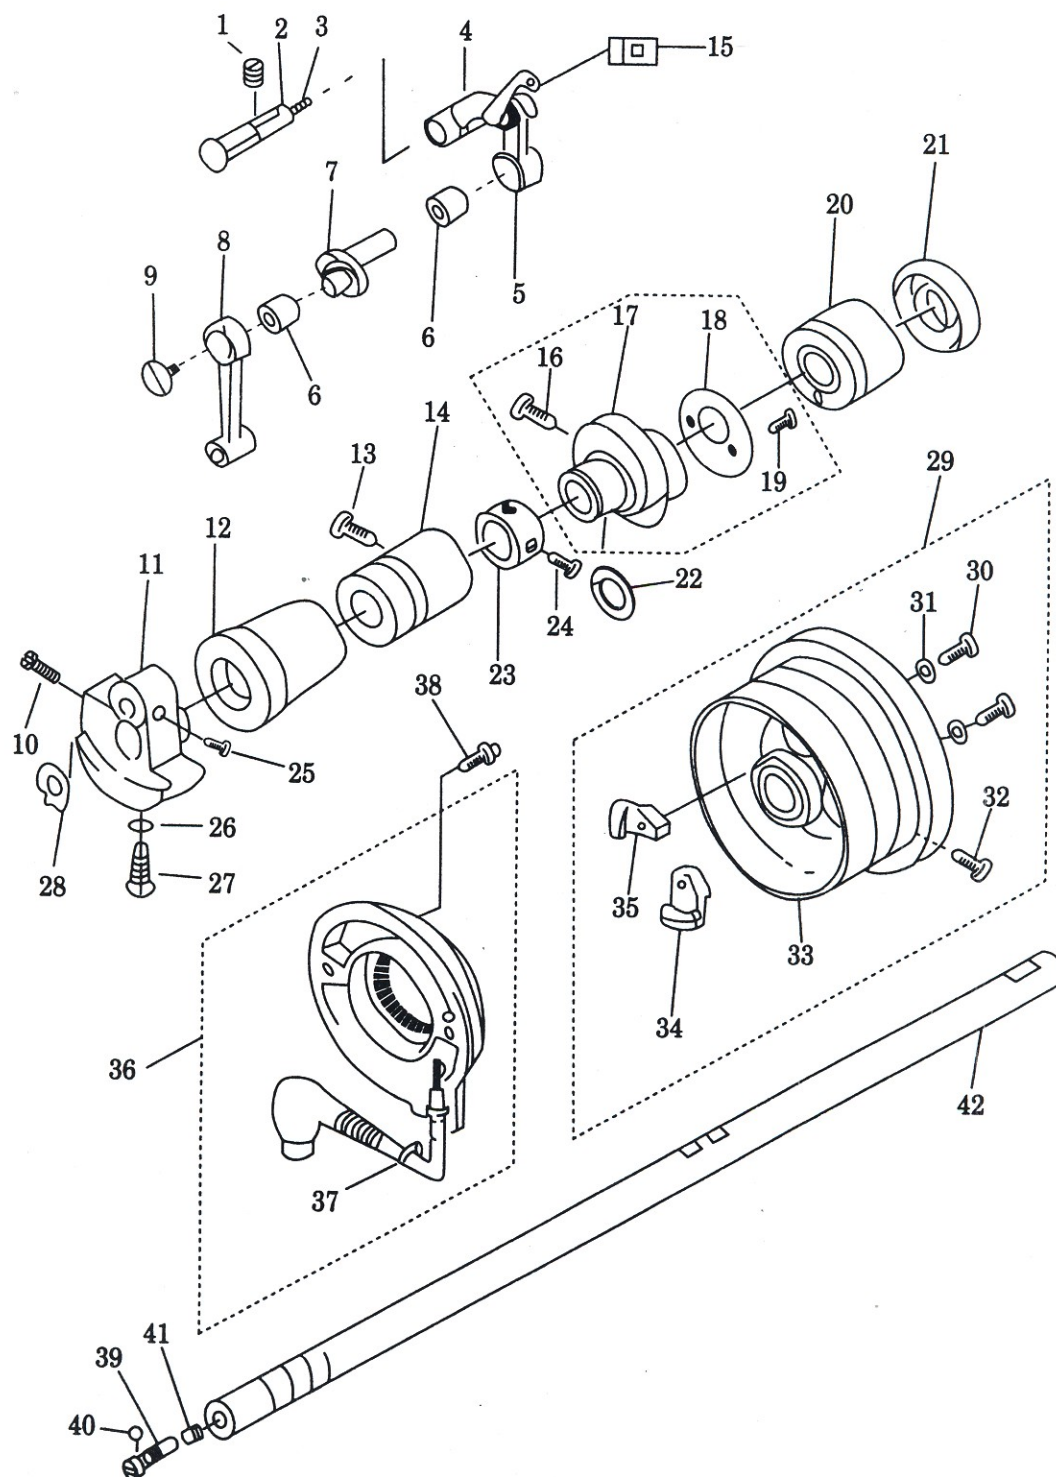

二、上轴挑线杆分组件 MAIN SHAFT COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
1	101-02-27	挑线连杆销螺钉	SET SCREW	1	
2	101-02-25	挑线连杆销	HINCE PIN	1	
3	101-02-26	挑线连杆销油线	OIL WICK	1	
4	101-02-22-05	挑线连杆	THREAD TAKE-UP LEVER LINK	1	
5	101-02-22	挑线杆组件	THREAD TAKE-UP LEVER	1	
6	101-02-24	滚针轴承	NEEDLE BEARING	2	
7	101-02-20-00	挑线曲柄组件	THREAD TAKE-UP CRANK	1	
8	101-03-01	针杆连杆	NEEDLE BAR LINK	1	
9	101-02-28	挑线曲柄左旋螺钉	SET SCREW(LEFT HANDED)	1	
10	101-02-18	针杆曲柄紧固螺钉	SET SCREW	1	
11	101-02-15	针杆曲柄	NEEDLE BAT CRANK	1	
12	101-02-10	上轴前轴套组件	MAIN SHAFT BUSHING(LEFT)	1	
13	101-02-09	上轴中轴套螺钉	MAIN SHAFT BUSHING(MIDDLE)SCREW	1	
14	101-02-08	上轴中轴套	MAIN SHAFT BUSHING(MIDDLE)	1	
15	101-02-23	挑线杆防油套	OIL PROTECT BUSHING	1	
16	101-06-03	送料偏心轮螺钉	SCREW SM1/4X40	2	
17	101-06-02	送料偏心轮	FEED DRIVE ECCENTRIC CAM	1	
18	101-06-04	送料偏心轮盖板	THRUST COLLAR	1	
19	101-06-05	送料偏心轮盖板螺钉	SCREW SM9/64" X40X6	2	
20	101-02-05	上轴后轴套组件	MAIN SHAFT BUSHING BEAR ASM	1	
21	101-02-04	上轴油封	OIL SEAL	1	
22	101-06-52	抬牙连杆轴用挡圈	SNAP RING 18.5	1	
23	101-02-06	上轴挡圈	THRUST COLLAR D=14.72 W=12	1	
24	101-02-07	上轴挡圈螺钉	SCREW SM1/4" X40X6	2	
25	101-02-07	针杆曲柄螺钉	SCREW SM 1/4" X40X6	2	
26	101-02-17	定位螺钉O形圈	RUBBER RING	1	
27	101-02-16	针杆曲柄定位螺钉	SCREW SM9/32" X28X6	1	
28	101-02-19	针杆曲柄护板	COUNTER WEIGHT PROTECTING PLATE	1	
29	109.02-34	上轮组件	HAND WHEEL ASM	1	
30	109.02-31	螺钉SM11/64X40/12	SCREWSM11/64X40/12	2	
31	109.02-32	垫圈	WASHER	2	
32	101-02-02	螺钉SM15/64X25/15	SCREWSM15/64X25/15	2	
33	109.02-34	手轮	HAND WHEEL	1	
34	109.02-35	磁铁A	MAGNET A	1	
35	109.02-36	磁铁B	MAGNET B	1	
36	109.02-37	发电机定子	DYNAMOTOR STATOR	1	
37	109.02-28	夹线扣	LINE HOLDER	1	
38	109.02-39	螺钉M5X9.6	SCREW M5X9.6	2	
39	101-02-12	曲柄油量调节销	SLEEVE OF OIL AMOUNT ADJUSTIN PIN	1	
40	101-02-14	曲柄油量调节销O型圈	RUBBER RING	1	
41	101-02-11	曲柄油量限制垫	ROLLER FELT	1	
42	101-02-03	上轴	MAIN SHAFT	1	


3. 针杆传动轴分组件 NEEDLE BAR & HOOK DRIVING SHAFT COMPONENTS

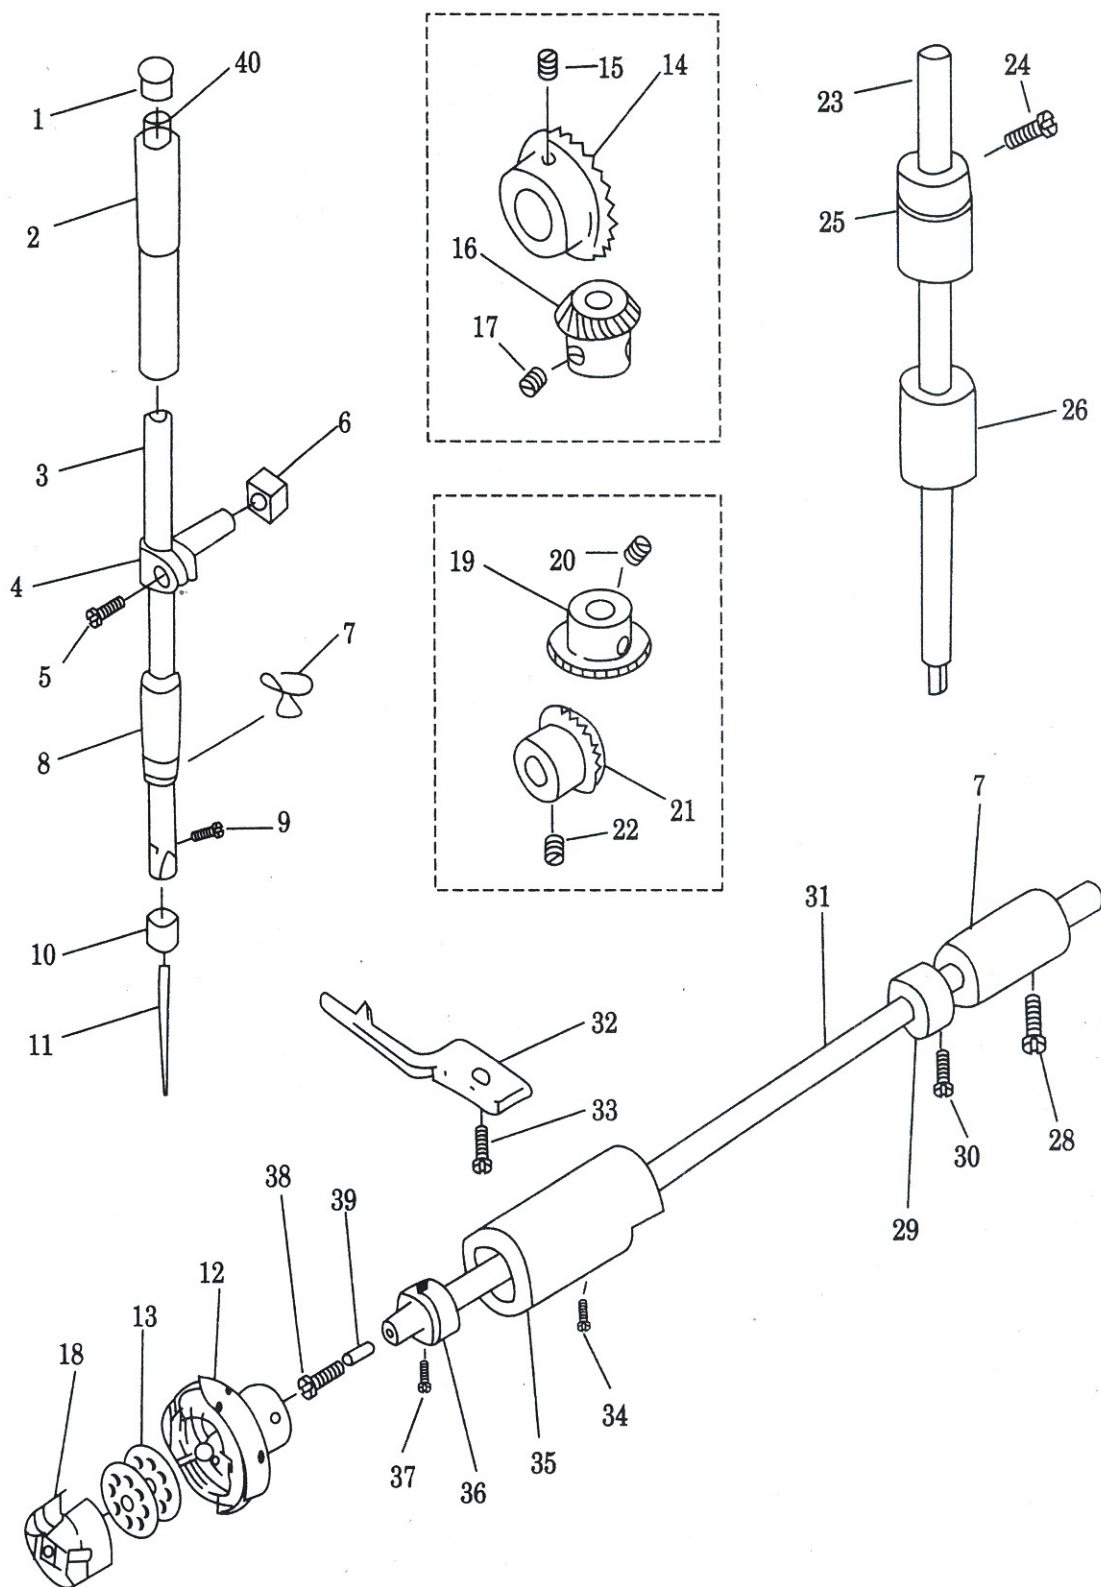

三、针杆传动轴分组件NEEDLE BAR & HOOK DRIVING SHAFT COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
1	101-03-07	针杆上衬套孔塞	RUBBER PLUG	1	
2	101-03-06	针杆上衬套	NEEDLE BAR BUSHING	1	
3	101-03-10	针杆	NEEDLE BAR	1	
4	101-03-03	针杆连接柱组件	NEEDLE BAR CONNECTION ASM.	1	
5	101-03-04	针杆连接柱螺钉	SCREW SM9/64 " X40X6	1	
6	101-03-05	针杆连接柱滑块	SLIDE BLOCK	1	
7	101-03-09	针杆下轴套线勾	NEEDLE BAR THREAD GUIDE	1	
8	101-03-08	针杆下轴套	NEEDLE BAR BUSHING LOWER	1	
9	101-03-12	支针螺钉	SCREW SM1/8 " X44	1	
10	101-03-11	针杆过线环	NEEDLE BAR THREAD GUIDE	1	
11	101-03-13	机针	NEEDLE	1	
12	101-05-01	旋梭组件	HOOK ASM	1	
13	101-05-03	梭心	BOBBIN	1	
14	101-05-26	上轴伞齿轮	BEVEL GEAR FOR ARM SHAFT	1	
15	101-05-19	伞齿轮螺钉	SCREW SM1/4 " X40X8	2	
16	101-05-25	竖轴上伞齿轮	BEVEL GEAR FOR VERTICAL SHAFT	1	
17	101-05-19	伞齿轮螺钉	SET SCREW	2	
18	101-05-02	梭心套	BOBBIN CASE	1	
19	101-05-20	竖轴下伞齿轮	BEVEL GEAR FOR VERTICAL SHAFT	1	
20	101-05-19	伞齿轮螺钉	SET SCREW	2	
21	101-05-18	下轴伞齿轮	BEVEL GEAR FOR HOOK SHAFT	1	
22	101-05-19	伞齿轮螺钉	SET SCREW	2	
23	101-05-24	竖轴	VERTICAL SHAFT	1	
24	101-05-23	竖轴上轴套螺钉	SCREW	1	
25	101-05-22	竖轴上轴套	BUSHING FOR VERTICAL SHAFT	1	
26	101-05-21	竖轴下轴套	BUSHING FOR VERTICAL SHAFT	1	
27	101-05-14	下轴后轴套	BUSHING FOR ROTATING HOOK SHAFT	1	
28	101-05-15	下轴后轴套螺钉	SCREW	1	
29	101-05-16	下轴挡油圈	THRUST COLLAR	1	
30	101-05-17	下轴挡油圈螺钉	SCREW SM3/16 " X28X9	2	
31	101-05-07	下轴	ROTATING HOOK SHAFT	1	
32	101-05-05	旋梭定位钩	POSITIONING FINGER	1	
33	101-05-06	旋梭定位钩螺钉	SCREW SM11/64 " X40	1	
34	101-05-13	下轴前轴套螺钉	SCREW SM15/64 " X28	1	
35	101-05-12	下轴前轴套组件	HOOK DRIVING SHAFT BUSHING ASM	1	
36	101-05-10	下轴挡油圈	THRUST COLLAR ASM	1	
37	101-05-11	下轴挡油圈螺钉	SCREW SM11/64 " X40X3.5	2	
38	101-05-08	下轴限位螺钉	OIL SEAL SCREW	1	
39	101-05-09	下轴限油芯	OIL WICK	1	
40	101-08-40	上轴轴套毡塞	FELT PLUG	1	


4. 提压脚分组件 HAND LIFTER COMPONENTS

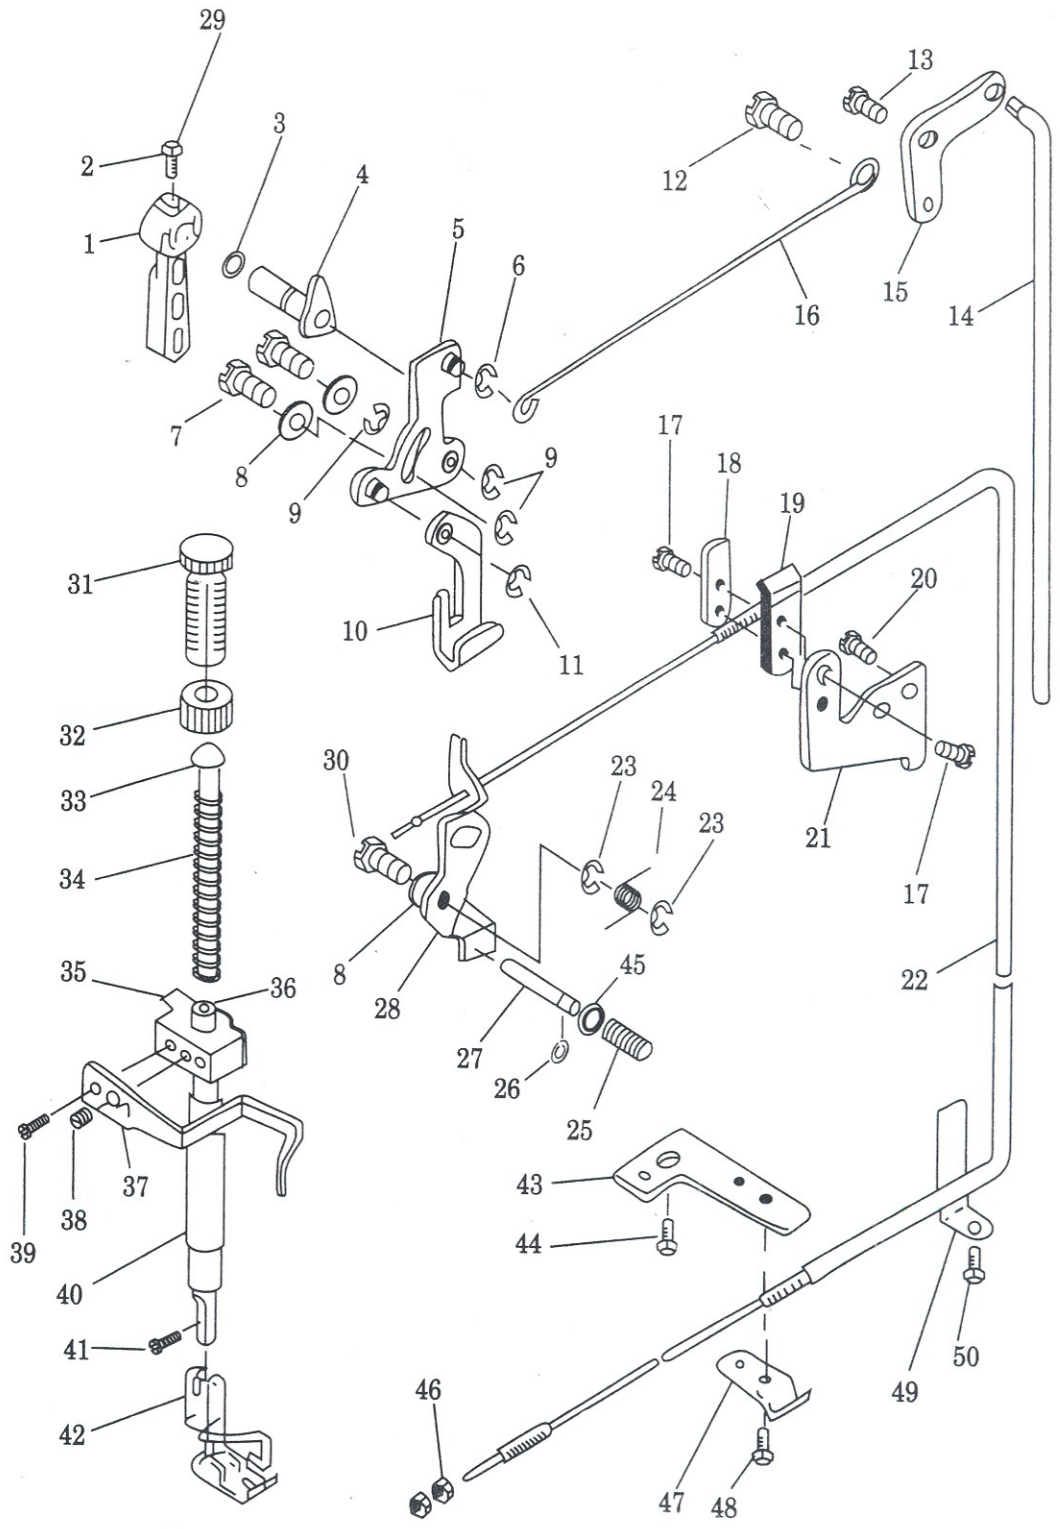

四、提压脚分组件HAND LIFTER COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
1	101-04-13	压脚扳手	HAND LIFTER	1	
2	101-04-14	压脚扳手螺钉	SCREW SM9/64X40	1	
3	101-04-17	压脚扳手轴O形圈	RUBBER RING	1	
4	101-04-16-00	压脚扳手凸轮组件	HAND LIFTER CAM ASM,	1	
5	101-04-19-00	抬压脚前杠杆组件	HAND LIFTER LINK	1	
6	101-04-22	开口挡圈	SNAPRING	1	
7	101-04-20	前杠杆螺纹销	LINK SHAFT SM5/16 " X24	2	
8	101-03-32	松线铺钉垫片	WASHER PLATE	1	
9	101-04-22	开口挡圈	SNAPRING	3	
10	101-04-18	压脚升降板	LIFTING LEVER	1	
11	101-04-22	开口挡圈	SNAPRING	1	
12	101-04-32	抬压脚拉杆螺钉	HINGE SCREW SM3/16 " X32	1	
13	101-04-31	后杠杆轴位螺钉	HINGE SCREW SM15/64 " X28	1	
14	101-04-33	抬压脚顶杆	CONNECTING ROD VERTICAL	1	
15	101-04-30	抬压脚后杠杆	LIFTING LEVER RING	1	
16	101-04-28	抬压脚拉杆	LIFTING LEVER CONNECTING ROD	1	
17	101-06-33	螺钉	SCREWSM11/64X40/7	2	
18	109-04-18	压板B	PRESSER PLATEB	1	
19	109-04-18A	压板A	PRESSER PLATEA	1	
20	101-02-30	螺钉	SCREWSM3/64X28/6	1	
21	109-04-20	上电线压板	RDH LDR	1	
22	109-04-44	制动器组件	ARRESTER ASSY	1	
	109-04-44.1	制动器固定帽	ARRESTER CAP	1	
	109-04-44.2	钢丝绳	STEEL WIRE	1	GB9944-88
	109-04-44.3	制动器钢丝保护套	STEEL WIRE PROTECT BUSHING	1	
	109-04-44.4	制动器调节螺钉	ADJUSTING SCREW	1	
23	101-04-22	开口挡圈E5	E-RING	2	
24	101-04-27	松线顶板复位簧	THREAD TENSION RELEASE WIRE SPRIN	1	
25	101-03-33	松线铺钉弹簧	TENSION RELEASE SUPPORTING PIN SPRI	1	
26	101-03-31	松线铺钉开口挡圈E4	E-RING	1	
27	101-03-30	松线铺钉	TENSION RELEASE SUPPORTING PIN	1	
28	101-04-24	松线顶板	TENSION RELEASE PLATE	1	
29	101-04-15	压脚扳手螺钉垫圈	WASHER	1	
30	101-04-25	松线顶板螺纹销	TENSION RELEASE SHAFT	1	
31	101-04-01	调压螺钉	PRESSER REGULATOR SCREW	1	
32	101-04-02	调压螺母	PRESSER REGULATOR NUT	1	
33	101-04-03	调节导杆	PRESSER GUIDE BAR	1	
34	101-04-04	调压簧	PRESSER SPRING]	1	
35	101-04-06	压杆导架	PRESSER BAR GUIDE BRACKET	1	
36	101-04-05	压杆	PRESSER BAR GUIDE BRACKET	1	
37	101-04-08	缓线调节勾	PRESSER BAR GUIDE BRACKET	1	
38	101-04-07	压杆导架螺钉	SCREW SM1/4X40X8	1	
39	101-04-09	缓线调节勾螺钉	SCREW SM9/64X40X10	2	
40	101-04-10	压杆衬套	PRESSER BAR BUSHING LOWER	1	
41	101-04-12	活压脚螺钉	PRESSER FOOT SCREW	1	
42	109-04-41	活压脚组件	PRESSER FOOT ASM.		
43	109-04-42	下电线压板	CORD HOLDER	1	
44	101-02-09	螺钉	SCREWSM15/64X28/9	1	
45	101-03-32	松线铺钉垫片	WASHER PLATE	1	
46	109-04-21	螺母SM3/16X32	NUT	2	
47	109-04-18	电线压紧板A	CORD HOLDER A	1	
48	109-04-43	螺钉SM11/64X40/4	SCREW	1	
49	109-04-25	电线压紧板	CORD HOLDER	1	
50	101-02-30	螺钉SM3/16X28/6	SCREW	1	


5.送料分组件 FEED MECHANISM COMPONENTS

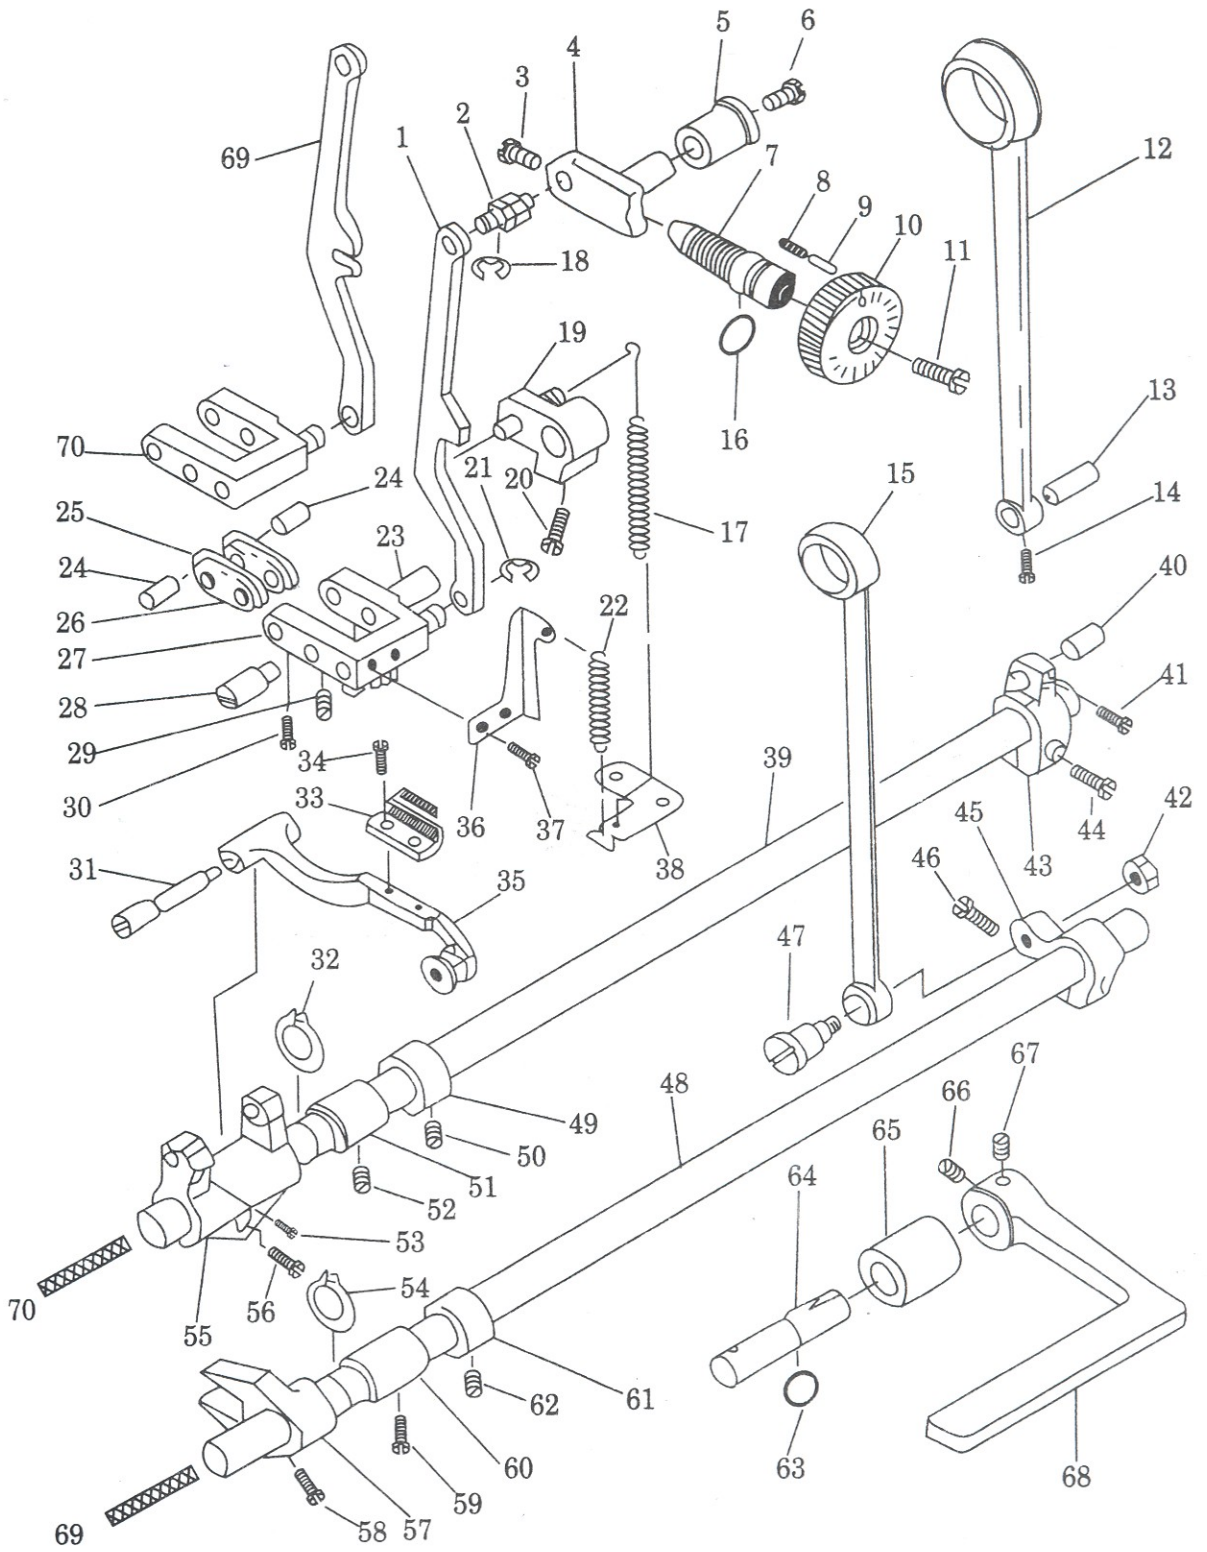

五、送料分组件 FEED MECHANISM COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
1	109.05-23	倒送料连杆	FEED REGULATOR CONNECTING TOD	1	
2	101-07-10	倒送料连杆销	FEED REGULATOR PIN	1	
3	101-06-05	送料连杆销螺钉	SCREW SM9/64X40X6	2	
4	101-07-07	送料调节器	FEED REGULATOR	1	
5	101-07-08	送料调节器轴套	FEED REGULATOR BUSHING	1	
6	101-07-09	送料调节座轴端螺钉	SCREW SM3/16X32	1	
7	101-07-03	送料调节螺柱	FEED REGULATOR SCREW	1	
8	101-07-06	送料距锁合簧	SPRING	1	
9	101-07-05	送料距锁合销	PIN	1	
10	109.05-10	送料距旋钮	FEED DEAL	1	
11	101-07-02	送料距旋钮螺钉	SCREW SM3/16X28X9	1	
12	101-06-06	送料连杆	ROCKER SHAFT CONNECTING ROD	1	
13	101-06-07	送料连杆销	WALKING FOOT PIN	1	
14	101-06-05	送料连杆销螺钉	SCREW SM9/64X40X6	1	
15	101-06-49	拾牙连杆	CONNECTING ROD	1	
16	101-07-04	送料调节螺柱O形圈	RUBBER RING	1	
17	10-07-22	倒送料拉簧	FEED REVERSE SPRING	1	
18	101-04-22	开口挡圈	SNAP RINGG	1	
19	101-07-20-00	倒送料曲柄组件	FEED REVERSE ASM	1	
20	101-07-21	倒送料曲柄螺钉	FEED REVERSE AREM SCREW	1	
21	101-04-22	开口挡圈	SNAP RING	1	
22	109.05-22	Bt调整连接弹簧	ADJUSTING CONNECTING SPRING	1	
23	101-06-16	送料摆动板座右销	ADJUSTING LINK FULCRUM SHAFT B	1	
24	101-06-11	短摆动座连接销	WALKING FOOT LINK	2	
25	101-06-09	送料长摆动板	WALKING FOOT LINK	2	
26	101-06-10	送料短摆动板	CONNECTING LINK	2	
27	109.05-27	送料摆动摆座	WALKING FOOT ADJUSTING LINK	1	
28	101-06-14	送料摆动板座右销	ASJUSTING LINK FULCRUM SHAFT A	1	
29	101-02-27	螺钉	SCREW	2	
30	101-06-05	连接销螺钉	SCREW SM9/64X40X6	2	
31	109.05-31	牙架销	FEED BAR SHAFT	1	
32	101-06-23	送料轴轴用挡圈	RETAINING RING	1	
33	109.05-33	送料牙	FEED DOG	1	
34	101-06-35	送料牙螺钉	SCREW SM1/8" X	2	
35	109.05-35	牙架组件	FEED BAR ASM	1	
	109.05-05	牙架	FEED BRACKET	1	
36	109.05-36	摆动摆座弹簧架	ADJUSTING LINK SPRING FRAME	1	


5.送料分组件 FEED MECHANISM COMPONENTS

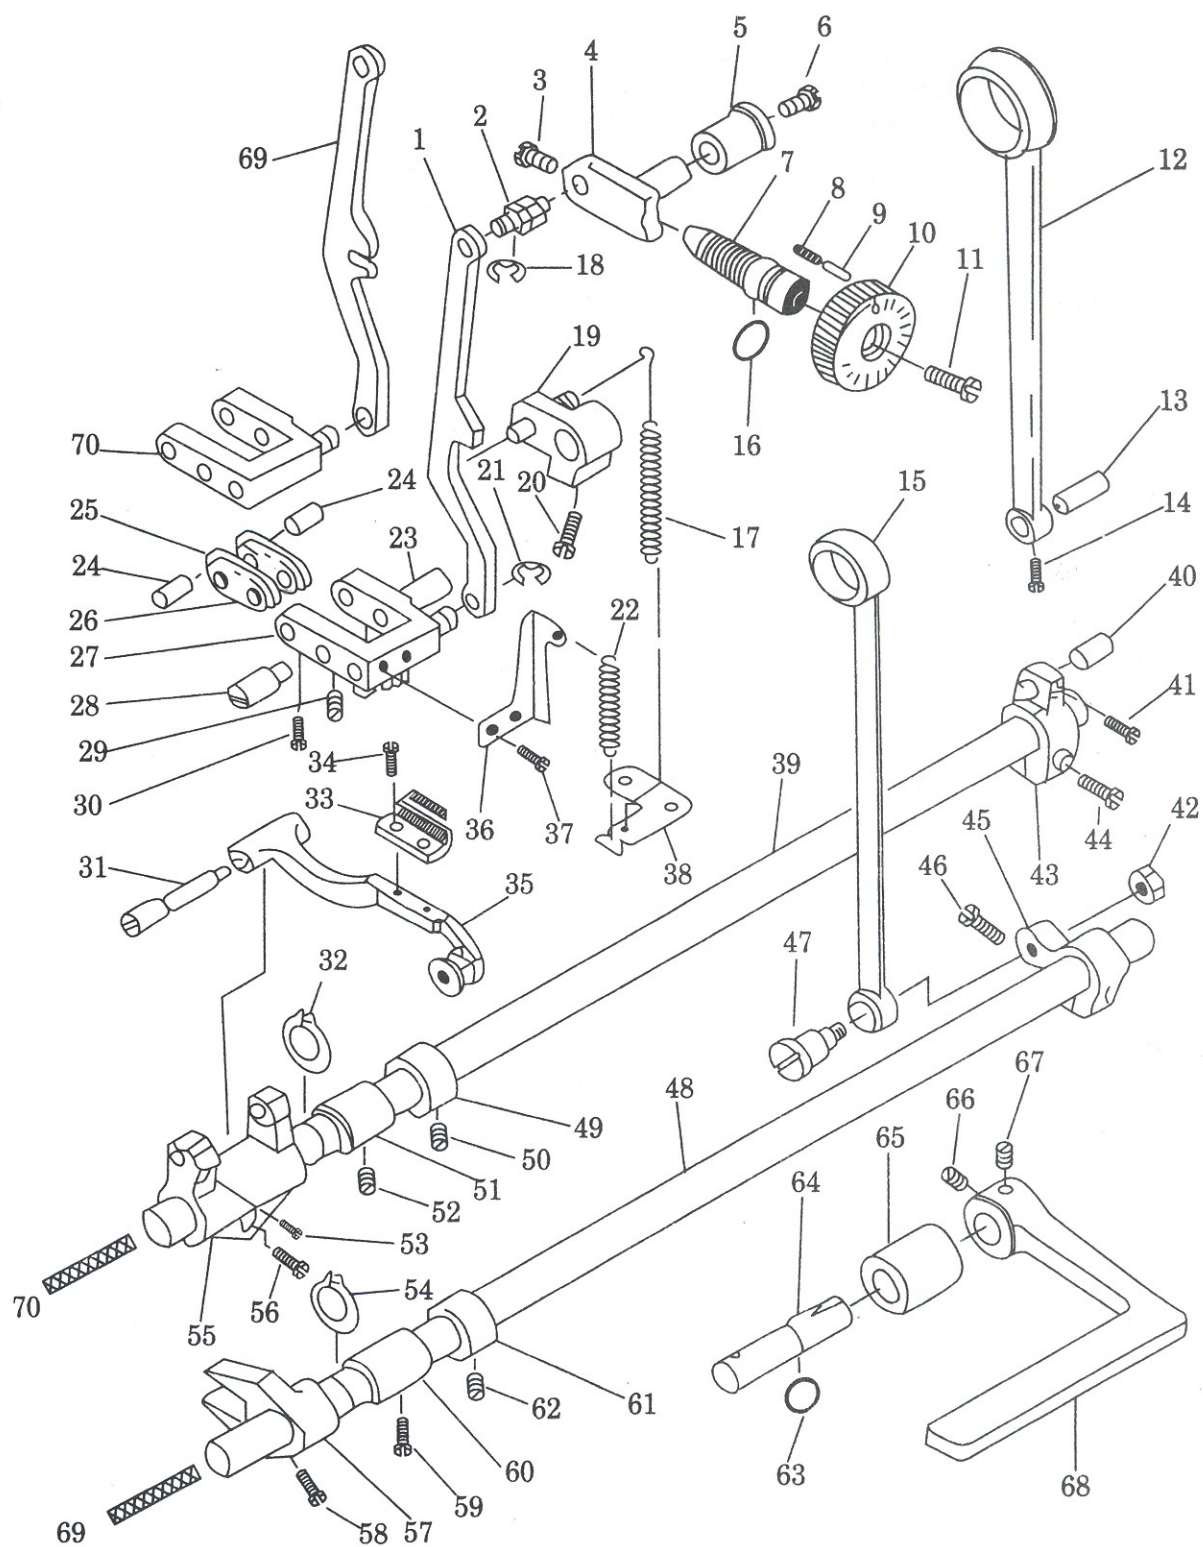

5、送料分组件FEED MECHANISM COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
37	109.05-37	摆动板座复位板螺钉	SCREW	2	
38	101-07-23	拉簧固定板	FEED SPRING HOOK	1	
39	101-06-22	送料轴	FEED ROCKER SHAFT	1	
40	101-06-19	送料曲柄销	FEED ROCKER CRANK PIN	1	
41	101-06-05	送料曲柄销螺钉	SCREW	1	
42	101-06-51	抬牙连杆轴位螺母	HINGE SCREW	1	
43	101-06-18	送料曲柄	FEED ROCKER SHAFT CRANK	1	
44	101-06-21	送料曲柄螺钉	SCREW SM3/16X28X14	1	
45	101-06-47	抬牙曲柄	FEED ROCKER CRANK	1	
46	101-06-48	抬牙曲柄螺钉	SCREW SM3/16X28X12	1	
47	101-06-50	抬牙连杆轴位螺钉	HIN GESCREW	1	
48	101-06-44	抬牙轴	FEED DRIVING SHAFT	1	
49	101-06-24	送料轴挡圈	FEEDROCKER SHAFT COLLAR	1	
50	101-02-07	送料轴挡圈螺钉	SCREW SM1/4X40X6	2	
51	101-06-26	送料轴轴套	FEED ROCKER SHAFT BUSHING	1	
52	101-06-09	送料轴轴套定位螺钉	SCREW SM15/64X28	1	
53	101-06-33	牙架轴紧固螺钉	SCREW SM11/64X40 L=7	1	
54	101-06-45	抬牙轴轴用挡圈	RETAINING RING	1	
55	109.05-55	牙架座	FEED ROCKER ASM	1	
56	101-06-21	牙架座螺钉	SCREW SM3/16X28 L=14	1	
57	101-06-42	抬牙叉形曲柄	DRIVING SHAFT CRANK ASM, FRONT	1	
58	101-06-43	抬牙叉形曲柄螺钉	SCREW SM11/64X40 L=10.5	1	
59	101-02-09	抬牙轴轴套定位螺钉	SCREW SM15/64X28	1	
60	101-06-26	抬牙轴轴套	FEED ROCKER SHAFT BUSHING	1	
61	101-06-24	抬牙轴挡圈	THRUST COLLAR ASD=14.72 W=12	1	
62	101-02-07	抬牙轴挡圈螺钉	SCREW SM 1/4X40 L=6	2	
63	101-07-15	倒送料轴O形圈	RUBBER RING	1	
64	101-07-14	倒送料轴	FEED REVERSE SHAFT	1	
65	101-07-16	倒送料轴套	FEED REVERSE BUSHING	1	
66	101-07-19	倒送料板手紧固螺钉	SCREW SM15/64x28 L=7	1	
67	101-07-18	倒送料板手定位螺钉	SCREW SM15/64x28L=10	1	
68	101-07-17	倒送料板手	REVERSE FEED CONTROL LEVER	1	
69	101-08-38	油线	OIL WICK	1	
70	101-08-39	油线	OIL WICK	1	


6.剪线部件 THREAD TRIMMER COMPONENTS

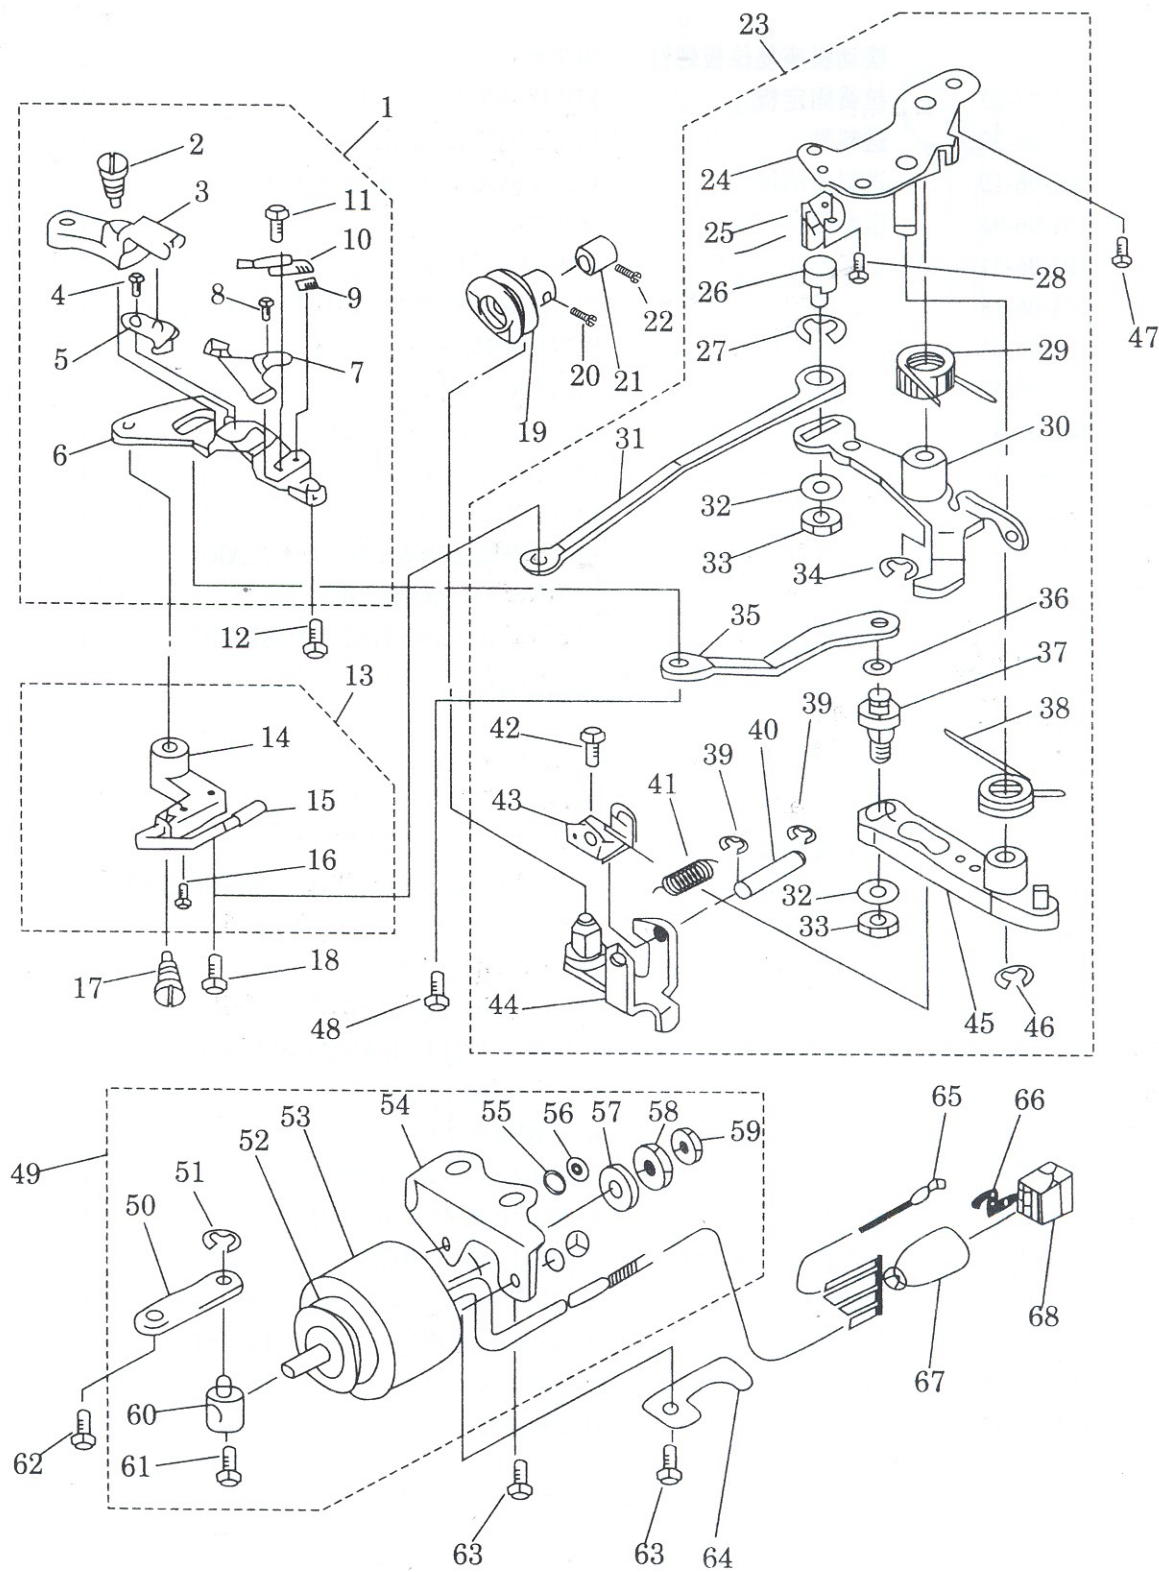

六、剪线部件 THREAD TRIMMER COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
1	109.06-01	切刀组件	KNIFE UNIT		(06-01----06-12)
2	109.06-02	铰链螺钉	HINGE SCREW	1	
3	109.06-03	叉形刀座	FORKED BASE FOR KNIFE	1	
4	109.06-04	动刀铰链螺钉	MOVING KNIFE HINGE SCREW	1	
5	109.06-05	动刀	MOVING KNIFE	1	
6	109.06-06	按装刀座	KNIFE IN STALLING BASE	1	
7	109.06-07	切刀拦线板	THREAD GUIDE FOR KNIFE	1	
8	109.06-08	拦线板螺钉	SCREW SM3/32/X56/2.3	1	
9	109.06-11	金属线箱	METAL THREAD BOX	1	
10	109.06-10	定刀	COUNTER KNIFE	1	
11	109.06-09	定刀螺钉	SCREW SM1/8X44/6	2	
12	109.06-12	螺钉	SCREW SM11/64X40/7	1	
13	109.06-13	抬料臂组件	PICKER ARM ASSY.		
14	109.06-14	抬料臂组件	PICKER ARM	1	
15	109.06-15	挑线器组件	THREAD TAKE-UP PICKER ASM	1	
	109.06-15.1	挑线器端圈	THREAD TAKE-UP RING	1	
	109.06-15.2	挑线器压簧	THREAD TAKE-UP SPRING	1	
	109.06-15.3	挑线器管	THREAD TAKE-UP TUBE	1	
	109.06-15.4	挑线器	THREAD TAKE-UP	1	
16	109.06-16	螺钉	SCREW	2	
17	109.06-17	铰链螺钉	HINGE SCREW	1	
18	109.06-18	铰链螺钉	HINGE SCREW	1	
19	109.06-19	剪线凸轮	THREAD TRIMMER CAM ASM	1	
20	109.06-20	剪线凸轮紧定螺钉	SCREW SM1/4X40X6	2	
21	109.06-21	凸轮挡圈	CAM COLLAR ASM	1	
22	109.06-22	螺钉	SCREW 11/64X40	1	
23	109.06-23	剪线器传动组件	THREAD TRIMMER DRIVING UNIT		(06-23--06-48)
24	109.06-24	底板	BASE PLATE	1	
	109.06-24.1	底板定位轴	BASE PLATE SHAFT	2	
25	109.06-25	传动臂止动装置	DRIVING ARM STOPPER	1	
26	109.06-26	抬料连接销	PICKER LINK PIN	1	
27	109.06-27	开口挡圈	E-RING	1	
28	109.06-28	螺钉	SCREW SM11/64X40	2	借用5590-06-33
29	109.06-29	离合器簧	CLUTCH SPRING	1	
30	109.06-30	离合器板组件	CLUTCH SPRING ASM		
	109.06-30.1	离合器板	CLUTCH SPRING	1	
	109.06-30.2	离合器套	CLUTCH BUSHING	1	
31	109.06-31	抬料杆	PICKER LINK	1	
32	109.06-32	垫圈	WASHER	2	
33	109.06-33	六角螺母	NUT	2	
34	109.06-34	开口挡圈	E-RING	1	
35	109.06-35	活络刀连杆	DRIVING KNIFE CONNECTING ROD	1	
36	109.06-36	开口挡圈	E-RING	1	
37	109.06-37	活络刀连杆销	DRIVING KNIFE CONNECTING ROD PIN	1	
38	109.06-38	切刀回复弹簧A	KNIFE RETUPN SPRING	1	


6.剪线部件 THREAD TRIMMER COMPONENTS

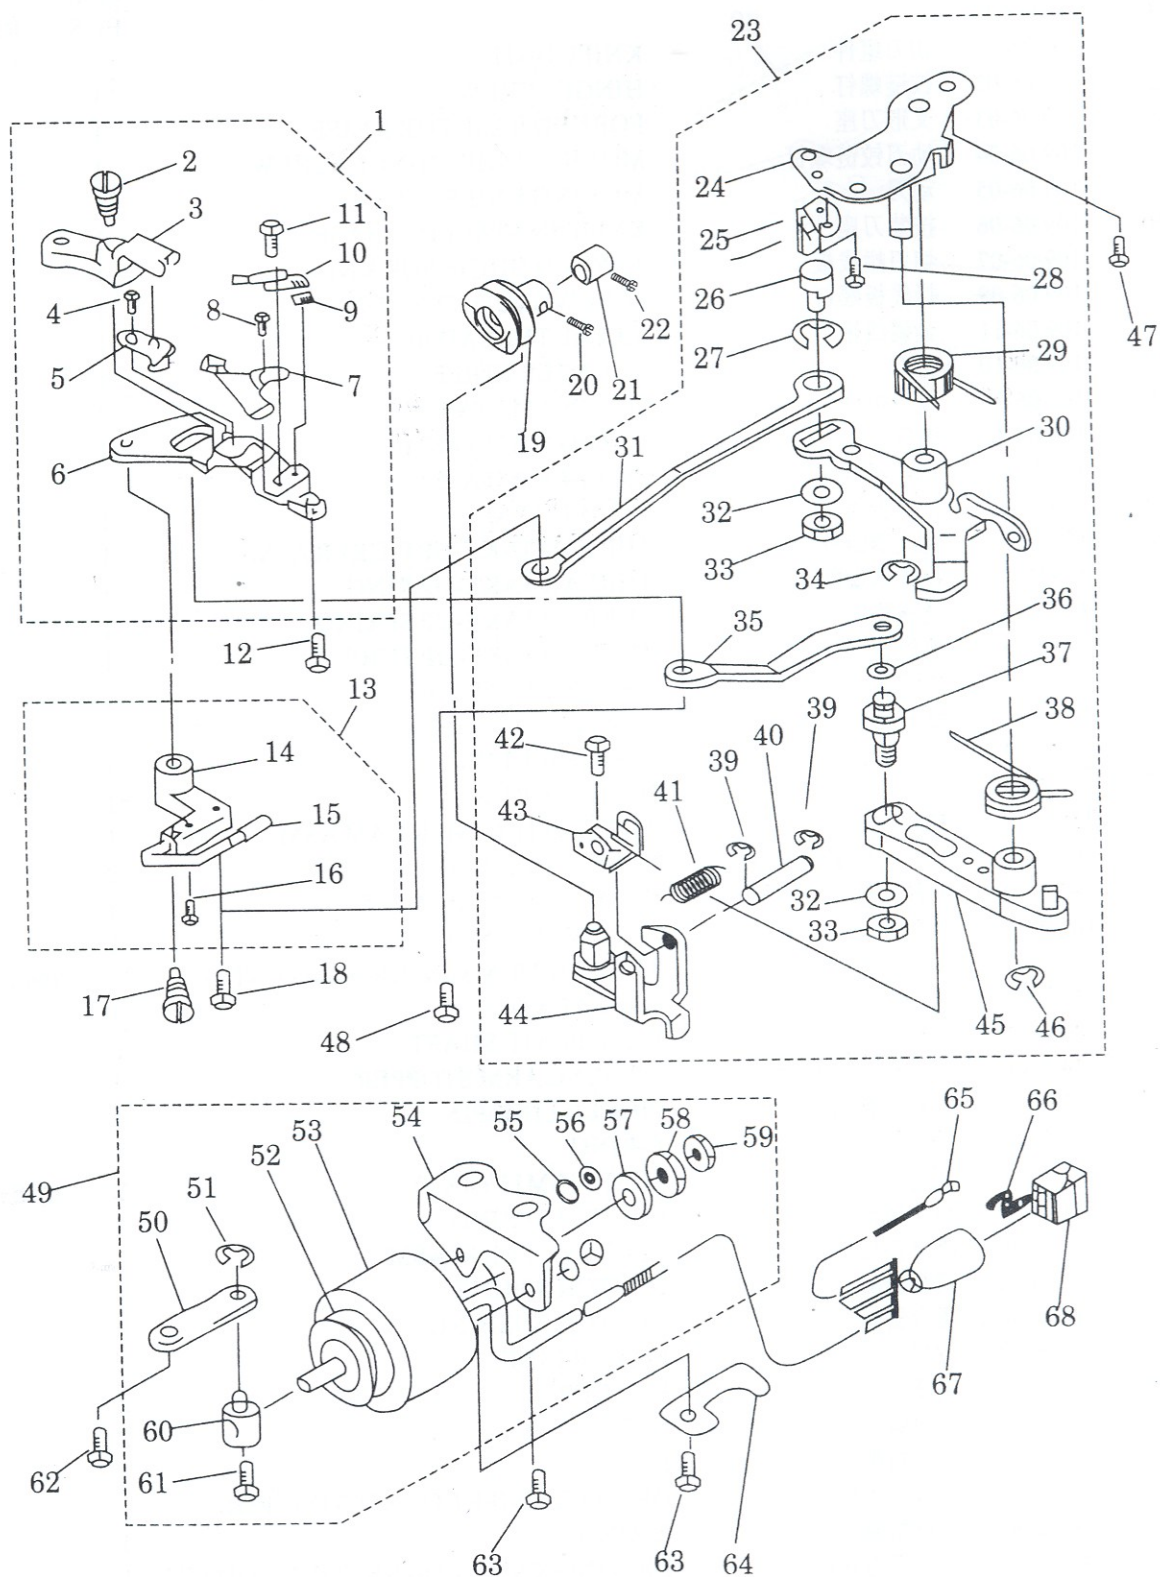

六、剪线部件 THREAD TRIMMER COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
39	109.06-39	开口挡圈	E-RING	2	
40	109.06-40	滚动轴	ROLLER FULCRUM SHAFT	1	
41	109.06-41	滚拉簧	ROLLER RETURN SPRING	1	
42	109.06-42	滚柱臂架螺钉	ROLLER ARM BRACKET SCREW	1	
43	109.06-43	滚柱臂架	ROLLER ARM BRACKET	1	
44	109.06-44	滚柱臂	ROLLER ARM	1	
	109.06-44.1	滚柱臂套	ROLLER ARM BUSHING	1	
	109.06-44.2	滚柱臂滚轮	ROLLER ARM IDLER WHEEL	1	
	109.06-44.3	滚柱臂销	ROLLER ARM PIN	1	
45	109.06-45	切刀驱动臂	KNIFE DRIVING ARM ASM	1	
	109.06-45.1	切刀驱动臂开口销	TEAR STRIP PIN	1	
46	109.06-46	开口挡圈	E-RING	2	
47	109.06-47	倒缝电磁铁固定螺钉	REVERSE FEED ELECTROMAGNETISMS	2	借用5590-02-09
48	109.06-48	铰链螺钉	HINGE SCREW	1	
49	109.06-49	电磁线管组件	ELECTROMAGNETISM ASM	1	06-49---06-64
50	109.06-50	离合器杆(活塞拉杆)	CLUTCH PITMAN ROD		
51	109.06-51	开口挡圈	E-RING	1	
52	109.06-52	橡胶垫片	RUBBER WASHER	1	
53	109.06-53	剪线器电磁管	SOLENOID ASM	1	
54	109.06-54	螺线管座	SOLENOID BASE	1	
55	109.06-55	垫圈	WASHER	2	
56	109.06-56	六角螺母	NUT	2	
57	109.06-57	橡胶垫片	RUBBER	1	
58	109.06-58	六角螺母	NUT	1	
59	109.06-59	六角螺母	NUT	1	
60	109.06-60	螺线管销	SOLENOID PIN	1	
61	109.06-61	螺钉	SCREW	1	
62	109.06-62	铰链螺钉	HINGE SCREW	1	
63	109.06-63	螺钉	SCREW	2	
64	109.06-64	旋梭供油管压板	HOOK OIL TUBE CLAMP	1	
65	109.06-65	底金属线组件	COHERER LINE ASM	1	
66	109.06-66	终端销	TERMINAL PIN	2	
67	109.06-67	口芯插头护壳	BNC CONNECTOR PLUGS CARAPACE	1	
68	109.06-68	口芯插头	BNC CONNECTOR PLUGS	1	


7、自动倒送料部件 AUTOMTIC REVERSE FEED COMPONENTS

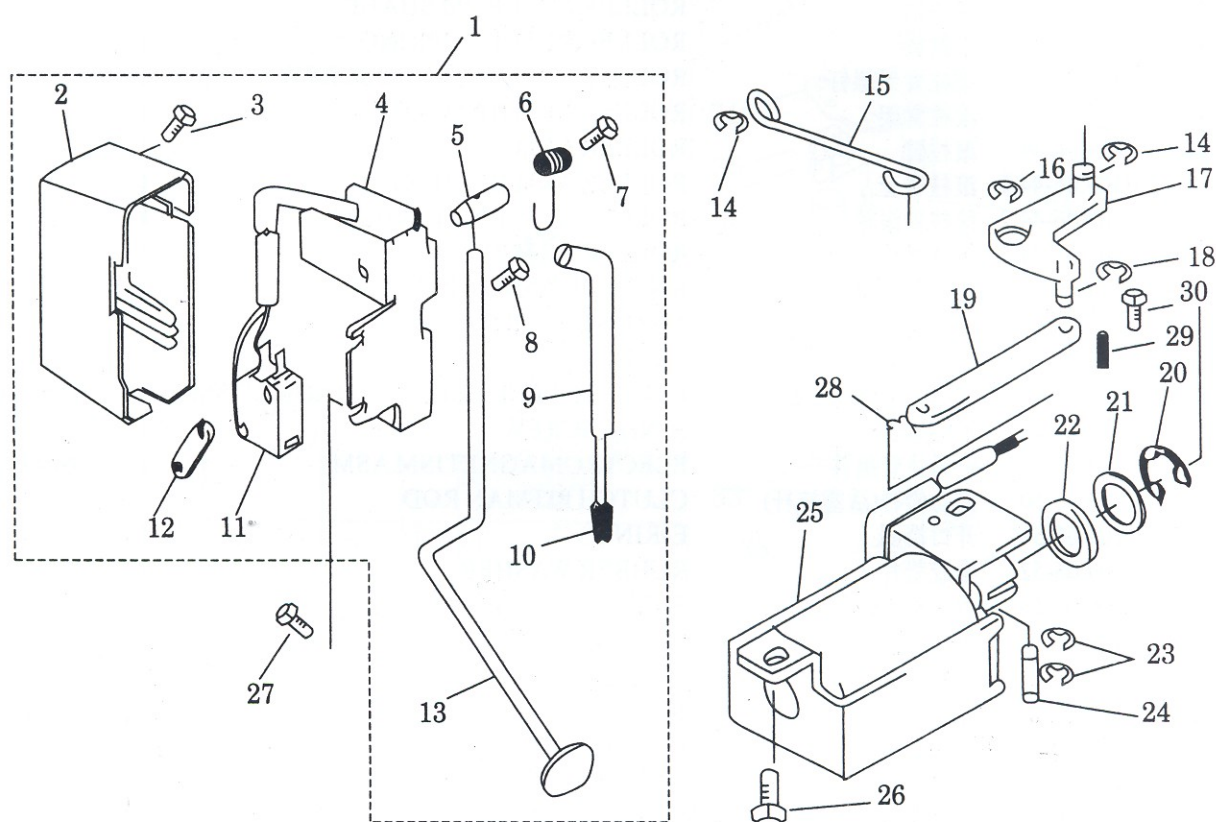

七、自动倒送料部件AUTOMATIC REVERSE FEED COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
1	109.07-01	自动倒向送料组件	REVERSE FEED SWITCH ASM	1	
2	109.07-02	反向送料转换盒	REVERSE FEED SWITCH COVER	1	
3	109.07-03	螺钉SM11/46X40/6	SCREW SM11/64X40X6	1	
4	109.07-04	反向送料转换器安装座	REVERSE FEED SWITCH BASE	1	
5	109.07-05	反向送料转换轴	REVERSE FEED SWITCH SHAFT	1	
6	109.07-06	反向送料转换簧	REVERSE FEED SWITCH SPRING	1	
7	109.07-07	安装座螺钉	SCREW	1	
8	109.07-08	螺钉	SCREW	2	
9	109.07-09	二级橡皮缝缘芯线	2-CORE CABTYRE CORD	1	
10	109.07-10	联接插销	HOUSING 14P	2	
11	109.07-11	微型开关	MINIMIZE SWITCH	1	
12	109.07-12	开关固定板	SWITCH FASTNESS PLATE	1	
13	109.07-13	反向送料转换杆	REVERSE FEED CONVERSION BUTTON	1	
14	109.07-14	开口挡圈	E-RING	2	
15	109.07-15	反向送料连接杆	REVERSE FEED CONNECTING ROD	1	
16	109.07-16	开口挡圈	E-RING	1	
17	109.07-17	连接臂	CONNECTING ARM	1	
	109.07-17.1	连接臂销A	CONNECTING ARM PIN A	1	
	109.07-17.2	送料板动板座轴销	FEED DRIVING ROCKER SLATE SHAFT PIN	1	
18	109.07-18	开口挡圈	E-RING	1	
19	109.07-19	反向送料连接片	FEED REVERSE CONNECTING COVER	1	
20	109.07-20	开口挡圈	E-RING	1	
21	109.07-21	垫圈	WASHER	1	
22	109.07-22	橡胶垫圈	RUBBER WASHER	1	
23	109.07-23	开口挡圈	E-EING	2	
24	109.07-24	活塞杆销	PIN FOR PLUNGER ROD	1	
25	109.07-25	反向送料磁铁组件	REVERSE FEED SOLENOID ASM	1	
	109.07-25.1	反向送料磁铁芯	REVERSE FEED SOLENOID	1	
26	109.07-26	螺钉SM15/64X28/12	SCREW SM15/64X28X12	2	借用06-63
27	109.07-27	螺钉	SCREW	2	借用5590.01-67
28	109.07-28	柱塞簧	PLUNGER SPRING	1	
29	109.27-29	联接销	PIN CONNECT	2	
30	109.07-30	螺钉	SCREW	1	


8. 拔线器组件 WIPER COMPONENTS

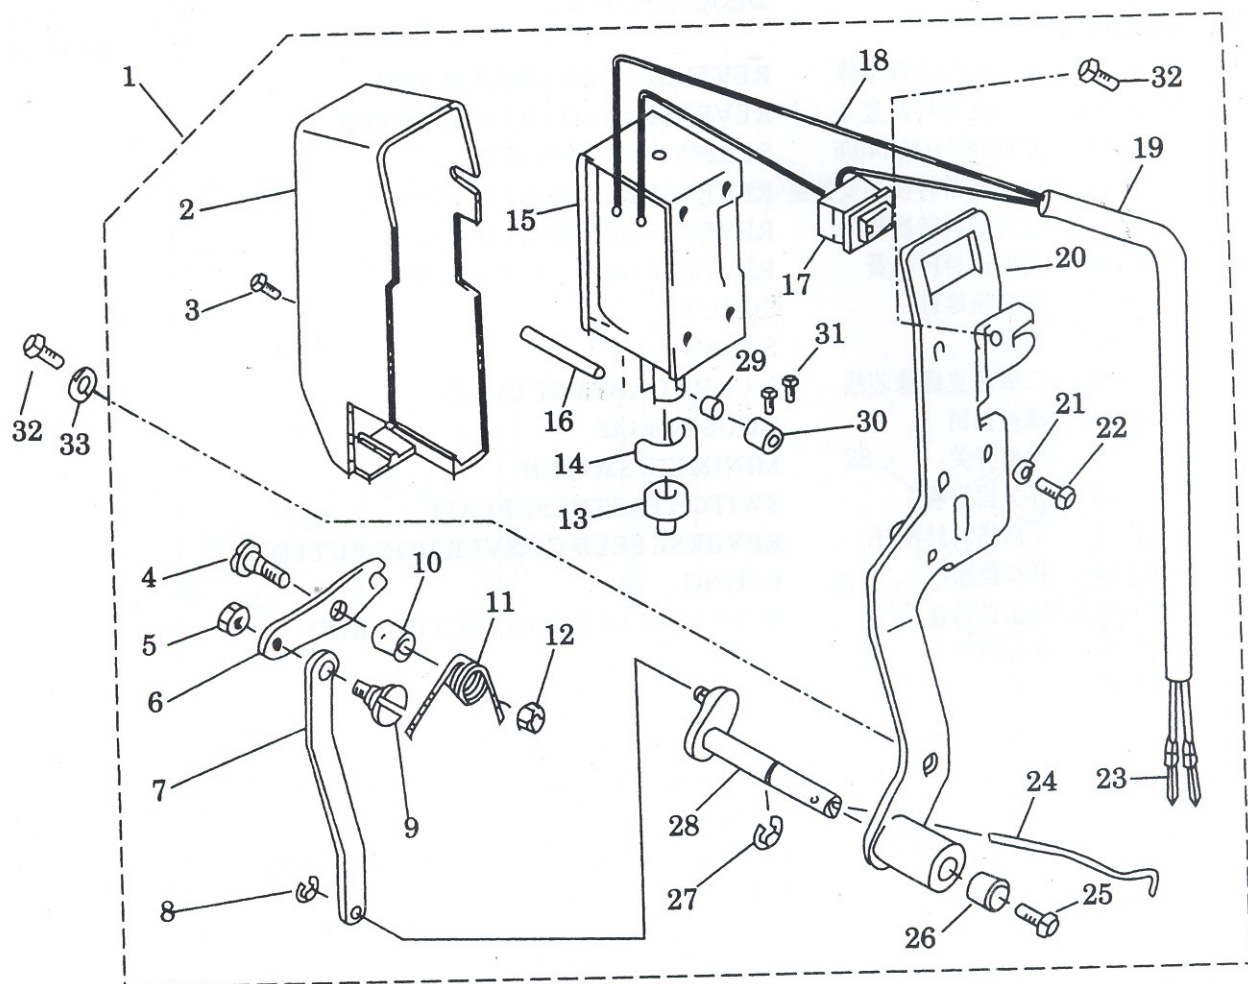

八、拨线器组件WIPER COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
1	109.08-01	拨线器组件	WIPER ASM	1	
2	109.08-02	拨线盒	WIPER COVER	1	
3	109.08-03	螺钉	SCREW	1	
4	109.08-04	铰链螺钉	HINGE SCREW	1	
5	109.08-05	六角螺母	NUT	1	
6	109.08-06	拨线连杆A	WIPER LINK A	1	
7	109.08-07	拨线连杆B	WIPER LINK B	1	
8	109.08-08	开口挡圈	E-RING	1	
9	109.08-09	拨线连杆B铰链螺钉	HINGE SCREW FOR WIPER LINK B	1	
10	109.08-10	拨线挡圈	WIPER HINGE SCREW COLLAR	1	
11	109.08-11	拨线簧	WIPER SPRING	1	
12	109.08-12	六角螺母	NUT	1	
13	109.08-13	拨线器橡胶垫(A)	WIPER RUBBER A	1	
14	109.08-14	拨线器橡胶垫(B)	WIPER RUBBER B	1	
15	109.08-15	拨线螺旋线管组件	WIPER SOLENOID ASM	1	
	109.08-15.1	拨线顶尖轴	WIPER PIN	1	
16	109.08-16	拨线螺旋线管轴	WIPER SOLENOID PIN	1	
17	109.08-17	电源开关	POWER SWITCH	1	
18	109.08-18	电线	ELECTRIC WIRE	1	
19	109.08-19	2极橡皮缝管芯线	2-CORE CABTYRE CORD	1	
20	109.08-20	拨线按装座	WIPER BASE	1	
	109.08-20.1	拨线安状座套	BUSHING	1	
21	109.08-21	拨线连杆套圈	BUSHING WASHER	3	
22	109.08-22	螺钉	SCREW	2	
23	109.08-23	联接插销	PIN CONTACT	1	
24	109.08-24	拨线杆	WIPER	1	
25	109.08-25	螺钉	SCREW	1	
26	109.08-26	拨线器挡圈	BRACKET INSTALLING COLLAR	1	
27	109.08-27	开口挡圈	E-RING	1	
28	109.08-28	拨线驱动轴组件	WIPER DRIVING SHAFT ASM	1	
	109.08-28.1	拨线驱动销	WIPER DRIVING PIN	1	
	109.08-28.2	拨线驱动轴	WIPER DRIVING SHAFT	1	
	109.08-28.3	拨线驱动连接片	WIPER DRIVING CONNECT PLATE	1	
29	109.08.31	销套	BUSHING OF PIN	1	
30	109.08-32	触头	BUSHING CONTACT	1	
31	109.08-30	螺钉	SCREW	2	
32	101-01-06	螺钉	SCREW	2	
33	109.08-33	垫圈	WASHER	1	


9. 润滑部件 OIL LUBRICATION COMPONENTS

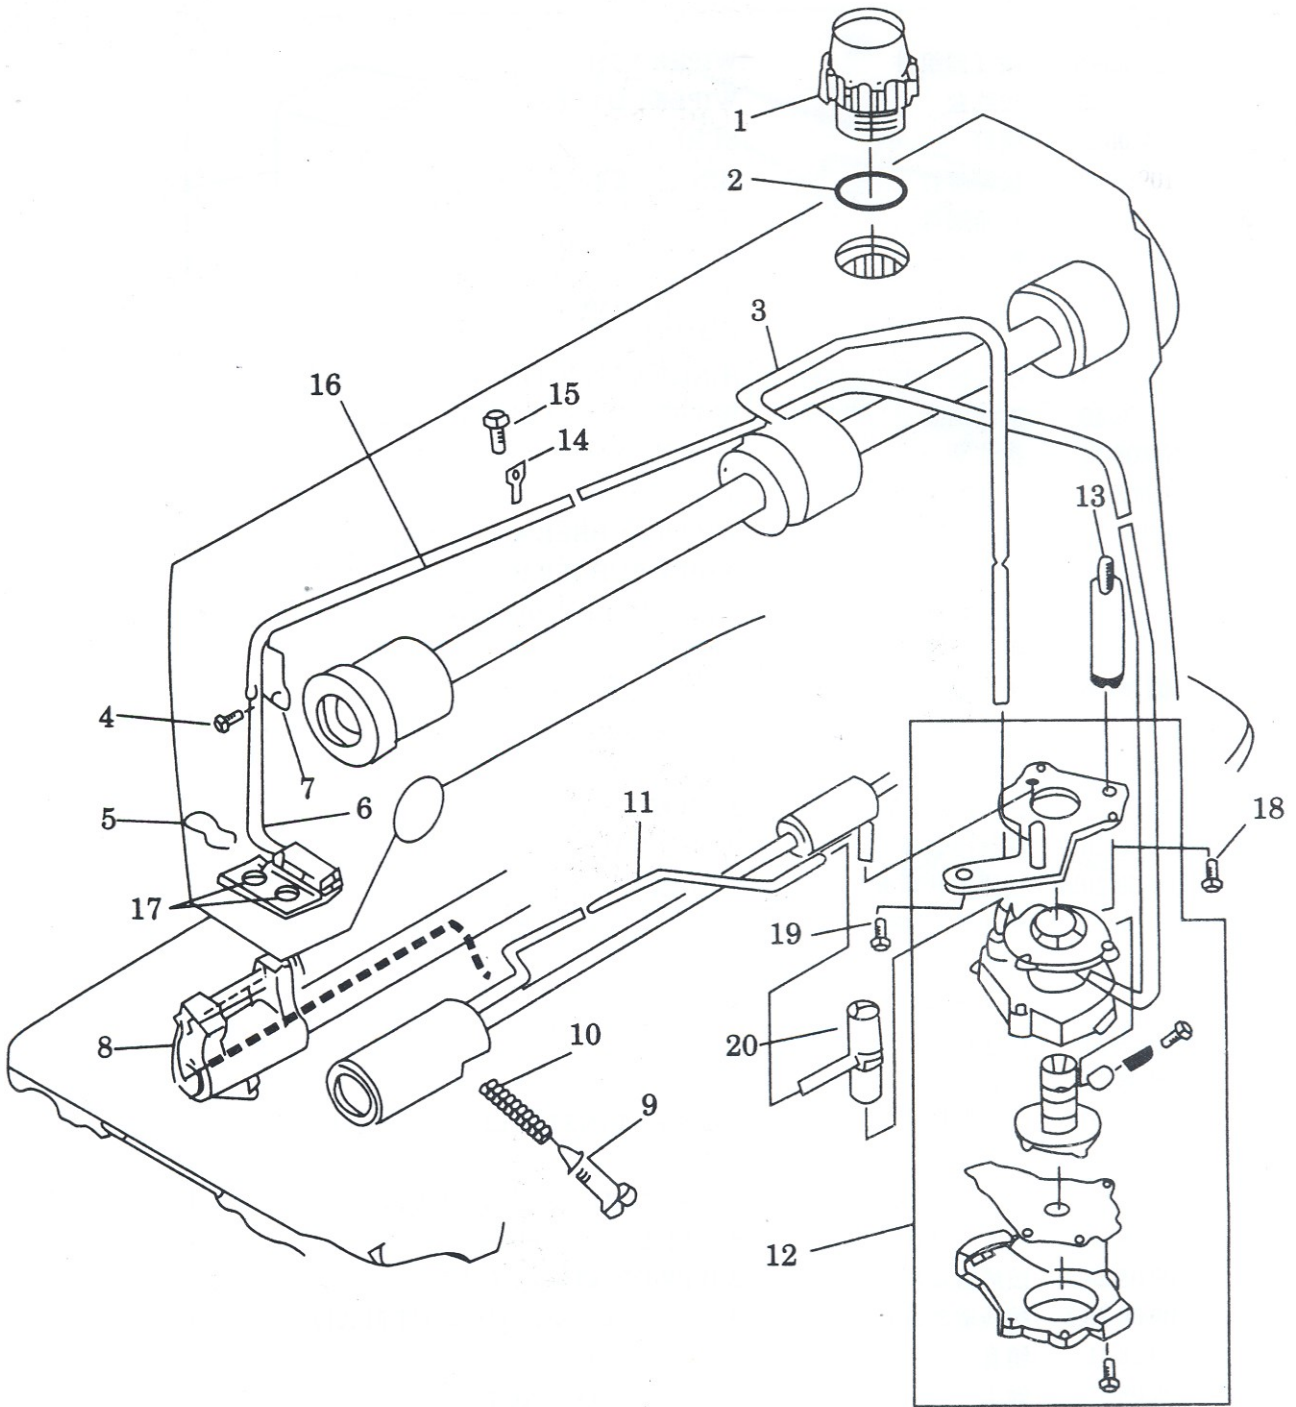

九、润滑分组件 OIL LUBRICATION COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
1	109.09-01	油窗	OIL SIGHT WINDOW	1	
2	101-08-26	油窗O形圈	RUBBER RING	1	
3	101-08-19	上轴供油管	MAIN SHAFT OIL TUBE	1	
4	101-02-30	回油管夹螺钉	SCREW SM15/64X28X9	2	
5	101-08-33	回油毡夹	OIL FEET PRESSER	1	
6	101-08-28-00	回油管夹组件	OIL RETURN TUBE HOLDER ASM	1	
7	101-08-28-01	回油管夹	OIL RETURN TUBE HOLDER	1	
8	101-06-27	送料轴油线	OIL WICK	1	
9	101-08-21	旋梭油量调节螺钉	OIL ADJUSTING SCREW	1	
10	101-08-22	旋梭油量调节簧	OIL ADJUSTING SPRING	1	
11	101-08-20	旋梭轴供油管	OIL TUBE	1	
12	101-08-01-00	油泵组件	LUBRICATING OIL PUMP ASM	1	
13	101-08-16	油泵连接螺柱	OIL PUMP SUPPORT SM15/64X28	1	
14	101-08-37	回油管压板	OIL RETURN CLAMP	1	
15	101-08-29	回油管压板螺钉	SCREW	1	
16	101-08-27	回油管	OIL RETURN TUBE	1	
17	101-08-30	回油毡组件	OIL RETURN TUBE PLATE SAM	1	
18	109.09-25	螺柱连接螺钉	SCREW	1	
19	101-08-01-03	油泵安装螺钉	SCREW	1	
20	101-08-18	供油管接头	RUBBER JOINT	1	


10.油盘分组件 OIL RESERVOIR COMPONENTS

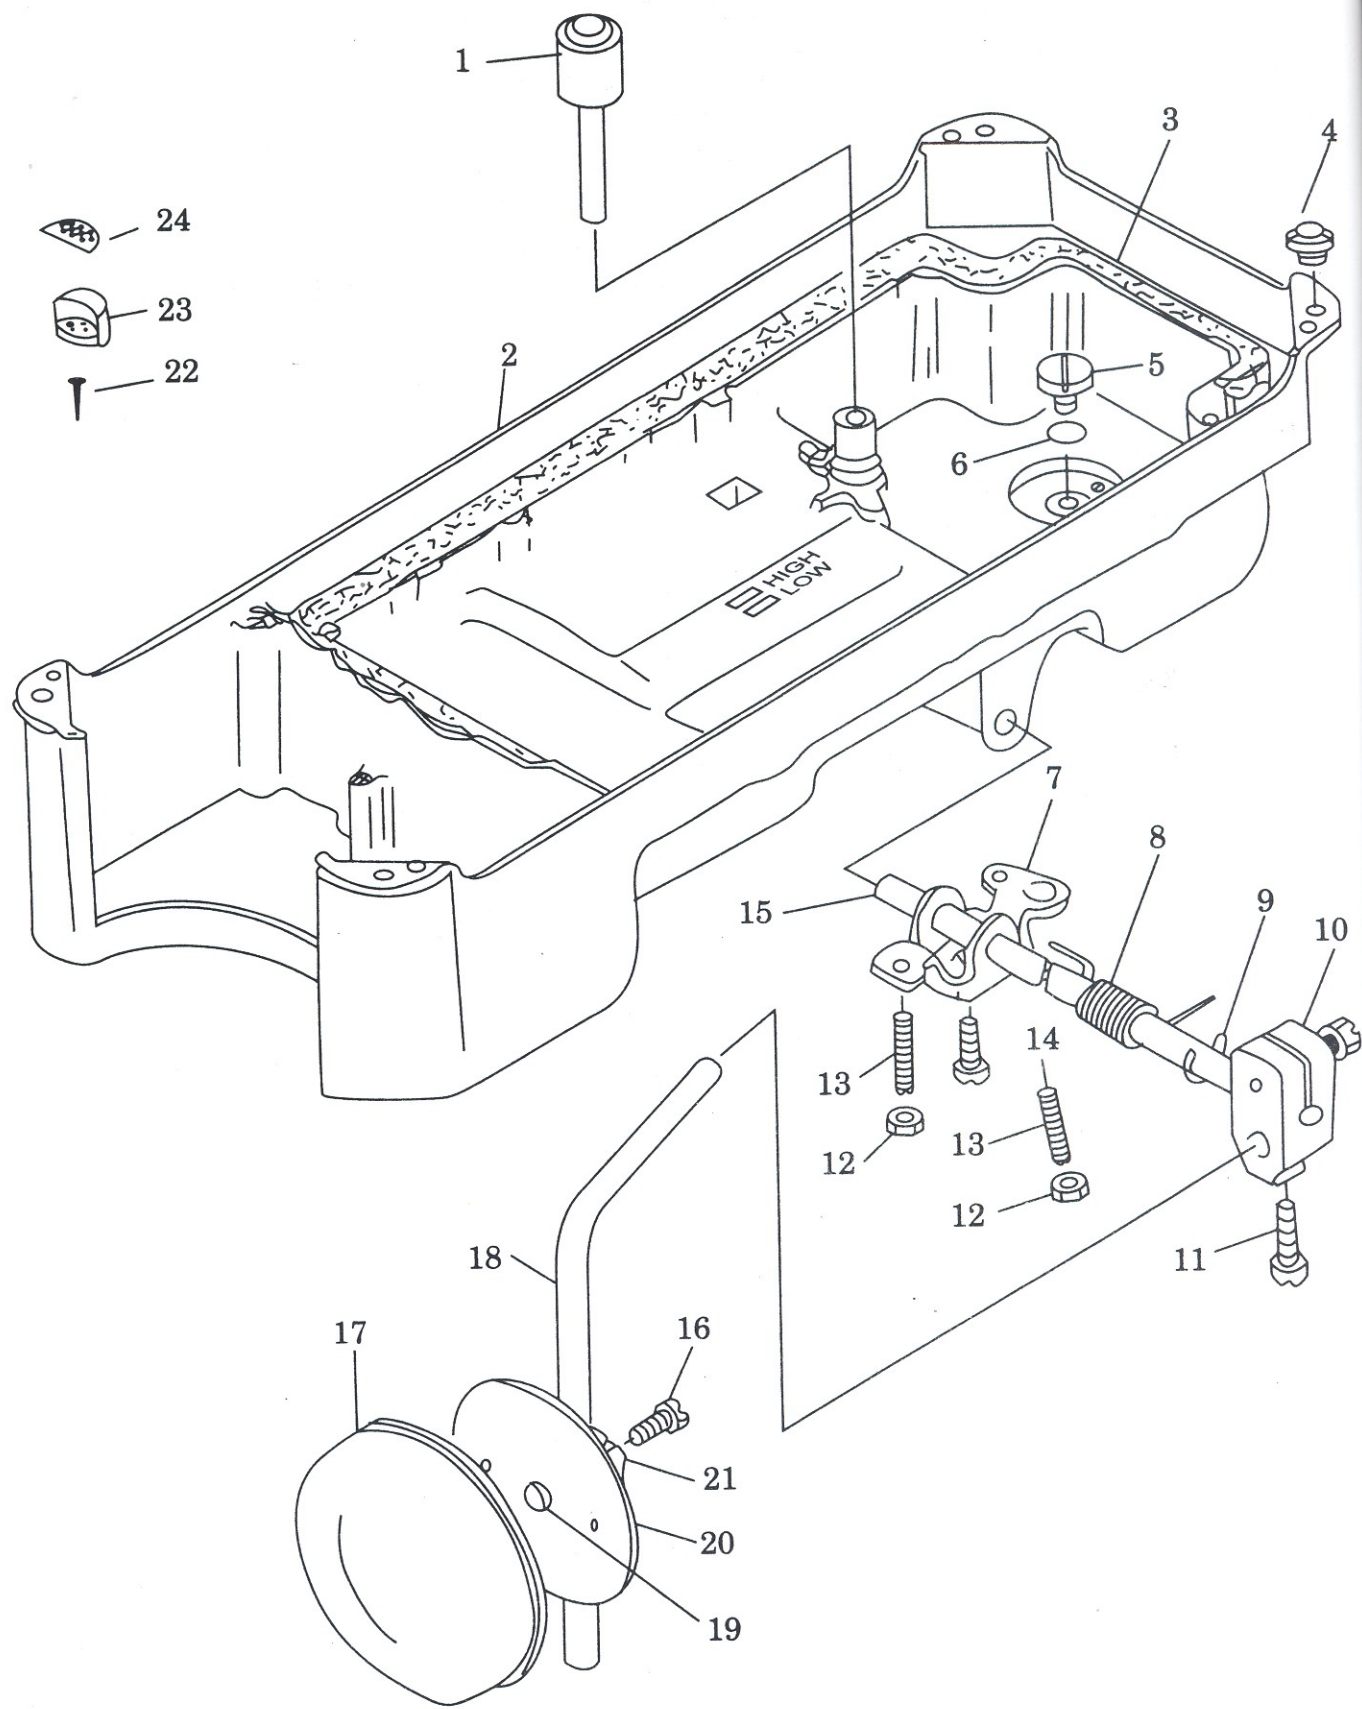

十、油盘分组件 OIL RESERVOIR COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
1	101-09-02	抬压脚顶销	KNEE PRESS LIFTER EOD	1	
2	101-09-01	油盘	OIL RESERVOIR	1	
3	101-09-03	油盘衬垫	GASKET	1	
4	101-09-04	机头座垫	RUBBER CUSHION	4	
5	101-09-05	排油孔螺钉	SCREW SM5/16X24	1	
6	101-09-21	油塞螺钉O形密封圈	RUBBER RING	1	
7	101-09-07	抬压脚双向曲柄	CONNECTING ROD VERTICAL	1	
8	101-09-08	抬压脚曲柄簧	SPRING	1	
9	101-09-09	抬压脚轴开口挡圈	E-RING 10	1	
10	101-09-10	抬压脚操纵杆接头	KNEE PRESS ROD BEARING BRACKET	1	
11	101-09-11	抬压脚操纵接头螺钉	SCREW SM15/64X28	2	
12	101-09-14	限位调节螺母	NUT SM15/64X28	2	
13	101-09-13	限位调节螺钉	SCREW SM 15/64X28	2	
14	101-09-12	抬压脚双向曲柄螺钉	SCREW SM15/64X28	1	
15	101-09-06	膝抬压脚轴	KNEE PRESS ROD	1	
16	101-09-16	操纵杆夹头螺钉	SCREW SM15/64X28X15	1	
17	101-09-20	操纵板软垫	KNEE PRESS PLATE ASM	1	
18	101-09-15	操纵杆	KNEE LIFTER PLATE ROD	1	
19	101-09-18	操纵杆垫块	RUBBER	1	
20	101-09-19	操纵板	KNEE PRESS PLATE	1	
21	101-09-17	操纵杆夹头	KNEE PRESS PLATE HOLDER	1	
22	101-09-25	油盘座钉	NAIL	8	
23	101-09-24	油盘支座	OIL RESERVOIR RUBBER CUSHION	2	
24	101-09-23	油盘座垫	OIL RESERVOIR FELT CUSHION	2	


11. 绕线器 皮带罩分组件 BELT COVER BOBBIN WINGER COMPONENTS

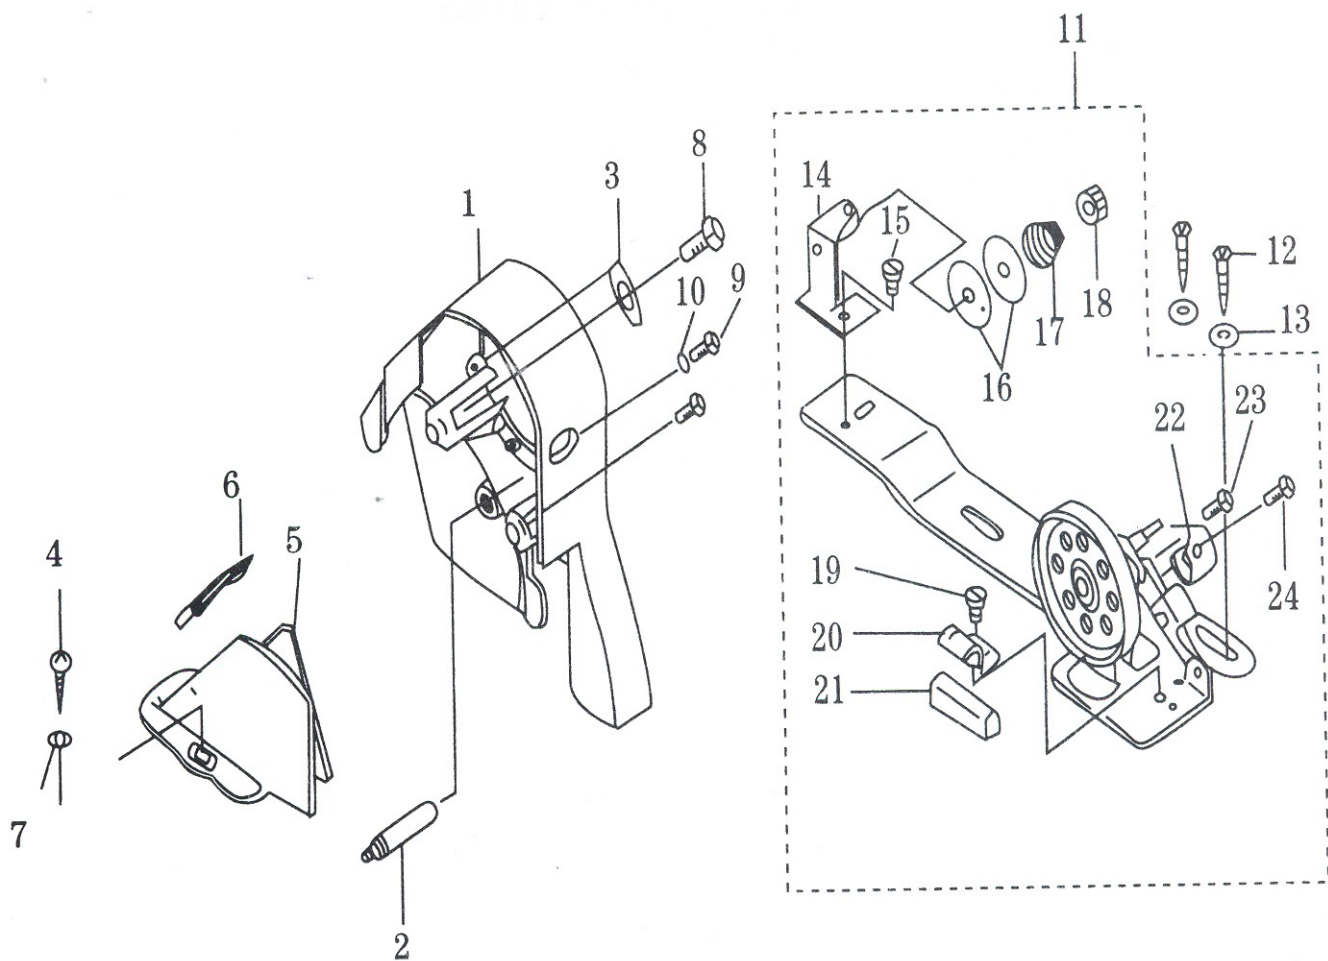

十一、皮带罩、绕线器分组件 BELT COVER AND BOBBIN WINGER COMPONENTS

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
1	101-12-04	带轮前罩壳	BELT COVER A	1	
2	101-12-11	后罩壳支柱	BELT COVER SUPPORT	1	
3	101-12-05	前罩壳安装架	BELT COVER A BASE	1	
4	101-10-24	木螺钉	WOOD SCREW	2	
5	101-12-06	上轮后罩壳	BELT COVER B	1	
6	101-12-07	上轮后罩壳盖板	BELT COVER B COVER	1	
7	101-10-25	木螺钉垫圈	WASHER	2	
8	101-12-10	前罩壳紧固螺钉	BELT COVER A SCREW SM5/16X24	2	
9	101-12-12	支柱螺钉	SCREW SM3/16X28X14	1	
10	101-12-13	螺钉垫圈	WASHER	1	
11	101-10-01-00	绕线器组件	BOBBIN WINDER ASM	1	
12	101-10-24	木螺钉	WOOD SCREW	2	
13	101-10-25	木螺钉垫圈	WASHER	2	
14	101-10-18	过线架座	THREAD TENSION ASM	1	
15	101-10-23	过线架座紧固螺钉	SCREW SM11/64X40X7.8	1	
16	101-10-20	过线夹线板	THREAD TENSION DISK	2	
17	101-10-21	过线夹线簧	THREAD TENSION SPRING	1	
18	101-10-22	过线夹线螺母	THREAD TENSION NUT	2	
19	101-10-15	制动垫夹螺钉	SCREW SM11/64X40X3	1	
20	101-10-14	制动垫夹	PRESSER PLATE	1	
21	101-10-13	绕丝轮制动垫	RUBBER BRAKE	1	
22	101-10-16	满线跳板簧	POSITIONING FINGER	1	
23	101-10-10	绕线连杆轴位螺钉	HINGE SCREW	1	
24	101-10-17	满线跳板簧螺钉	SCREW SM1/8X44X12.5	1	


12. 线架组件 THREAD STAND MECHANISM

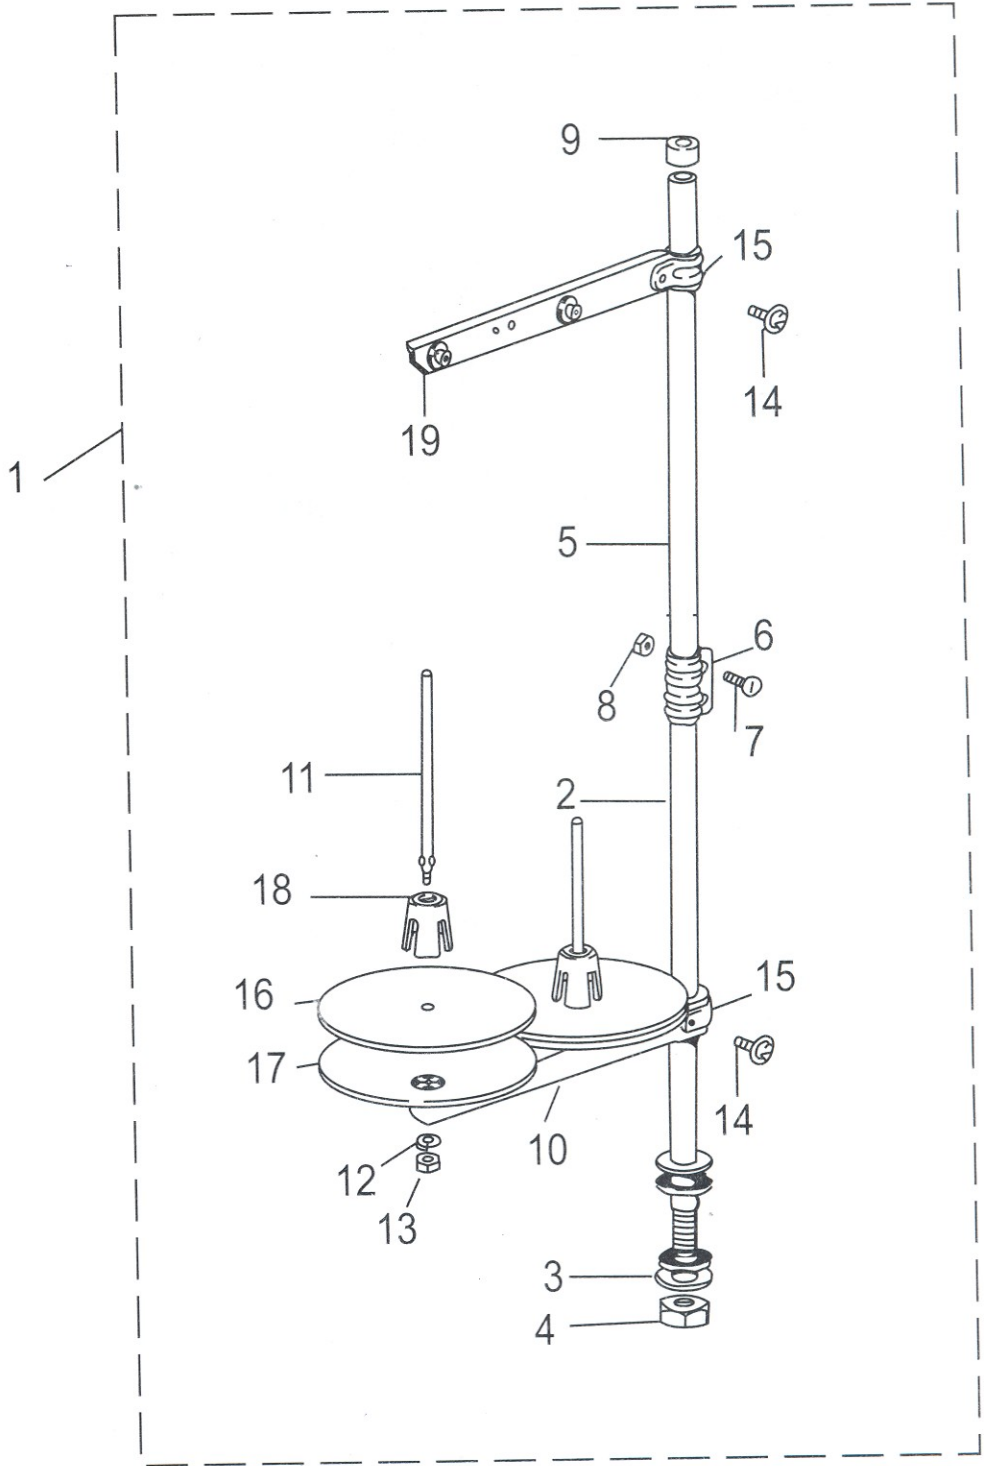

十二、线架分组件 (THREAD STAND COMPONENTS)

序号 NO	图号	名称	DESCRIPTION	数量(AMT)		
				M	H	XH
1	101-11-01	线架组件	THREAD STAND ASM	1	1	1
2	101-11-01-01	线架下直管	SPOOL REST ASM	1	1	1
3	101-11-01-02	线加下直管垫片	THREAD STAND LOWER TUBE CUSHION	2	2	2
4	101-11-01-03	线架下直管螺母	NUT	1	1	1
5	101-11-01-04	线架上直管	COLUMN PIPE (UPPER)	1	1	1
6	101-11-01-05	线架杆接头	COLUMN JOINT	1	1	1
7	101-11-01-06	直管接头螺钉	SCREW	1	1	1
8	101-11-01-07	直管接头螺母	NUT	1	1	1
9	101-11-01-08	上直管盖帽	UPPER TUBE CAP	1	1	1
10	101-11-01-09	线架过线杆	THREAD HANGER(LOWER)	1	1	1
11	101-11-01-10	线圈轴	THREAD TRAY SHAFT	2	2	2
12	101-11-01-11	线盘弹性垫圈	ELASTIC CUSHION	2	2	2
13	101-11-01-12	线圈轴螺母	NUT	2	2	2
14	101-11-01-13	过线架螺钉	SCREW	2	2	2
15	101-11-01-14	线架过线夹	WASHER	2	2	2
16	101-11-01-15	线盘垫	THREAD TRAY DIAC	2	2	2
17	101-11-01-16	线盘	THREAD TRAY	2	2	2
18	101-11-01-17	线圈芯	THREAD TRAY WICK	2	2	2
19	101-11-01-18	上过线架组件	THREAD HANGER(UPPER)	1	1	1

13.ACCESSORIES 附件

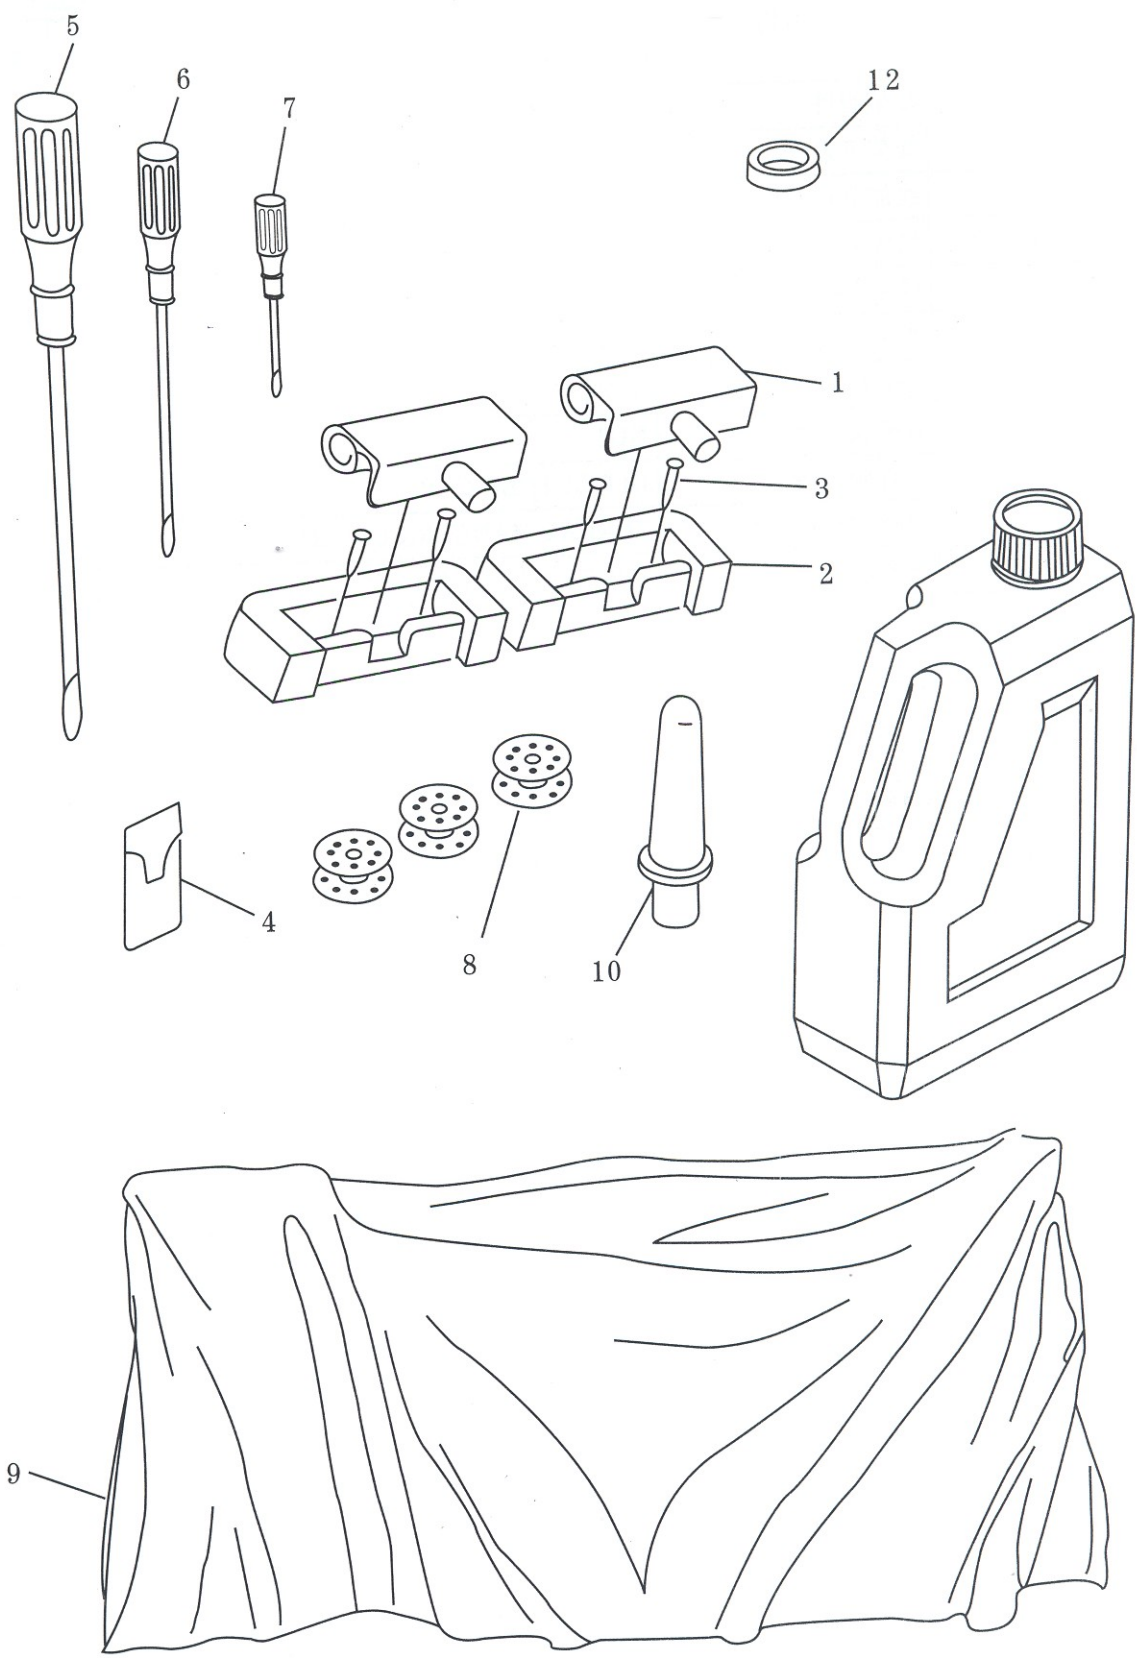

十三、附件分组件 ACCESSORIES

序号 NO.	图号 REF NO.	名称	DESCRIPTION	数量 PCS	备注 REMARKS
1	101-12-01	机头连接钩部件	HEAD CONNECTING HOOK	2	
2	101-12-02	机头连接钩座	HEAD CONNECTING HOOK SOCKE	2	
3	101-12-03	机头连接钩座钉	HEAD CONNECTING HOOK NAIL	4	
4	101-12-14	机针	NEEDLES	1包	
5	101-12-15	螺丝刀 (大)	SCREW DRIVER (LARGE)	1	
6	101-12-16	螺丝刀 (中)	SCREW DRIVER (MIDDLE)	1	
7	101-12-17	螺丝刀 (小)	SCREW DRIVER (SMALL)	1	
8	101-12-18	梭心	BOBBIN	3	
9	101-12-19	机头罩	HEAD COVER	1	
10	101-12-20	机头支柱	HEAD POLE	1	
11	101-12-21	油箱	OIL BOTTLE WITH OIL	1	
12	101-09-22	油盘磁铁	OIL RESERVOIR MAGNET	1	