


13pgs evidence
ant
= Desktop SS'

DESCAMADO

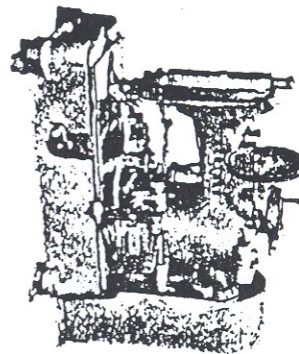


DPV5

DL1-B812

[M] - ORIGINAL

19070082

nº 111

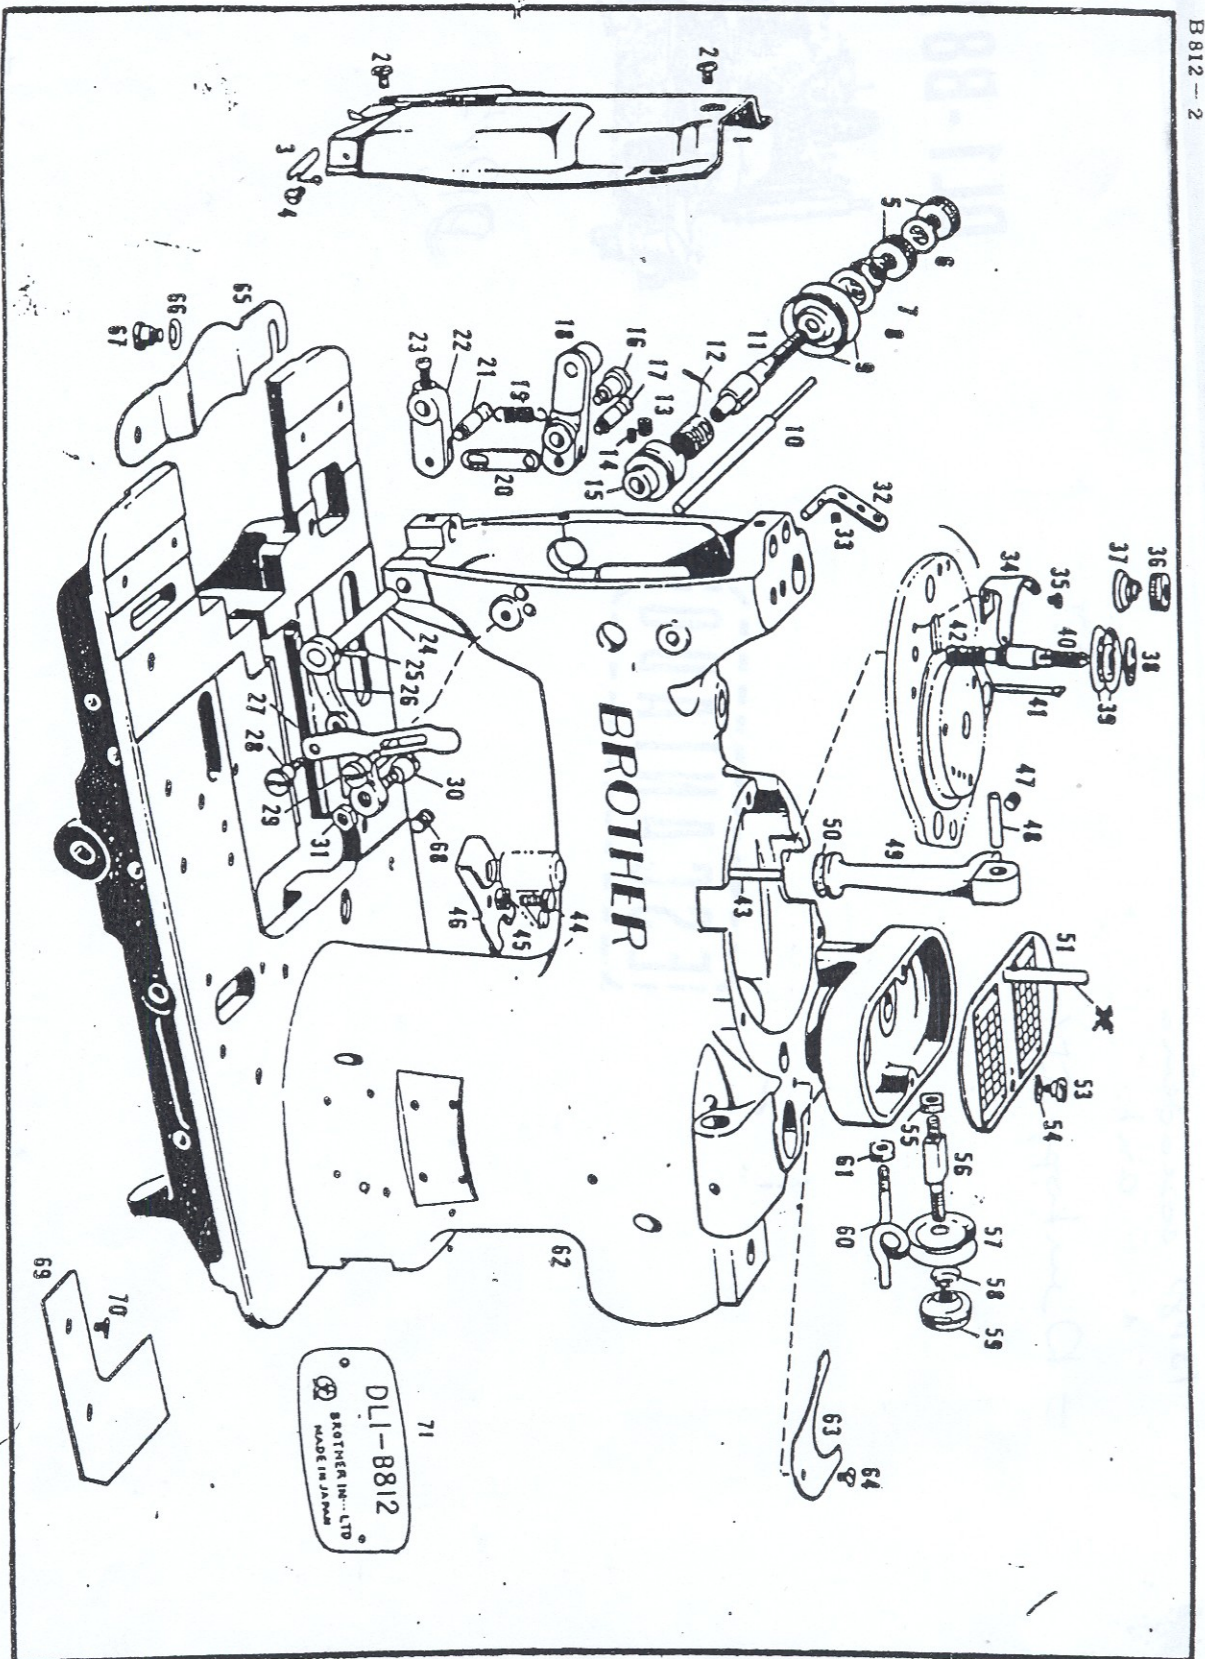


L 000001

PARTS LIST for DL1-B812

B812-3

Ref.No.	Name of Parts	Qty	Parts No.	Assembly No.	Ref.No.	Name of Parts	Qty	Parts No.	Assembly No.
A-1	Face Plate	1 pce.	107659-0-01		A-46	Tension Thread Release Plate	1 pce.	107609-0-01	
A-2	Set Screw for A-1	2 pcs.	107491-0-02		A-47	Set Screw for A-48	1 pce.	107649-0-01	
A-3	Thread Guide on A-1	1 pce.	107660-0-01		A-48	Head Supporter Pin	1 pce.	107314-0-01	
A-4	Set Screw for A-3	1 pce.	107661-0-01		A-49	Head Supporter	1 pce.	107312-0-01	
A-5	Tension Control Nut	2 pcs.	107607-0-01		A-50	Head Supporter Leather	1 pce.	107313-0-01	
A-6	Washer for A-5	1 pce.	107625-0-01		A-51	Gear Case Cover Assembly	1 set.	107010-0-01	
A-7	Tension Spring (B)	1 pce.	107624-0-01		A-53	Stud Screw for A-51	1 pce.	107321-0-01	
A-8	Tension Disc Washer	1 pce.	100134-0-01		A-54	Washer for A-53	1 pce.	107017-0-01	
A-9	Tension Disc	2 pcs.	108721-0-01		A-55	Locking Nut for A-56	1 pce.	107197-0-01	
A-10	Tension Thread Release Pin (B)	1 pce.	107627-0-01		A-56	Bobbin Winder Tension Stud	1 pce.	107678-0-01	
A-11	Tension Stud Screw (B)	1 pce.	116922-0-01		A-57	Bobbin Winder Tension Disc	2 pcs.	107680-0-02	
A-12	Check Spring	1 pce.	107621-0-01		A-58	Bobbin Winder Tension Spring	1 pce.	107681-0-01	
A-13	Set Screw for A-15	1 pce.	107086-0-01		A-59	Bobbin Winder Tension Control Screw	1 pce.	107682-0-01	
A-14	Set Screw for A-11	1 pce.	100402-0-02		A-60	Thread Guide	1 pce.	107676-0-01	
A-15	Upper Thread Tension Bracket	1 pce.	100397-0-01		A-61	Nut for A-60	1 pce.	107733-0-01	
A-16	Stud Screw for A-22	1 pce.	107638-0-01		A-62	Armed	1 pce.	108820-0-01	
A-17	Sustainer for A-22	1 pce.	107657-0-01		A-63	Top Cover for Arm	1 pce.	107011-0-01	
A-18	Upper Thread Pulling Lever	1 pce.	107655-0-01		A-64	Fastening Screw for A-63	1 pce.	100257-0-07	
A-19	Spring for A-18	1 pce.	107656-0-01		A-65	Bed Hinge Plate	1 pce.	107015-0-01	
A-20	Pulling Plate for A-18	1 pce.	107654-0-01		A-66	Washer for A-67	2 pcs.	107017-0-01	
A-21	Sustainer for A-22	1 pce.	107657-0-01	107353-0-01	A-67	Stud Screw for A-65	2 pcs.	107016-0-01	
A-22	Upper Thread Pulling Link	1 pce.	107652-0-01		A-68	Cap Screw for Oil Hole of F-28	1 pce.	100218-0-02	
A-23	Set Screw for A-22	1 pce.	107459-0-01		A-69	Base Cover	1 pce.	107013-0-01	
A-24	Upper Thread Pulling Arm Shaft	1 pce.	107645-0-02		A-70	Set Screw for Base Cover	2 pcs.	107014-0-02	
A-25	Taper Pin for A-26	1 pce.	107644-0-01		A-71	Model Plate	1 pce.	110921-0-01	
A-26	Upper Thread Pulling Arm	1 pce.	107649-0-01	107347-0-01	A-72	Model Plate Pin	2 pcs.	116231-0-01	
A-27	Upper Thread Release Plate	1 pce.	107650-0-01						
A-28	Stud Screw for A-27	1 pce.	107650-0-01						
A-29	Stud Screw for A-27	1 pce.	107647-0-01						
A-30	Ball Stud Screw for A-26	1 pce.	107114-0-01						
A-31	Nut for A-30	1 pce.	114931-0-01						
A-32	Thread Retainer	1 pce.	104649-0-01						
A-33	Set Screw for A-32	1 pce.	107613-0-01						
A-34	Tension Thread Guide	1 pce.	105160-0-01						
A-35	Set Screw for A-34	1 pce.	107607-0-01						
A-36	Tension Control Nut	1 pce.	107606-0-01						
A-37	Tension Spring (A)	1 pce.	100134-0-01						
A-38	Tension Disc Washer	2 pcs.	108721-0-01						
A-39	Tension Disc	1 pce.	107602-0-01						
A-40	Tension Stud Screw (A)	1 pce.	107612-0-01						
A-41	Spring for A-39	1 pce.	107603-0-01						
A-42	Tension Thread Release Rod	1 pce.	107608-0-01						
A-43	Bolt for A-46	1 pce.	107610-0-01						
A-44	Nut for A-44	1 pce.	105234-0-01						


2 000002

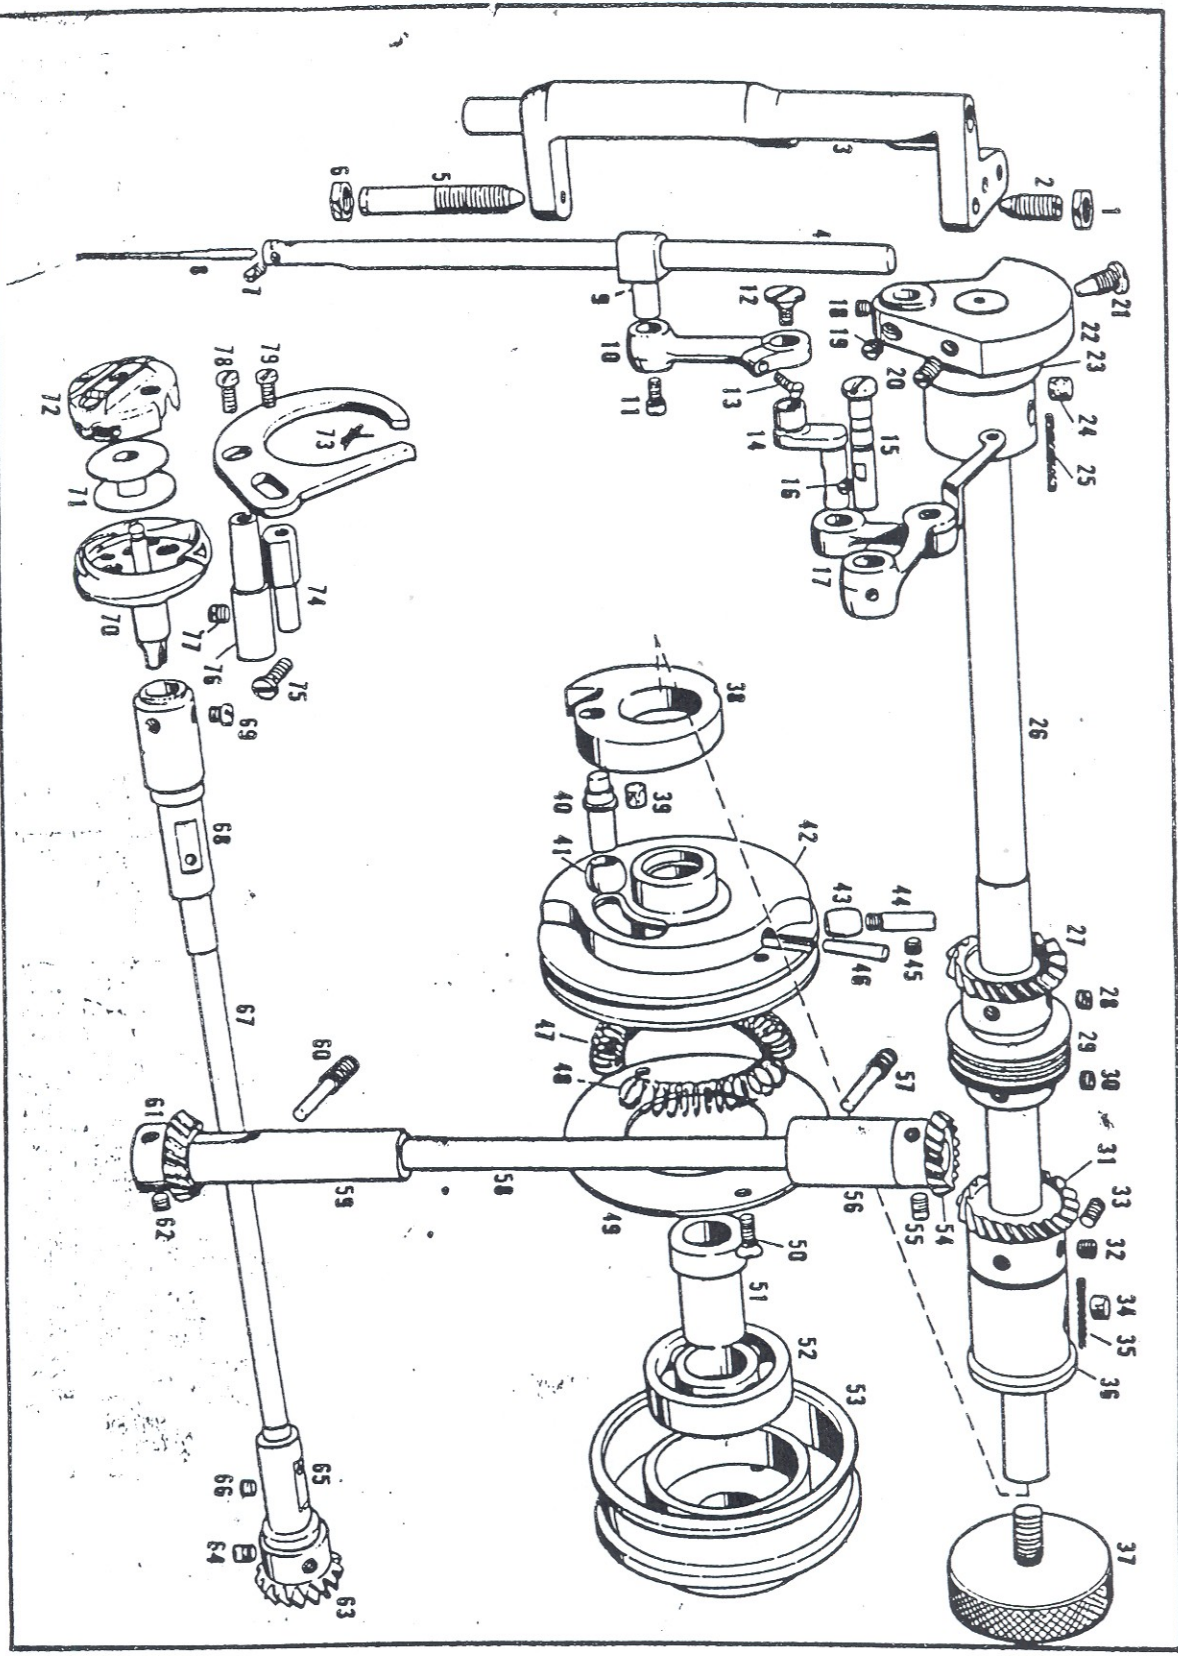

3 000003

Ref.No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref.No.	Name of Parts	Q'ty	Parts No.	Assembly No.
B-1	Nut for B-2	1 pce.	107059-0-01		B-44	Roller Shaft for Arm Pulley	1 pce.	107031-0-01	
B-2	Upper Center Screw for B-3	1	107058-0-01		B-45	Set Screw for B-44	1	100218-0-02	182083-0-01
B-3	Needle Bar Support	1	107057-0-01		B-49	Pulley Cover	1	107033-0-01	
B-4	Needle Bar	1	107054-0-01	180034-0-01	B-50	Fastening Screw for B-49	2 pcs.	107033-0-01	
B-5	Lower Center Screw for B-3	1	107060-0-01		B-46	Taper Pin for B-42	1	107030-0-01	
B-6	Nut for B-5	1	107061-0-01		B-47	Plunge Spring (long)	1	107034-0-01	
B-7	Set Screw for Needle	1	107055-0-01		B-48	Plunge Spring (short)	1	107033-0-01	
B-8	Needle (DPx5)	1	107415-0-14		B-51	Bushing for D-52	1	107041-0-00	
B-9	Needle Bar Connecting Stud	1	107052-0-01		B-52	Ball Bearing 62032 for B-53	1	107040-0-00	107020-0-01
B-10	Needle Bar Crank Rod	1	107050-0-01		B-53	Idle Pulley	1	107039-0-01	
B-11	Clamp Screw for B-9	1	100025-0-01		B-54	Upper Spiral Bevel Gear for B-58	1	107070-0-01	
B-12	Cap Screw for B-14	1	107049-0-01		B-55	Set Screw for B-54	2 pcs.	107071-0-03	180035-0-01
B-13	Adjusting Screw for B-10	1	100255-0-02	107021-0-01	B-31	Upper Shaft Spiral Bevel Gear	1 pce.	107067-0-01	
B-14	Needle Bar Crank	1	107046-0-01		B-32	Set Screw for B-31	1	100251-0-01	
B-15	Thread Take up Lever	1	107065-0-01		B-56	Upper Bushing for B-58	1	107073-0-00	
B-17	Thread Take up Link	1	107062-0-01		B-57	Vertical Shaft	1	107074-0-01	
B-16	Set Screw for B-15	1	100016-0-03		B-58	Lower Bushing for B-58	1	107072-0-01	
B-18	Set Screw for B-14 & B-22	1	100251-0-01		B-59	Set Screw for B-59	1	107075-0-00	
B-19	Set Screw for B-14 & B-22	1	101706-0-01		B-60	Lower Spiral Bevel Gear for B-58	1	107076-0-01	
B-20	Screw for B-22	1	107045-0-01		B-61	Set Screw for B-61	1	107077-0-01	
B-21	Position Screw for B-22	1	100250-0-01		B-62	Lower Shaft Spiral Bevel Gear	2 pcs.	100251-0-01	180036-0-01
B-22	Balance Crank	1	107043-0-01		B-63	Set Screw for B-63	1 pce.	107079-0-01	
B-23	Upper Shaft Bushing (left)	1	107019-0-00		B-64	Lower Shaft Bushing (right)	1 pce.	107085-0-01	
B-24	Oil Felt for B-23	1	107448-0-01		B-65	Set Screw for B-65	1	107086-0-01	
B-25	Wick 4x10 for B-23	1	107479-0-01		B-66	Lower Shaft	1	107081-0-01	
B-26	Upper Shaft	1	107018-0-01		B-67	Lower Shaft Bushing (left)	1	107087-0-01	
B-27	Zigzag Pinion Bevel Gear (B)	1	107234-0-01	181988-0-01	B-68	Set Screw for B-70	2 pcs.	100386-0-03	
B-28	Set Screw for B-27 (SM5.75-28x6)	1	013760-6-10		B-70	Rotary Hook Assembly	1 set.	107089-0-01	180038-0-01
B-29	Worm	1	107489-0-01		B-72	Bobbin Case	1 pce.	107097-0-01	
B-30	Set Screw for B-29	1	100058-0-03		B-71	Bobbin	1	117480-0-01	
B-31	Upper Shaft Spiral Bevel Gear	1	107067-0-01			Thread Adjusting Spring for Bobbin Case		180720-0-01	
B-32	Set Screw for B-31	1	100251-0-01			Set Screw for Thread Adjusting Spring		180721-0-01	
B-33	Oil Felt for B-36	1	100016-0-01		B-73	Rotary Hook Holder Position Bracket	1	107090-0-01	
B-34	Wick 4x10 for B-36	1	107448-0-01		B-74	Upper Supporter for B-73	1	107094-0-01	
B-35	Wick 4x10 for B-36	1	107479-0-01		B-75	Set Screw for B-74	1	104908-0-01	
B-36	Upper Shaft Bushing (right)	1	107022-0-00		B-76	Lower Supporter for B-73	1	107091-0-01	
B-37	Cap Screw for B-53	1	107042-0-01		B-77	Set Screw for B-76	1	100539-0-02	
B-38	Stopper Cam	1	107025-0-01	182216-0-01	B-78	Set Screw for B-73 & B-76	1	107093-0-01	
B-39	Wick 7x6 for B-38	2 pcs.	107452-0-01		B-79	Set Screw for B-73 & B-74	1	100541-0-01	
B-41	Roller for Stopper Cam	1 pce.	107027-0-01	182083-0-01					
B-42	Arm Pulley	1	107029-0-01						
B-43	Roller for Arm Pulley	1	107033-0-01						

4 000004

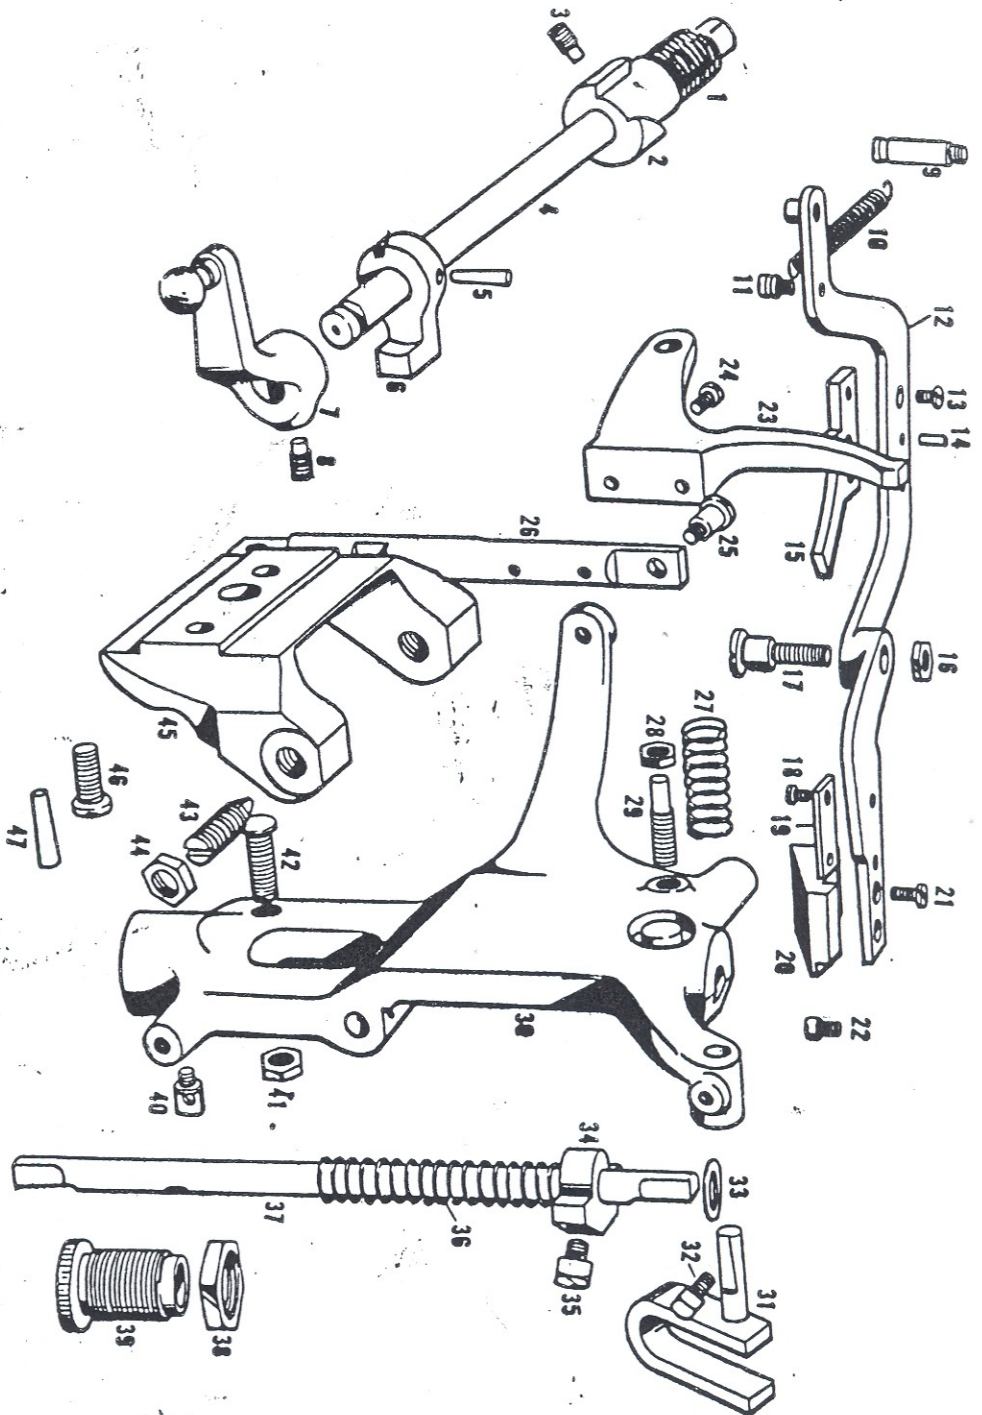


5

000005

Ref.No.	Name of Parts	Qty	Parts No.	Assembly No.	Ref.No.	Name of Parts	Qty	Parts No.	Assembly No.
C-1	Emergency Stop Handle Spring	1 pce.	107147-0-01		C-46	Set Screw for C-45	1 pce.	107100-0-01	
C-2	Emergency Stop Cam	1 "	107145-0-00		C-47	Taper Pin for C-45	2 pcs.	107005-0-00	
C-3	Set Screw for C-2	1 "	107141-0-01						
C-4	Emergency Stop Handle Shaft	1 "	107142-0-00						
C-5	Taper Pin for C-6	1 "	107149-0-00						
C-6	Emergency Stopper	1 "	107143-0-01						
C-7	Emergency Stop Handle Assembly	1 ass.	107032-0-01						
C-8	Set Screw for C-7	1 pce.	107141-0-01						
C-9	Sustainer for C-12	1 "	107138-0-01						
C-10	Stop Motion Lever Tension Spring	1 "	107137-0-01						
C-11	Sustainer for Stop Lever Spring	1 "	107126-0-01						
C-12	Stop Motion Lever	1 "	107123-0-01						
C-13	Set Screw for C-15	2 pcs.	100257-0-06						
C-14	Knock Pin for C-15	1 pce.	107131-0-00						
C-15	Stopper Claw	1 "	108818-0-01						
C-16	Nut for C-17	1 "	107059-0-01						
C-17	Stop Motion Lever Stud Screw	1 "	107127-0-01						
C-18	Set Screw for C-19	2 pcs.	100257-0-06						
C-19	Claw Plate for C-26	1 pce.	107132-0-01						
C-20	Belt Shifter Bracket	1 "	107134-0-01						
C-21	Set Screw for C-12	1 "	100137-0-03						
C-22	Stop Screw for C-20	1 "	100522-0-02						
C-23	Clutch Lever	1 "	107121-0-01						
C-24	Set Screw for C-23	2 pcs.	107122-0-01						
C-25	Stud Screw for C-26	1 pce.	107120-0-02						
C-26	Clutch Pulling Lever	1 "	107119-0-01						
C-27	Spring for C-30	1 "	107112-0-01						
C-28	Nut for C-29	1 "	107114-0-01						
C-29	Upper Clutch Stopper Screw	1 "	107113-0-01						
C-30	Clutch Body	1 "	107104-0-01						
C-31	Belt Shifter	1 "	107117-0-01						
C-32	Set Screw for C-31	1 "	107118-0-01						
C-33	Clutch Guide Buffer Leather	1 "	107108-0-01						
C-34	Clutch Guide	1 "	107106-0-01						
C-35	Set Screw for Clutch Guide	1 "	107107-0-01						
C-36	Clutch Spring	1 "	107109-0-01						
C-37	Clutch	1 "	107105-0-01						
C-38	Nut for C-39	2 pcs.	107101-0-01						
C-39	Adjustable Screw for Clutch Spring	1 pce.	107110-0-01						
C-40	Lower Sustainer for I-32	1 "	107640-0-01						
C-41	Nut for C-42	1 "	107116-0-01						
C-42	Lower Clutch Stopper Screw	1 "	107115-0-01						
C-43	Center Screw for C-45	2 pcs.	107102-0-01						
C-44	Nut for C-43	2 "	107103-0-01						
C-45	Clutch Bracket	1 pce.	107099-0-01						


000006

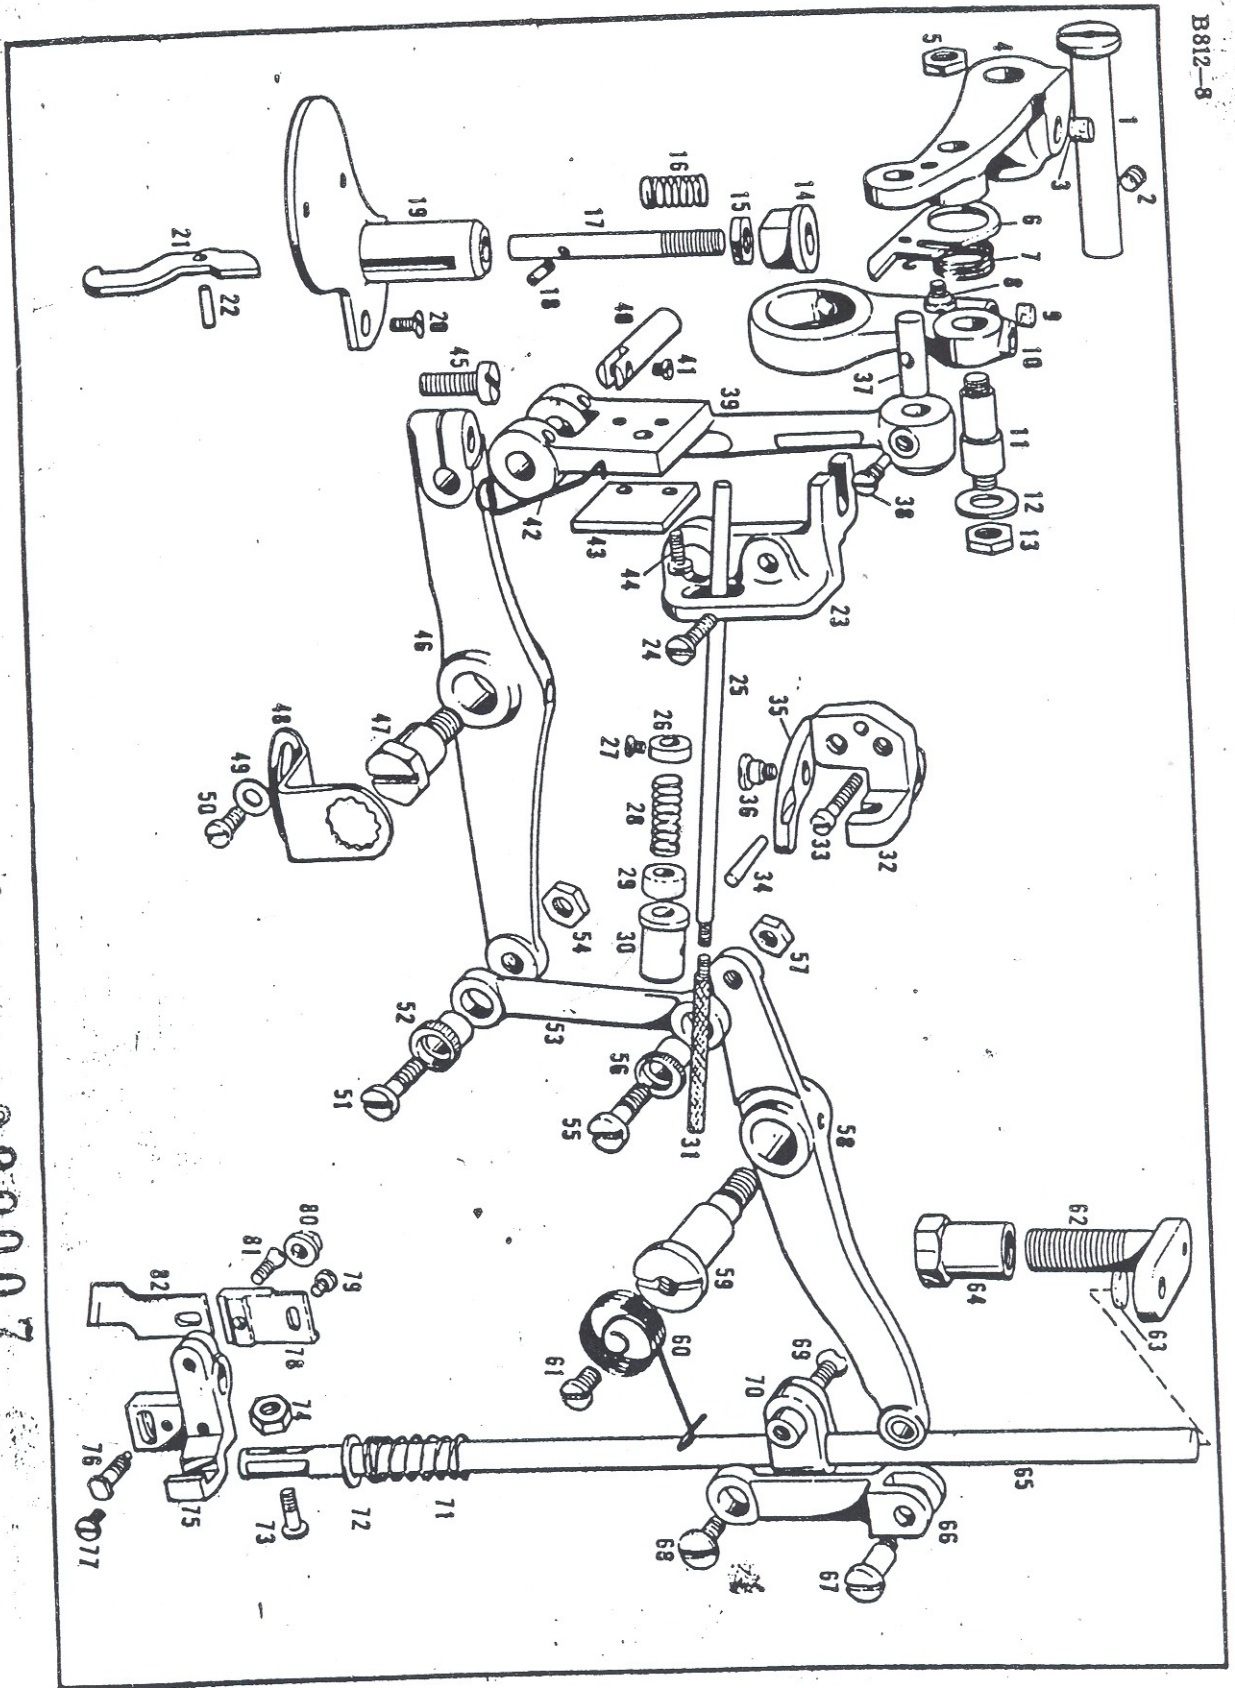

7

000007

Ref.No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref.No.	Name of Parts	Q'ty	Parts No.	Assembly No.
D-1	Cutter Lever Shaft	1 pce.	107156-0-01		D-46	Cutter Lever Lower	1 pce.	107170-0-01	
D-3	Oil Felt for D-4	2 pce.	107149-0-01	107036-0-01	D-47	Stud Screw for D-46	1 pce.	107172-0-01	
D-4	Cutter Lever	1 pce.	107154-0-01		D-48	Bracket for D-47	1 pce.	107173-0-01	
D-6	Cutter Clutch Stopper Plate Assy	1 set.	107044-0-01	180040-0-01	D-49	Washer for D-50	1 pce.	107175-0-01	
D-5	Nut for D-11	1 pce.	107059-0-01		D-50	Set Screw for D-48	1 pce.	107174-0-01	
D-7	Spring for D-6	1 pce.	107160-0-01		D-51	Set Screw for D-52	1 pce.	107178-0-01	
D-8	Stud Screw for D-6	1 pce.	107161-0-01	107036-0-01	D-52	Cutter Link Bushing	1 pce.	107177-0-01	
D-9	Oil Felt for D-10	2 pce.	107149-0-01		D-53	Cutter Link	1 pce.	107176-0-01	
D-10	Cutter Crank Rod	1 pce.	107148-0-01		D-54	Nut for D-51	1 pce.	107435-0-01	
D-11	Cutter Crank Rod Shaft	1 pce.	107151-0-01	180039-0-01	D-55	Set Screw for D-56	1 pce.	107178-0-01	
D-12	Washer for D-11	1 pce.	107059-0-01		D-56	Cutter Link Bushing	1 pce.	107177-0-01	
D-14	Set Screw for D-1	1 pce.	107153-0-01		D-57	Nut for D-55	1 pce.	107435-0-01	
D-15	Cutter Lever Holder	1 pce.	107223-0-01		D-58	Cutter Lever Upper	1 pce.	107180-0-01	
D-16	Nut for D-14	1 pce.	107059-0-01		D-59	Stud Screw for D-58	1 pce.	107181-0-01	
D-17	Spring for D-17	1 pce.	107227-0-01		D-60	Spring for D-58	1 pce.	107182-0-01	
D-18	Guide Screw for D-17	1 pce.	107225-0-01		D-61	Set Screw for D-60	1 pce.	107183-0-01	
D-19	Cutter Lever Connecting Bar	1 pce.	107226-0-01	107082-0-01	D-62	Cutter Bar Stopper	1 pce.	107192-0-01	
D-20	Cutter Lever Holding Bracket	1 pce.	107228-0-01		D-63	Fibre for D-62	1 pce.	107193-0-01	
D-21	Set Screw for D-19	2 pce.	107231-0-01		D-64	Nut for D-62	1 pce.	107194-0-01	107068-0-01
D-22	Cutter Safety	1 pce.	107229-0-01		D-66	Cutter Bar Connecting Rod	1 pce.	107184-0-01	
D-23	Taper Pin for D-21	1 pce.	107230-0-01		D-67	Stud Screw for D-66	1 pce.	107185-0-01	
D-24	Cutter Clutch Guide	1 pce.	107232-0-01		D-68	Cap Screw for D-66	1 pce.	107186-0-01	107066-0-01
D-25	Set Screw for D-23	1 pce.	100560-0-03		D-69	Set Screw for D-70	1 pce.	107188-0-01	
D-26	Cutter Clutch Pressure Bar (long)	1 pce.	107211-0-01		D-70	Cutter Bar Connecting Stud	1 pce.	107187-0-01	
D-27	Set Screw for D-26	1 pce.	107214-0-01		D-71	Cutter Bar Spring	1 pce.	107191-0-01	
D-28	Spring for D-26	1 pce.	107215-0-01		D-72	Cutter Bar Washer	1 pce.	107190-0-01	
D-29	Washer for D-25	1 pce.	107216-0-01		D-73	Set Screw for D-75	1 pce.	107189-0-01	
D-30	Cutter Clutch Bar Joint	1 pce.	107217-0-01		D-74	Nut for D-73	1 pce.	107196-0-01	
D-31	Cutter Clutch Pressure Bar (short)	1 pce.	107213-0-01		D-75	Cutter Holder	1 pce.	105234-0-01	
D-32	Cutter Cam Finger Bracket	1 pce.	107212-0-01		D-76	Stud Screw for Cutter	1 pce.	107195-0-01	
D-35	Cutter Cam Finger	1 pce.	107218-0-01		D-77	Set Screw for D-76	1 pce.	107202-0-01	107069-0-01
D-36	Stud Screw for D-35	1 pce.	107221-0-01	107080-0-01	D-78	Cutter Guide	1 pce.	107203-0-01	
D-33	Set Screw for D-32	2 pce.	107219-0-01		D-79	Set Screw for D-78	1 pce.	107199-0-01	
D-34	Taper Pin for D-32	1 pce.	107030-0-01		D-80	Nut for D-76	1 pce.	100257-0-06	
D-37	Cutter Clutch Pin	1 pce.	107162-0-01		D-81	Set Screw for D-75	1 pce.	107201-0-01	
D-38	Set Screw for D-37	1 pce.	107163-0-01		D-82	Cutter 1/8"	1 pce.	100255-0-02	
D-39	Cutter Clutch Body	1 pce.	107164-0-01		D-82	Cutter 1/4"	1 pce.	107204-0-01	
D-40	Cutter Clutch Shaft	1 pce.	107167-0-01		D-82	Cutter 3/8"	1 pce.	107200-0-01	
D-41	Set Screw for D-40	1 pce.	107168-0-00		D-82	Cutter 3/4"	1 pce.	107205-0-01	
D-42	Cutter Clutch Spring	1 pce.	107169-0-01		D-82	Cutter 1/2"	1 pce.	109837-0-01	
D-43	Cutter Clutch Holder Plate	1 pce.	107165-0-01		D-82	Cutter 1/8"	1 pce.	107207-0-01	
D-44	Set Screw for D-43	2 pce.	100264-0-01		D-82	Cutter 1"	1 pce.	109838-0-01	
D-45	Set Screw for D-46	1 pce.	107171-0-01		D-65		1 pce.	107210-0-01	

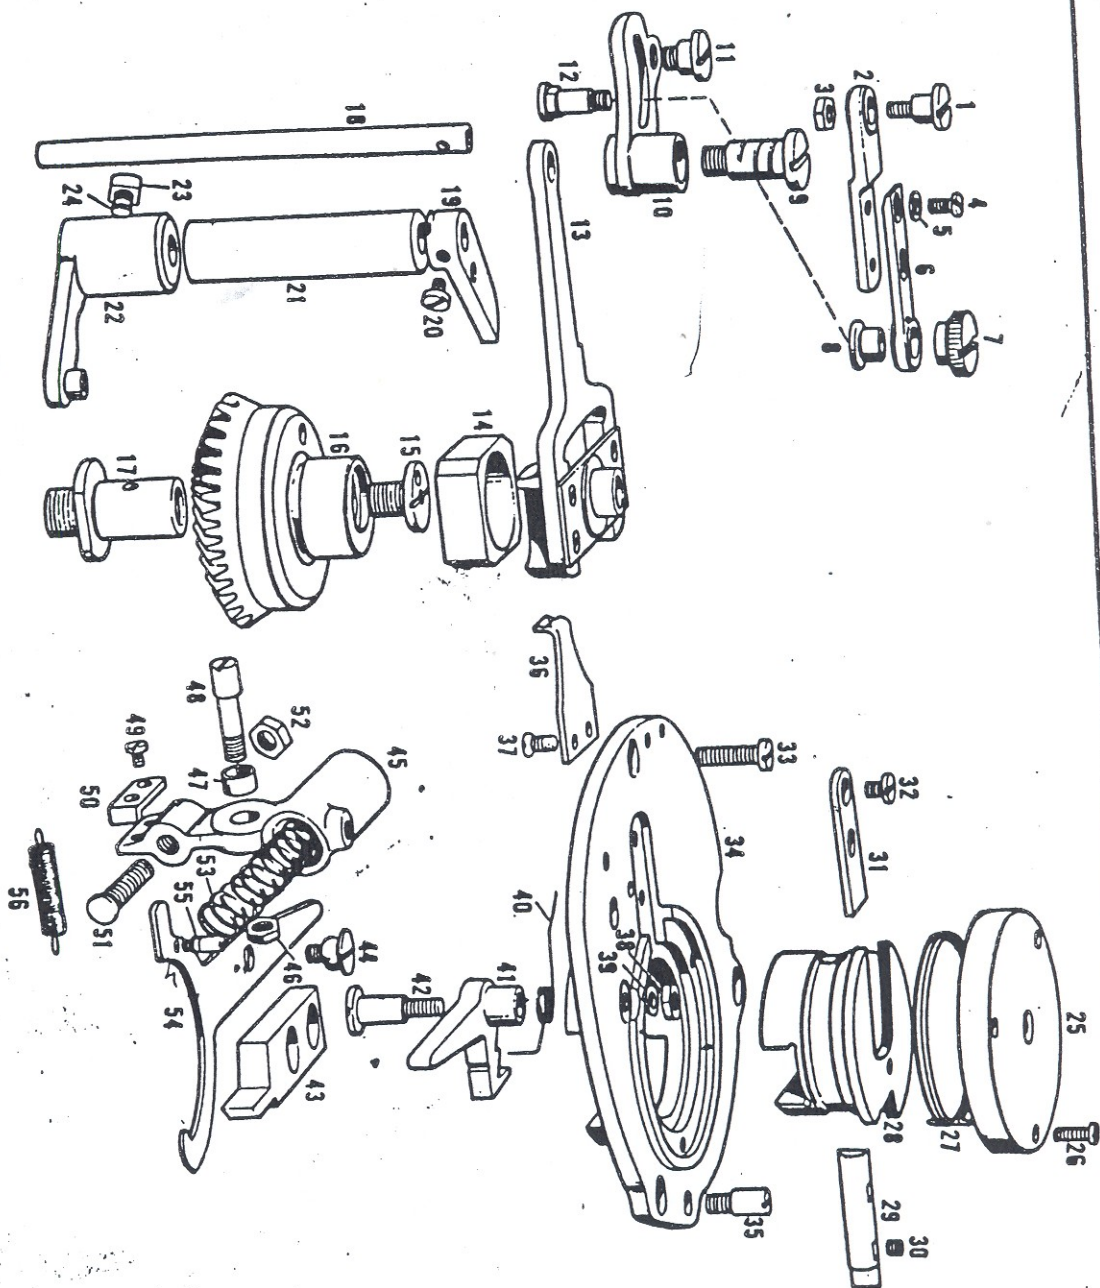


9

000009

Ref.No.	Name of Parts	Qty	Parts No.	Assembly No.	Ref.No.	Name of Parts	Qty	Parts No.	Assembly No.
E-1	Stud Screw for Needle Bar Support	1 pc.	107256-0-01		E-45	Zigzag Transverse	1 pc.	107279-0-01	
E-2	Zigzag Oscillating Connecting Bar (b)	1 "	107253-0-01		E-46	Nut for E-48	1 "	107282-0-01	
E-3	Nut for E-1	1 "	107197-0-01		E-47	Bush for E-48	1 "	107281-0-01	
E-4	Set Screw for E-2 & E-6	2 pcs.	101629-0-02		E-48	Zigzag Transverse Shaft	1 "	107280-0-01	
E-5	Washer for E-4	2 "	103847-0-03		E-49	Set Screw for E-50	2 pcs.	105219-0-03	
E-6	Zigzag Oscillating Connecting Bar (A)	1 pc.	107252-0-01		E-50	Zigzag Transverse Cam Finger	1 pc.	107283-0-01	
E-7	Thumb Nut for E-12	1 "	107251-0-01		E-51	Stopper for E-45	1 "	107286-0-01	
E-8	Bush for E-12	1 "	107249-0-01		E-52	Nut for E-51	1 "	100090-0-03	
E-9	Zigzag Oscillating Crank Connecting Stud	1 "	107248-0-01		E-53	Zigzag Transverse Stopper Spring	1 "	107288-0-01	
E-10	Zigzag Oscillating Crank Stud Screw for E-13	1 "	107246-0-01		E-54	Zigzag Regulator Trigger	1 "	107268-0-01	
E-11	Zigzag Oscillating Crank Shaft	1 "	107247-0-01		E-55	Spring Sustainer (A) for E-54	1 "	107269-0-01	
E-12	Zigzag Oscillating Crank Shaft	1 "	107250-0-01		E-56	Spring for E-54	1 "	107270-0-01	
E-13	Zigzag Fork Assembly	1 "	107084-0-01						
E-14	Zigzag Sleeve	1 set.	107239-0-00	180037-0-01					
E-15	Cap Screw for E-17	1 pc.	107238-0-01						
E-16	Zigzag Bevel Gear (A)	1 "	107236-0-01	107083-0-01					
E-17	Zigzag Bevel Gear Shaft	1 "	107237-0-01						
E-18	Zigzag Regulator Cam Lever Shaft	1 "	107292-0-01						
E-19	Zigzag Regulator Trigger Holder	1 "	107290-0-01						
E-20	Set Screw for E-19	1 "	107291-0-01						
E-21	Bush for E-18	2 pcs.	107297-0-01						
E-22	Zigzag Regulator Cam Lever	1 pc.	107293-0-01						
E-23	Set Screw for E-22	1 "	107296-0-01						
E-24	Pusher for E-23	2 pcs.	101028-0-00						
E-25	Zigzag Regulator Body cover	1 "	107278-0-02						
E-26	Set Screw for E-25	3 pcs.	107278-0-02						
E-27	Spring for E-28	1 pc.	107276-0-01						
E-28	Zigzag Regulator	1 "	107259-0-01						
E-29	Zigzag Transverse Rod	1 "	107260-0-01						
E-30	Set Screw for E-29	1 "	107053-0-01						
E-31	Zigzag Regulator Control Plate	1 "	107262-0-01						
E-32	Set Screw for E-31	1 "	107263-0-01						
E-33	Set Screw for E-34	3 pcs.	107274-0-01						
E-34	Zigzag Regulator Body	1 pc.	107273-0-01						
E-35	Position Screw for E-34	1 "	107275-0-01						
E-36	Spring Sustainer (b) for E-56	1 "	107271-0-01						
E-37	Set Screw for E-36	2 pcs.	107272-0-01						
E-38	Nut for E-42	1 pc.	107266-0-01						
E-39	Spring Washer E-38	1 "	104890-0-01						
E-40	Spring for E-41	1 "	107267-0-01						
E-41	Zigzag Regulator Control Claw	1 "	107264-0-01						
E-42	Stud Screw for E-41	1 "	107265-0-01						
E-43	Zigzag Slide Brace	1 "	107258-0-01						
E-44	Ball Stud Screw for E-45	2 pcs.	107285-0-01						

10

000010

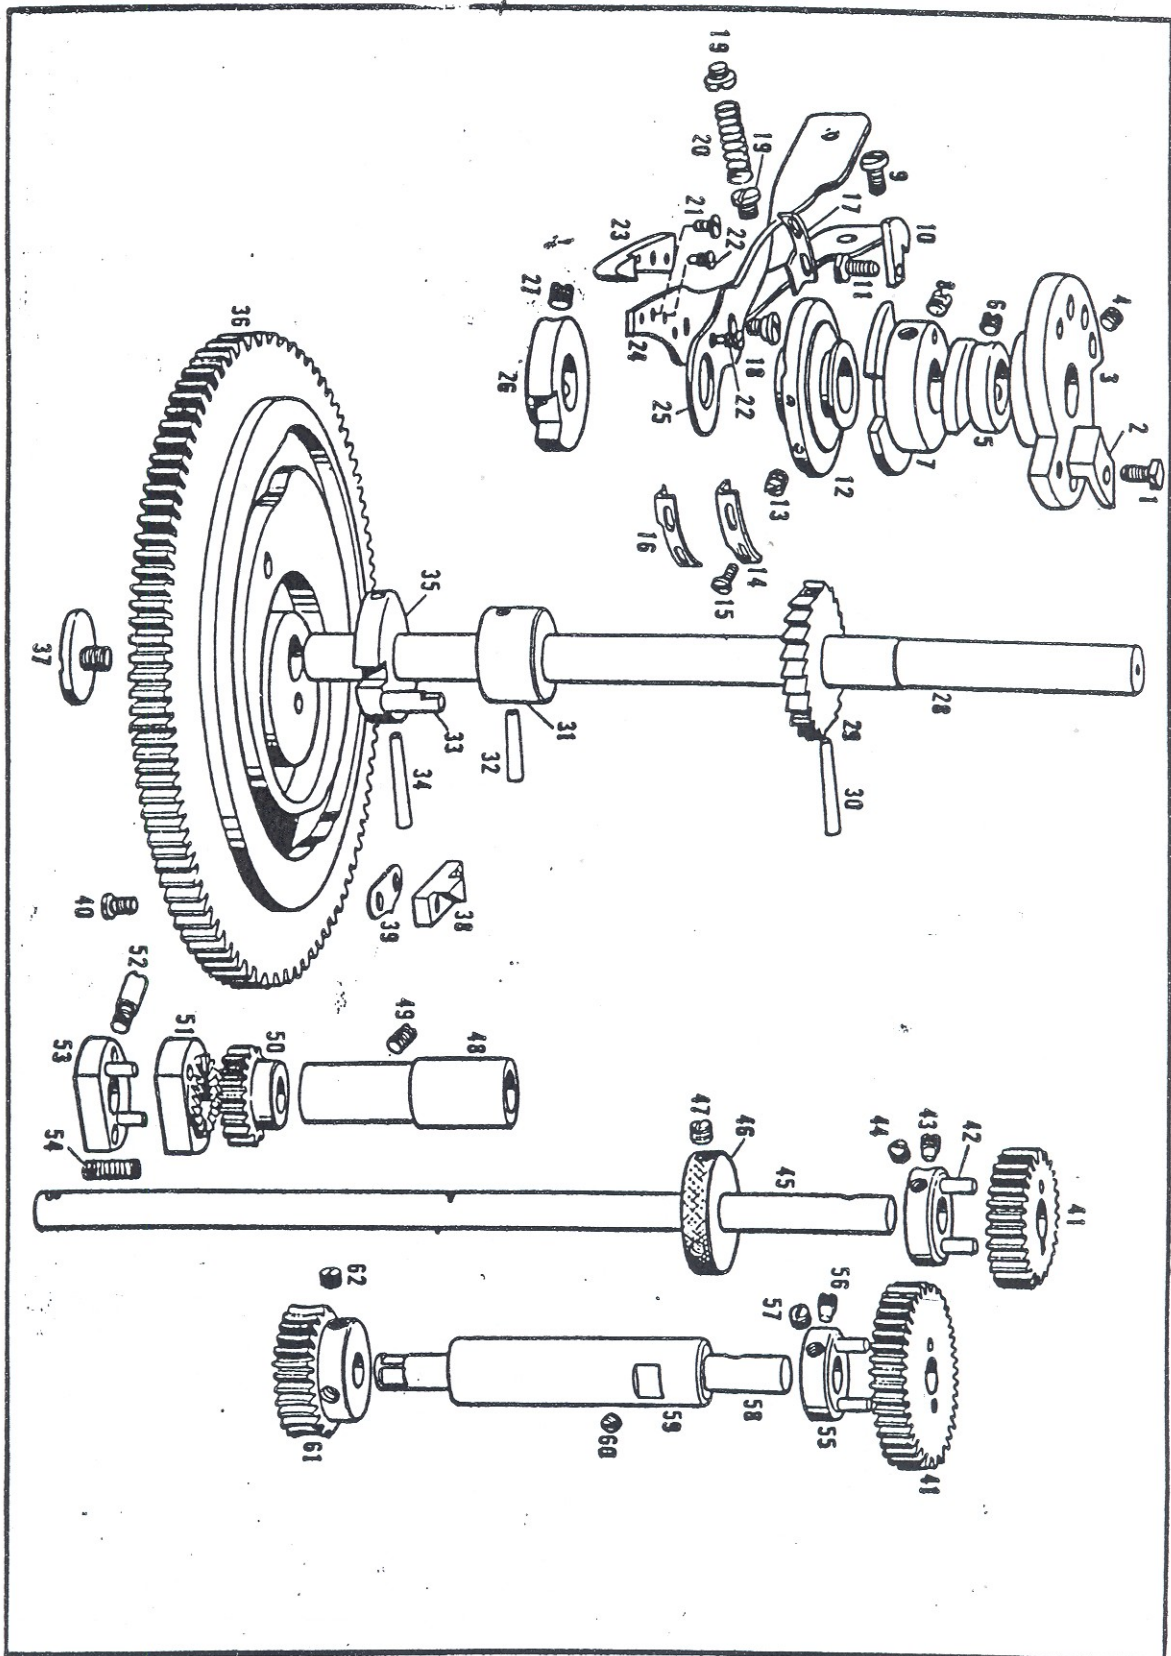

11

000011

Ref. No.	Name of Parts	Qty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Qty	Parts No.	Assembly No.
F-1	Bolt for F-2	1 pce.	107357-0-01		F-41	Transverse Gear 24	1 pce.	108821-0-01	
F-2	Zigzag Transverse Cam Segment	1	107356-0-01		F-41	Transverse Gear 46	1	108822-0-01	
F-3	Zigzag Transverse Cam	1	107354-0-01	107179-0-01	F-41	Transverse Gear 30	1	107340-0-00	
F-4	Set Screw for F-3	2 pcs.	107045-0-01		F-41	Transverse Gear 40	1	107341-0-00	
F-5	Cutter Cam	1 pce.	107358-0-01		F-41	Transverse Gear 28	1	108823-0-01	
F-6	Set Screw for F-5	2 pcs.	100289-0-01		F-41	Transverse Gear 32	1	108824-0-00	
F-7	Zigzag Regulator Cam	1 pce.	107360-0-01		F-41	Transverse Gear 34	1	108825-0-00	
F-8	Set Screw for F-7	1	100013-0-03		F-41	Transverse Gear 36	1	108826-0-00	
F-9	Set Screw for F-7	1	107362-0-02		F-41	Transverse Gear 38	1	108827-0-00	
F-10	Zigzag Regulator Cam Segment	1	107363-0-01		F-41	Transverse Gear 42	1	108828-0-00	
F-11	Bolt for F-10	1	107357-0-01		F-41	Transverse Gear 44	1	108829-0-00	
F-12	Thread Tension Release Cam	1	107365-0-01		F-41	Transverse Gear 46A	1	108830-0-00	
F-13	Set Screw for F-12	2 pcs.	100289-0-01		F-42	Worm Wheel Shaft Collor Assembly	1	107136-0-01	
F-14	Thread Tension Release Cam Segment (M)	1 pce.	109736-0-01		F-43	Set Screw for F-42	1	107305-0-01	
F-15	Set Screw for F-14 & F-17 or F-16	4 pcs.	100080-0-03		F-44	Set Screw for F-42	1	107306-0-01	
F-16	Thread Tension Release Cam Segment (C)	1 pce.	109738-0-03		F-45	Gear Transverse Shaft	1	107323-0-01	
F-17	Thread Tension Release Cam Segment (B)	1	109737-0-01		F-46	Knurled Ring for F-45	1	107328-0-01	
F-18	Stud Screw for F-24 & F-25	1	107373-0-01		F-47	Set Screw for F-46	2 pcs.	100013-0-01	181989-0-01
F-19	Guide Screw for F-20	2 pcs.	107377-0-01		F-48	Gear Transverse Bush	1 pce.	107342-0-01	
F-20	Spring for F-24 & 25	1 pce.	107376-0-01		F-49	Set Screw for F-48	1	107343-0-01	
F-21	Set Screw for F-23	1	100257-0-07		F-50	Gear Transverse Shaft Pinion Gear	1	107335-0-01	
F-22	Stopper for F-24 & F-25	3 pcs.	107370-0-01	107224-0-01	F-51	Set Transverse Shaft Ratchet	1	107333-0-01	
F-23	Claw for F-24	1 pce.	107374-0-01		F-52	Set Screw for F-50	1	107332-0-01	
F-24	Hand Ratchet Lever	1	107371-0-01		F-53	Collar With Guide Pin for F-5	1	107330-0-00	
F-25	Hand Lever	1	107369-0-01		F-54	Spring for F-53	2 pcs.	107334-0-01	
F-26	Upper Thread Scissor Cam	1	107380-0-01		F-55	Worm Wheel Shaft Collor Assembly	1 pce.	107136-0-01	
F-27	Set Screw for F-26	2 pcs.	100013-0-03		F-56	Set Screw for F-55	1	107305-0-01	
F-28	Cam Shaft	1	107378-0-01		F-57	Worm wheel Shaft	1	107306-0-01	
F-29	Hand Ratchet	1	107379-0-01		F-58	Worm wheel Shaft Bush	1	107302-0-01	
F-30	Taper Pin for F-29	1	107382-0-01		F-59	Worm Wheel Shaft	1	107307-0-01	181968-0-01
F-31	Cam Shaft Collar	1	107383-0-01		F-60	Set Screw for F-57	1	107490-0-01	
F-32	Taper Pin for F-31	1	107351-0-01		F-61	Set Screw for F-61	2 pcs.	100251-0-01	
F-33	Cam Shaft Gear collar	1	107350-0-01						
F-34	Set Screw for F-36	1	107345-0-01						
F-35	Knock Pin for E-36	1	108832-0-01						
F-36	Cam Shaft Gear	1	107346-0-01	108831-0-01					
F-37	Stop Cam	1	107346-0-01						
F-38	Washer for F-40	2 pcs.	107778-0-01						
F-39	Set Screw for F-38	2	105173-0-02						
F-40	Transverse Gear 22	1 pce.	107336-0-00						
F-41	Transverse Gear 48	1	107337-0-00						


12

000012

Ref.No.	Name of Parts	Qty	Parts No.	Assembly No.	Ref.No.	Name of Parts	Qty	Parts No.	Assembly No.
G-1	Set Screw for G-2	2 pcs.	107385-0-01		G-46	Set Screw for G-48	1 pc.	107196-0-01	
G-2	Presser Bar Sleeve Hanger Bracket	1 pc.	107384-0-01		G-47	Washer for G-46	1 pc.	107348-0-01	
G-3	Presser Bar Sleeve Hanger	1 "	107386-0-01		G-48	Supporter for G-52	1 "	107430-0-01	107243-0-01
G-4	Stud Screw for G-3	1 "	107387-0-01		G-50	Stop Lin	1 "	111825-0-01	
G-5	Presser Bar Sleeve Hinge Pin	1 "	107388-0-01		G-51	Clamp Lift Roller	1 "	107425-0-01	180043-0-01
G-6	Set Screw for G-5	1 "	104649-0-01		G-52	Clamp Lift Roller Stud	1 "	107426-0-01	
G-7	Presser Bar Sleeve Hinge	1 "	107390-0-01		G-53	Stud Washer for G-52	1 "	107427-0-01	107243-0-01
G-8	Tapar Pin for G-7	1 "	115739-0-01		G-54	Spring for G-44	1 "	107436-0-01	
G-9	Presser Bar Sleeve	1 "	107392-0-01	107233-0-01	G-55	Stud Screw for G-56	1 "	107438-0-01	
G-10	Presser Spring	1 "	107393-0-01		G-56	Clamp Lift Control Plate	1 "	107437-0-01	
G-11	Presser Bar	1 "	107394-0-01		G-57	Set Screw for G-58	1 "	107440-0-01	
G-12	Presser Bar Yoke Plate	1 "	107396-0-01		G-58	Supporter for G-54	1 "	107439-0-01	
G-13	Set Screw for G-12	1 "	107397-0-01		G-59	Stud Screw for G-60	1 "	107442-0-01	
G-14	Presser Bar Ball Receiver	1 "	107395-0-01		G-60	Clamp Control Crank Bar (A)	1 "	107441-0-01	
G-15	Presser Bar Ball	1 "	071079-4-50		G-61	Washer for G-62	1 "	107407-0-02	
G-16	Supporter for G-21	1 "	180790-0-01		G-62	Set Screw for G-60 & G-63	2 pcs.	107445-0-01	
G-17	Stopper Pin for G-16	1 "	107404-0-01		G-63	Clamp Control Crank Bar (B)	1 pc.	107438-0-01	
G-18	Set Screw for G-20	2 pcs.	107403-0-01	109660-0-01	G-64	Stud Screw for G-63	1 "		
G-19	Set Pin for G-16	2 "	107401-0-01						
G-20	Plate Spring for G-16	2 "	107406-0-01						
G-21	Upper Clamping Foot (A)	1 pc.	107446-0-01						
G-22	Upper Clamping Foot (B)	1 "	108833-0-01						
G-23	Upper Clamping Foot (C)	1 "	107413-0-01						
G-24	Set Screw for G-25	1 "	107411-0-01						
G-25	Upper Thread Scissor Releasing Cam	1 "	107410-0-01						
G-26	Upper Thread Scissor Lifter Plate	1 "	107409-0-01						
G-27	Clamp Lever	1 "	107405-0-01						
G-28	Stud Screw for G-16	1 "	107407-0-02						
G-29	Washer for G-31	2 pcs.	107348-0-01						
G-30	Set Screw for G-28	2 "	101629-0-02						
G-31	Bracket for G-27	1 pc.	107414-0-01	180042-0-01					
G-32	Bracket for G-27	1 "	107418-0-01						
G-33	Clamp Lift Lever Yoke	2 pcs.	107419-0-01						
G-34	Set Screw for G-34	1 pc.	107416-0-01						
G-35	Shaft for G-33	1 "	107135-0-01						
G-36	Set Screw for G-36	1 "	107420-0-01						
G-37	Clamping Base Plate	4 pcs.	107421-0-01						
G-38	Set Screw for G-38	1 pc.	107428-0-02						
G-39	Clamp Lift Lever	1 "	107422-0-01						
G-40	Nut for G-40	1 "	107424-0-01						
G-41	Nut for G-45	1 "	107114-0-01						
G-42	Clamp Control Bar	1 "	107433-0-01	107243-0-01					
G-43	Stud Screw for G-44	1 "	107434-0-01						


colonne
red. de kit
non dur

14 000014

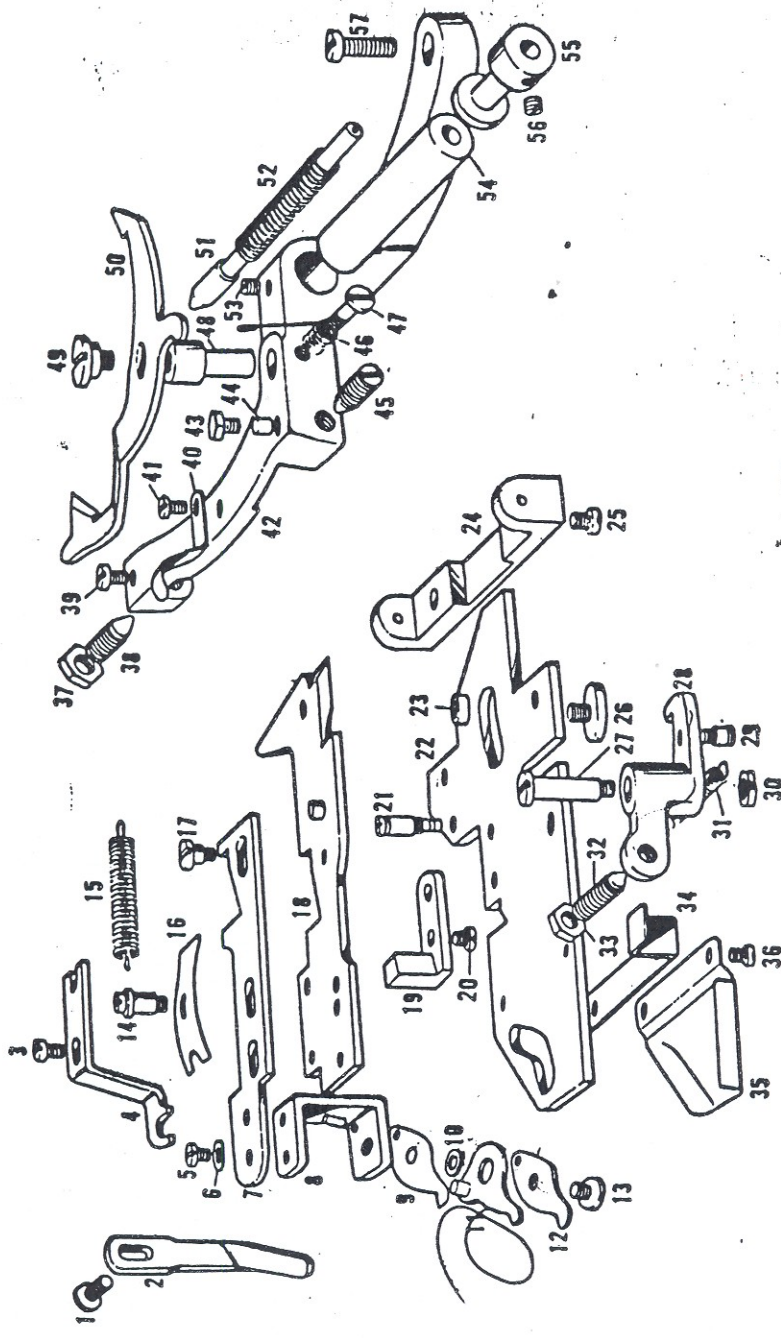

000015

Ref.No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref.No.	Name of Parts	Q'ty	Parts No.	Assembly No.
H-1	Set Screw for H-2	1 pc.	107407-0-02		H-45	Center Screw for H-42 (right)	1 pc.	100077-0-02	
H-2	Thread Scissor Device Guide	1	107527-0-01		H-46	Spring for H-50	1	107475-0-01	
H-3	Set Screw for H-4	2 pcs.	107526-0-01		H-47	Set Screw for H-48	1	107474-0-01	
H-4	Thread Scissor Motion Shank	1 pc.	107525-0-01		H-48	Fulcrum Stud for H-50	1	107472-0-01	
H-5	Set Screw for H-8	2 pcs.	105123-0-01		H-49	Stud Screw for H-50	1	107473-0-01	
H-6	Washer for H-5	2	103347-0-03	107288-0-01	H-50	Thread Scissor Device Check Lever	1	107471-0-01	
H-7	Thread Scissor Slide Upper Plate	1 pc.	107509-0-01		H-51	Thread Scissor Device Center Rod	1	107477-0-01	107261-0-01
H-8	Thread Scissor Yoke	1	182215-0-01		H-52	Spring for H-51	1	107480-0-01	
H-9	Thread Scissor Upper Plate	2 pcs.	107522-0-01		H-53	Set Screw for H-54	1	104649-0-01	
H-10	Collar for H-11	1 pc.	107523-0-01		H-54	Thread Scissor Device Center Bush	1	107481-0-01	
H-11	Thread Scissor Middle Blade	1	107519-0-01	182200-0-01	H-55	Collar for H-51	1	107478-0-01	
H-12	Thread Scissor Lower Blade	2 pcs.	107518-0-01		H-56	Set Screw for H-55	1	104649-0-01	
H-13	Set Screw for H-9 H-11 & H-12	1 pc.	107524-0-01		H-57	Set Screw for H-42	2 pcs.	107470-0-01	
H-14	Sustainer Screw for H-16 or H-18	1	107512-0-01						
H-15	Spring for H-7 & H-18	1	107513-0-01						
H-16	Plate Spring for H-7	1	107511-0-01						
H-17	Stud Screw for H-18	2 pcs.	107510-0-01						
H-18	Thread Scissor Slide Lower Plate	1 pc.	107507-0-01						
H-19	Slopper for H-22	1	107493-0-01						
H-20	Set Screw for H-19	2 pcs.	107494-0-01						
H-21	Sustainer for H-31 or H-22	1 pc.	107501-0-01						
H-22	Thread Scissor Slide Base Plate	1	107492-0-01	107288-0-01					
H-23	Roller for H-22	2 pcs.	107503-0-01						
H-24	Thread Scissor Reciprocating Block	1 pc.	107485-0-01						
H-25	Set Screw for H-24	2 pcs.	107491-0-02						
H-26	Set Screw for H-23	2	107502-0-01						
H-27	Stud Screw for H-28	1 pc.	107496-0-01						
H-28	Thread Scissor Slide Plate	1	107495-0-01						
H-30	Backlash Slopper	1	107444-0-02						
H-31	Sustainer for H-31 or H-28	1	107500-0-01						
H-32	Adjusting Screw for H-28	1	107499-0-01						
H-33	Nut for H-32	1	107497-0-01						
H-34	Thread Scissor Device Lift Latch	1	107498-0-01						
H-35	Thread Scissor Device Lower Cover	1	107504-0-01						
H-36	Set Screw for H-34 & H-35	2 pcs.	107506-0-01						
H-37	Nut for H-38	1 pc.	107494-0-01						
H-38	Center Screw for H-42 (left)	1	100090-0-01						
H-39	Stop Screw for H-50	1	107476-0-01						
H-40	Thread Scissor Device Plate Spring	1	107483-0-01						
H-41	Set Screw for H-40	1	100257-0-06						
H-42	Thread Scissor Device Yoke	1	107469-0-01	107261-0-01					
H-43	Bolt for H-45	1	107488-0-02						
H-44	Pusher for H-43	1	107487-0-00						

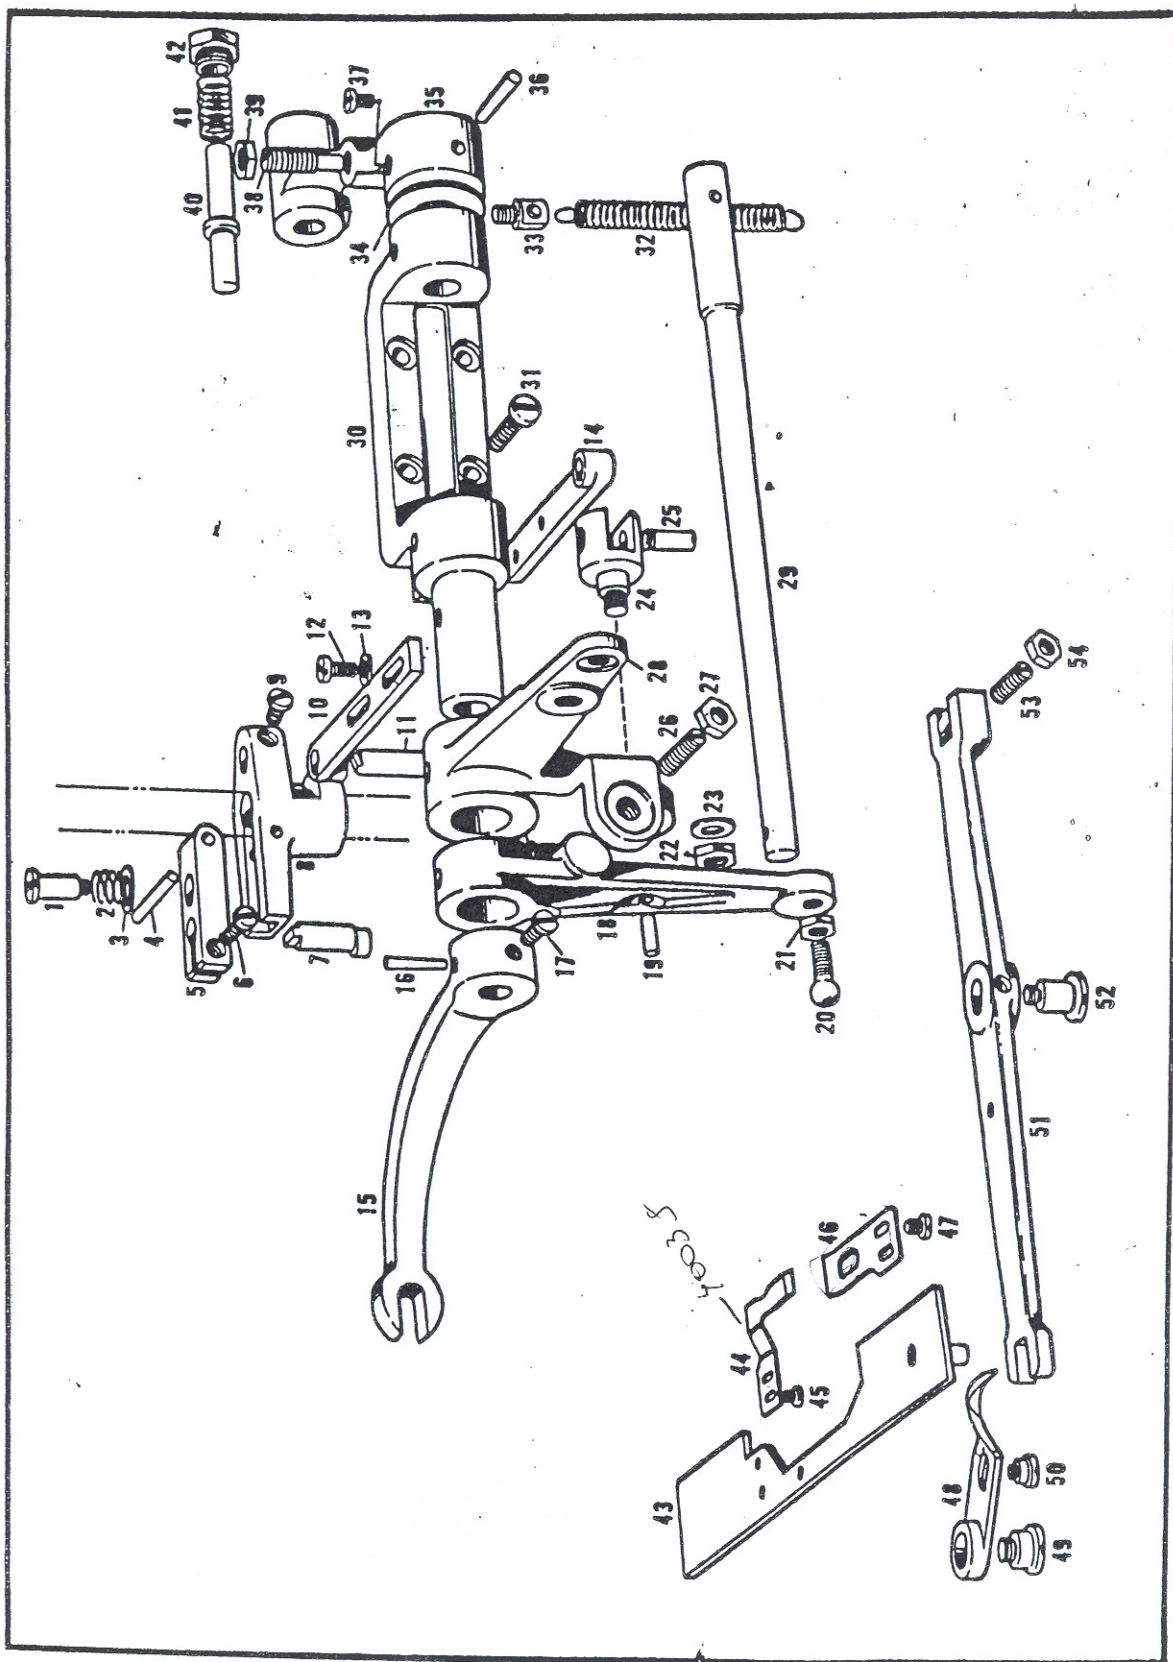


000017

Ref.No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref.No.	Name of Parts	Q'ty	Parts No.	Assembly No.
I-1	Stud Screw for I-2	1 pce.	107467-0-01		I-43	Lower Thread Cutter Slide Plate	1 pce.	107539-0-01	
I-2	Spring for I-5	1 "	107466-0-01		I-44	Lower Thread Cutter Movable Blade	2 pcs.	107541-0-01	
I-3	Washer for I-2	1 "	107408-0-01		I-45	Set Screw for I-44	2 pcs.	105288-0-03	
I-4	Pin for I-5	1 "	107462-0-00		I-46	Lower Thread Cutter Fixed Blade	1 pce.	107546-0-01	
I-5	Thread Scissor Pushing Lever	1 "	107461-0-01		I-47	Set Screw for I-46	1 pce.	107543-0-01	
I-6	Clamp Screw for I-7	1 "	100064-0-01		I-48	Lower Thread Release I-48	1 pce.	107543-0-01	
I-7	Roller Pin for I-5	1 "	107463-0-01		I-49	Stud Screw for I-48	1 "	107544-0-01	
I-8	Thread Scissor Pushing Lever Body	1 "	107460-0-01		I-50	Stud Screw for I-48	1 "	107545-0-01	
I-9	Set Screw for I-11	1 "	107459-0-01		I-51	Lower Thread Cutter Lever	1 "	107535-0-01	
I-10	Upper Thread Cutter Connecting Bar (B)	1 "	107455-0-01		I-52	Stud Screw for I-51	1 "	107536-0-01	
I-11	Hinge Pin for I-8	1 "	107458-0-01		I-53	Stop Screw for I-51	1 "	100016-0-03	
I-12	Set Screw for I-10 & I-14	2 pcs.	101629-0-02		I-54	Nut for I-53	1 "	107114-0-01	
I-13	Washer for I-12	2 "	103847-0-04						
I-14	Upper Thread Cutter Connecting Bar (A)	1 pce.	107454-0-01						
I-15	Upper Thread Tension Release Arm	1 "	107641-0-01						
I-16	Taper Pin I-15	1 "	107643-0-00						
I-17	Set Screw for I-15	1 "	107631-0-01						
I-18	Lower Thread Cutter Motion Lever	1 "	107529-0-01						
I-19	Pin for I-18	1 "	107530-0-00						
I-20	Ball Stud Screw for I-18	1 "	107533-0-01						
I-21	Nut for I-20	1 "	107114-0-01						
I-22	Nut for I-24	1 "	107282-0-01						
I-23	Washer for I-24	1 "	107453-0-01						
I-24	Upper Thread Cutter Crank Joint	1 "	107450-0-01						
I-25	Pin for I-24	1 "	107451-0-01						
I-26	Adjusting Screw for I-28	2 pcs.	107976-0-01						
I-27	Nut for I-26	2 "	107282-0-01						
I-28	Upper Thread Cutter Lever	1 pce.	107449-0-01						
I-29	Upper Thread Tension Release Lever Shaft	1 "	107628-0-01						
I-30	Upper Thread Cutter Lever Bracket	1 "	107447-0-01						
I-31	Set Screw for I-30	4 pcs.	107423-0-01						
I-32	Spring for I-35	1 pce.	107638-0-01						
I-33	Suspender on I-15	1 "	107639-0-01						
I-34	Washer for I-30	1 "	107629-0-01						
I-35	Upper Thread Tension Release Lever	1 "	107630-0-01						
I-36	Taper Pin I-35	1 "	107383-0-01						
I-37	Set Screw for I-35	1 "	107631-0-01						
I-38	Adjusting Stopper for I-35	1 "	107636-0-01						
I-39	Nut for I-38	1 "	107114-0-01						
I-40	Pin for I-35	1 "	107633-0-01						
I-41	Spring for I-40	1 "	107634-0-01						
I-42	Cap Screw for I-41	1 "	107635-0-01						

18

000018

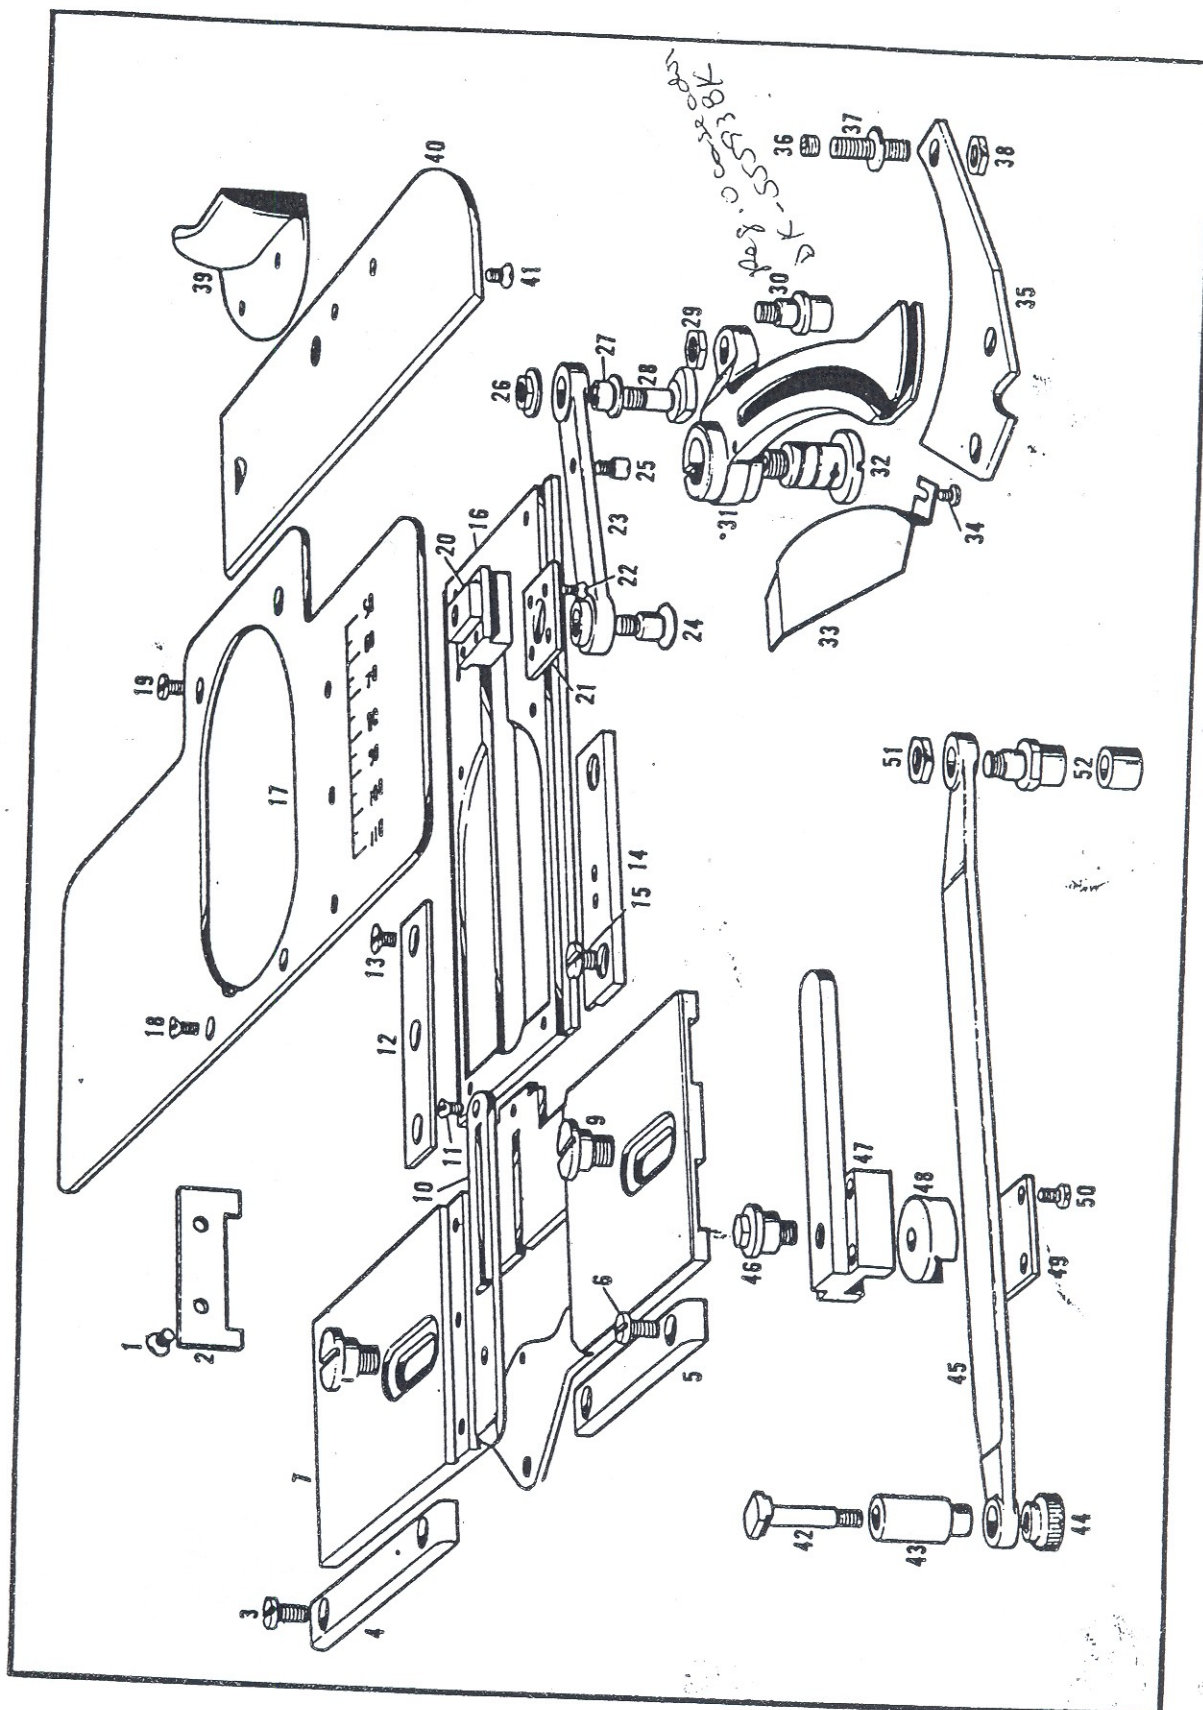


Ref.No.	Name of Parts	Qty	Part No.	Assembly No.	Ref.No.	Name of Parts	Qty	Part No.	Assembly No.
J-1	Set Screw SM3.57-40x6 for J-2	2 pcs.	107560-0-01		J-46	Adjusting Screw for J-47	1 pce.	107576-0-01	
J-2	Plate for K-33	1 pce.	107600-0-01		J-47	Width Feed Regulator	1 "	107573-0-01	
J-3	Set Screw for J-4	2 pcs.	107407-0-01		J-48	Width Feed Regulator Sleeve Slot	1 "	107572-0-01	
J-4	Feed Base Plate Guide (left)	1 pce.	107592-0-01		J-49	Width Feed Regulator Cover	1 "	107574-0-01	180046-0-01
J-5	Set Screw for J-5	2 pcs.	107407-0-01		J-50	Set Screw for J-52	4 pcs.	107575-0-01	
J-6	Feed Base Plate	1 pce.	107581-0-01		J-51	Width Feed Regulator With Stud	1 pce.	107114-0-01	
J-7	Needle Plate (W)	2 pcs.	107588-0-01		J-52		1 "	180044-0-01	
J-8	Needle Plate (W)	1 pce.	107582-0-01						
J-9	Set Screw for J-7	1 pce.	107583-0-01						
J-10	Needle Plate (W)	2 pcs.	107565-0-01						
J-11	Set Screw for Needle Plate	1 pce.	107587-0-01						
J-12	Length Feed Guide (left)	1 pce.	107587-0-01						
J-13	Set Screw for J-12	3 pcs.	107587-0-01						
J-14	Length Feed Guide (right)	1 pce.	107584-0-01						
J-15	Set Screw for J-14	2 pcs.	107419-0-01						
J-16	Length Feed Plate	1 pce.	107580-0-01						
J-17	Feed Base Plate Cover	1 "	107594-0-01						
J-18	Set Screw for J-17	2 pcs.	107596-0-01						
J-19	Length Feed Slide Block	1 pce.	107563-0-01						
J-20	Cover for J-20	1 pce.	107564-0-01						
J-21	Set Screw for J-21	4 pcs.	107596-0-01						
J-22	Length Feed Link	1 pce.	107560-0-01						
J-23	Position Screw for K-33 or J-23	1 "	107561-0-01						
J-24	Nut for J-28	1 "	107424-0-01						
J-25	Length Feed Adjusting	1 "	107558-0-01						
J-26	Stud Nut for J-30	1 "	107557-0-01						
J-27	Length Feed Regulator Stud	1 "	182303-0-01						
J-28	Roller with Stud for J-31	1 "	107548-0-01						
J-29	Length Feed Regulator Stud	1 "	107549-0-01						
J-30	Cover for J-31	1 "	107566-0-01						
J-31	Set Screw for J-33	2 pcs.	105288-0-03						
J-32	Position Plate for J-31	1 pce.	107553-0-01						
J-33	Set Screw for J-37	3 pcs.	107555-0-01						
J-34	Stud Screw for J-35	3 "	107554-0-01						
J-35	Nut for J-37	3 "	107556-0-01						
J-36	Cam Shaft Cover	1 pce.	107588-0-01						
J-37	Length Regulator Slide Plate	1 "	107597-0-01						
J-38	Set Screw SM3.57-40x6 for J-39	2 pcs.	107578-0-01						
J-39	Width Feed Lever Stud	1 pce.	107577-0-01						
J-40	Thumb Screw for J-42	1 "	107251-0-01						
J-41	Width Feed Lever	1 "	107568-0-01						
J-42									
J-43									
J-44									
J-45									

B812-21


10

000020

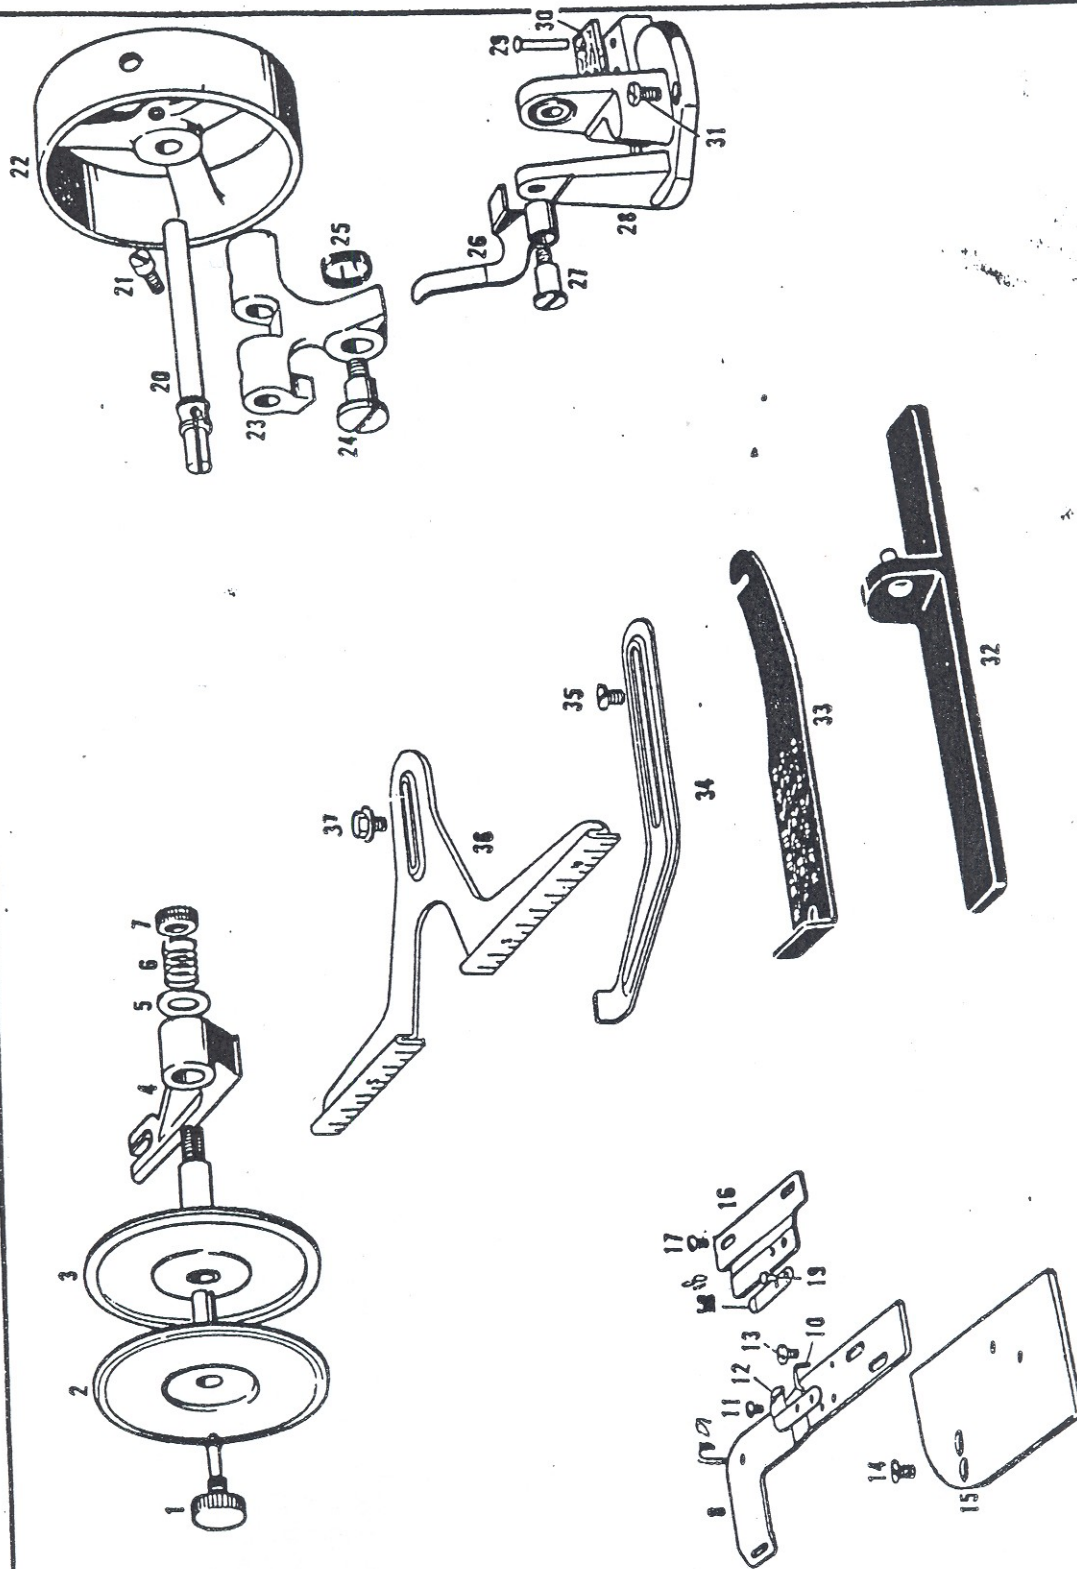

000021

Ref.No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref.No.	Name of Parts	Q'ty	Parts No.	Assembly No.
K-1	Tape Winder Thumb Screw	1 pc.	108492-0-01						
K-2	Tape Winder Flange Stud (B)	1 "	108487-0-01						
K-3	Tape Winder Flange Stud (A)	1 "	108486-0-01						
K-4	Tape Winder Holding Bracket	1 "	108493-0-01	108485-0-01					
K-5	Washer for K-3	1 "	108494-0-01						
K-6	Tape Winder Tension Spring	1 "	108495-0-01						
K-7	Nut for K-3	1 "	100136-0-01						
K-8	Tape Guide Plate	1 "	107698-0-01						
K-9	Tape Guide Side Wire (B)	1 "	107700-0-01						
K-10	Tape Guide Side Wire (A)	1 "	107699-0-01						
K-11	Set Screw for K-12	2 pcs.	107703-0-02						
K-12	Tape Guide Plate Spring for K-8	1 pc.	107702-0-01	107361-0-01					
K-13	Set Screw for K-8	2 pcs.	107491-0-02						
K-14	Tape Guide Base Plate	1 pc.	107696-0-01						
K-15	Set Screw for K-15	2 pcs.	107697-0-01						
K-16	Tape Needle Plate Guide	1 "	107704-0-01						
K-17	Tape Guide Plate Spring for K-16	1 "	107706-0-01	107364-0-01					
K-18	Set Screw for K-18	2 pcs.	107703-0-02						
K-19	Bobbin Winder Shaft	1 pc.	107670-0-01						
K-20	Set Screw for K-22	1 pc.	100025-0-01						
K-21	Bobbin Winder Wheel	1 "	106014-0-01						
K-22	Bobbin Winder Wheel	1 "	10667-0-01						
K-23	Stud Screw for K-23	1 "	107668-0-01						
K-24	Bobbin Holder	1 "	107669-0-01	107355-0-01					
K-25	Stud Screw for K-26	1 "	106022-0-01						
K-26	Pin for K-30	1 "	107664-0-01						
K-27	Bobbin Winder Brake Leather	2 pcs.	106023-0-01						
K-28	Position Plate for Flange	1 set.	107757-0-01						
K-29	Spring Assembly	1 pc.	107776-0-01						
K-30	Cloth Guide (A)	1 "	108630-0-01						
K-31	Set Screw for K-34	2 pcs.	108435-0-01						
K-32	Cloth Guide (B)	1 pc.	107443-0-01						
K-33	Set Screw for K-36	1 "	107456-0-01						

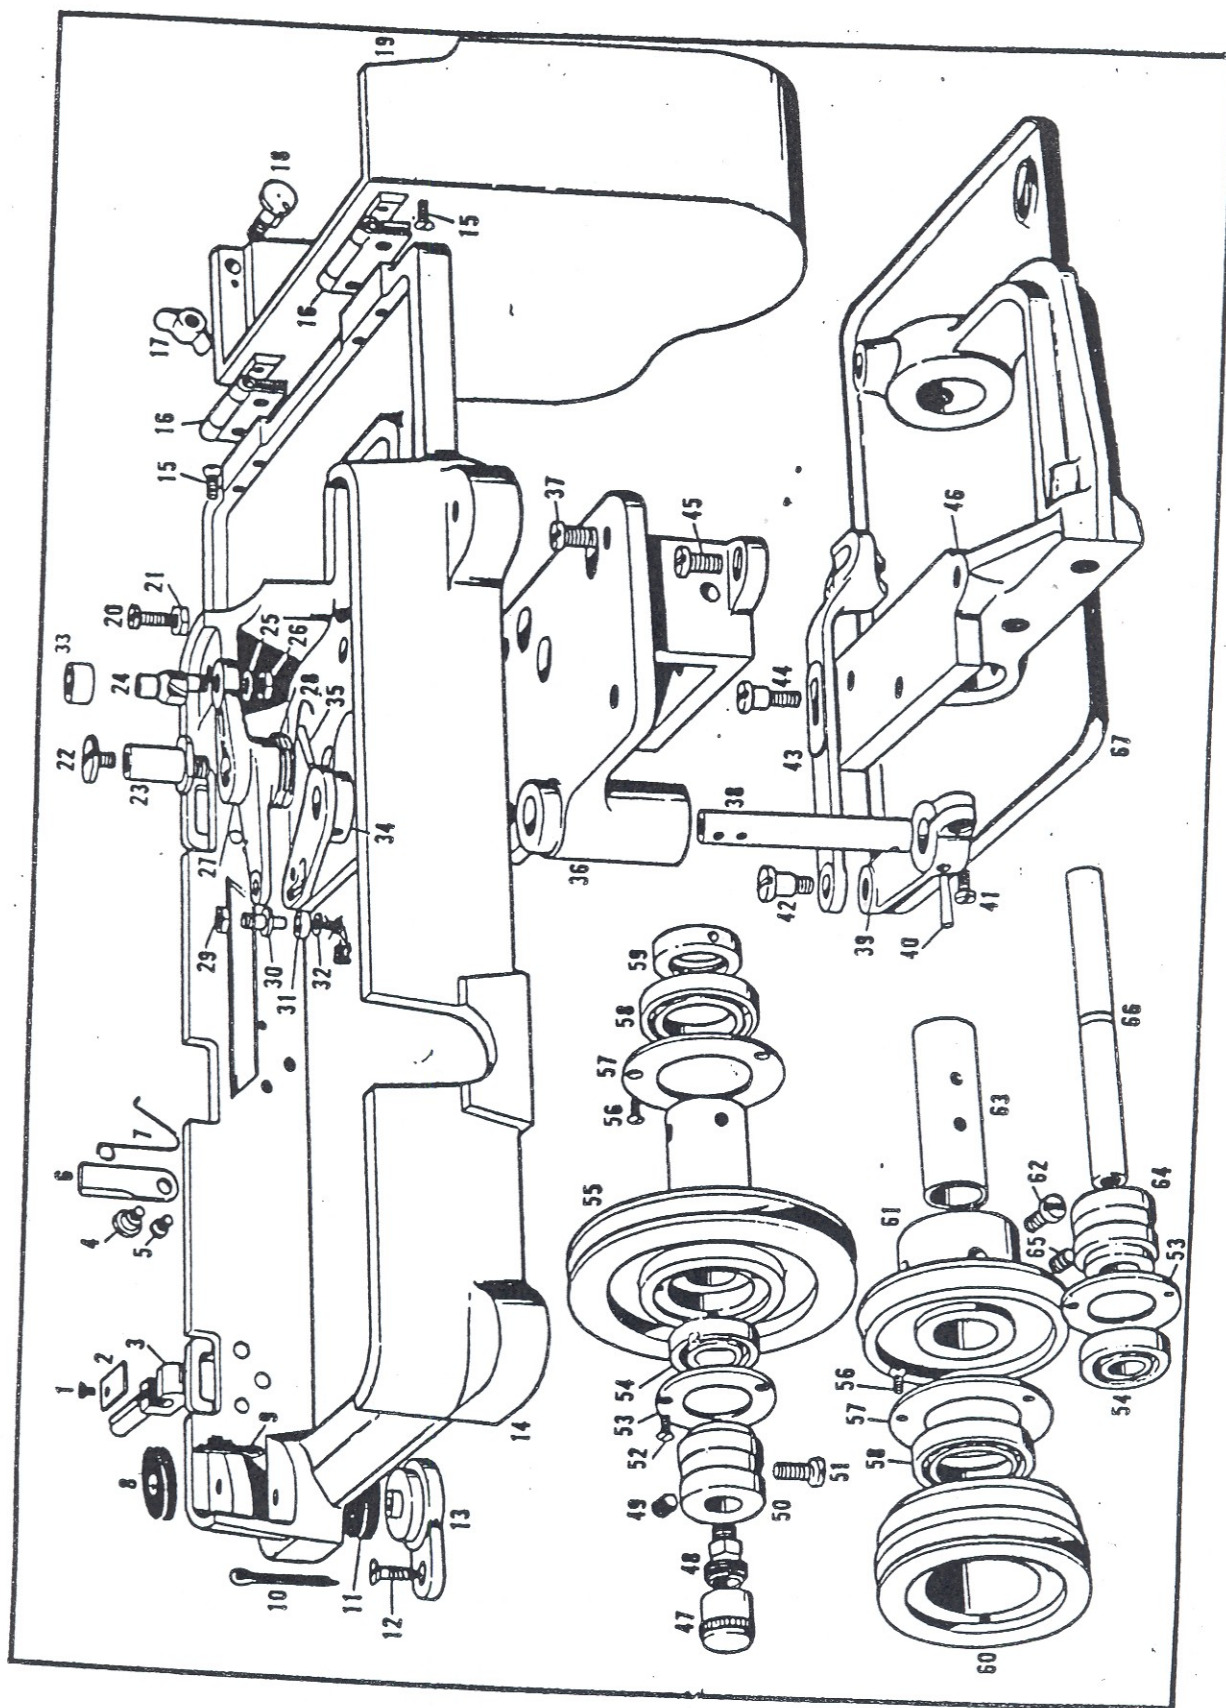

000023

Ref.No.	Name of Parts	Qty	Parts No.	Assembly No.	Ref.No.	Name of Parts	Qty	Parts No.	Assembly No.
L-1	Set Screw for L-2	2 pce.	105219-0-03		L-46	Transmitter Shaft Frame	1 pce.	107758-0-01	
L-2	Head Hook Plate	2 "	107718-0-01	180045-0-01	L-47	Cover for L-48	1 "	107767-0-00	
L-3	Head Hook	2 "	107717-0-01		L-48	Transmitter Shaft Grease Cup	1 "	107766-0-00	
L-4	Stud Screw for L-6	1 pce.	100665-0-01		L-49	Set Screw for L-50	1 "	100013-0-01	
L-5	Stop Screw for L-6	1 "	107720-0-01		L-50	Transmitter Bush (A)	1 "	107760-0-00	107389-0-01
L-6	Length Feed Gauge Presser Plate	1 "	107720-0-01		L-51	Set Screw for L-60	1 "	105351-0-02	
L-7	Notch Spring for L-6	1 "	107723-0-01		L-52	Set Screw for L-53	3 pcs.	102843-0-01	
L-8	Head Cushion	4 pce.	107715-0-01		L-53	Cover for L-55	2 "	107770-0-00	
L-9	Split Pin for L-8	4 "	107716-0-00		L-54	Ball Bearing for L-65	2 "	107769-0-00	
L-10	Split Pin for L-11	4 "	107714-0-00		L-55	V Pulley Large for L-55	1 pce.	107768-0-00	
L-11	Base Cushion	4 "	107713-0-00		L-56	Set Screw for L-57	3 pcs.	102843-0-01	
L-12	Wood Screw for L-13	4 "	100469-0-02		L-57	Cover for L-60	2 "	107755-0-00	
L-13	Base Cover Shoe Base	4 "	107711-0-01		L-58	Ball Bearing for L-60	2 "	107756-0-00	
L-14	Cover Assembly	1 set.	107366-0-01		L-59	Collar for L-58	1 pce.	107774-0-00	
L-15	Set Screw for L-16	8 pcs.	107231-0-01		L-60	Belt Pulley Small (A)	1 "	107772-0-00	
L-16	Belt Cover Hinge	2 set.	107372-0-01		L-61	Belt Pulley Small (B)	1 "	107771-0-00	
L-17	Wing Nut for L-18	1 pce.	107727-0-01		L-62	Set Screw for L-61	2 pcs.	105173-0-01	
L-18	Belt Cover Stud Screw Assembly	1 set.	107368-0-01		L-63	Transmitter Shaft Collar	1 pce.	107781-0-00	
L-19	Belt Cover	1 pce.	107724-0-01		L-64	Transmitter Bush (B)	1 "	107762-0-00	
L-20	Stop Screw for L-19	1 "	107733-0-02		L-65	Set Screw for L-64	1 "	100013-0-01	
L-21	Nut for L-20	2 pcs.	107733-0-01		L-66	Transmitter Shaft	1 "	107764-0-01	
L-22	Cap Screw for L-23	1 pce.	105155-0-01		L-67	Oil Pan	1 "	107457-0-01	
L-23	Belt Shift Lever Stud	1 "	107736-0-00						
L-24	Roller Stud for L-27 (large)	1 "	101109-0-02	107375-0-01					
L-25	Washer for L-24	1 "	100090-0-03						
L-26	Nut for L-24	1 "	107738-0-01						
L-27	Belt Shift Lever	1 "	107282-0-01						
L-29	Nut for L-30	1 "	107743-0-01	180048-0-01					
L-30	Roller Stud for L-27 (small)	1 "	107744-0-01						
L-31	Roller for L-27	1 "	402650-0-01						
L-32	Stop Ring	1 "	100084-0-01	107375-0-01					
L-33	Roller for L-24	1 "	107756-0-01						
L-28	Spring for L-27	1 "	107748-0-01						
L-34	Belt Guide Cam Plate	1 "	107749-0-00						
L-35	Taper Pin for L-34	1 "	107734-0-01						
L-36	Transmitter Base	4 pcs.	107311-0-01						
L-37	Set Screw for L-36	1 pce.	107750-0-00						
L-38	Shaft for L-39	1 "	107751-0-01						
L-39	Belt Shift Arm	1 "	107752-0-00						
L-40	Taper Pin for L-39	1 "	107753-0-02						
L-41	Clamp Screw for L-39	1 "	107754-0-01						
L-42	Stop Screw for L-39	1 "	107755-0-01						
L-43	Belt Shifter	1 "	108311-0-01						
L-44	Stud Screw for L-43	3 pcs.	107311-0-01						
L-45	Set Screw for L-49								

24

000024