



DT2-B962

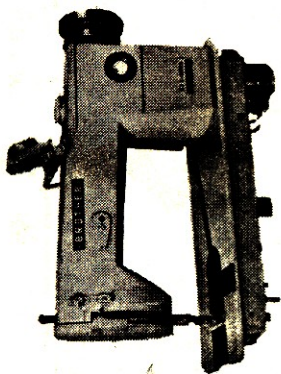


**EDIÇÃO
01**

18010014

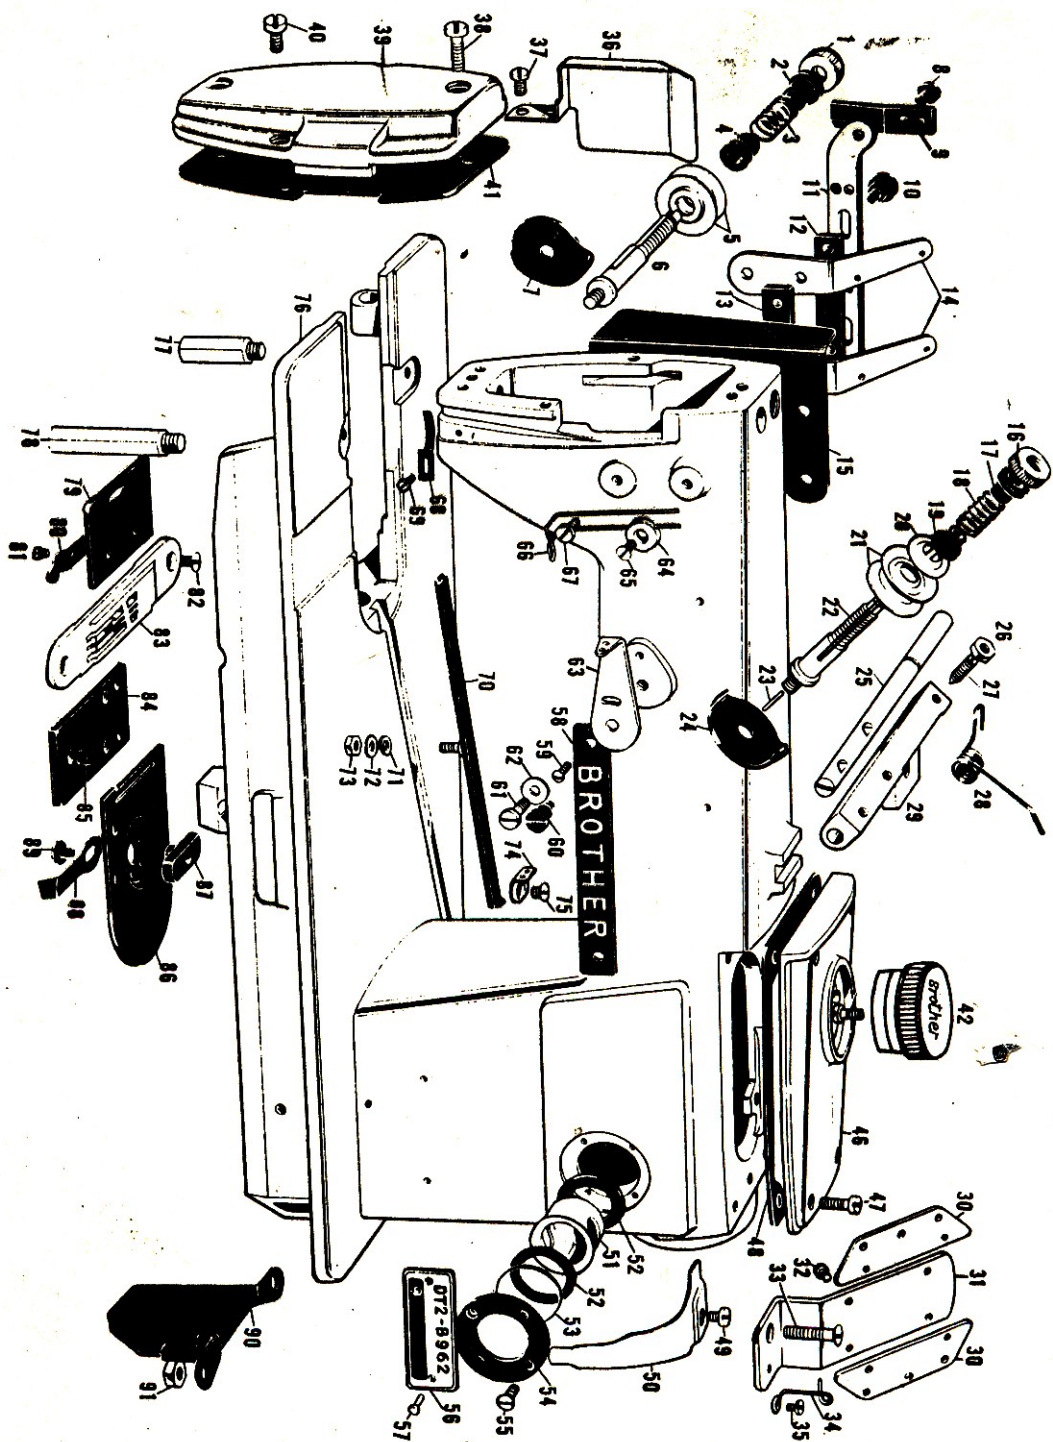


Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
A - 1	Lower Tension Control Nut	2 pcs.	105230-0-01		A - 46	Arm Top Cover	1 pcc.	113791-0-01	
A - 2	Lower Tension Spring Washer (A)	"	105228-0-01		A - 48	Packing for A - 46	"	113582-0-01	
A - 3	Lower Thread Tension Spring	"	105278-0-00		A - 47	Set Screw for A - 46	4 pcs.	107423-0-01	
A - 4	Lower Tension Spring Washer (B)	"	105229-0-01		A - 49	Set Screw for A - 50	1 pcc.	100154-0-02	
A - 5	Tension Disc	4 pcs.	108721-0-01		A - 50	Oil Guide	"	113786-0-01	
A - 6	Lower Thread Tension Stud	2 pcs.	113740-0-01		A - 51	Oil Receiver	"	113588-0-01	
A - 7	Tension Bracket Thread Guide	"	105226-0-01		A - 52	Packing for A - 53	2 pcs.	113589-0-01	
A - 8	Set Screw for A - 9	"	102438-0-04		A - 53	Oil Guide Window	1 pcc.	113587-0-01	
A - 9	Lower Thread Release Slide Plate (A)	"	113746-0-01		A - 54	Oil Guide Flange	"	113586-0-01	
A - 10	Stud Screw for A - 11	"	113745-0-01		A - 55	Set Screw for A - 54	4 pcs.	102538-0-01	
A - 11	Lower Thread Release Slide Plate (B)	1 pcc.	113744-0-01		A - 56	Model Plate	1 pcc.	115903-0-01	
A - 12	Lower Thread Guide Set Plate (A)	"	113742-0-01		A - 57	Model Plate Pin	2 pcs.	100010-0-01	
A - 13	Lower Thread Guide Set Plate (B)	"	113743-0-01		A - 58	Name Plate	1 pcc.	112547-0-01	
A - 14	Lower Thread Guide	2 pcs.	113741-0-01		A - 59	Set Screw for A - 58	2 pcs.	102731-0-01	
A - 15	Lower Thread Tension Bracket Cover	1 pcc.	115871-0-01		A - 60	Stud Screw for A - 63	1 pcc.	113730-0-02	
A - 16	Upper Thread Tension Control Nut	2 pcs.	105230-0-01		A - 61	Set Screw for A - 63	"	106510-0-01	
A - 17	Upper Tension Spring Washer (A)	"	105228-0-01		A - 62	Washer for A - 63	"	105161-0-01	
A - 18	Upper Tension Spring	"	105227-0-01		A - 63	Upper Thread Adjusting Plate	"	113731-0-01	
A - 19	Upper Tension Spring Washer (B)	"	105229-0-01		A - 64	Washer for A - 66	"	111188-0-01	
A - 20	Tension Disc Washer	"	100134-0-01		A - 65	Set Screw for A - 66	"	107038-0-01	
A - 21	Tension Disc	4 pcs.	108721-0-01		A - 66	Thread Guide for Upper Thread Take Up Lever	"	113732-0-01	
A - 22	Upper Thread Tension Stud	2 pcs.	105225-0-01	115908-0-01	A - 67	Screw for A - 66	"	107494-0-01	
A - 23	Upper Thread Release Pin	"	105231-0-01		A - 68	Upper Thread Guide	"	115867-0-01	
A - 24	Tension Bracket Thread Guide	"	105226-0-01		A - 69	Set Screw for A - 68	"	101531-0-02	
A - 25	Thread Release Shaft	1 pcc.	115868-0-01		A - 70	Lower Thread Guide Plate	"	113749-0-01	
A - 26	Nut for A - 27	"	105234-0-01		A - 71	Spring Washer for A - 70	"	113750-0-01	
A - 27	Set Screw for A - 25	"	105233-0-01		A - 72	Washer for A - 70	"	105161-0-02	
A - 28	Thread Release Spring	"	113727-0-01		A - 73	Nut for A - 70	"	106129-0-01	
A - 29	Upper Tension Bracket	"	115869-0-01		A - 74	Under Thread Guide	"	113751-0-01	
A - 30	Upper Thread Guide	2 pcs.	105221-0-01		A - 75	Set Screw for A - 74	"	100032-0-01	
A - 31	Upper Thread Guide Retainer	1 pcc.	105220-0-01		A - 76	Arm-bed	"	115907-0-01	
A - 32	Set Screw for A - 30	4 pcs.	100393-0-05		A - 77	Bed Leg Small	"	113591-0-01	
A - 34	Thread Hanger for A - 31	1 pcc.	105222-0-01	113724-0-01	A - 78	Bed Leg Large	"	113590-0-01	
A - 35	Set Screw for A - 31	"	101531-0-01		A - 79	Slide Plate	"	113619-0-01	
A - 33	Set Screw for A - 31	"	105223-0-01		A - 80	Slide Plate Spring	"	114561-0-01	
A - 36	Oil Stopper for Thread Take-up Crank	"	113787-0-01		A - 81	Set Screw for A - 80	2 pcs.	100035-0-01	
A - 37	Set Screw for A - 36	2 pcs.	100257-0-09		A - 82	Set Screw for A - 83	"	100032-0-01	
A - 38	Set Screw for A - 39	3 pcs.	100086-0-01		A - 83	Needle Plate 1/4"	11 pcc.	115966-0-01	
A - 39	Face Plate	1 pcc.	113792-0-01			Needle Plate 3/8"	"	115967-0-01	
A - 40	Set Screw for A - 39	"	100541-0-01			Needle Plate 1/2"	"	115967-0-01	
A - 41	Packing for Face Plate	"	113763-0-01			Needle Plate 1/2"	"	116224-0-01	*
A - 42	Arm Top Cover Cap	"	112782-0-01						
					No.	Name of Parts	Q'ty	Parts No.	Assembly No.
					- 83	Needle plate with two needles located one behind the other	1 pcc.	115968-0-01	
					- 84	Lapper Guide Plate	"	113761-0-01	
					- 85	Set Screw for A - 84	"	102716-0-03	
					- 86	Bed Window Plate	"	115865-0-01	
					- 87	Knood for A - 86	"	113595-0-01	
					- 88	Spring for A - 88	"	113596-0-01	113593-0-01
					- 89	Set Screw for A - 88	"	105130-0-01	
					- 90	Cump Cover	"	113592-0-01	
					- 91	Nut for A - 90	"	105786-0-01	

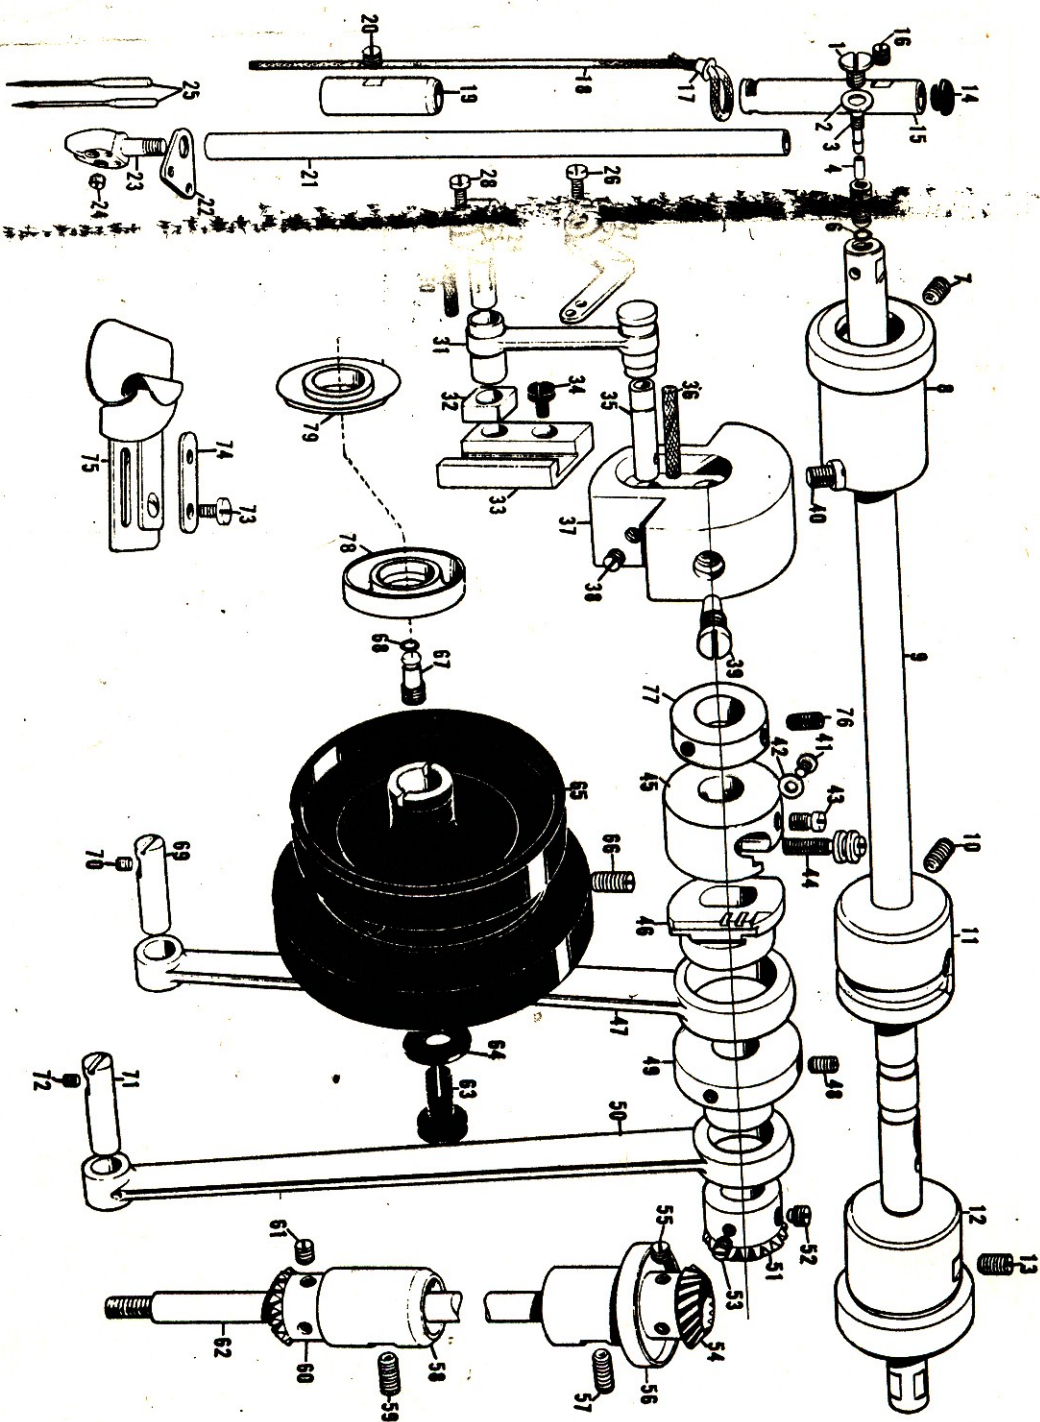


Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
B-1	Oil Cap Screw for Upper Shaft	1 pce.	104557-0-01		B-38	Set Screw for B-35	2 pcs.	107306-0-01	
B-2	Packing for B-1	"	104558-0-01		B-39	Set Screw (A) for B-37	1 pce.	104464-0-01	
B-3	Oil Adjusting Screw for B-5	"	115746-0-01		B-40	Set Screw (B) for B-37	"	113603-0-01	
B-4	Vinyl Friction tube for B-3	"	104571-0-01	181972-0-01	B-41	Set Screw for B-46	2 pcs.	105127-0-01	
B-5	Oil Screw Left for Upper Shaft	"	104554-0-01		B-42	Washer for B-41	"	105161-0-02	
B-6	Packing for B-5	"	104556-0-01		B-43	Set Screw for B-45	3 pcs.	105163-0-01	
B-7	Set Screw for B-8	"	105279-0-01		B-44	Adjusting Screw for B-46	1 pce.	113644-0-01	113641-0-01
B-8	Upper Shaft Bushing Left	"	1113598-0-01		B-45	Feed Eccentric Bracket	"	113643-0-01	
B-9	Upper Shaft	"	113597-0-01		B-46	Feed Eccentric	"	113642-0-01	
B-10	Set Screw for B-11	"	105279-0-01		B-47	Vertical Feed Connecting Rod	"	115860-0-01	
B-11	Upper Shaft Bushing Intermediate	"	113599-0-01		B-48	Set Screw for B-49	2 pcs.	10062-0-04	
B-12	Upper Shaft Bushing right	"	113600-0-01		B-49	Eccentric Wheel	1 pce.	113645-0-01	
B-13	Set Screw for B-12	"	100016-0-01		B-50	Horizontal Feed Crank	1 pce.	115859-0-01	
B-14	Cap for B-15	"	104450-0-01		B-51	Upper Shaft Gear	"	113672-0-01	
B-15	Needle Bar Bushing Upper	"	113606-0-01		B-52	Set Screw (B) for B-51	"	113673-0-01	
B-16	Set Screw for B-15	"	102716-0-03		B-53	Set Screw (A) for B-51	"	100251-0-01	
B-17	Wick Supporter for B-15	"	109993-0-01		B-54	Vertical Shaft Gear	"	104511-0-01	
B-18	Wick 6x6 for B-15, B-19	"	113608-0-00		B-55	Set Screw for B-54	2 pcs.	101706-0-01	
B-19	Needle Bar Bushing Lower	"	113607-0-01		B-56	Vertical Shaft Upper Bushing	1 pce.	113679-0-01	
B-20	Set Screw for B-19	"	102716-0-03		B-57	Set Screw for B-56	"	105279-0-01	
B-21	Needle Bar	"	113605-0-01		B-58	Vertical Shaft Lower Bushing	"	113680-0-00	
B-22	Needle Bar Thread Guide	"	115904-0-01		B-59	Set Screw for B-58	"	105279-0-01	
B-23	Needle Holder $\frac{3}{8}$	"	105085-0-01		B-60	Vertical Shaft Lower Gear	"	104511-0-01	
	Needle Holder $\frac{3}{8}$	1	105085-0-01	113604-0-01	B-61	Set Screw for B-60	2 pcs.	101706-0-01	
	Needle Holder $\frac{3}{8}$	1	105085-0-01	113604-0-01	B-62	Vertical Shaft	1 pce.	115863-0-01	
	Needle Holder With Tool Located One Behind The Other	"	115965-0-01		B-63	Set Screw for Arm Pulley	"	104478-0-01	
B-24	Set Screw for B-25	2 pcs.	103408-0-01		B-64	Packing for B-63	"	113621-0-01	
B-25	Needle TVX1	"	105087-0-16		B-65	Arm Pulley	"	113620-0-01	
B-26	Set Screw for B-27	1 pce.	100064-0-02		B-66	Set Screw for B-65	2 pcs.	100016-0-03	
B-27	Thread Take-up Lever	"	115866-0-01		B-67	Oil Screw right for Upper Shaft	1 pce.	104555-0-00	
B-28	Set Screw for B-29	"	100064-0-02		B-68	Packing for B-67	"	104556-0-01	
B-29	Needle Bar Connecting Stud	"	105076-0-01		B-69	Shaft for B-47	"	109153-0-01	
B-30	Wick 12x12 for B-29	"	105363-0-01		B-70	Set Screw for B-69	"	100218-0-02	
B-31	Needle Bar Crank Rod	"	113881-0-01	113604-0-01	B-71	Shaft for B-50	"	109153-0-01	
B-32	Needle Bar Guide Slide Block	"	105078-0-01		B-72	Set Screw for B-71	"	100218-0-01	
B-33	Needle Bar Crank	"	114723-0-01		B-73	Set Screw for B-71	"	113760-0-01	
B-34	Wick 12x12 for B-35	"	108896-0-01		B-74	Washer for B-75	"	113762-0-01	
B-35	Needle Bar Guide	"	105079-0-01		B-75	Lapper Assembly $\frac{1}{8}$	"	114873-0-01	
B-36	Set Screw for B-33	2 pcs.	100644-0-03			Lapper Assembly $\frac{3}{16}$	"	115834-0-01	
B-37	Thread Take-up Crank for Medium Materials	1 pce.	113602-0-01			Lapper Assembly $\frac{1}{4}$	"	113880-0-01	
	Thread Take-up Crank for Light Materials	"	113809-0-01		B-76	Set Screw for B-77	"	100251-0-01	
		"			B-77	Collar for B-45	"	119037-0-01	

C

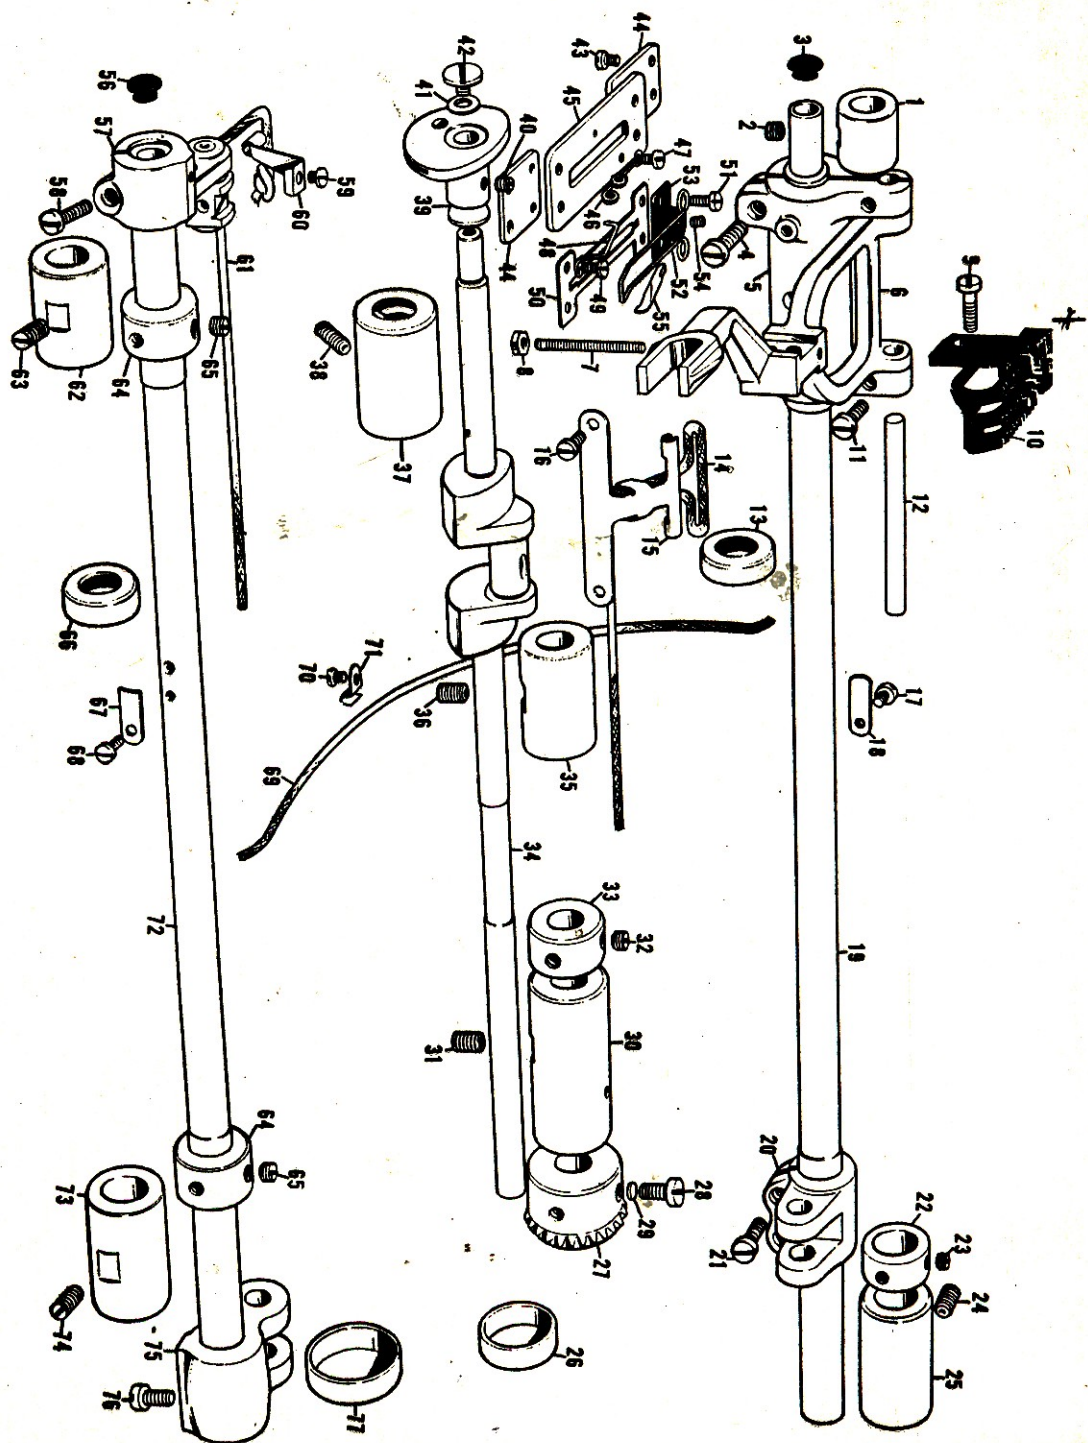


Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
C-1	Feed Rock Shaft Bushing Left	1 pce.	113649-0-01		C-39	Lower Thread Takd-up			
C-2	Set Screw for C-1	"	100013-0-03		C-40	Set Screw for C-39	1 pce.	113690-0-01	
C-3	Cap for C-19	"	104450-0-01		C-41	Packing for C-42	"	102716-0-03	
C-4	Set Screw for C-5	2 pcs.	100320-0-02		C-42	Set Screw for C-39	"	113691-0-01	
C-5	Feed Bar Rock Shaft Arm	1 pce.	113652-0-01		C-43	Set Screw for C-45	4 pcs.	105219-0-04	
C-6	Feed Bar	"	115861-0-01		C-44	Lower Chread Take-up Guide Plate	2 pcs.	113753-0-01	
C-7	Adjusting Screw for Feed Dog	"	113658-0-01		C-45	Lower Thread Presser Plate	1 pce.	113754-0-01	
C-8	Nut for C-7	"	021660-1-03		C-46	Lower Thread Guide	"	115870-0-01	
C-9	Set Screw for C-10	"	106127-0-02		C-47	Set Screw for C-46	"	105219-0-04	
C-10	Feed Dog %	"	115982-0-01		C-48	Lower Thread Take-up Guide (A)	"	113758-0-01	
	Feed Dog %	"	115984-0-01		C-49	Set Screw for C-44	2 pcs.	105219-0-04	115909-0-01
	Feed Dog %	"	116229-0-01		C-50	Lower Thread Take-up Thread Guard	1 pce.	113759-0-01	
	Feed dog with two Needles Located One Behind The Other.	"	115983-0-01		C-51	Set Screw for C-53	2 pcs.	100137-0-04	
C-11	Set Screw for C-12	2 pcs.	100054-0-04		C-52	Lower Thread Take-up Guide	1 pce.	105291-0-01	
C-12	Feed Bar Shaft	1 pce.	113655-0-01		C-53	Lower Thread Holder	"	113755-0-01	
C-13	Oil Stop Link for C-19	"	113659-0-01		C-54	Set Screw for C-55	"	107055-0-01	
C-14	Wick 6x6 for C-16	"	113660-0-01		C-55	Lower Thread Stopper	"	113756-0-01	
C-15	Wick Supprter for Feed Bar	"	113654-0-01		C-56	Cap for C-72	"	104450-0-01	
C-16	Set Screw for C-15	"	105219-0-04		C-57	Feed Bar Lifting Arm	1 pce.	113669-0-01	
C-17	Set Screw for C-18	"	105219-0-04		C-58	Set Screw for C-57	"	106585-0-01	
C-18	Wick Stopper for C-19	"	113651-0-01		C-59	Set Screw for C-60	"	101531-0-02	
C-19	Feed Rock Shaft	"	113647-0-01		C-60	Wick Guide for C-57	"	113671-0-01	
C-20	Feed Rock Shaft Arm	"	109152-0-01		C-61	Wick 6x6 for C-57, C-60	"	113666-0-00	
C-21	Set Screw for C-20	2 pcs.	106585-0-01		C-62	Feed Lifting Shaft Bushing Left	"	113663-0-01	
C-22	Feed Rock Shaft Coller	1 pce.	113650-0-01		C-63	Set Screw for C-62	"	100062-0-04	
C-23	Set Screw for C-22	2 pcs.	102716-0-03		C-64	Coller for Feed Lifting Shaft	2 pcs.	113650-0-01	
C-24	Set Screw for C-25	1 pce.	100062-0-04		C-65	Set Screw for C-64	4 pcs.	102716-0-03	
C-25	Feed Rock Shaft Bushing Right	"	113648-0-01		C-66	Oil Stopper Eng for C-72	1 pce.	113659-0-01	
C-26	Lower Shaft Cap	"	113689-0-01		C-67	Wick Stopper	"	113651-0-01	
C-27	Lower Shaft Gear	"	113676-0-01		C-68	Set Screw for C-67	"	105219-0-04	
C-28	Set Screw for G-27	2 pcs.	113677-0-01		C-69	Wick 6x6 for C-19, C-72	"	113784-0-00	
C-29	Washer for C-28	2 pcs.	101028-0-00		C-70	Set Screw for C-71	"	101531-0-03	
C-30	Lower Shaft Bushing Right	1 pce.	113685-0-01		C-71	Wick Supporter under Bed for C-69	"	113795-0-01	
C-31	Set Screw for C-30	"	100062-0-04		C-72	Feed Lifting Shaft	"	113662-0-01	
C-32	Set Screw for C-33	2 pcs.	101706-0-01		C-73	Feed Lifting Shaft Bushing Right	"	113648-0-01	
C-33	Lower Shaft Coller	1 pce.	113688-0-01		C-74	Set Screw for C-73	"	100062-0-04	
C-34	Lower Shaft	"	113681-0-01		C-75	Feed Lifting Arm	"	113664-0-01	
C-35	Lower Shaft Bushing Intermediate	"	113686-0-01		C-75	Set Screw for C-75	2 pcs.	107362-0-01	
C-36	Set Screw for C-35	"	100062-0-04		C-77	Feed Lifting Arm Cap	1 pce.	113665-0-01	
C-37	Lower Shaft Bushing Left	"	113687-0-01						
C-38	Set Screw for C-37	"	105279-0-01						

D

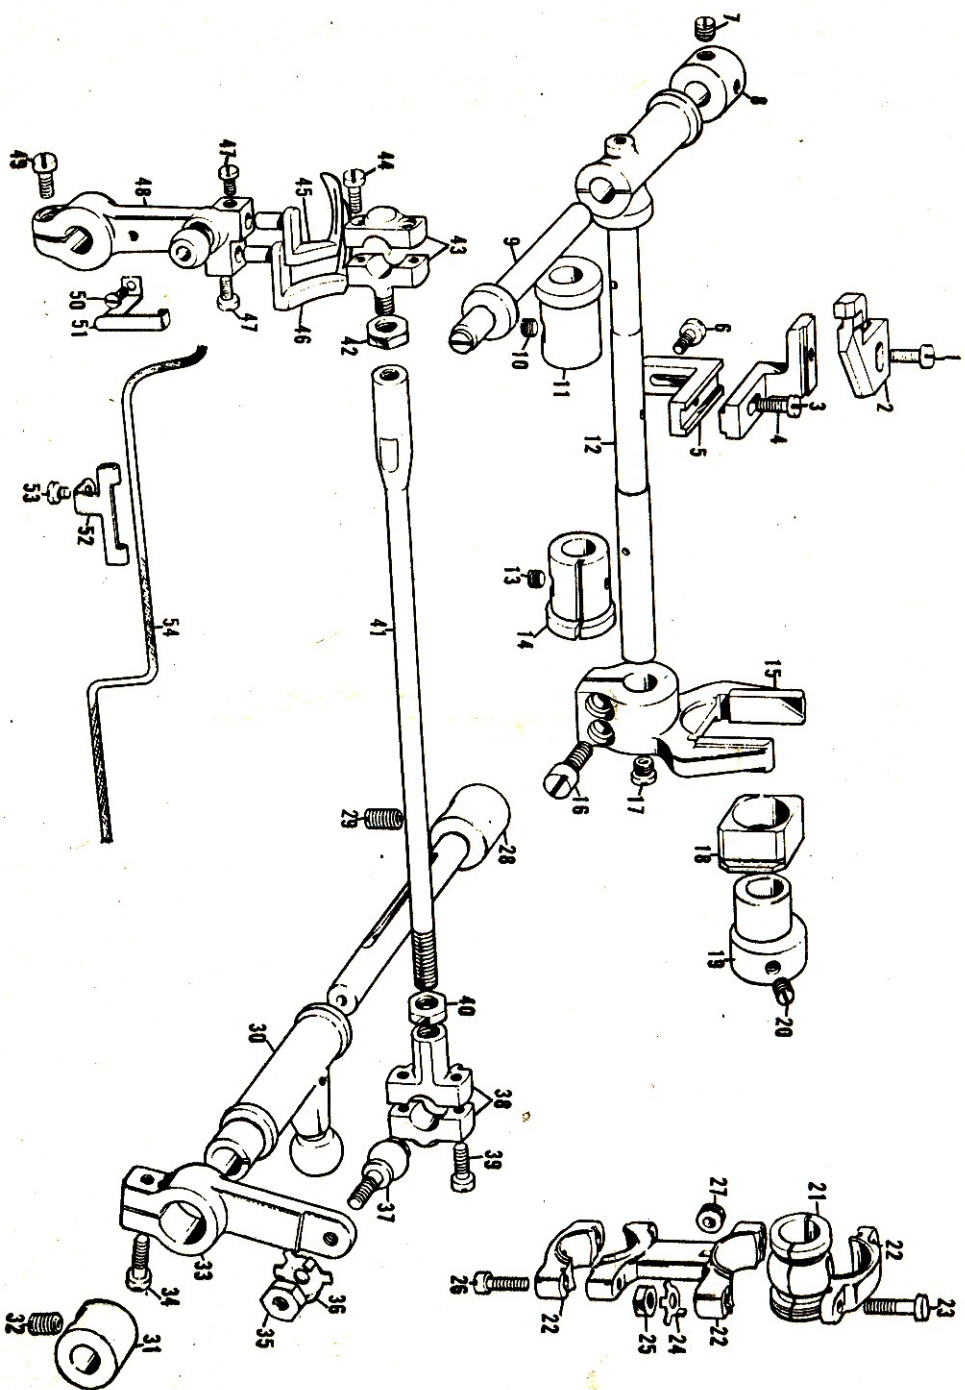

Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
D-1	Set Screw for D-2	1 pce.	106510-0-01		D-40	Nut for Looper Drive Connecting Rod	1 pce.	113706-0-01	
D-2	Needle Guide $\frac{1}{8}$	"	115992-0-01		D-41	Looper Drive Shaft	"	113707-0-01	
	Needle Guide $\frac{3}{16}$ $\frac{1}{4}$	"	115993-0-01		D-42	Nut for D-43	"	107114-0-01	113701-0-01
	Needle guide with two Needles Located One Behind The Other				D-43	Looper Holder Clamp Assembly	"	113714-0-01	
D-3	Needle Guide Bracket Upper	"	115994-0-01		D-44	Set Screw for D-43	2 pcs.	100064-0-02	
D-4	Set Screw for D-3, D-5	"	113611-0-01		D-45	Looper (Short) $\frac{1}{8}$	1 pce.	115986-0-01	
D-5	Needle Guide Bracket Under	"	106510-0-01			Looper (Short), $\frac{3}{16}$	"	115988-0-01	
D-6	Set Screw for D-5	"	113612-0-01			Looper (Short) $\frac{1}{4}$	2	116230-0-01	
D-7	Set Screw for D-8	2 pcs.	101706-0-01			Looper (Short) with Two Needles Located One Behind The Other	"	115991-0-01	
D-8	Set Collar for D-9	1 pce.	104521-0-01		D-46	Looper (Long) $\frac{1}{8}$	"	115985-0-01	
D-9	Looper Holder Shaft	"	115862-0-01			Looper (Long) $\frac{3}{16}$	"	115987-0-01	
D-10	Set Screw for D-11	"	100058-0-03			Looper (Long) $\frac{1}{4}$	2	115989-0-01	
D-11	Bushing Left for D-12	"	113715-0-00			Looper (Long) With Two Needles Located One Behind The Other	"	115990-0-01	
D-12	Looper Feeding Shaft	"	113717-0-01		D-47	Set Screw for D-45, D-46	2 pcs.	106527-0-01	
D-13	Set Screw for D-14	"	100058-0-03		D-48	Looper Holder	1 pce.	115911-0-01	
D-14	Bushing Right for D-12	"	113718-0-00		D-49	Set Screw for D-48	"	100086-0-03	
D-15	Looper Feeding Fork	"	113716-0-01		D-50	Set Screw for D-51	"	106566-0-01	
D-16	Set Screw for D-15	2 pcs.	107362-0-01		D-51	Looper Holder Oil Wick Guide	"	113723-0-01	
D-17	Oil Cap for D-12	"	113722-0-01		D-52	Oil Wick Holder for Looper	"	113783-0-01	
D-18	Looper Feeding Slide Block	1 pce.	113684-0-00		D-53	Set Screw for D-52	"	105219-0-01	
D-19	Looper Feeding Eccentric Shaft	"	113683-0-01		D-54	Wick 6x6	"	113782-0-01	
D-20	Set Screw for D-19	2 pcs.	107306-0-01						
D-21	Lifting Crank	1 pce.	113682-0-01						
D-22	Looper Connecting Rod	"	113693-0-01						
D-23	Set Screw for D-22	2 pcs.	113694-0-01	113692-0-01					
D-24	Washer for D-24	"	113695-0-01						
D-25	"Nut for D-23	"	105234-0-01						
D-26	Set Screw for D-22	"	106585-0-01						
D-27	Stopper for Connecting Rod	1 pce.	113696-0-01						
D-28	Looper Drive Round Joint Arm Shaft	"	113698-0-01						
D-29	Set Screw for D-28	"	100062-0-04						
D-30	Looper Drive Arm	"	113697-0-01						
D-31	Bushing for D-28	"	113699-0-01						
D-32	Set Screw for D-31	"	100062-0-04						
D-33	Looper Drive Shaft Arm	"	113700-0-01						
D-34	Set Screw for D-33	"	106127-0-02						
D-35	Nut for D-37	"	105875-0-02						
D-36	Looper Drive Shaft Washer	"	113703-0-01						
D-37	Looper Drive Round Joint Shaft	"	113702-0-01	113701-0-01					
D-38	Looper Drive Connecting Rod Assembly	"	113704-0-01						
D-39	Set Screw for D-38	2 pcs.	100064-0-02						

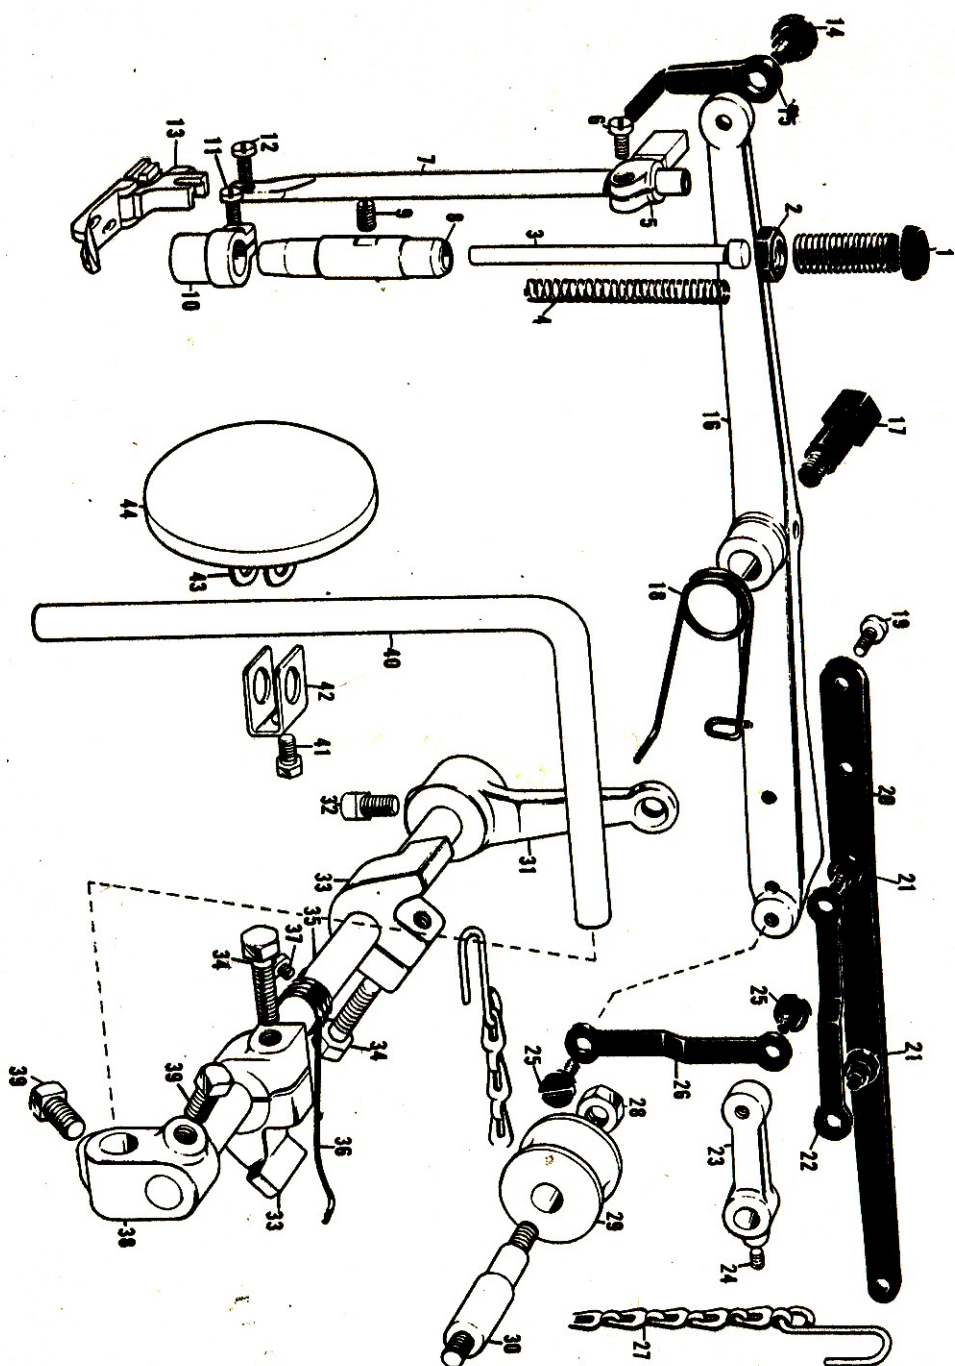

Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
E-1	Presser Adjusting Screw	1 pce.	113625-0-01		E-39	Set Bolt for E-38	2 pcs.	100463-0-01	
E-2	Nut for E-1	"	113626-0-01		E-40	Knee Lifter Bar	1 pce.	104619-0-01	
E-3	Presser Bar (B)	"	113623-0-01		E-41	Set Screw for E-42	"	110087-0-01	
E-4	Presser Spring	"	113627-0-01		E-42	Knee Lifter Stopper	"	114967-0-01	
E-5	Presser Bar Bracket	"	105093-0-01		E-43	Knee Lifter Plate	"	114966-0-01	
E-6	Set Screw for E-5	"	100522-0-03		E-44	Knee Lifter Plate Cover	"	114968-0-01	
E-7	Presser Bar (A)	"	113622-0-01						
E-8	Presser Bar Bushing	"	113624-0-01						
E-9	Set Screw for E-8	"	102716-0-03						
E-10	Presser Bar Stopper	"	113628-0-01						
E-11	Set Screw for E-10	"	100137-0-02						
E-12	Set Screw for E-13	"	100137-0-02						
E-13	Presser Foot Assembly $\frac{3}{8}$	"	115969-0-01						
	Presser Foot Assembly $\frac{3}{4}$	"	115974-0-01						
	Presser Foot Assembly With Two Needles Located One Behind The Other	"	116225-0-01						
E-14	Stud Screw for E-15	"	115978-0-01						
E-15	Presser Bar Lifter	"	105104-0-01						
E-16	Knee Lifter (A)	"	113639-0-01						
E-17	Stud Screw for E-16	"	113638-0-01						
E-18	Knee Lifter Spring	"	102921-0-02						
E-19	Set Screw for E-20	"	105106-0-01						
E-20	Knee Lifter (B)	2 pcs.	105173-0-02						
E-21	Stud Screw for E-22	1 pce.	115864-0-01						
E-22	Thread Release Connecting Bar	2 pcs.	113730-0-02						
E-23	Thread Release Crank	1 pce.	113729-0-01						
E-24	Set Screw for E-23	"	113728-0-01						
E-25	Stud Screw for E-26	"	100388-0-03						
E-26	Thread Release Connecting Bar	2 pcs.	113730-0-01						
E-27	Presser Foot Lifter Chain Assembly	1 pce.	113729-0-01						
E-28	Nut for E-30	"	115910-0-01						
E-29	Knee Lifter Roller	"	101268-0-03						
E-30	Knee Lifter Roller Shaft	1 pce.	115872-0-01						
E-31	Knee Lifter Connecting Lever	"	115873-0-01						
E-32	Set Bolt for E-31	"	115905-0-01						
E-33	Stopper Collar for E-35	2 pcs.	100463-0-01						
E-34	Set Bolt for E-33	"	104890-0-02						
E-35	Knee Lifter Shaft	"	104884-0-01						
E-36	Knee Lifter Spring	1 pce.	115874-0-01						
E-37	Set Screw for E-36	"	115875-0-01						
E-38	Knee Lifter Bracket	"	100185-0-03						
		"	118658-0-01						

