


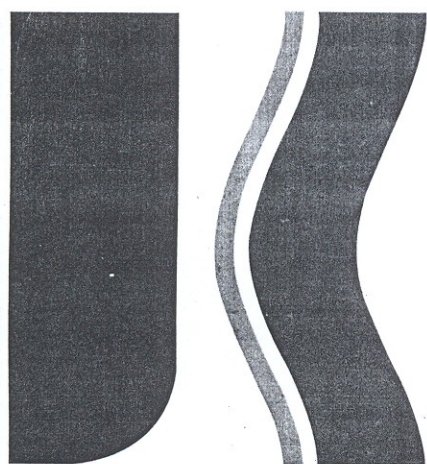


JK-T388 系列
Series


珠边平缝机

Hand-stitch Machine

零件样本 · 使用说明书

Operation Manual & Parts Book

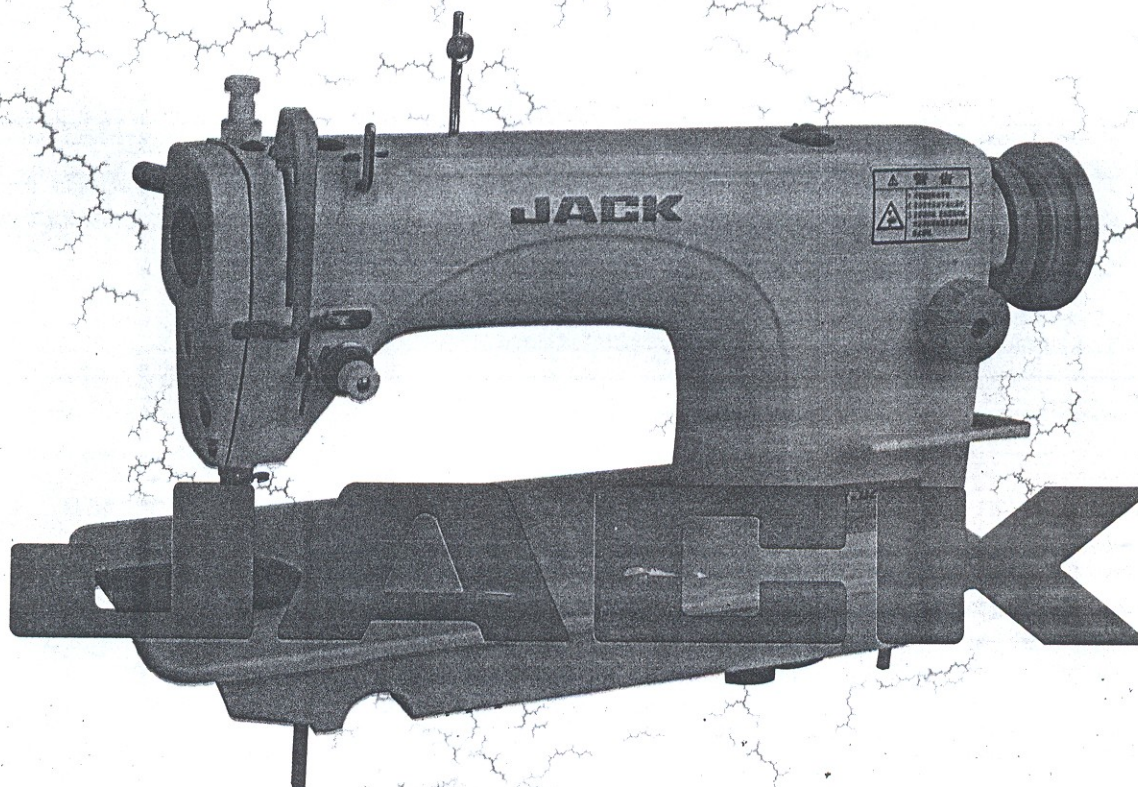

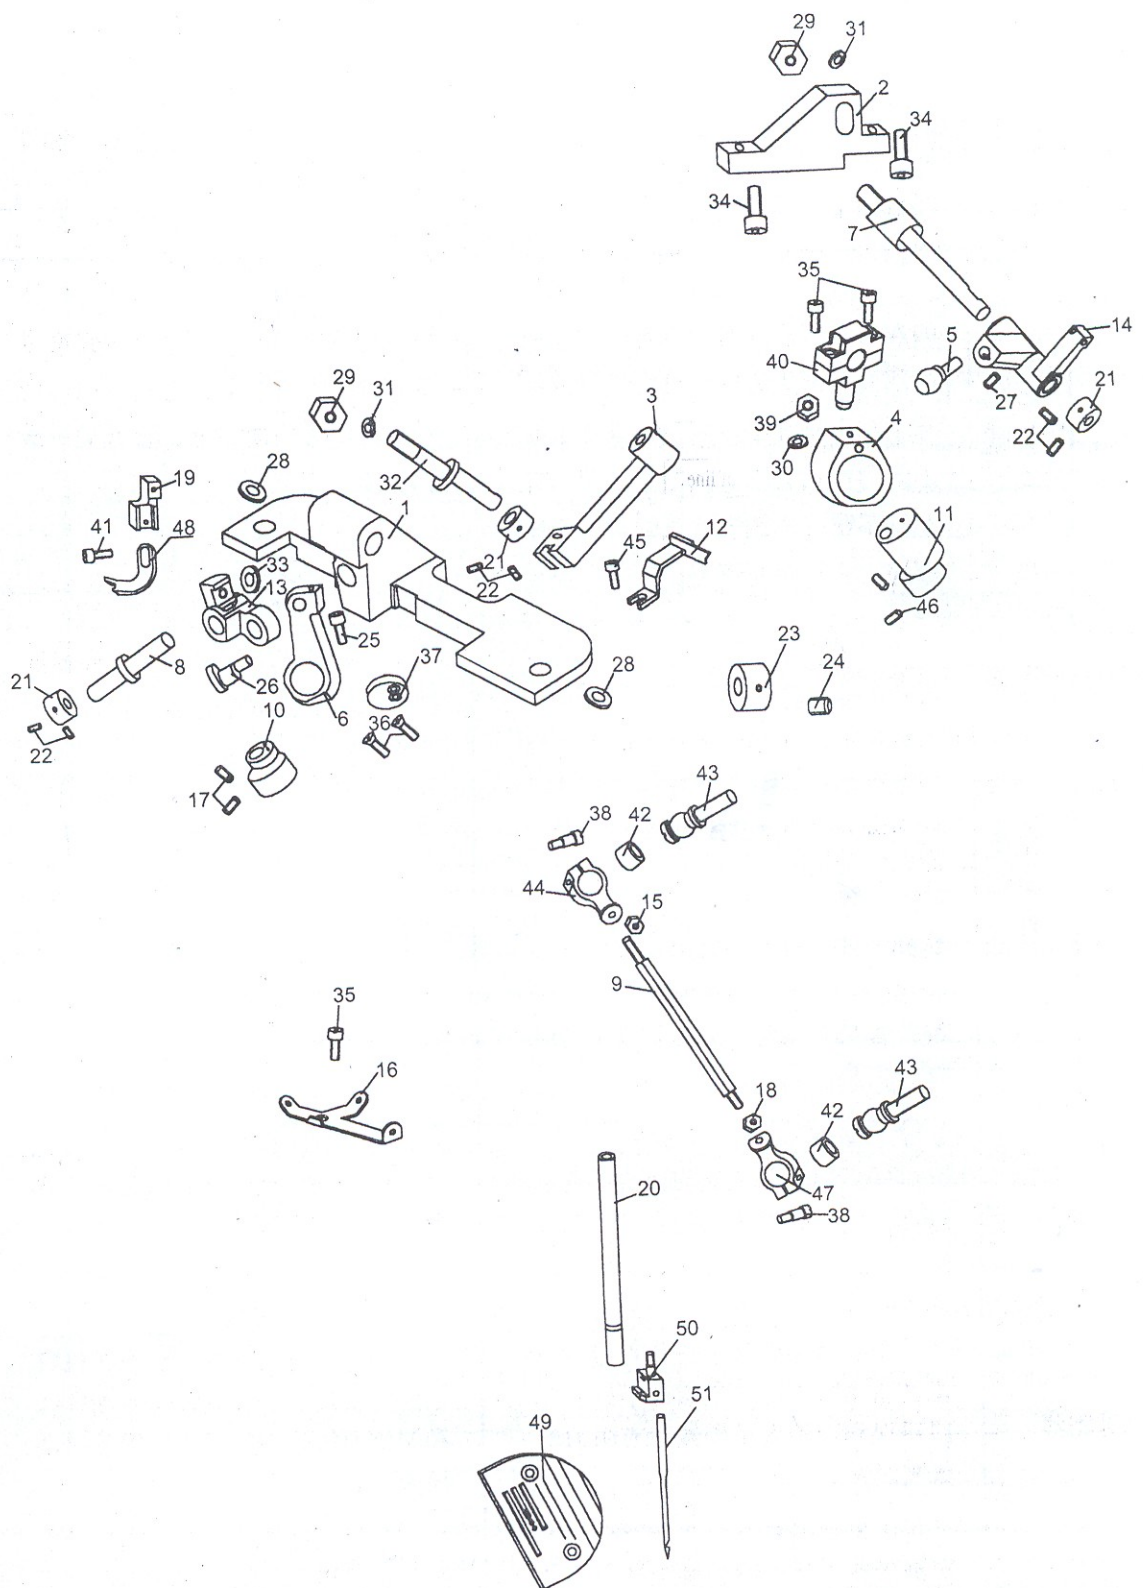

四、零件样本及图号

序号	件 号	名 称	数 量	序号	件 号	名 称	数量
1	JK388-01	机壳固定板	1	43	JK388-43	长球连杆	2
2	JK388-02	支撑板	1	44	JK388-44	左旋曲柄	1
3	JK388-03	送料刀曲柄	1	45	JK388-45	送线刀螺钉	1
4	JK388-04	偏心衬套	1	46	JK388-46	大偏心轮螺钉	2
5	JK388-05	短球连杆	1	47	JK388-47	右旋曲柄	1
6	JK388-06	勾针连杆	1	48	JK388-48	护针	1
7	JK388-07	支撑板轴	1	49	JK388-49	针板	1
8	JK388-08	连杆轴	1	50	JK388-50	针夹头	1
9	JK388-09	连接柱	1	51	JK388-51	勾针	1
10	JK388-10	小偏心轮	1	需取消的零件如下			
11	JK388-11	大偏心轮	1	序号	件 号	名 称	数量
12	JK388-12	送线弯针	1	1	5-1	旋梭	1
13	JK388-13	护针架曲柄	1	2	5-2	梭子	1
14	JK388-14	连接柱曲柄	1	3	5-3	梭心	1
15	JK388-15	左旋螺母	1	4	5-4	旋梭紧固螺钉	2
16	JK388-16	上过线	1	5	5-5	旋梭定位购	1
17	JK388-17	小偏轮螺钉	2	6	7-17	倒送料扳手	1
18	JK388-18	右旋螺母	1				
19	JK388-19	护针架	1				
20	JK388-20	针杆	1				
21	JK388-21	紧圈	3				
22	JK388-22	紧圈螺钉	6				
23	JK388-23	倒送料轴紧圈	1				
24	JK388-24	螺钉	1				
25	JK388-25	偏心销螺钉	1				
26	JK388-26	偏心销	1				
27	JK388-27	连接柱曲柄紧定螺钉	1				
28	JK388-28	机壳固定板垫圈	1				
29	JK388-29	紧固螺母	2				
30	JK388-30	球连杆弹簧垫圈	1				
31	JK388-31	偏心轴弹簧垫圈	1				
32	JK388-32	偏心轴	1				
33	JK388-33	聚胺脂垫片	1				
34	JK388-34	支撑板螺钉	2				
35	JK388-35	连杆螺钉	3				
36	JK388-36	小偏心轮盖板螺钉	2				
37	JK388-37	小偏心轮盖板	1				
38	JK388-38	左、右旋曲柄螺钉	2				
39	JK388-39	球连杆紧固螺母	1				
40	JK388-40	球连杆	1				
41	JK388-41	护针螺钉	1				
42	JK388-42	球连杆衬套	2				

IV. Parts sample and fig.No.

Ref.NO.	Part NO.	Description	Amt.	Ref.NO.	Part NO.	Description	Amt.
1	JK388-01	Machine retainer Plate	1	43	JK388-43	Connecting rod of the long ball	2
2	JK388-02	Support the board	1	44	JK388-44	Fasten the crank on the left	1
3	JK388-03	Give the material knife crank	1	45	JK388-45	Give the line knife screw	1
4	JK388-04	Partial bush	1	46	JK388-46	Big partial screws	2
5	JK388-05	Connecting rod of the short ball	1	47	JK388-47	Dextrorotation crank	1
6	JK388-06	Cancel the needle connecting rod	1	48	JK388-48	Protect the needle	1
7	JK388-07	Support the arle of the board	1	49	JK388-49	Needle plate	1
8	JK388-08	Axle of the connecting rod	1	50	JK388-50	Needle clamp Assembly	1
9	JK388-09	Join the post	1	51	JK388-51	Looper	1
10	JK388-10	Small partial wheel	1	Delete for Parts:			
11	JK388-11	Big partial wheel	1	Ref.NO.	Part NO.	Description	Amt.
12	JK388-12	Give the curved needle of line	1	1	5-1	Hook asm	1
13	JK388-13	Partial to the shelf crank of stitch	1	2	5-2	Bobbin case asm	1
14	JK388-14	Join the post carnk	1	3	5-3	Bobbin	1
15	JK388-15	Fasten the nut on the left	1	4	5-4	Hook asm and fasten the screw	2
16	JK388-16	Have reached the stardard grade	1	5	5-5	Positioning finger	1
17	JK388-17	lean towards ascrow small	2	6	7-17	Reverse feed control lever	1
18	JK388-18	Dextrorotation nut	1				
19	JK388-19	Protect the needle shelf	1				
20	JK388-20	Needle rod	1				
21	JK388-21	Enclose closely	3				
22	JK388-22	Enclose the screw closely	6				
23	JK388-23	Send the material axle to enclose closely	1				
24	JK388-24	Screw	1				
25	JK388-25	Partial to sell the screw	1				
26	JK388-26	It is sold that partial	1				
27	JK388-27	Join the post crank and book the screw closely	1				
28	JK388-28	Chassis retainer plate washer	1				
29	JK388-29	Fasten the nut	2				
30	JK388-30	Ball connecting rod spring washer	1				
31	JK388-31	Spring washer of eccentric shaft	1				
32	JK388-32	Eccentric shaft	1				
33	JK388-33	Gather the amine fat spacer	1				
34	JK388-34	Support the board screw	2				
35	JK388-35	Connecting rod scrwe	3				
36	JK388-36	Small partial aprons screw	2				
37	JK388-37	Small partial aprons	1				
38	JK388-38	Left and right sides fasten the crank screw	2				
39	JK388-39	The ball connecting rod fastens the nut	1				
40	JK388-40	Ball connecting rod	1				
41	JK388-41	Protect the needle screw	1				
42	JK388-42	Ball connecting rod bush	2				

产品标准代号: Q/JK2256-96

Standard code of the products: Q/JK2256-96

杰克缝纫机有限公司
JACK SEWING MACHINE CO., LTD.

R.C