


LZ1-B851-1
LZ1-B851-3
LZ1-B851-7

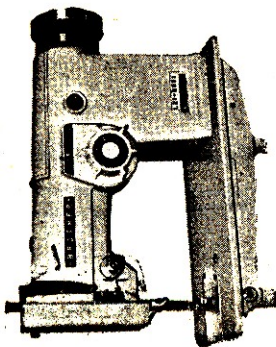

Cavemac

Controle do Acervo de Catálogos

Identificação

152


Edição

ÚNICA

Conteúdo BROTHER LZ1

00000152




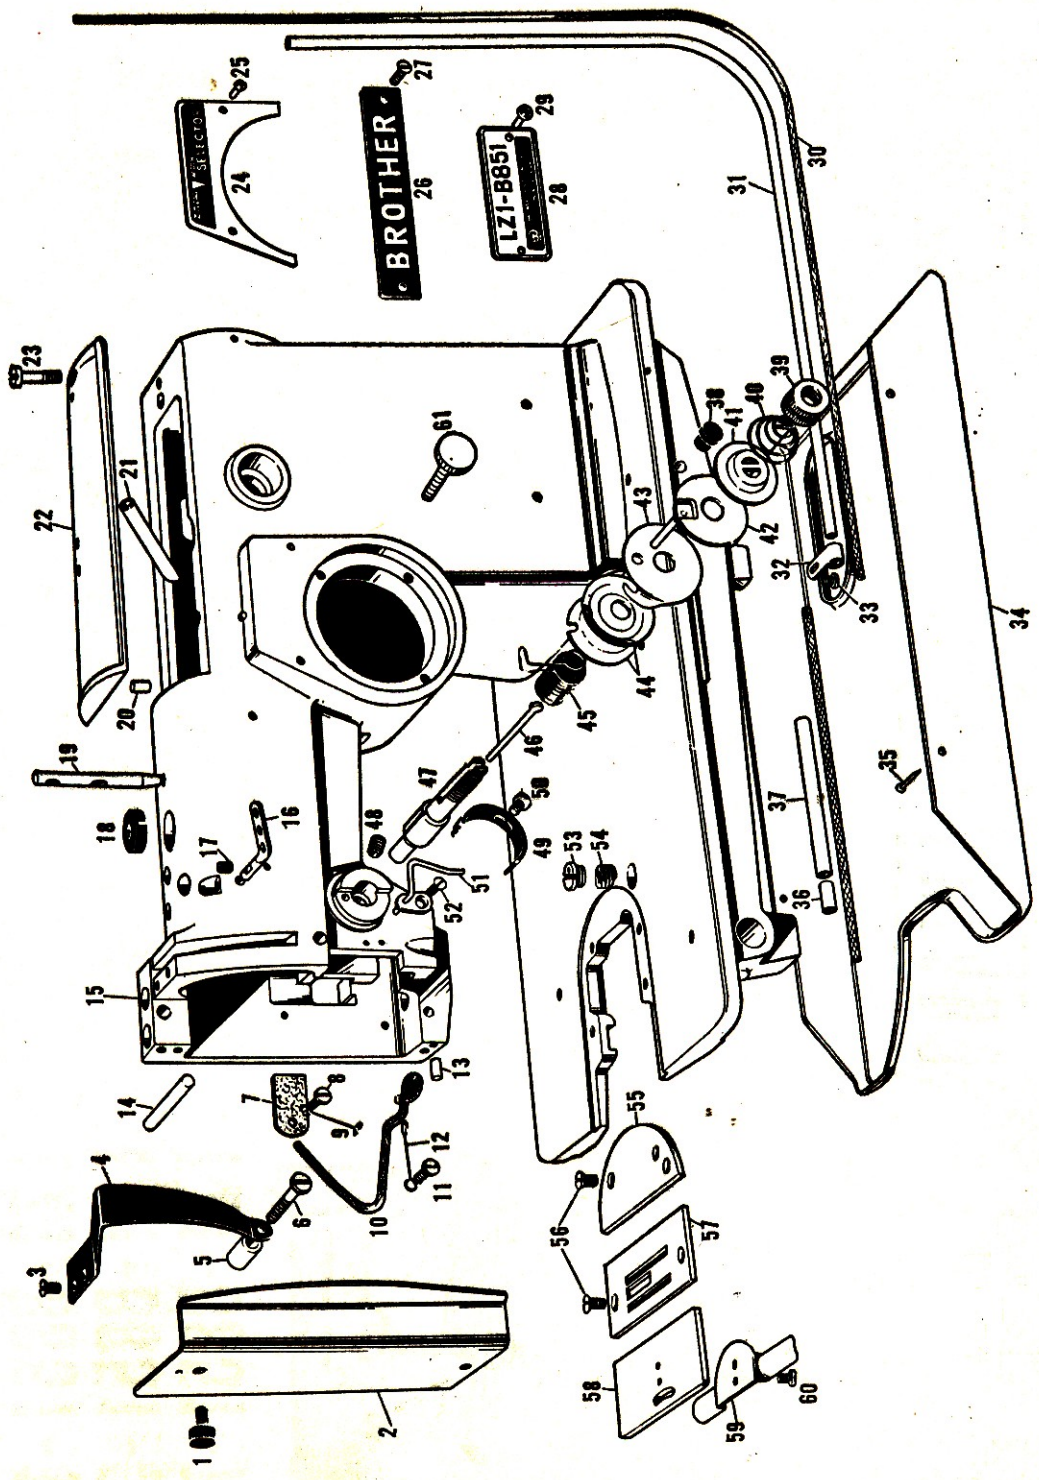

PARTS LIST FOR LZ1-B851

B851-A 3

Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
A-1	Set Screw for A-2	1 Pce.	112985-0-01		A-42	Tension Disc Washer Plate with Pin	1 Pce.	113148-0-01	
A-2	Face Plate	1 "	112984-0-01		A-43	Tension Disc Washer Plate	1 "	113150-0-01	
A-3	Set Screw for A-4	2 Pcs.	108960-0-03		A-44	Tension Disc	2 Pcs.	113152-0-01	113145-0-01
A-4	Thread Take-up Lever Cover	1 Pce.	112987-0-01		A-45	Thread Take-up Spring	1 Pce.	113151-0-01	
A-5	Washer for A-4	1 "	112988-0-01		A-46	Tension Release Pin	1 "	113154-0-01	
A-6	Set Screw for A-4	1 "	101552-0-02		A-47	Tension Stud	1 "	113153-0-01	
A-7	Felt	1 "	112990-0-01		A-48	Set Screw for A-47	1 "	100088-0-02	
A-8	Set Screw for A-9	1 "	100242-0-02		A-49	Thread Take-up Spring Receiver	1 "	113156-0-01	
A-9	Wick Supporter	1 "	112993-0-00		A-50	Set Screw for A-49	1 "	100242-0-01	
A-10	Wick 6x6 (110)	1 "	112991-0-00		A-51	Arm Thread Guide Lower	1 "	113142-0-01	
A-11	Set Screw for A-12	1 "	100242-0-02		A-52	Set Screw for A-51	1 "	108960-0-03	
A-12	Wick Supporter	1 "	112992-0-00		A-53	Cap Screw for A-54	1 "	112994-0-01	
A-13	Stop Pin for A-2	1 "	104539-0-00		A-54	Wick 4x4 (120)	1 "	112999-0-00	
A-14	Tension Release Shaft	1 "	113155-0-01		A-55	Sub Needle Plate	1 "	113035-0-01	
A-15	Armbud for B851-I & 3	1 "	112981-0-01		A-56	Set Screw for A-55, A-57	4 Pcs.	100032-0-04	
A-16	Armbud for B851-7	1 "	117296-0-01		A-57	Needle Plate for B851-I & 3	1 Pce.	113034-0-01	
A-17	Thread Retainer	1 "	114931-0-01		A-57	Needle Plate for B851-7	1 "	117304-0-01	
A-18	Set screw for A-16	1 "	100388-0-04		A-58	Slide Plate	1 "	113037-0-01	
A-19	Oil Cap for B-23	1 "	113007-0-01		A-59	Slide Plate Spring	1 "	113038-0-01	
A-20	Spool Pin	1 "	100386-0-01		A-60	Slide Plate Spring Screw	2 Pcs.	100035-0-01	
A-21	Stop Pin for A-22	1 "	104539-0-00		A-61	Stopper Screw for E-3	1 Pce.	117461-0-01	
A-22	Oil Pipe for Zigzag Connecting Link	1 "	112996-0-00						
A-23	Arm Top Cover	1 "	112986-0-00						
A-24	Set Screw for A-22	1 "	114215-0-01						
A-24	Zigzag Width Indicator for B851-I & 3	1 "	113141-0-01						
A-24	Zigzag Width Indicator for B851-7	1 "	117460-0-01						
A-25	Pin for A-24	2 Pcs.	11623-10-01						
A-26	Name Plate "BROTHER"	1 Pce.	112528-0-01						
A-27	Set Screw for A-26	2 Pcs.	102731-0-02						
A-28	Model Plate for B851-1	1 Pce.	117471-0-01						
A-28	Model Plate for B851-3	1 "	117472-0-01						
A-28	Model Plate for B851-7	1 "	117473-0-01						
A-29	Model Plate Pin	2 Pcs.	116231-0-01						
A-30	Wick 4x4 (520)	1 Pce.	113001-0-00						
A-31	Vinyl Tube 3x480	1 "	113000-0-01						
A-32	Tub e Holder	3 Pcs.	109193-0-01						
A-33	Set Screw for A-32	3 "	100242-0-02						
A-34	Oil Pan	1 Pce.	114488-0-01						
A-35	Nail for A-34	4 Pcs.	109714-0-00						
A-36	Oil Pipe for Hook Driving Shaft	2 "	112997-0-00						
A-37	Vinyl Tube 4x60	1 Pce.	112998-0-01						
A-38	Oil Cap on Bed for Oil Hole	1 "	104833-0-01						
A-39	Tension Control Nut	1 "	113146-0-01						
A-40	Tension Spring (Main)	1 "	107606-0-01						
A-41	Tension Disc Washer	1 "	113147-0-01						

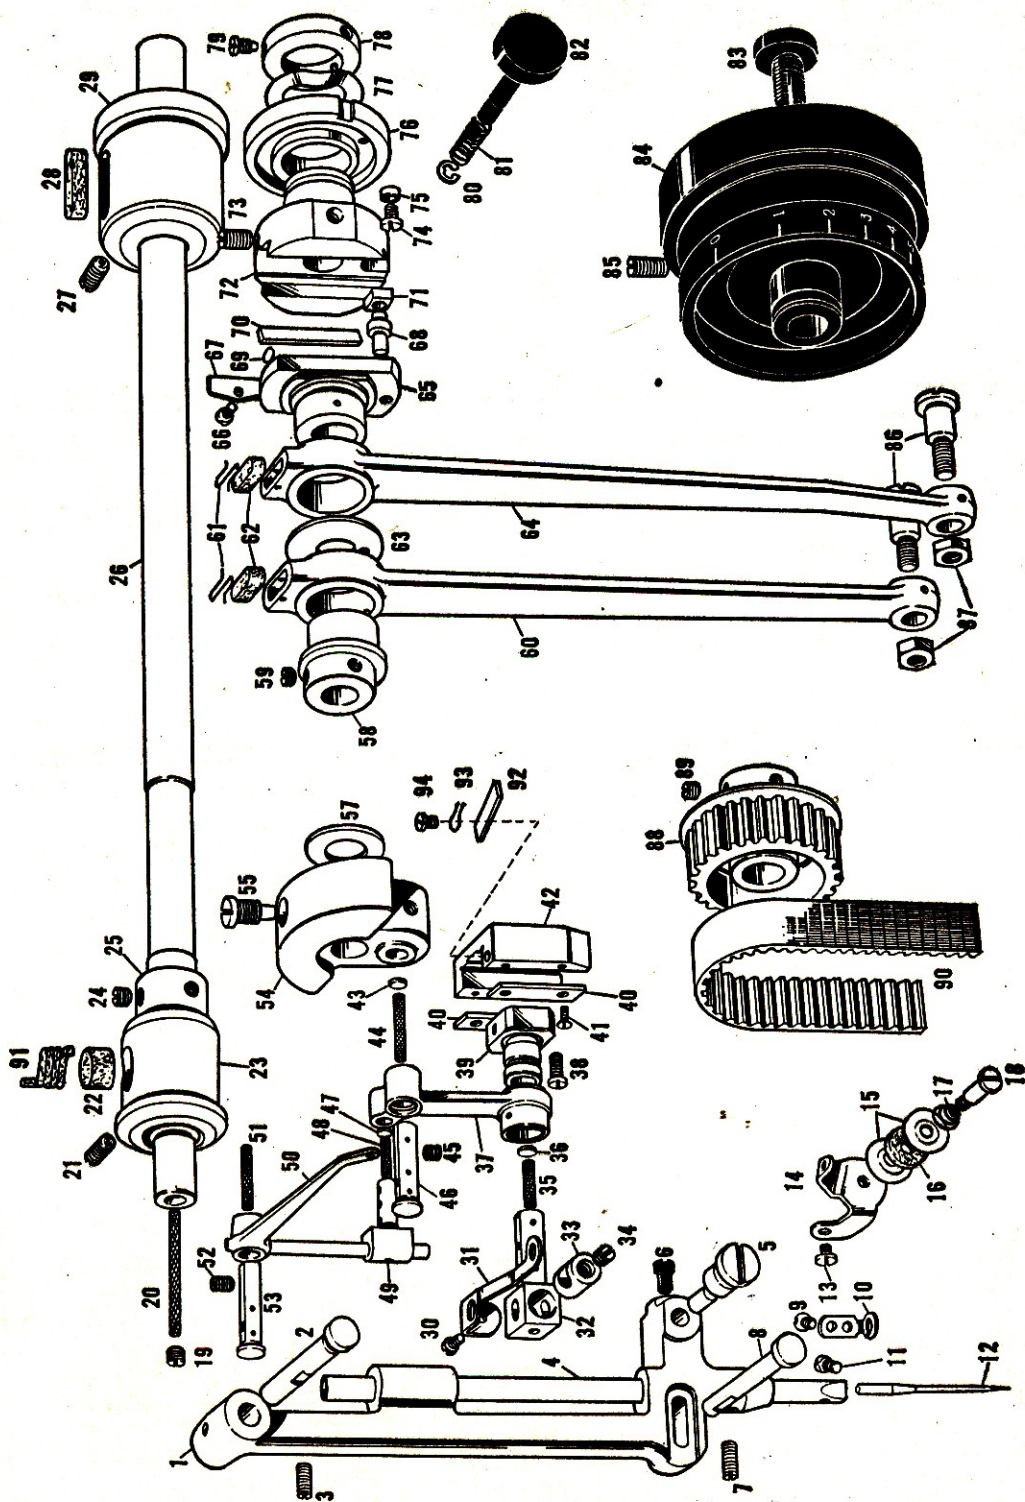


PARTS RIST

Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
B-1	Needle Bar Support	1 Pcs.	117478-0-00	117477-0-01	B-48	Wick for 6x6 (16)	1 Pcs.	108809-0-01	
B-4	Needle Bar	1 "	113033-0-01		B-49	Thread Take-up Lever	1 "	118171-0-01	
B-2	Stud for B-1 (Upper)	1 "	113030-0-01		B-50	Thread Take-up Lever	1 "	113021-0-01	
B-3	Set Screw for B-2	1 "	106069-0-00		B-51	Wick 6x6 (30)	1 "	108805-0-01	
B-5	Eccentric Stud for B-1	1 "	113032-0-01		B-53	Stud for Thread Take-up Lever	1 "	113022-0-01	
B-6	Set Screw for B-5	1 "	105163-0-01		B-32	Needle Bar Connecting Stud	1 "	117343-0-01	
B-7	Set Screw for B-8	1 "	106069-0-00		B-33	Needle Bar Clamp	1 "	113027-0-01	
B-8	Stud for B-1 (Lower)	1 "	113031-0-01		B-35	Wick 6x6 (16)	1 "	108809-0-11	
B-9	Set Screw for B-10	1 "	105560-0-03		B-36	Pusher for B-32	1 "	113024-0-00	
B-10	Needle Bar Thread Guide	1 "	113144-0-01		B-37	Needle Bar Connecting Rod	1 "	113012-0-01	
B-11	Set Screw for B-12	1 "	107375-0-01		B-39	Needle Bar Guide Slide Block	1 "	113017-0-01	
B-12	Needle DP x H1 for B851-3&-7	1 "	118155-0-14		B-40	Guide Plate for B-39	2 Pcs.	117301-0-01	
B-12	Needle DP x H1 for B851-1	1 "	118155-0-11		B-41	Set Screw for B-40	4 "	107244-0-01	
B-13	Set Screw for B-14	1 "	107703-0-01		B-42	Needle Bar Guide	1 "	117300-0-00	
B-14	Thread Guide Plate for B-1	1 "	11796-0-01		B-43	Pusher for B-46	1 "	113014-0-00	
B-15	Tension Disc for B-14	2 Pcs.	100546-0-01		B-44	Wick 6x6 (30)	1 "	108805-0-01	
B-16	Felt for B-14	1 Pcs.	11797-0-01	114795-0-01	B-46	Stud Shaft for B-37	1 "	113013-0-01	
B-17	Thread Guide Spring	1 "	100548-0-01		B-47	Pusher for B-49	1 "	113024-0-00	
B-18	Stud Screw for B-14	1 "	11798-0-01		B-48	Wick for 6x6 (16)	1 "	108809-0-01	
B-19	Cap Screw for Oil Hole of B-26	1 "	100289-0-03		B-49	Thread Take-up Lever Slide Block	1 "	118171-0-01	
B-20	Wick 6x6 (40)	1 "	112995-0-00		B-50	Thread Take-up Lever	1 "	117303-0-01	
B-21	Set Screw for B-23	1 "	100016-0-03		B-51	Wick 6x6 (30)	1 "	108805-0-01	
B-22	Felt for B-23	1 "	113006-0-01		B-53	Stud for Thread Take-up Lever	1 "	113022-0-01	
B-23	Upper Shaft Bushing Left	1 "	113005-0-00		B-34	Clamp Screw for B-33	1 "	110124-0-01	
B-24	Set Screw for B-25	2 Pcs.	100251-0-01		B-38	Set Screw for B-42	2 Pcs.	107407-0-02	
B-25	Upper Shaft Collar	1 Pcs.	104274-0-00		B-45	Set Screw for B-46	2 "	100251-0-01	
B-26	Upper Shaft	1 "	113002-0-01		B-52	Set Screw for B-53	1 Pcs.	100062-0-03	
B-27	Set Screw for B-29	1 "	100016-0-03		B-54	Counter Weight for B851-3&-7	1 "	117298-0-00	
B-28	Felt for B-29	1 "	113004-0-01		B-55	Counter Weight for B851-1	1 "	113010-0-00	
B-29	Upper Shaft Bushing Right	1 "	104767-0-02		B-57	Thrust Ring for B-54	1 "	113011-0-01	
B-30	Set Screw for B-31	1 "	113028-0-01		B-58	Feed Lifting Cam	1 "	113081-0-01	
B-31	Needle Bar Thread Guard	1 "	113025-0-01		B-59	Set Screw for B-58	2 Pcs.	101706-0-01	
B-32	Needle Bar Connecting Stud	1 "	113027-0-01		B-60	Crank Rod	1 Pcs.	113078-0-01	
B-33	Needle Bar Clamp	1 "	108809-0-01		B-61	Stop Pin for B-62	2 Pcs.	113080-0-00	
B-35	Wick 6x6 (16)	1 "	13024-0-00		B-62	Felt for B-69, B-64	1 Pcs.	113079-0-01	
B-37	Needle Bar Connecting Rod	1 "	113012-0-01		B-63	Distance Ring	2 "	113082-0-01	
B-39	Needle Bar Guide Slide Block	1 "	113017-0-01		B-64	Horizontal Feed Crank	1 "	113112-0-01	
B-40	Guide Plate for B-39	2 Pcs.	113018-0-01		B-65	Eccentric Wheel	1 "	113107-0-01	
B-41	Set Screw for B-40	4 "	107244-0-01		B-66	Set Screw for B-67	1 "	104767-0-02	
B-42	Needle Bar Guide	1 Pcs.	113015-0-00		B-67	Gib Stopper	1 "	104766-0-01	
B-43	Pusher for B-46	1 "	113014-0-00		B-68	Eccentric Wheel Control Pin	1 "	101476-0-01	
B-44	Wick 6x6 (30)	1 "	108805-0-01		B-69	Presser Pin for B-70	2 Pcs.	104765-0-01	
B-46	Stud Shaft for B-37	1 "	113013-0-01		B-70	Gib	1 Pcs.	103595-0-01	
B-47	Pusher for B-49	1 "	113024-0-00		B-71	Clack for B-68	1 "	101477-0-01	


PARTS RIST

Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
B-72	Eccentric Wheel Clamp	1 Pcs.	112675-0-01	
B-74	Set Screw for B-75	2 Pcs.	101479-0-01	
B-75	Cam Ditch Washer	2 "	103601-0-01	
B-76	Eccentric Feed Control Cam	1 Pcs.	112676-0-01	
B-77	Ripple Type Spring	1 "	103602-0-02	
B-78	Spring Presser	1 "	101480-0-01	
B-79	Set Screw for B-78	1 "	101481-0-01	
B-73	Set Screw for B-72	2 Pcs.	100016-0-03	
B-80	Stop Ring for B-82	1 Pcs.	111825-0-01	
B-81	Spring for B-82	1 "	103607-0-00	
B-82	Feed Control Bottom	1 "	113110-0-01	
B-83	Cam Screw for B-84	1 "	104478-0-01	
B-84	Arm Pulley	1 "	113039-0-01	
B-85	Set Screw for B-84	2 Pcs.	100016-0-03	
B-86	Stud Screw for B-80, B-64	2 "	113063-0-10	
B-87	Net for B-86	2 "	104689-0-01	
B-88	Timing Pulley for B-26	1 Pcs.	113085-0-00	
B-89	Set Screw for B-88	2 Pcs.	100251-0-01	
B-90	Timing Belt	1 Pcs.	113087-0-01	
B-91	Wick 6x6 (120)	1 "	118847-0-01	
B-92	Oil Felt for B851-3 &-7 Only	1 "	104004-0-01	
B-93	Oil Felt Holder for B851-3 &-7 Only	1 "	104003-0-00	
B-94	Set Screw for B851-3 &-7 Only	1 "	105288-0-01	

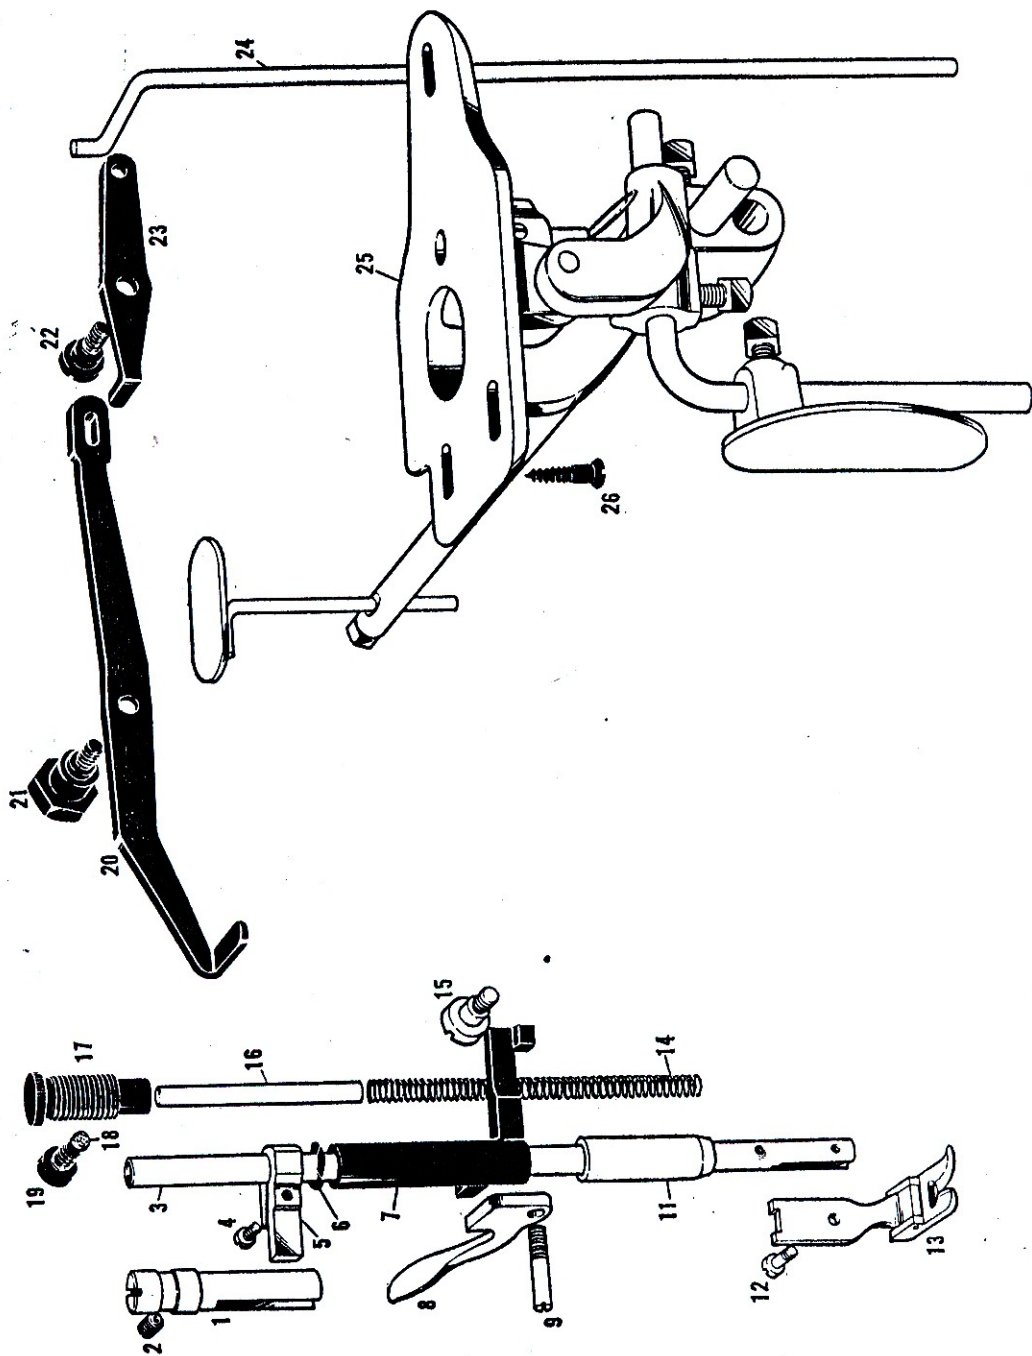

B851-C 7

[illegible]

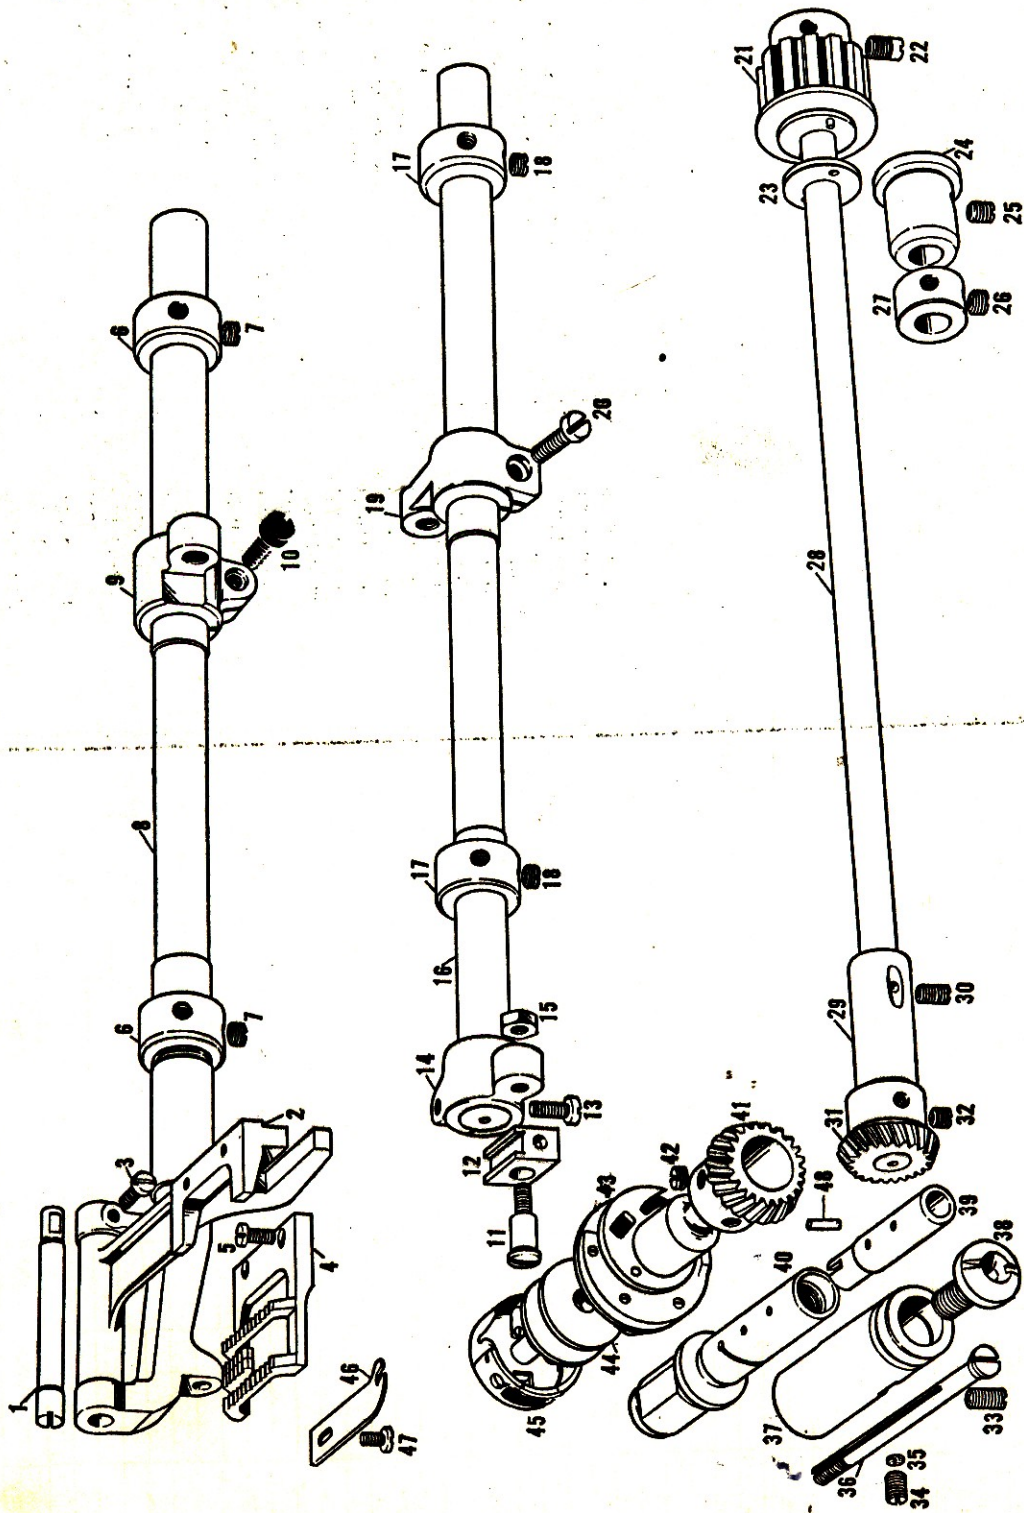


PARTS LIST FOR LZ1-B851

B851-D 9

Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
D-1	Feed Bar Shaft	1 Pce.	113076-0-01		D-44	Bobbin	1 Pce.	117480-0-01	
D-2	Feed Bar	1 "	113075-0-01		D-45	Bobbin Case	1 "	107097-0-01	
D-3	Set Screw for D-1	1 "	104908-0-01		D-46	Bobbin Case Holder Position Plate	1 "	113105-0-01	
D-4	Feed Dog for B851-1 & 3	1 "	117463-0-01		D-47	Set Screw for D-46	1 "	100185-0-03	
D-5	Feed Dog for B851-7	1 "	117307-0-01						
D-6	Set Screw for C-4	2 Pcs.	100080-0-03						
D-7	Feed Rock Shaft Collar	2 "	113074-0-01						
D-8	Set Screw for D-6	4 "	101706-0-01						
D-9	Feed Rock Shaft	1 Pce.	113070-0-01						
D-10	Feed Rock Shaft Arm	1 "	113071-0-01						
D-11	Set Screw for D-9	1 "	105073-0-01						
D-12	Stud Screw for D-12	1 "	113068-0-01						
D-13	Feed Lifting Slide Block	1 "	113067-0-01						
D-14	Set Screw for D-14	1 "	100086-0-03						
D-15	Feed Lifting Slide Block Crank	1 "	113066-0-01						
D-16	Nut for D-11	1 "	107556-0-02						
D-17	Feed Lifting Rock Shaft	1 "	113061-0-01						
D-18	Feed Lifting Rock Shaft Collar	2 Pcs.	113065-0-01						
D-19	Set Screw for D-17	4 "	101706-0-01						
D-20	Feed Lifting Arm	1 Pce.	113062-0-01						
D-21	Set Screw for D-19	1 "	100086-0-03						
D-22	Timing Pulley for D-28	1 "	113092-0-01						
D-23	Set Screw for D-21	2 Pcs.	115995-0-01						
D-24	Thrust Ring for D-21	1 Pce.	114460-0-01						
D-25	Lower Shaft Bushing Right	1 "	113088-0-00						
D-26	Set Screw for D-24	1 "	100013-0-03						
D-27	Set Screw for D-27	2 Pcs.	101706-0-01						
D-28	Lower Shaft Collar	1 Pce.	101972-0-01						
D-29	Lower Shaft	1 "	113090-0-01						
D-30	Lower Shaft Bushing Left	1 "	113089-0-00						
D-31	Set Screw for D-29	1 "	100013-0-03						
D-32	Lower Shaft Gear	1 "	113095-0-01						
D-33	Set Screw for D-31	2 Pcs.	100251-0-01						
D-34	Set Screw for D-37	1 Pce.	100016-0-03						
D-35	Set Screw for D-37	1 "	100013-0-03						
D-36	Stop Washer for D-37	1 "	113053-0-01						
D-37	Set Screw for D-43	1 "	113103-0-01						
D-38	Hook Driving Shaft Receiver	1 "	113097-0-00						
D-39	Stud Screw for D-40	1 "	113102-0-01						
D-40	Rotary Hook Retaining Stopper	1 "	113101-0-01						
D-41	Hook Driving Shaft	1 "	113099-0-01						
D-42	Pin for D-39	1 "	118146-0-00						
D-43	Hook Driving Shaft Gear	1 "	113100-0-01						
D-44	Set Screw for D-41	2 Pcs.	101706-0-01						
D-45	Rotary Hook Assembly	1 Pce.	107089-0-01						

113096-0-01

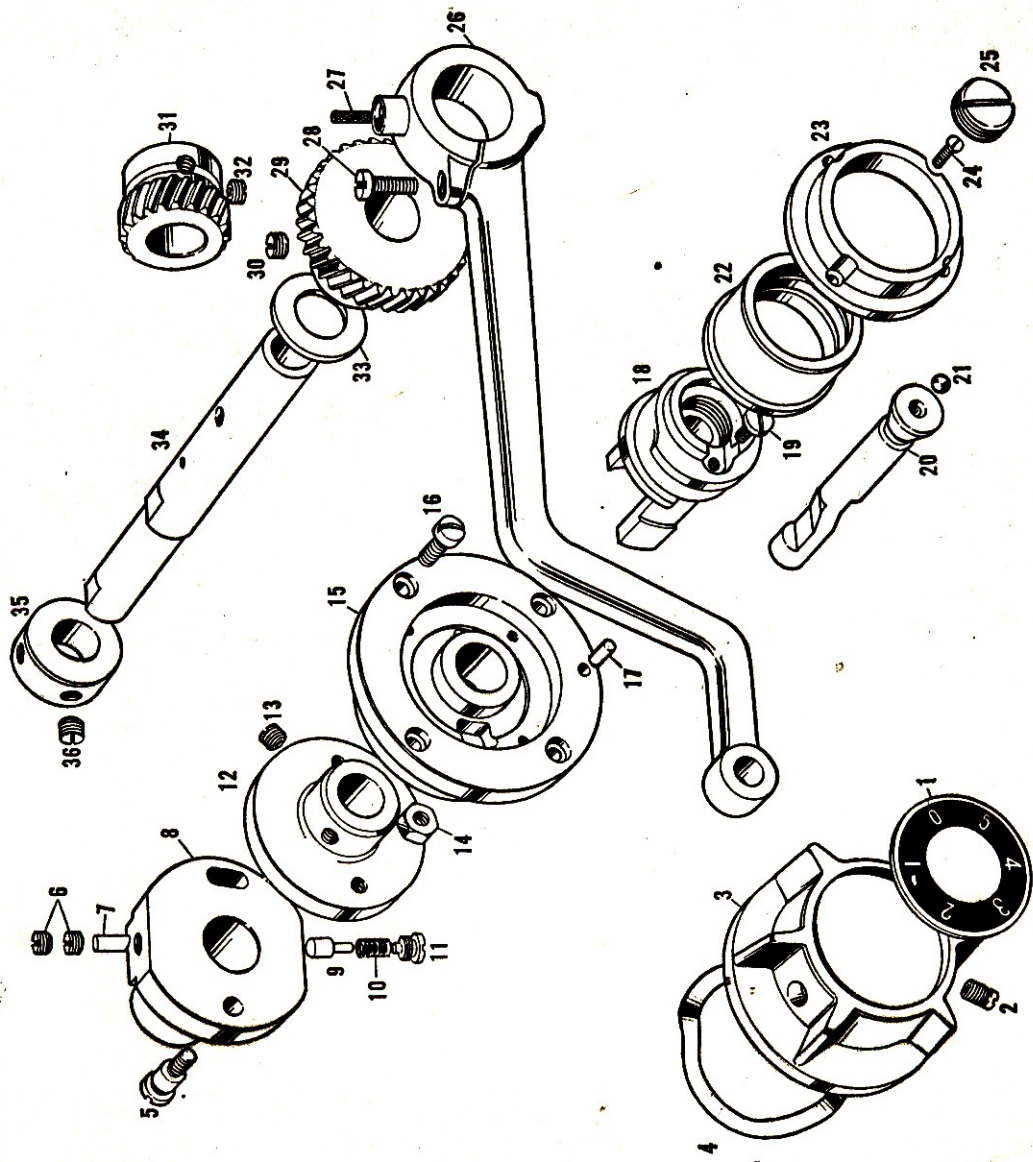

PARTS LIST FOR LZ1-B851

B851-E 11

Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
E-1	Scale Plate B851-1 & 3 for E-3	1 Pcs.	113140-0-01						
E-1	Scale Plate B851-7 for E-3	1 "	117459-0-01						
E-2	Set Screw for E-3	2 Pcs.	100366-0-03						
E-3	Zigzag Control Knob for B851-1 & 3	1 Pcs.	113139-0-01						
E-3	Zigzag Control Knob for B851-7	1 "	117458-0-01						
E-4	Spring Washer for E-3	1 "	117462-0-01						
E-5	Stud Screw for E-8	2 Pcs.	113124-0-01						
E-8	Zigzag Control Cam	1 Pcs.	113123-0-01						
E-12	Zigzag Control Cam Guide	1 "	113122-0-00						
E-13	Set Screw for E-12	2 Pcs.	101706-0-01						
E-14	Nut for E-5	2 "	113125-0-01						
E-6	Set Screw for E-8	2 "	100251-0-01						
E-7	Pin : 2 B851-1 & 3 for E-20	1 Pcs.	113130-0-01						
E-7	Pin : 2 B851-7 for E-20	1 "	117457-0-01						
E-9	Pin : 1 for E-20	1 "	113127-0-01						
E-10	Spring for E-9	1 "	113128-0-00						
E-11	Presser Screw for E-10	1 "	113129-0-01						
E-15	Zigzag Shaft Receiver	1 "	113119-0-00						
E-17	Pin for E-15	1 "	104539-0-00						
E-18	Zigzag Control Screw	1 "	113135-0-01						
E-22	Nut for E-18	1 "	113136-0-01						
E-23	Stopper Plate for E-22	1 "	113137-0-00						
E-15	Zigzag Shaft Receiver	1 "	117455-0-01						
E-17	Pin for E-15	1 "	104539-0-00						
E-18	Zigzag Control Screw	1 "	113135-0-01						
E-22	Nut for E-18	1 "	113136-0-01						
E-23	Stopper Plate for E-22	1 "	113137-0-00						
E-24	Set Screw for E-23	4 Pcs.	107244-0-01						
E-16	Set Screw for E-15	4 "	100541-0-01						
E-19	Set Screw for E-18	1 Pcs.	104559-0-02						
E-20	Zigzag Control Shaft for B851-1 & 3	1 "	113126-0-01						
E-20	Zigzag Control Shaft for B-851-7	1 "	117456-0-01						
E-21	Steel Ball for E-20	1 "	113265-0-01						
E-25	Set Screw for E-20	1 "	113138-0-01						
E-26	Zigzag Connecting Link	1 "	117479-0-00						
E-28	Set Screw for E-96	1 "	100088-0-02						
E-27	Wick 4x4 (12)	1 "	113132-0-00						
E-29	Zigzag Shaft Gear	1 "	113117-0-01						
E-30	Set Screw for E-29	2 Pcs.	101706-0-01						
E-31	Upper Shaft Gear	1 Pcs.	113116-0-01						
E-32	Set Screw for E-31	2 Pcs.	101706-0-01						
E-33	Thrust Ring for E-34	1 Pcs.	113133-0-01						
E-34	Zigzag Shaft	1 "	113120-0-01						
E-35	Zigzag Shaft Collar	1 "	113134-0-01						
E-36	Set Screw for E-35	2 Pcs.	107308-0-01						