


# Union Speciale LEWIS®. COLUMBIA®

1(0(0); 1000 (1(e(o))\S ) (O(O) | | N | IOONTN

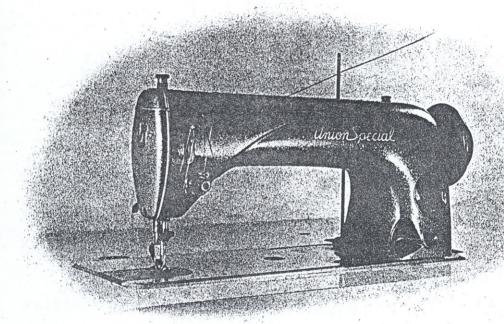

CLASS 100

MAMORE MAQUINAS LTDA.

STREAMLINE

HIGH SPEED SADDLE STITCH MACHINE



- ORIGINAL

UNION SPECIAL CORPORATION

CHICAGO

Catalog No. 122 L

LIST OF PARTS AND INSTRUCTIONS

FOR

OPERATING AND ADJUSTING

CLASS 100

STREAMLINED SADDLE STITCH MACHINE

Styles
100 P 100 LS
100 S 100 TN

Second Edition

© 1962

By

Union Special Corporation
Rights Reserved in All Countries

## UNION SPECIAL CORPORATION

INDUSTRIAL SEWING MACHINES

Printed in U.S.A

IAMIOINO - MAI

April, 1981

#### FOREWARD

The dominating idea back of Union Special is to build the best industrial sewing machines in the world. The high speed streamlined saddle stitch machines are a pronounced achievement along these lines. All parts are made to precision gauges insuring complete interchangeability. A few of the outstanding features are:

- 1. Streamlined design. Pleasing in appearance, this natural functional design provides greater stability and ruggedness, free from difficult-to-clean recesses.
- 2. Simplified oiling. Automatically supplies oil to lower main shaft bearings, feed rocker and feed lift bearings.
- Acceleration. The machine is brought to top speed in an instant for higher productive rates and lower costs.
- 4. Push button control, for quick, easy adjustment of stitch length, with a stitch length indicator of the comparison type, using letters as a means of reference, to predetermine stitch lengths.

It is our constant aim to furnish carefully prepared information that will enable the customer to secure all possible economies and advantages from the use of UNION SPECIAL machines. The following pages contain valuable operating and adjusting data and illustrate and describe the parts for Styles in Class 100 streamlined saddle stitch machines.

Union Special representatives will be found in all manufacturing centers, ready to cooperate with you to plan and estimate requirements.

# UNION SPECIAL CORPORATION

Engineering Department

MAMORÉ MAQUINAS ITDA.

## APPLICATION OF CATALOG

This catalog applies only to the standard styles of machines as listed herein. All references to directions, such as right and left, front and back, etc., are taken from the operator's position while seated at the machine. The direction of rotation of the handwheel is toward the operator.

## IDENTIFICATION OF MACHINE

Each UNION SPECIAL machine carries a style number which is stamped in the name plate on the machine. Style numbers are classified as standard and special. Those which are standard have one or more letters suffixed, but never contain the letter "Z". Example: "100 LS". Style numbers containing the letter "Z" are special.

Styles of machines similar in construction are grouped under a class number which differs from the style number in that it contains no letters. Example: "100".

The serial number of the machine is stamped on the back of the column at cloth plate level.

# STYLES OF MACHINES IN CLASS 100

With the exception of Styles 100 TN and 100 NTN, all the machines in Class 100 are used for producing a decorative saddle stitch. Recommended speed is 2000 R.P.M.

- 100 P For pick or pin point saddle stitch edging on collars and pockets of sport shirts; also for side seams of trousers and slacks. Needle travel 15/16 inch. Stitch range is 3 to 5 stitches per inch.
- 100 S Similar to Style 100 P, except regular saddle stitch length for edging on collars and pockets of sport shirts, side seams of trousers and slacks, and on infants' knitted wear. Needle travel 15/16 inch. Stitch range is 3 to 5 stitches per inch.
- 100 LS For long or giant saddle stitch edging on ladies' wear, such as dresses, fall coats, skirts, etc. Needle travel 15/16 inch. Stitch range is 2 1/3 to 3 1/2 stitches per inch.
- \*100 TN For necktie closing, joining tie, lining strip and band. Needle travel 1 1/32 inch. Equipped with attachment for centering lining and tape. Machine may be used with or without tape. Stitch range is 2 1/4 to 3 stitches per inch.
- \* NOTE: Style 100 TN was formerly known as Style 100 NTN, so any reference to Style 100 NTN would apply to Style 100 TN.

## INSTALLING

Each machine, as it leaves the factory, is sewed off, inspected and carefully packed. When the machine reaches the customer, it is ready for service. Because of all the precautions taken by those who handle the machine, the customer needs only to place it in its proper position in the table and make only the ordinary settings to adapt the machine to the material he wishes to sew.

## STANDARD ACCESSORIES

Included with each machine is a box of standard accessories containing one drip pan, oil drain jar and clamp spring, one knee lifter assembly and rubber pad, one spool pin, two hinge studs, one machine rest pin, two hinge plates and screws, four felt pads and necessary nails. These parts are indispensable when setting up the machine.

#### INSTALLING (Continued)

#### TABLE TOPS

Machine Styles 100 P, 100 S, 100 LS may be installed in table top No. 21371 NB-48 prepared with cut-out so that the bed plate is flush with the top of the table. Isolated mounting parts are included with the table top. For table tops not prepared for isolated mounting, use the felt pads and nails furnished with the accessories.

When assembling the hinge plates to the table tops, be sure to locate them as accurately as possible, so that the hinge studs, attached to the machine, can swing properly in the plate.

Special care should be taken that machine does not contact the sides of the cut-out at any point.


Style 100 TN is mounted on a machine base which, in turn, is screwed directly to the table top. This machine may be installed on table top No. 21371 VG-48.

#### KNEE PRESS

The knee press is attached to Union Special table tops at the location designated by punch marks on the underside. For other boards, locate the knee press so that the center of the shaft is 8 1/4 inches from the right side of the cut-off. The knee press assembly should appear as in (Fig. 1).

#### DRIP PAN

The drip pan is attached to Union Special table tops at the indentation marks on the inside of the cut-out, using the nails furnished with the accessories. For other table tops, the drip pan should be set high enough to clear the knee press and low enough to clear the bottom of the machine. It should be laterally located so that it is directly under the

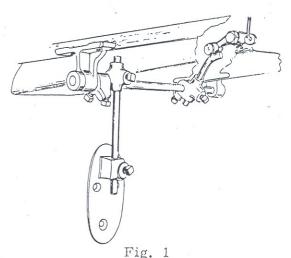

#### BELTS

These machines are equipped to use either No. 1 "V" or round belt.

#### LUBRICATION

#### CAUTION!!


#### MAMORE MAQUINAS LTDA

The oil has been drained from the main reservoir and the hook shaft gear case before shipment, and these reservoirs must be filled before starting to operate. Lubricate machine thoroughly in accordance with instructions and run slowly for several minutes to distribute the oil to the various parts. Full speed operation can then be expected without damage.

#### RECOMMENDED OILS

base of the machine.

Har a straight mineral oil of a Saxbalt viscosity of 40 to 195 seconds at 190° Fahrenheit in main reservoir and hook shaft gear case. This is equivalent to Union Special oil specification No. 175.

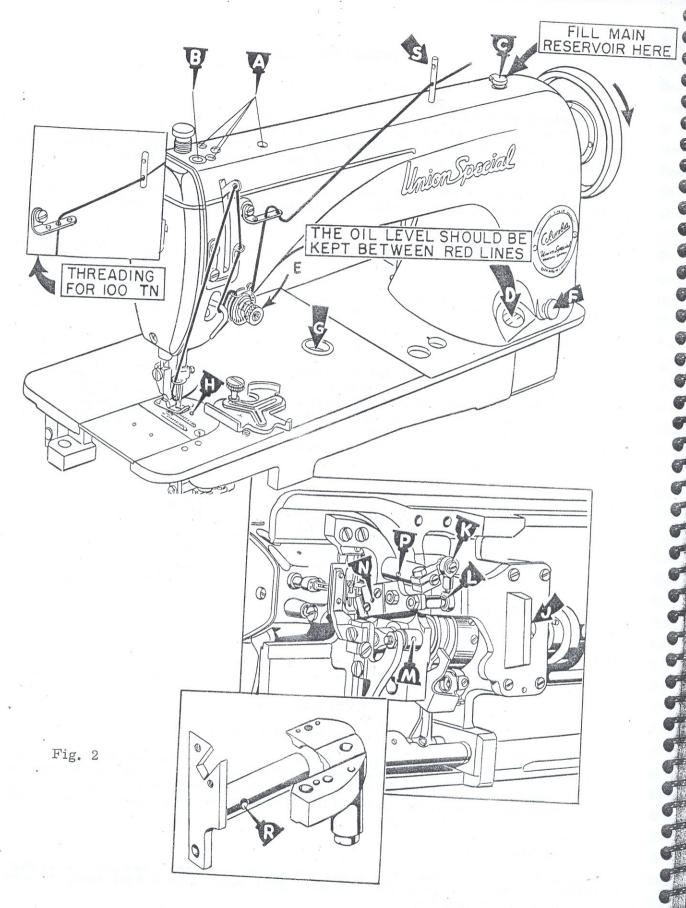

#### LUBRICATION (Continued)

#### RECOMMENDED OILS (Continued)

Oils conforming to specification No. 175 may also be used in the manually oiled places.

For trouble free operation, oil the machine as indicated in the diagram (Fig. 2).

With needle bar at the top of its stroke, oil the holes (A) twice daily. In oiling hole (B), very little oil should be used and only around the outer edges of the needle bar. Do not put oil into the hole in the needle bar, as it will flow out when machine is operated at high speed. A can of oil, No. 28604 R, is included with the accessories packed with the machine. It contains a sufficient quantity to fill both reservoirs. The main reservoir is filled through oil cup (C) and the supply is usually replenished about twice a month. However, the oil level should be checked from time to time and kept between the lines on the gauge (D).

The hook shaft gear case is filled at the plug screw hole (J). A quantity of oil sufficient to bring the level up to the plug screw hole, when the machine is tilted back against the rest pin, should be used. Remove plug screw and check the level of oil about every six months.

#### CAUTION!!

Do not use a compounded oil in the feeding drive shaft gear case or hook shaft gear case, as these oils separate and froth.

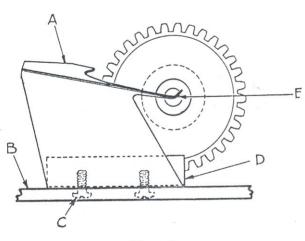


Fig. 3

Lubrication of most of the mechanism below the bed plate is automatically accomplished through the feed driving shaft which is tubular. Oil is introduced into the shaft at the gear end by means of an oil distributing plate (A, Fig. 3) which is secured to the large gear case cover (B) by means of two screws (C) and retaining block (D).

Should it ever become necessary to remove any of the parts from the gear case, it is imperative that the adjustment of the oil distributing plate be checked very carefully. This can be done by removing the large plug screw at the right end of the gear housing and looking through the hole. The low point of the oil

distributing plate must be even with or slightly below the center of shaft (E) and just touching it. This is a very important adjustment as the functioning of the automatic lubrication of the lower part of the machine depends upon it.

The hook driving mechanism, below the bed plate, is manually lubricated, and the oiling places are indicated at (H, K, L, M, N, P, and R, Fig. 2). A few drops daily at these points will be sufficient.

# MAMORE MAQUINAS LTDA NEEDLES

The recommended needles for these machines are Type 29-C150 or 29 DEA, eye needle, (formerly System 150) and Type 29-C151, hook needle, (formerly System 151 SU). The minor number following the Type Symbol indicates the size.

#### NEEDLES (Continued)

These needles are available in the following sizes:

NEW TYPE NO. OI	LD SYSTEM NO.	DESCRIPTION	SIZE
29 DEA-090/036 29-C150-5 29 DEA-110/044 29 DEA-140/054 29-C151-4 29-C151-5 29-C151-6 29-C151-7 29-C151-8 29-C151-10	4/150 5/150 6/150 8/150 4/151 5/151 SU 6/151 SU 7/151 SU 8/151 SU 10/151 SU	Eye Needle Eye Needle Eye Needle Eye Needle Hook Needle Hook Needle Hook Needle Hook Needle Hook Needle	.038 .042 .044 .054 .038 .042 .046 .050

Style 100 P is set with 29-C150-5 or 5/150 eye needle and 29-C151-5 or 5/151 SU hook needle and No. 60 cotton thread. Finer needles and cotton may be used on this machine. To use heavier threads such as 40-30 cotton or 2/3 rayon twist, it is necessary to change the needle spacer to C1021 P-073 and to use 29 DEA-110/044 or 6/150 eye needle and 29-C151-6 or 6/151 SU hook needle.

Style 100 S for sportswear is set with 29 DEA-110/044 or 6/150 eye needle and 29-C151-7 or 7/151 SU hook needles and C3 saddle stitch rayon twist. For trousers, use 29 DEA-110/044 or 6/150 eye needle and 29-C151-6 or 6/151 SU hook needle with No. 50 or size A cotton. Finer needles and thread may also be used.

Style 100 LS is set with 29 DEA-140/054 or 8/150 eye needle and 29-C151-10 or 10/151 SU hook needle with size E cotton thread. Finer needles and thread may be used.

Style 100 NTN is set with 29-C150-5 or 5/150 eye needle and 29-C151-5 or 5/151 SU hook needle with size 00 mercerized.

To have orders promptly and accurately filled, an empty container, a sample needle, or the type number should be forwarded.

#### OPERATOR'S INSTRUCTIONS

#### INSERTING THE NEEDLES

Insert the needles in the needle bar as far as they will go, with the spots or scarfs to the right, and with the eye needle in the rear hole and the hook needle in the front.

#### THREADING

Thread machine in accordance with threading diagram (Fig. 2).

The main diagram illustrates the threading for Styles 100 P, 100 S and 100 LS. The insert illustrates the difference between the threading of Style 100 NTN and the other styles.

Please note that on Style 100 NTN, when fine nylon (Z15 size) or fine cotton (2/0 size) threads are used, the threading of the check spring and take-up lever is omitted.

#### OPERATOR'S INSTRUCTIONS (Continued)

#### NEEDLE THREAD TENSION

The needle thread tension is varied by turning the tension regulating nut (E, Fig. 2). Turning the nut in a clockwise direction increases the tension and counterclockwise decreases the tension. This should not be done when the presser foot is in its raised position, and is generally done while the machine is sewing on a piece of scrap material.

#### LENGTH OF STITCH

The showing stitch remains the same, but the space between the stitches changes when setting for a longer or shorter stitch. The total length of stitch can be set from approximately 3 to 10 stitches per inch on Styles 100 P, 100 S, 100 LS, and from approximately 2 1/3 to 10 stitches per inch on Style 100 NTN. Most tie manufacturers, however, prefer the maximum stitch length.

## TO CHANGE THE STITCH LENGTH

Press plunger (F, Fig. 2) in firmly. While holding plunger in, turn handwheel in operating direction until stitch regulating finger is felt to drop into the slot of feed eccentric. Continuing to hold the plunger in, turn handwheel in operating direction to increase the stitch length and in opposite direction to decrease the stitch length.

Comparative stitch lengths are indicated by the graduations on the dial (G) in bed plate, ranging from S (short) to L (long). Release the plunger.

The stitch regulating plunger may be locked at any setting by means of the locking screw located on the underside of the bed plate lip directly below the plunger.

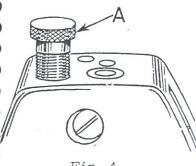


Fig. 4

#### PRESSURE ON MATERIAL

The presser spring should exert only enough pressure to make the work feed uniformly. To increase the pressure on the presser foot, turn the presser spring regulator (A, Fig. 4) in clockwise direction. Turning the regulator counterclockwise decreases the pressure.

## OPERATING STYLE 100 NTN

Raise the presser foot on the machine with the knee lifter. Then, draw the tie lining into the stretching device (A, Fig. 5) through the lining guide (B) and under

the end of the lining located at whichever number you choose to use as a starting point.

A tape slot (D) is provided in the plate, for the tape which is drawn in simultaneously with the tie lining. Its use is optional. Many operators work with the tie linings draped across their right knee. If this method is used, the lining should be inserted under the angular guide (F). If the operator prefers to let the tie linings lang straight down, the angular guide (F) should be removed.

The tie is now placed under the presser foot and against the adjustable tie gauge (E). Tie and lining are now sewn together the entire length.

MACIORE MAQUINAS LTDA

# OPERATOR'S INSTRUCTIONS (Continued)

# OPERATING STYLE 100 NTN (Continued)

To remove the tie, be sure the needles are up and have just started their downward travel. Then, raise the presser foot with the knee lifter. With the left hand, draw the tie at least 1 inch to the rear to pull off thread. Then, break the thread snapping the tie to the rear left.

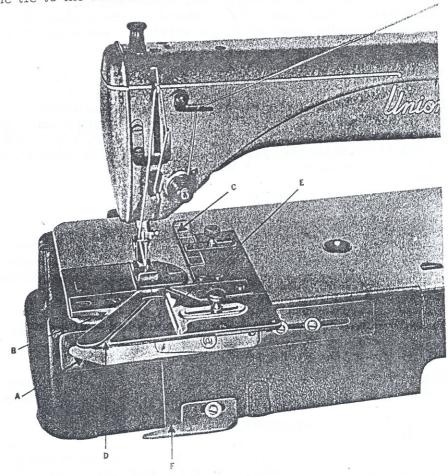


Fig. 5

The forward portion of the slot in the presser foot has a knife edge so that three drawnich will not break by the above method may be readily cut. When using nylon or heavier threads, proceed as outlined above, then, draw tie to the left, lowering me presser foot at the same time to sever threads.

The ruler edge guide (C) can be moved to the left or right to center the lining set that the stitching will be in the center of the lining. The marks on ruler edge guide (C) are used for locating the starting position on lining and tie.

The lining stretching device (A) has an adjustable tension. If the lining puckering, more tension is required on the stretching device (A). Light weight linings require less tension than heavy weight linings. Linings must be cut on the bias. When the stitching is not centered on the tie lining, it may be necessary move the lining stretching device (A) to the left or right of center line.

#### MECHANIC'S INSTRUCTIONS

#### SETTING THE NEEDLE BAR TO HEIGHT

The lower needle bar bushing, the one to which the needle bar is timed, is set at the factory. The distance from the bottom of the bushing to the throat plate seat is 2.298 (2 19/64) inches (Fig. 6).

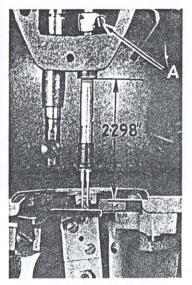


Fig. 6

When the needle bar is in its lowest position, the upper timing line on the needle bar should be even with the lower edge of the needle bar bushing. To change the position of the needle bar, turn the handwheel in operating direction until the needle bar is in its lowest position, then, loosen the clamp screw (A) and move the bar to the proper timing line. Insert a pin in the 3/64 inch hole between the timing lines and turn the needle bar 3 to 5 degrees to left of the line of feed on 100 P and 100 NTN machines, 2 to 3 degrees on 100 S machine, and 1 degree on 100 LS machine.

#### FEED DOG HEIGHT

In regulating the height of the feed dog, it should be at its highest position and the presser foot resting directly against it. Feed dog should show the depth of a full tooth above the throat plate.

The feed dog holder attaching screw (A, Fig. 7) should be loosened slightly, and regulat-

PRESSER FOOT HEIGHT

ing screw (B) should be turned either clockwise to raise the feed dog, or counterclockwise to lower it. Make sure that the bottom of the shank of the feed dog holder rests against the head of the regulating screw.

The feed dog can be tilted up or down as required by loosening screws (A and C).

Loosen feed dog holding screws (D) to space the feed dog, front to back or sideways in throat plate.

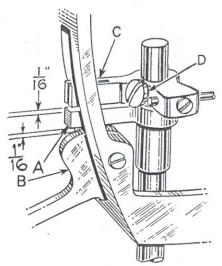


Fig. 8

Fig. 7

With the feed dog at the bottom of its stroke, set the presser foot height so that there is 1/4 inch space between the bottom of the presser foot and the top of the throat plate when the presser foot lifter lever is at its highest position.

IORE MAQUINAS **LTDA** To make this adjustment, loosen screw (D, Fig. 8), and with the hand lifter (B) in its up position, move the presser bar to secure the desired height of foot and re-tighten screw (D). When the above adjustment is made, care must be taken that the needles are centered in the presser foot needle slot.

#### PRESSER BAR CONNECTION

The presser bar connection (A, Fig. 8) should be set so that it is 1/16 inch from the hand lifter (B) at all times.

# PRESSER BAR CONNECTION (Continued)

This is accomplished by turning the machine over on its side, loosening lock nut (G, Fig. 9) and relocating the stop screw (E) on the lifter lever bell crank (F). By turning the stop screw counterclockwise, the presser bar connection is brought closer to the hand lifter. Turn the stop screw to secure desired 1/16 inch space. Tighten lock nut (G) to lock screw in position.

## PRESSER BAR GUIDE

When locating the presser bar guide (C, Fig. 8), the presser foot must rest directly against the throat plate with the feed dog in its lowest position.

The guide is properly set when there is a 1/16 inch space between presser bar guide and the connection.

To obtain this setting, loosen set screw(D) in the guide and insert screw driver between the connection and the guide. Tap on presser foot to insure its being down on the throat plate, center the foot by turning it so that needle enters the middle of its slot and re-tighten screw (D) in guide.

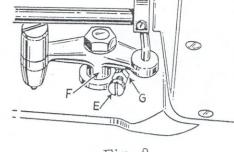


Fig. 9

 


Fig. 10

## THREAD CONTROL

Test check spring tension (A, Fig. 10). There should be enough tension to insure a good returning snap when spring is depressed and released. Should it require adjusting, loosen set screw in the head on right side of tension post (G, Fig. 12) and remove tension post assembly. Partially loosen tension post set screw (B, Fig. 10) in tension post socket (C). Holding the socket in the left hand, turn the tension post (D) counterclockwise with the right hand until

the check spring moves away from the upper stop (E) and has no tension on it. Turn the tension post (D) in a clockwise direction until the spring again touches the upper stop (E). Then, proceed further in the same direction until the desired tension is obtained. When correctly set, the tension post set screw (B) should be drawn up snugly, but not forcefully. Further adjustment of the check spring tension can be made by inserting a screw driver into the slotted end of the tension post (D) and turning in the required direction.

Replace tension assembly with the check spring about 3/8 inch above the thread take-up wire. While the tension post assembly is being replaced, the presser foot should be resting on the throat plate.

The frame take-up eyelet (A, Fig. 11) should be set at its highest position.

For the final setting of check spring, sew slowly on a piece of material and observe the action of the check spring. The spring should have completed its travel and rest against its stop as the needle bar reaches the bottom of its stroke.

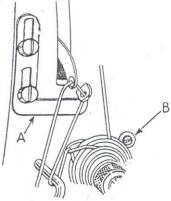


Fig. 11

#### LOCATING TENSION RELEASE MECHANISM

The tension assembly should be located in bed from front to back, so that when the presser foot is raised to its highest position, the tension discs (F, Fig. 12) are

opened just enough to allow the thread to pass through the discs freely.

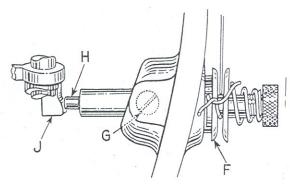


Fig. 12

To position the tension assembly, see that set screw in bed (G, Fig. 12) is loose and tension assembly adjusting screw (B, Fig. 11) is screwed down to the bed.

Lift the presser foot hand lifter to its highest position. With the left hand, grasp the thread and pull it through the tensions, with the right hand, push tension post deeper into the machine until release pin (H, Fig. 12) pressing against the presser bar connection (J) has opened the tension discs just enough to allow the thread to pull through freely.

Re-tighten set screw (G), turn tension assembly adjusting screw (B, Fig. 11) counterclockwise until it contacts the flange of the tension post socket.

#### SETTING THE HOOK ON THE CARRIER

Set the hook high on the carrier and tilt backwards as far as it will go. Use screws (A, Fig. 13) to make this adjustment. Care must be taken that the hook point does not contact the bottom of the plunger after making this adjustment.

#### TIMING THE HOOK

Turn handwheel in operating direction until the needle bar has started to rise from its lowest position and the

B

Fig. 14

timing line (A, Fig. 14) at bottom of 3/64 inch hole is even with the bottom of the lower needle bar bushing. At this time, the point of the sewing hook (B) should be even with the centerline of the eye needle on the 100 P and 100 NTN machines, centered between

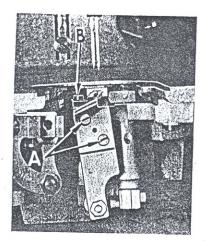


Fig. 13

the eye needle and the hook needle on the 100 S machine and 1/16 inch past the eye needle in its direction of travel on the 100 LS machine. The above adjustment may be made by loosening the three screws (E, Fig. 16) in the hook driving barrel and rotating the barrel until the above condition is satisfied.

#### MAMORE MAQUINAS LTDA

Set the hook point as close as possible to the eye needle without contacting it on the 100 P, 100 S, 100 NTN machines. - The 100 LS machine will require a .003 to .005 inch space between the sewing hook point and the scarf of the eye needle.

#### TIMING THE HOOK (Continued)

This is done by loosening the Allen screw located in the lower bracket. Move the sewing hook shaft bushing (D, Fig. 16) either to the left or right to locate the sewing hook properly. Re-tighten the Allen screw.

#### TIMING THE PLUNGER

The plunger should pass midway between both needles on Styles 100 P and 100 NTN. On Style 100 S, the plunger should be .010 inch from the hook needle. On Style 100 LS, the plunger should be .005 inch from the hook needle. Loosen the plunger block holder screw (B, Fig. 13) and move the block in the required direction to make this adjustment.

Set the plunger so that the vertical portion (A, Fig. 15) extends 3/64 inch beyond the left side of needles at its farthest point of travel to the left.

This adjustment is made by loosening clamp screw (B) and turning slotted shaft (C) in the required direction.

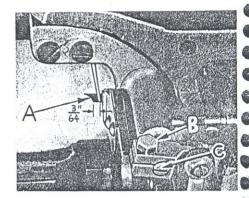


Fig. 15

#### STITCH FORMATION

Place cloth under foot and thread machine. Lay machine on its side and turn handwheel in operating direction and observe how the thread is carried between the needles into the hook needle by the plunger. As the thread is released by the sewing hook and plunger, it is drawn up by the take-up, and the feed motion completes the stitch. Any burr or sharp groove on the plunger or sewing hook must be removed. To turn cloth at desired corner or point, lower hook needle until the point is 1/12 inch above cloth. Raise presser foot and make turn.

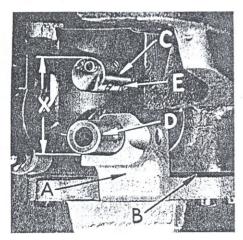


Fig. 16

#### HOOK CARRIER BRACKET

Should it become necessary to replace either the hook carrier bracket (A, Fig. 16) or the shim gasket (B) for it, it is extremely important that the proper distance between the hook barrel (C) and hook carrier bushing (D) be maintained. Use micrometer to check this dimension as shown at "X" in Fig. 16. On Styles 100 P, 100 S, and 100 NT, this dimension is 1.375 inch plus .005 inch and Style 100 LS, it is 1.400 inch plus .005 inch.

In order to achieve this adjustment, it will necessary to select shim gaskets of the proper thickness to use between the hook carrier bracket (A) and the bed casting.

On Styles 100 P, 100 S, and 100 NTN, at least one shim gasket must be used and on Style 100 LS, at least one gasket on each side of the spacing plate must be used to prevent oil leakage.

Refer to parts list in back of book for shim gasket part numbers and thicknesses

#### FEED TIMING

This timing is the relationship which exists between the feed dog and the needle bar motions.

Set the stitch regulator for the longest stitch. Set the feed dog to show the depth of a full tooth above the throat plate. Turn handwheel in operating direction until the bottom of the descending needle eye is even with the top surface of the throat plate. When the needle bar is in this position, the top of the feed dog teeth should be even with the top surface of the throat plate. A simple method of advancing or retarding the feed timing is provided in the head of the machine. Loosen the two

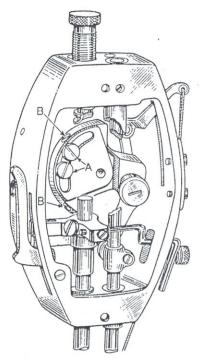


Fig. 17

screws holding the counterweight to the segment plate (A, Fig. 17) and the two screws (B) holding the counterweight to the main shaft. Hold the handwheel and turn the counterweight in a clockwise direction to retard the feed, and in a counterclockwise direction to advance the feed. Be sure to re-tighten all four screws securely, making certain that the counterweight does not slip. Any time the feed timing is changed, it is necessary to retime the hook.

#### MACHINE TIMING

MAMORÉ MAQUINAS LTDA

If at any time the machine is disassembled, the machine will have to be retimed as follows:

1. Lay machine on its side on the bench.

2. Remove the large gear housing cover. Note: Caution should be observed that machine is tilted far enough back so oil will not leak out. Also, be careful in removing the housing cover that the gasket is not mutilated.

3. Loosen screws (B, Fig. 18) and slide gear (A) to the extreme right so it is out of mesh with the idler gear (D).

4. Looking through the stitch length indicator window on the top of the bed plate, rotate the lower main

shaft (C) in the operating direction until the timing mark "T" appears between the pointers of the indicator window. Then, rotate upper main shaft in the operating direction until the needle bar reaches its highest position and descends 1/64 inch on Styles 100 P, 100 S, and 100 NTN and 1/16 inch on Style 100 LS. Carefully turn gear (A) without disturbing the lower main shaft setting until the set screw lies directly above the flat in the lower main shaft. The gears should then be engaged as closely as possible in this position. While holding the gear and thrust collar (E) tightly between thumb and forefinger, tighten set screw against flat in shaft securely, then, tighten the second set screw and check to see that there is no play in the shaft, and that the machine revolves freely.

- 5. Clean, dry and re-seal gasket and housing cover using gasket cement.
- 6. Replace housing cover. Check position of oil distributing, plate as previously described under "Lubrication".

7. Re-set hook.

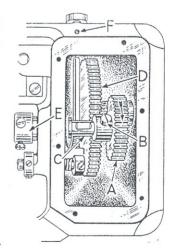


Fig. 18

#### USEFUL SUGGESTIONS

If the machine fails to work satisfactorily, though apparently in good repair, it is possible that some minor trouble exists. For this reason, delay may be avoided by acting on the following:

See that the needles are set properly; that they are the recommended needles; that they are straight and free from nicks and rough places; that they are inserted in the needle bar as far up as they will go; and that there is clearance all around needles as they enter the throat plate.

See that the machine is threaded correctly and the needle thread is delivered to the machine properly.

See that the proper tension is applied to the thread. 3.

See that the presser foot is set so that the needle does not strike it. 4.

See that the feed dog is not striking the hook or throat plate. 5.

Take off throat plate and remove accumulated lint from feed dog slots and hook. 6. See that there are no nicks or cuts in the wall of the throat plate needle hole. 7.

String out this hole with fine emery cord or cloth.

See that the take-up spring acts freely, is not grooved or nicked. Remove any 8. gummy oil and dirt around tension discs.

See that the point of the hook is not blunted, broken or nicked. 9.

- See that the hook is timed correctly. 10.
- 11. See that the feed is timed correctly. See that the plunger is set correctly. 12.

13. See that all screws are tight.

#### ORDERING REPAIR PARTS

#### ILLUSTRATIONS

This catalog has been so arranged as to simplify the ordering of repair parts. Exploded views of the various sections of the mechanism are shown so that the parts may be seen in their actual position in the machine. On the page opposite the illustration will be found the listing of the parts with their part numbers, descriptions and the number of pieces required in the particular view being shown.

The numbers in the first column are reference numbers only and indicate the position of the part in the illustration. The reference number should never be used in ordering parts. Always use the part number shown in the second column.

Those component parts of sub-assemblies which can be furnished for repairs are indicated by the fact that their descriptions are indented under the descriptions of the main sub-assembly. Example:

45	61149	Stitch Length Indicator	1
46	95	Set Screw me me on on our out out on the one and any and the one of the out o	1
47	. 96	Time Spot Screw	1

In those cases where the parts for the various styles in Class 100 are not the same, the difference will be shown in the illustrations and descriptions. When a part is used in all machines covered by this catalog, no machine style will be mentioned.

At the back of the book will be found a numerical index of all the parts shown in this book, which will facilitate locating the illustration when only the part number is known.

#### ORDERING REPAIR PARTS (Continued)

#### IDENTIFYING PARTS

Where the construction permits, each part is stamped with its part number. Some of the smaller parts are stamped with an identification letter to distinguish them from parts similar in appearance.

All part numbers  $\$ represent the same part,  $\$ regardless of the catalog  $\$ in which they appear.

#### USE GENUINE REPAIR PARTS


Success in the operation of these machines can be secured only by use of genuine UNION SPECIAL Repair Parts as furnished by the Union Special Corporation, its subsidiaries and authorized distributors. They are designed according to the most approved scientific principles and are made with the utmost precision. The maximum efficiency and durability are assured.

Genuine repair parts are stamped with the Union Special trademark, U. S. Emblem. Each trademark is your guarantee of the highest quality in material and workmanship.

#### TERMS

Prices are strictly net cash and subject to change without notice. All shipments are forwarded at the buyer's risk f.o.b. shipping point. Parcel Post shipments are insured unless otherwise directed. A charge is made to cover the postage and insurance.


MAMORE MAQUINAS LTDA

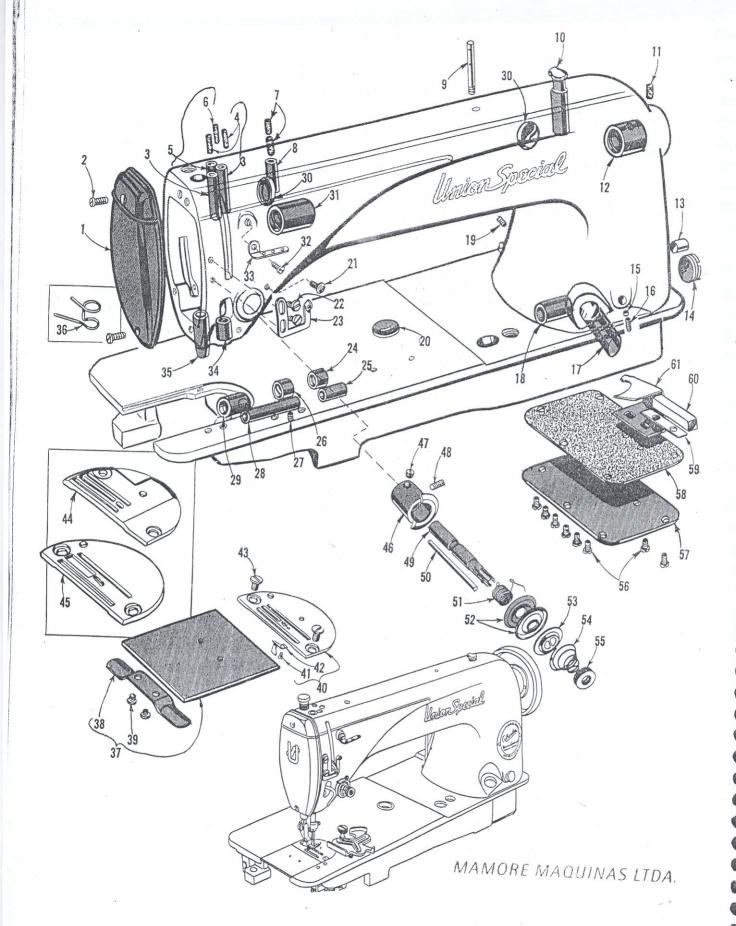

S. TEEAL


#### MAIN FRAME, MISCELLANEOUS BUSHING, COVERS AND PLATES

Dof	Down		
Ref.	Part No.	Description	Amt. Req.
1	B61382 H	Head Cover	1
2	22569 B	Screw	2
3 .	61293	Oil Tube	2
4	666-126	Oil Wick	
5 6	61393 C	Oil Tube	
7	666-127 666-20	Oil WickOil Wick	
8	61393 B	Oil Tube	
9	61272	Needle Thread Guide Pin	1
10	61394 AE	Oil Cup	1
11	666-104	Oil Wick	4
12	61490	Main Shaft Bushing, right	ī
13	50-558 Blk.	Plug	1
14	22539 D	Flug Screw	1
15 16	61245 G 22597 A	Stitch Regulator Thumb Screw Locking Insert	1
17	50-568 Blk.	ScrewOil Sight Gauge	1
18	61432 B	Feed Driving Shaft Bushing right	<u>I</u>
19	22597 A	Feed Driving Shaft Bushing, right	1
20	61449 H	Stitch Regulator Indicator Window	1
21	22863 B	Tension Assembly Adjusting Screw	1
22	22585 A	Screw	2
23	C2028	Thread Eyelet	1
24 25	61432 D 61341 D	Feed Driving Shaft Oil Retaining Bushing, right Hook Shaft Bushing, right	1
26	61432 E	Feed Driving Shaft Oil Retaining Bushing, left	1
27	95	Screw	1
28	61341 C	Hook Shaft Bushing, left	1
29	61432 C	Feed Driving Shaft Bushing, left	ī
30	61293 N	Plug, for inside of arm	2
31 32	61490 A	Main Shaft Bushing, left	1
33	22570 A 61271	Screw	1
34	61454	Needle Bar Bushing, lower	
35	61457 C	Presser Bar Bushing, lower	1
36	61470 F	Needle Bar Bushing Thread Guide, for Style 100 LS	
37	61402	Bed Slide	- 1
38	61273	Bed Slide Spring	- î
39	.91 A	Screw	- 2
40	C1017 P	Throat Plate, for Style 100 P	1
41	C1017 S 18-983	Throat Plate, for Style 100 S	1
42	C1018	Thread Retainer	1
43	376	Screw	- J
44	C1017 NTN	Throat Plate, for Styles 100 TN, 100 NTN	- 1
45	C1017 LS	Throat Plate, for Style 100 LS	- 1
46	61492 A	Tension Post Socket	- 1
47	89	Set Screw	- 1
48 49	22597 E	Set Screw	
50	61492 61292 G	Tension Release Pin	- 1
51	61453	Take-up Spring	- 1
52	109	Tension Disc	- 2
53	61292 H	Tension Release Washer	- 1
54	61392 F-9	Tension Spring	- 1
55	61292 C	Tension Nut	
56	22570 A	Screw	
57 58	61382 J	Cover, for feed driving shaft gear case	- 1
59	61282 D 61394 R	Gasket	- 1
60	61394 Q	Oil Distributing Plate Retaining Block	- 1
61	61394 P	Oil Distributing Plate Retaining Block	- 1
		•	

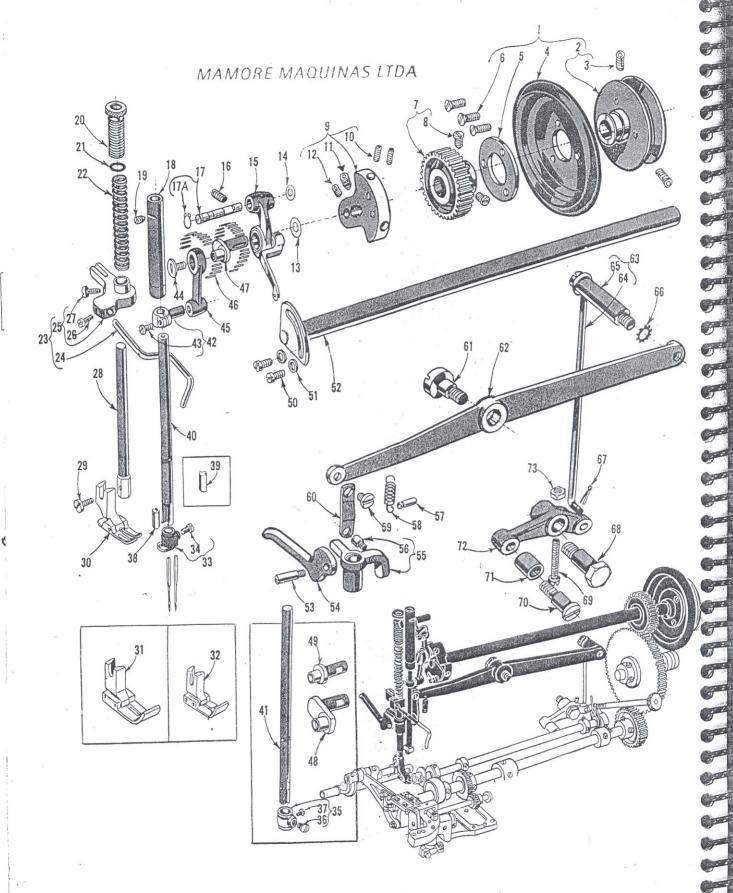


## UPPER SHAFT, PRESSER BAR, NEEDLE BAR, AND FOOT LIFTER MECHANISM

Ref. No.	Part No.	Description	Amt.
1	61421		Req.
2	61421 A	runey nun	-
3	22894 AB	Screw	-
4	61321 J	Handwheel	7
5	61321 L	Hub Washer	-
6	22574 61360	Screw	-
8	22884	Main Shaft Driving Gear	- 1
9	61391 C	Screw	- 2
10	22894 V	Main Shaft Counterweight	- 1
11	22894 U	Spot Screw for Styles 100 P, 100 S	- 2
	22596 F	Set Screw for Styles 100 LS, 100 NTN	- 1
12	22894 W	Del octem	_
13	61351 C	Inrust washer	_
14	61451 C	Inrust wasner	7
15	61351 Q	Take-up Lever Assembly for Styles 100 P. 100 S. 100 NTN	
1.0	61451 H	Take-up Lever Assembly for Style 100 LS	
16	22597 A 61251 D	OCLGA	
17A	660-205	Take-up Lever Pin	
18	61454 D	Retaining Ring	1
19	96	Needle Bar Bushing, upperScrew	1
20 .	61457 B	Presser opring Regulator	
21	61256 G	washer	
22	61256	riesser opring	
23	29475 AB	Take-up Inread Wire Assembly	
24	61453 B	Take-up Spring Thread Wire	
25	61459 A	Fresser Bar Guide	
26 27	77 93 A	ocrew	
28	61457	Screw	
29	22775	Presser Bar	
30	C1015 P	Screw	
	C1015 S	Presser Foot for Style 100 P	
31	C1015 LS	Presser Foot for Style 100 LS	
32	C1015 NTN	Presser Foot for Style 100 NTN	A
33	C1022	Needle Clamb for Styles 100 P 100 S 100 NTM	
34	22562	Del Delemanne	
35	C1022 LS	recute Claim for Style IIII I Seesenses	1
36 37	18-623	Del Deleger	1
38	18-621 C1021 P-062	Det Derew	-
00	C1021 P-002 C1021 P-073	Needle Spacer for Style 100 P	-
39	C1021 S	Needle Spacer for Style 100 NTN	1
40	C1020	Needle Spacer for Style 100 S	1
41	C1020 LS	Needle Bar for Styles 100 P, 100 S, 100 NTN	1
42	61255	Needle Bar Connection	1
43	22562 B	DCTeW	1
44	22757 C	OCLEAnsonersansorersansonersansonersansonersansonersansonersansonersansonersansorersansonersansonersansonersansonersansonersansonersansonersansorersansonersansonersansonersansonersansonersansonersansonersansorersansonersansonersansonersansonersansonersansonersansorersansorersansorersansorersansorersansorersansorersansorersansorersans	7
45	61255 H	Needle Bar Link for Styles 100 P 100 S 100 NTN	
4.0	61455 C	Needle Bar Link for Style 100 LS	
46	61351 K-625 61351 K-626	riceure Dearlings, 10020 inch diameter	
	61351 K-627	ricedie Dearings Unch inch diameter	
47	61452 A	recute Dearings, . 002/ Inch diameter	38
48	C1036 LS	Crank Pin for Styles 100 P, 100 S	1
49	C1036 NTN	Crank Pin for Style 100 NTN	1
50	22596 D	DCLGM	1
51	8372 A	Wasner	2
52 53	61322 B 22799 M	Main Shair	1
54	61265	Screw Pin	1
55	61458	nam Liner	1
56	22892	Presser Bar Connection Screw	1
57	61267 G	DAYTHE LINGUIGHT CONTRACTOR OF THE PROPERTY OF	1
58	15872 F	DUTILE	1
59	22758 B	DCLCMaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa	1
60	61267	Differ Dever Dink	1
61 62	22890	SCIEW. IEIL INTERNESSESSESSESSESSESSESSESSESSESSESSESSESS	1
63	61466 A 61368 A	THEI DEALL STATES	1
64	61368 A	Enter Lever Extension Stud and Connecting Rod complete	î
65	61366 C		î
66	652 B-20	Lock Washer	1
67	660-142	Coller Libertaine and a second	1
68	22817 A		1
69	22874 F	DCTCW===================================	1
	22712 F	DCTEW	į.
	61368 F		1
72 73	61468 9937	Liller Lever Bell Crank	-
10	3331	Nut	
			10

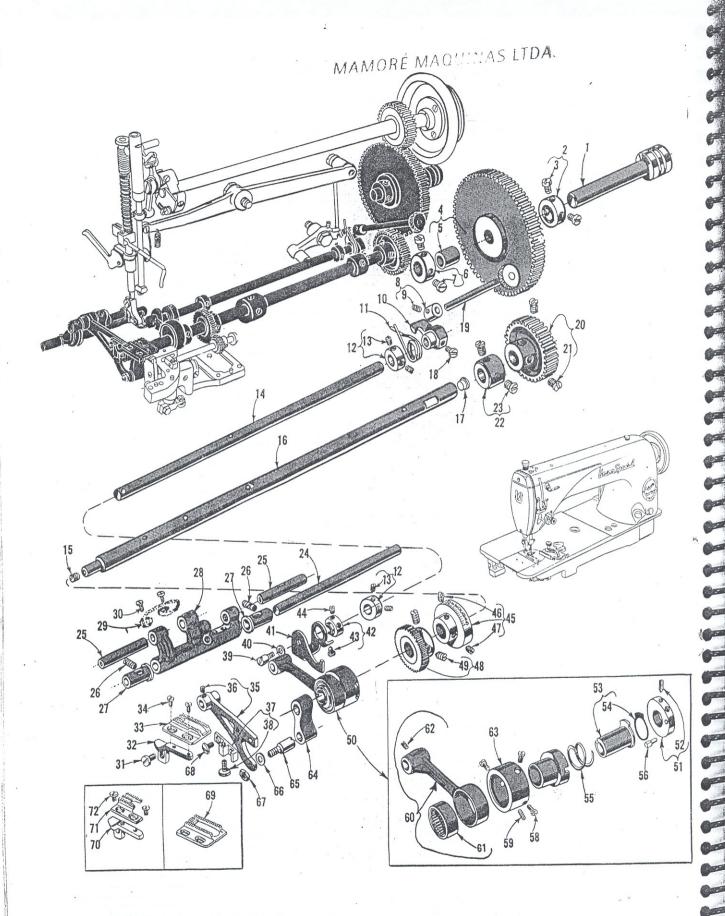

#### FEED DRIVING AND STITCH REGULATING MECHANISM


			ELECTIVE WILL STITCH REGODATING MECHANISM	
•	Ref.	Part No.	Description	Amt.
	1	62262	Intermediate Gear Shaft	Req.
	2	61264 HA61 D	Intermediate Gear Shaft Collar, right	- 1 - 1
	4	61261 A	Feed Driving Intermediate Gear	- 2
	5 6	61263 61264 A	Feed Driving Intermediate Gear	- 1
	7	IIA61 D	Intermediate Gear Shaft Collar, left	
	8	161 88	Collar Screw	
99	10	61246 A	Stitch Regulator Plunger Lever	
	1 1 1 2	61447 61248 H	Stitch Regulator Plunger SpringStitch Regulator Plunger Spring	- 1
	13	531	ocrew "	
	1 4 1 5	61348 A 22743	Stitch Regulator Shaft Plug Screw	
	16	61132 D	Feed Driving Shaft, for Styles 100 P. 100 S	- 1
	17	61432 K 50-552 Blk.	Feed Driving Shaft, for Styles 100 LS, 100 TN, 100 NTNPlug	
55007	18	93 A	Screw	
	19	61445 61260 A	Stitch Regulator PlungerFeed Driving Shaft Gear	7
	21	22884	Screw	_
	22 23	61360 G 22884	Feed Driving Shaft CollarScrew	
	24	61236 G	Hood Rookon Shoft ========	6.0
	25 26	63435 A 22894 E	Feed Bar and Feed Rocker Connection Link Shaft  Screw  Bushing  Feed Rocker  Feed Rocker	- 2
	27	61336 U	Bushing	- 2
	28 29	61236 61336 Y		
200	30 31	90 22528	Screw	-
	32	63439 A	ScrewFeed Dog Holder for Styles 100 P. 100 S. 100 L.S	1
	33 34	C1016 P 22768	Feed Dog Holder for Styles 100 P, 100 S, 100 LSFeed Dog for Styles 100 P, 100 S	. 1
3	35	63434 C	Screw Feed Bar	2
	36 37	89 63439 AL		
	38 39	22775 A	Feed Dog Holder Support	1
	10	22802 A 51242 M	Washer	1
-	12	61449 F 61449 E	Stitch Regulating Pawl	-
4	13	22880	Stitch Regulating Pawl Collar	1
94 4	14	22845 G 61149	ScrewStitch Length Indicator	
900	6	95	Set Screw	-
100	8	96 61443	Time Spot Screw	1
	9	22894 J 29126 DU	Hook Shaft Driving Gear Set Screw	2
	O	29126 DT	Feed Drive Eccentric Assembly, for Styles 100 P, 100 S, marked "DU"Feed Drive Eccentric Assembly, for Style 100 LS, marked "DT"	1
35	1	29126 DS • 61437 A	reed Drive Eccentric Assembly, for Styles 100 TN, 100 NTN, marked "DS"	1
5	2	22764 B	Feed Driving Eccentric Timing CollarTime Spot Screw, for Styles 100 P, 100 S	1
5	3	719 61149 G	Time Set Screw, for Styles 100 LS, 100 TN, 100 NTNStitch Regulating Eccentric, for Styles 100 P, 100 S	1
5	4	61449 AB	Stitch Regulating Eccentric, for Styles 100 LS 100 TN 100 NTN	1
5		61149 H 61449 B	Stitch Regulating Eccentric Friction Disc	1
5	6	61437 B 61437 U	reed Driving Eccentric Pivot Pin, for Styles 100 P. 100 S	1
	(		Feed Driving Eccentric Pivot Pin, for Styles 100 LS, 100 TN, 100 NTN	
$\frac{58}{59}$		22564 B 719	Screw1 o.	3
50 61	)	61438 C 660-226		
S	2	88	Needle Bearing	1
54	5 1	61437 C~ 61233 N	Feed Link	1
56	5	22845 D	Feed Link Studenessessessessessessessessessessessesses	-
56	7	61434 G 15037 A	WasherNut	_
58	3	88 D C1016 LS	Screw Feed Dog, for Style 100 LS	
70	)	61439 AW		
72		C1016 NTN 22768	Feed Dog, for Styles 100 TN, 100 NTN	1
				5
			AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA	

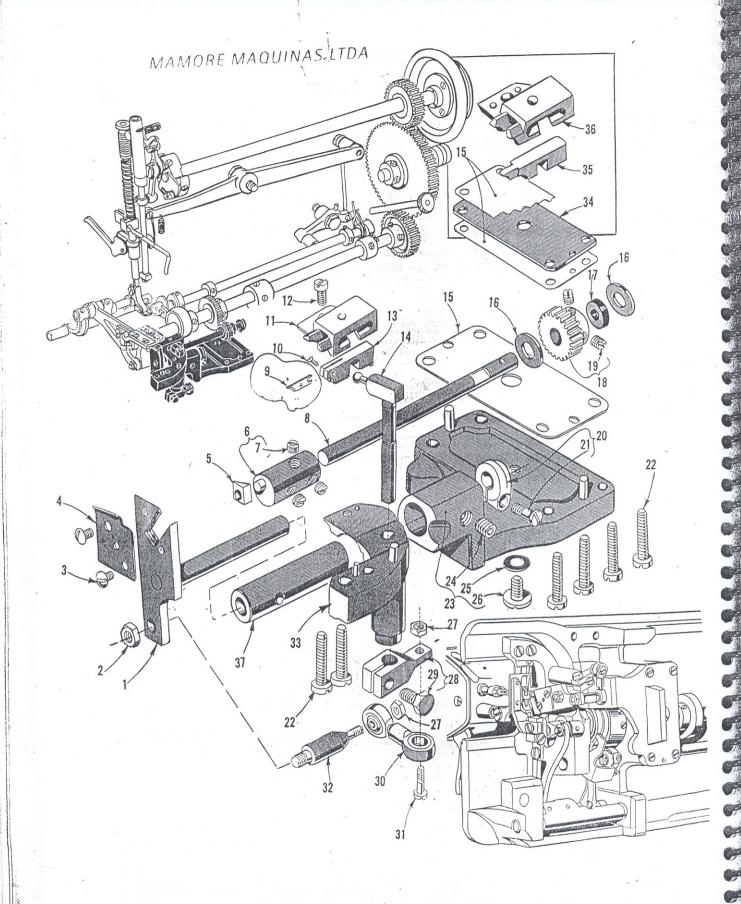

# HOOK, PLUNGER, AND DRIVING MECHANISM

Ref.		Part No.	Description	Amt. Req.
1		C1033 P C1033 S	Hook Carrier for Styles 100 P, 100 NTN Hook Carrier for Style 100 S, 100 LS	- 1,
2		1160 L	NutScrew	_ 1
3		C717	Looper Hook	- 1
4		C1008 P C1032	Slide Block	- 1
6		C1032	Hook Shaft Barrel for Styles 100 P, 100 S,	- 1
		C1030 LS	Hook Shaft Barrel for Style 100 LS Set Screw	- 1 - 3
<b>№</b> 7 8.		18-634 61440 A	Hook Shaftanananananananananananananananananana	- 1
9		C1023	Plunger for Styles 100 P. 100 S. 100 NTN	- 1
10		18-134	Screw for Styles 100 P 100 S. 100 NTN	1
11		C1019	Plunger Block for Styles 100 P, 100 S, 100 NTN	. m. T
12		22562 A	SOYOWILL	
1.3	0	C1024 P	Plunger Slide for Styles 100 P, 100 NTN Plunger Slide for Style 100 S	- 1
14		C1024 S C1025	Plunger Ball Crank	- 1
15		61482 R-3	Shim Gasket 003 inch thick (as required)	
		61482 R-10	Shim Cocket ()1() inch thick (as required)=======	
16		61341 J	Thrust Wocher	- 2
7		61341 G	Oil Seal Washer	1-
1.8		61244	Hook Shaft Pinion	2
19		89		1
20		439 <b>-</b> C116 R 22562 A	SOROWALLERS	1
22		22874		6
23		C1002 P	Hook Brocket	1
24		22650 AD-4	Set Screw	1
2.5		660-257	Gasket	1 1
26		18-C87	Nut	2
27		1311 L C1029 LS	Di Casala	mp (000)
2,8		18-715	Clomp Sorow management and a constant	
-0		C1034	Roll Toint and	
\$1		916 L		1
32		C1035	Connection Stud	1 1
3		C1027	Plunger Bracket	1 1
4		C1069	Gasket for Style 100 LS	1
35		C1024 LS	Plunger Block for Style 100 LS ===========	1
7		C1019 LS C1000-1	Hook Carrier Shaft Bushing	ī
		010001		


MAMORÉ MAQUINAS LTDA

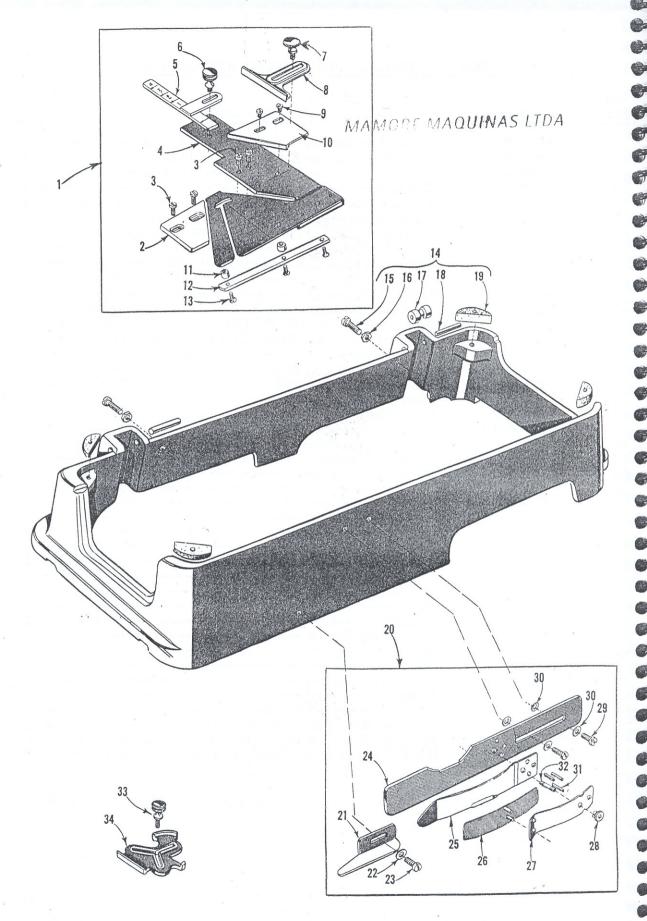

## ATTACHMENTS

Ref.	Part No.	Description	Amt. Req.
1	C1078 A	Tie Centralizer Plate, complete, for Styles 100 TN,	1
2	C1073	Adjusting Plate, left	1
3	22585	Mounting Screw	
4	C1077 A	Centralizer and Plate Assembly	
5	C1049 A	Reference Plate and Bracket Assembly	
6	22551 B	Knurled Thumbscrew	
7	15489 B	Knurled Thumbscrew	1
8	C1059	Edge Guide	1
9	22513	Screw	2
10	C1074	Adjusting Plate, right	
11	C1054	Washer	
12	C1053	Tape Bar	
13	87 A	Screw	3
14	C1039 A	Machine Base, complete, for Styles 100 TN,	
1 =	CEO AD C	100 NTN	
15 16	650 AD-6 651 H	Nut	
17	C1042	Hinge Pin Collar	
18	39132 G	Hinge Pin	
19	61476	Felt Pad	
20	C1076 A	Lining Stretcher Gauge, complete, for Styles	7
		100 TN, 100 NTN	1
21	C1066	Lining Guide	<b>1</b>
22	40-38	Washer	1
23	650 AD-5	Screw	1
24	C1061	Back Plate	
25	C1075	Bottom Lining Pad	
26	C1072	Spring	
27	C1071	Spring	
28	20-C616	Nut	
29	650 AD-5	Screw	
30	40-38	Washer	
31 32	22-C214-2 68-C614	Pin	
33	G26		
34	61403 B	Screw, for Styles 100 P, 100 S, 100 LS	
0 1	OT TOO D	mage datae, for printed root, roop, rooms	1

MAMORÉ MAQUINAS LTDA

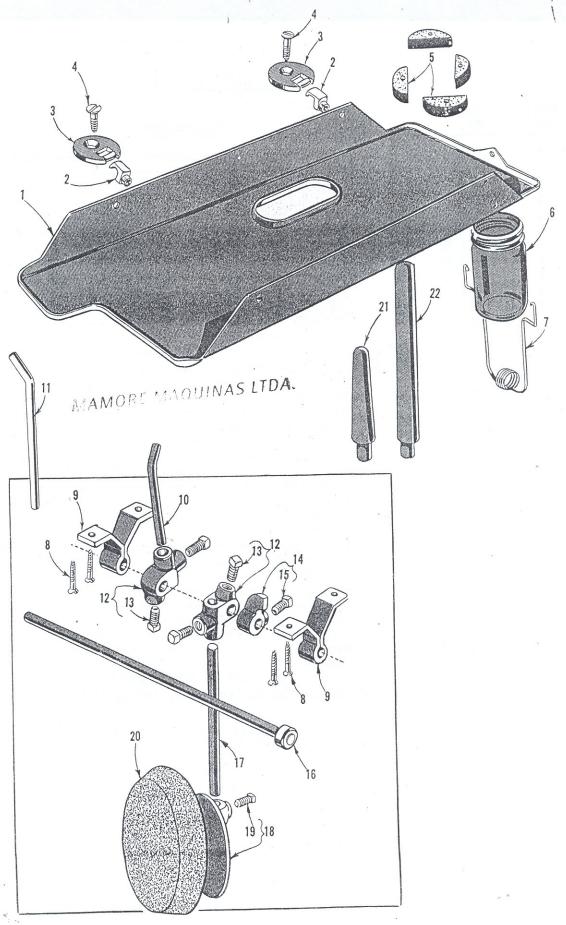

## INSTALLATION ACCESSORIES

Statement of the			-	
	Ref.	Part		Amt.
	No.	No.	Description	Req.
	1	21393 E	Drip Pan	
	2	61175	Hinge Stud	- 1
	3	61374	Hinge Plate for Styleg 100 D 100 G 100 FG	- 2
	4	22846 Q-16	Hinge Plate for Styles 100 P, 100 S, 100 LSFlat Head Wood Screws for Styles 100 P, 100 S,	- 2
	5	61376 G	Felt Pad for Styles 100 D 100 C 100 rd	- 2
.0	6	666-166	Felt Pad for Styles 100 P, 100 S, 100 LS	- 4
	7	21393 F	Oil Drain Jar, glass	- 1
	8	SC329 A	Oil Drain Jar Clamp Spring	- 1
	9	21662 C	Wood Screws, for knee lifter hanger	- 4
	10	21665 C	Knee Lifter HangerKnee Lifter Rock Shaft Connection Arm for	- 2
			Styles 100 P, 100 S, 100 LS	4
	11	C1038	Knee Lifter Rock Shaft Connection Arm for	_ 1
			Style 100 NTN	
	12	21665	Knee Lifter Rock Shaft Connection	- 1
	13	69 FD	Screw	- 2
	14	21661 D	Knee Lifter Rock Shaft Stop	- 2
	15	69 FD	Screw	- 1
-	16	21661 P	Knee Lifter Rock Shaft	- 1
	17	21663 C	Knee Lifter Plate Rod	- 1
	18	21664	Knee Lifter Plate	• 1
	19	69 FD	Screw	. 1
	20	660-168	Knee Pad muhhan	1
	21	61378	Knee Pad, rubber	1
	22	61378 A	Machine Rest Pin for Styles 100 P, 100 S, 100 LS	1
			Machine Rest Pin for Style 100 NTN	1

MAMORE MAQUINAS LTDA

## NUMERICAL INDEX OF PARTS

			T. O III B ICI CT	113 1141	LIN O	FFARIS			
Part	Page	Part		Page	Part		Page	Part	Page
No.	No.	No.		No.	No.		No.	No.	No.
18-C87	25	C1024	P	25	22775		21	01000	
18-134			S			A			K-62721
18-621			LS 2			M			Q21
18-623	21		2			Α			21
18-634	25			25		Α			G23 C21
18-715			LS 2		22845	D	23		
18-983	19		2		22845	G	23	61368	A
20-C616 22-C214-2	27		LS 2			Q-16		61368	F21
G26			P 2			В		61374.	29
40-38	27		S 2			F		61376	G29
50-552 Blk	23							61378.	
50-558 Blk	19		2		22884		21 23	01378	A29 H19
50-568 Blk			LS 2		22890		21	61382	J 19
HA61 D		C1036	NTN 2	1	22892		21	61391 (	C
68-C614		C1038	• • • • • • • 2	9	22894	E	23 1 TD	A 61392 T	F-919
69 FD			A2		22894	JAGUINA	23 110	61393 I	В19
77 · · · · · · ·				1.	22894	FAGUINA V.	21	61393 (	C 19
87 A			A 2		22894	U	21	61394 I	P
88 D					22894	W	21	61394 Q	Q19
	19, 23, 25	C1059			20126	AB DS	21		R 19
90	23				29126	DT	23		AE19
91 A	19		2'		29126	DU	23	61402.	
93 A			25			AB		61403 1	B
95		C1071	2'	7	39132 (	G	27	61421	A
96		C1072	2'	7	51242	M	23		B
109			2'		611321	D	23 -		C 19
161								61432 E	019
SC329 A			27					61432 E	E 19
439-C116 R.			A 27			G		61432 K	ζ23
531		C1077	A 27	7		Н			G23
650 AD-5						V			A23
650 AD-6						• • • • • • • • • • • • •			323
651 H		C2028	19	)		3			J
652 B-20			4		61244		25	61438 C	223
660-142			21		61245 C	J	19	61439 A	W23
660-168 660-205	21		2 23			<u>j</u>		61440 A	1 25
660-226	23	15979 1	3			I		61443	23
660-257		21393 H	5					61445	23
666-20	19		729			H		61447	323
666-104								61449 E	223
666-126	19		29		61256 C	2	21	61449 F	23
666-127 666-166		21662 (				2		61449 H	I
C717		21663 (	29			2		61449 A	В
719						2	3	61451 C	21
916 L	25						3	61451 H	121
C1000-1	25				61 265.		1	61452 A	21
C1002 P	25	22528	23		61267	2	1 .		
C1008 P		22539 D	19		61267 G	2	1		
C1015 P	21		27	1	61271 .	1	9	61454 D	
C1015 S					61272 .		9	61455 C	21
C1015 LS C1015 NTN	21			(	61273 .		9	61457	21
C1016 P	23	22362 B		- (	51282 D		9	61457 B	
C1016 LS	23	22569 B		(	01292 C	1	9 .	61457 C	
C1016 NTN	23		19					61450 A	21
C1017 P	19	22574 .						61466 A	21
C1017 S	19				31293 N	19	9	61468	
C1017 LS	19	22585 A		. 6	31321 J	2	ĺ	61470 F	
C1017 NTN			21	6	31321 L	2	1	61476	27
C1018		22596 F		6	1322 B		l	61482 R-	-325
C1019 LS	25	22597 A	19,		1336 U	23	3	61482 R-	-1025
C1020	21	22091 E				23			
C1020 LS	21	22650 A	D-425			19			
C1021 P-062	21					25		61492 A	
C1021 P-073	21	22743	23	6	1341 J	25	5	62262	
C1021 S	21	22757 C	21	6	1348 A.		3		
C1022 LS	21		21	6	1351 C.	21		63435 A	23
C1022 L5				6	1351 K	-62521		63439 A	23
		20100		6	1321 K.	-62621		03439 111	L23





\*UNION SPECIAL maintains sales and service facilities throughout the world. These offices will aid you in the selection of the right sewing equipment for your particular operation. Union Special representatives and service men are factory trained and are able to serve your needs promptly and efficiently. Whatever your location, there is a Union Special Representative to serve you. Check with him today.

ATLANTA, GA.

BOSTON, MASS.

CHICAGO, ILL.

DALLAS, TEXAS

LOS ANGELES, CAL.

NEW YORK, N. Y.

PHILADELPHIA, PA.

MONTREAL, CANADA

TORONTO, CANADA

BRUSSELS, BELGIUM

LEICESTER, ENGLAND

LONDON, ENGLAND

PARIS, FRANCE

STUTTGART, GERMANY

Representatives and distributors in all important industrial cities throughout the world.

MAMORE MAQUINAS LTDA.

UNION SPECIAL CORPORATION