

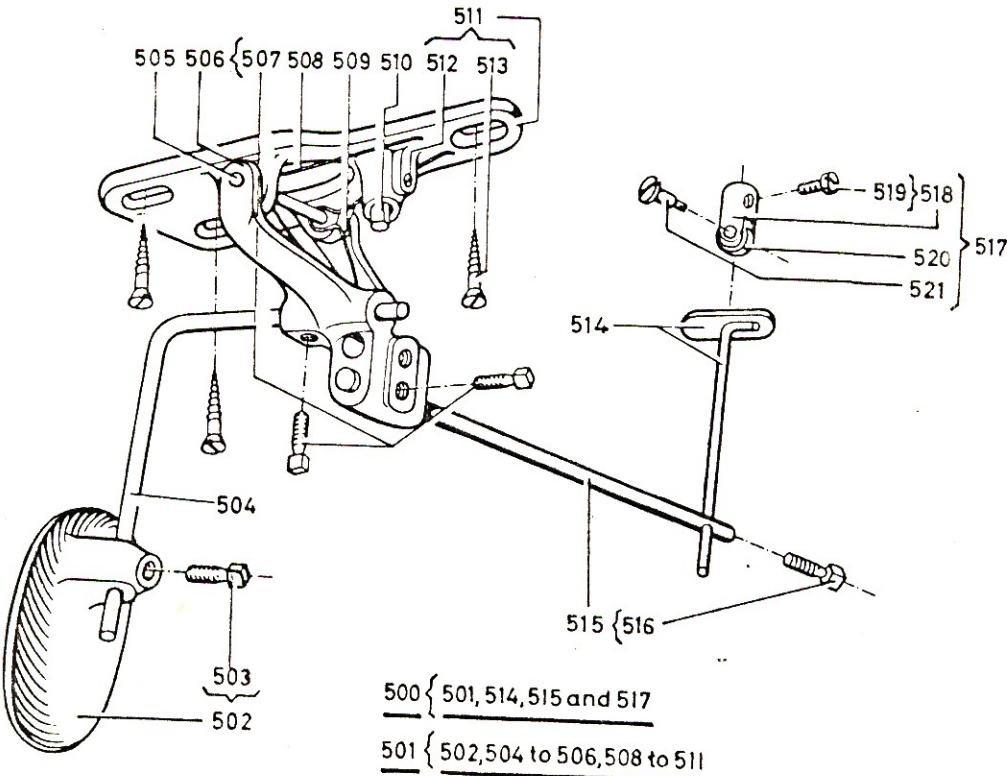
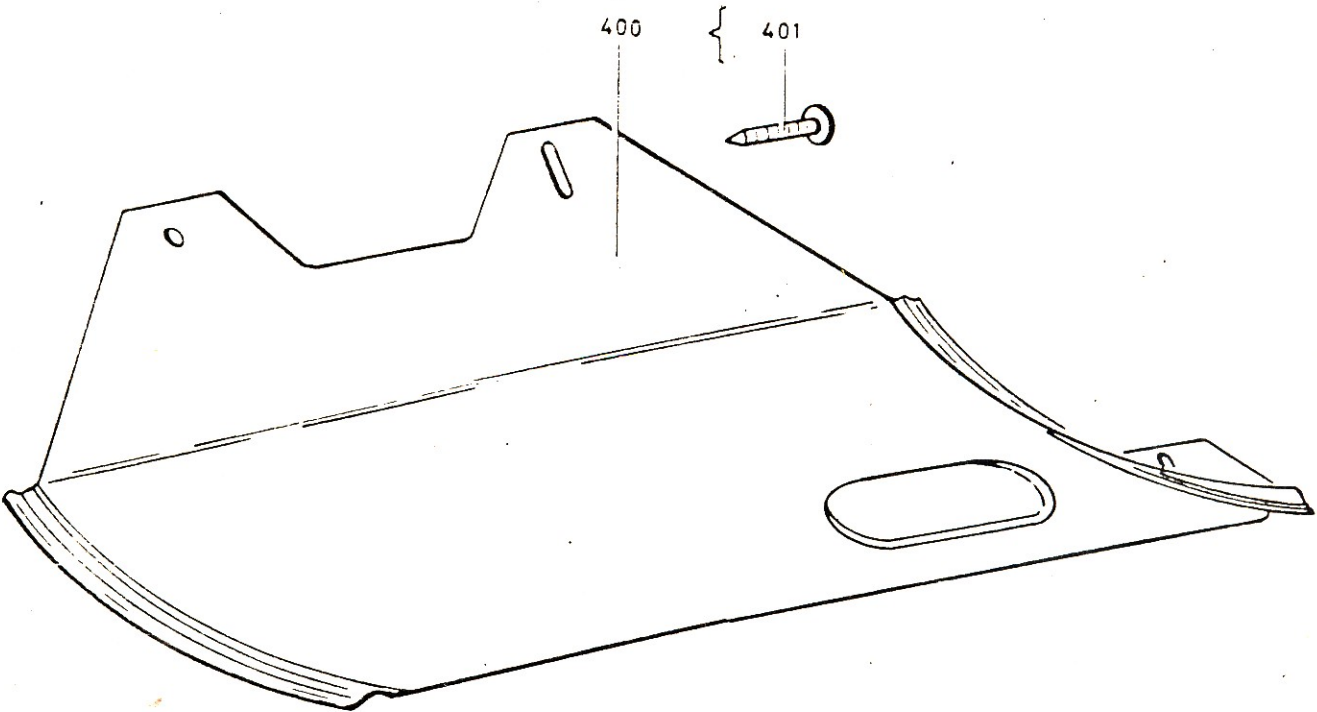
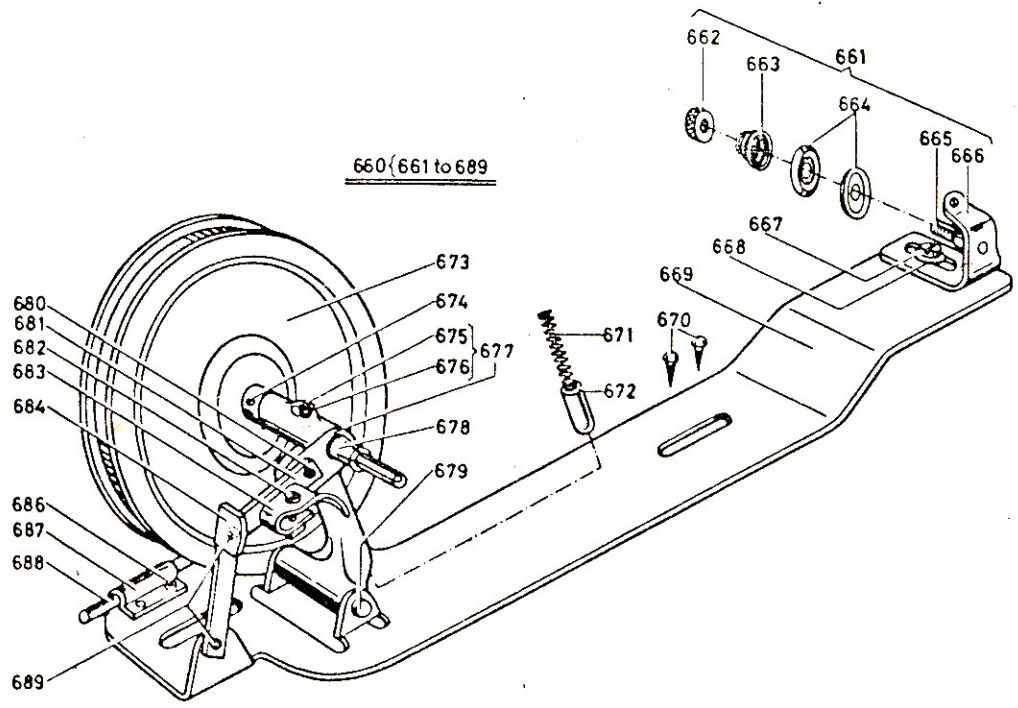
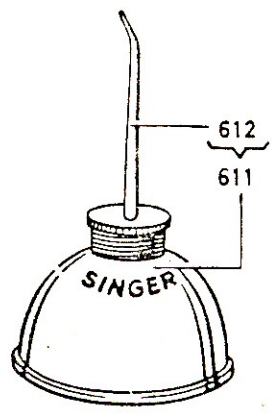
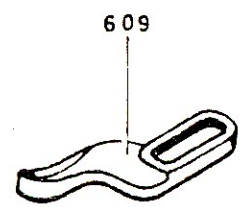
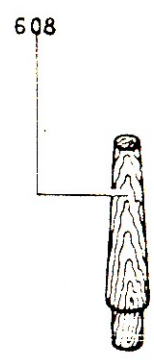
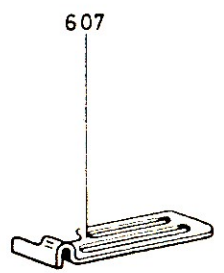
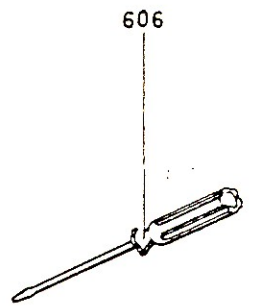
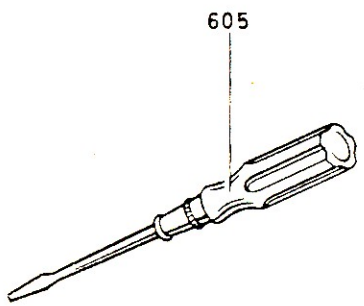











SINGER


107 G 201


Accessories
FOR
107 G 201

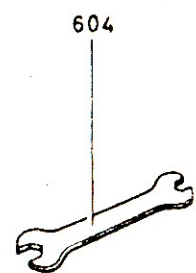

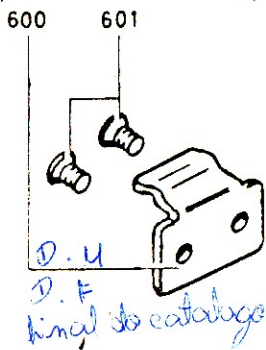

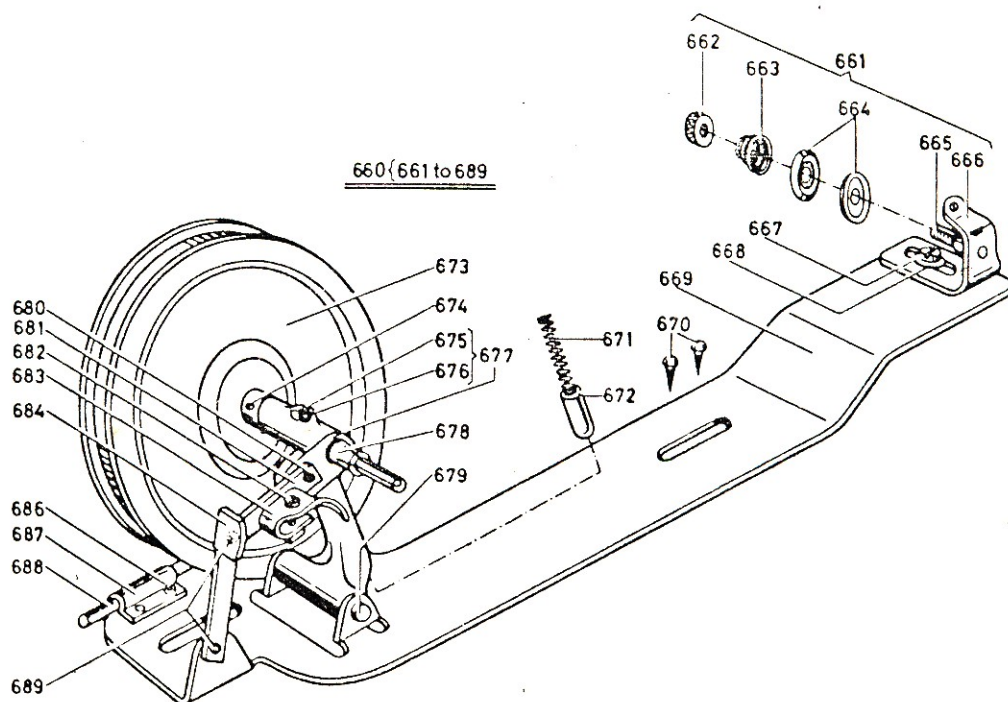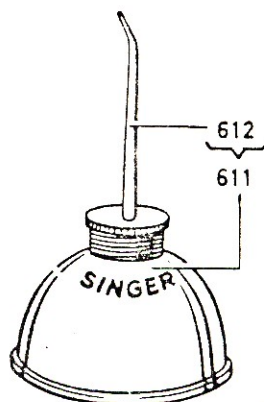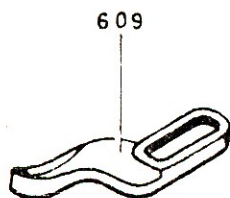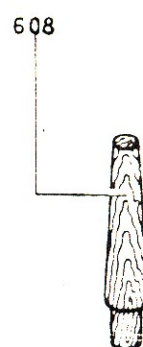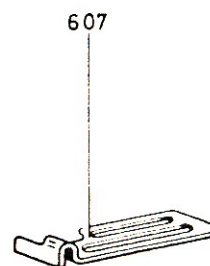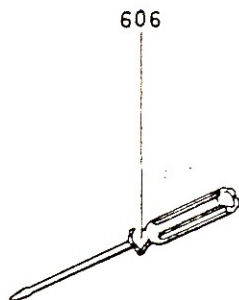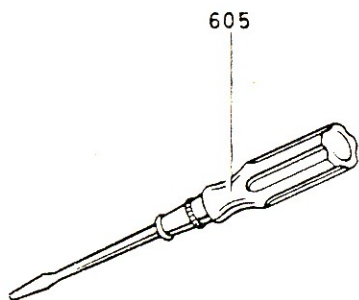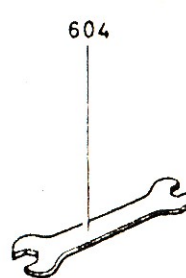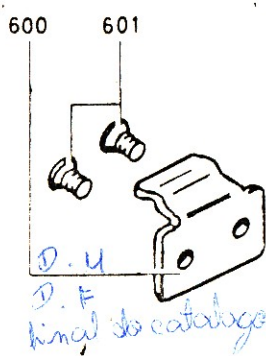

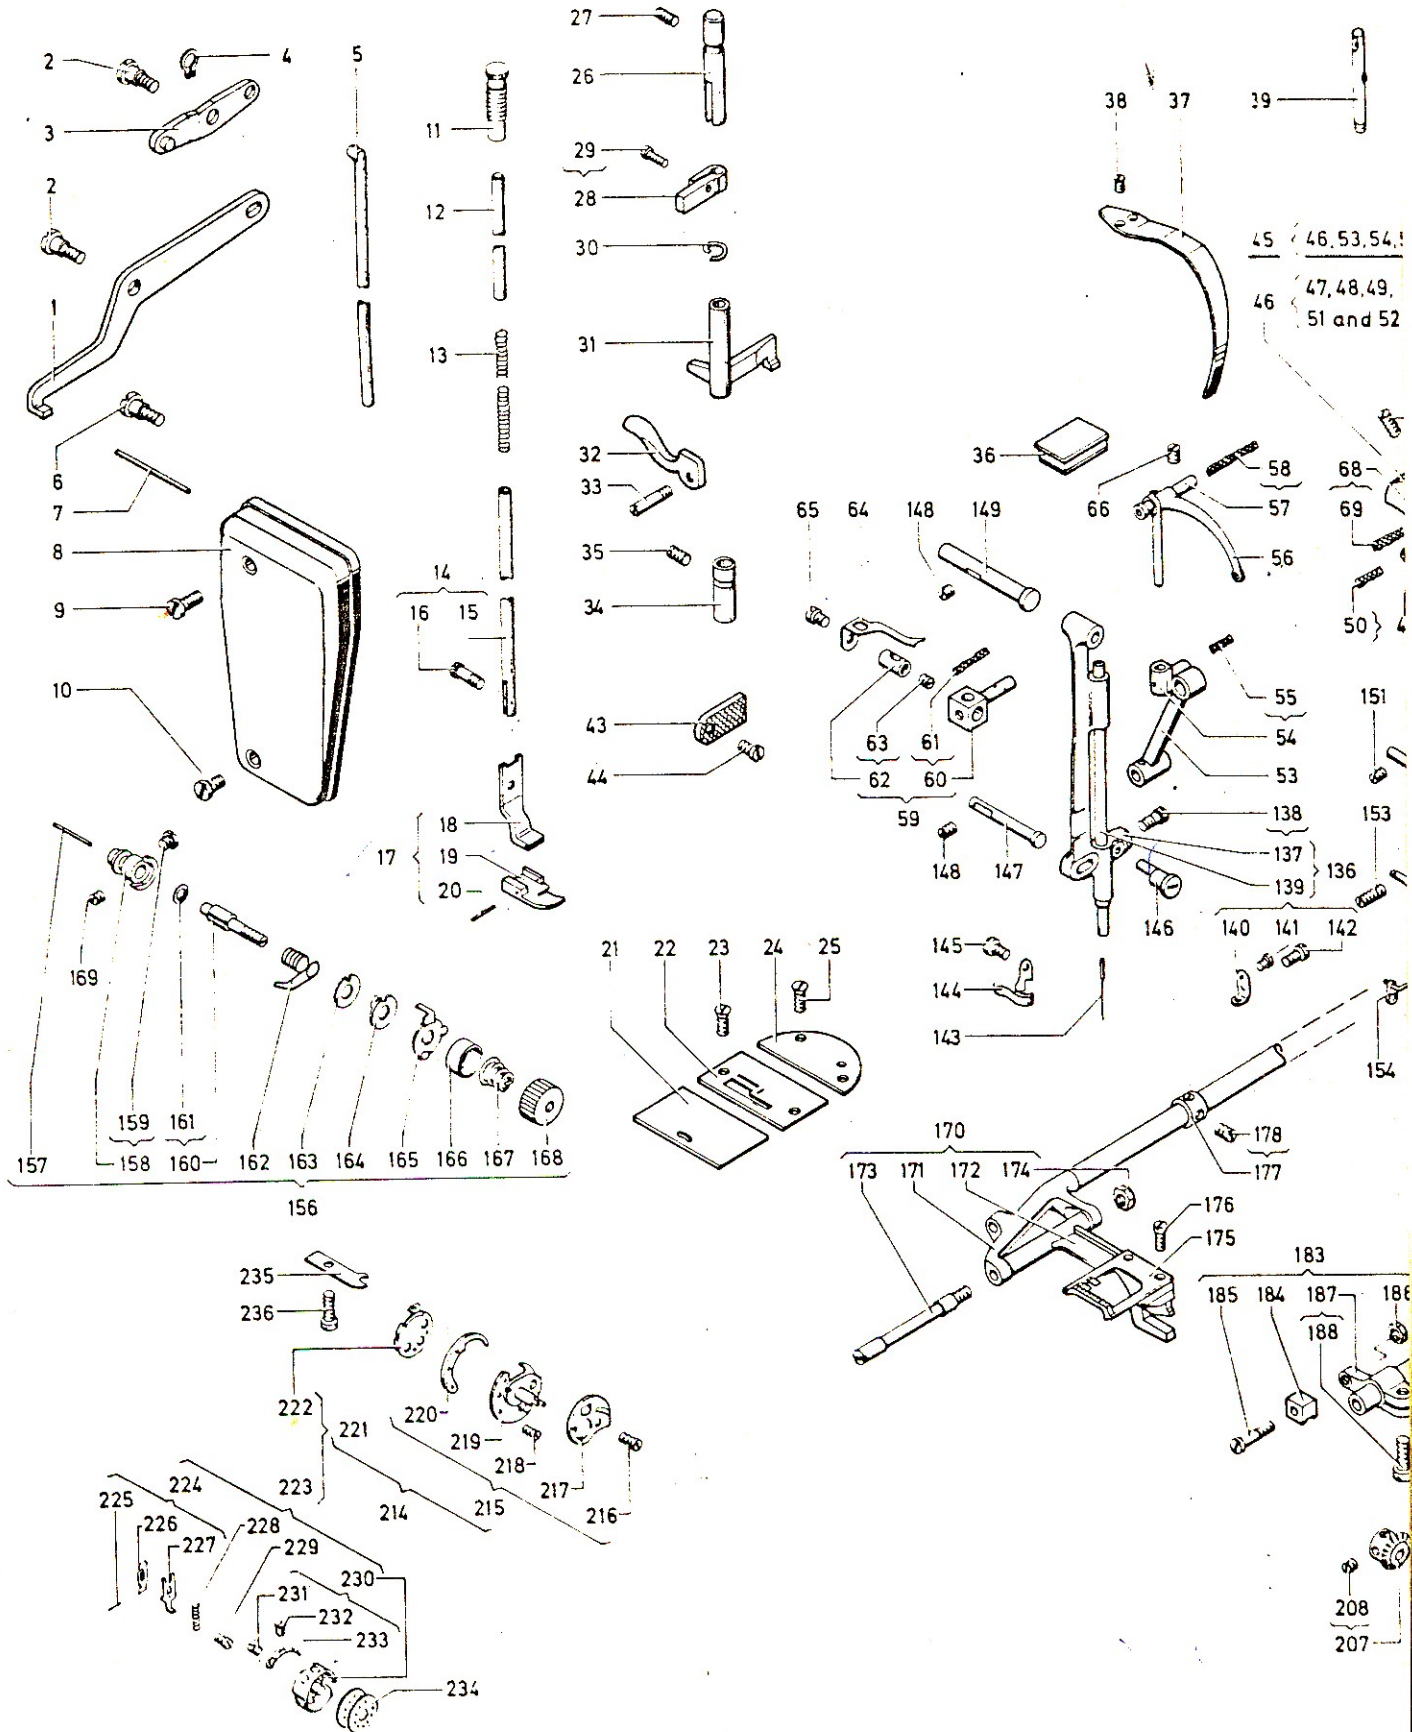

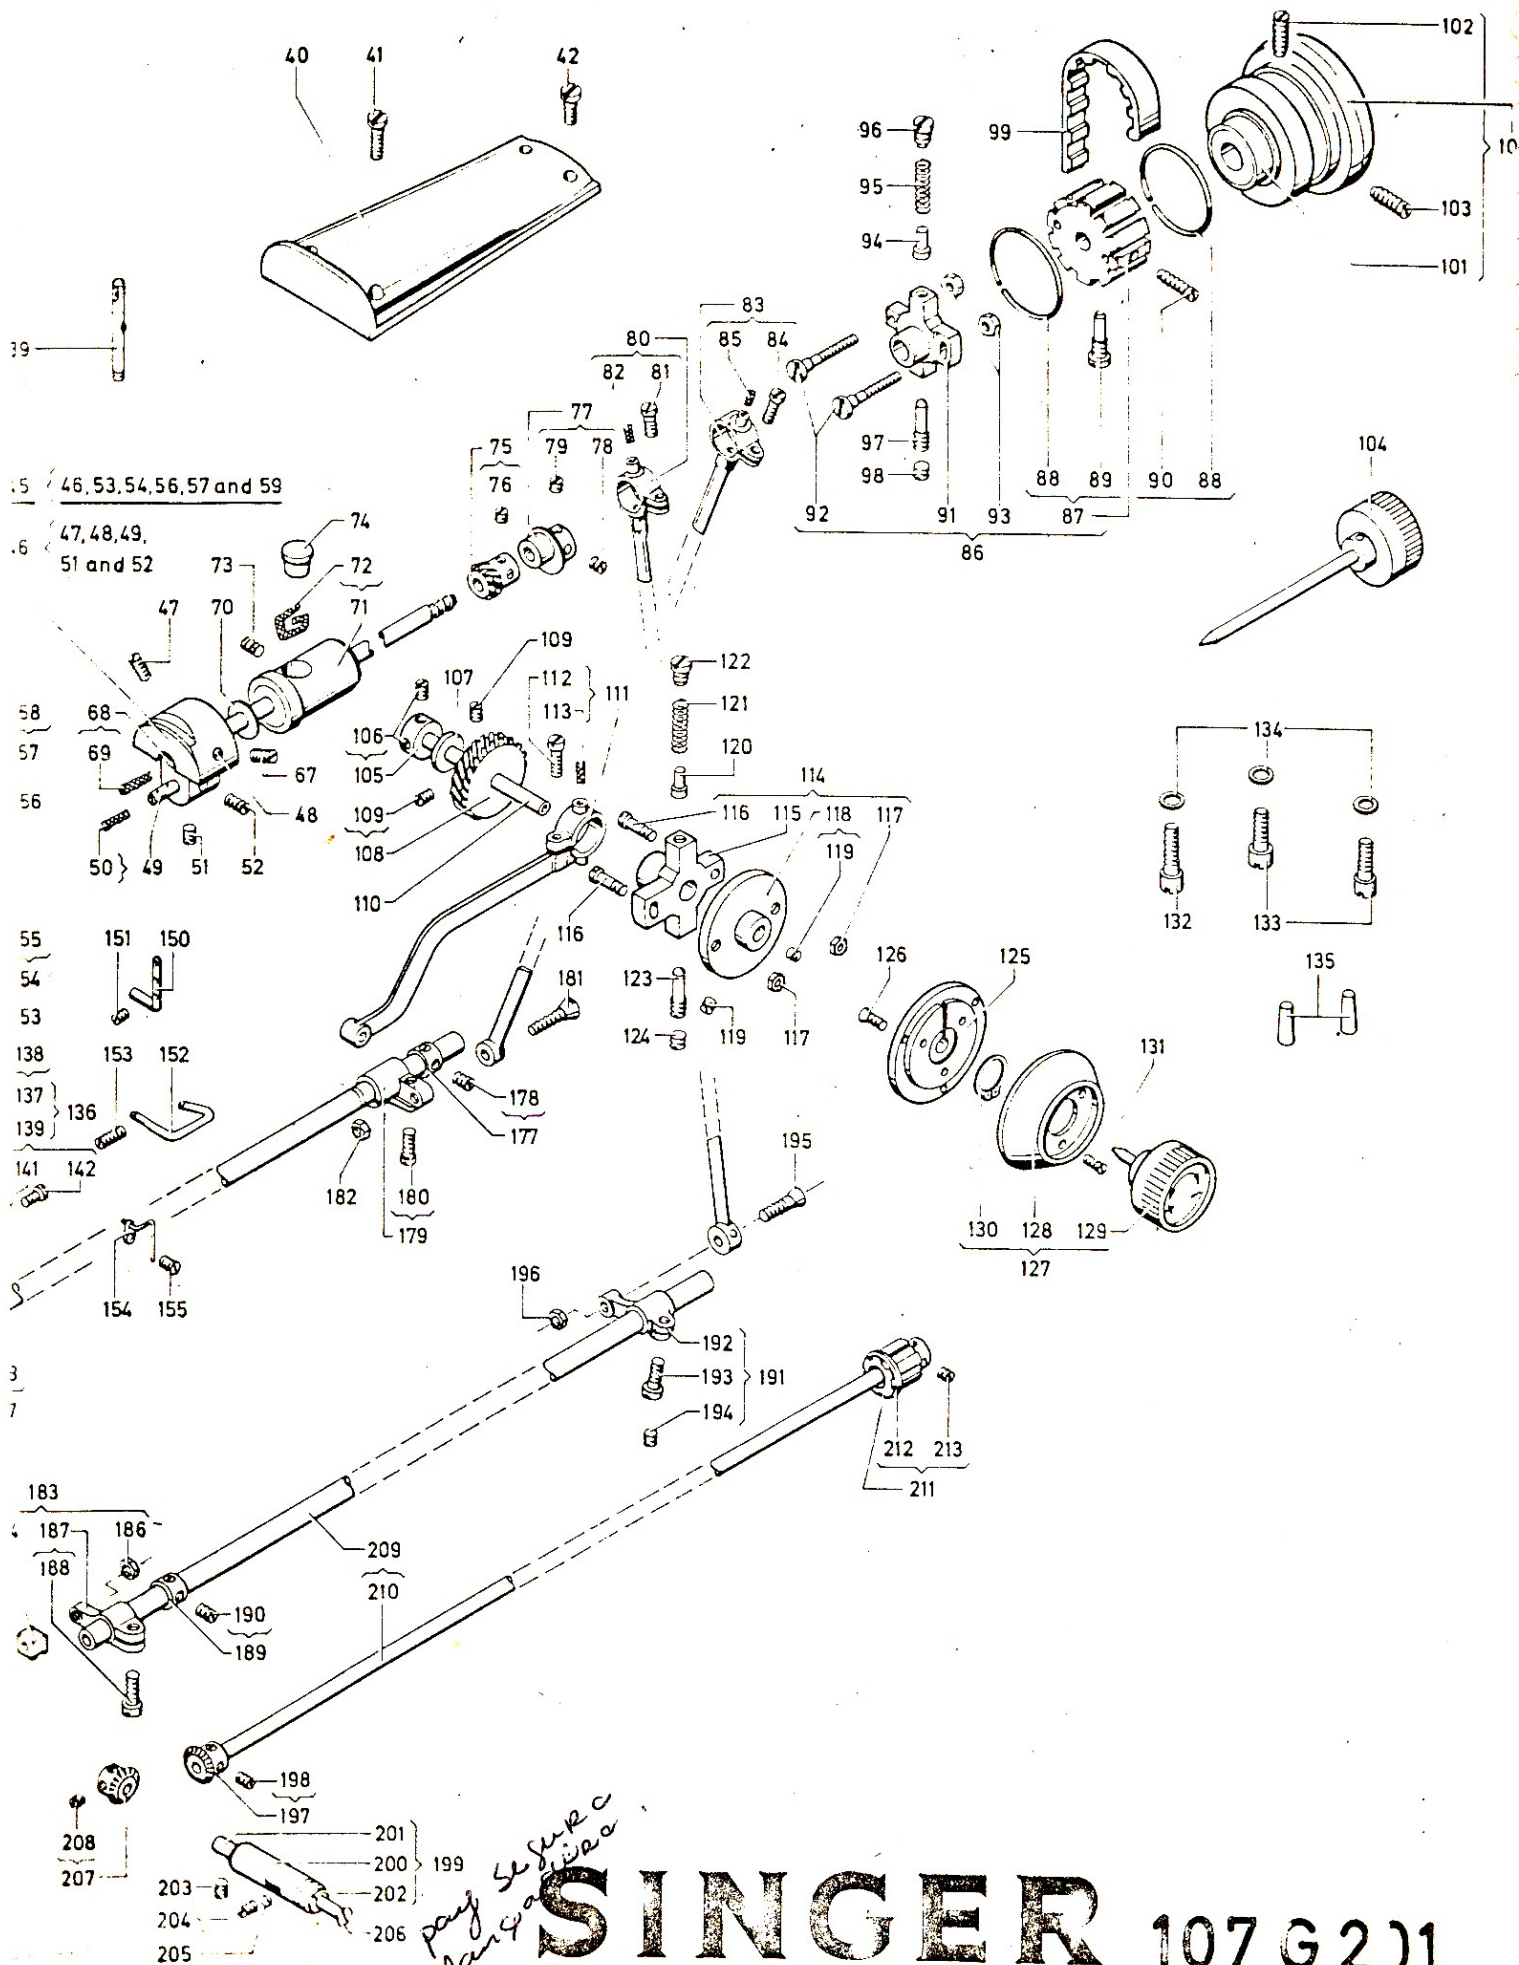

SINGER 107 G 201

Illustr. Ref. No.	Part No.	Name	Components
1	508158	Knee Lifter Lifting Lever	
2	200262-850	Knee Lifter Lifting Lever Hinge Screw (2)	
3	508159	Knee Lifter Connection Lever	
4	502830	Knee Lifter Connection Lever Lifting Rod Grip Ring	
5	508161	Knee Lifter Connection Lever Lifting Rod	
6	200260-850	Presser Bar Lifting Releasing Lever Bracket Guide Screw	
7	508182	Tension Release Plunger	
8	508154	Face Plate	
9	1186-850	Face Plate Screw	
10	164-850	Face Plate Screw	
11	200492-850	Presser Bar Thumb Screw (Pressure Regulating)	
12	202346	Presser Bar Spring Stop Rod	
13	202343	Presser Bar Spring (Light)	
14	202335	Presser Bar Cpl.	200074, 244033
15	244033	Presser Bar (Hollow)	
16	200074-850	Presser Foot Screw	
17	210562	Presser Foot (Hinged) Cpl.	203027, 210620 230795
18	210620	Presser Foot Shank	
19	203027	Presser Foot Plate	
20	230795	Presser Foot Hinge Pin	
21	210616	Bed Slide (Front)	
22	210596	Throat Plate, 53 Needle Hole, for Needle Sizes 12 and 13	
23	200577-833	Throat Plate Screw (2)	
24	210505	Bed Plate (Back)	
25	200577-833	Bed Plate (Back) Screw (2)	
26	202337	Pressure Bar Position Guide	
27	200352-833	Pressure Bar Position Guide Set Screw	
28	202338	Pressure Bar Position Guide Lever with	200086
29	200086-833	Pressure Bar Position Guide Lever Pinch Screw	
30	206608	Pressure Bar Lifting Releasing Lever Bracket Spring	
31	508157	Presser Bar Lifting Releasing Lever Bracket	
32	202554	Presser Bar Lifter	
33	200653-850	Presser Bar Lifter Hinge Screw	
34	207072	Presser Bar Bushing	
35	200352	Presser Bar Bushing Set Screw	
36	508168	Needle Bar Frame Cap	
37	508169	Take-up Lever Guard	
38	500350-850	Take-up Lever Guard Screw (2)	
39	202412	Thread Guide (On Top of Arm)	
40	508153	Arm Cover (Top)	
41	1186-850	Arm Cover (Top) Screw (2)	
42	164-850	Arm Cover (Top) Screw (2)	
43	202401	Take-up Lever Oiling Felt	
44	200132-850	Take-up Lever Oiling Felt Screw	

Illustr. Ref. No.	Part. No.	Name	Components
45	210883	Needle Bar Crank Cpl.	202399, 202400, 210543, 210585, 210725, 244059 200335, 200374, 200383, 200432, 202333
46	210725	Needle Bar Crank with	
47	200335-850	Needle Bar Crank Set Screw	
48	200432-850	Needle Bar Crank Position Screw	
49	202333	Needle Bar Connection Link Stud with	202299
50	202299	Needle Bar Connection Link Stud Oil Packing (Wick)	
51	200383-850	Needle Bar Connecting Link Stud Set Screw	
52	200374-833	Needle Bar Connecting Link Stud Set Screw	
53	210543	Needle Bar Connecting Link	
54	202399	Take-up Lever Driving Stud with	244071
55	244071	Take-up Lever Driving Stud Oil Packing (Wick)	
56	244059	Take-up Lever	
57	202400	Take-up Lever Hinge Stud with	202423
58	202423	Take-up Lever Hinge Stud Oil Packing (Wick)	
59	210585	Needle Bar Connecting Stud with	210544, 210882
60	210544	Needle Bar Connecting Stud with	202299
61	202299	Needle Bar Connecting Stud Oil Packing (Wick)	
62	210882	Needle Bar Connecting Stud Swivel with	200387
63	200387-833	Needle Bar Set Screw	
64	210591	Take-up (Auxiliary)	
65	200132-850	Take-up (Auxiliary) Screw	
66	200383-850	Take-up Lever Hinge Stud Set Screw	
67	200388-850	Needle Bar Crank Lock Screw	
68	202249	Arm Shaft with	224392
69	224392	Arm Shaft Oil Packing (Wick)	
70	203172	Needle Bar Crank Friction Washer	
71	207080	Arm Shaft Bushing (Front) with	202244
72	202244	Arm Shaft Bushing (Front) Oil Packing (Wick)	
73	200341-850	Arm Shaft Bushing (Front) Set Screw	
74	508167	Arm Shaft Bushing (Front) Oil Packing Plug	
75	210700	Needle Vibrator Pinion (Spiral) with	200382 (Two)
76	200382-833	Needle Vibrator Pinion Set Screw (2)	
77	202307	Feed Lifting Connection Eccentric with	200382, 200437
78	200382-833	Feed Lifting Connection Eccentric Set Screw	
79	200437-850	Feed Lifting Connection Eccentric Position Screw	
80	202306	Feed Lifting Connection with	200054, 203101
81	200054-850	Feed Lifting Connection Pinch Screw	
82	203101	Feed Lifting Connection Oil Packing (Wick)	
83	202297	Feed Driving Connection with	200054, 203101
84	200054-850	Feed Driving Connection Pinch Screw	
85	203101	Feed Driving Connection Oil Packing (Wick)	
86	203098	Feed Driving Eccentric Regulating Bracket Cpl.	Two 201014, Two 201525, 203300, 202635 200327, 200602, Two 202253

Illustr. Ref. No.	Part No.	Name	Components
87	202635	Arm Shaft Connection Belt Pulley with	
88	202253	Arm Shaft Connection Belt Pulley Spring Flange (2)	
89	200602-850	Arm Shaft Connection Belt Pulley Position Screw	
90	200327-833	Arm Shaft Connection Belt Pulley Set Screw	
91	202300	Feed Driving Eccentric Regulating Bracket	
92	201014-850	Feed Driving Eccentric Regulating Bracket Stop and Hinge Screw (2)	
93	201525-805	Feed Driving Eccentric Regulating Bracket Stop Screw and Hinge Screw Nut (2)	
94	202301	Feed Driving Eccentric Regulating Bracket Plunger	
95	202595	Feed Driving Eccentric Regulating Bracket Plunger Spring	
96	200607-350	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw	
97	200429-350	Feed Driving Eccentric Regulating Screw	
98	200383-350	Feed Driving Eccentric Regulating Screw Check Screw	
99	224400	Arm Shaft Connection Belt (Reinforced Neoprene)	
100	508150	Machine Pulley with	141566, 141567, 272142
101	272142	Arm Shaft Ball Bearing (Back) (Double Shielded Bearing)	
102	141566-333	Machine Pulley Position Screw	
103	141567-333	Machine Pulley Set Screw	
104	508155	Feed Regulating Spindle Insert	
105	210559	Needle Vibrator Gear Shaft Collar with	Two 200378
106	200378-350	Needle Vibrator Gear Shaft Collar Set Screw (2)	
107	203172	Needle Vibrator Gear Friction Washer	
108	210699	Needle Vibrator Gear (Spiral) with	Two 200382
109	200382-333	Needle Vibrator Gear Set Screw (2)	
110	508164	Needle Vibrator Gear Shaft	
111	210556	Needle Bar Frame Pitman with	200054, 202277
112	200054-350	Needle Bar Frame Pitman Pinch Screw	
113	202277	Needle Bar Frame Pitman Oil Packing (Wick)	
114	210550	Needle Vibrating Eccentric Regulating Bracket with	202300, 210552, Two 200256, Two 201525
115	202300	Needle Vibrator Eccentric Regulating Bracket	
116	200256-850	Needle Vibrator Eccentric Regulating Bracket Hinge and Stop Screw (2)	
117	201525-805	Needle Vibrator Eccentric Regulating Bracket Hinge and Stop Screw Nut (2)	
118	210552	Needle Vibrator Eccentric Regulating Bracket Flange with	
119	200383-850	Needle Vibrator Eccentric Regulating Bracket Flange Screw (2)	Two 200383

Illustr. Ref. No.	Part No.	Name	Components
120	202301	Needle Vibrator Eccentric Regulating Bracket Plunger	
121	202595	Needle Vibrator Eccentric Regulating Bracket Plunger Spring	
122	200607-850	Needle Vibrator Eccentric Regulating Bracket Plunger Spring Stop Screw	
123	200429-850	Needle Vibrator Regulating Screw	
124	200383-850	Needle Vibrator Regulating Screw Check Screw	
125	508170	Needle Vibrator Gear Shaft Flange	
126	200566-850	Needle Vibrator Gear Shaft Flange Screw (3)	
127	508171	Needle Vibrator Regulating Adjusting Cpl.	508172, 508173, 508174
128	508172	Needle Vibrator Gear Shaft Flange Cover	
129	508173	Bight Amplitude Adjusting Knob	
130	508174	Bight Amplitude Adjusting Knob Retainer	
131	500345-850	Needle Vibrator Gear Shaft Flange Cover Screw (3)	
132	200004-805	Arm Screw	
133	200010-805	Arm Screw (2)	
134	202005	Arm Screw Washer (3)	
135	204235	Arm Position Pin (2)	
136	210542	Needle Bar Frame Cpl.	210546, 224317
137	210546	Needle Bar Frame with	200070
138	200070-850	Needle Bar Frame Pitman Eccentric Stud Set Screw	200125, 200175, 249270
139	224317	Needle Bar Cpl.	
140	249270	Needle Bar Thread Guide	
141	200175-850	Needle Thread Guide Screw	
142	200125-833	Needle Set Screw	
143	Cat.		
144	1901-12-2	Needle with Supplementary Shoulder	
145	224387	Thread Guide	
146	200172-850	Thread Guide Screw	
147	210557	Needle Bar Frame Pitman Eccentric Stud	
148	210547	Needle Bar Frame Guide Stud	
149	200334-833	Needle Bar Frame Hinge and Guide Stud Set Screw (2)	
150	508163	Needle Bar Frame Hinge Stud	
151	240034	Thread Retainer	
152	51220-833	Thread Retainer Set Screw	
153	508166	Thread Guide (Upper)	
154	51220-833	Thread Guide (Upper) Screw	
155	210593	Thread Guide (Lower)	
156	200582-850	Thread Guide (Lower) Screw	
157	508179	Tension Cpl.	202410, 223438, 244048, 244049, 263547, 263548, 263552, 350613, 500795, 508180

Illustr. Ref. No.	Part No.	Name	Components
157	263548	Tension Releasing Pin	
158	263552	Thread Controller Spring Regulator with	50305
159	50305-850	Thread Stud Set Screw	
160	350613-806	Tension Stud with	263550
161	263550	Tension Stud Washer	
162	202410	Thread Controller Spring	
163	244048	Tension Disc (Back)	
164	244049	Tension Disc (Front)	
165	263547	Tension Release Washer	
166	508180	Tension Spring Washer	
167	223438	Tension Spring	
168	500795	Tension Thumb Nut	
169	140321-850	Thread Controller Spring Regulator Set Screw	
170	210513	Feed Bar with	210512, 200641, 201522, 202623
171	202623	Feed Driving Rock Shaft	
172	210512	Feed Bar	
173	200641-803	Feed Bar Hinge Screw (Driving)	
174	201522-805	Feed Bar Hinge Screw (Driving) Nut	
175	210516	Feed Dog	
176	200106-850	Feed Dog Screw (2)	
177	202625	Feed Driving Rock Shaft Stop Collar (2) with	Two each 200383
178	200383-850	Feed Driving Rock Shaft Stop Collar Set Screw (4)	
179	202624	Feed Driving Connection Crank with	200038
180	200038-850	Feed Driving Connection Crank Pinch Screw	
181	200545-850	Feed Driving Connection Hinge Screw	
182	201518-805	Feed Driving Connection Hinge Screw Nut	
183	210515	Feed Bar Slide Block Crank with	210514, 200253, 201531, 202276
184	202276	Feed Bar Slide Block	
185	200253-850	Feed Bar Slide Block Hinge Screw	
186	201531-805	Feed Bar Slide Block Hinge Screw Nut	
187	210514	Feed Bar Slide Block Crank with	200035
188	200035-850	Feed Bar Slide Block Crank Pinch Screw	
189	202625	Feed Lifting Rock Shaft Stop Collar with	Two 200383
190	200383-850	Feed Lifting Rock Shaft Stop Collar Set Screw (2)	
191	210589	Feed Lifting Connection Crank with	200050, 200378, 210645
192	210645	Feed Lifting Connection Crank	
193	200050-850	Feed Lifting Connection Crank Pinch Screw	
194	200378-850	Feed Lifting Connection Crank Set Screw	
195	200545-850	Feed Lifting Connection Hinge Screw	
196	201518-805	Feed Lifting Connection Hinge Screw Nut	
197	210615	Hook Shaft Bevel Gear (Steel) 24 Teeth with	Two 200382
198	200382-833	Hook Shaft Bevel Gear Set Screw (2)	
199	241398	Hook Shaft Bushing with	241336, 241397, 350314
200	241336	Hook Shaft Bushing	

Illustr. Ref. No.	Part No.	Name	Components
201	241397	Hook Shaft (Hollow)	
202	350314-850	Hook Shaft Position Screw	
203	200335-850	Hook Shaft Bushing Set Screw	
204	200363-833	Hook Shaft Bushing Set Screw	
205	244084	Hook Shaft Bushing Set Screw Packing (Fiber)	
206	200915-850	Hook Position Screw	
207	210614	Hook Driving Bevel Pinion (Steel) 24 Teeth with	Two 200378
208	200378-850	Hook Driving Bevel Pinion Set Screw (2)	
209	508183	Feed Lifting Rock Shaft (Hollow) with	210535
210	210535	Hook Driving Bevel Pinion Shaft	
211	202661	Hook Driving Bevel Pinion Shaft Belt Pulley with	202324, Two 200378
212	202324	Hook Driving Bevel Pinion Shaft Belt Pulley Spring Flange	
213	200378-850	Hook Driving Bevel Pinion Shaft Belt Pulley Set Screw (2)	
214	224443	Hook and Bobbin Case Cpl.	224433, 224442
215	224433	Hook with	224432, 200145, 210536, 210541, Three 200596
216	200145-850	Hook Washer Needle Guard Screw	
217	210541	Hook Washer Needle Guard	
218	200596-850	Hook Gib Screw (3)	
219	224432	Hook (Sewing)	
220	210536	Hook Gib	
221	224442	Bobbin Case Cpl.	210846, 224441
222	210846	Bobbin Case Base	
223	224441	Bobbin Case Cap Cpl.	200964, 210736, 210914, 224440 210913, 210734, 210735
224	210914	Bobbin Case Latch with	
225	210735	Bobbin Case Latch Fulcrum Pin	
226	210734	Bobbin Case Latch Lever	
227	210913	Bobbin Case Latch	
228	210736	Bobbin Case Latch Spring	
229	200964-833	Bobbin Case Latch Stop Screw	
230	224440	Bobbin Case Cap with	200592, 201016, 263110
231	200592-850	Bobbin Case Tension Spring Screw	
232	201016-850	Bobbin Case Tension Spring Regulating Screw	
233	263110	Bobbin Case Tension Spring	
234	263099	Bobbin	
235	210764	Bobbin Case Stop	
236	200076-850	Bobbin Case Stop Screw	

Accessories

400	228212	Drip Pan (Short) with	Four 3/4 Inch Wire Nails
401	-----	Drip Pan Wire Nails, 3/4 Inch Long (4)	
500	228710	Knee Lifter Rock Lever Cpl.	228364, 228365, 228370, 228388, 228709
501	228709	Knee Lifter Rock Lever Bracket with	228707, 228363, 228367, 228386, 228455, 228713 350231
502	228364	Knee Lifter Rock Lever Knee Plate with	
503	350231	Knee Lifter Rock Lever Knee Plate Set Screw	
504	228388	Knee Lifter Rock Lever Knee Plate Arm	
505	228363	Knee Lifter Rock Lever Hinge Pin	
506	228713	Knee Lifter Rock Lever with	
507	350231-803	Knee Lifter Rock Lever Extension Set Screw and Knee Lifter Rock Lever Knee Plate Arm Set Screw (2)	Two 350231
508	228455	Knee Lifter Rock Lever Position Spring	
509	228386	Knee Lifter Rock Lever Spring	
510	228367	Knee Lifter Rock Lever Stop Stud	
511	228707	Knee Lifter Rock Lever Bracket with	200347, Three Wood Screws 7/8 Inch No. 12
512	200347-830	Knee Lifter Rock Lever Stop Stud Set Screw	
513	-----	Wood Screw 7/8 Inch (Long) No. 12 (3)	
514	228365	Knee Lifter Rock Lever Rod	
515	228370	Knee Lifter Rock Lever Extension with	200530
516	200530-803	Knee Lifter Rock Lever Rod Set Screw	
517	224413	Needle Vibrator Operating Rod Roller Cpl.	200270, 224411, 224412
518	224412	Needle Vibrator Operating Rod Roller Bracket with	200113
519	200113-850	Needle Vibrator Operating Rod Roller Bracket Set Screw	
520	224411	Needle Vibrator Operating Rod Roller	
521	200270-850	Needle Vibrator Operating Rod Roller Hinge Screw	
600	210844	Bed Hinge Connection (2)	
601	200060-850	Bed Hinge Connection Screw (4)	
602	263099	Bobbin (2)	
603	200157-850	Attachment Screw	
604	222554	Wrench (Steel)	
605	225498	Screwdriver (7 1/4 Inch)	

Illustr. Ref. No.	Part No.	Name	Components
606	228476	Screwdriver (Bobbin Case)	
607	231337	Cloth Guide	
608	41400	Machine Rest Pin (Wood)	
609	226999	Guide (For Shoe Work)	
610	200459-850	Guide Thumb Screw	
611	120342	Oiler (Copper Plated) with	120343
612	120343	Oiler Spout (3 1/2 Inch)	
<u>UNIVERSAL BOBBIN WINDER</u>			
660	259462	Universal Bobbin Winder Cpl.	200056, 200082, 200113, 200299, 202478, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428, 259429, 259662, 259930 Two each 225459 and Wood Screw 13710, 201572, 225461, Two 2102
661	225462	Bobbin Winder Tension Bracket	
662	201572-819	Bobbin Winder Tension Stud Thumb Nut	
663	13710	Bobbin Winder Tension Spring	
664	2102	Bobbin Winder Tension Disc (2)	
665	201499-819	Bobbin Winder Tension Stud	
666	225461	Bobbin Winder Tension Bracket with	201499
667	200082-804	Bobbin Winder Tension Bracket Screw	
668	228026	Bobbin Winder Tension Bracket Screw Washer	
669	259662	Bobbin Winder and Tension Bracket Base	
670	-----	Bobbin Winder Wood Screw (3/4 Inch No. 12, RHB) (2)	
671	225456	Bobbin Winder Frame Spring Plunger	
672	225455	Bobbin Winder Frame Spring	
673	259930	Bobbin Winder Pulley with 457	
674	457-830	Bobbin Winder Pulley Set Screw	
675	244071	Bobbin Winder Frame Oil Packing (Wick)	
676	259660	Bobbin Winder Frame Oil Well Washer	
677	225453	Bobbin Winder Frame with	244071, 259660
678	225381	Bobbin Winder Spindle	
679	225454	Bobbin Winder Frame Hinge Pin	
680	200299-819	Bobbin Winder Stop Latch Trip Lever Hinge Screw	
681	202478	Bobbin Winder Stop Latch Trip Lever	
682	200056-805	Bobbin Winder Stop Latch Screw	
683	225444	Bobbin Winder Stop Latch	
684	225458	Bobbin Winder Stop Latch Thumb Screw	
686	200113-806	Bobbin Winder Brake Clamp Screw	
687	259429	Bobbin Winder Brake Clamp	
688	259428	Bobbin Winder Brake (Leather)	
689	225459	Bobbin Winder Stop Latch Thumb Lever Hinge Stud (2)	