 


PRICE LIST
OF
PARTS

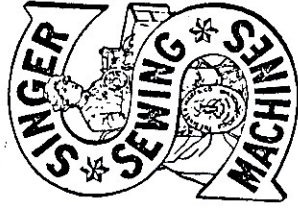

MACHINE
No. 107W6

THE SINGER MANUFACTURING COMPANY

NUMERICAL LIST OF PARTS

No.	Plate	Name	Each
145E	13183	Knife Driving Eccentric Connection Screw, for 233061	\$ 04
187D	13184	Knife Driving Lever Pitman End Bearing (lower) Cap Screw, for 38446 and 222023	02
187D	13184	Knife Driving Lever Pitman End Bearing (upper) Cap Screw, for 38446 and 222023	02
597C	13189	Under Driver Shaft Pulley Clamping Screw, for 27070	08
679C	13184	Knife Driving Lever Pitman End Bearing (upper) Ball Screw Stud, for 222023 ..	12
1518E	13184	Knife Driving Lever Pitman End Bearing (lower) Ball Screw Stud Nut, for 233072	04
1697C	13184	Knife Driving Lever Pitman End Bearing (upper) Check Nut, for 233072	03
1698C	13184	Knife Driving Lever Pitman End Bearing (lower) Check Nut, for 233072	03
25303	12321	Under Driver Driving Pulley Shaft Ball, size $\frac{3}{4}$ in., for 202461	1 00
25362	12321	Under Driver Cone Pulley Ball, size $\frac{3}{8}$ in., for 227553	80
27070	11126	Under Driver Shaft Pulley (sectional, grooved), 10 in. diam., 1 $\frac{3}{4}$ in. bore, with two 597C, for 227985	45
36578	10776	Other with 36579	10
36579	10776	" Spout, 3 in. long, for 36578	06
*38443	—	Knife Driving Lever Pitman End Bearing (upper), for 222023	—
*38444	—	Knife Driving Lever Pitman End Bearing (lower), for 38446	—
38446	13184	Knife Driving Lever Pitman End Bearing 38444 with 42524, 50016c and two 187D, for 233072	1 50
41400	10776	Machine Rest Pin (wood)	04
*42524	—	Knife Driving Lever Pitman End Bearing (lower) Cap, for 38446	—
*42525	—	Knife Driving Lever Pitman End Bearing (upper) Cap, for 222023	—
50016C	13184	Knife Driving Lever Pitman End Bearing (lower) Ball Screw Stud, for 38446 ..	15
200010E	10755	Arm Screw	06
200011E	10272	Bobbin Winder Spool Holder Tension Disc Screw, for 202485	05

No.	Plate	Name	Each
200030H	13183	Knife Driving Lever Bracket Screw	\$ 05
200035E	10760	Feed Bar Slide Block Crank Pinch Screw, for 210514	05
200038C	10760	Feed Driving Connection Crank Pinch Screw, for 202624	05
200050C	10760	Feed Lifting Connection Crank Pinch Screw, for 210589	03
200051F	13186	Knife Throw-out Shaft Bracket Screw . .	03
200056E	10272	Bobbin Winder Stop Latch Screw, for 203096	03
200062H	13183	Knife Driving Lever Driving Connection Screw	07
200070C	13186	Needle Bar Frame Pitman Eccentric Stud Set Screw, for 210546	04
200074F	10759	Presser Foot Screw, for 202335	03
200079E	13182	Bobbin Case Stop Screw	03
200076C	13182	Knife Screw, for 233062	03
200079H	13182	Arm Cap Spool Holder Wire Hinge Screw, for 203090	02
200081C	10762	Tension Stud Set Screw	02
200082D	12321	Under Driver Lever Brake Belt Guard Screw, for 227736	03
200084F	13184	Knife Throw-out Handle Pinch Screw, for 233079	03
200086F	10759	Presser Bar Position Guide Lever Pinch Screw, for 202338	03
200100E	10755	Feed Dog Screw	03
200113F	13186	Knife Throw-out Shaft Collar Set Screw, for 225832	03
200132E	10761	Take-up Lever Oiling Felt Screw	02
200132E	10761	" (auxiliary) Screw	02
200132E	10761	Thread Controller Spring Stop Screw . .	02
200141C	10761	Needle Set Screw, for 202976	02
200145H	13183	Hook Washer Needle Guard Screw, for 233056	02
200161B	10272	Bed Oil Cover Screw	04
200161D	10272	Bobbin Winder Frame Spring Screw, for 203096	04
200172H	13190	Presser Foot Edge Guide Screw, for 233088 and 233093	02
200175H	13188	Thread Guide (on Needle Bar Frame) Screw	02
200191E	13182	Feed Driving Connection Pinch Screw, for 202297	03
200191E	13182	Feed Lifting Connection Pinch Screw, for 202308	03
200221D	10272	Bobbin Winder Frame Hinge Screw, for 203096	12

No.	Plate	Name	Each
200224H	10759	Knee Lifter Connection Lever Hinge Screw, for 202786	\$ 12
200243D	10760	Feed Bar Slide Block Hinge Screw, for 210515	08
200260D	10759	Presser Bar Lifting Releasing Lever Bracket Guide Screw	12
200262H	10759	Knee Lifter Lifting Lever Hinge Screw, for 202786	10
200278H	10755	Arm Cap Screw	05
200299H	10272	Bobbin Winder Stop Latch Thumb Lever Hinge Screw, for 203096	05
200299H	10272	Bobbin Winder Stop Latch Thumb Lever Joint Screw, for 203096	05
200299H	10272	Bobbin Winder Stop Latch Trip Lever Hinge Screw, for 203096	05
200327C	10755	Arm Shaft Connection Belt Pulley Set Screw, for 202635	04
200328C	10755	Balance Wheel Position Screw, for 202255	04
200330C	13188	Needle Vibrator Regulating Lever Stop Screw	04
200334C	10756	Needle Bar Frame Guide Stud Set Screw	04
200334C	10756	" " Hinge Stud Set Screw	04
200335C	10755	Balance Wheel Set Screw, for 202555 . .	04
200335C	10755	Hook Shaft Bushing Set Screw	04
200335C	10755	Needle Bar Crank Set Screw, for 210725	04
200338C	10755	Arm Shaft Bushing (back) Set Screw . .	04
200341C	10755	" " (front) Set Screw	04
200352C	10759	Presser Bar Bushing Set Screw	03
200352C	10759	" " Position Guide Set Screw . .	03
200355H	10272	Bobbin Winder Spool Holder Tension Disc Screw Set Screw, for 202480	03
200357E	10755	Arm Shaft Oil Packing Stop Screw, for 233046	03
200363C	10736	Hook Shaft Bushing Set Screw	03
200364C	13184	Knife Driving Lever Hinge Stud Set Screw, for 233063	03
200366H	10762	Thread Retainer Stud Set Screw	02
200373C	13183	Knife Driving Eccentric Position Screw, for 233060	02
200374C	10761	Needle Bar Connecting Link Stud Set Screw, for 210725	02
200374C	10761	Under Driver Lever Brake Leather Set Screw, for 227735	02
200378C	10760	Feed Lifting Connection Crank Set Screw, for 210589	02
200378C	10760	Hook Driving Bevel Pinion Shaft Belt Pulley Set Screw, for 202661	02
200378C	10760	Hook Driving Bevel Pinion Set Screw, for 210614	02

Numerical List of Parts

Numerical List of Parts

No.	Plate	Name	Each
200378c	10760	Needle Vibrator Cam Set Screw, for 210780	\$ 02
200378c	10760	Needle Vibrator Cam Shaft Collar Set Screw, for 210559	02
200378c	10760	Needle Vibrator Crank Set Screw, for 210712	02
200378c	10760	Needle Vibrator, Regulating Lever Position Bracket Set Screw, for 233084 ..	02
200378c	10760	Needle Vibrator Regulating Lever Set Screw, for 210770	02
200380c	10272	Bobbin Winder Pulley Set Screw, for 202473	02
200380c	10272	Knife Driving Eccentric Set Screw, for 233060	02
200382c	13182	Feed Lifting Connection Eccentric Set Screw, for 202307	02
200382c	13182	Hook Shaft Bevel Gear Set Screw, for 210915	02
200382c	13182	Needle Vibrator Gear Set Screw, for 210560	02
200382c	13182	Needle Vibrator Pinion Set Screw, for 210555	02
200383c	10755	Feed Driving Eccentric Regulating Screw Check Screw	02
200382c	10755	Feed Driving Rock Shaft Stop Collar Set Screw, for 202025	02
200383c	10755	Feed Lifting Rock Shaft Stop Collar Set Screw, for 202625	02
200383c	10755	Knife Throw-out Crank Shaft Stop Plunger Spring Stop Screw	02
200383c	10755	Needle Bar Connecting Link Stud Set Screw, for 210725	02
200382c	10755	Needle Vibrator Cam Set Screw, for 210780	03
200382c	10755	Take-up Lever Hinge Stud Set Screw ..	02
200387c	10272	Grinder Emery Wheel Driving Shaft Oil Stop Screw, for 206964	02
200387c	10272	Needle Bar Set Screw, for 210545	02
200394c	10957	Grinder Slide Bracket Set Screw, for 233101	03
200403c	10761	Grinder Emery Wheel Driving Shaft Pulley Set Screw, for 206963	03
200403c	10761	Knife Driving Lever Driving Connection Slide Block Crank Set Screw, for 233067	03
200403c	10761	Knife Throw-out Shaft Crank Set Screw, for 233082	03
200428c	10761	Needle Bar Crank Position Screw, for 210725	03

No.	Plate	Name	Each
200429c	10755	Feed Driving Eccentric Regulating Screw " Lifting Connection Eccentric Position Screw, for 202307	\$ 08
200437c	10760	Grinder Slide Bracket Adjusting Screw, for 233101	06
200457d	10957	Grinder Slide Bracket Stop Collar Thumb Face Plate Thumb Screw	10
200462b	10755	Grinder Throat Plate Knife Cutting Plate Clamp Thumb Screw, for 233104	10
200473b	10957	Grinder Slide Bracket Stop Collar Thumb Screw, for 207031	08
200475b	10759	Presser Bar Thumb Screw Thumb Set Screw	06
200492b	10759	Presser Bar Thumb Screw (pressure regulating)	08
200502b	10755	Arm Shaft Bushing (front) Oil Packing Thumb Screw	25
200522c	13189	Knee Lifter Rock Lever Knee Plate Arm Set Screw, for 227781	25
200524c	12321	Under Driver Driving Pulley Shaft Set Screw, for 227734	06
200524c	12321	Under Driver Lever Brake Set Screw, for 227735	06
200524c	12321	Under Driver Lever Compression Shaft Set Screw, for 227970	06
200526c	12321	Knee Lifter Rock Lever Knee Plate Set Screw, for 202453	05
200529c	13189	Knee Lifter Rock Lever Rod Set Screw, for 227781	05
200530c	12321	Under Driver Treadle Pitman Rod Clamp Set Screw, for 204126	05
200540b	13189	Under Driver Treadle Adjustable Connecting Slide Set Screw, for 227976 ..	10
200545c	10760	Feed Driving Connection Hinge Screw " Lifting Connection Hinge Screw ..	12
200545c	10760	Needle Vibrator Cam Shaft Bearing and Cover Screw	12
200570e	10755	Bed Hinge Connection Screw	06
200574b	13184	Knife Throw-out Crank Screw	05
200577h	10755	Bed Plate (back) Screw	05
200577h	10755	Grinder Slide Bracket Adjusting Screw Slide Plate Screw, for 206964	02
200577h	10755	Throat Plate Screw	02
200582h	10756	Thread Guide Screw	02
200583h	13190	Throat Plate Knife Cutting Plate Screw, for 233091	02
200585h	13182	Arm Cap Spool Holder Base Screw, for 203088	02
200596f	13183	Hook Gib Screw, for 233056	04

No.	Plate	Name	Each
200378c	10760	Needle Vibrator Cam Set Screw, for 210780	\$ 02
200378c	10760	Needle Vibrator Cam Shaft Collar Set Screw, for 210559	02
200378c	10760	Needle Vibrator Crank Set Screw, for 210742	02
200378c	10760	Needle Vibrator Regulating Lever Position Bracket Set Screw, for 233084	02
200378c	10760	Needle Vibrator Regulating Lever Set Screw, for 210770	02
200380c	10272	Bobbin Winder Pulley Set Screw, for 202473	02
200380c	10272	Knife Driving Eccentric Set Screw, for 233060	02
200382c	13182	Feed Lifting Connection Eccentric Set Screw, for 202307	02
200382c	13182	Hook Shaft Bevel Gear Set Screw, for 210615	02
200382c	13182	Needle Vibrator Gear Set Screw, for 210560	02
200382c	13182	Needle Vibrator Pinion Set Screw, for 210555	02
200383c	10755	Feed Driving Eccentric Regulating Screw Check Screw	02
200383c	10755	Feed Driving Rock Shaft Stop Collar Set Screw, for 202625	02
200383c	10755	Feed Lifting Rock Shaft Stop Collar Set Screw, for 202625	02
200383c	10755	Knife Throw-out Crank Shaft Stop Plunger Spring Stop Screw	02
200383c	10755	Needle Bar Connecting Link Stud Set Screw, for 210725	02
200383c	10755	Needle Vibrator Cam Set Screw, for 210780	02
200383c	10755	Take-up Lever Hinge Stud Set Screw	02
200387c	10272	Grinder Emery Wheel Driving Shaft Oil Stop Screw, for 206964	02
200387c	10272	Needle Bar Set Screw, for 210545	02
200394c	10957	Grinder Slide Bracket Set Screw, for 233101	03
200403c	10761	Grinder Emery Wheel Driving Shaft Pulley Set Screw, for 206963	03
200403c	10761	Knife Driving Lever Driving Connection Slide Block Crank Set Screw, for 233067	03
200403c	10761	Knife Throw-out Shaft Crank Set Screw, for 233082	03
200428c	10761	Needle Bar Crank Position Screw, for 210725	03

No.	Plate	Name	Each
200429c	10755	Feed Driving Eccentric Regulating Screw	\$ 08
200437c	10760	" Lifting Connection Eccentric Position Screw, for 202307	06
200457b	10957	Grinder Slide Bracket Adjusting Screw, for 233101	10
200462b	10755	Face Plate Thumb Screw	10
200466b	13189	Grinder Throat Plate Knife Cutting Plate Clamp Thumb Screw, for 233104	08
200473b	10957	Grinder Slide Bracket Stop Collar Thumb Screw, for 207031	06
200475b	10759	Presser Bar Thumb Screw Thumb Set Screw	08
200492b	10759	Presser Bar Thumb Screw (pressure regulating)	25
200502b	10755	Arm Shaft Bushing (front) Oil Packing Thumb Screw	25
200522c	13189	Knee Lifter Rock Lever Knee Plate Arm Set Screw, for 227781	06
200524c	12321	Under Driver Driving Pulley Shaft Set Screw, for 227734	06
200524c	12321	Under Driver Lever Brake Set Screw, for 227735	06
200524c	12321	Under Driver Lever Compression Shaft Set Screw, for 227970	06
200526c	12321	Knee Lifter Rock Lever Knee Plate Set Screw, for 202453	05
200529c	13189	Knee Lifter Rock Lever Rod Set Screw, for 227781	05
200530c	12321	Under Driver Treadle Pitman Rod Clamp Set Screw, for 204126	05
200540b	13189	Under Driver Treadle Adjustable Connecting Slide Set Screw, for 227976	10
200542c	10760	Feed Driving Connection Hinge Screw	12
200545c	10760	" Lifting Connection Hinge Screw	12
200566b	10756	Needle Vibrator Cam Shaft Bearing and Cover Screw	06
200570c	10755	Bed Hinge Connection Screw	05
200574b	13184	Knife Throw-out Crank Screw	05
200577b	10755	Bed Plate (back) Screw	02
200577b	10755	Grinder Slide Bracket Adjusting Screw Slide Plate Screw, for 206964	02
200577b	10755	Throat Plate Screw	02
200582c	10756	Thread Guide Screw	02
200583c	13190	Throat Plate Knife Cutting Plate Screw, for 233091	02
200585b	13182	Arm Cap Spool Holder Base Screw, for 203088	04
200596c	13183	Hook Gib Screw, for 233056	02

No.	Plate	Name	Each
200598f	13182	Bobbin Case Tension Spring Screw, for 210729	\$ 02
200602E	10755	Arm Shaft Connection Belt Pulley Position Screw, for 202635	10
200607C	10755	Feed Driving Eccentric Regulating Bracket Plunger Spring Stop Screw..	03
200625B	10762	Tension Stud with 204925, for 202409 ..	15
200641C	10755	Feed Bar Hinge Screw (driving), for 233050	25
200653C	10759	Presser Bar Lifter Hinge Screw	06
200743H	13189	Machine Clamp Screw, for 227488	10
200915D	10757	Hook Position Screw	10
200917C	13186	Needle Vibrator Crank Position Screw, for 210712	04
200917C	13186	Needle Vibrator Regulating Lever Position Bracket Position Screw, for 233084	04
200917C	13186	Needle Vibrator Regulating Lever Position Screw, for 210770	04
200919C	13186	Needle Vibrator Crank Link Hinge Screw (lower or upper), for 210706	10
200931F	10757	Hook Shaft Position Screw, for 210621 ..	15
200964C	13182	Bobbin Case Latch Stop Screw, for 210915 ..	02
201014C	13182	Feed Driving Eccentric Regulating Bracket Hinge Screw, for 203098	12
201014C	13182	Feed Driving Eccentric Regulating Bracket Stop Screw, for 203098	12
201016F	10736	Bobbin Case Tension Spring Regulating Screw, for 210729	04
201054F	13183	Knife Driving Lever Driving Connection Slide Block Crank Position Screw, for 233067	05
201054F	13183	Knife Throw-out Shaft Crank Position Screw, for 233082	05
201059C	13183	Knife Driving Eccentric Connection Hinge Screw	08
201107C	13186	Knife Throw-out Shaft Crank Link Hinge Screw	05
201256F	13183	Knife Driving Lever Driving Connection Bracket Screw	05
201282F	13182	Knife Driving Lever Driving Connection Slide Block Link Hinge Screw	08
201283B	13186	Needle Vibrator Regulating Lever Stop Screw Stud	10
201510D	10957	Grinder Emery Wheel Driving Shaft Nut, for 233105	05
201518E	10755	Feed Driving Connection Hinge Screw Nut	04
201518E	10755	Feed Lifting Connection Hinge Screw Nut	04

No.	Plate	Name	Each
201522E	13182	Feed Bar Hinge Screw Nut, for 233050..	\$ 03
201525E	10755	" Driving Eccentric Regulating Bracket Hinge Screw Nut, for 203098..	03
201525E	10755	Feed Driving Eccentric Regulating Bracket Stop Screw Nut, for 203098 ..	03
201526E	13188	Needle Vibrator Regulating Lever Stop Screw Stud Nut	03
201531E	10760	Feed Bar Slide Block Hinge Screw Nut, for 210515	03
201534H	13188	Needle Vibrator Regulating Lever Stop Screw Nut	03
201537H	10272	Bobbin Winder Stop Latch Thumb Lever Joint Screw Nut, for 203096	03
201556D	13188	Needle Vibrator Regulating Lever Slide Thumb Nut	16
201572B	10762	Tension Thumb Nut, for 202409	04
201582B	13189	Machine Clamp Screw Wing Nut, for 227488	08
201618E	13186	Needle Vibrator Crank Link Hinge Screw (lower or upper) Nut, for 210706	04
202005	10755	Arm Screw Washer	01
202036	10755	" Shaft Bushing (front) Position Pin, for 202245	01
202090	—	Presser Foot Hinge Pin, for 233096	01
202091	10762	Thread Retainer Sleeve, for 204059	05
202092	10762	" Spring, for 204059	01
202135	10755	Face Plate Position Pin	01
202245	10753	Arm Shaft Bushing (front) with 202036 and 202260	55
202248H	10755	Arm Cap Screw Washer	05
202252,	10757	" Shaft Connection Belt Pulley Spring Flange, for 202635	15
202254	—	Needle Bar Connecting Link Stud Oil Packing (wick), for 202333	01
202255	10752	Balance Wheel with 200328C and 200335C	85
202258	10751	Red Hinge Connection	08
202260	—	Arm Shaft Bushing (back) Oil Packing (wick), for 223607	01
202260	—	Arm Shaft Bushing (front) Oil Packing (wick), for 202245	01
202276	10760	Feed Bar Slide Block, for 210515	15
202277	—	Feed Driving Connection Oil Packing (wick), for 202297	01
202277	—	Feed Lifting Connection Oil Packing (wick), for 202306	01
202277	—	Needle Bar Connecting Stud Oil Packing (wick), for 210544	01
202277	—	Needle Bar Frame Plunger Oil Packing (wick), for 210705	01

Numerical List of Parts

34

No.	Plate	Name	Each
202277	—	Take-up Lever Driving Stud Oil Packing (wick), for 202399	\$ 01
202297	10752	Feed Driving Connection with 200191E and 202277	75
202300	10753	Feed Driving Eccentric Regulating Bracket, for 203098	1 50
202301	10755	Feed Driving Eccentric Regulating Bracket Plunger	05
202302	12321	Knee Lifter Connection Lever Lifting Rod Cotter Pin, for 203447	01
202302	12321	Under Driver Lever Compression Shaft Cotter Pin, for 202464	01
202306	10752	Feed Lifting Connection with 200191E and 202277	01
202307	10760	Feed Lifting Connection Eccentric with 200382c and 200437c	75
202310	10753	Feed Regulating Spindle with 202311, 202443 and 202619	60
*202311	—	Feed Regulating Spindle Head, for 202310	1 25
202324	10757	Hook Driving Bevel Pinion Shaft Belt Pulley Spring Flange, for 202661	—
202333	10761	Needle Bar Connecting Link Stud with 202354, for 210725	08
202335	10751	Presser Bar (hollow) with 200074r	25
202336	10759	" " Bushing	80
202337	10759	" " Position Guide	35
202338	10759	" " " Lever with 200086r	30
202342	10759	Presser Bar Lifting Releasing Lever Bracket Spring (spiral)	30
202346	10751	Presser Bar Spring Stop Rod	02
202355	10759	Hook Shaft Bushing Set Screw Packing (brass)	05
202355	10759	Presser Bar Thumb Screw Thumb Set Screw Packing (brass)	01
202378	13188	Presser Bar Spring (heavy)	01
Nos. 202398 to 202400, for 210736.			
202398	10761	Take-up Lever	1 20
202399	10761	" " " Driving Stud with 202277	25
202400	10761	" " " Hinge Stud with 202423	25
202401	10761	" " " Oiling Felt	02
202402	10762	Tension Disc (back), for 202409	05
202403	10762	" " (front), for 202409	10
202404	10762	" " Release Plunger	05
202405	10762	" " Washer, for 202409	15
202407	10762	" " Spring, for 202409	05

Numerical List of Parts

35

No.	Plate	Name	Each
202409	10762	Tension complete, Nos. 200625b, 201572b, 202402, 202403, 202405, 202407 and 202410	\$ 55
202410	10762	Thread Controller Spring, for 202409	03
202411	10762	Thread Controller Spring Stop	10
202412	10756	" Guide (on top of Arm)	06
202423	—	Take-up Lever Hinge Stud Oil Packing (wick), for 202400	01
202443	—	Feed Regulating Spindle Head Pin, for 202310	02
202445	10958	Knee Lifter Connection Lever with 202446, for 202786	07
202446	13183	Knee Lifter Connection Lever Pin, for 202445	03
202447	10958	Knee Lifter Connection Lever Lifting Rod with 202302, for 202786	06
202449	13185	Knee Lifter Lifting Lever, for 202786	10
202451	10958	" " Rock Lever Lug with two wood screws $\frac{3}{8}$ in., No. 131r, for 227782	05
202452	13189	Knee Lifter Rock Lever Lug Hinge Pin, for 227782	02
202453	10958	Knee Lifter Rock Lever Knee Plate with 200526c, for 202985	17
202455	10958	Knee Lifter Rock Lever Knee Plate Arm (short), for 202985	10
202459	11126	Under Driver Driving Pulley, $\frac{7}{8}$ in. diam., with 202460 and 201105, for 227740	75
202460	11126	Under Driver Driving Pulley Friction Ring (leather), for 202459	05
202461	11126	Under Driver Driving Pulley Shaft 227743 with 204107, 204108 and eleven 25303, for 227740	1 00
202464	11126	Under Driver Lever Compression Shaft with 202302, for 227740	20
202468	11126	Under Driver Treadle Pitman Rod (lower or upper), for 227980	05
Nos. 202470 to 202473, for 203096.			
202470	10271	Bobbin Winder Base	15
202471	10271	" " Frame	15
202472	10271	" " Spring	05
202473	10271	" " Pulley with 200380c	20
202475	10272	" " Stop Latch, for 203096	10
202477	10272	" " " Thumb Lever, for 203096	15

No.	Plate	Name	Each
202478	10272	Bobbin Winder Stop Latch Trip Lever, for 203096	\$ 10
202480	10271	Nos. 202480 to 202483, for 202485.	
202481	10271	Bobbin Winder Spool Holder Base with 200355u and 202484	15
202482	10271	Bobbin Winder Spool Holder Base Spool Pin	05
202483	10272	Bobbin Winder Spool Holder Tension Disc (lower or upper)	02
202484	10272	Bobbin Winder Spool Holder Tension Disc Spring (brass)	01
202485	10271	Bobbin Winder Spool Holder Tension Disc Thread Guide, for 202480	01
202554	10759	Bobbin Winder Spool Holder complete, Nos. 200011E, 202480, 202481, 202483, two 202482 and one wood screw 1 in., No. 13, for 203097	35
202595	10755	Presser Bar Lifter	25
202602	13186	Feed Driving Eccentric Regulating Bracket Plunger Spring	02
202619	10756	Knife Throw-out Shaft Bracket Position Pin	05
202623	10752	Feed Regulating Spindle Head Position Pin, for 202310	25
202624	10760	" " Connection Crank with 200038C	75
202625	10760	" " Rock Shaft Stop Collar with two 200383C	40
202625	10760	Feed Lifting Rock Shaft Stop Collar with 200383C	20
202635	10753	Arm Shaft Connection Belt Pulley with 200327C, 200602E and 202253, for 203098	20
202661	10753	Hook Driving Bevel Pinion Shaft Belt Pulley with 202324 and two 200378C	1 00
202786	—	Knee Lifter Connection Lever 202445 with 200224u, 200262u, 202447 and 202449	60
202845	12321	Under Driver Lever Compression Plate Rivet, for 227970	45
202923	—	Presser Foot Shank, for 233088 and 233093	01
202924	—	Presser Foot Shank, for 233096	60
202976	10761	Needle Bar (hollow) with 200141r, for 210542	60
202985	—	Knee Lifter Rock Lever Knee Plate 202453 with 202455, for 227783	80
203087	10751	Arm Cap, for 203088	25
203088	10751	Arm Cap and Spool Holder complete, Nos. 203087, 203090 and two 200585u	50

No.	Plate	Name	Each
203089	10751	Arm Cap Spool Holder Base, for 203090 \$	20
203090	—	" " " 203089 with 200079u and 204296, for 203088	30
203094	—	Bobbin Winder Bobbin Position Pin, for 203095	01
203095	10271	Bobbin Winder Spindle with 203094, for 203096	20
203096	10271	Bobbin Winder complete, Nos. 200050E, 200161b, 200221b, 201537u, 202470 to 202473, 202475, 202477, 202478, 203095, three 200299u and two wood screws 1½ in., No. 14, R.H.B., for 203097	1 40
203097	—	Bobbin Winder and Spool Holder complete, Nos. 202485 and 203096	1 75
203098	10753	Feed Driving Eccentric Regulating Bracket 202300 with 202635, two each 201014c and 201525E	2 80
203100	—	Arm Shaft Oil Packing (wick), for 233046	01
203101	—	Hook Oil Wick, for 233056	01
203172	10761	Needle Bar Crank Friction Washer	05
203172	10761	" Vibrator Gear Thrust Washer	05
204058u	10762	Thread Retainer Stud, for 204059	07
204059	10762	Thread Retainer complete, Nos. 202091, 202092 and 204058u	15
204100	12321	Nos. 204100 to 204102, for 227553.	
204101	12321	Under Driver Cone Pulley Ball Bearing Cup	12
204101	12321	Grinder Emery Wheel Driving Shaft Nut Washer, for 233105	02
204102	12321	Under Driver Cone Pulley Ball Cap	02
204105	12321	" " " Retaining Spring	05
204107	12321	Under Driver Driving Pulley Friction Ring Stop Pin, for 202459	01
204108	12321	Under Driver Driving Pulley Shaft Ball Cup, for 202461	10
204108	12321	Under Driver Driving Pulley Shaft Ball Cup Cap, for 202401	02
204109	—	Nos. 204109 to 204112, for 227743.	
204110	—	Under Driver Driving Pulley Shaft Oil Plug	01
204111	—	Under Driver Driving Pulley Shaft Oiling Leather	02
204112	12322	Under Driver Driving Pulley Shaft Oiling Leather Pin (leather)	01
		Under Driver Driving Pulley Shaft Oiling Wick	01

Numerical List of Parts

No.	Plate	Name	Each
204113	12321	Under Driver Driving Pulley Shaft	
		Thimble, for 227740	\$ 10
204117	12321	Under Driver Lever Compression Plate,	
		for 227970	10
204122	12322	Under Driver Lever Brake Leather, for	
		227735	05
204123	12322	Under Driver Lever Brake Spring, for	
		227740	05
204126	12321	Under Driver Treadle Pitman Rod Clamp	
		with two 200530c, for 227980	20
204127	11126	Under Driver Treadle Stand (left) with	
		two wood screws 1 in., No. 13, for	
		227981	08
204128	11126	Under Driver Treadle Stand (right) with	
		two wood screws 1 in., No. 13, for	
		227981	08
204235	10755	Arm Position Pin	02
204296	10751	" Cap Spool Holder Wire, for 203090..	10
204925	13188	Tension Stud Washer, for 200625b	01
205508	13183	Knife Driving Lever Bracket Position	
		Pin	02
		Nos. 206962 to 206964, for 233105.	
206962	10957	Grinder Emery Wheel Driving Shaft	1 00
206963	10957	" " " " " "	
		Pulley with two 200403c	25
206964	10957	Grinder Frame with 200577n and two	
		200387c	1 25
206966	10957	Grinder Slide Bracket Adjusting Screw	
		Slide Plate, for 233105	15
206967	10957	Grinder Slide Bracket Shaft, for 233105..	20
206969	—	" Emery Wheel Washer (paper), for	
		233105	01
206977	—	Grinder Emery Wheel, 2 in. diam., for	
		233105	25
207031	13189	Grinder Slide Bracket Stop Collar with	
		200473b, for 233105	10
210503	10753	Arm Shaft Connection Belt	80
210505a	10751	Bed Plate (back)	30
210511	10751	Face Plate	2 00
210514	10760	Feed Bar Slide Block Crank with 200035c,	
		for 210515	40
210515	10760	Feed Bar Slide Block Crank 210514 with	
		200243b, 201531c and 202276	70
210530	13182	Bobbin	10
210531	10752	Feed Lifting Rock Shaft (hollow) and	
		Hook Driving Shaft Bearing	1 75
*210532	—	Hook (sewing), for 233056	—
210533	10752	" Driving Bevel Pinion Shaft	1 00
210536	13182	" Gfb, for 233056	60

Numerical List of Parts



No.	Plate	Name	Each
210537	10757	Hook Shaft (hollow), for 210621	\$1 25
210539	10757	" " Bushing, for 210621	80
210542	—	Needle Bar Frame 210546 with 202976	2 50
210543	10761	" " Connecting Link, for 210726	1 25
210544	10761	" " " Stud with 202277, for	
		210585	80
210545	10761	Needle Bar Connecting Stud Swivel with	
		200387c, for 210585	20
210546	13185	Needle Bar Frame with 200070c, for	
		210542	1 75
210547	10756	Needle Bar Frame Guide Stud	20
210548	10756	" " Hinge Stud	30
210551	13187	" Vibrator Cam Shaft Bearing and	
		Cover	2 00
210555	13188	Needle Vibrator Pinion (spiral) with two	
		200382c	1 50
210557	10756	Needle Bar Frame Pitman Eccentric Stud	30
210559	10756	" Vibrator Cam Shaft Collar with two	
		200378c	25
210560	13187	Needle Vibrator Gear (spiral) with two	
		200382c	3 00
210561	10759	Presser Bar Lifting Releasing Lever	
		Bracket	1 10
210585	—	Needle Bar Connecting Stud 210544 with	
		210545, for 210726	1 00
210589	10760	Feed Lifting Connection Crank 210645	
		with 200050c and 200378c	30
210591	10761	Take-up (auxiliary), for swivel	25
210592	10756	Thread Guide (upper)	15
210593	10756	" " (lower)	15
210594	10756	" " (on Needle Bar Frame)	15
210595	10756	" " (on side of Arm)	08
210614	10757	Hook Driving Bevel Pinion (steel), 24	
		teeth, with two 200278c	1 00
210615	10757	Hook Shaft Bevel Gear (steel), 24 teeth,	
		with two 200382c	1 00
210616	10751	Bed Slide (front)	30
210621	—	Hook Shaft Bushing 210539 with 200931c	
		and 210537	2 25
*210645	—	Feed Lifting Connection Crank, for	
		210589	—
210705	13187	Needle Bar Frame Pitman, for 210706	2 00
210706	—	" " " " 210705 with	
		202277, 210707, 210712, two each	
		200919c and 201618c	3 75
210707	13186	Needle Vibrator Crank Link, for 210706..	75
210711	13188	" " " Shaft	75
210712	13186	" " " with 200378c and	
		200917c for 210706	75

Numerical List of Parts

No.	Plate	Name	Each
210718	13187	Needle Vibrator Cam Shaft	\$1 25
210723	13186	" " Crank Link Oil Tube	25
210725	10753	" Bar Crank with 200335C, 200374C, 200383C, 200428C and 202333, for 210726	1 00
210726	—	Needle Bar Crank complete, Nos. 202398 to 202400, 210543, 210585 and 210725	5 00
210729	10736	Bobbin Case Cap with 200598F, 201016F and 210845, for 210915	1 00
210734	13182	Bobbin Case Latch Lever, for 210914	10
210735	13182	" " Fulcrum Pin, for 210914	10
210736	13182	Bobbin Case Latch Spring, for 210915	10
210764	13182	" " Stop	62
210770	13188	Needle Vibrator Regulating Lever with 200378C and 200917C	35
210772	13188	Needle Vibrator Regulating Lever Slide	75
210779	—	" " Cam, for 210780	15
210780	13186	" " " 210779 with 200378G and 200383C	45
210845	13182	Bobbin Case Tension Spring, for 210729	50
210846	10736	" " Base, for 210847	10
210847	10736	Bobbin Case complete, Nos. 210846 and 210915, for 233057	75
210913	10736	Bobbin Case Latch, for 210914	2 00
210914	—	" " 210913 with 210734 and 210735, for 210915	10
210915	10736	Bobbin Case Cap complete, Nos. 200964C, 210729, 210736 and 210914, for 210847	25
222023	13184	Knife Driving Lever Pitman End Bearing 38443 with 679C, 42525 and two 187D, for 233072	1 25
223607	13185	Arm Shaft Bushing (back) with 202260	1 50
225180	—	Drip Pan with four wood screws 1 in., No. 5	65
225497	10776	Bobbin Case Screw Driver	25
225498	10776	Screw Driver, 7 1/2 in. long	10
225554	10776	Wrench (steel)	15
225585H	13189	Machine Clamp Screw Washer, for 227488	10
225832	13186	Knife Throw-out Shaft Collar with 200113F	02
227370	11126	Under Driver Cone Pulley (grooved), two speed, 4 3/8 in. and 5 1/2 in. belt diam., with 227553, for 227740	15
227488	10776	Machine Clamp complete, Nos. 200748H, 201582B and 225585H	1 35
227553	12322	Under Driver Cone Pulley Ball Cup complete, Nos. 204100 to 204102 and thirteen 25362, for 227370	20

Numerical List of Parts


No.	Plate	Name	Each
227602	11126	Under Driver Treadle Adjustable Connecting Slide, for 227977	\$ 20
227734	11126	Under Driver Frame with 200524C, for 227740	80
227735	11126	Under Driver Lever Brake with 200524C, 204122 and two 200374C, for 227736	85
227736	11126	Under Driver Lever Brake 227735 with 200082B and 227737, for 227740	60
227737	11126	Under Driver Lever Brake Belt Guard, for 227736	20
227740	—	Under Driver Transmitter complete, Nos. 202459, 202461, 202464, 204113, 204123, 227370, 227734, 227736, 227970 and three wood screws 1 1/2 in., No. 15, for 227985	3 00
227743	—	Under Driver Driving Pulley Shaft (hollow) with 204109, 204110, 204112 and two 204111, for 202461	60
227781	10958	Knee Lifter Rock Lever with 200522C and 200529C, for 227782	35
227782	—	Knee Lifter Rock Lever 227781 with two each 202451 and 202452, for 227783	50
227783	10958	Knee Lifter Rock Lever 227782 with 202985 and 227784	85
227784	10958	Knee Lifter Rock Lever Rod, 3 in. long, with 227785, for 227783	06
*227785	—	Knee Lifter Rock Lever Rod Cap or Oil Guard, for 227784	—
227970	11126	Under Driver Lever (compression) and Dress Guard with 204117, two each 200524C and 202845, for 227740	60
227976	11126	Under Driver Treadle with 200540B, for 227977	45
227977	11126	Under Driver Treadle 227976 with 227602, for 227981	60
227980	11126	Under Driver Treadle Pitman complete, Nos. 204126 and two 202468, for 227982	30
227981	—	Under Driver Treadle and Stand complete, Nos. 204127, 204128 and 227977, for 227982	75
227982	—	Under Driver Treadle and Pitman complete, Nos. 227980 and 227981, for 227985	90
227985	—	Under Driver (ball bearing), lever pressure, right hand, two speed, complete, Nos. 27070, 227740 and 227982	4 00
220795	13188	Presser Foot Hinge Pin, for 233088 and 233093	01
*233045	—	Arm	—
233046	13181	" Shaft with 200357E and 203100	1 59

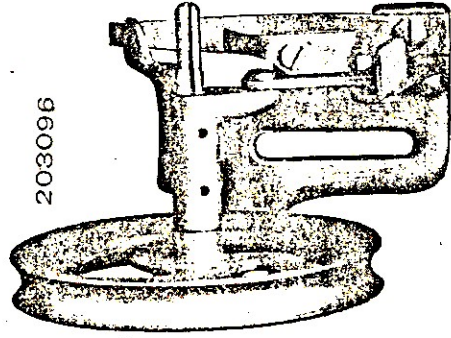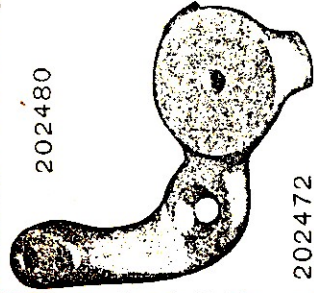  


202472



 
202481




203095

 


202470

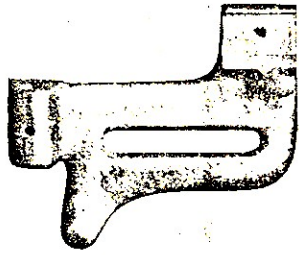 

202471

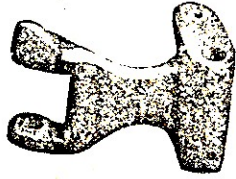 

202473

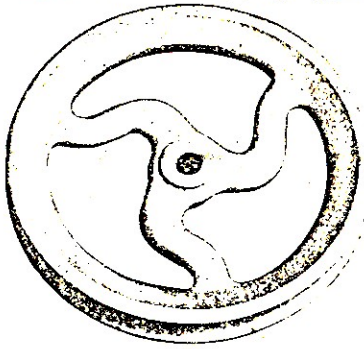 

202485

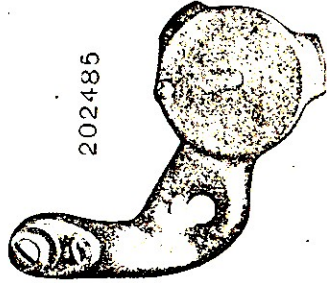 


PLATE 10272--FULL SIZE



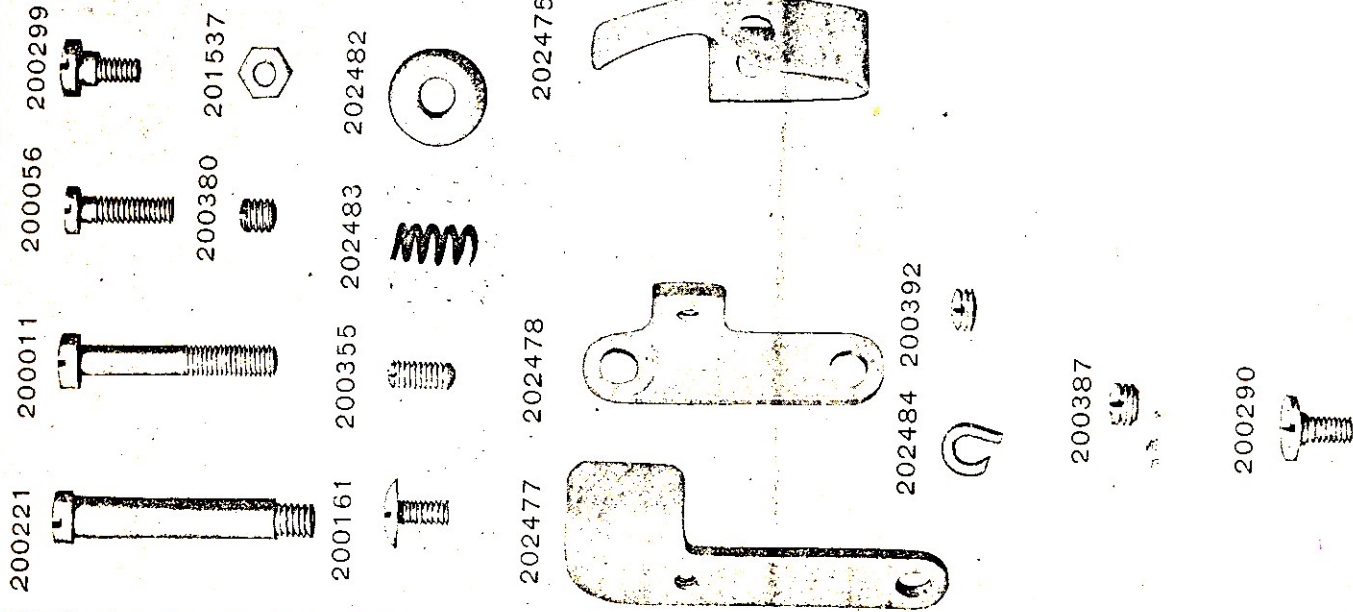 



PLATE 10736--FULL SIZE

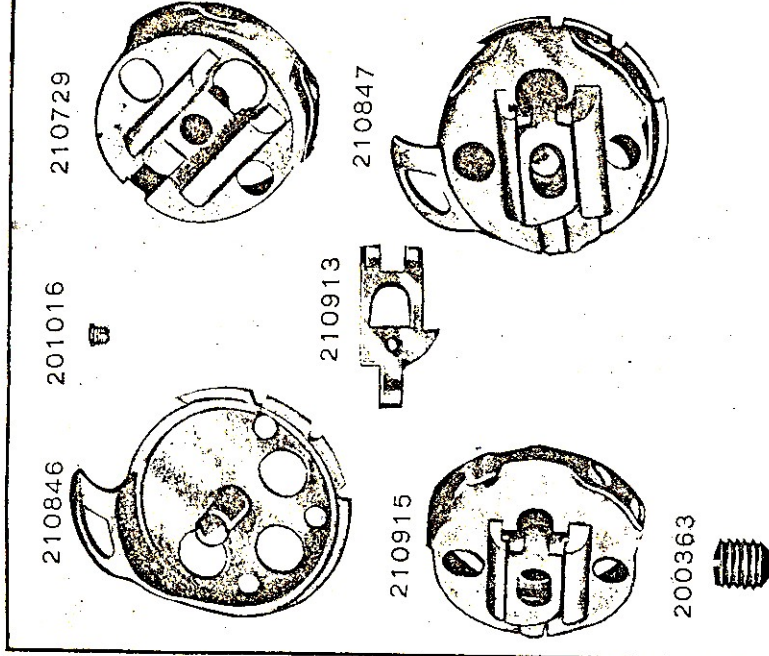 


210535 202297 210531 202306 202623

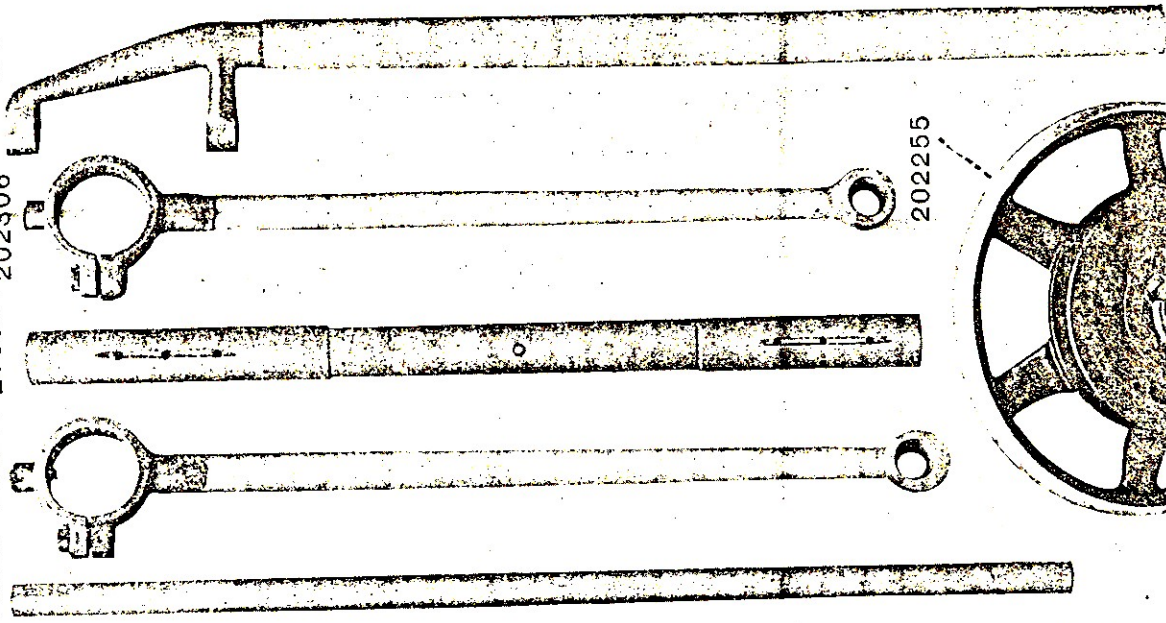 


202255

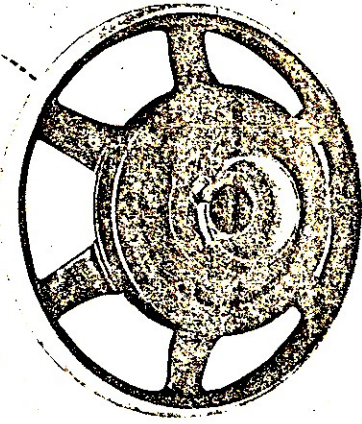 


202335 210511

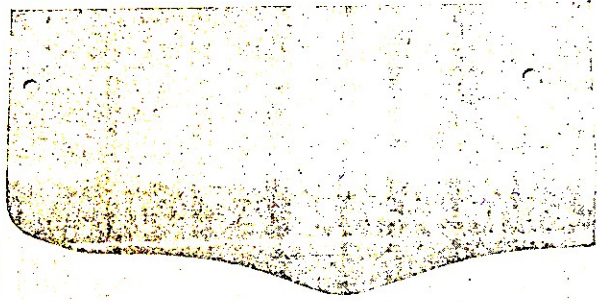 

202346

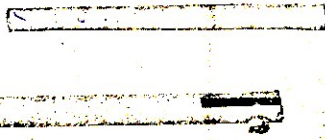 


202258

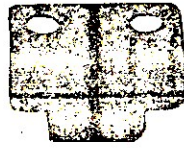 

210505



 210616

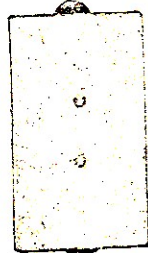

203088




 
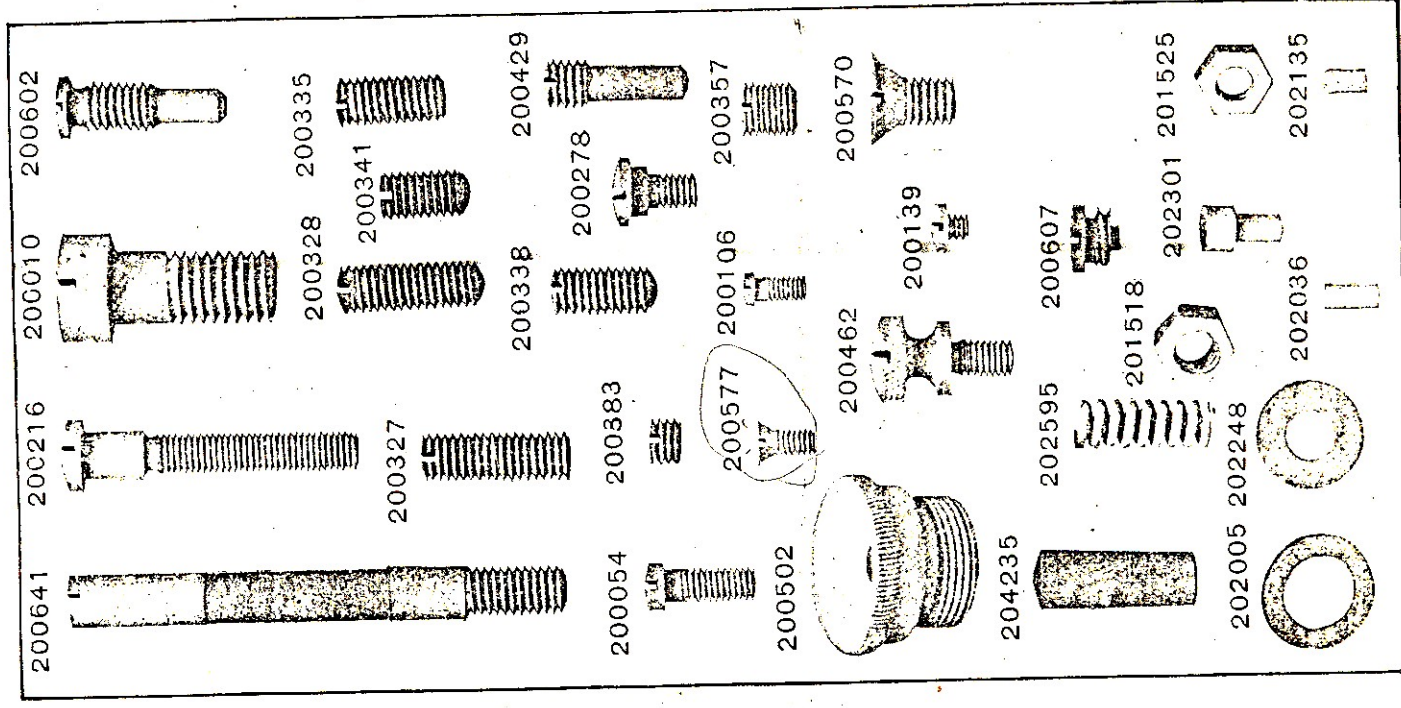 


PLATE 10757-FULL SIZE

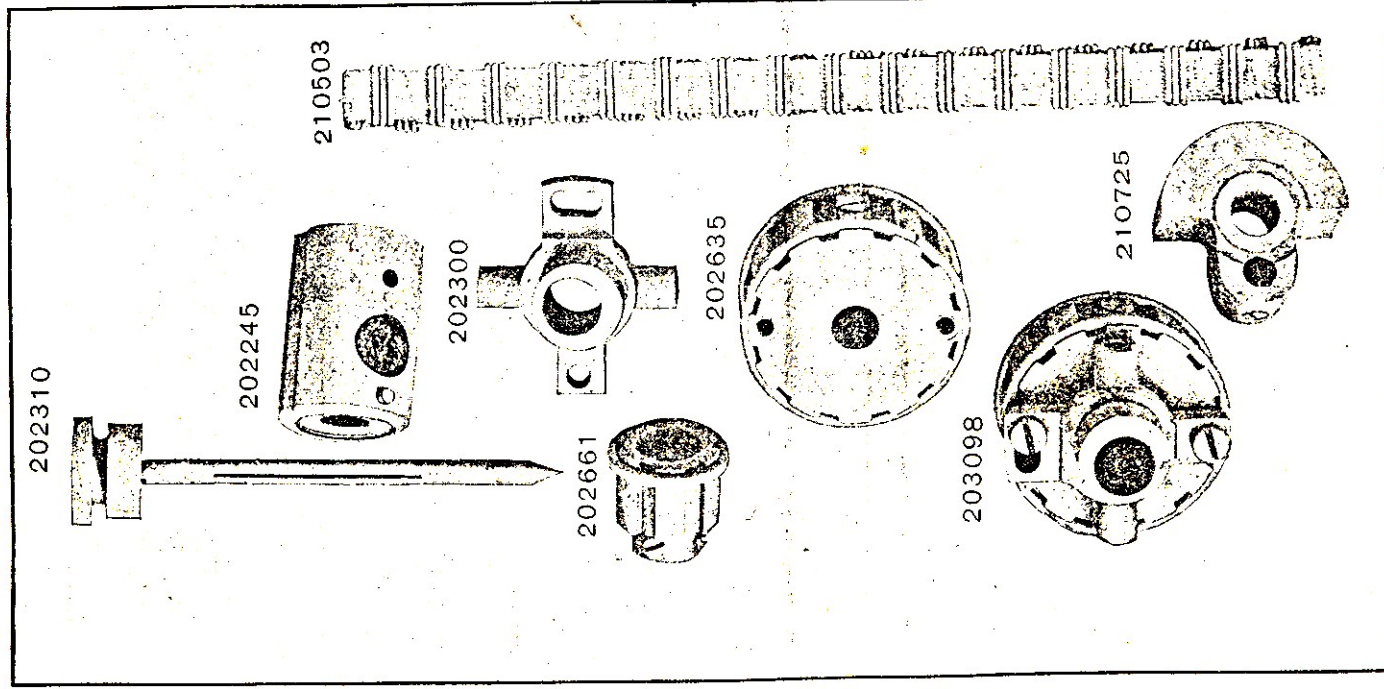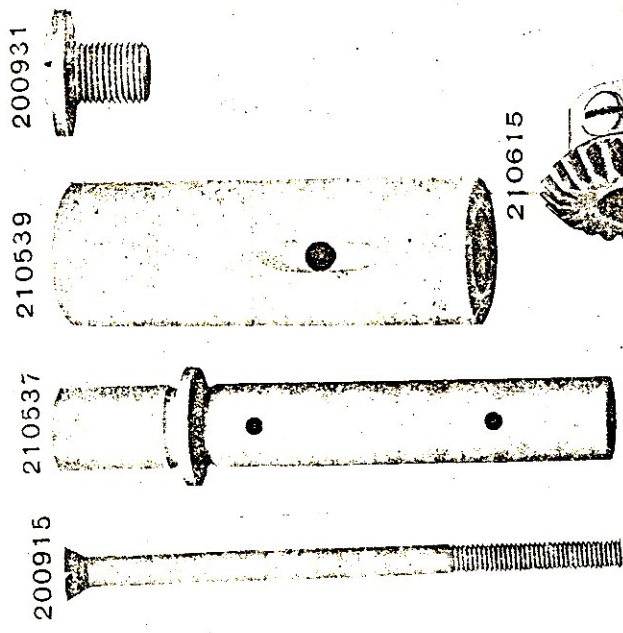 

Love
Celine



 
 
 
 
 
 
 


PLATE 10759-FULL SIZE

 200224 200262 200260 200653

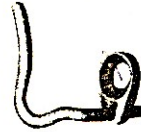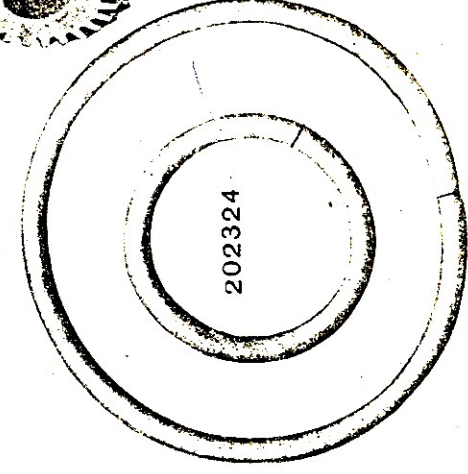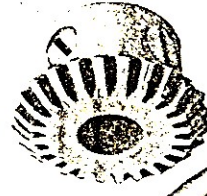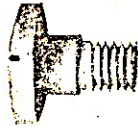

210561

 


202342



202355



 202338

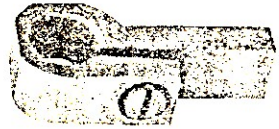

200492

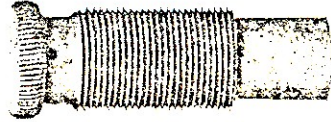 


PLATE 10760-FULL SIZE

 
200545



200243



20035-



200038



200050



200437



200378



200383



 
201531




202276



210514

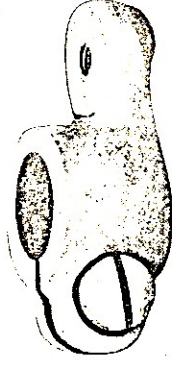


210515

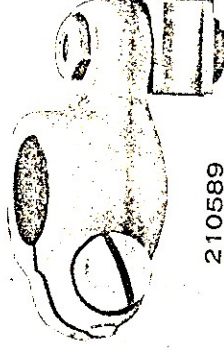 


202625



 202307

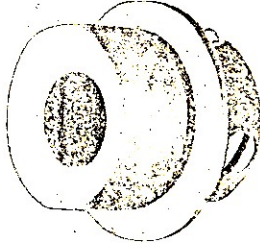

210589

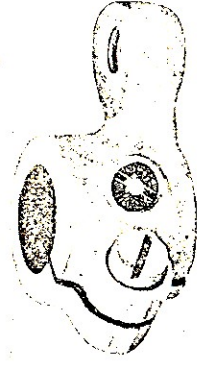 

202624

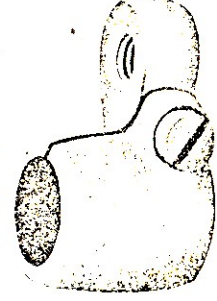 


PLATE 10761—FULL SIZE

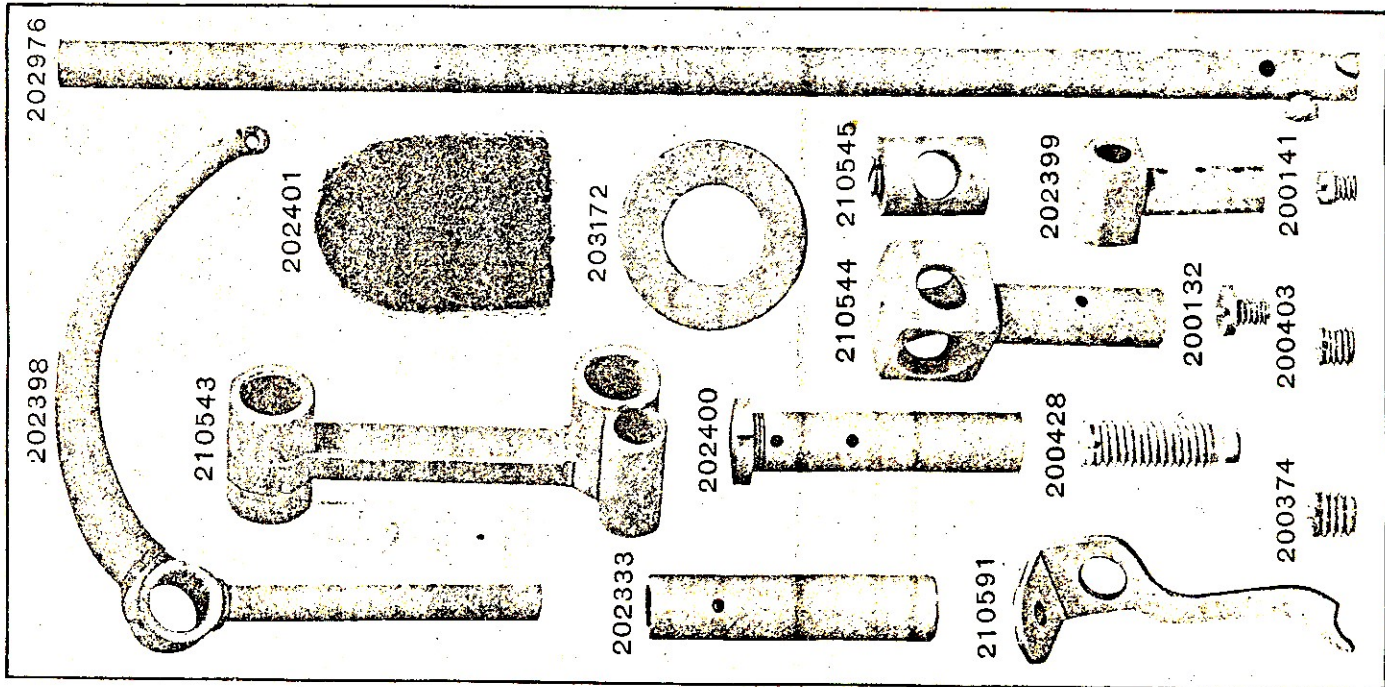 


PLATE 10762—FULL SIZE


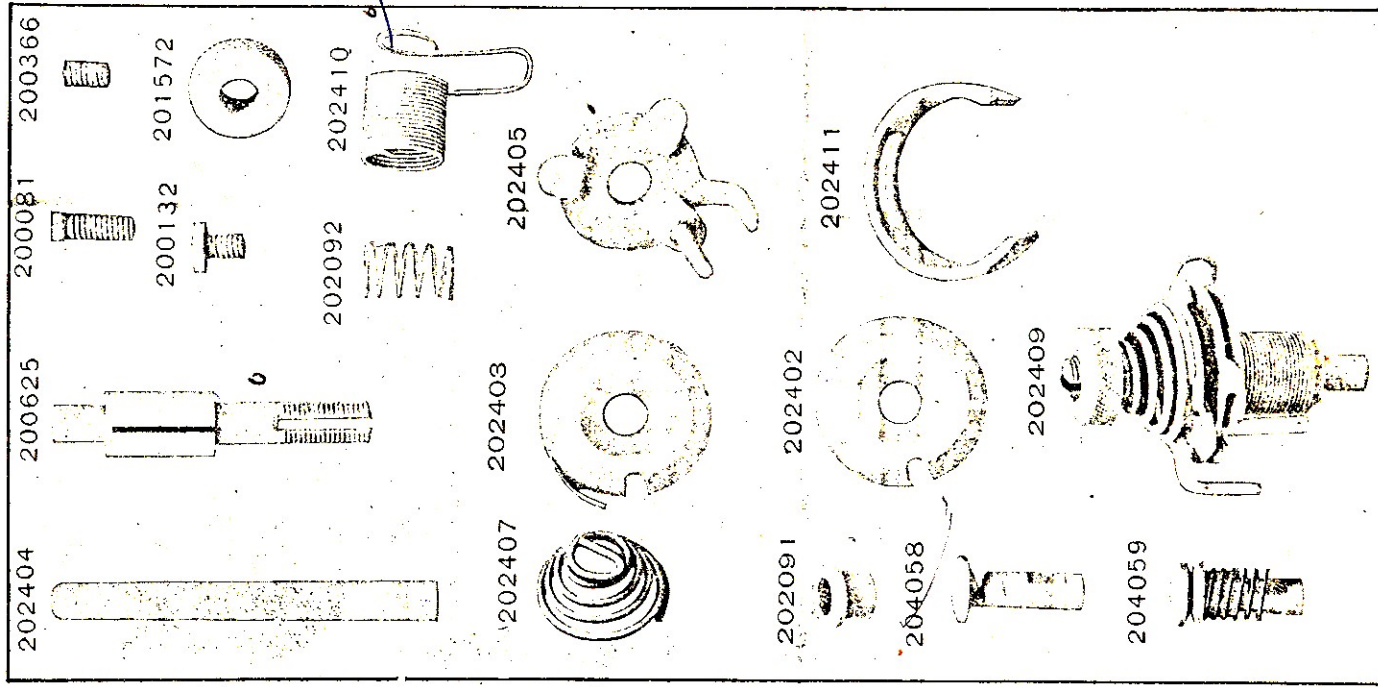 


PLATE 10776-ONE-HALF SIZE

 36578



36579

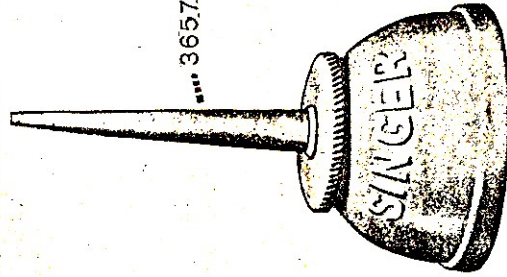 


225498



225497

227488

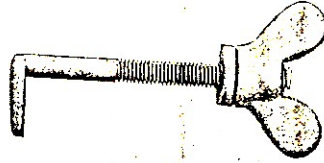

225554



41400

 


PLATE 10957-ONE-HALF SIZE

200457



200473



201510



204101



206963



 
206966



206967



206962



206964

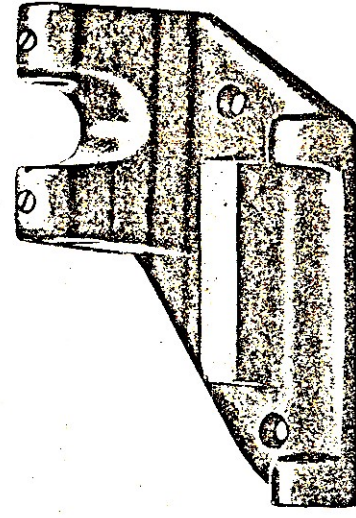 


PLATE 10958-ONE-FOURTH SIZE

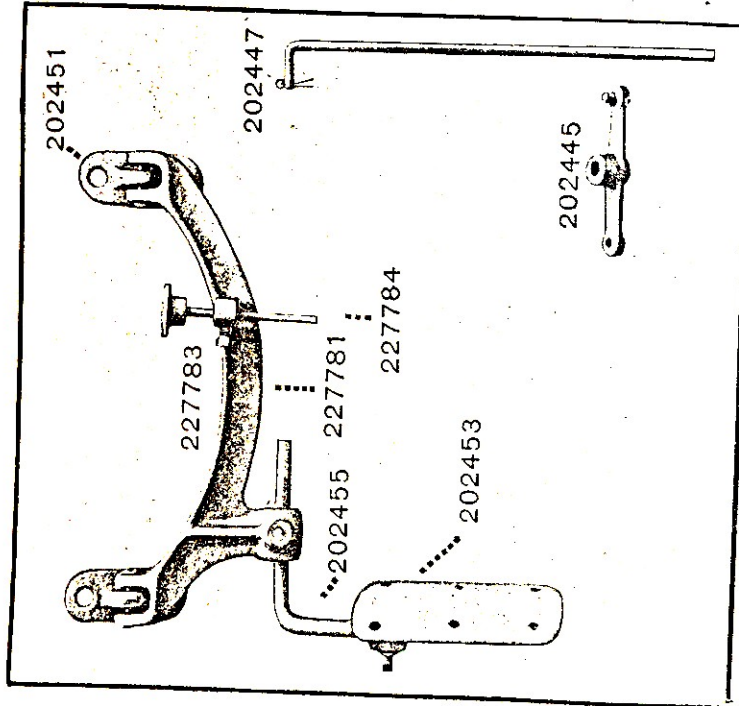 


PLATE 11126-ONE-SIXTH SIZE

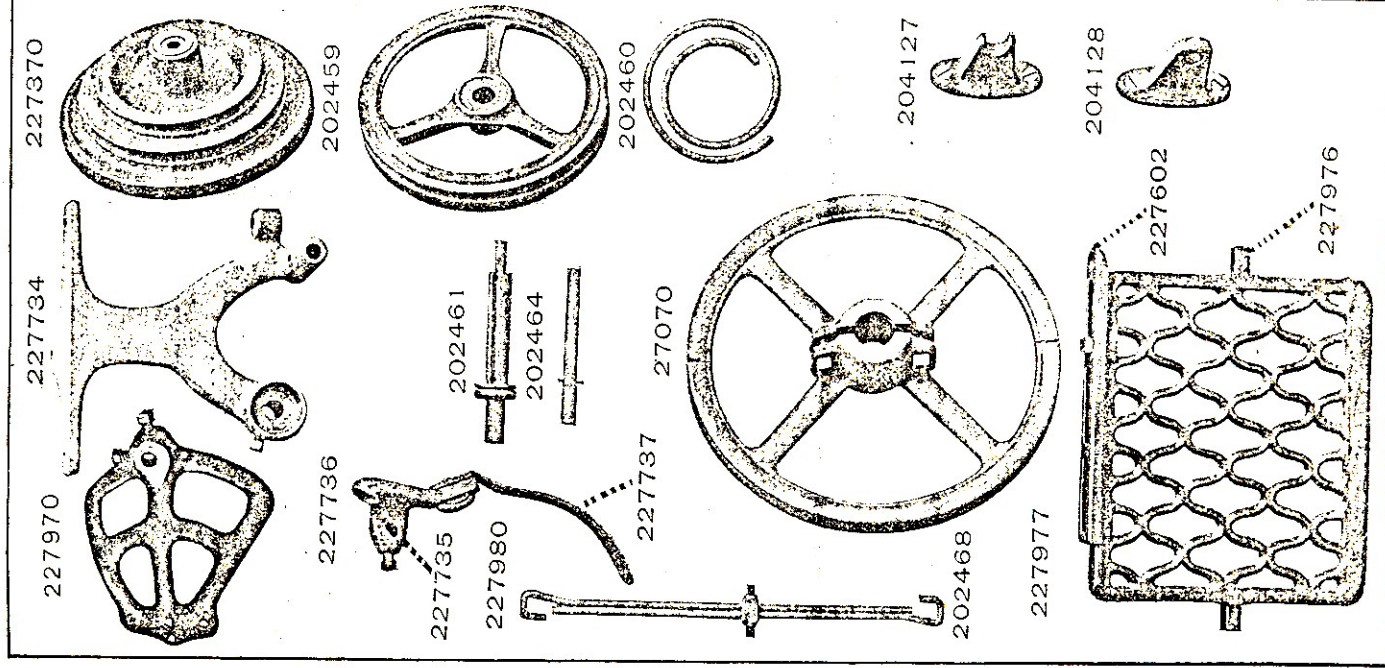 


PLATE 12321-FULL SIZE

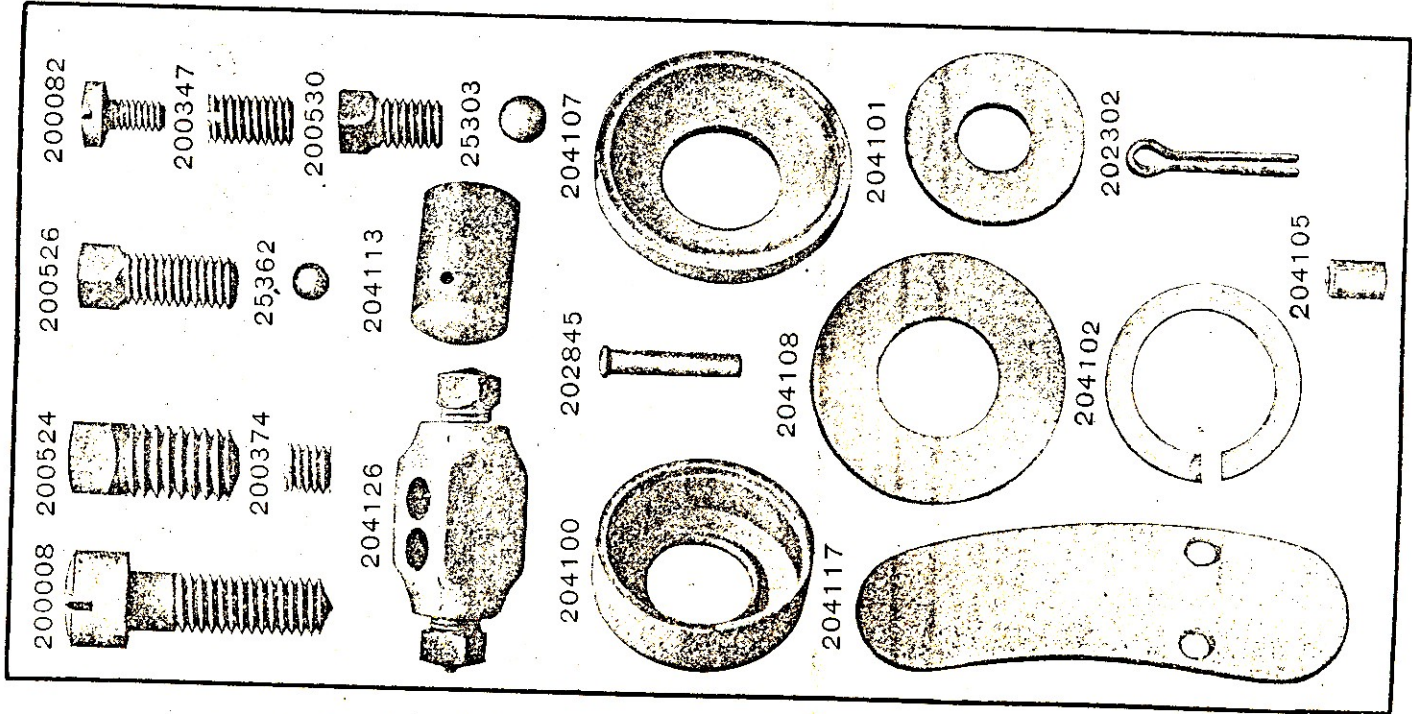 


PLATE 12322-FULL SIZE

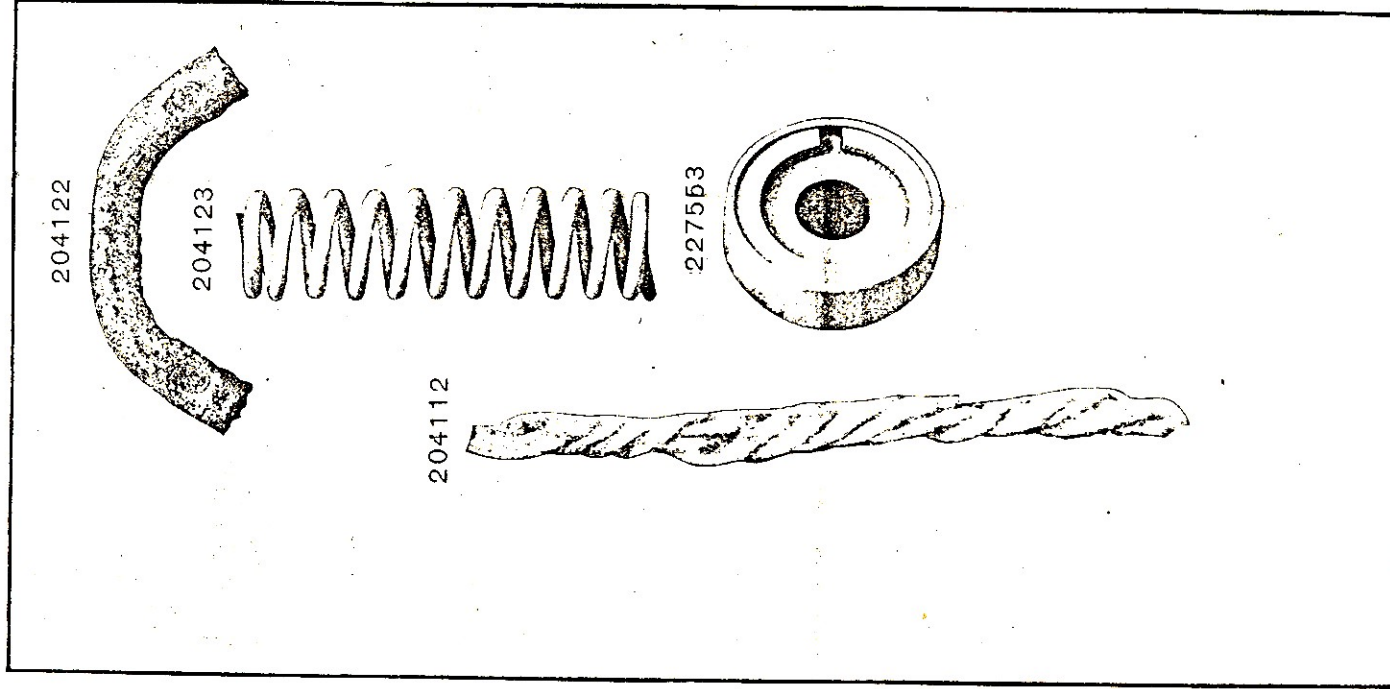 


PLATE 13181-ONE-FOURTH SIZE

233046 233080 233062

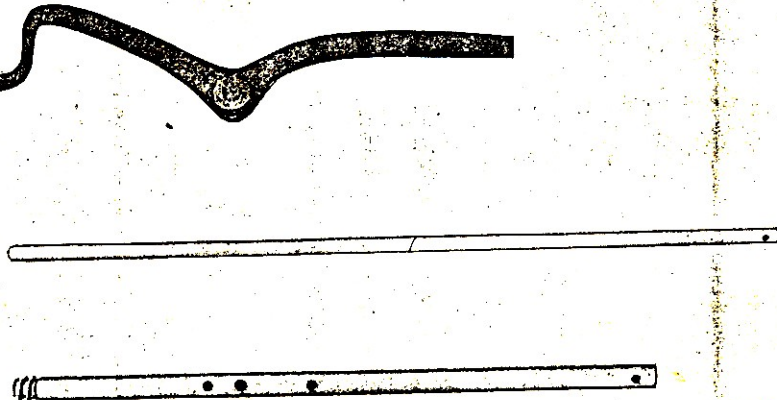 


PLATE 13182-FULL SIZE

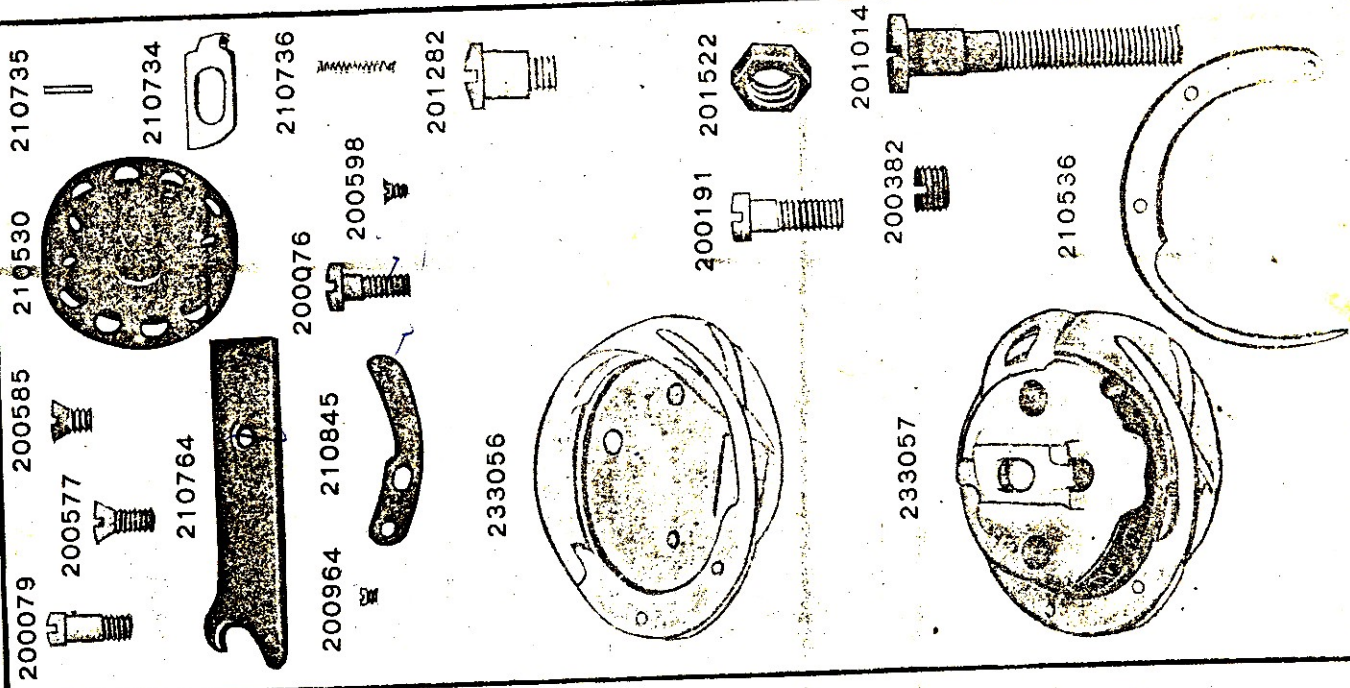 


PLATE 13183—FULL SIZE



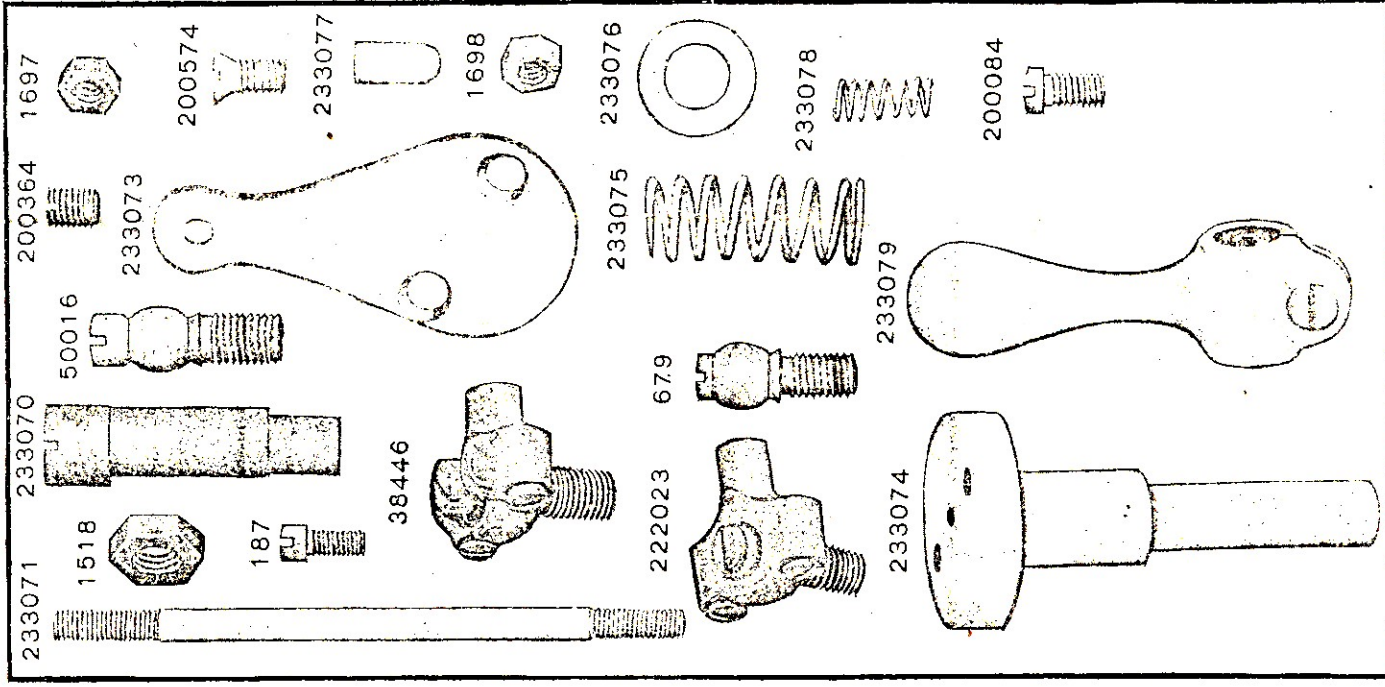 


PLATE 13185.—ONE-HALF SIZE

 210546

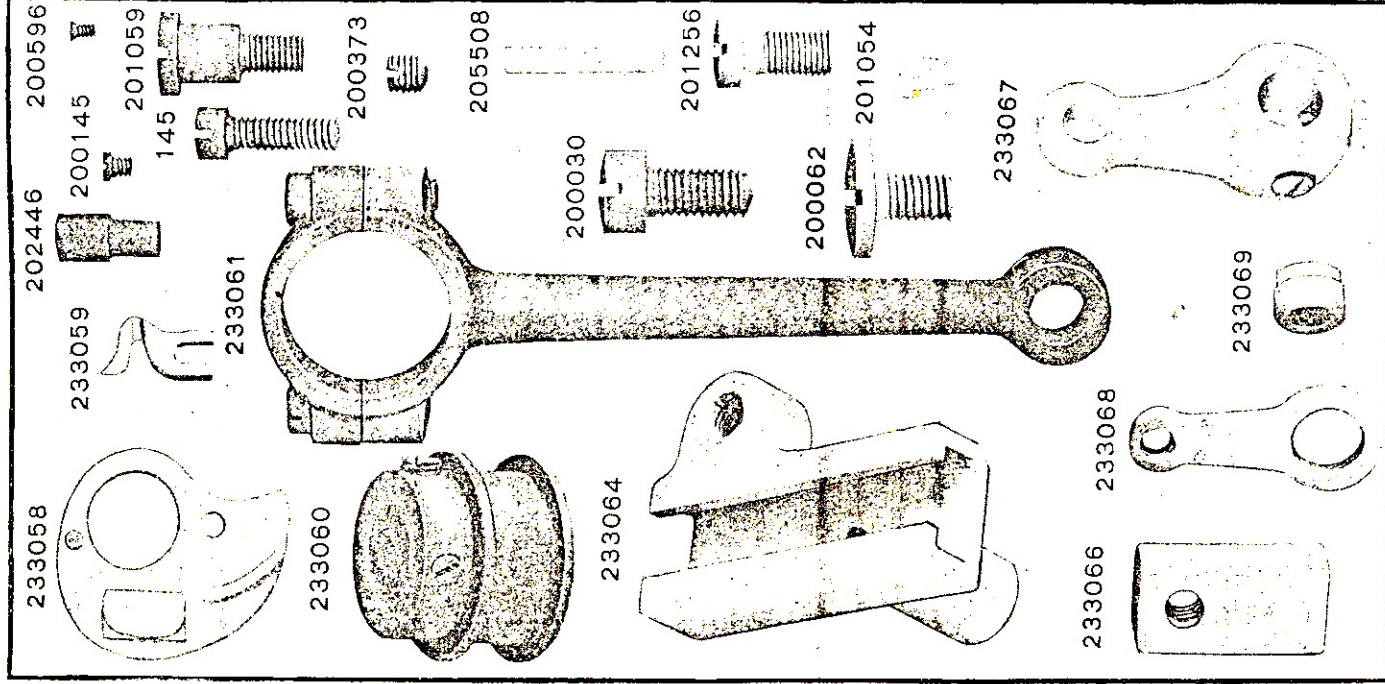


233065

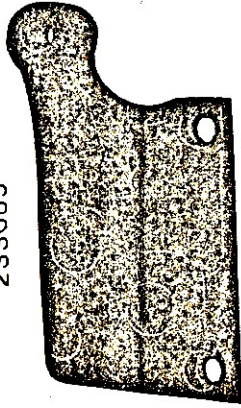 


233063



 
233049

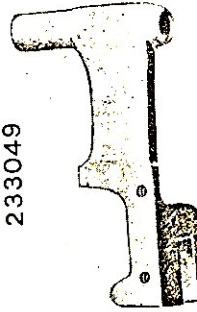

233048

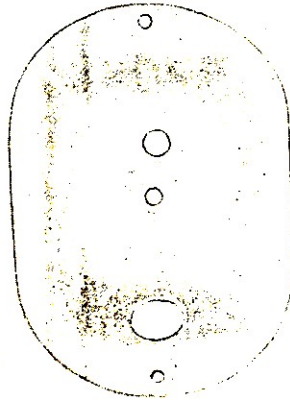 

223607

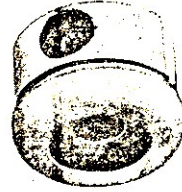 

202449


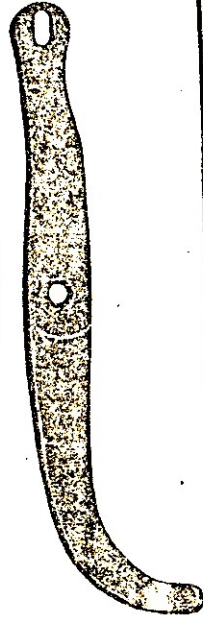 


PLATE 13186.—FULL SIZE

 233081



200051

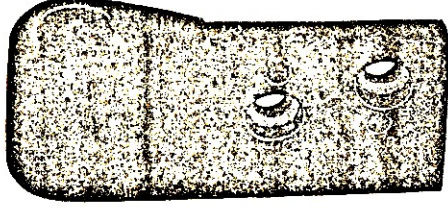

202602



225832



200113



201107



 
233082




200070



210712

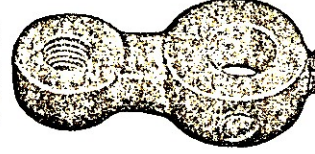

210780

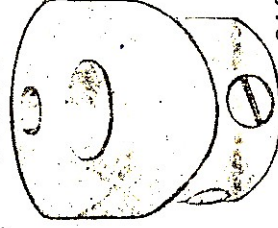 

233083



210723



210707



200917



201283



201618



200919



