

PARTS LIST

SINGER*

 
14 U12

 - LQJA


* A Trademark of THE SINGER COMPANY
Copyright © 1981 THE SINGER COMPANY
All Rights Reserved Throughout the World

INDEX


1

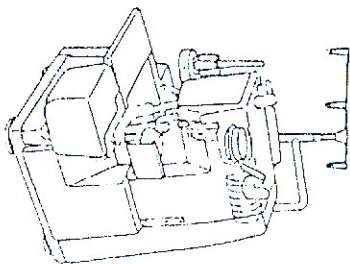


2

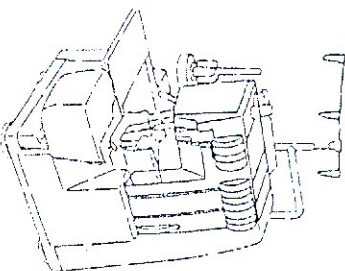 


3

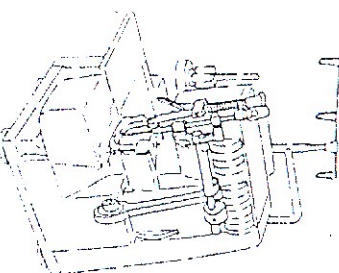 


4

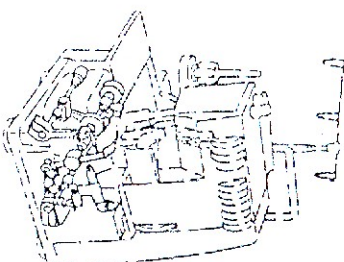 


5

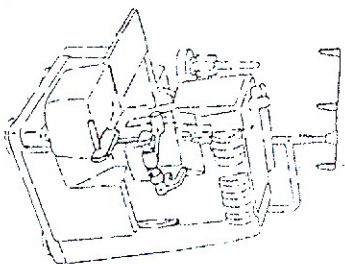 


6

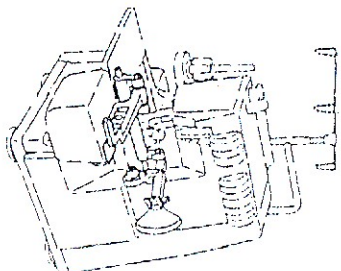 


7



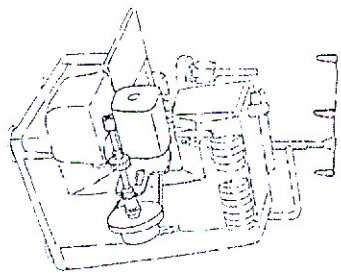 


8





















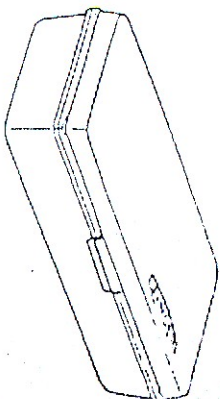 


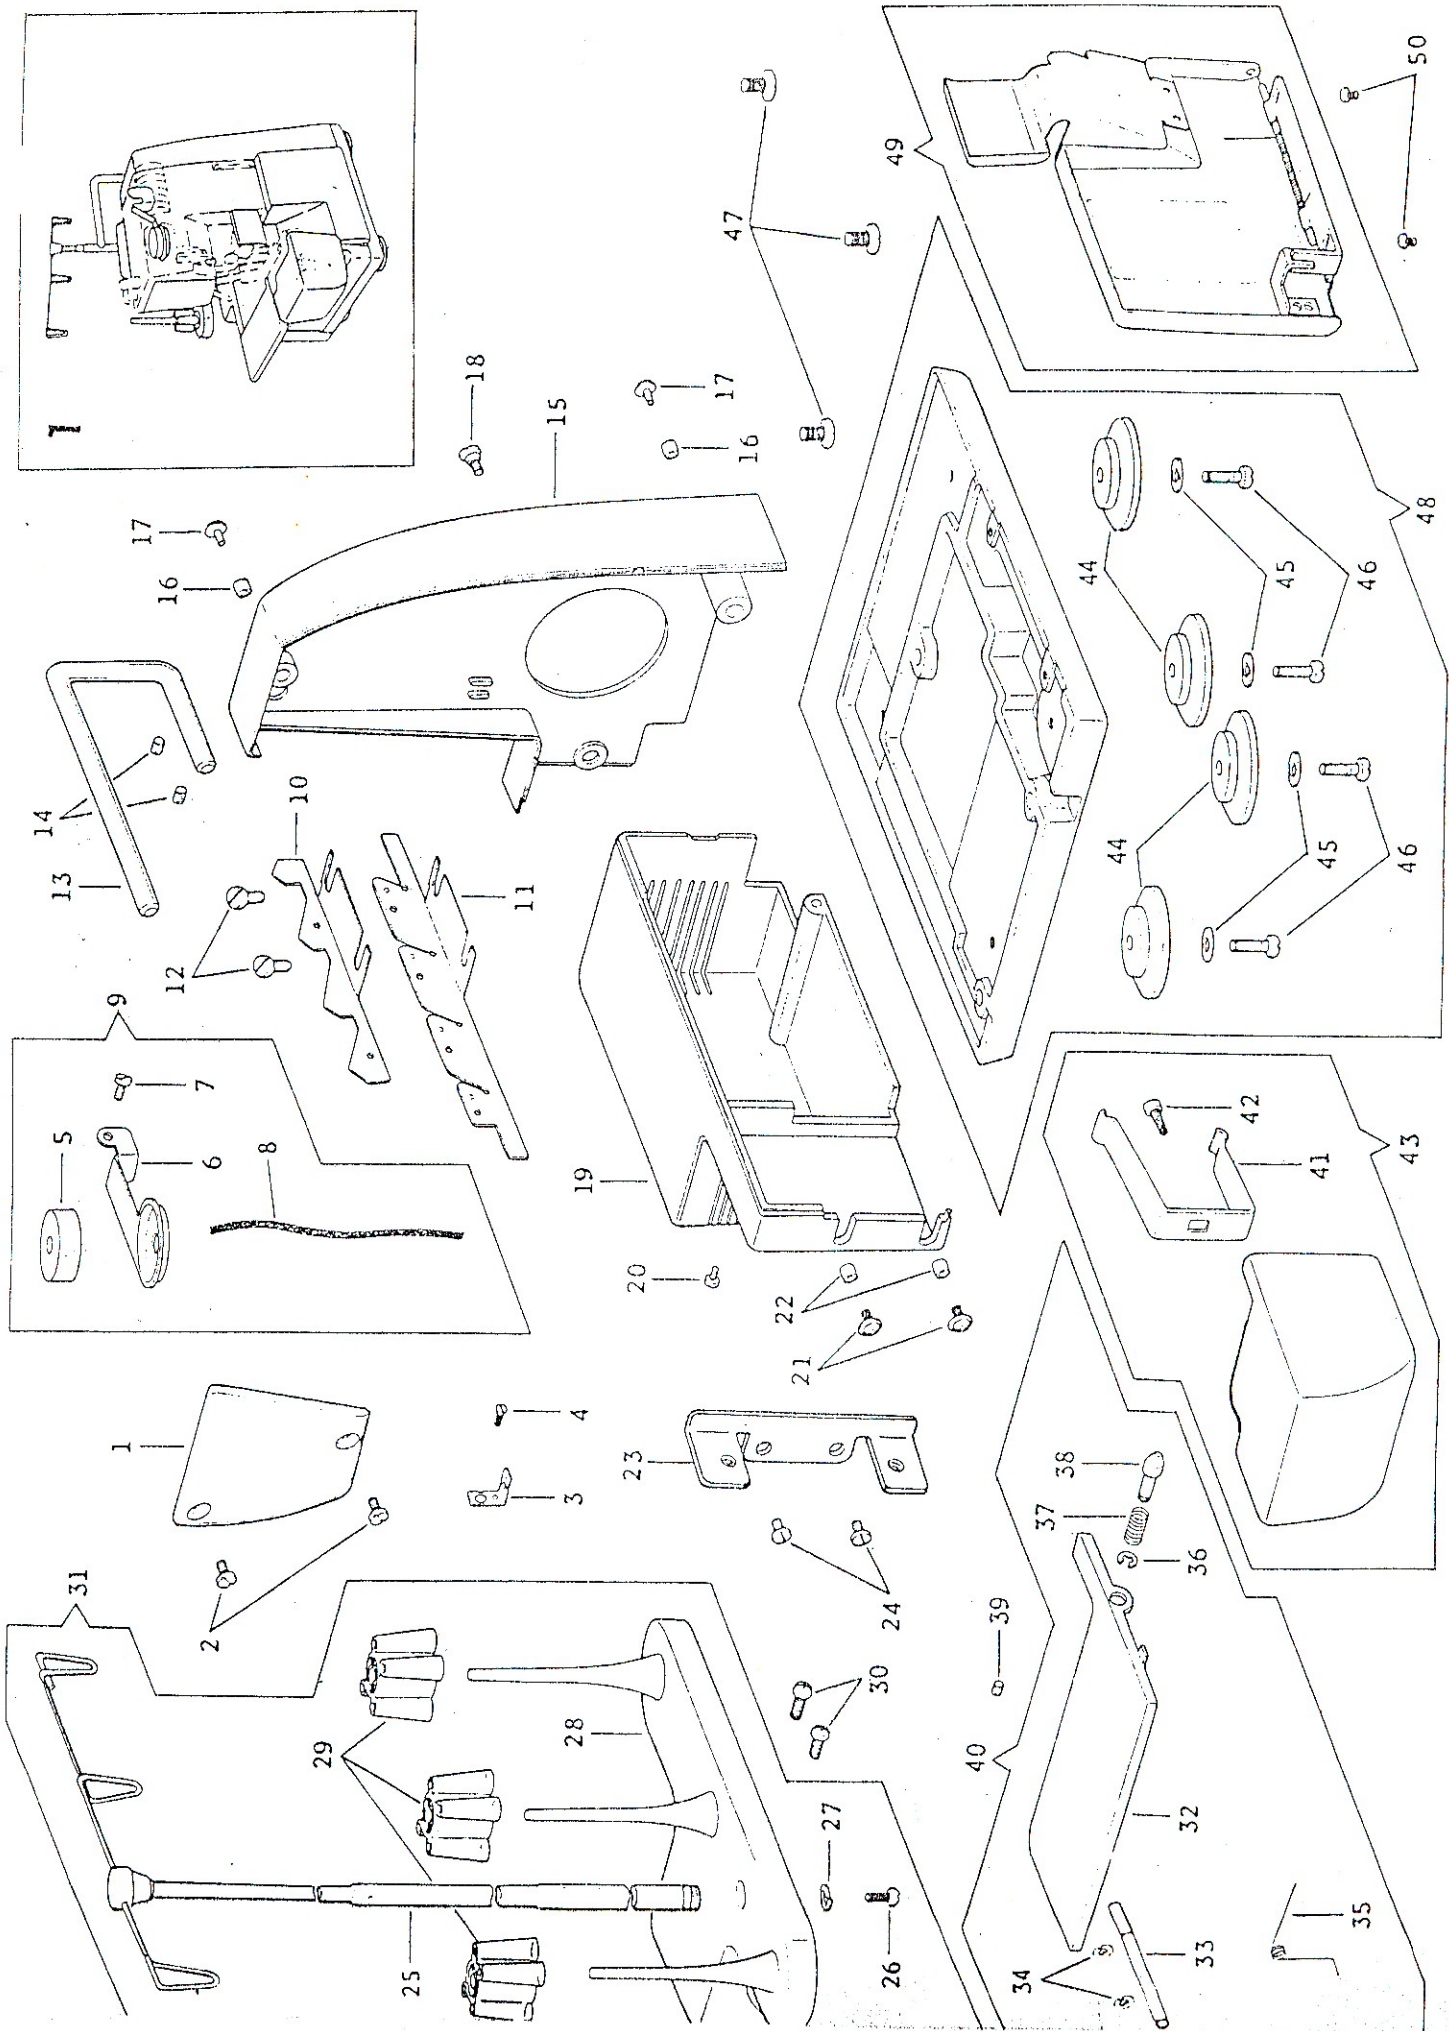 

PART NO.	DESCRIPTION
1 410241	Face Plate
2 544134-453	Face Plate Screw (2)
3 410210-452	Needle Thread Guide
4 544258	Needle Thread Guide Screw
5 410205	Felt
6 410204	Felt Support
7 544039	Felt Support Set Screw
8 543370	Oil Wick
9 410203	Felt Support
10 410408	Thread Guide Plate Auxiliary Plate
11 410209	Thread Guide Plate
12 544212-001	Thread Guide Plate Set Screw (2)
13 410202	Handle
14 544204-005	Handle Set Screw
15 410250	Pulley Cover
16 408792	Pulley Cover Screw Spacer (2)
17 544270-001	Pulley Cover Screw (2)
18 544271	Pulley Cover Screw Stud (long)
19 410248	Motor Cover
20 544212-001	Motor Cover Screw
21 544270-001	Motor Cover Screw (2)
22 408792	Motor Cover Screw Spacer (2)
23 410468	Motor Cover Mounting Plate
24 544212-001	Motor Cover Mounting Plate Screw
25 410396	Thread Unwinder Thread Guide Rod Comp.
26 544212-003	Thread Unwinder Thread Guide Rod Screw
27 543805-003	Thread Unwinder Thread Guide Rod Screw Washer
28 410389	Thread Unwinder Comp.
29 546893	Spool Holder (3)
30 544213-001	Thread Unwinder Comp. Screw (2)
31 410486	Thread Unwinder Comp.
32 410243	Bed Lid Comp.
33 410246	Bed Lid Stud
34 546623	Bed Lid Stud Retaining Ring (2)
35 410247	Bed Lid Stud Spring
36 546623	Bed Lid Latch Retaining Ring
37 381877	Bed Lid Latch Spring
38 381874-451	Bed Lid Latch
39 544203-001	Bed Lid Stud Screw
40 410242	Bed Lid Comp.
41 410251	Cylinder Cover Spring
42 544222-003	Cylinder Cover Spring Clamping Screw
43 410249	Cylinder Cover Comp.
44 410208	Machine Base Cushion (4)
45 543803-004	Machine Base Cushion Screw Washer (4)
46 544218-001	Machine Base Cushion Screw (4)
47 544214-005	Machine Base Screw (3)
48 410206	Machine Base
49 410235-002	Looper Cover Comp.
50 544212-001	Looper Cover Screw (2)

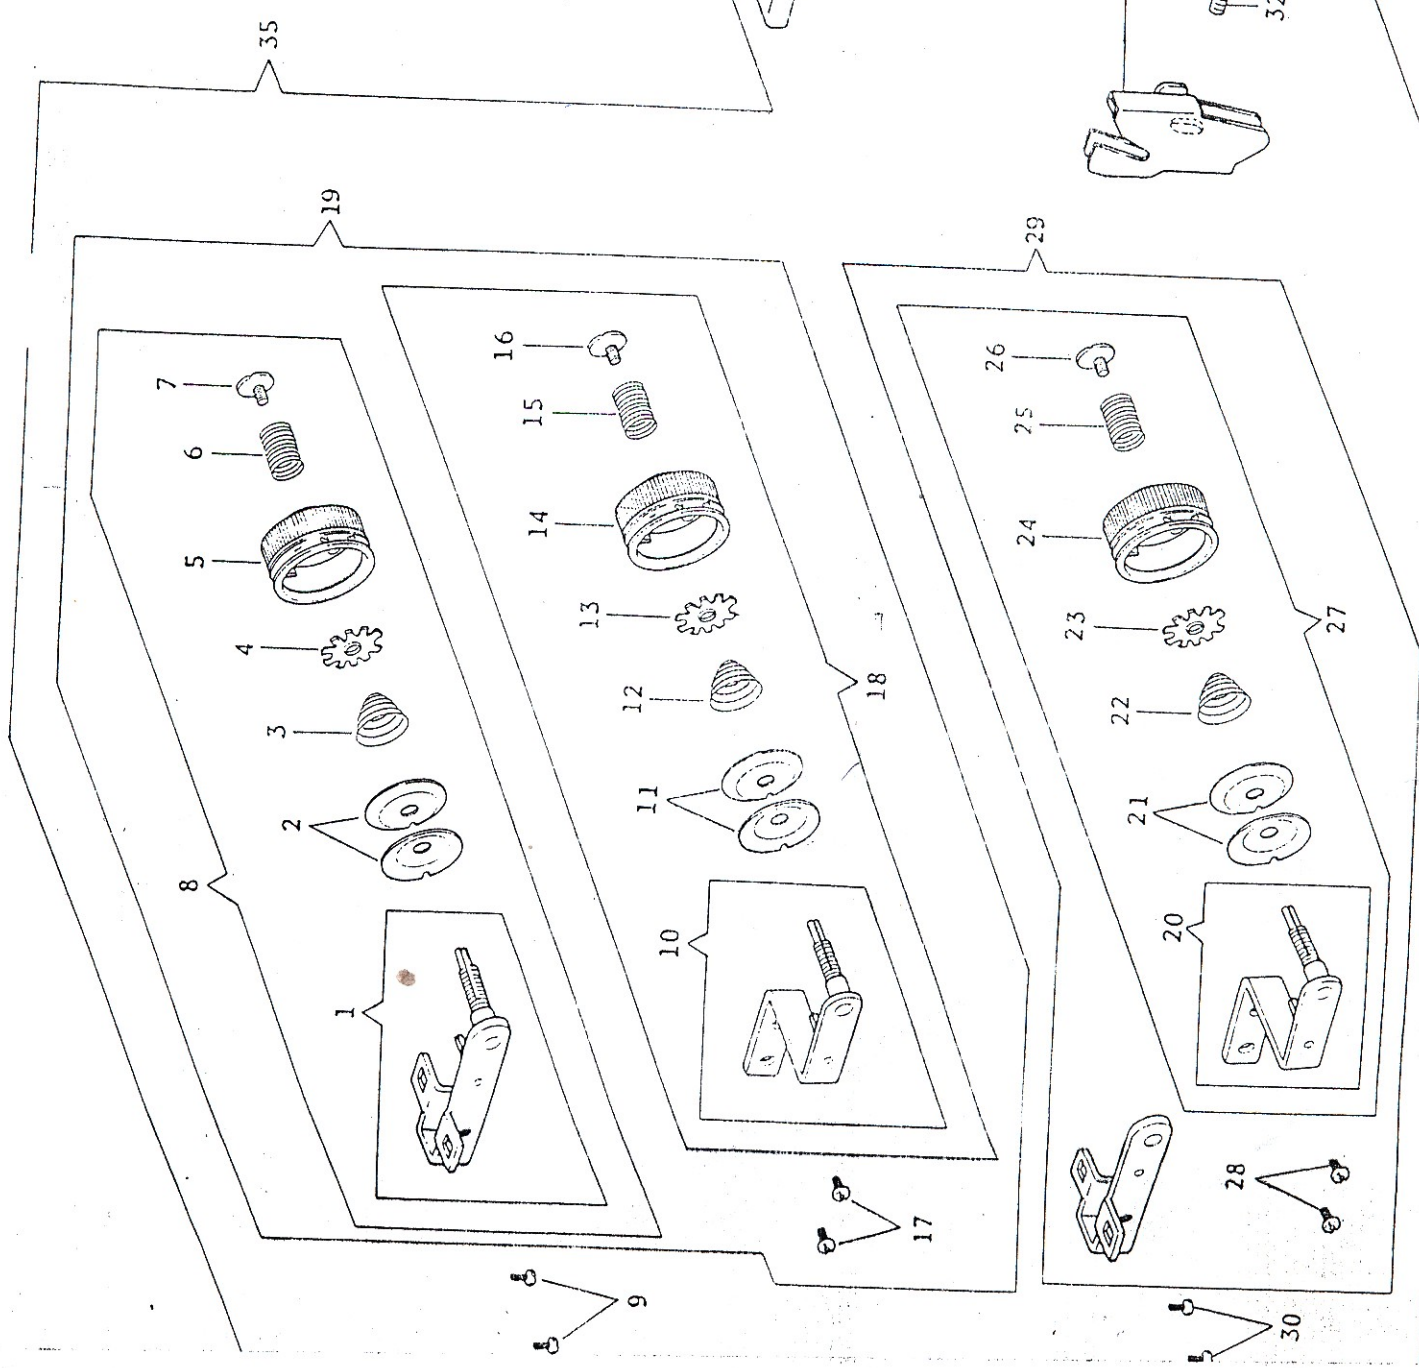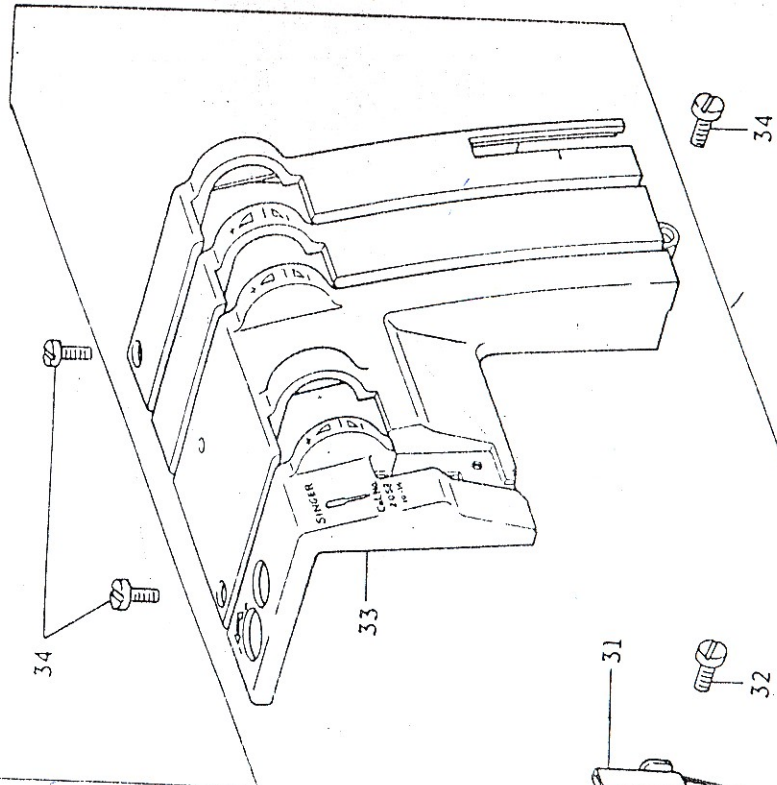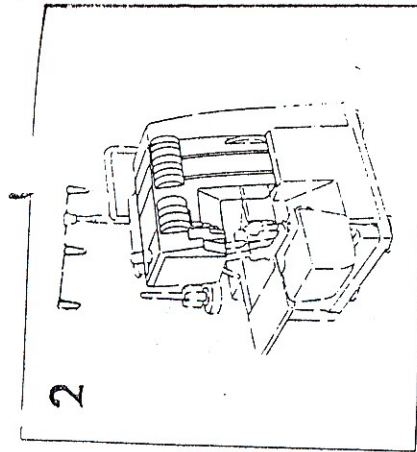   


PART NO.	DESCRIPTION
1 410220	Tension Dial Bracket (right) Comp.
2 410226	Tension Disc (2)
3 410477	Tension Disc Spring
4 410228	Tension Disc Spring Nut
5 410229	Tension Dial Comp.
6 410230	Tension Dial Presser Spring
7 544265	Tension Dial Presser Spring Screw
8 410468	Tension Dial Comp.
9 544212-001	Tension Dial Comp. Screw (2)
10 410232	Tension Dial Bracket (left) Comp.
11 410226	Tension Disc (2)
12 410477	Tension Disc Spring
13 410228	Tension Disc Spring Nut
14 410229	Tension Dial Comp.
15 410230	Tension Dial Presser Spring
16 544265	Tension Dial Presser Spring Screw
17 544212-001	Tension Dial Bracket (left) Set Screw (2)
18 410488	Tension Dial Bracket (left) Comp.
19 410480	Tension Dial Comp. (D)
20 410232	Tension Dial Bracket (left) Comp.
21 410226	Tension Disc (2)
22 410227	Tension Disc Spring
23 410228	Tension Disc Spring Nut
24 410229	Tension Dial Comp.
25 410230	Tension Dial Presser Spring
26 544265	Tension Dial Presser Spring Screw
27 410231	Tension Dial Bracket (left) Comp.
28 544212-001	Tension Dial Bracket (left) Set Screw (2)
29 410479	Tension Dial Comp. (A)
30 544212-001	Tension Dial Comp. Screw (2)
31 410466	Front Cover Thread Take-up
32 544269	Front Cover Thread Take-up Set Screw
33 410465	Front Cover
34 544134-453	Front Cover Screw (3)
35 410464	Front Cover Comp.








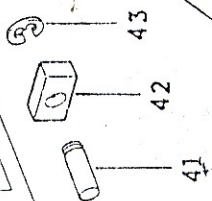 
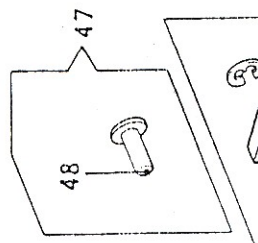 
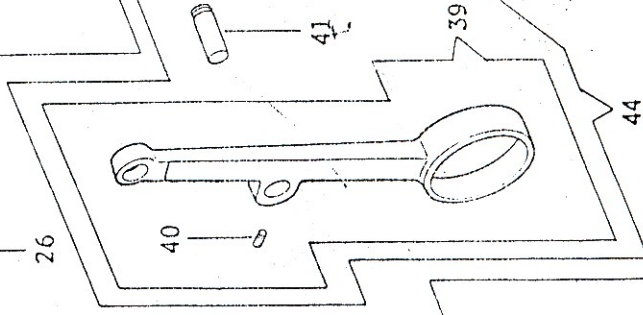 
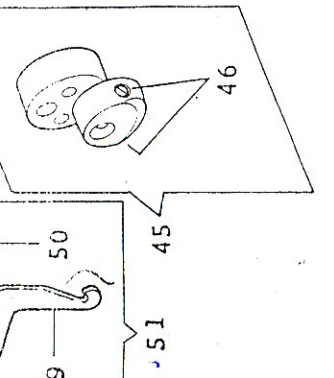 
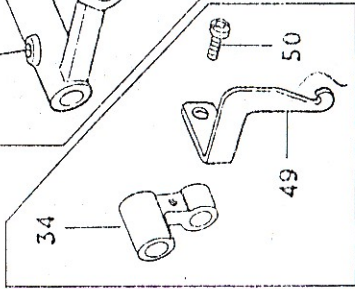 
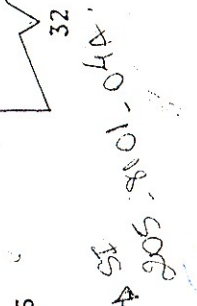 
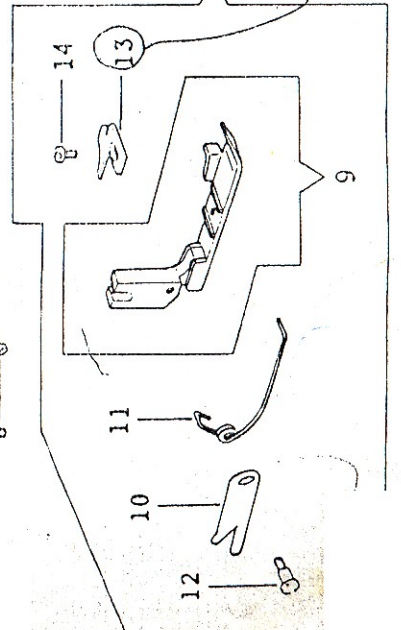 
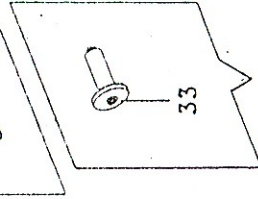 
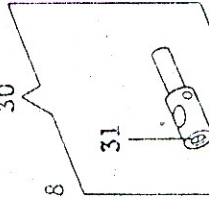 
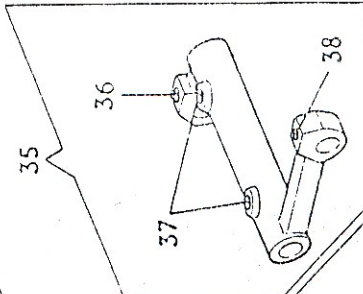 
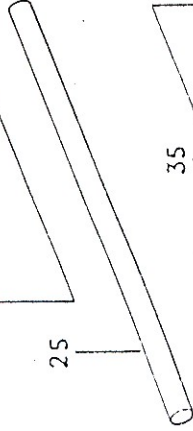 
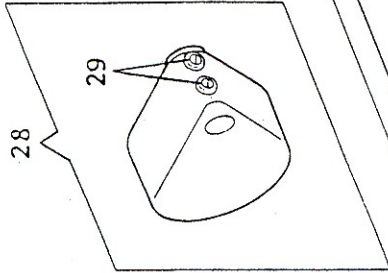 
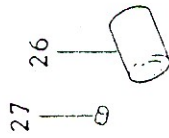 
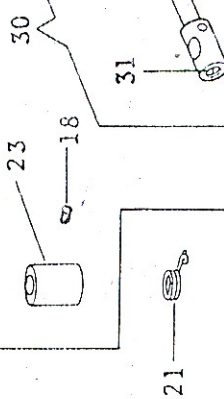 
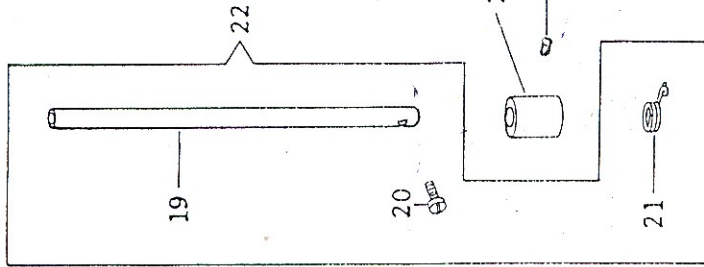 
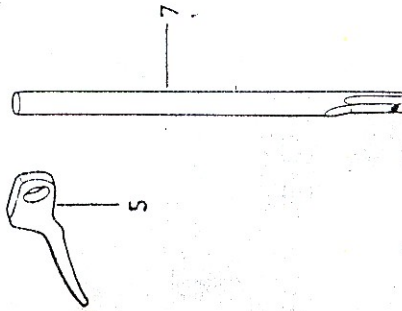 
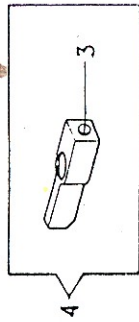 
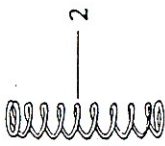 
 
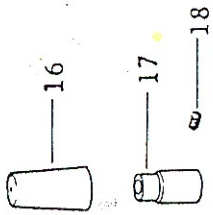 
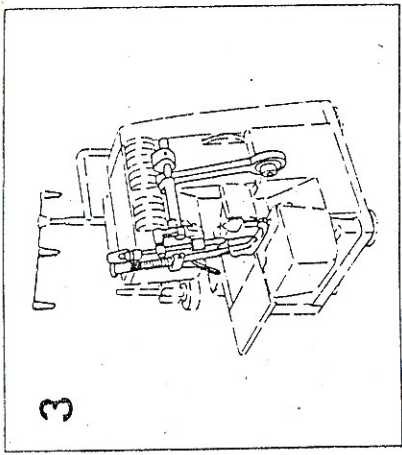 


205-8-101-044

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
1 544262	Presser Regulating Thum Screw	49 410463	Needle Thread Take-up
2 410355	Presser Bar Spring	50 544211-051	Needle Thread Take-up Screw
3 544204-001	Presser Bar Guide Bracket Screw	51 410451	Needle Bar Connecting Link Comp.
4 410352	Presser Bar Guide Bracket Comp.		
5 410354	Presser Bar Lifter		
6 544261	Presser Bar Lifter Screw Stud		
7 410351	Presser Bar		
8 504063-451	Presser Foot Screw		
9 410344	Presser Foot Comp.		
10 410349	Thread Cutter		
11 410348	Presser Foot Spring		
12 544264	Presser Foot Screw Stud		
13 410458	Presser Foot Chaining-off Finger		
14 545180	Presser Foot Chaining-off Finger Screw		
15 410457	Presser Foot Comp.		
16 410322	Needle Bar Bushing (upper) Cap		
17 410323	Needle Bar Bushing (upper)		
18 544204-001	Needle Bar Bushing Set Screw (2)		
19 410320	Needle Bar		
20 549324	Needle Set Screw		
21 410321	Needle Bar Thread Guide		
22 410319	Needle Bar Comp.		
23 410324	Needle Bar Bushing (lower)		
24 12053-010	Needle		
25 410333	Arm Shaft		
26 410279	Arm Shaft Bushing (2)		
27 544204-001	Arm Shaft Bushing Set Screw (2)		
28 410335	Arm Shaft Balance Weight Comp.		
29 544204-001	Arm Shaft Balance Weight Screw (2)		
30 410325	Needle Bar Connecting Stud		
31 544044	Needle Bar Connecting Stud Screw		
32 410266	Needle Bar Connecting Link Pin Comp.		
33 410422	Needle Bar Connecting Link Pin Oil Wick		
34 410327	Needle Bar Connecting Link		
35 410331	Needle Bar Crank Comp.		
36 544203-001	Needle Bar Crank Rod Pin Screw		
37 544204-001	Needle Bar Crank Screw (2)		
38 544203-001	Needle Bar Connecting Link Pin		
39 410338	Needle Bar Crank Rod Comp.		
40 544203-001	Needle Bar Crank Rod Slide Block Pin Screw		
41 410340	Needle Bar Crank Rod Slide Block Pin		
42 511030	Needle Bar Crank Rod Slide Block		
43 543801-006	Needle Bar Crank Rod Slide Block Pin Retaining Ring		
44 410337	Needle Bar Crank Rod Comp.		
45 410461	Needle Bar Eccentric Cam Comp.		
46 544204-002	Needle Bar Eccentric Cam Set Screw (2)		
47 410266	Needle Bar Crank Rod Pin Comp.		
48 410422	Needle Bar Crank Rod Pin Oil Wick		

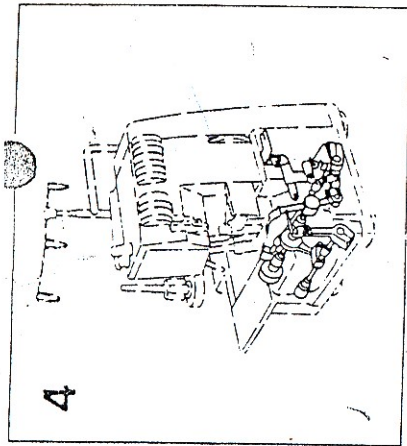 

                            18
17
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1

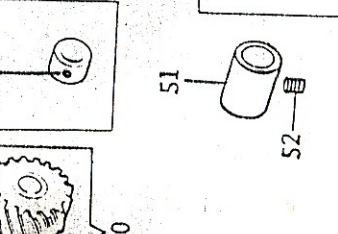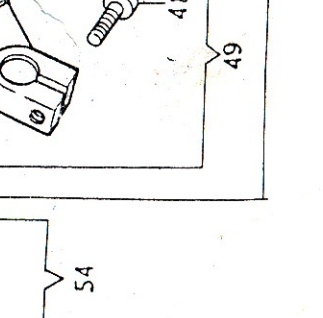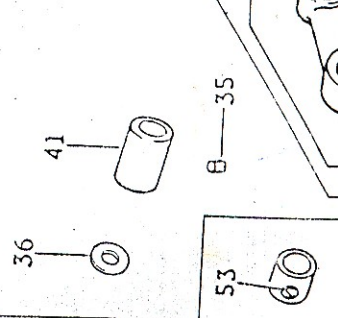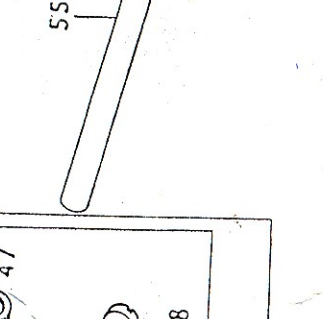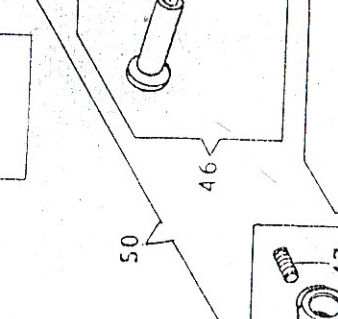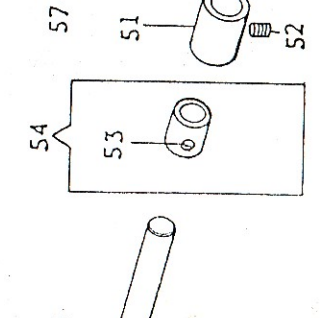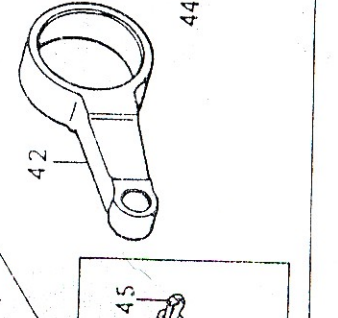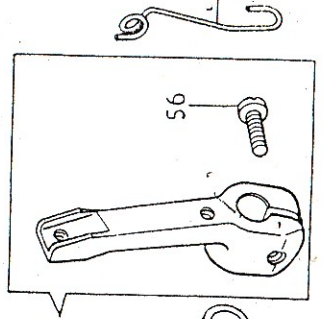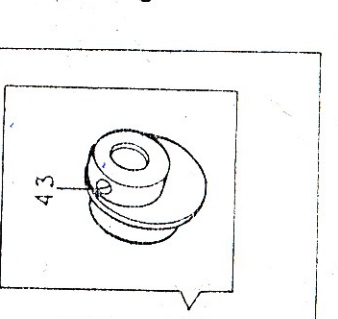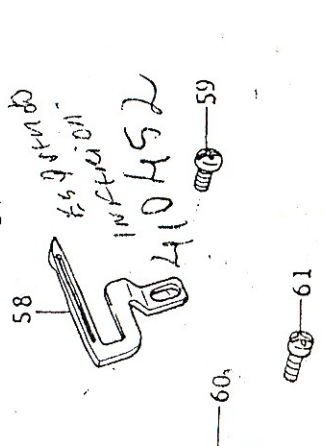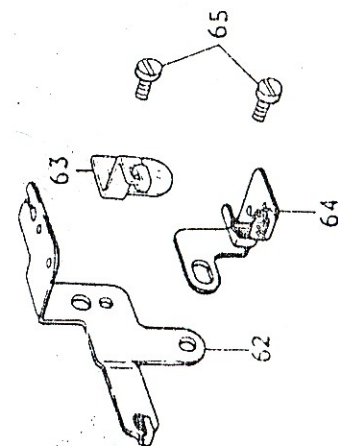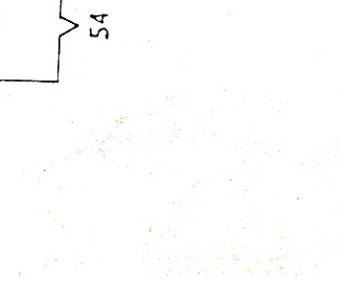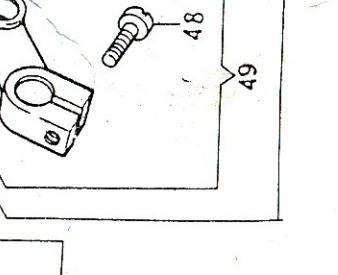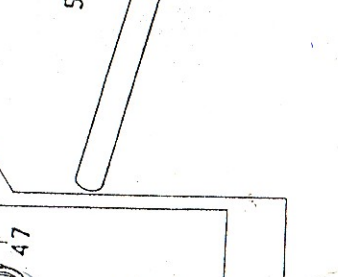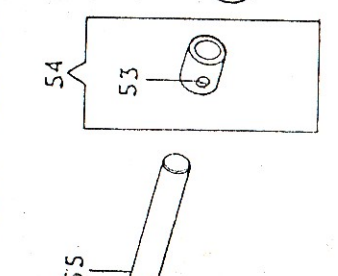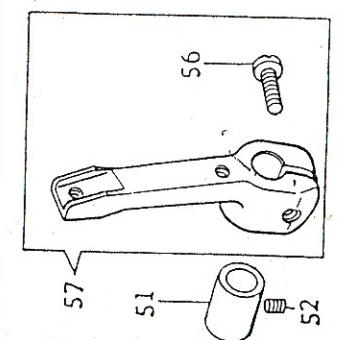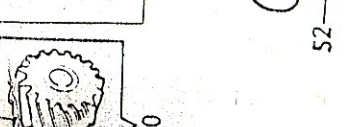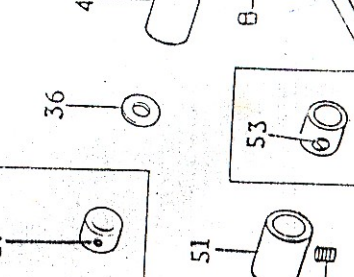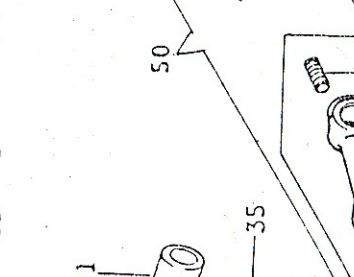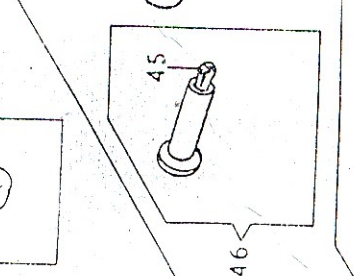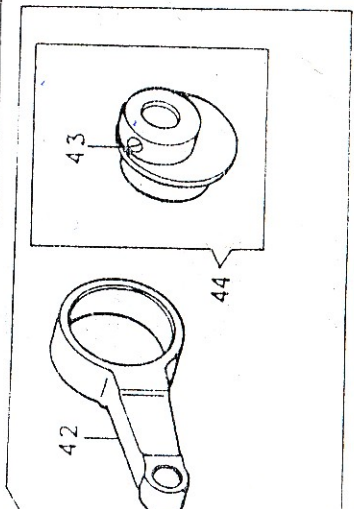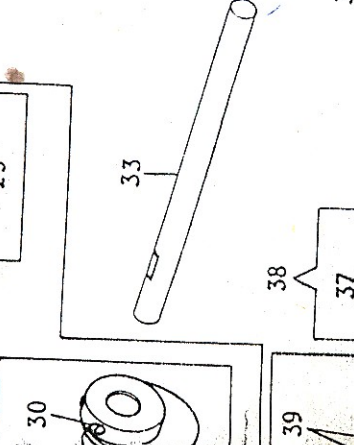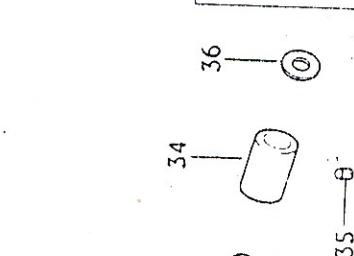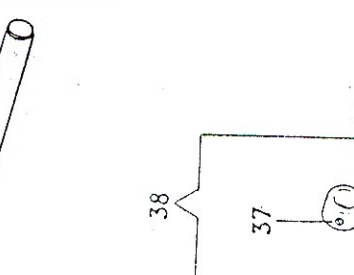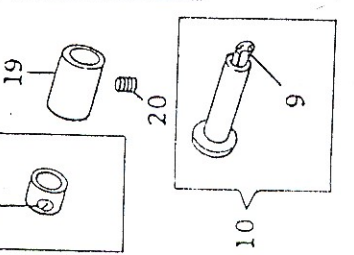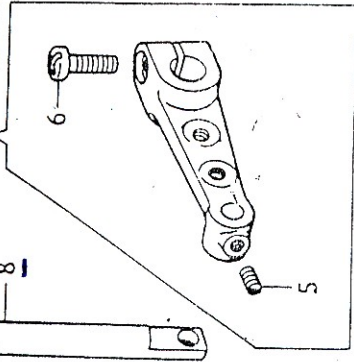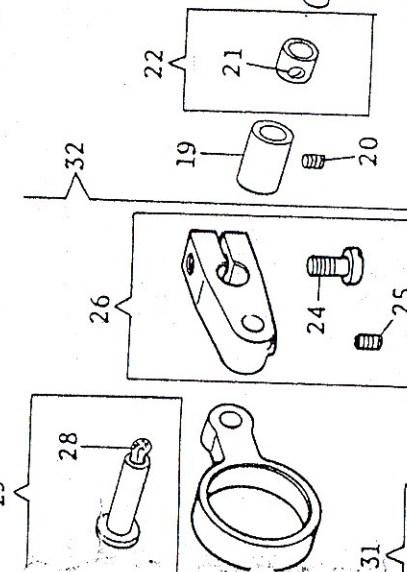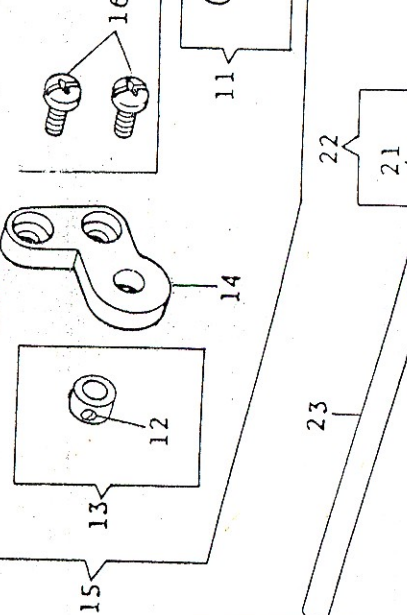

410434









410452

29







61













PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
1 410455	Right Looper Thread Guide	39 544204-001	Looper Driving Gear Screw (2)
2 544212-001	Right Looper Thread Guide Set Screw	40 410394	Looper Driving Gear Comp.
3 410438	Left Looper Thread Guide	41 410279	Looper Driving Gear Shaft Bushing (long)
4 544212-001	Left Looper Thread Guide Set Screw	42 410446	Left Looper Cam
5 544203-001	Right Looper Retainer Driving Lever Stud Set Screw	43 544204-001	Left Looper Cam Set Screw (2)
6 544213-053	Right Looper Retainer Driving Lever Clamping Screw	44 410443	Left Looper Cam Comp.
7 410436	Right Looper Retainer Driving Lever Comp.	45 410422	Left Looper Cam Rod Stud Oil Wick
8 410435	Right Looper Retainer	46 410266	Left Looper Cam Rod Stud Comp.
9 410422	Right Looper Retainer Driving Lever Stud Oil Wick	47 544203-001	Left Looper Cam Rod Stud Set Screw
10 410449	Right Looper Retainer Driving Lever Stud Comp.	48 544213-054	Left Looper Shaft Lever Clamping Screw
11 410429	Right Looper Retainer Guide Comp.	49 410447	Left Looper Shaft Lever Comp.
12 544203-001	Right Looper Retainer Guide Collar Screw (2)	50 410445	Left Looper Cam Rod Comp.
13 410432	Right Looper Retainer Guide Collar Comp.	51 410279	Left Looper Shaft Bushing (2)
14 410428	Right Looper Retainer Guide Bracket	52 544204-001	Left Looper Shaft Bushing Set Screw (2)
15 410427	Right Looper Retainer Guide Bracket Comp.	53 544203-001	Left Looper Shaft Collar Screw (4)
16 544213-002	Right Looper Retainer Guide Bracket Screw (2)	54 410291	Left Looper Shaft Collar Comp. (2)
17 410434	Right Looper	55 410487	Left Looper Shaft
18 544413	Right Looper Screw	56 544213-053	Left Looper Holder Clamping Screw
19 410279	Right Looper Shaft Bushing (2)	57 410453	Left Looper Holder Comp.
20 544204-001	Right Looper Shaft Bushing Set Screw (2)	58 410452	Left Looper
21 544203-001	Right Looper Shaft Collar (4)	59 544211-052	Left Looper Screw
22 410291	Right Looper Shaft Collar Comp. (2)	60 410456	Left Looper Holder Thread Guide
23 410272	Right Looper Shaft	61 544212-001	Left Looper Holder Thread Guide Screw
24 544213-054	Right Looper Shaft Lever Screw	62 410472	Looper Thread Guide
25 544203-001	Right Looper Cam Rod Stud Set Screw	63 410371	Looper Thread Guide (small)
26 410441	Right Looper Shaft Lever Comp.	64 410478	Looper Thread Guide Plate
27 410440	Right Looper Cam Rod	65 544212-001	Looper Thread Guide Screw (2)
28 410422	Right Looper Cam Rod Stud Oil Wick		
29 410266	Right Looper Cam Rod Stud Comp.		
30 544204-001	Right Looper Cam Set Screw (2)		
31 410443	Right Looper Cam Comp.		
32 410439	Right Looper Cam Rod Comp.		
33 410290	Looper Driving Gear Shaft		
34 410280	Looper Driving Gear Shaft		
35 544204-001	Looper Driving Gear Shaft Bushing Set Screw (2)		
36 542402	Looper Driving Gear Shaft Collar Thrust Washer (2)		
37 544203-001	Looper Driving Gear Shaft Collar Screw (4)		
38 410291	Looper Driving Gear Shaft Collar Comp. (2)		

        5

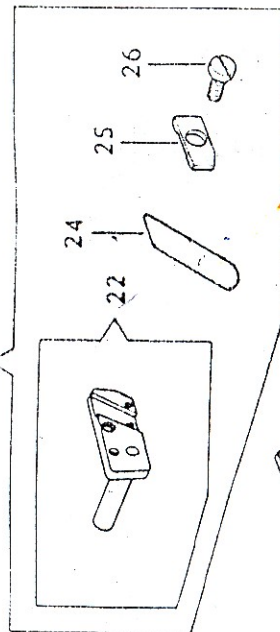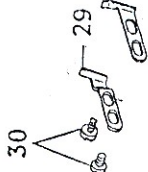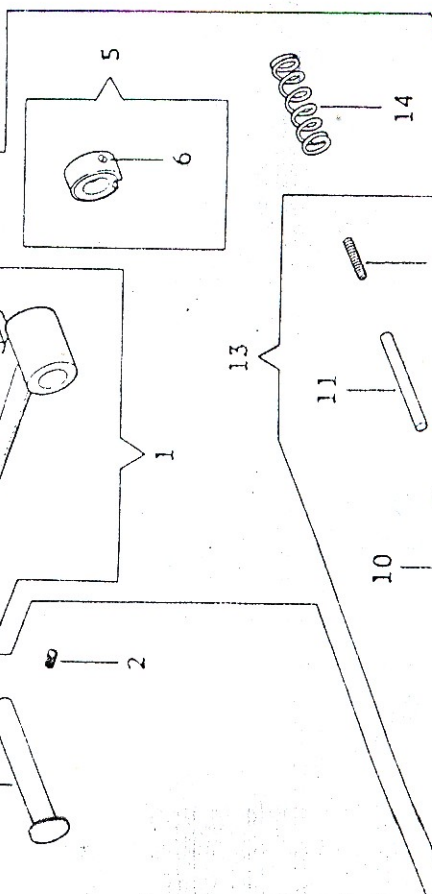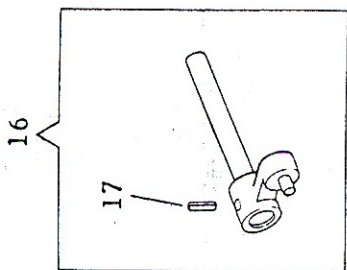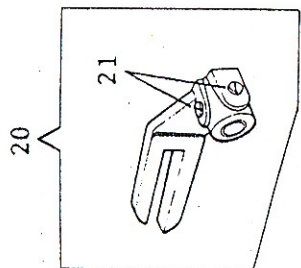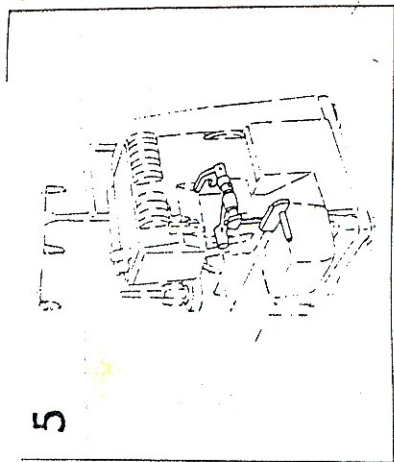

PART NO.	DESCRIPTION
1 410299	Knife (movable) Lever Comp.
2 544204-001	Knife (movable) Lever Hinge Stud Screw
3 410310	Knife (movable) Lever Hinge Stud
4 540254	Knife (movable) Lever Slide Block
5 410308	Knife (movable) Holder Collar Comp.
6 544203-001	Knife (movable) Holder Collar Set Screw
7 410305	Knife (movable) Holder Plate
8 544257	Knife (movable) Holder Plate Screw (2)
9 410303	Knife (movable) Holder
10 410304	Knife (movable) Clamping Pin
11 410306	Knife (movable) Clamping Pin Screw
12 544203-004	Knife (movable) Comp.
13 410302	Knife (movable) Holder Spring
14 410307	Knife (movable) Lever Comp.
15 410298	Knife (movable) Lever Driving Arm
16 410312	Comp.
17 543809-002	Knife (movable) Lever Driving Arm Spring Pin
18 410316	Knife (movable) Forked Lever Stud Bushing
19 544204-001	Knife (movable) Forked Lever Stud Bushing Set Screw
20 410317	Knife (movable) Forked Lever (comp.)
21 544204-001	Knife (movable) Forked Lever Screw (2)
22 410296	Knife (stationary) Holder
23 544207-011	Knife (stationary) Holder Screw (2)
24 410295	Knife (stationary) Clamping Plate
25 410297	Knife (stationary) Clamping Plate Screw
26 544256	Knife (stationary) Comp.
27 410294	Needle Guard (front)
28 410473	Needle Guard (rear)
29 410474	Needle Guard Set Screw (2)
30 545180	Knife (stationary) Holder Positioning Plate
31 410489	Knife (stationary) Holder Positioning Plate Screw
32 544211-002	Knife (stationary) Holder Positioning Plate Screw

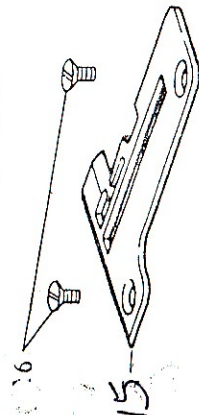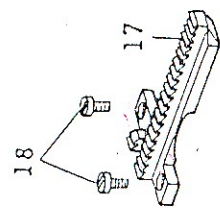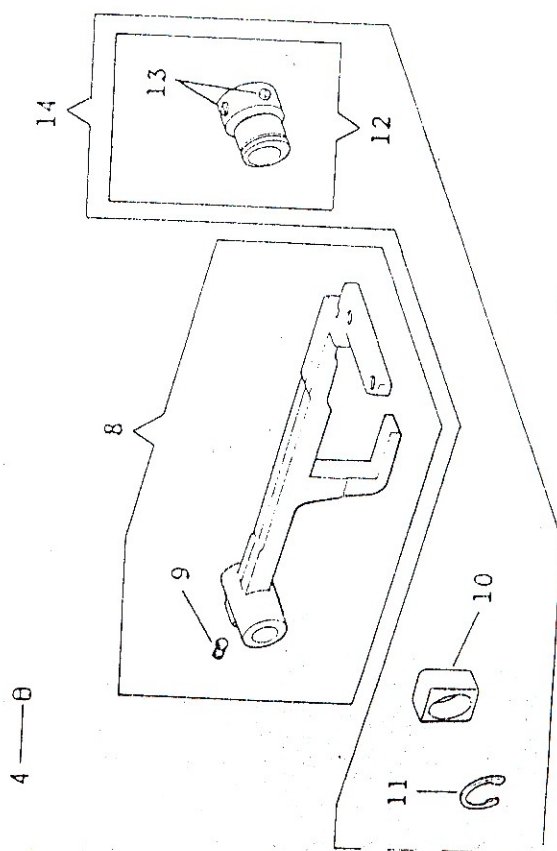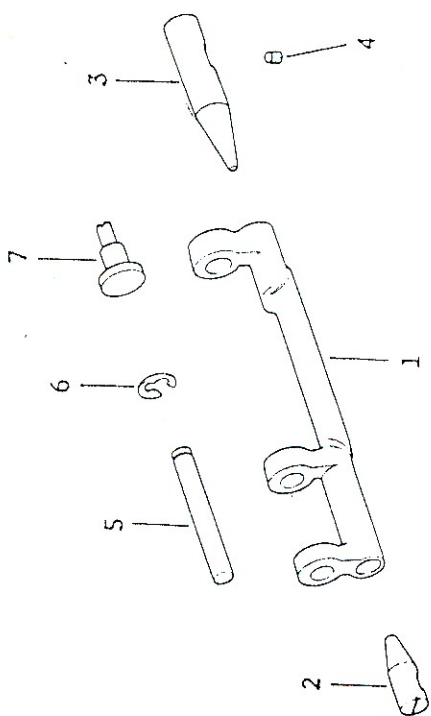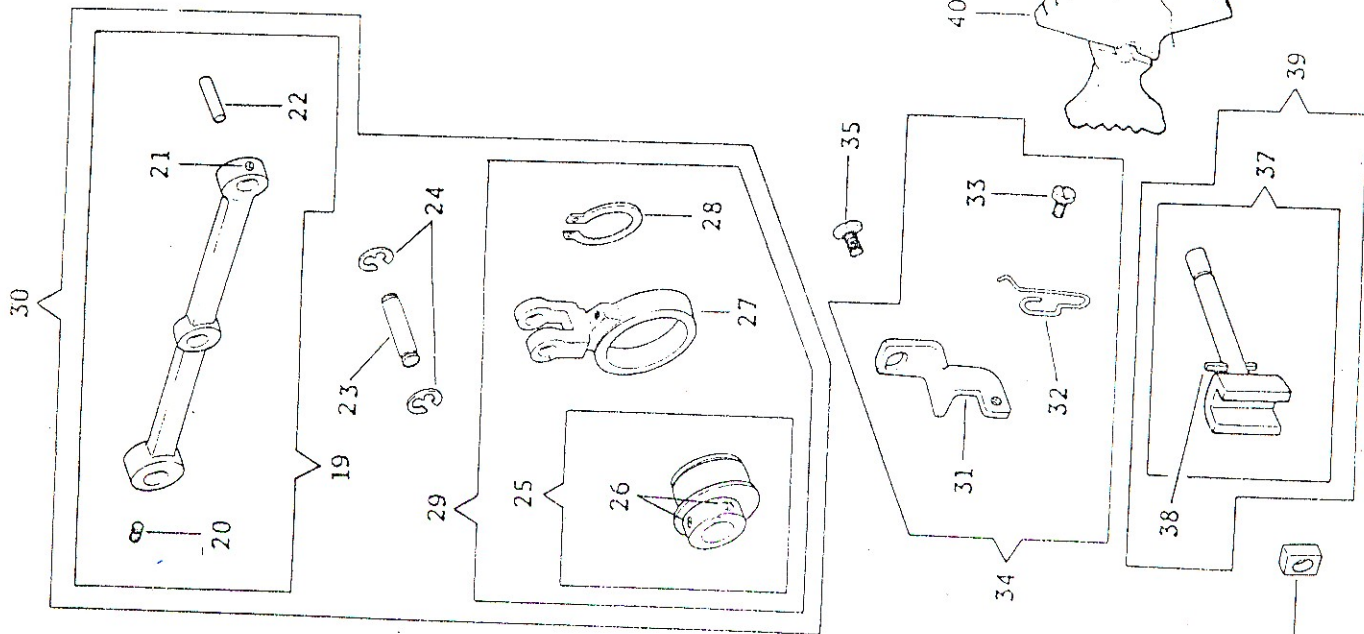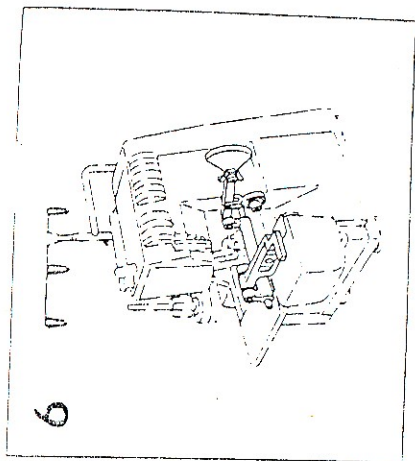      

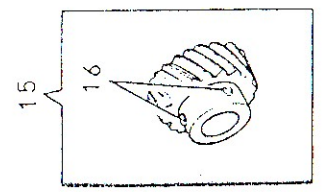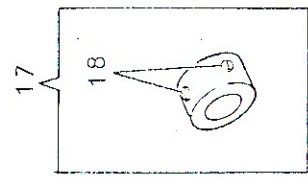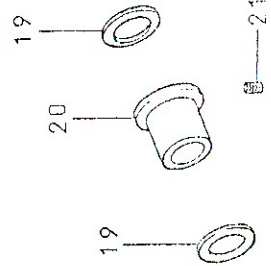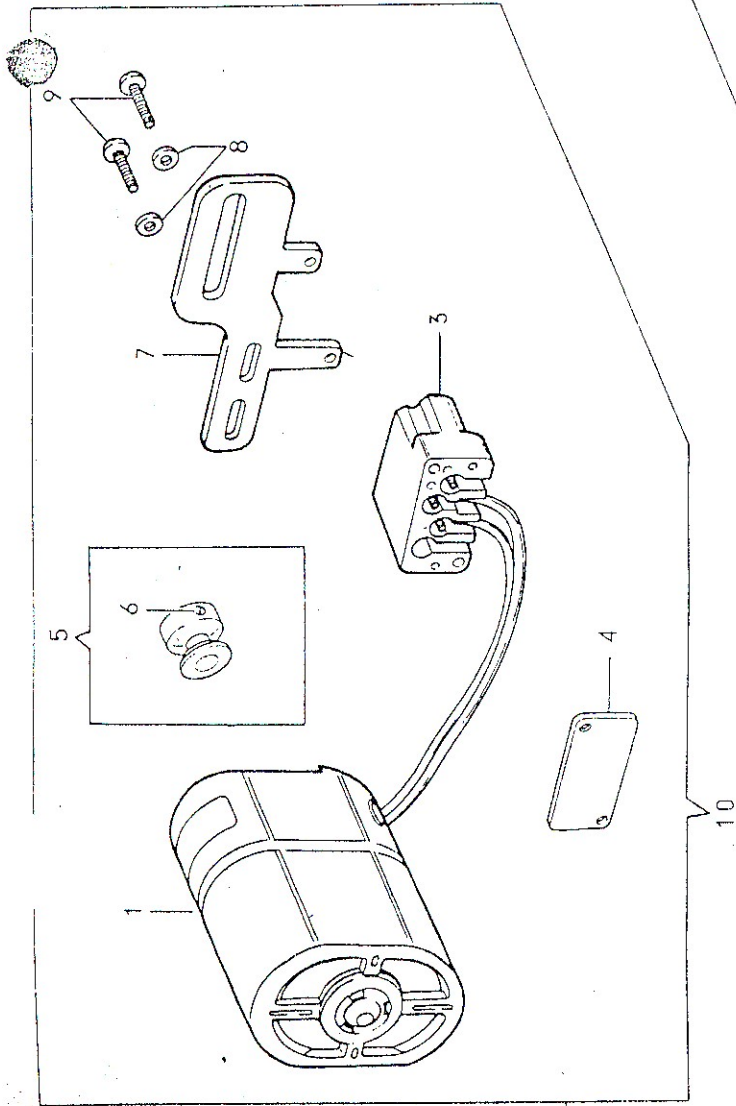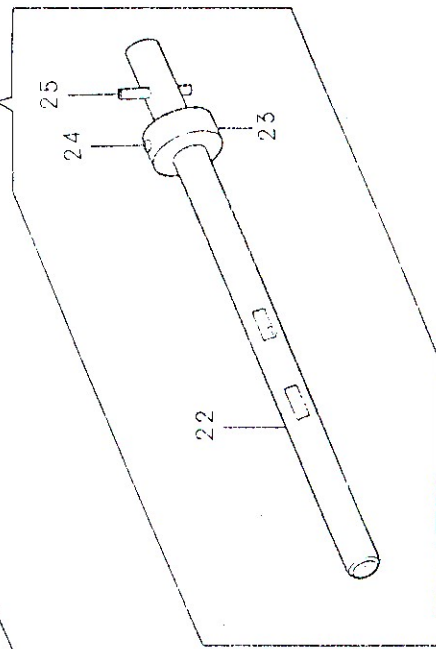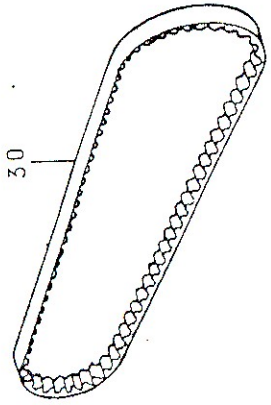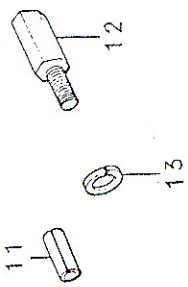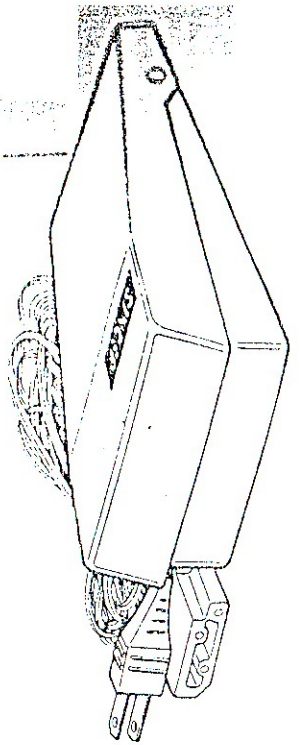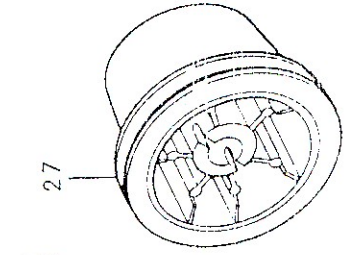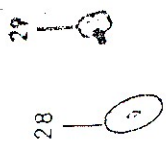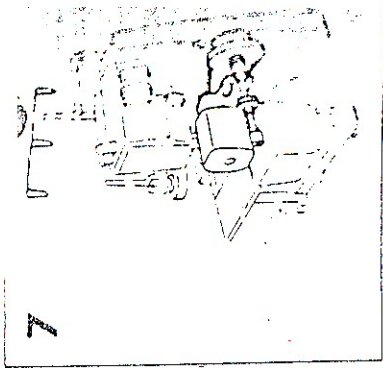            

PART NO.	DESCRIPTION					
1						
2						
3						
4						
5						
6						
7						
8						
9						
10	Motor Comp.					
11	543811-001 Motor Bracket Guide Fin					
12	544259 Motor Bracket Clamping Screw					
13	543805-005 Motor Bracket Clamping Screw Washer					
14	410252 Rotating Shaft Bushing (left)					
15	410260 Rotating Shaft Gear					
16	544204-001 Rotating Shaft Gear Set Screw (2)					
17	410470 Rotating Shaft Collar Comp.					
18	544204-001 Rotating Shaft Collar Set Screw (2)					
19	408730 Rotating Shaft Thrust Washer (2)					
20	410253 Rotating Shaft Bushing (right)					
21	544204-001 Rotating Shaft Bushing (right) Set Screw					
22	410257 Rotating Shaft					
23	410469 Rotating Shaft Collar (Fixed)					
24	543808-004 Rotating Shaft Collar Positioning Fin					
25	543809-004 Rotating Shaft Spring Pin					
26	410256 Rotating Shaft Comp.					
27	410268 Pulley					
28	410400 Pulley Set Screw Washer					
29	544273 Pulley Set Screw					
30	543607 Motor Belt					
31	Controller Comp.					

