
SINGER* Service Manual CLASS 270

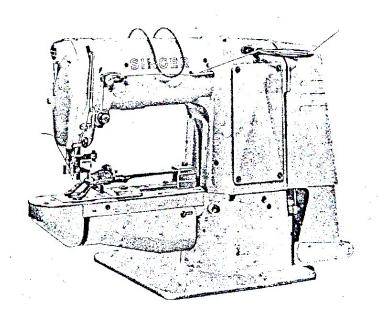

THE SINGER COMPANY

Copyright © 1966 by The Singer Company
Copyright under Internation Copyright Union
All Rights Reserved under Inter-American Copyright Union

DESCRIPTION

Machines of Class 270 are single needle, single thread, lockstitch machines designed for tacking and sewing two and four hole buttons on clothing. These machines sew a single row of stitches parallel to the cylinder when sewing two hole buttons and two rows of stitches parallel to the cylinder with right angle cross-over stitches when sewing four hole buttons.

Automatic in operation, the machine is equipped with a sewing reel which is located inside the hook body. Thread is wound on reel from upper thread supply during the initial needle penetration. Then, without a break in thread or interruption in machine cycle, stitch formation begins. Reel thread is passed through upper thread loop on each successive stitch to form a regular lockstitch. Thus only one thread is required to form a complete stitch pattern and no stitch starting ends of thread are present. At the end of the stitching pattern, thread is trimmed and excess thread is removed from reel and drawn away by a suction type air pump.

GENERAL CHARACTERISTICS

270-31 Machine makes one parallel row of 7 stitches up and down cylinder, and a tack, 1/4 inch maximum length. This machine is fitted with a tacking clamp and a pneumatic starting and clamp lifting device.

270-33 Machine makes 14 Stitches . . . 4 parallel, 2 cross-over, 4 parallel, 4 tying.

270-37 Machine makes 18 Stitches . . . 6 parallel, 2 cross-over, 6 parallel, 4 tying.

Button Sewing Machines are fitted with a Button Clamp...accommodates 14 to 50 ligne buttons.

Rotating Hook with Thread Reel...makes two revolutions to each revolution of arm shaft.

Rotary Hook Shaft...driven by spiral bevel gear from vertical arm shaft.


Throat Plate... equipped with scissor type trimming mechanism for cutting thread at completion of stitch pattern.

Work Plate ... if specified, at additional cost.

Feed Cam... controls operation of button clamp.

Safety Interlock... prevents clamp from being lifted when machine is in operation.

Belt Guard...fully encloses driving belt and stop motion device.

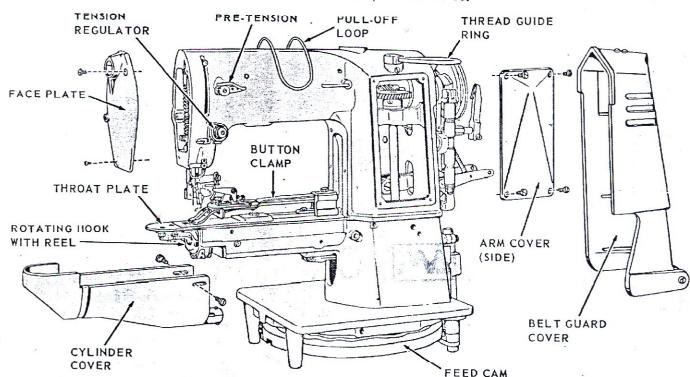


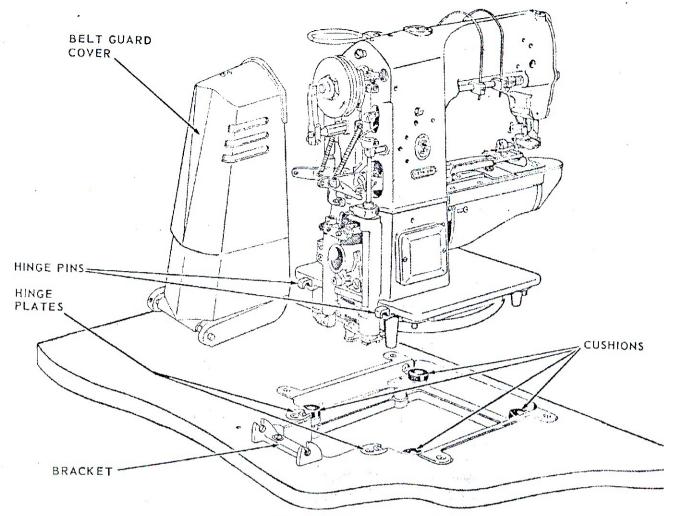


Fig. 3. Installation of Machine

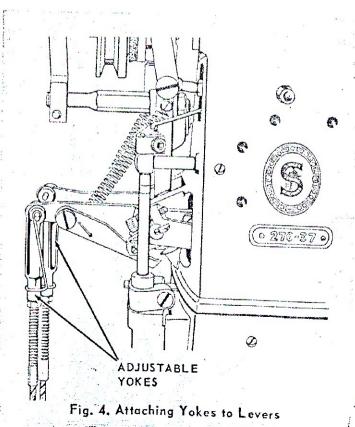

Place machine into recess on table to rubber cushions at corners of drip pan

Hinge pins fit into hinge plates at back and should not support machine except v tilted back.

Install blower unit in accordance with tions on page 29.

Attach adjustable yokes to machine I shown in Fig. 4.

Belt guard cover fits into bracket and a drive and stop motion mechanism (see Fig. 3)

LUBRICATION

For best results, use SINGER* Oil "Type B" or "Type D". "Type D" Oil is used when an oil is desired which will produce a minimum of stain on fabric.

Daily Care

Before starting machine, apply a few drops of oil to each of the holes indicated in Figs. 5 and 6 and run machine for a short time.

On new machines and machines installed after several weeks of idleness, needle bar and take-up linkage should be oiled by hand before using. The residual lubricant may have congealed or disappeared entirely.

NOTE: Once each year, machine pulley (loose) should be removed and repacked with ball bearing lubricant.

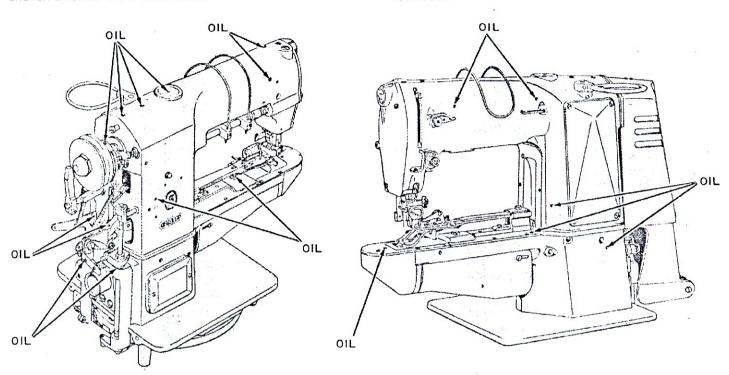


Fig. 5. Lubricating the Machine

Cleaning

Remove all lint and abrasive matter from around hook body and throat plate mechanism (see Fig. 6).

Wipe off all excess oil which may come in contact with material to be sewn.

Machines not in use should be kept well oiled, clean, dry and covered.

Check waste collector daily and empty when full.



The maximum speed recommended for Machines of Class 270 is 1850 R. P. M.

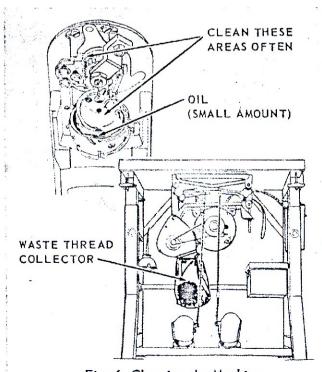


Fig. 6. Cleaning the Machine

Use SINGER* needle - Catalog 2173.

Other needles, determined by size of thread and type of material to be sewn, are available.

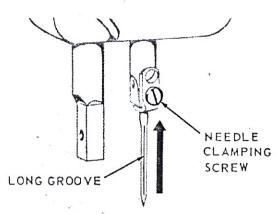


Fig. 7. Setting the Needle

SETTING THE NEEDLE

With machine in "stop" position loosen needle clamping screw shown in Fig. 7.

Insert needle up into needle bar as far as it will go making certain that the single continuous groove of the needle faces away from the hook (facing the operator) as shown.

Securely tighten needle clamping screw.

Stitching Troubles

Check needle often to make sure these are not present.

- Wrong needle for thread and material in u a cause of thread breakage.
- Bent needle, clogged needle eye or dirty groove - a cause of skipped stitches.

THREADING THE MACHINE

The correct threading procedure for Mac of Class 270 is shown in Fig. 8.

Thread passes through needle eye from frc rear.

Draw thread up into cutter in face plate snip thread end off as shown.

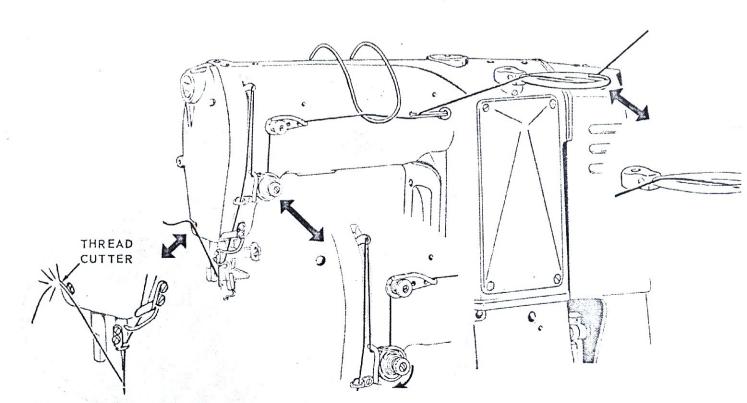



Fig. 8. Threading the Machine

THREAD TENSION

Needle Thread Tension

Tension should be as light as possible while still sufficient to set the stitch correctly in material, (see Fig. 9).

To regulate, turn thumb nut at front of tension discs as shown in Fig. 10.

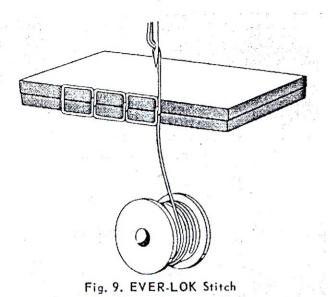

Reel Thread Tension

When tension on reel thread has been correctly adjusted, the required stitch may usually be obtained to suit the work in process thereafter by varying needle thread tension only.

To regulate, turn adjusting screw shown in Fig. 10 as required.

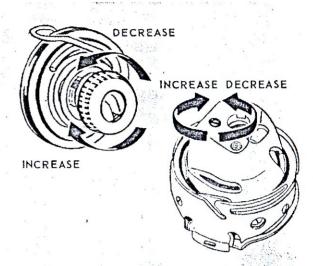


Fig. 10. Adjusting the Tension

SEWING DIFFICULTIES

WHEN THREAD BREAKS

CHECK:

Is machine threaded properly?
Is needle correctly seated in needle bar?
Is needle bent or burred?
Is thread suitable for needle in use?
Is needle thread tension too tight?

WHEN THREAD SNAGS OR MACHINE SKIPS STITCHES

CHECK:

Is needle eye or groove dirty?
Is needle bent or burred?
Is needle size correct for operation?
Is thread suitable for material in use?
Is reel case free of thread end?

HINTS FOR OPERATORS

WHEN OPERATING MACHINE

Be sure to depress starting pedal firmly.

Make sure that button is inserted correctly in clamp.

Make sure that needle thread is not under clamp at start of sewing cycle.

Do not depress clamp lifting pedal until machine goes in "stop".

Inspect reel thread tension for thread or lint accumulation.

ADJUSTMENTS

The sequence of adjustments outlined on this page should be checked and made in the order given to avoid confusion and unnecessary repetition.

I STOP MOTION ADJUSTMENTS

- A. Arm Shaft
 - 1. Adjust for end play
- B. Starting Lever
 - Set clearance between interlocking arm and machine pulley
 - 2. Adjust arm stop
- C. Engaging arm
 - 1. Adjust to obtain correct "V" belt tension
- D. Tripping Linkage
 - 1. Adjust rock shaft support for binding
 - 2. Set clearance between bell crank and pawl

II KNIFE ACTUATING AND CLAMP LIFTING ADJUSTMENTS

- A. Safety Devices
 - 1. Set Lifting Arm Lug
 - 2. Adjust lifting lever pawl to clear engaging surface on lifting lever
 - 3. Set Clamp lifter stop
- B. Tension Releaser
 - 1. Position tension regulator
 - 2. Set lifting link connection
 - 3. Set lifting arm to release tension
- C. Work Clamp Foot Lifter
 - 1. Position lifter beneath arm hook
- D. Thread Wiper
 - 1. Set wiper support
 - 2. Position wiper wire
- E. Thread Pull-off Loop
 - 1. Adjust tension on spring

III FEED MECHANISM ADJUSTMENTS

- A. Feed Driving Gears
 - 1. Check alignment of timing marks
 - 2. Eliminate play in gears
- B. Feed Linkage Adjustment
 - 1. Center and position lateral feed linkage
 - Increase or decrease lateral movement of feed bar
 - 3. Center and position longitudinal feed linkage
 - 4. Increase or decrease longitudinal movement of feed bar
- C. Feed Timing Adjustment.
 - 1. Time longitudinal feed movement
 - 2. Time lateral feed movement

IV TRIPPING POINTS ADJUSTMENT

A. Set timing to actuate interlocking arm

V STOP MOTION BRAKE ADJUSTMENTS

- A. Obtain brake clearance
- B. Adjust brake pressure

VI SEWING MECHANISM ADJUSTMENTS

- A. Sewing Hook
 - 1. Set longitudinal position
 - 2. Timehook
- B. Needle Bar
 - 1. Set Needle Bar Height

VII REEL WINDING ADJUSTMENTS

- A. Winding Linkage
 - 1. Adjust thread clamping action
- B. Reel Driver Tripping Points
 - 1. Set tripping point for "full pinch"
 - 2. Adjust Extension for duration of pinch
- C. Pre-Tension
 - 1. Adjust to aid in reel winding

VIII THREAD STRIPPING AND RETRACTING ADJUSTMENTS

- A. Finger Plate Follower
 - 1. Set to actuate stripper finger
- B. Stripper Finger
 - 1. Adjust to remove unused reel thread
- C. Retracting Finger
 - 1. Adjust to pick up reel thread
- D. Tension Releaser
 - 1. Re-check

IX ADJUSTMENTS UNDER THROAT PLATE

- A. Reel Hulder Position Stop
- B. Trimming Knives
 - 1. Set movable and adjustable knives
 - 2. Time knives
 - 3. Adjust knife pressure
- C. Loop Pick-up Finger
 - 1. Position operating lever
 - 2. Set loop pick-up finger

ARM SHAFT

CHECK:

There should be a minimum of end play in the arm shaft shown in Fig. 11.

SETTING:

Loosen set screw in bushing shown in Fig. 11 and lock nut on support screw shown in Fig. 12.

Pull rear bushing out (toward machine pulley) by turning support screw in clockwise direction. Then tighten set screw and lock nut securely.

Check adjustment to make sure end play has been eliminated without binding.

STARTING LEVER

CHECK:

Depress starting lever to engage machine in "run" position.

Turn machine pulley over toward right (looking from face plate back) until bell crank pawl moves into the "coast" position in bell crank as shown in Fig. 13.

At this position, there should be approximately 1/32 inch clearance between high point of camming surface on machine pulley and interlocking arm as shown in Fig. 12.

SETTING:

Loosen lock nut on starting rod and remove hinge screw shown in Fig. 11.

Turn swivel on starting rod, (Fig. 11) in or out one full turn for each 1/32 inch of adjustment required to obtain clearance between camming surface and interlocking arm as shown in Fig. 12.

Replace hinge screw and tighten lock nut on swivel securely.

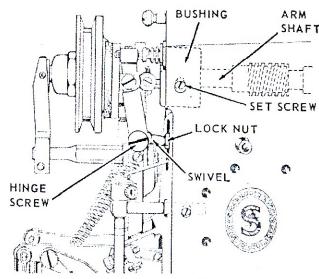


Fig. 11. Stop Motion Adjustment (Left View)

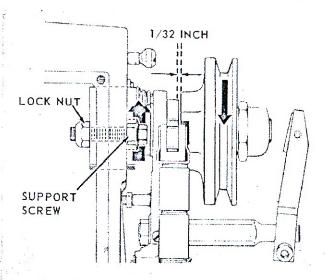


Fig. 12. Stop Motion Adjustment (Right View)

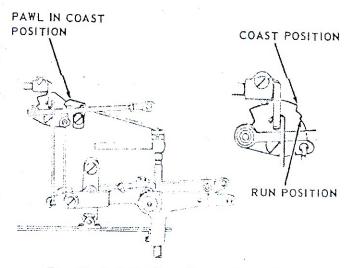


Fig. 13. Bell Crank in "Coast" Position

ARM STOP STARTING LEVER

Fig. 14. Adjusting the Arm Stop

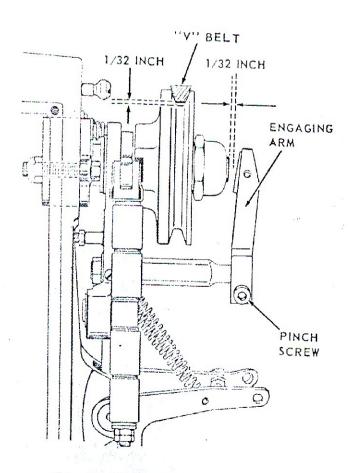


Fig. 15. Setting the Engaging Arm

STARTING LEVER ARM STOP

CHECK:

Starting lever arm stop, Fig. 14, should downward movement of starting lever so that crank has 1/32 inch clearance past "run" when starting lever is depressed.

SETTING:

Remove "V" belt and turn stop screw to downward movement of starting lever arm as requ

Replace "V" belt and check adjustment.

ENGAGING ARM

CHECK:

Engaging arm should be adjusted so the belt drops approximately 1/32 inch when mach moves from "run" position to "stop" position (Fig. 15).

SETTING:

Loosen pinch screw, Fig. 15, and position gaging arm closer to or farther from starting capshown.

Tighten pinch screw securely and check adj

NOTE: Check TENSION on "V" BELT. Excessi tightness will not improve performance of machibut MAY CAUSE DAMAGE or excessive wear a machine parts.

Tension on "V" belt may be varied by raising lowering motor, but adjustment should be made connection with engaging arm adjustment describ above.

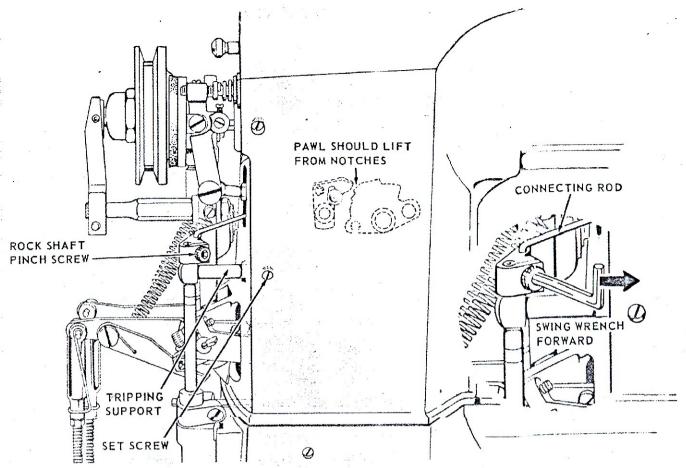


Fig. 16. Adjusting the Tripping Linkage

TRIPPING LINKAGE

CHECK:

Tripping rock shaft support, Fig. 16, should be positioned to hold rock shaft without binding.

SETTING:

Loosen set screw shown in Fig. 16 and position support as required.

Tighten set screw and check for binding.

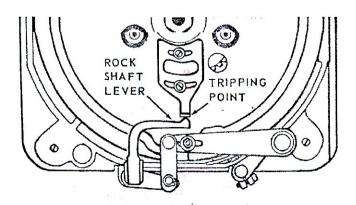


Fig. 17. Lever resting on Tripping Point

CHECK:

Turn machine pulley over toward operator until rock shaft lever rests on tripping point as shown in Fig. 17.

At this position, bell crank pawl should lift out of notches in bell crank far enough for machine to move into "stop" when actuated by tripping point on feed cam as shown in Fig. 17.

SETTING:

With rock shaft lever resting on tripping point, loosen rock shaft pinch screw with socket wrench as shown in Fig. 16.

Using socket wrench as a lever, in pinch screw, swing wrench forward (toward face plate) to remove play in connecting rod and ALSO to raise point of bell crank pawl approximately .020 inch above top of "coast" notch in bell crank as shown in Fig. 16.

Securely tighten pinch screw and check adjustment.

KNIFE ACTUATING AND CLAMP LIFTING ADJUSTMENTS

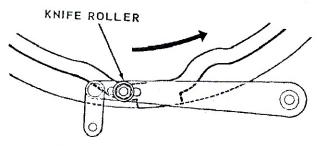


Fig. 18. Knife Roller positioned in Cum Path

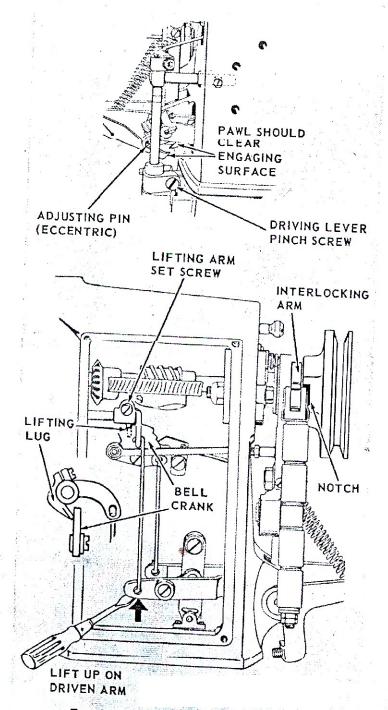


Fig. 19. Adjusting the Safety Devices

SAFETY DEVICES

CHECK:

The safety interlock should prevent the w clamp from being lifted when machine is in operat and should prevent machine from starting when w clamp is raised.

SETTING:

Engage machine in "run" position and turn chine pulley over toward right until knife rolle at extreme outward position on feed cam as show Fig. 18,

Loosen driving lever pinch screw, Fig. 19. lift up on driven arm with screwdriver to bring lif lug against back of bell crank as shown.

Maintain this position while tightening pi screw securely.

Then rotate machine pulley again until the pc is reached just before interlocking arm drops i notch on pulley ("stop" position).

Set adjusting pin (eccentric), while depressi clamp* lifting lever arm, so that pawl on lifting a does not enagge driven arm and alides by us show in inset, Fig. 19.

Then rotate machine pulley to bring machine in "stop" position and adjust the clamp lifter sto shown in Fig. 20 by means of adjusting nuts. Th stop should be set to limit extreme downward move ment of lever arm and thereby avoid binding of startir lever rock shaft when clamp lifter is activated befor machines goes into "stop" position.

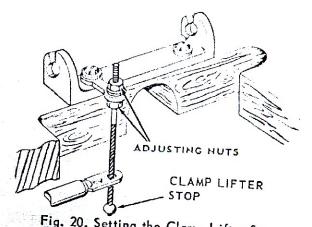


Fig. 20. Setting the Clamp Lifter Stop

TENSION RELEASER

CHECK:

When work clamp is raised, the first upward movement of the lifting bar, Fig. 21, should separate the tension discs and release tension on needle thread.

SETTING:

To adjust the tension release, first loosen the set screw in casting below tension regulator, Fig. 21, and move entire regulator all the way in. Tighten set screw.

Then loosen the screw in lifting link connection and set lifting link so that it projects approximately 1/32 inch as shown. Tighten screw.

Next, loosen the pinch screw in lifting arm (see inset) and push up on lifting bar until tension discs just begin to release. Maintain this position while tightening pinch screw. MAKE CERTAIN that lifting arm is against shoulder on rock shaft.

WORK CLAMP FOOT LIFTER

SETTING:

Loosen lifting bar clamp screw, Fig. 21, and position foot lifter approximately 1/8 inch below arm hock as shown in Fig. 22. Then tighten clamp screw.

THREAD WIPER

SETTING:

Loosen wiper support screw, Fig. 22 and position wiper support so that slot in body finger is horizontal. Tighten wiper support screw.

Position wiper wire to clear needle by approxmately 1/16 inch.

THREAD PULL-OFF LOOP

CHECK:

The pull-off loop should draw sufficient thread from the unwinder to complete the stitch pattern. Also, pull-off loop should not "whip" and may be controlled by increasing or decreasing tension on spring.

SETTING:

Loosen the four bracket set screws shown in Fig. 23 and position the pull-off loop as close as possible to machine arm without touching. Tighten bracket set screws. Then loosen collar set screw and move collar to increase or decrease tension as required. Tighten collar set screw.

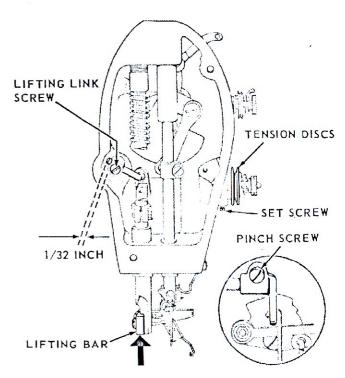


Fig. 21. Adjusting the Tension Releaser

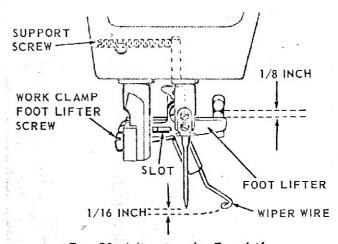


Fig. 22. Adjusting the Foot Lifter

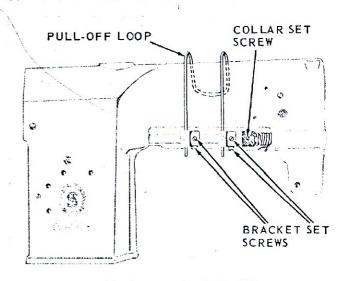


Fig. 23. Setting the Pull-off Loop

FEED MECHANISM ADJUSTMENTS

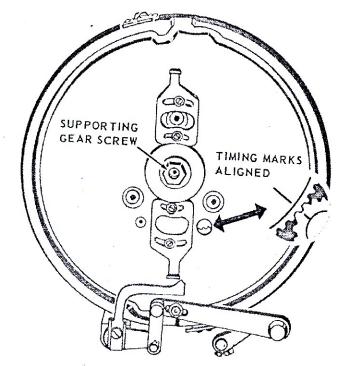


Fig. 24. Alignment of Timing Marks

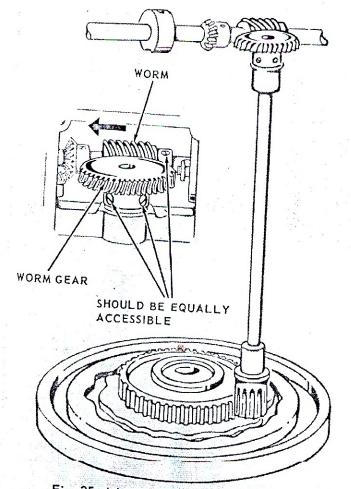


Fig. 25. Adjusting the Feed Driving Gears

FEED DRIVING GEARS

CHECK:

Cam supporting gear and vertical shaft pini gear are positioned at factory so that timing mar shown in Fig. 24 will be aligned when machine in "stop" position.

SETTING:

Remove excessive play between worm gear ar worm by loosening two screws in worm (see instrig. 25) and moving worm forward on shaft.

When the worm gear is properly assembled a vertical shaft, the spot and set screws shown shoul be equally accessible through side opening in an assing.

Insure minimum play between vertical shaf pinion gear and cam supporting gear by loosening socket head screw inside supporting gear screw as shown in Fig. 24.

By means of "hex" head on supporting gear screw, turn the bracket (which is eccentric) untill only minimum amount of play exists between gears. Then tighten socket head screw inside supporting gear screw.

FEED LINKAGES ON BUTTON SEWING MACHINES

NOTE: Adjust lateral and longitudinal feed linkages when changing from two or from four hole buttons or when changing the hole spacing in the button.

LATERAL FEED LINKAGE

CHECK:

Lateral feed linkage should be adjusted so that feed plate moves the same distance on one side of needle hole in throat plate as it moves on the other side. Then, lateral feed linkage should be adjusted to increase or decrease the distance feed plate moves on both sides of needle liale.

NOTE: Hole in feed plate does not necessarily have to be centralized to obtain the above setting.

SETTING 1: (To obtain equal distance)

Remove cylinder arm cover and vertical arm cover (See Fig. 27).

Insert button to be sewn into clamp, engage machine into "run" position and rotate machine pulley until needle is just above button (See Fig. 26).


Loosen clamp screws A and B, Fig. 27, and move feed plate so that button is centered laterally (across cylinder) as shown in inset Fig. 27.

At this position, lateral rock shaft driving arm and driven arm should be parallel as shown in inset, Fig. 27. If necessary, move linkage as required to obtain this position. Then securely tighten screw A.

Next, obtain correct position of needle in relation to holes in button by turning machine pulley and moving feed plate to bring needle into right rear hole of button. Then tighten screw B.

SETTING 2: (To Increase or Decrease Distance) (Machines without Quick Change Mechanism)

Loosen lateral driving arm stud nut as shown in inset, Fig. 27.

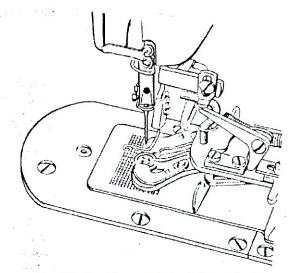

1

Fig. 26. Needle positioned above Button

When sewing two hole buttons, move stud toward rear of machine allowing feed bar positioner to register over lateral rock shaft.

When sewing four hole buttons or changing the hole spacing, move stud toward front of machine as required to obtain the desired distance between holes.

When adjustment is obtained, securely tighten stud nut, replace arm cover and adjust longitudinal setting.

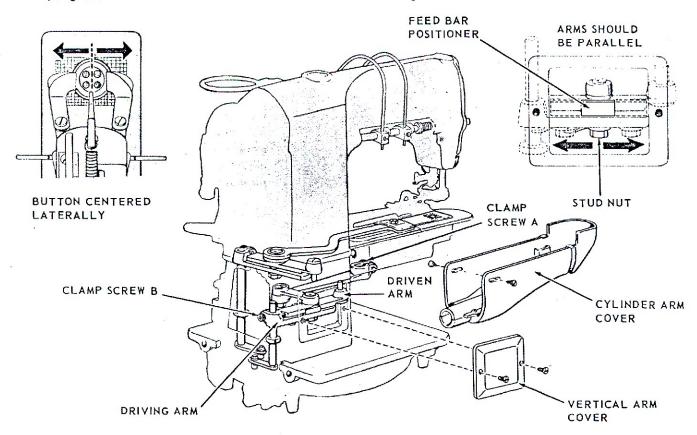


Fig. 27. Adjusting Lateral Feed Linkage

FEED LINKAGES ON BUTTON SEWING MACHINES LATERAL FEED (continued)

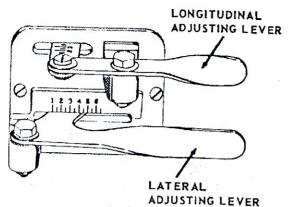


Fig. 27A. Adjusting Levers

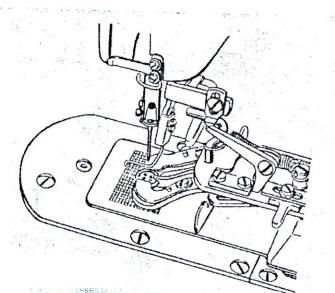


Fig. 28. Needle positioned above button

SETTING 2: (To Increase or Decrease Distance (Machines with Quick Change Mechanism)

When sewing two-hole buttons, move the later adjusting lever (lower lever), Fig. 27A, in towar the machine as far as it will go.

When sewing four-hole buttons, move the laterc adjusting lever (lower lever), Fig. 27A, away from the machine until position is attained where needle will enter the left hand hole in button when machin pulley is turned.

When correct adjustment is attained, the leve can be locked into position by tightening the he head screw.

LONGITUDINAL FEED LINKAGE

CHECK

Longitudinal feed linkage should be adjusted so that feed plate moves the same distance forward from needle hole in throat plate as it moves back, ward. Then, longitudinal feed linkage should be adjusted to increase or decrease the distance feed plate moves forward and backward.

LONGITUDINAL FEED LINKAGE (Continued)

SETTING 1: (To obtain equal distance)

Insert button to be sewn into clamp, engage machine into "run" position and rotate machine pulley until needle is just above button (see Fig. 28).

Loosen screws C and D shown in Fig. 29 and move feed plate so that button is centered longitudinally (along the bed) under the needle as shown.

At this position, longitudinal rock shaft driving arm and driven arm should be parallel as shown in Fig. 30. If necessary, move linkage as required to obtain this position. Then securely tighten screw C.

Next, obtain correct position of needle in relation to holes in button by turning machine pulley and moving feed plate to bring needle into right rear hole of button. Then tighten screw D.

SETTING 2: (To Increase or Decrease Distance) (Machines without Quick Change Mechanism)

Loosen longitudinal driving arm stud nut shown in Fig. 30.


Move stud toward left or right as required to obtain the desired distance between holes in button.

When adjustment is obtained, securely tighten stud nut.

SETTING 2: (To Increase or Decrease Distance) (Machines with Quick Change Mechanism)

With needle positioned over rear hole in button, move the longitudinal adjusting lever (upper lever), Fig. 27A, in toward the machine until position is attained where needle will enter the forward needle hole when machine pulley is turned. Movement of the lever in toward the machine, will increase the feed distance; movement from the machine, will decrease the distance.

When correct adjustment is obtained, the lever can be locked into position by tightening the hex head screw.

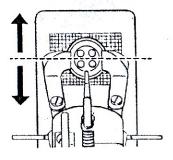

BUTTON CENTERED LONGITUDINALLY

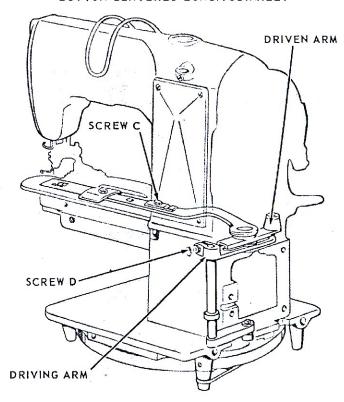


Fig. 29. Adjusting Longitudinal Feed Linkage

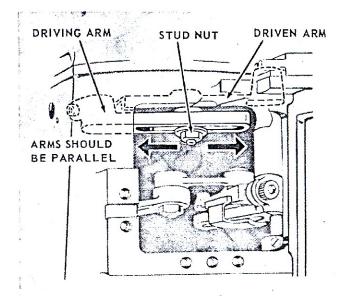


Fig. 30. Driving Arm parallel with Driven Arm

FEED LINKAGES ON BARRING AND TACKING MACHINES:

CENTERING LATERAL FEED

Check:

The lateral feed linkage, when correctly adjusted, will ensure that when the length of bar or tack is changed, it will change in size equally on both sides of the throat plate needle hole.

Adjustment:

First determine the position of the needle in relation to the clamping foot so that the feed carrier har can be returned to its original position after adjustment has been made, e. g., insert a piece of paper under clamping foot, engage machine into "run" position, turn pulley over toward the right side of machine slowly until needle just punctures the paper, then turn pulley over toward left side of machine to raise the needle. Leave paper under the clamp during adjustment as this will indicate the original position of the needle.

To adjust, loosen lateral pivot driving arm pinch screw and driving arm pinch screw. Fig. 30A, and position teed plate carrier bar so it is centered laterally across the cylinder (or center of clamping feet is aligned with the needle).

At this position, the lateral feed rock shaft driven and the driving arm should be parallel, as shown in Fig. 30A. If necessary, move linkage to obtain this position. Then tighten the lateral pivot driving arm pinch screw.

Next, return feed carrier bar to its original position. (A check can be made by lowering the needle into puncture hole previously made in paper.) Then tighten the driving arm pinch screw.

TO ADJUST LENGTH OF TACK

Adjustment:

Loosen the lateral driving arm stud nut, Fig. 30A, and slide stud toward front of machine to increase the length of tack (across the bed). To decrease the length of tack, slide stud toward rear of machine. Then tighten stud nut.

NOTE: After this adjustment is made, it may be necessary to adjust the feed carrier bar in relation to the needle as instructed under CENTER-ING LATERAL FEED.

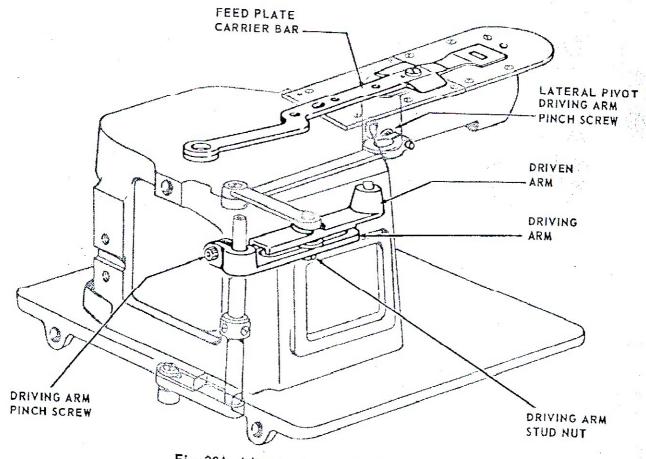


Fig. 30A. Adjusting Lateral Feed Linkage

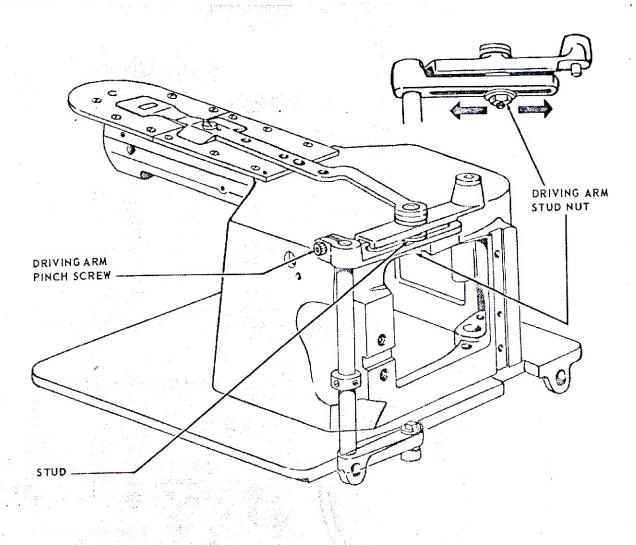


Fig. 30B. Adjusting Longitudinal Feed Linkage

CENTERING LONGITUDINAL FEED

Check:

The longitudinal feed, when correctly adjusted, will insure that when the width (bight) of tack is changed, the feed plate moves the same distance forward from the throat plate needle hole as it moves backward preventing the needle from striking the clamping foot.

Adjustment:

Through access hole in right side of upright arm, loosen the longitudinal rock shaft driving arm pinch screw, Fig. 30B, and move clamping foot forward or backward in correct relation to the needle. Then retighten the pinch screw.

With machine in "run" position, turn machine pulley slowly while checking to see that the needle does not strike the clamping foot during its longitudinal movement.

TO ADJUST WIDTH OF TACK

Adjustment:

Loosen the longitudinal driving arm stud nut, Fig. 30B, and slide stud to the right (facing rear of machine) to increase the width of tack. To decrease the width, slide stud to the left. Then tighten the stud nut.

NOTE: After this adjustment is mode, it may be necessary to adjust the feed plate in relation to the needle as instructed under CENTERING LONGITUDINAL FEED.

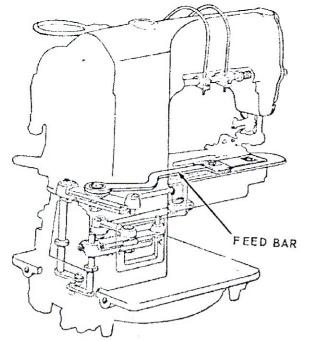


Fig. 31. Lateral and Longitudinal Feed Linkage


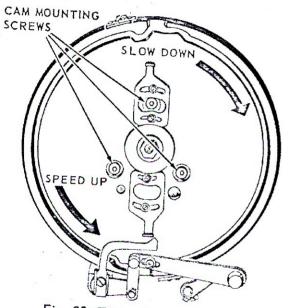


Fig. 32. Timing Longitudinal Feed

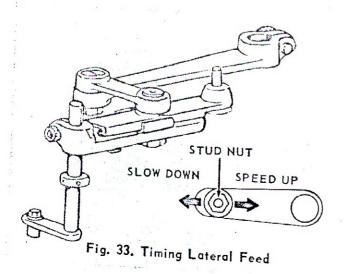

TIMING THE FEED

NOTE: Longitudinal feed timing should be fore making any lateral timing adjustment.

Check:

Feed bar shown in Fig. 31 should be s before needle enters the button and should noto move until the needle leaves the button.

LONGITUDINAL SETTING

Longitudinal feed movement is timed by loc ing the three cam mounting screws shown in Fiand rotating the cam toward left (as viewed fron bottom of machine) to speed up the longitudinal in relation to needle movement, or toward right slow down the feed in relation to needle movem

When adjustment is correctly set, securely ti en three cam mounting screws.

LATERAL SETTING

Lateral feed movement is timed by loosening the studenut on lateral rock shaft roller shown in Fi 33 and moving roller to the left (as viewed from to slow down the lateral feed in relation to need movement or toward right to speed up the feed in relation to needle movement.

When adjustment is correctly set, securely tighter stud nut.

STOP MOTION TRIPPING POINTS

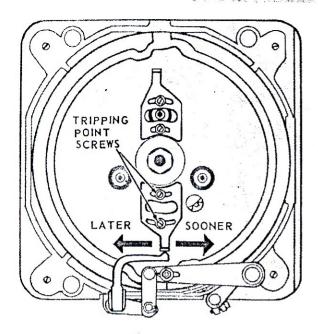


Fig. 34. Adjusting the Tripping Points

TIMING

CHECK:

Tripping points on underside of cam should be set so that interlocking arm drops back immediately on to camming surface of machine pulley (tight) as soon as notch, on machine pulley, passes interlocking-arm, (one interlocking-arm width). This will allow the most possible amount of machine coast.

SETTING:

With machine tilted back on its hinges, loosen the two tripping point screws shown in Fig. 34 and move tripping point to the right to set trip off sooner or left to set trip off later. Securely tighten tripping point screws.

STOP MOTION BRAKE

CLEARANCE

CHECK:

There should be approximately 1/32 inch clearance between brake shoe and machine pulley (tight) when machine is in run position (See Fig. 35).

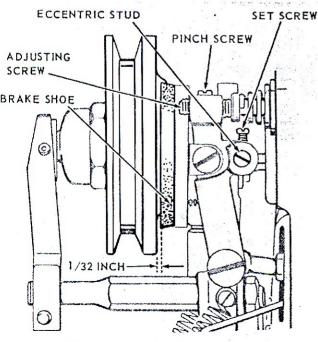


Fig. 35. Adjusting the Stop Motion Brake

SETTING:

Engage machine in run position and loosen the set screw shown in Fig. 35.

Turn eccentric stud until brake shoe clears machine pulley by opproximately 1/32 inch. Then tighten set screw.

PRESSURE

CHECK:

Brake pressure should be regulated to prevent machine from going into "stop" too hard to avoid damage to machine parts.


When checking brake pressure, machine speed and thickness of material to be sewn have a definite relation to the amount of pressure required.

SETTING:

Loosen pinch screw shown in Fig. 35 and turn adjusting screw inward for more pressure or outward for less pressure. Then tighten pinch screw securely.

NOTE: Check stop motion brake adjustment about once a month. Loss of braking power due to wear or glazing of braking surfaces may be compensated for by re-adjusting for correct clearance and pressure.

SEWING MECHANISM ADJUSTMENTS

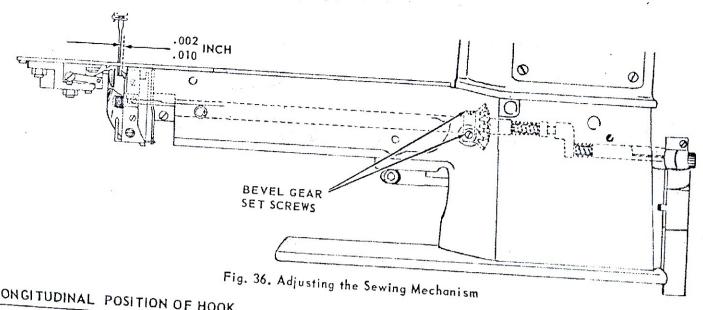

LONGITUDINAL POSITION OF HOOK

CHECK:

With hook body firmly seated against front bushing, and hook point at center of needle, the distance between hook point and needle should be from .002 to .010 inch (See Fig. 36).

SETTING:

Loosen two bevel gear set screws and front bushing set screw as shown in Figs. 36 and 37.

With hook body seated against front bushing, turn adjusting pin as required to obtain .002 to .010 inch clearance. Securely tighten front bushing set

Maintain relationship of hook point with center of needle and tighten two bevel gear set screws.

HOOK TIMING (Radial Position)

CHECK:

Loop taking occurs when needle bar has risen .100 inch from bottom dead center position. At this position, hook point should be at centerline of needle as shown in Fig. 38.

NOTE: A gauge for positioning needle .100 inch from bottom dead center position is available upon specific request at additional charge.

SETTING:

Loosen two hook body screws shown in Fig. 37. With needle set for .100 inch above bottom dead center, move hook body as required to position point of hook at centerline of needle. Securely tighten two hook body screws.

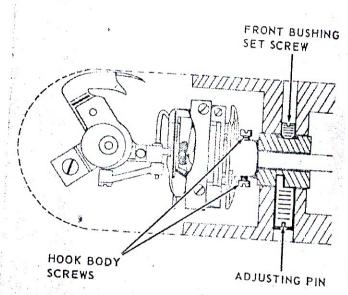


Fig. 37. Setting Longitudinal Position of Hook

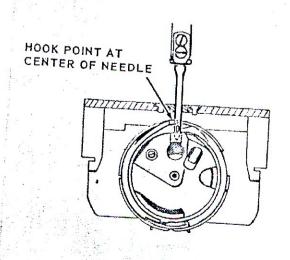


Fig. 38. Timing the Hook

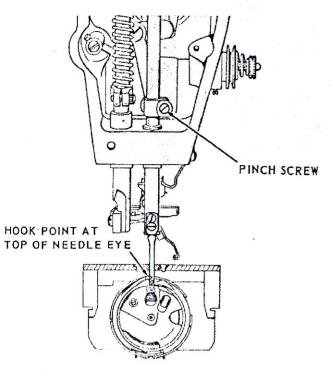


Fig. 39. Setting the Needle Bar Height

NEEDLE BAR HEIGHT

CHECK:

Needle bar height should be set so that hook point is at top of needle eye at loop taking (see Fig. 39).

SETTING:

With point of hook at centerline of needle, remove face plate and loosen needle bar pinch screw shown in Fig. 39.

Raise or lower needle bar as required to position hook point at top of needle eye. Securely tighten needle bar pinch screw and replace face plate.

NOTE: A gauge for setting needle bar height is available upon specific request at additional charge.

REEL WINDING ADJUSTMENTS

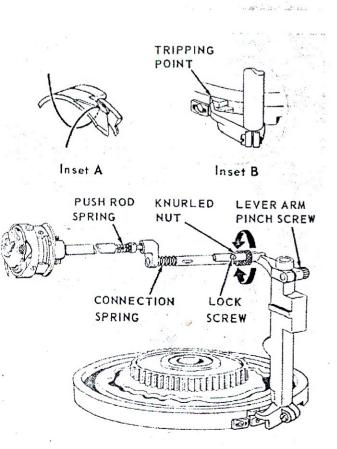


Fig. 40. Adjusting the Winding Linkage

WINDING LINKAGE

CHECK:


Reel winding linkage should be set to clamp the needle thread in throat of hook body as shown in inset A, Fig. 40.

SETTING:

Remove cylinder arm cover and turn machine pulley until tripping lever rests on tripping point as shown in inset B, Fig. 40. Then loosen lever arm pinch screw and lock screw on knurled nut as shown. Make certain that tripping lever remains IN CONTACT with tripping point on feed cam.

Back off on knurled nut one full turn from fully engaged position and compress push rod spring by pushing in on lever arm until heavier bias of connection spring is felt. Hold this position while tightening lever arm pinch screw.

Adjust for POSITIVE CLAMPING ACTION of restricting spring by turning knurled nut as required. Then tighten lock screw on knurled nut and replace cylinder arm cover.

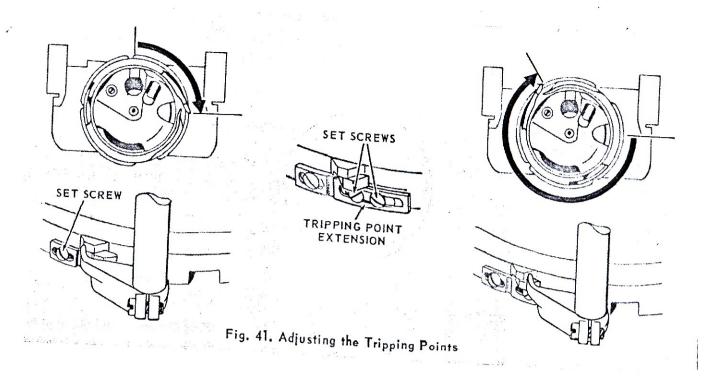

REEL DRIVER TRIPPING POINTS

CHECK:

Tripping point on outside edge of feed cam, Fig. 41, should be set to engage the reel winding linkage when the hook point has rotated approximately 1/4 revolution past loop taking (3 to 4 o'clock).

Tripping point extension also shown in Fig. 41 controls the duration of time in which the reel is wound and consequently the amount of thread that is wound on the reel.

The adjustment of the tripping point extension varies with the type of operation performed but may be generally set to release the winding mechanism when the hook has rotated slightly less than one full revolution from loop taking (11 to 12 o'clock).

SETTING 1: (Tripping Point)

Loosen set screw shown in Fig. 41 and position tripping point to engage the winding mechanism when the hook point has rotated approximately 1/4 revolution past loop taking. Securely tighten set screw.

SETTING 2: (Tripping Point Extension)

Loosen two set screws in tripping point extension and move extension to obtain the desired amount of wind. Securely tighten two set screws and adjust pre-tension.

NOTE: For cams having two sets of tripping points, repeat proceedure for other set.

PRE-TENSION

CHECK:

Pre-tension device shown in Fig. 42 aids in controlling the amount of thread that is wound onto the reel.

SETTING:

Turn thumb nut as required produce a slight drag on needle thread.

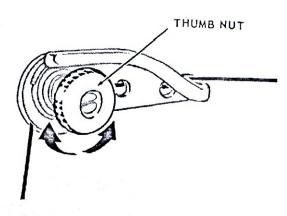


Fig. 42. Adjusting the Pre-Tension

THREAD STRIPPING AND RETRACTING ADJUSTMENTS

FINGER PLATE FOLLOWER

CHECK:

The finger plate follower shown in Fig. 43 should actuate the stripper finger spring when the knife roller has rotated in the cam path to position shown (see Fig. 44).

SETTING:

Loosen the two set screws shown in Fig. 43 and position the finger plate so that the follower CONTACTS BUT DOES NOT DEFLECT the stripper finger. Then securely tighten two set screws.

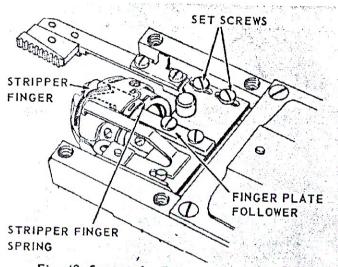


Fig. 43. Setting the Finger Plate Follower

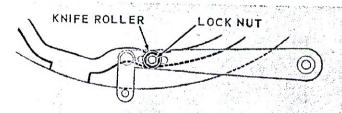


Fig. 44. Knife Roller in Cam Path

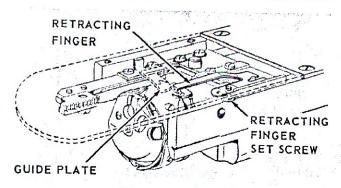


Fig. 45. Setting the Retracting Finger

STRIPPER FINGER

CHECK:

The stripper finger should strip unused thread from reel and is controlled by the knife roller (see Figs. 43 and 44).

The stripper finger should start its return immediately after it picks up reel thread and the complete retraction of stripper finger should be accomplished within 1/8 revolution of hook.

SETTING:

Loosen lock nut on knife roller as shown in Fig. 44. Adjust position of stud so that stripper finger starts its return as soon as thread is picked up. Then tighten lock nut securely.

NOTE: Check movement to make sure that stripper finger does not interfere with needle thread on previous stitch. Stripper finger should extend far enough to pick up reel thread but not so far as to pick up needle thread.

RETRACTING FINGER

CHECK:

The retracting finger shown in Fig. 45 should be in line with edge of guide plate (on underside of throat plate) and should pick up reel thread as stripper finger carries it by.

SETTING:

Loosen retracting finger set screw shown in Fig. 45 and move the retracting finger as required to pick up reel thread. Securely tighten set screw.

TENSION RELEASE

CHECK:

The needle thread tension release (adjusted earlier) may have altered during subsequent adjustments in its relation to other movements of machine. Check tension release to make sure that proper adjustment has been retained.

Tension release should occur as thread clamping action begins.

REEL HOLDER POSITION STOP

CHECK

Reel holder position stop, Fig. 46, should be set to maintain position of reel holder while allowing sufficient clearance (approximately .020 inch) for thread to pass between stop and slot of reel holder.

SETTING:

Loosen bracket screw shown in Fig. 47 and position stop as required. Then tighten bracket screw securely.

TRIMMING KNIVES

CHECK:

The trimming knives are of scissor type design and are fully adjustable to allow for resharpening.

NOTE: Sequence of adjustment should be followed in the order given.

SETTING 1: (Adjusting Knives)

Remove throat plate from machine.

Loosen knife holder screw and set movable knife so that thread separating point, Fig. 47, easily passes through triangle formed by thread on last stitch, as thread is cast over loop pick up finger. Securely tighten knife holder screw.

Loosen two screws in adjusting plate and set adjustable knife so that cutting edge does not pass center of needle hole bushing in throat plate when knife holder is rotated. Tighten two screws.

Assemble throat plate to machine meshing knife holder pinion gear with knife rack as shown in Fig. 48. The first tooth on knife rack must mesh with first space between teeth on pinion gear.

Eliminate play between rack teeth and pinion teeth by loosening adjusting block screw shown in Fig. 48 and moving block toward front of machine. When play has been removed, tighten adjusting block

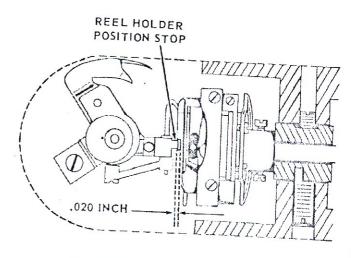


Fig. 46. Setting the Position Stop

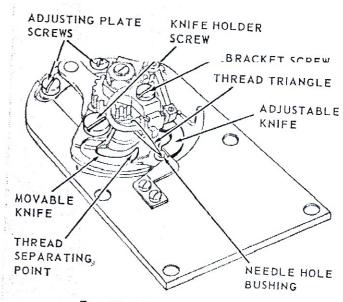


Fig. 47. Adjusting the Knives

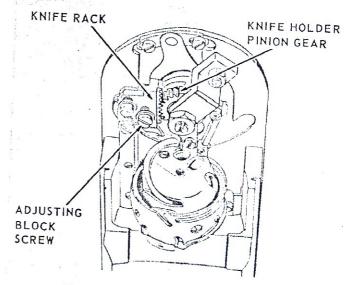


Fig. 48. Replacing the Throat Plate

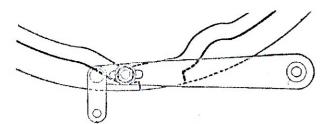


Fig. 49. Feed Cam at Winding Position

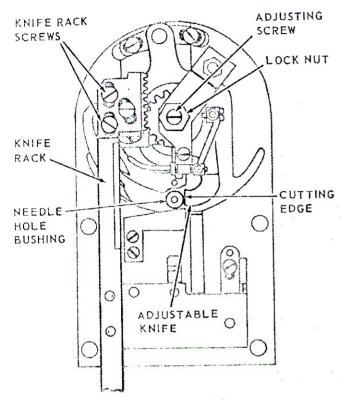


Fig. 50. Timing the Knives

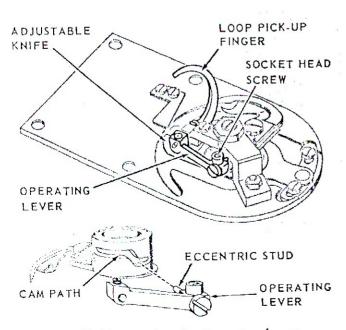


Fig. 51. Positioning the Operating Lever

SETTING 2: (Timing the Knives)

Engage machine in "run" position and turn mapulley over toward right until feed cam reaches reel winding position as shown in Fig. 49.

Loosen two knife rack screws, Fig. 50, and move knife rack until cutting edge of adjustable knife is even with edge of needle hole bushing in throat plate. Maintain this position while tightening two knife rack screws.

CAUTION: Make certain that knife does not make contact or damage thread during reel winding portion of machine cycle.

SETTING 3: (Knife Pressure)

To adjust pressure of movable knife on adjustable knife, loosen lock nut shown in Fig. 50 and turn adjusting screw clockwise or counter-clockwise as required. When satisfactory cutting pressure has been obtained, tighten lock nut securely.

LOOP PICK-UP FINGER

CHECK:

Motion of loop pick-up finger, Fig. 51, is controlled by the movement of the eccentric stud in campath of knife holder pinion (See inset, Fig. 51).

When the eccentric stud is at the start of transition in cam path, there should be a maximum clearance between the pick up finger operating lever and adjustable knife.

SETTING 1: (Positioning the Operating Lever)

Remove throat plate and rotate knife holder until eccentric stud is at start of transition in cam path as shown in inset, Fig. 51.

At this position, operating lever will be at its closest point in relation to adjustable knife and bottom surface of throat plate.

Loosen socket head screw shown in Fig. 51 and rotate eccentric stud to obtain maximum clearance between stud end of lever and adjustable knife. Then securely tighten socket head screw and replace throat plate.

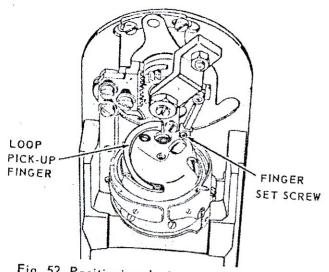


Fig. 52. Positioning the Loop Pick-up Finger

SETTING 2: (Positioning Loop-up Finger)

With machine in "stop" position, loosen finger set screw shown in Fig. 52 and move loop pick-up finger into reel holder as far as possible without causing a bind. Securely tighten finger set screw.

SEWING REEL

REMOVAL:

Remove arm cylinder cover and button clamp. Remove throat plate and engage machine in run position.

Turn machine pulley over toward right until hook point moves approximately to position shown in Fig. 53.

Remove two thread guard screws and two hook body screws, Fig. 53.

Slip hook section out from beneath the hook thread guard, making certain that stripper finger does not change its position as shown in Fig. 54. Lift reel holder upward and out of machine. Remove large head screw from reel and remove reel from holder as shown in Fig. 55.

CAUTION: Do not lose small circular spring located behind reel.

REPLACEMENT:

Insert reel in holder and fasten securely with large head screw.

Replace reel holder and hook section in reverse order instructed for removal.

Replace throat plate as instructed on page 26. Replace button clamp and arm cylinder cover.

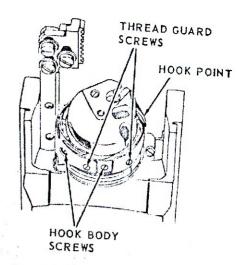


Fig. 53. Positioning the Hook

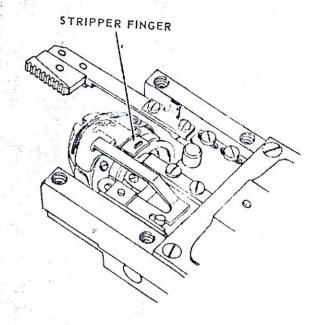


Fig. 54. Stripper Finger properly positioned

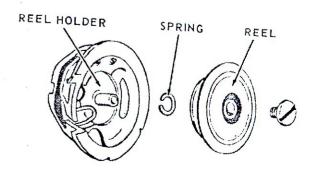


Fig. 55. Reel and Reel Holder

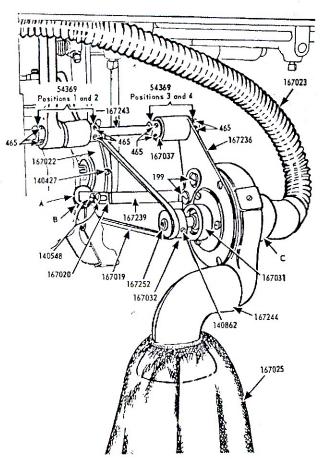


Fig. 56. Installing Blower Unit

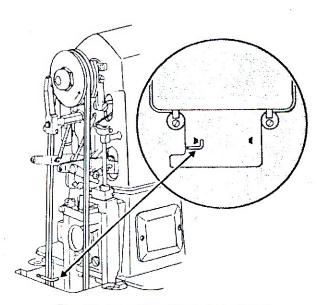


Fig. 57. Installing Hose Belt Guard

NOTE: Before installing blower unit, assemble belt tightener to bottom of table using hinge pin 167243 and two collars 54369 in Positions 1 and 2, as shown in Fig. 56. Install blower connection hose belt guard as shown in Fig. 57.

Electric Transmitter and Class 270- Machine should then be installed in usual manner.

Install Blower 167257 beneath the table in the following sequence - - -

- Remove machine driving pulley from transmitter shaft.
- Slip blower driving pulley 167022 on hub of of machine driving pulley and securely tighten pulley set screw 140427.
- Return machine driving pulley to its former position on transmitter shaft, replacing lock washer and locking nut in usual manner.
- 4. Blower bracket 167236 is furnished with grommet 167037. Grommet is pressed fitted in bracket support hole and expands immediately outside both ends of hole. Install blower bracket on hinge pin with two collars 54369 in Positions 3 and 4 as shown in Fig. 56.
- 5. Locate two collars 54369 firmly against grommet 167037 having outside collar flush with end of hinge pin. Securely tighten two set screws 465 in each of these two collars.
- 6. Locate small pulley 167032 on blower shaft 167252. Securely tighten pulley set screw 140862.
- 7. Place blower driving belt 167019 on blower driving pulley 167022.
- 8. Install machine driving belt on machine driving pulley and machine pulley.
- Loosen two set screws 465 in each of two collars 54369 at Positions 1 and 2 as shown in Fig. 56.

- 10. By sliding hinge pin with blower secured toward front or rear, as required, align small pulley 167032 on blower with large blower driving pulley 167022 on transmitter. Place two collars 54369 in Position 1 and 2, Fig. 56 firmly against belt tightener brackets, as shown and securely tighten two set screws 465 in each of these collars.
- 11. Assemble belt tension bracket 167020 to extension 167239 with two screws 140548.
- 12. Place blower driving belt 167019 in belt grooves of blower driving pulley 167022 and blower pulley 167032.
- 13. Install tension bracket and its extension on blower, as shown using two screws 199.
- 14. The lower screw 199 acts as a pivot; upper screw 199 permits adjustment. Before tightening these two screws swing tension bracket 167020 until its bumper A is in line with large head of screw B on transmitter. Tighten two screws 199.
- 15. Loosen two screws 140548 and adjust length of bracket assembly to obtain correct tension of blower driving belt 167019. Securely tighten two screws 140548.
- -16. Install elbow 167244 and waste-thread collector 167025, as shown.
- 17. Slip one end of hose 167023 over hose connection C, Fig. 56, on blower. Pass the other end through hole in table, behing sewing matchine, through hose bracket 167040, Fig. 58, at rear of sewing machine and through cylinder of machine to hose-connection-end of cylinder cover 167058, as shown in Fig. 58. Insert hose-connection-end of cylinder cover in hose and rotate cover two full turns securing cylinder to hose. Belt should pass between cables without touching driving belts or any other moving parts.




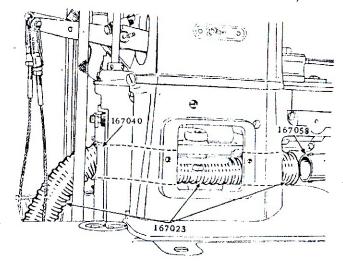


Fig. 58. Installing Hose

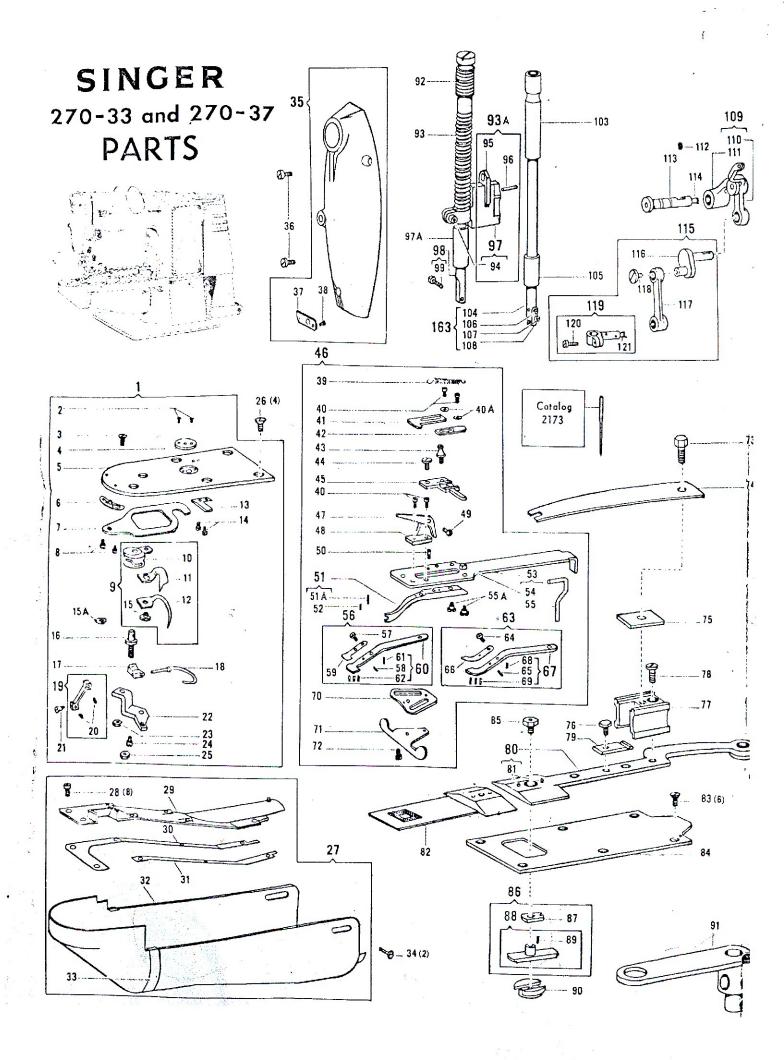

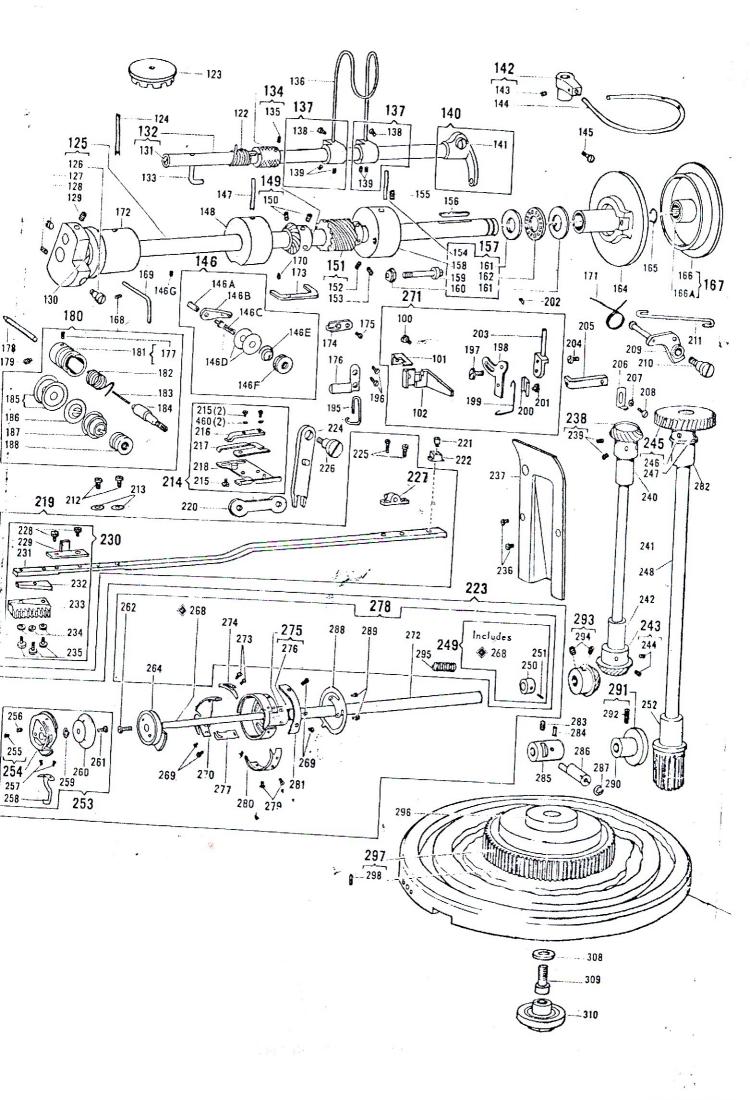

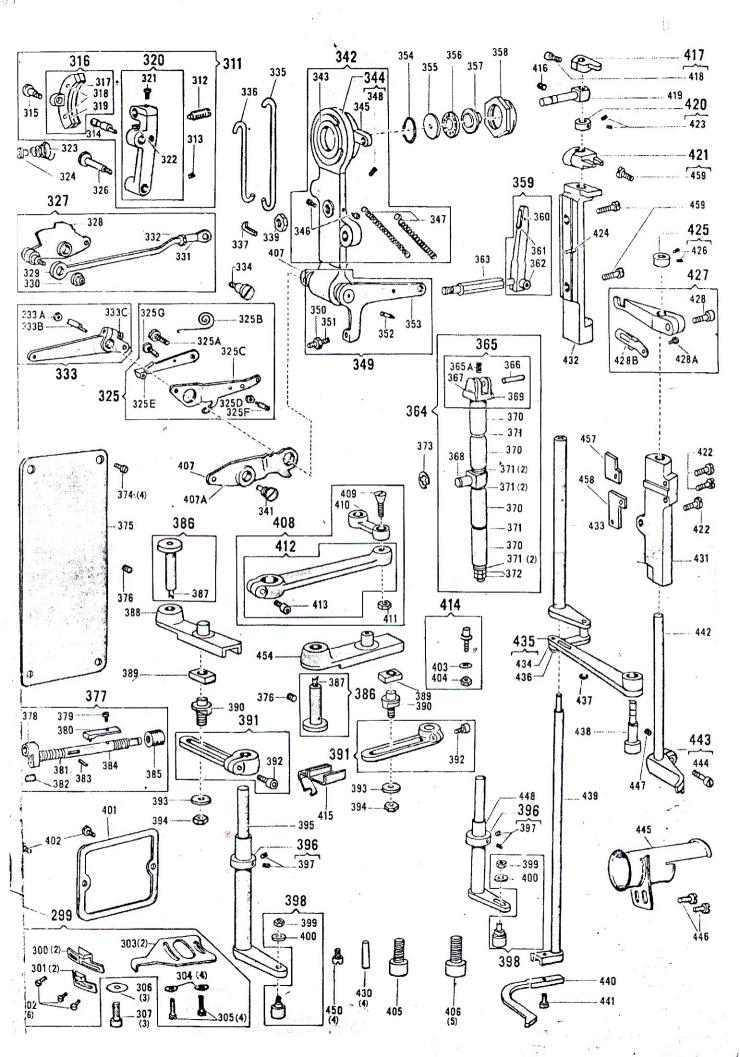

LIST OF PARTS 270-37 MACHINE

CODE		:	CODE		THE STOOT MACHINE	٠.		H ₂	
NO.	PART NO.	DESCRIPTION	NO.	PART NO.	DESCRIPTION		HO.	PART NO.	DESCRIPTION
1	16/258-001	Throat Plate with 185, 141145, 167060, 167067, 167071, 167081, 167082, 167121, 167123, 167269	67 68	135601	Button Clamp (right) 17723, 45329 and three 36696		137	167166	Thread Pull-off Loop Bracket with 208 and two 140321 (2)
2	14115Z	and two each 228 and 141152 Throat Plate Needle Hole Screw(2)	69	36696	Button Clamp (right) Screw Stud Button Clamp (right) Pad Pin (3)	1	138	208 140321	Thread Pull-off Loop Set Screw t Thread Pull-off Loop Bracket
3	50018	Knife (movable)	70	39242 63741	Button Clamp Spreader Button Clamp Spreader Thumb Plate		140	167006	Set Screw (4)
4	167269	Bracket Screw Throat Plate Needle Hote Bushing	72	1199	Button Clamp Spreader Plate Screw				Button Clamp Lifting Rock Shaft Lifting Arm with 1177
5	167177	Throat Plate Knife (adjustable) Plate	73	1178	Button Clamp Pressure Spring Screw		141	1177 167292	Rock Shaft Lifting Arm Clamping our Light Bracket with 462
7	167057	Knife (adjustable)	74 75	39241 39335	Button Clamp Pressure Spring	1	143	462	Thread Guide (ring) Set Screw
8	167068-001	Knife (adjustable) Plate Screw(2) Knife (movable) Holder, complete			Button Clamp Pressure Spring Screw Plate		144	167165	Thread Guide (ring) Light Bracket Set Screw
		Nov. 141145, 167060, 167071 and	76	1176 239572	Button Clamp Plate Screw Button Clamp Pressure Spring		146	167284	Pre-tension Thread Retainer (ad).)
10	167207-001	167207-001 (Agents only) Knife (movable) Holder	78		Bracket				complete, Nos. 418, 1562, 29943, 167283, 167303 and two 2455
11	167050	Knife (movable) Knife (movable) Thread Guide	1	1177	Button Clamp Pressure Spring Bracket Screw		146 A	167283	Pre-tension Thread Retainer (adjustable) Tension Screw Stud
13	167123	Hook Recl Thread Deflector	79 80	17710 167029	Button Clamp Arm Hinge Plate Feed Plate Carrier Bar with		146B	167303	Adaptor
14	228	Finger Guide Hook Reel Thread Guide Screw(2)	3550		two 239448			101303	Pre-tension Thread Retainer (adjustable) Tension Thread Guide
15 15A	141145	Knife (movable) Holder Screw Knife (movable) Holder Friction	81	239446	Fred Plate Carrier Bar Driving Block Spacer Position Pin (2)		146C 146D	418 2455	Pre-tension (adjustable) Screw Stud
		Washer	82 83	167028 691	Feed Plate				Pre-tension Thread Retainer Fension Disc (2)
16	167069	Knufe (movable) Holder Pinion Stud Hook Reel Holder Position	84	167041	Cylinder Cover Plate Screw (6) Cylinder Cover Plate (top)		146 F,	29943	Pre-tension Thread Retainer Tension Spring
18	16708;	Bracket	85	141071	Feed Plate Carrier Bar Block Screw		146F	1562- 853	Prestension Thumb Nut
19	167082	Loop Pick-up Finger Loop Pick-up Finger Lever with two	86	167055	Feed Place Carrier Bar Driving				Pre-tension Thread Retainer Set Screw
20	141247	141087 Loop Pick-up Finger Set Screw(Z)	-		Block complete, Nos. 167054 and 167056		147	223847	Arm Shaft (horizonta)) Bushing (center) Oil Packing Wick
21	167067	Knife (movable) Holder Pinion	87	167056	Fred Piate Carrier Bar Driving Block Spacer		146	167049	Aem Shaft (horizontal) Bushing
22	167070	Follower Knife (movable) Holder Pinion	88	167054	Feed Plate Carrier Bar Driving	١,	149	167011	(center) (Agents only) Arm Shaft (horizontal) Bevel
2.3	201711	Stud Bracket	89	239501	Block with 239501 Feed Plate Carrier Bar Driving	1	150	1250	Gear with two 1259
	-	Knife (movable) Holder Pinion Bracket Screw Nut	90		Block Pin		151	1259 167142	Arm Shaft (h i rontai) Set Screw (2) Versical Drive shaft Worm with
2.4 2.5	185 1597	Hook Reel Holder Bracket Screw Knife (movable) Holder Stud Nut	1007100	239250	Feed Plate Carrier Bar Driving Biock Oscillating Slide Stud		152	797	797 and 141102 Vertical Drive Shaft Worm Set
26	691	Throat Plate Screw (4)	91	167072	Lateral Pavot and Feed Plate Carrier Bar Arm				Screw
27	167251	Cylinder Cover (bottom) complete, Nos. 167246, 167247, 167248,	92	141057	Button Clamp Pressure		153	141102 202299	Vertical Drive Shaft Worm Screw Arm Shaft (horizontal) Bushing
28	50128	167249, 167250 and eight 50128	93	239214	Regulating Screw Button Clamp Lifting Bar Spring		155	141061	(back) Oil Packing (wick)
		Cylinder Cover (bottom) Cap Screw (8)	93A	167053	Button Clamp Lifting Bar Guide				Arm Shaft (horizontal) Bushing (back) Set Serew
29 ~₹0	167247 167248	Cylinder Cover (bottom) Cap Cylinder Cover (bottom) Gasket	94	141144	107003 with 16700" and 239515 Button Clamp Lifting Bar		156	239314 167013	Machine Pulley (tight) Key Arm Shaft (horizontal) Bushing
4	167249	(left)	95	167007	Clamping Screw Button Clamp Lifting Rock Shaft				(back) 167012 with 53618, 141128,
112		Cylinder Cover (bottom) Gasket (right)	96	239515	Lifting Link				202299, 239374 and two 239383 (Agents only)
· /2 · /3	167246 167250	Cylinder Cover (bottom) Cylinder Cover (bottom) Holder			Button Clamp Lifting Rock Shaft Lifting Link Hinge Pin		158	167012	Arm Shaft (horizontal) Bushing (her) (Agents only)
. 14-	141140	Cylinder Cover (bottom) Screw (2)	97	167003	Button Clamp Lifting Bar Position Cuide with 141144		159 -	141128	Arm Shatt (horizontal) Bushing
35		Arm Cover (front) with 1053 and 167262	97A	239212	Button Clamp Lifting Bar		160	53618	(back) Screw Are Shelt (but routed) Bushing
36 37 -	51369	Arm Cover (front) Screw (2)	98	239211	Bushing (lower) Button Clamp Lifting Bar with 176		161	239383	(back) Look Nut
		Arm Cower (front) Thread Cutter Knife	100	176 330	Button Clamp Foot Lifter Screw				Machine Pulley (tight) Needle Thrust Bearing Washer (2)
38	1053 167324	Arm Cover (front) Knife Screw Button Clamp Spreader Spring	101	39453	Thread Wiper Body Finger Screw Thread Wiper Body Finger		162	239374	Machine Pulley (tight) Needle Thrust Searing
40	1182	Button Clamp Opening Lever and	102	63837 239 274	Button Clamp Foot Lifter Needle Bar Bushing (upper)	+	163	167087	Nordle Bar 157086 with 209,
40A	17718	Spreader Screw (4) Button Clamp Spreader Lever	104	167086 239273	Needle Bar		164	239486-001	
, 41		Stop Screw Washer(2) Button Claimp Spreader Lever Stop	106	1161	Needle Bar Bushing (lower) Needle Bar Thread Guide Screw		105	239315	Machine Polley (tight) Retaining Ring
42	174136	Button Clamp Spreader Lever	107	209	Needle Set Screw Needle Bar Thread Conde		166	239317	Machine Pulley (loose)
43	1181	Adjusting Plate Botton Clamp Spreader Spring Stud	109	239332	Thread Take-up Lever complete.		166A	239322	Machine Pulley (loose) Needle Bearing
44	1183	Button Clamp Stop Screw Button Clamp Spreader Lever	110	239330	Nos. 239330 and 239331 Thread Take-up Lever	1	167	239318	Machine Pulley (loose) 234317 with 234322
46	167325	Button Clamp complete, Nos. 99,	111 112	239331	Thread Take-up Lever Link		168	51220	Pension Thread Guard Set Screw
		1180, 1181, 1183, 1199, 39242, 50737, 63741, 124733, ;24737,		141083	Thread Take-up Lever Link Set Screw		169	239328 853	Tension Thread Guard Thread Retainer (back) Set Screw
		124738, 124739, 136608, 167316,	113	26213B	Thread Take-up Lever Link Hinge Pin	2	171	239295	Storting Bell Crank Pawl Hinge
		167318, 167321, 167323, 167324 and two each 1175, 1182 and 17718	114	167263	Thread Take-up Lever Link		172	239228	Screw Return Spring Arm Shaft (horizontal) Bushing
48	124733 167323	Button Clamp Opening Lever Button Clamp Opening Lever	115	167088	Oil Packing (felt) Needle Bar Connecting Link		173	167168	(iront) (Agents only) Thread Retainer (back)
49	12.00	Bracket		•	271597 with 50650, 167089-001 and 239385		174	210954 140082	Thread Guide
50	50237	Button Clamp Hinge Screw Button Clamp Spreader Lever	116 117	239385 27 F597	Thread Take-up Crank		176	167171	Thread Guide Screw Thread Retainer (lower) Thread
51		Stop Screw Burton Clamp Stop 17720 with 63742	118	50650	Needle Bar Connecting Link Needle Bar Connecting Link		177	141245	Guide Tension Stud Set Silvew (2)
51 A	63742	Button Clamp Spreader Steady	119	167089-001	Cap Screw Needle Bar Connecting Stud with		178 179	167162 998	Tension Release Rod
52		Pin (long) Button Clamp Spreader Steady	3.500		175 and 239277		180	167163	Thread Take-up Spring Set Screw Tension complete, Nus. 1568,
53		Pin (short) Button Clamp Arm with 17714	120	175 239277	Needle Bar Clamping Screw Needle Bar Connecting Stud Oil				2103, 32572, 430a2, 141576, 167173, 270276 and two 2102
54	100000000000000000000000000000000000000		122	167278	Packing (wick) Button Clamp Lifting Rock		181	167173	Thread Take-up Spring Regulator
		Button Clamp Pressure Spring Guide Block			Shaft Collar Spring		182	52082	with two 141245 Thread Take-up Spring
55 55A		Button Clamp Arm Hook with 63825 Button Clamp Hinge Screw(2)	123	167017 223847	Arm Shaft (upright) Hole Cover Arm Shaft (horizontal)		183	270278 141576	Tension Releasing Pin Tension Stud
56	167316	but on Clamp (left) 136598 with	125	167010	Bushing (front) Oil Packing (wick)		185 186	2102	Tension Disc (2)
57		230, 136600 and 167317 Button Clamp (left) Spring Screw			Arm Shaft (horizontal) Nos. 858, 1065 and two 141275	-	187	32572 2103	Tension Releasing Disc Tension Spring
58		Button Clamp (left) Spring Position Pin	126 127	1065 858	Needle Bar Screw Needle Bar Crank Set Screw		1.88 195	1560 167291	Tersion Thumb Nut
	136600	Button Clamp (left) Spring	128	141275 141275	Thread Take-up Crank Set Screw		196	197	Thread Retainer (lower) (Wire) Thread Retainer (lower) Thread
60	136598	Button Clamp (1eft) 17723, 45329 and three 36696	130	203172	Thread Take-up Position Screw Needle Bar Crank Friction Washer		197	141084	Guidi Screw (2) Thread Wiper Body Hinge Screw
61	17723	Button Clamp (left) Screw Stud	131	141059	Button Clamp Lifting Rock Shaft Connection Screw		198	239387 167039	Thread Wiper Body
	167318	Button Clamp (left) Pad Pin (3) Button Clamp (right) 136601 with	132	167004	Button Clamp Lifting Rock Shaft			239336	Thread Wiper Body Wire Thread Wiper Body Wire Clamping
64		230, 136603 and 167319 Button Clamp (right) Spring Screw	133	239218	with 141059 Button Clamp Lifting Rock Shaft		201		Place Thread Wiper Body Wire Clamping
65	45329	Button Clamp (right) Spring - Position Pin	134	167277	Lifting Link Connection Button Clamp Lifting Rock Shaft		20Z		Screw
66		Button Clamp (right) Spring		V.	Collar with 465		203	167174	Thread Wiper Set Screw Thread Wiper Body Support
			135 136	465 167176	Button Clamp Collar Set Screw Thread Pull-off Loop		204	50117	Button Clamp Opening Lever Arm Screw
		1.				•			

						20			
	CODE NO.	PART NO	DESCRIPTION	CODE NO.	PART HO.	DESCRIPTION	HO.	PART NO.	DESCRIPTION
	20%	124736	Button Clamp Opening Lever	277	167128	Hook Reel Thread Stripper	325G	846	Starting Lever Lifting Rod
3.55			Contact Piece Arm	278	167293	Finger Hook Shaft 167135 with 141165,	326	141100	Stop Screw Starting Lever Rod Hinge Screw
	266	124735	Button Claup Opening Lever Contact Piece	210	101275	167095, 167112, 167129, 167131,	327	167144	Starting Bell Crank 167143 with 51657, 53617, 167154 and 167155
	207	17718	Button Clamp Opening Lever Contact Piece Washer			167133, 167191 and two rach 50164 and 50169	328	167143	Starting Bell Crank
	208	1484	Button Clamp Opening Lever	279	1053	Hook Body Section Serry (2) Hook Body Section	329 330	167154 53617	Starting Lever Starting Rod Starting Lever Starting Rod
	209	239294	Contact Piece Strew Starting Bell Crank Pawl	280 281	167132 167273	Hook Body Thread Guard			Lock Nut Starting Lever Starting Rod
	210	141072	Starting Bell Crank Pawl Hinge Screw	282	239346	Yestical Drive Shaft Bushing (upper)	331		Adjuster
	211	239342	Tripping Rock Shaft Connection Rod	283	141076	Hook Shalt Bushing (front and rear) Set Screw (2)	332	51657 167295	Starting Lever Rod Nut Starting Lever Arm (operated)
	212	217 202603	Hook Reel Finger Plate Screw (2) Thread Retainer (lower) Thread	284	167139	Hook Shaft Bushing (front)	333A	1655	with 1055, 167296 and 350600 Starting Lever Arm Nut
	214	167126	Goide Washer (2) Hook Reel-Thread Deflector Finger	285	167136	Oil Pad (felt) Hook Shaft Bushing (front) for Agents	333B	167296	Starting Lever Arm (operated)
	214	10.10	Plate 167124 with 167122, 167127	286	167137	Hock Shaft Bushing (front) Pin	333C	350600	Tripper (screw) Starting Lever Arm (operated)
	Z15	237	and three 237 Hook Reel Thread Follower	287	167138	Hook Shaft Bushing (front) Pin	334	141095	Key Clamping Screw Starting Bell Crank Hinge Screw
	22/	1 (2) 27	Screw [3] Hook Reel Thread Deflector	288	167129	Retaining Ring Hook Reel Thread Stripper	335	239299	Starting Lever Arm Lifting Rod
	216	167127	Finger Plate Follower	289	50164	Finger Spring Hook Reel Thread Stripper	336 337	239487 167148	Starting Lever Lifting Rod Starting Lever Arm Key
	217	167122	Hook Reel Thread Deflector Finger			Finger Spring Screw (2)	339 341	1513 141098	Machine Pulley (loose) Lock Nut Starting Lever Lifting Rod
	218	167124	Finger Plate Knife (movable) Bar 167197	290	167140	Hook Shaft Bushing (rear) (for Agents)			Stud Screw
			with 239257 and two 193	291	167254	Hook Shaft Bushing (rear) Thrust Collar with 141137	342	167146	Starting Lever 167145 with 239159, 239307 and two each
	220	231252-001	Knife (movable) Actuating Lever Link	292	141137	Hook Shaft Bushing (rear) Thrust	343	239307	141099 and 214053 Starting Lever Stop Cam
	221	141238	Knife (movable) Bar Slide Block Screw	293	167141	Collar Screw Hook Shaft Bevel Gear with two			Interlocking Arm Retaining Ring
	222	213484	Knife (movable) Bar Driving	294	1259	1259 Hook Shaft Bevel Gear Set Screw(2)	344 345	167145 239159	Starting Lever with 141077 Starting Lever Stop Cam
	223	167294	Lever Slide Block Hook Shaft 167293 with 167128,	Z95	167112	Hook Reel Driver Push Rod Spring	346	141099	Interlocking Arm Starting Lever Screw Stud
			107132, 167279, 167273, 167274, (we 1053 and four 51306	296	167050	Feed and Knife Driving Cam Gear Bracket			(upper) (2) Starting Lever Return Spring (2)
	224	239251	Knife (movable) Actuating Lever	297	239522	Feed and Knife Driving Cam Supporting Gear with 239245	347 348	214053 141077	Starting Lever Arm Bushing
	225	193 141072	Knife (movable) Bar Screw (2) Knife (movable) Lever Screw	298	239245	Feed and Knife Driving Cam Supporting Gear Cam Pin	349	167150	Set Serew Starting Lever Arm and Rock
	227 228	239257	Knife (movable) Bar Connection Knife (movable) Bar Adjusting	299	167275	Feed and Knife Driving Cam	347		Shaft 167151 with 170, 1664,
			Guard Screw (2) Knife (movable) Bar Adjusting			with two each 167030, 167036, 167234 and four each 140352,	350	1664	and 140427 Starting Laver Arm and Rock
	229	167279	Guard	200	147070	107235 and six 141085 Hook Reel Driver Tripping Point	351	140427	Shaft Not Starting Lever Arm and Rock
	230	167197	Knife (movable) Bar 167061 with 167063, 167064, 167279, two	300 301	167030 167036	Hook Reel Driver Tripping Point		170	Shaft Stud Return Spring Screw Stud (lower)
			217 and three each 808 and	302	141085	Extension (2) Hook Reel Driver Tripping Point	352 353	157151	Starting Lever Arm and Rock
	231	167061	202603 Knife (movable) Bar			Screw (2)		239315	Shaft Machine Pulley (loose) Retaining
	232	167064	Knife (ninvable) Bar Rack Adjusting Block	302	141085	Hook Reel Driver Tripping Point Extension Screw (4)	354		"Ring
	233	167063	Knife (movable) Bar Rack Knife (movable) Adjusting Screw	303	167234	Feed and Knife Driving Cam Tripping Foint (2)	355	234362	Machine Pulicy (loose) Starting Cap Needle Plate
	234	202603	Washer	304	167235	Feed and Knife Driving Cam Tripping Point Washer (4)	356	230426	Machine Pulley (loose) Starting Cap Needle Thrust Bearing
	235 236	141242 140082	Raife (movable) Adjusting Screw (3) Arm Cover (center) Screw (2)	305	140352	Feed and Knife Driving Cam	357	234525	Machine Pulley (loose) Starting
	237	239221	Arm Cover (center) Arm Shaft (upright) Bevel Gear	306	210805	Tripping Point Screw (4) Feed and Knife Driving Cam	358	239524	Cap Needle Button Machine Pulley (loose) Starting Cap
	238	143015	(upper) with two 1259	307	350600	Mounting Screw Washer (3) Feed and Knife Driving Cam	359	239379	Mathine Pulley (loose) Engaging Arm with 239320, 239321 and
	239	1259	Arm Staft (upright) Bevel Gear (upper) Set Screw (2)			Mounting Screw (3)			350600
	240		Arm. Shaft (apright) Bushing (apper) Arm. Shaft (apright)	308	202005	Fred and Knife Driving Cam Supporting Gear Bracket Washer	360	239371	Machine Pulley (loose) Engaging Arm Wear Block Pin
	241 242	167015	Arm Shaft (opright) Bushing (lower)	309	141069	Feed and Knife Driving Cam Bracket Screw	361	239320	Pachine Pulley (loose) Engaging Arm Wear Block
	243	143014	Aim: Shafi (upright) Bevel Gear (lower) with two 1259	310	141070	Feed and Knife Driving Cam-	362	350600	Machine Pulley (loose) Engaging
	244	1 259	Arn-Shaft (upright) Bevel Gear (lower) Set Screw (2)	311	167161	Gear Screw Stop Motion Prake Shoc Support	363	167084	Arm Clamping Screw Machine Pulley (loose) Arm Stud
	245	167149	Vertical Drive Shaft Worm Gear			Bracket 167159 with 50446, 141101, 223812, 239513 and	354	167150	Starting Lever Stop Cam Interlacking Arm Stop Rod
	246	858	with 858 and 141094 Vertical Drive Shaft Set Screw	1.12	141101	239557 Stop Motion Brake Shoe			239520 with 167157 two 1518, and four each 2807 and 131022
	247		Vertical Drive Shaft Position Screw Vertical Drive Shaft	312	141101	Support Bracket Screw			(Agents only)
	249		Hook Reel Driver Push Rod 167098 with 167099 and 167288	313	223812	Stop Motion Brake Shor Support Spring	365	239520	Starting Lever Stop Cam Interlocking Arm Stop Rod
	250		Hook Reel Driver Push Rod Collar	314	Z39513	Stop Motion Brake Shoe Support Bracket Stud (eccentric)			complete. Nos. 202342, 239517, 239518 and 239519 (Agents only)
	251	167288	Hook Reel Driver Push Rod Collar Pin	315	50446	Stop Motion Brake Shoe Hinge	365	A 202342	Starting Lever Stop Cam
	252	239346	Vertical Drive Shaft Bushing (lower)	316	239557	Screw Stop Motion Brake Shoe Support			Arm Stop Rod Hinge Pin Tension Spring
	253	167270	Hook Reel Holder 167120 with			Nos. 239554, 239556 and two 239555	366	239518	Starting Lever Stop Cam Interiorking Arm Stop Rod Hinge
	1:		990, 167130, 167259, 167302 and two 1053	317	239554	Stop Motion Brake Shoe Stop Motion Brake Shoe River (2)		239519	Pin Starting Lever Stop Cam
	254	167120	Hook Reel Holder with 141087	318	239555 239556	Stop Motion Brake Shoe Support	367	234214	interlocking Arm Stop Rod Hinge
	255	141087	and 141148 Hook Reel Locking Screw	320	167159	Stop Motion Brake Shoe Support Bracket with 171 and 201	361	167157	Fin Retainer Starting Lever Stop Cam
	256	141148	Hook Reel Thread Tension Spring Screw with Nylon Insert	321	171	Stop Motion Brake Shoe Clamping Screw			Interiorking Arm Stop Rod Swivel Starting Lever Stop Com
	251	1053	Hook Reel Tension Spring Screw (2) Hook Reel Thread Tension Spring	322	201	Stop Motion Brake Shoe Stud	369		Interacting Arm Stop Rod
	251 251		Hook Reel Spring	323	167229	Step Motion Brake Shoe Support	371	; ;31022	Eurper (rubber) (4)
	26		Hook Reel Size 1 (black) Hook Reel Screw		3	Bracket Pressure Spring Stop Motion Brake Shoe Support	37	2807	Starting Lever Stop Cam Inter- tering Arm Stop Bod B upper
	26	2 141165	Hook Real Driver Screw Hook Real Driver	324	_	Bracket Pressure Spring Sleeve			Separating Washer (4)
	26	8 167098	Hook Reel Driver Push Rod	325	167299	Starting Lever Lifting Rod Lever Arm Extension 167298 with	37 37		Starting Lever Step Cam
	26 27		Hook Body Thread Guard Screw (4) Hook Stripper Finger Thread Guard	:		1611, 141209, 167300 and 167301			Into rlocking Arm Stop Row beitvel Ring
	27		Thread Wiper Nos. 330, 39453, 63837, 141084, 141574, 167039,	329	A 141209	Starting Lever Lifting Rod	37		Arm Cover (side) Screw (4)
			167174, 239336 and 239387	325	в 167301	Extension Dog Screw Starting Lever Lifting Rod Lever	37		Lateral Book Shair Driven Arm
	21	12 167135	(Agents only) Hook Shaft	325		Arm Return Spring	37	6 141076	Set Strew** Longit dinal Rock Shaft Driven
		73 50169	Hook Body Starting Thread Spring -> Screw (2)			Arm Extension with 170 and 546	37		Arm Set Screw
	2	74 167133	Hook Body Starting Thread Restricting Spring	325		Starting Lever Lifting Rod Lever	31	. 197111	Connection complete, Nos. 197,
		75 167131	Hook Body with two 200	32:		Arm Dog			53e15, le7102, 167103, 167105, 167109, l67110 and l67288
	2	76 200	Hook Body Set Screw (2)	1		(lower)	1		

i			
1	CODE		
1	МО	PART NO	DESCRIPTION
	37a	167103	Hook Reel Driver Push Rod
L	374	197	Hook Reel Driver 1
	380	167105	Hook Reel Driver Push Rod Connection Lock
	381	167119	Hook Reel Detune D
	382	167102	Hook Reel Driver D
	383	167288	Lever Bearing (Nylon)
	384	167109	Hook Reel Driver Push Rod Lever Connection Pin Hook Reel Driver
	385	53615	Connection Rod /-
	386	239267	Connection No.
			Hinge Stud with 2012an
	386	239267	
	387	202423	Longitudinal Pont Cl
	587	202423	Lateral D. Letter Off Packing Wick
		239583	Lateral Rock St. C.
		239574	Lateral Rock Shaft Driving Arm Guide Block
	189 2	39574	Longitudinal Rock Shan D
	390	67048	Lateral Rock Shafe Date
	390].	67048	Arm Stud Longitudinal Rock Shaft
	391 23	39266	
	391 23		Lateral Rock Shaft Driving Arm with 350604
			Longitudinal Rock Shaft Driving Arm with 350604
	100 - 100 - 100 - 100 -		Lateral Rock Shaft Driving Arm Clamping Screw
		-	Longitudinal Rock Shaft Driving
	393 210	805	angitudinal Back et a
	393 210	805 1	ateral Rock Shafe Daine
		612 [.	Signal Deimin
		N	ut Driving Arm Stud
	395 239 396 1676	384 L	Official Park of
	396 1670		steral Rock Shaft Collar with
3		wi	ngitudinal Rock Shaft Collar th two 624
			teral Rock Shaft Collar Screw (2)
		41 Lo	ngitudinal Rock Shaft Collar Screw (2)
3	98 519	الحرا ال	teral Book Shade way
3	98 519	51 Los	Situdinal Post St.
	99 165		Stud Nos. 1655 and 37310
39 40		- 200	E: Indinal Co a se
40		Fol	ower Wash
40	2121	Foll	ower West Shaft Cam
40	2 1454	CVI	nder Course to the
403	225837	Feet	and Knife Driving Cam
604	1521	Free	and Knife Daire
405		Cylin	der Base Lost
406	141069	Arm	3crew (3)
407	239301 A 167297	SIRTE	ng Lever Arm n
108	167076	Leve	Arm
			el Pivot Driving Arm 5 with 1519, 141075 and
409	141075	Later	I Rock She C Detail
410	239266		il Rock Shaft Driven
611	1519		
112	167075		Rock Shaft Driven
113	350600		Pivot Driving Arm
14			Pivot Driving Arm
15	51948	Arm Re	d Knife Driving Cam
	235132-0	Position	
16	141093	Trippin	Rock Shafe c
. 7	239341	Trippin	Rock Shade Care
8	350606	Tripping	Rock Share Co
9	239344	Tripping	Book Chart o
0	167182	· · · · · · · · ·	Rock Shaft Support Rock Shaft Collar
1	167062	Knife (m	ovablel Bar Delui
3	141211	Hook Ree	l Driver Tripping
		Screw [3]	Tripping Lever


		CODE NO.	PAR	t No.
		423		DESCRIPTION
		124	2393	Set Screw (2)
		425	5436	Rock Shale Band Actuating
	İ	126	46	Shaft Collar with a ripping Lever
	1.	127	16710	Set Screw (7)
		28	35060	with 197, 167795 Push Rod Lever
	4	28A	19	Clamping Scram
	4	28B	16728	Hook Reel Driver Lock Spring Screw
		3 0		
		30	16537	m Position Dim (3)
	4		16532	
		••	10/11/	TOOK REEL Driver Telem
	43	2	239256	Knife (mana)
	43	3	239255	Knile Imovable 1 2
	43	4	167047	Rock Shafe
				Feed and Knife Driving Cam
	43	5	167046	Feed and Katte Day
	436	. :	239240	239240 Feed and Knife Driving Cam Follower Annual Priving Cam
Į	437		13288	Follower Arm Link Hinge Stud
ļ			23285	Follower Arm Link Police
ļ	438	2	39361	Ring
Ī	52.5			Feed and Knife Driving Cam Follower Arm Hinge Stud Tringian
ı	439		67181	Tripping Rock Shaft
ı	441	2	39343	
ı	***		704	
	44Z	16	7116	Hook Reel Driver Tainer
	443	16	7115	Shaft Lever
				Hook Reel Driver Tripping Point Lever with 141081
	114	14	0183	Hook Reel Driver Total
	445	16	7040	Cylinder Cover Di
	446		1460	
				Cylinder Cover Blower Bracket Screw (2)
	447	141	077	Feed and Knife Driving Cam
	448			Follower Set Screw
	450	141	264	Lateral Rock cure
	454	239	583	Cylinder Base Leave
				Longitudinal Rock Shaft Driven
	457	167	290	Hook Reel Daine
	458	1672	289	Hook Reel Driver T
				Hook Reel Driver Trip Lever Shaft Bracket Shim (lower)
	159	11	77	Knife (movable) por
	459	11	77	
,	460	***		Knife (movable) Shaft Bracket Screw (2)
		2026	03	Thread Deflecter D.
				Screw Washer (2)
	10-	_		

LIST OF PARTS 270-33 MACHINE *

The same as Machine 270-37 except for the following:

151	167077	Vertical Drive Shaft Worm with 797 and 141102 in place of 167142
245	167079	Vertical Drive Shaft Worm Gear with 858 and 141094 in place of 167149
299	167327	Feed and Knife Driving Cam with two each 167030, 167036, 167234, four each 140352, 167255 and six 141085 in place of 167275

PARTS CHART FOR QUICK CHANGE MECHANISM NO. 167330

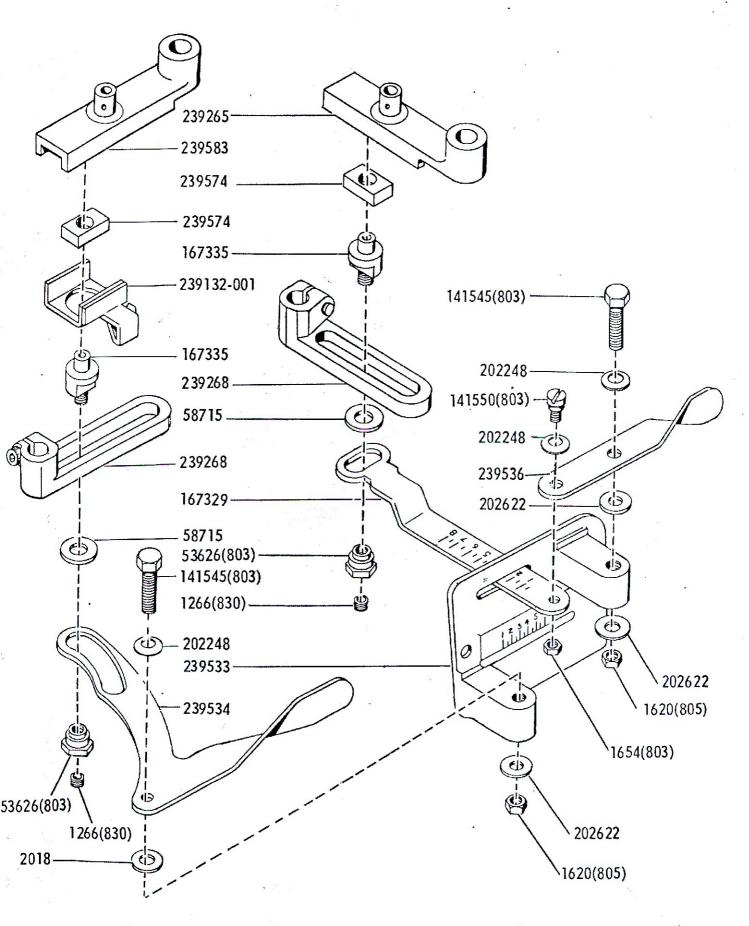

NUMERICAL LIST OF PARTS FOR QUICK CHANGE MECHANISM NO. 167330

PART NO.	DESCRIPTION
1266(830) 1266(830) 1620(805) 1620(805) 1654(803) 2018 53626(803) 53626(803) 58715 58715 141545(803) 141545(803) 147329 167335 167335 202248 202248 202248 202622 202622 202622 239533 239534 239536	Lateral Rock Driving Arm Screw Stud Locking Screw Longitudinal Rock Shaft Driving Arm Screw Stud Locking Screw Loteral Adjusting Lever Hinge Screw Nut Longitudinal Adjusting Lever Handle Hinge Screw Nut Longitudinal Adjusting Lever Hinge Screw Nut Lateral Adjusting Lever Spacing Washer Lateral Rock Shaft Driving Arm Screw Stud Nut Longitudinal Rock Shaft Driving Arm Screw Stud Nut Lateral Rock Shaft Driving Arm Screw Stud Nut Washer Longitudinal Rock Shaft Driving Arm Screw Stud Nut Washer Longitudinal Rock Shaft Driving Arm Screw Stud Nut Washer Longitudinal Adjusting Lever Hinge Screw Longitudinal Adjusting Lever Handle Hinge Screw Longitudinal Adjusting Lever (with numbers and graduations) Lateral Rock Shaft Driving Arm Screw Stud Longitudinal Rock Shaft Driving Arm Screw Stud Lateral Rock Shaft Driving Arm Screw Friction Washer Longitudinal Adjusting Lever Handle Hinge Screw Friction Washer Longitudinal Adjusting Lever Handle Hinge Screw Nut Washer Longitudinal Adjusting Lever Handle Hinge Screw Nut Washer Longitudinal Adjusting Lever Handle Spacing Washer Cylinder Cover (side) Lateral Adjusting Lever Longitudinal Adjusting Lever Handle
154308 154305 154306 154307 154354 154355	Set of Gauges (Complete) with 154305, 154306, 154307, 154354 and 154355 (furnished upon request at additional charge) Gauge Pin Gauge Pin Extension Gauge Pin Setting Cam Gauge Pin 154305 with 154355 Gauge Pin Spring Plunger for 154354