

LIST OF PARTS



MACHINES

Nos. 300w101, 300w201,
300w301 and 300w401

THE SINGER MANUFACTURING COMPANY

LM - ORIGINAL



CAVELMAC IND. COM. L.
DE MÁQS. ETR. EXP. LTDA.

Rua: Newton Prado, 315 Bom Retiro
Capital - S. Paulo (SP) CEP 01127-000

PABX: (11) 3226-9200

TELEVENDAS: (11) 3226-9222

FAX: (11) 3226-9333

UTILIDADE PÚBLICA: (11) 3226-9444

Site: www.cavemac.com.br

E-mail: cavemac@cavemac.com.br

DESCANADO

Cavemac

19 folhas

Controle do Acervo de Catálogos

Identificação	906
Edição	ÚNICA
Conteúdo	SINGER 300W101

00000906



INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case), must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished, Nickel Plated and Buffed.
- B. Polished, Nickel Plated and Buffed.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.
- J. Nickel Plated only.
- R. Merlized.
- X. Black Oxide, for Iron and Steel.
- XC. Hardened and Black Oxide, for Iron or Steel.
- Y. Black Nickel Plated only.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series

1 to 1500, 200001 to 201500 and 350001 to 351500 are Screw Numbers.
1501 to 1800, 201501 to 201800 and 351501 to 351800 are Nut Numbers.
1801 to 2000, 201801 to 202000 and 351801 to 352000 are Roller Numbers.
2001 to 50000 and 202001 to 350000 are Numbers of Machine Parts.


The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE

FOR

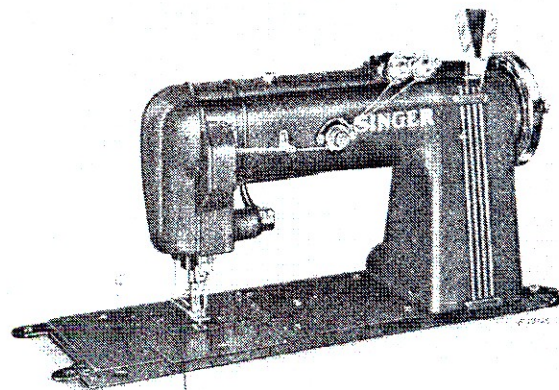

MACHINE No. 300w101

TWO THREAD CHAIN STITCH

ONE NEEDLE. ONE LOOPER.

COMPOUND FEED. MAXIMUM STITCH 4 TO THE INCH.

NEEDLE BAR STROKE 1 1/4 INCHES.

PRESSER BAR LIFT 3/8 INCH.

FOR WELTING, BINDING MATTRESSES AND SEAMING
MEDIUM AND HEAVY FABRICS

No.	Plate	Name
*268001	-----	Arm with 204235, 268002, 268004, thr each 200029E and 200047D
*268002	-----	Arm Head with 202120
204235	18607	" " Position Pin
200029E	18607	" " Screw
8582	18607	" Position Pin (2)
200004E	18607	" Screw (4)
202005	18607	" Washer (4)
268003	18601	" Shaft with 268009, 268214 and 350465C
268209	18601	Arm Shaft Air Vent Body with 2323
268212	18601	" " " " " Packing W
268210	18601	" " " " " Cap
232382	18601	" " " " " Position Pi
268211	18601	" " " " " Spring
201735E	18601	" " " " " Thumb
268213	18601	Arm Shaft Air Vent complete, Nos. 201735E and 268209 to 268211
268024	18601	Arm Shaft Ball Bearing (back)
268004	18601	" " " " " Housi

PARTS FOR MACHINE No. 300w101

No.	Plate	Name
200047D	18601	Arm Shaft Ball Bearing (back) Housing Screw (3)
268005	18601	Arm Shaft Ball Bearing (front)
268270	18601	" " Connection Belt
268006	18601	" " " " Pulley with two each 201254C and 202253
201254C	18601	Arm Shaft Connection Belt Pulley Set Screw
202253	18601	Arm Shaft Connection Belt Pulley Spring Flange
268007	18601	Arm Shaft Counter Balance with 200354C and 200362C
200354C	18601	Arm Shaft Counter Balance Position Screw
200362C	18601	Arm Shaft Counter Balance Set Screw
268264	18601	" " Oil Control Rod (wood)
268008	18601	" " " " Slinger with 350171C
350171C	18601	" " " " Set Screw
268214	18601	" " " " Stop Ball 5/32 in. diam.
268009	18601	" " " " Spring
350465C	18601	" " " " Screw
268010	18607	" Side Cover
200078H	18607	" " " " Screw (3)
268011	18601	Balance Wheel "V" belt groove (out-side diameter of belt groove 2.9 in.) with 201346C and 350107C
268012	18601	Balance Wheel 268011 with 268024
350107C	18601	" " Position Screw
201346C	18601	" " Set Screw
*268014	-----	Bed with 268184, two each 200035E and 225887
268015	18607	Bed Plate (left)
268018	18607	" " (right)
200053H	18607	" " Screw (8)
268019	18607	" " Slide with two 268022 and four 200138D
268022	18607	Bed Plate Slide Spring
200138D	18607	" " " " Screw
268160	18602	" Shaft
268209	18602	" " Air Vent Body with 232382
268212	18602	" " " " Packing Washer
268210	18602	" " " " Cap
232382	18602	" " " " Position Pin
268211	18602	" " " " Spring
201735E	18602	" " " " Thumb Nut
268213	18602	Bed Shaft Air Vent complete, Nos. 201735E and 268209 to 268211
268024	18602	Bed Shaft Ball Bearing
268028	18602	" " Connection Belt Pulley with two 201254C
268261	18602	Bed Shaft Connection Belt Pulley 268028 with 268024
201254C	18602	Bed Shaft Connection Belt Pulley Set Screw
268007	18602	Bed Shaft Counter Balance with 200354C and 200362C (2)

PARTS FOR MACHINE No. 300w101

No.	Plate	Name
200354C	18602	Bed Shaft Counter Balance Position Screw
200362C	18602	Bed Shaft Counter Balance Set Screw
268029	18602	" " Needle Bearing (2)
268265	18602	" " Oil Control Rod (wood)
268030	18607	Face Plate with 268033 and two 20141
268031	18607	" " Hinge Pin (2)
201416C	18607	" " " " Set Screw
268032	18607	" " Lock Spring
268197	18607	" " " " Plate
200571XC	18607	" " " " Screw (2)
268033	18607	" " Stud
268034	18603	Feed Bar with 200373C and two 200403C
268035	18603	" " Hinge Pin
200403C	18603	" " Set Screw
268610	18618	" Dog, 46 needle hole, for needle sizes 20 and 22 with 201537H and 350120C, for 268614
350120C	18618	Feed Dog Adjusting Screw
201537H	18618	" " " " Lock Nut
200040C	18603	" " " " Screw
201525E	18603	" " " " Lock Nut
208636	18603	" " " " Washer
268060	18603	" Driving Connection
268061	18603	" " " " 268063
200123D	18603	Feed Driving Connection Cap Screw
268062	18603	" " " " Hinge Stud
201522E	18603	" " " " " Nut
268063	18603	" " " " Needle Bearing
268064	18602	" " " " Eccentric
268065	18602	" " " " Adjusting Disc
268066	18602	" " " " Spring
268067	18602	Feed Driving Eccentric Adjusting Disc
200382C	18602	Spring Collar with two 200382C
350477C	18602	Feed Driving Eccentric Adjusting Disc
350101C	18602	Spring Collar Set Screw
268068	18602	Feed Driving Eccentric Friction Adjusting Screw
350467C	18602	Feed Driving Eccentric Friction Adjusting Screw Set Screw
268069	18603	Feed Driving Flange with two each 350101C, 350467C and 350477C
200354C	18603	Feed Driving Flange Set Screw
200362C	18603	" " Rock Frame with 200354C and 200362C
268070	18603	Feed Driving Rock Frame Position Screw
268072	18603	Feed Driving Rock Frame Set Screw
200386C	18603	" " " " Shaft
		" " " " Collar with two 200386C (2)
		Feed Driving Rock Shaft Collar Set Screw

No.	Plate	Name
229J	18621	Looper Thread Guide (top of Arm) Screw
200035D	18621	" " " Screw
268114	18602	" " Take-up Driving Connection
268079	18602	Looper Thread Take-up Driving Connection Hinge Stud with 268258
268258	18602	Looper Thread Take-up Driving Connection Hinge Stud Oil Packing (wick)
200098F	18602	Looper Thread Take-up Driving Connection Hinge Stud Set Screw
268113	18602	Looper Thread Take-up Driving Eccentric with 200378C and 201220C
201220C	18602	Looper Thread Take-up Driving Eccentric Position Screw
200378C	18602	Looper Thread Take-up Driving Eccentric Set Screw
268115	18602	Looper Thread Take-up Lever with 200098F and two 201052C
268116	18602	Looper Thread Take-up Lever Hinge Stud
268072	18602	" " " " "
		Collar with two 200386C
200386C	18602	Looper Thread Take-up Lever Hinge Stud Collar Set Screw
200362C	18602	Looper Thread Take-up Lever Hinge Stud Set Screw (2)
268117	18602	Looper Thread Take-up Rod
201052C	18602	" " " " Set Screw
268118	18621	" " " Thread Guide
350132C	18621	" " " " " Screw
268119	18621	" " " " " "
		Support Stud
200394C	18621	Looper Thread Take-up Thread Guide Support Stud Set Screw
268120	18621	Looper Thread Tension Bracket
200564E	18621	" " " " " Screw (2)
268121	18621	" " " " " Spacing
		Collar (2)
2455	18621	Looper Thread Tension Disc
10141	18621	" " " " " Spring
418D	18621	" " " " " Stud
268122	18621	" " " " " Thread Guide
1562J	18621	" " " " " Thumb-Nut
5989	18621	Looper Thread Tension complete, Nos. 418D, 1562J, 10141 and two 2455
268123	18621	Looper Thread Tube with two 268125 (4)
268124	18621	Looper Thread Tube Clamp (2)
200054C	18621	" " " " " Screw (4)
268125	18621	" " " " " Thread Bushing
268126	18604	" Throw-out Gear with two 200362C
268127	18604	" " " " " Locking Plunger
201477C	18604	" " " " " "
		Screw Bushing
250265	18604	Looper Throw-out Gear Locking Plunger Spring

No.	Plate	Name
200444C	18604	Looper Throw-out Gear Locking Plunger Stop Screw
200364C	18604	Looper Throw-out Gear Locking Plunger Stop Screw Set Screw
201620D	18604	Looper Throw-out Gear Locking Plunger Thumb Nut
200362C	18604	Looper Throw-out Gear Set Screw
268129	18604	" " " Rack Rod
201553D	18604	" " " " " Thumb Nut
268131	18603	" " " Safety Latch
268199	18603	" " " " " Collar
		with two 200386C
200386C	18603	Looper Throw-out Safety Latch Collar Set Screw
268132	18603	Looper Throw-out Safety Latch Spring
268133	18603	" " " " " "
		Bracket
200098F	18603	Looper Throw-out Safety Latch Spring Bracket Screw (2)
228448	18613	Machine Locating Stud (4)
268603	18617	Needle Bar with 200125F
268137	18617	" " " Connecting Link
268138	18617	" " " " " 268137 with 200379C and two 268140
268139	18617	Needle Bar Connecting Link Cap Washer
200095H	18617	" " " " " " " " " " " Screw
268140	18617	Needle Bar Connecting Link Needle Bearing
268141	18617	Needle Bar Connecting Stud with 201188C, 202423 and two 200069C
202423	18617	Needle Bar Connecting Stud Oil Packing (wick)
200069C	18617	Needle Bar Connecting Stud Pinch Screw
268142	18601	" " " Crank with 200346C, 200354C, 200378C and 200379C
268143	18601	Needle Bar Crank 268142 with 268005
200379C	18601	" " " " " Oil Hole Plug Screw
200354C	18601	" " " " " Position Screw
200378C	18601	" " " " " " " " " Check
		Screw
200346C	18601	Needle Bar Crank Set Screw
268144	18617	" " " Oiling Felt (2)
268278	18617	" " " " " Holder (2)
200173D	18617	" " " " " " " " " Screw (2)
268279	18617	" " " " " Rock Frame
268161	18617	" " " " " " " " " Driving Arm with two 200058C
200058C	18617	Needle Bar Rock Frame Driving Arm Pinch Screw
268060	18601	Needle Bar Rock Frame Driving Connection
268061	18601	Needle Bar Rock Frame Driving Connection 268060 with 268063
200123D	18617	Needle Bar Rock Frame Driving Connection Cap Screw

PARTS FOR MACHINE No. 300w101

No.	Plate	Name
268062	18617	Needle Bar Rock Frame Driving Connection Hinge Stud
201522E	18617	Needle Bar Rock Frame Driving Connection Hinge Stud Nut
268063	18601	Needle Bar Rock Frame Driving Connection Needle Bearing
268064	18601	Needle Bar Rock Frame Driving Eccentric
268065	18601	Needle Bar Rock Frame Driving Eccentric Adjusting Disc
268066	18601	Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring
268067	18601	Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring Collar with two 200382C
200382C	18601	Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring Collar Set Screw
350477C	18601	Needle Bar Rock Frame Driving Eccentric Friction Adjusting Screw
350101C	18601	Needle Bar Rock Frame Driving Eccentric Friction Adjusting Screw Set Screw
268068	18601	Needle Bar Rock Frame Driving Flange with two each 350101C, 350467C and 350477C
350467C	18601	Needle Bar Rock Frame Driving Flange Set Screw
268029	18617	Needle Bar Rock Frame Needle Bearing (2)
268148	18601	Needle Bar Rock Frame Regulating Stud
264709	18601	" " " " " "
200364C	18601	Cap with 200364C
268149	18601	Needle Bar Rock Frame Regulating Stud Cap Set Screw
200337C	18601	Needle Bar Rock Frame Regulating Stud Sleeve
214529	18601	Needle Bar Rock Frame Regulating Stud Sleeve Set Screw
268150	18601	Needle Bar Rock Frame Regulating Stud Spring
268219	18616	Needle Bar Rock Frame Regulating Stud complete, Nos. 214529, 264709, 268148 and 268149
200583C	18616	Needle Bar Rock Frame Thread Guide
200125F	18617	" " " " " "
268163	18621	Screw (2)
268164	18617	Needle Set Screw
200379C	18617	" " Thread Guide (on Arm Head)
268165	18617	" " " " (on Needle Bar Connecting Link)
		Needle Thread Guide (on Needle Bar Connecting Link) Set Screw
		Needle Thread Guide (on Needle Bar Connecting Stud)

PARTS FOR MACHINE No. 300w101

No.	Plate	Name
201188C	18617	Needle Thread Guide (on Needle Bar Connecting Stud) Set Screw
268166	18621	Needle Thread Guide (on side of Arm)
200082D	18621	" " " " Screw (2)
201733XC	18621	" " " " Nipper Adjusting Collar with 350101H
350101H	18621	Needle Thread Nipper Adjusting Collar Screw
268221	18621	Needle Thread Nipper Bearing
268222	18621	" " " " " " Plate
200064D	18621	" " " " " " " " (2)
268223	18621	Needle Thread Nipper Disc (2)
268224	18621	" " " " " " Washer
268225	18601	(vellumoid)
268226	18601	Needle Thread Nipper Eccentric with two 200394C
268228	18601	Needle Thread Nipper Eccentric Connection
268227	18601	Needle Thread Nipper Eccentric Connection 268226 with 268227
268259	18601	Needle Thread Nipper Eccentric Connection Needle Bearing
201403H	18601	Needle Thread Nipper Eccentric Flange
200394C	18601	" " " " " " Screw
268229	18621	Needle Thread Nipper Eccentric Set Screw
268230	18621	Needle Thread Nipper Plunger with 350496C
268231	18621	Needle Thread Nipper Plunger Cap
350496C	18621	" " " " " " Hinge
222613	18621	Pin
268232	18621	Needle Thread Nipper Plunger Hinge Pin Set Screw
201537H	18621	Needle Thread Nipper Spring
350483C	18621	" " " " " " Plunger
268167	18621	" " " " " " Nut (2)
200047E	18621	Needle Thread Nipper Spring Plunger Screw Bearing
268121	18621	Needle Thread Tension Bracket
2102	18621	" " " " " " " " Screw (2)
268168	18621	Collar (2)
268169	18621	Needle Thread Tension Disc
201052C	18621	" " " " " " Releaser
204365	18621	" " " " " " " " Cap with
32572	18621	Needle Thread Tension Releaser Cap Set Screw
226206	18621	Needle Thread Tension Releaser Spring
268171	18607	" " " " " " Releasing Disc
		" " " " " " Pin
		" " " " " " Plate
		(adjustable)

PARTS FOR MACHINE No. 300w101

No.	Plate	Name
238089	18607	Needle Thread Tension Releasing Plate Pin
200541E	18607	Needle Thread Tension Releasing Plate Screw
203349	18607	Needle Thread Tension Releasing Plate Screw Washer
131741	18621	Needle Thread Tension Spring
59538	18621	" " " Bushing (back)
59537	18621	Needle Thread Tension Spring Bushing (front)
50326C	18621	Needle Thread Tension Stud
59539	18621	" " " 50326C with 515700
54279	18621	Needle Thread Tension Thread Guide (double)
515700	18621	Needle Thread Tension Thumb Nut
268263	18621	Needle Thread Tension complete, Nos. 32572, 59537 to 59539, 131741 and two 2102
268172	18617	Presser Bar
268173	18617	" " Bushing
268174	18617	" " Guide Bracket with 200572F, 201216C and 351875
200572F	18617	Presser Bar Guide Bracket Adjusting Screw
201216C	18617	Presser Bar Guide Bracket Pinch Screw
351875	18617	" " " Roller
268175	18617	" " Lifter
201276D	18617	" " Hinge Screw
222119	18617	" " Stop Pin
268176	18607	" " Spring
350381C	18607	" " Adjusting Screw
201485C	18607	" " " Set Screw
200935F	18607	Presser Bar Spring Support Screw
203759	18617	" " Stop Collar with 200380C
200380C	18617	" " Set Screw
206335	18618	" Foot Hinge Pin
268611	18618	" " Plate
268612	18618	" " Heel Spring
226080	18618	" " Spring
268275	18618	" " Shank with 1454F
1454F	18618	" " Pinch Screw
268613	18618	Presser Foot (spring hinged) complete, 46 needle hole, Nos. 206335, 226080, 268275, 268611 and 268612
268606	18616	Spreader with 268183
268181	18605	" Bar
268184	18605	" " Bearing
225887	18605	" " Position Pin
200035E	18605	" " Screw
268186	18605	" " Driving Connection with two 201020E
268233	18605	Spreader Driving Connection 268186 with 268063 and 351876

PARTS FOR MACHINE No. 300w101

No.	Plate	Name
201020E	18605	Spreader Driving Connection Cap Screw
268063	18605	" " Needle
268187	18605	Bearing
200373C	18605	Spreader Driving Crank with 200373C and 200403C
200403C	18605	Spreader Driving Crank Position Screw
268188	18602	" " Set Screw
		" " Eccentric with two 200364C
268189	18602	Spreader Driving Eccentric Counter Balance with two 200364C
201063E	18602	Spreader Driving Eccentric Counter Balance Screw (2)
200364C	18602	Spreader Driving Eccentric Counter Balance Set Screw
200364C	18602	Spreader Driving Eccentric Set Screw
268220	18602	" " Thrust Washer (2)
268190	18605	Spreader Driving Pin
268191	18605	" " Rock Shaft
268072	18605	" " Collar
		with two 200386C (2)
200386C	18605	Spreader Driving Rock Shaft Collar Set Screw
268071	18605	Spreader Driving Rock Shaft Needle Bearing (2)
350466C	18605	Spreader Driving Rock Shaft Screw Stud
351876	18605	" " " " "
201736E	18605	Ball Roller
		Spreader Driving Rock Shaft Screw Stud Nut
268185	18605	Spreader Holder with two 200380C
200380C	18605	" " Set Screw
268183	18616	" Point
350149C	18605	" Screw
204925	18605	" Washer
268614	18618	Throat Plate, for 268610
200100E	18618	" " Screw (3)

SINGER Needles should be used
in SINGER Machines.
These Needles and their Containers
are marked with the
Company's Trade-Mark "SIMANCO.***" 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT SINGER made needles. 2

MACHINE No. 300w201

TWO THREAD CHAIN STITCH

TWO NEEDLES. TWO LOOPERS.

COMPOUND FEED. MAXIMUM STITCH 4 TO THE INCH.

NEEDLE BAR STROKE $1\frac{1}{4}$ INCHES.

PRESSER BAR LIFT $\frac{3}{8}$ INCH.

FOR LAP SEAM FELLING AND INSERTING SLEEVES IN SPORT SHIRTS AND SIMILAR WORK IN MEDIUM AND HEAVY FABRICS
Made in Gauges From $\frac{1}{4}$ to 2 inches.

Same as Machine No. 300w101 with the following exceptions:

No.	Plate	Name
268016	18607	Bed Plate (left) for gauges from 1-17/32 to 2 inches
268020	18607	Bed Plate Slide with two 268022 and four 200138D, for gauges from 1-17/32 to 2 inches
267801	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 1/4, 9/32 and 5/16 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267851
267806	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 11/32, 3/8 and 13/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267853
267811	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 7/16, 15/32 and 1/2 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267855
267816	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 17/32 to 21/32 in., in steps of 1/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267857
267820	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 11/16 to 31/32 in., in steps of 1/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267858
267824	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 1 to 1-1/4 in., in steps of 1/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267859

PARTS FOR MACHINE No. 300w201

No.	Plate	Name
267828	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 1-9/32 to 1-1/2 in., in steps of 1/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267860
267836	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 1-17/32 to 1-11/16 in., in steps of 1/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267861
267832	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 1-23/32 to 1-29/32 in., in steps of 1/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267861
267840	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 1-15/16 and 2 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267863
268088	18610	Looper (2)
268103	18610	" Holder, in gauges 1/4, 9/32, 5/16 and 11/32 inch with four 350478C
268104	18610	Looper Holder, in gauges from 3/8 to 5/8 in., in steps of 1/32 in. with four 350478C
268105	18610	Looper Holder, in gauges from 21/32 to 7/8 in., in steps of 1/32 in. with four 350478C
268106	18610	Looper Holder, in gauges from 29/32 to 1-1/8 in., in steps of 1/32 in. with four 350478C
268107	18610	Looper Holder, in gauges from 1-5/32 to 1-1/2 in., in steps of 1/32 in. with four 350478C
268282	18610	Looper Holder, in gauges from 1-17/32 to 2 in., in steps of 1/32 in. with four 350478C
268296	18610	Looper Thread Guide (on Bed at Looper) for gauges from 1/4 to 15/32 inch
268297	18610	Looper Thread Guide (on Bed at Looper) for gauges from 1/2 to 25/32 inch
268298	18610	Looper Thread Guide (on Bed at Looper) for gauges from 13/16 to 1-3/32 inch
268299	18610	Looper Thread Guide (on Bed at Looper) for gauges from 1-1/8 to 1-13/32 inch
268300	18610	Looper Thread Guide (on Bed at Looper) for gauges from 1-7/16 to 1-23/32 inch
268301	18610	Looper Thread Guide (on Bed at Looper) for gauges from 1-3/4 to 2 inches

No.	Plate	Name
268122	18608	Looper Thread Tension Thread Guide (2)
5989	18608	Looper Thread Tension complete, Nos. 418D, 1562J, 10141 and two 2455 (2)
268136	18606	Needle Bar
268254	18610	" " Rock Frame Thread Guide, in gauges from 3/8 to 5/8 in., in steps of 1/32 inch
268255	18610	Needle Bar Rock Frame Thread Guide, in gauges from 21/32 to 7/8 in., in steps of 1/32 inch
268256	18610	Needle Bar Rock Frame Thread Guide, in gauges from 29/32 to 1-1/8 in., in steps of 1/32 inch
268268	18610	Needle Bar Rock Frame Thread Guide, in gauges from 1-5/32 to 1-1/2 in., in steps of 1/32 inch
268304	18610	Needle Bar Rock Frame Thread Guide, in gauges from 1-17/32 to 2 in., in steps of 1/32 inch
268151	18610	Needle Holder, in gauges 1/4, 9/32, 5/16 and 11/32 inch with two 50014C
268152	18610	Needle Holder, in gauges from 3/8 to 5/8 in., in steps of 1/32 in. with two 50014C
268154	18610	Needle Holder, in gauges from 21/32 to 7/8 in., in steps of 1/32 in. with two 50014C
268156	18610	Needle Holder, in gauges from 29/32 to 1-1/8 in., in steps of 1/32 in. with two 50014C
268157	18610	Needle Holder, in gauges from 1-5/32 to 1-1/2 in., in steps of 1/32 in. with two 50014C
268158	18610	Needle Holder, in gauges from 1-17/32 to 2 in., in steps of 1/32 in. with two 50014C
50014C	18610	Needle Set Screw
226206	18608	" Thread Tension Releasing Pin (2)
54279	18608	Needle Thread Tension Thread Guide (double), (2)
268263	18608	Needle Thread Tension complete, Nos. 32572, 59537 to 59539, 131741 and two 2102 (2)
230795	18609	Presser Foot Hinge Pin
267871	18609	" " Plate, for 267872
267873	18609	" " " " 267874
267875	18609	" " " " 267876
267877	18609	" " " " 267878
267872	18609	Presser Foot (spring hinged) complete, 46 needle hole, in gauges from 1/4 to 3/4 in., in steps of 1/32 in., Nos. 206335, 226080, 267871, 268275 and 268612

No.	Plate	Name
267874	18609	Presser Foot (spring hinged) complete, 46 needle hole, in gauges from 25/32 to 1-1/4 in., in steps of 1/32 in., Nos. 226080, 230795, 267873, 268275 and 268612
267876	18609	Presser Foot (spring hinged) complete, 46 needle hole, in gauges from 1-9/32 to 1-3/4 in., in steps of 1/32 in., Nos. 226080, 230795, 267875, 268275 and 268612
267878	18609	Presser Foot (spring hinged) complete, 46 needle hole, in gauges from 1-25/32 to 2 in., in steps of 1/32 in., Nos. 226080, 230795, 267877, 268275 and 268612
268177	18610	Spreader, in gauges 1/4, 9/32, 5/16 and 11/32 inch with two 268183
268178	18610	Spreader, in gauges from 3/8 to 5/8 in., in steps of 1/32 in. with two 268183
268179	18610	Spreader, in gauges from 21/32 to 7/8 in., in steps of 1/32 in. with two 268183
268180	18610	Spreader, in gauges from 29/32 to 1-1/8 in., in steps of 1/32 in. with two 268183
268207	18610	Spreader, in gauges from 1-5/32 to 1-1/2 in., in steps of 1/32 in. with two 268183
268284	18610	Spreader, in gauges from 1-17/32 to 2 in., in steps of 1/32 in. with two 268183
267851	18609	Throat Plate, for 267801, in gauges 1/4, 9/32 and 5/16 inch
267853	18609	Throat Plate, for 267806, in gauges 11/32, 3/8 and 13/32 inch
267855	18609	Throat Plate, for 267811, in gauges 7/16, 15/32 and 1/2 inch
267857	18609	Throat Plate, for 267816, in gauges from 17/32 to 21/32 in., in steps of 1/32 inch
267858	18609	Throat Plate, for 267820, in gauges from 11/16 to 31/32 in., in steps of 1/32 inch
267859	18609	Throat Plate, for 267824, in gauges from 1 to 1-1/4 in., in steps of 1/32 inch
267860	18609	Throat Plate, for 267828, in gauges from 1-9/32 to 1-1/2 in., in steps of 1/32 inch
267862	18609	Throat Plate, for 267836, in gauges from 1-17/32 to 1-11/16 in., in steps of 1/32 inch
267861	18609	Throat Plate, for 267832, in gauges from 1-23/32 to 1-29/32 in., in steps of 1/32 inch
267863	18609	Throat Plate, for 267840, in gauges 1-15/16 and 2 inch

MACHINE No. 300w301

TWO THREAD CHAIN STITCH

THREE NEEDLES. THREE LOOPERS.

COMPOUND FEED. MAXIMUM STITCH 4 TO THE INCH.

NEEDLE BAR STROKE $1\frac{1}{4}$ INCHES.

PRESSER BAR LIFT $\frac{3}{8}$ INCH.

FOR AWNING SEAMING AND SIMILAR WORK IN
MEDIUM AND HEAVY FABRICS

Made in Gauges From $\frac{3}{8}$ to $2\frac{1}{2}$ Inches Between Outside Needles.

Same as Machine No. 300w101 with the following exceptions:

No.	Plate	Name
268801	18622	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in $3/8$ - $3/8$ in. gauge with 201537H and 350120C, for 268971
268088	18619	Looper (3)
268832	18619	" Holder, in gauges from 11/32 to 7/16 in. (each side of center needle) with six 350478C
268834	18619	Looper Holder, in gauges from 19/32 to 3/4 in. (each side of center needle) with six 350478C
268503	18625	Looper Thread Guide
268852	18619	" " " (on Bed at Looper) for gauges from $1/4$ to $3/8$ in. (each side of center needle)
268854	18619	Looper Thread Guide (on Bed at Looper) for gauges from 9/16 to 11/16 in. (each side of center needle)
268505	18625	Looper Thread Guide (top of Arm)
268506	18625	" " " " " Bracket 268111 with 268505 and two 229J
268507	18625	Looper Thread Take-up Thread Guide
268122	18625	" " " Tension " " (3)
5989	18625	Looper Thread Tension complete, Nos. 418D, 1562J, 10141 and two 2455 (3)
268136	18620	Needle Bar
268872	18619	" " Rock Frame Thread Guide, in gauges from 11/32 to 7/16 in. (each side of center needle)
268874	18619	Needle Bar Rock Frame Thread Guide, in gauges from 19/32 to $3/4$ in. (each side of center needle)
268892	18619	Needle Holder, in gauges from 11/32 to 7/16 in. (each side of center needle) with three 50014C

No.	Plate	Name
268894	18619	Needle Holder, in gauges from 19/32 to $3/4$ in. (each side of center needle) with three 50014C
50014C	18619	Needle Set Screw
268520	18625	" Thread Guide (on Arm Head)
268521	18620	" " " (on Needle Bar Connecting Link)
268512	18620	Needle Thread Guide (on Needle Bar Connecting Stud)
268513	18625	Needle Thread Guide (on side of Arm)
268514	18625	" " Tension Bracket
268515	18625	" " " Releaser
226206	18625	" " " Releasing Pin.
		(3)
54279	18625	Needle Thread Tension Thread Guide (double) (3)
268263	18625	Needle Thread Tension complete, Nos. 32572, 59537 to 59539, 131741 and two 2102 (3)
230795	18622	Presser Foot Hinge Pin
268911	18622	" " Plate
268912	18622	Presser Foot (spring hinged) complete, 46 needle hole, in $3/8$ - $3/8$ in. gauge, Nos. 226080, 230795, 268275, 268612 and 268911
268952	18619	Spreader, in gauges from 11/32 to 7/16 in. (each side of center needle) with three 268183
268954	18619	Spreader, in gauges from 19/32 to $3/4$ in. (each side of center needle) with three 268183
268971	18622	Throat Plate, $3/8$ - $3/8$ in. gauge, for 268801

MACHINE No. 300w401

TWO THREAD CHAIN STITCH

FOUR NEEDLES. FOUR LOOPERS.

COMPOUND FEED. MAXIMUM STITCH 4 TO THE INCH.

NEEDLE BAR STROKE $1\frac{1}{4}$ INCHES.

PRESSER BAR LIFT $\frac{3}{8}$ INCH.

FOR BANDING OPERATIONS ON WORK CLOTHING
AND SIMILAR WORK

Made in Gauges From $\frac{9}{16}$ to $2\frac{1}{2}$ Inches Between Outside Needles.

Same as Machine No. 300w101 with the following
exceptions:

No.	Plate	Name
269540	18624	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in 3/16-7/8-3/16 in. gauge with 201537H and 350120C, for 269541
269542	18624	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in 3/16- 1 - 3/16 in. gauge with 201537H and 350120C, for 269543
268522	18624	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in 1/4 - 1 - 1/4 in. gauge with 201537H and 350120C, for 269547
268088	18623	Looper (4)
268502	18623	" Holder for 3/16-7/8-3/16 in. gauge with eight 350478C
269051	18623	Looper Holder for 3/16 - 1 - 3/16 in. gauge with eight 350478C
268503	18626	Looper Thread Guide
268504	18623	" " (on Bed at Looper) for 3/16 - 1 - 3/16 in. gauge. May also be used for 3/16-7/8-3/16 in. and 1/4 - 1 - 1/4 in. gauges
268505	18626	Looper Thread Guide (top of Arm)
268506	18626	" " " " " Bracket 268111 with 268505 and two 229J
268507	18626	Looper Thread Take-up Thread Guide
268122	18626	" " Tension Thread Guide (4)
5989	18626	Looper Thread Tension complete, Nos. 418D, 1562J, 10141 and two 2455 (4)
268136	18620	Needle Bar
268508	18623	" " Rock Frame Thread Guide for 3/16-7/8-3/16 in. gauge
269126	18623	Needle Bar Rock Frame Thread Guide for 3/16 - 1 - 3/16 in. gauge
268509	18623	Needle Holder, 3/16-7/8-3/16 in. gauge with four 50014C
269176	18623	Needle Holder, 3/16 - 1 - 3/16 in. gauge with four 50014C
50014C	18623	Needle Set Screw
268520	18626	" Thread Guide (on Arm Head)
268521	18620	" " " " Needle Bar Connecting Link)

No.	Plate	Name
268512	18620	Needle Thread Guide (on Needle Bar Connecting Stud)
268513	18626	Needle Thread Guide (on side of Arm)
268514	18626	" " Tension Bracket
268515	18626	" " " Releaser
226206	18626	" " " Releasing Pin (4)
54279	18626	Needle Thread Tension Thread Guide (double) (4)
268263	18626	Needle Thread Tension complete, Nos. 32572, 59537 to 59539, 131741 and two 2102 (4)
269511	18624	Presser Foot Bracket with 350089C
269512	18624	" " Connection Lever
350068D	18624	" " " " Hinge Screw, for 269517
269514	18624	Presser Foot Plate (left), for 269517
269548	18624	" " " " " 269550
269513	18624	" " " (right), for 269517
269549	18624	" " " " " 269550
206335	18624	" " " " Hinge Pin, for 269517 and 269550
269515	18624	Presser Foot Shank
350089C	18624	" " " " " Finch Screw
269516	18624	" " " " " Guide Plate
200581H	18624	" " " " " " Screw, for 269517
350122H	18624	Presser Foot Shank Guide Plate Screw, for 269517
269517	18624	Presser Foot (hinged, compensating) complete, 46 needle hole, 3/16-7/8-3/16 in. gauge, Nos. 269511 to 269514, 269516, 350068D, 350122H, two each 200581H, 206335, 226080 and 269515
269550	18624	Presser Foot (hinged, compensating) complete, 46 needle hole, 1/4 - 1 - 1/4 in. gauge, Nos. 269511, 269512, 269516, 269548, 269549, 350068D, 350122H, two each 200581H, 206335, 226080 and 269515
268518	18623	Spreader, 3/16-7/8-3/16 in. gauge with four 268183
269328	18623	Spreader, 3/16 - 1 - 3/16 in. gauge with four 268183
269541	18624	Throat Plate, 3/16-7/8-3/16 in. gauge, for 269540
269543	18624	Throat Plate, 3/16 - 1 - 3/16 in. gauge, for 269542
269547	18624	Throat Plate, 1/4 - 1 - 1/4 in. gauge, for 268522

ACCESSORIES

FOR MACHINE No. 300w101

No.	Plate	Name
62 x 57	----	Needles, six, size 22
228443	18612	Drip Pan
200019E	18612	" " Screw (2)
210805	18612	" " " Washer (2)
52843	18612	" " " " (leather) (4)
268280	18611	Looper and Needle Bar Setting Gauge
268276	18611	" Threading Wire
131961	18612	Machine Base Oil Drain Jar (glass)
131962	18612	" " " " " Cap
131188	18612	" " " " " Clamp
131217	18612	" " " " " "
131189	18612	131188 with 131189
1247C	18612	Machine Base Oil Drain Jar Clamp Lever
131266	18612	" " " " " Screw
		(short)
228452	18612	Machine Base Oil Drain Jar complete, Nos. 131217, 131266, 131961, 131962 and two 1247C
228320	18613	Machine Cushion (felt) (4)
228444	18613	" " (neoprene) (4)
228445	18613	" Cut-out Cover with 36737
36737	18613	" " " Ball
228446	18613	" " " Hinge Plate
200184H	18613	" " " " "
		Screw (2)
200268H	18613	Machine Cut-out Cover Hinge Screw
204030	18613	" " " " Spring
		Washer
228447	18613	Machine Cut-out Cover Latch Plate
200566H	18613	" " " " "
		Screw (2)
228456	18613	Machine Cut-out Cover Latch Spring
228449	18613	" Support (left) with two wood screws 1-1/4 in., No. 12, F.H.B.
228450	18613	Machine Support (right) with two wood screws 1-1/4 in., No. 12, F.H.B.
228491	18611	Pressure Oiler
225498	18611	Screw Driver (7-1/4 in. long)
255542	18611	" " (8 in. blade)
228476	18611	" " (Bobbin Case)
27739	18611	Thread Cone (wood) (2)
228451	18611	Tweezers
202511	18611	Wrench
232900	18611	"
249820	18611	"
255540	18611	" (steel)

FOOT LIFTER TREADLE

No.	Plate	Name
14372	18614	Treadle
228474	18614	" Chain 34 in. long with two 202784
202784	18614	Treadle Chain Hook
14373	18614	" Extension
50581R	18614	" " Screw
2718R	18614	" " " Washer
17881	18614	" Shaft
14374	18614	" Spring
14375	18614	" Stand
14376	18614	Foot Lifter Treadle complete, Nos. 2718R, 14372 to 14375, 17881, 50581R and two wood screws 1-1/4 in., No. 12, F.H.

THREAD UNWINDER

FOR TWO SPOOLS

228647	18627	Base with two 200341C
225257	18627	Spool Rest (for two spools) (flat) with 201018C
150203	18627	Spool Rest Cushion (felt)
228648	18627	" " Rod
200341C	18627	" " " Set Screw
201018C	18627	" " " Set Screw
228649	18627	Thread Tube with two 268125
268125	18627	" " " Bushing
350101C	18627	" " " Set Screw
228658	18627	" " " Support with 201129H and four 350101C
201129H	18627	Thread Tube Support Set Screw
228650	18627	Thread Unwinder complete, for two spools, Nos. 225257, 228647, 228648, 228658, two each 150203, 228649 and three wood screws 1-1/4 in., Nos. 14, F.H.B.

FOR MACHINE No. 300w201

Same as for Machine No. 300w101 with the following Exceptions:

No.	Plate	Name
62x57	-----	Needles, twelve, size 22
27739	18611	Thread Cone (wood) (4)

THREAD UNWINDER

FOR FOUR SPOOLS

228647	18628	Base with two 200341C
225257	18628	Spool Rest (for two spools) (flat) with 201018C
150203	18628	Spool Rest Cushion (felt)
228648	18628	" " Rod
200341C	18628	" " Set Screw
201018C	18628	" " Set Screw
228652	18628	" " Stud
228651	18628	" " Support with 201129H, two 228652 and eight 350101C
201129H	18628	Spool Rest Support Set Screw
228649	18628	Thread Tube with two 268125
268125	18628	" " Bushing
350101C	18628	" " Set Screw
228653	18628	Thread Unwinder complete, for four spools, Nos. 228647, 228648, 228651, two 225257, four each 150203, 228649 and three wood screws 1-1/4 in., No. 14, F.H.B.

FOR MACHINE No. 300w301

Same as for Machine No. 300w101 with the following Exceptions:

No.	Plate	Name
62x57	-----	Needles, eighteen, size 22
27739	18611	Thread Cone (wood) (6)

THREAD UNWINDER

FOR SIX SPOOLS

228647	18629	Base with two 200341C
225257	18629	Spool Rest (for two spools) (flat) with 201018C
150203	18629	Spool Rest Cushion (felt)
228648	18629	" " Rod
200341C	18629	" " Set Screw
201018C	18629	" " Set Screw
228652	18629	" " Stud
228654	18629	" " Support with 201129H, two 228652 and twelve 350101C
201129H	18629	Spool Rest Support Set Screw
228649	18629	Thread Tube with two 268125
268125	18629	" " Bushing
350101C	18629	" " Set Screw
228655	18629	Thread Unwinder complete, for six spools, Nos. 228647, 228648, 228654, three 225257, six each 150203, 228649 and three wood screws 1-1/4 in., No. 14, F.H.B.

FOR MACHINE No. 300w401

Same as for Machine No. 300w101 with the following Exceptions:

No.	Plate	Name
62x57	-----	Needles, twenty four, size 22
27739	16611	Thread Cone (wood) (8)

THREAD UNWINDER

FOR EIGHT SPOOLS

No.	Plate	Name
228647	18630	Base with two 200341C
225257	18630	Spool Rest (for two spools) (flat) with 201018C
150203	18630	Spool Rest Cushion (felt)
228648	18630	" " Rod
200341C	18630	" " Set Screw
201018C	18630	" " Set Screw
228652	18630	" " Stud
228656	18630	" " Support with 201129H, four 228652 and sixteen 350101C
201129H	18630	Spool Rest Support Set Screw
228649	18630	Thread Tube with two 268125
268125	18630	" " Bushing
350101C	18630	" " Set Screw
228657	18630	Thread Unwinder complete, for eight spools, Nos. 228647, 228648, 228656, four 225257, eight each 150203, 228649 and three wood screws 1-1/4 in., No. 14, F.H.B.

FEED DOGS

FOR MACHINE No. 300w101

No.	Plate	Name
268610	18618	Feed Dog, 46 needle hole, for needle sizes 20 and 22 with 201537H and 350120C, for 268614

FOR MACHINE No. 300w201

No.	Plate	Name
267801	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 1/4, 9/32 and 5/16 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267851
267805	18631	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 1/4, 9/32 and 5/16 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267852
267806	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 11/32, 3/8 and 13/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267853
267810	18631	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 11/32, 3/8 and 13/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267854
267811	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 7/16, 15/32 and 1/2 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267855
267816	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 17/32 to 21/32 in., in steps of 1/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267857
267820	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 11/32 to 31/32 in., in steps of 1/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267858
267824	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 1 to 1-1/4 in., in steps of 1/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267859

FEED DOGS

No.	Plate	Name
267828	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 1-9/32 to 1-1/2 in., in steps of 1/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267860
267836	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 1-17/32 to 1-11/16 in., in steps of 1/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267862
267832	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 1-23/32 to 1-29/32 in., in steps of 1/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267861
267840	18609	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 1-15/16 and 2 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267863
267808	18609	Feed Dog, 40 needle hole, for needle sizes 23 and 24, in gauges 11/32, 3/8 and 13/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267853
267809	18609	Feed Dog, 40 needle hole, for needle sizes 23 and 24, in gauges 11/32, 3/8 and 13/32 in. (teeth cut 8 to the inch) with 201537H and 350120C, for 267853
267813	18609	Feed Dog, 40 needle hole, for needle sizes 23 and 24, in gauges 7/16, 15/32 and 1/2 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267855
267822	18609	Feed Dog, 40 needle hole, for needle sizes 23 and 24, in gauges from 11/16 to 31/32 in., in steps of 1/32 in. (teeth cut 15 to the inch) with 201537H and 350120C, for 267858
267823	18609	Feed Dog, 40 needle hole, for needle sizes 23 and 24, in gauges from 11/16 to 31/32 in., in steps of 1/32 in. (teeth cut 8 to the inch) with 201537H and 350120C, for 267858

FOR MACHINE No. 300w301

268801	18622	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in 3/8-3/8 in. gauge with 201537H and 350120C, for 268971
268802	18622	Feed Dog, 40 needle hole, for needle sizes 23 and 24, in 3/8-3/8 in. gauge (teeth cut 8 to the inch) with 201537H and 350120C, for 268971

FEED DOGS

FOR MACHINE No. 300w401

No.	Plate	Name
269540	18624	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in 3/16-7/8-3/16 in. gauge with 201537H and 350120C, for 269541
269542	18624	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in 3/16 - 1 - 3/16 in. gauge with 201537H and 350120C, for 269543
268522	18624	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in 1/4 - 1 - 1/4 in. gauge with 201537H and 350120C, for 269547

LOOPER HOLDERS

FOR MACHINE No. 300w101

268602	18616	Looper Holder with two 350478C
--------	-------	--------------------------------

FOR MACHINE No. 300w201

268103	18610	Looper Holder, in gauges 1/4, 9/32, 5/16 and 11/32 inch with four 350478C
268104	18610	Looper Holder, in gauges from 3/8 to 5/8 in., in steps of 1/32 in. with four 350478C
268105	18610	Looper Holder, in gauges from 21/32 to 7/8 in., in steps of 1/32 in. with four 350478C
268106	18610	Looper Holder, in gauges from 29/32 to 1-1/8 in., in steps of 1/32 in. with four 350478C
268107	18610	Looper Holder, in gauges from 1-5/32 to 1-1/2 in., in steps of 1/32 in. with four 350478C
268282	18610	Looper Holder, in gauges from 1-17/32 to 2 in., in steps of 1/32 in. with four 350478C

FOR MACHINE No. 300w301

268632	18619	Looper Holder, in gauges from 11/32 to 7/16 in. (each side of center needle) with six 350478C
268634	18619	Looper Holder, in gauges from 19/32 to 3/4 in. (each side of center needle) with six 350478C

FOR MACHINE No. 300w401

No.	Plate	Name
268502	18623	Looper Holder for 3/16-7/8-3/16 in. gauge with eight 3504780
269051	18623	Looper Holder for 3/16 - 1 - 3/16 in. gauge with eight 3504780

LOOPER THREAD GUIDES (on Bed at Looper)

FOR MACHINE No. 300w101

268110	18616	Looper Thread Guide (on Bed at Looper)
--------	-------	--

FOR MACHINE No. 300w201

268296	18610	Looper Thread Guide (on Bed at Looper) for gauges from 1/4 to 15/32 inch
268297	18610	Looper Thread Guide (on Bed at Looper) for gauges from 1/2 to 25/32 inch
268298	18610	Looper Thread Guide (on Bed at Looper) for gauges from 13/16 to 1-3/32 inch
268299	18610	Looper Thread Guide (on Bed at Looper) for gauges from 1-1/8 to 1-13/32 inch
268300	18610	Looper Thread Guide (on Bed at Looper) for gauges from 1-7/16 to 1-23/32 inch
268301	18610	Looper Thread Guide (on Bed at Looper) for gauges from 1-3/4 to 2 inches

FOR MACHINE No. 300w301

268852	18619	Looper Thread Guide (on Bed at Looper) for gauges from 1/4 to 3/8 in. (each side of center needle)
268854	18619	Looper Thread Guide (on Bed at Looper) for gauges from 9/16 to 11/16 in. (each side of center needle)

FOR MACHINE No. 300w401

268504	18623	Looper Thread Guide (on Bed at Looper) for 3/16 - 1 - 3/16 in. gauge. May also be used for 3/16-7/8-3/16 in. and 1/4 - 1 - 1/4 in. gauges
--------	-------	---

NEEDLE BAR ROCK FRAME THREAD GUIDES

FOR MACHINE No. 300w101

No.	Plate	Name
268219	18616	Needle Bar Rock Frame Thread Guide

FOR MACHINE No. 300w201

268254	18610	Needle Bar Rock Frame Thread Guide, in gauges from 3/8 to 5/8 in., in steps of 1/32 inch
268255	18610	Needle Bar Rock Frame Thread Guide, in gauges from 21/32 to 7/8 in., in steps of 1/32 inch
268256	18610	Needle Bar Rock Frame Thread Guide, in gauges from 29/32 to 1-1/8 in., in steps of 1/32 inch
268268	18610	Needle Bar Rock Frame Thread Guide, in gauges from 1-5/32 to 1-1/2 in., in steps of 1/32 inch
268304	18610	Needle Bar Rock Frame Thread Guide, in gauges from 1-17/32 to 2 in., in steps of 1/32 inch

FOR MACHINE No. 300w301

268872	18619	Needle Bar Rock Frame Thread Guide, in gauges from 11/32 to 7/16 in. (each side of center needle)
268874	18619	Needle Bar Rock Frame Thread Guide, in gauges from 13/32 to 3/4 in. (each side of center needle)

FOR MACHINE No. 300w401

268508	18623	Needle Bar Rock Frame Thread Guide for 3/16-7/8-3/16 in. gauge
269126	18623	Needle Bar Rock Frame Thread Guide for 3/16 - 1 - 3/16 in. gauge

NEEDLE HOLDERS

FOR MACHINE No. 300w201

No.	Plate	Name
268151	18610	Needle Holder, in gauges 1/4, 9/32, 5/16 and 11/32 inch with two 50014C
268152	18610	Needle Holder, in gauges from 3/8 to 5/8 in., in steps of 1/32 in. with two 50014C
268154	18610	Needle Holder, in gauges from 21/32 to 7/8 in., in steps of 1/32 in. with two 50014C
268156	18610	Needle Holder, in gauges from 29/32 to 1-1/8 in., in steps of 1/32 in. with two 50014C
268157	18610	Needle Holder, in gauges from 1-5/32 to 1-1/2 in., in steps of 1/32 in. with two 50014C
268158	18610	Needle Holder, in gauges from 1-17/32 to 2 in., in steps of 1/32 in. with two 50014C

FOR MACHINE No. 300w301

268892	18619	Needle Holder, in gauges from 11/32 to 7/16 in. (each side of center needle) with three 50014C
268894	18619	Needle Holder, in gauges from 19/32 to 3/4 in. (each side of center needle) with three 50014C

FOR MACHINE No. 300w401

268509	18623	Needle Hplder, 3/16-7/8-3/16 in. gauge with four 50014C
269176	18623	Needle Holder, 3/16 - 1 - 3/16 in. gauge with four 50014C

PRESSER FEET

FOR MACHINE No. 300w101

No.	Plate	Name
206335	18618	Presser Foot Hinge Pin
268611	18618	" " " Plate
268612	18618	" " " Heel Spring
226080	18618	" " " Spring
268275	18618	" " " Shank with 1454F
1454F	18618	" " " Pinch Screw
268613	18618	Presser Foot (spring hinged) complete, 46 needle hole, Nos. 206335, 226080, 268275, 268611 and 268612

FOR MACHINE No. 300w201

267895	18631	Presser Foot Edge Guide, for 267898
206611F	18631	" " " " Hinge Screw, for 267898
267896	18631	Presser Foot Edge Guide Spring, for 267898
202090	18631	Presser Foot Hinge Pin, for 267898
230795	18609	" " " " "
267871	18609	" " " " Plate, for 267872
267873	18609	" " " " " 267874
267875	18609	" " " " " 267876
267877	18609	" " " " " 267878
267881	18609	" " " " " 267882
267883	18609	" " " " " 267884
267891	18631	" " " " " 267892
267893	18631	" " " " " 267894
267897	18631	" " " " " 267898
267899	18631	" " " " " 267900
267901	18631	" " " " " 267902
267900	18631	Presser Foot (spring hinged) complete, 46 needle hole, 1/4 in. gauge for welting seat covers, grooved at left of needle hole, 3/16 in. wide and .115 in. deep, Nos. 206335, 226080, 267899, 268275 and 268612
267902	18631	Presser Foot (spring hinged) complete, 46 needle hole, 1/4 in. gauge, for lap seam felling and welting seat covers, 3/16 in. groove, Nos. 206335, 226080, 267901, 268275 and 268612
267892	18631	Presser Foot (spring hinged) complete, 46 needle hole, in gauges from 1/4 to 13/32 in., in steps of 1/32 in., for lap seam felling, 3/64 in. stitching margin, Nos. 206335, 226080, 267891, 268275 and 268612

PRESSER FEET

No.	Plate	Name
267894	18631	Presser Foot (spring hinged) complete, 46 needle hole, in gauges from 1/4 to 13/32 in., in steps of 1/32 in., for lap seam felling, 3/32 in. stitching margin, Nos. 206335, 226080, 267893, 268275 and 268612
267898	18631	Presser Foot (spring hinged) with Spring Guide complete, 46 needle hole, in gauges from 1/4 to 13/32 in., in steps of 1/32 in., for lap seam felling, 5/64 in. stitching margin, Nos. 200611F, 202090, 226080, 267895 to 267897, 268275 and 268612
267872	18609	Presser Foot (spring hinged) complete, 46 needle hole, in gauges from 1/4 to 3/4 in., in steps of 1/32 in., Nos. 206335, 226080, 267871, 268275 and 268612
267882	18609	Presser Foot (spring hinged) complete, 40 needle hole, in gauges from 1/4 to 3/4 in., in steps of 1/32 in., Nos. 206335, 226080, 267881, 268275 and 268612
267874	18609	Presser Foot (spring hinged) complete, 46 needle hole, in gauges from 25/32 to 1-1/4 in., in steps of 1/32 in., Nos. 226080, 230795, 267873, 268275 and 268612
267884	18609	Presser Foot (spring hinged) complete, 40 needle hole, in gauges from 25/32 to 1-1/4 in., in steps of 1/32 in., Nos. 226080, 230795, 267883, 268275 and 268612
267876	18609	Presser Foot (spring hinged) complete, 46 needle hole, in gauges from 1-9/32 to 1-3/4 in., in steps of 1/32 in., Nos. 226080, 230795, 267875, 268275 and 268612
267878	18609	Presser Foot (spring hinged) complete, 46 needle hole, in gauges from 1-25/32 to 2 in., in steps of 1/32 in., Nos. 226080, 230795, 267877, 268275 and 268612

FOR MACHINE No. 300w301

230795	18622	Presser Foot Hinge Pin
268911	18622	" " Plate
268915	18622	" " "
268912	18622	Presser Foot (spring hinged) complete, 46 needle hole, in 3/8-3/8 in. gauge, Nos. 226080, 230795, 268275, 268612 and 268911
268916	18622	Presser Foot (spring hinged) complete, 40 needle hole, in 3/8-3/8 in. gauge, Nos. 226080, 230795, 268275, 268612 and 268915

PRESSER FEET

FOR MACHINE No. 300w401

No.	Plate	Name
269511	18624	Presser Foot Bracket with 3500890
269512	18624	" " Connection Lever
350068D	18624	" " " Hinge
269514	18624	Screw, for 269517
269544	18624	Presser Foot Plate (left), for 269517
269548	18624	" " " " " 269546
269513	18624	" " " " " 269550
269545	18624	" " " (right), for 269517
269549	18624	" " " " " 26954
206335	18624	" " " " " 269550
226080	18624	" " " Hinge Pin, for 269517, 269546 and 269550
269515	18624	Presser Foot Plate Spring
3500890	18624	" " Shank
269516	18624	" " " Pinch Screw
200581H	18624	" " " Guide Plate
350122H	18624	" " " " Screw, for 269517
269517	18624	Presser Foot Shank Guide Plate Screw, for 269517
269546	18624	Presser Foot (hinged, compensating) complete, 46 needle hole, 3/16-7/8-3/16 in. gauge, Nos. 269511 to 269514, 269516, 350068D, 350122H, two each 200581H, 206335, 226080 and 269515
269550	18624	Presser Foot (hinged, compensating) complete, 46 needle hole, 3/16 - 1 - 3/16 in. gauge, for felling, Nos. 269511, 269512, 269516, 269548, 269549, 350068D, 350068D, 350122H, two each 200581H, 206335, 226080 and 269515
		Presser Foot (hinged, compensating) complete, 46 needle hole, 1/4 - 1 - 1/4 in. gauge, Nos. 269511, 269512, 269516, 269548, 269549, 350068D, 350122H, two each 200581H, 206335, 226080 and 269515

SPREADERS

FOR MACHINE No. 300w101

268606	18616	Spreader with 268183
--------	-------	----------------------

FOR MACHINE No. 300w201

268177	18610	Spreader, in gauges 1/4, 9/32, 5/16 and 11/32 inch with two 268183
--------	-------	--

NUMERICAL LIST OF PARTS

No.	Plate	Name
229J	18621	Looper Thread Guide (top of Arm) Screw, for 268218 and 268506
418D	18621	Looper Thread Tension Stud, for 59
1247C	18612	Machine Base Oil Drain Jar Clamp Screw, for 228452
1454F	18618	Presser Foot Shank Pinch Screw, for 268275
1562J	18621	Looper Thread Tension Thumb Nut, for 5989
2102	18621	Needle Thread Tension Disc, for 268263
2455	18621	Looper Thread Tension Disc, for 59
2718R	18614	Foot Lifter Treadle Extension Screw Washer, for 14376
5989	18621	Looper Thread Tension complete, Nos. 418D, 1562J, 10141 and two 2455
8582	18607	Arm Position Pin
10141	18621	Looper Thread Tension Spring, for 59 Nos. 14372 to 14375, for 14376
14372	18614	Foot Lifter Treadle
14373	18614	" " " Extension
14374	18614	" " " Spring
14375	18614	" " " Stand
14376	18614	Foot Lifter Treadle complete, Nos. 2718R, 14372 to 14375, 17681, 50581R and two wood screws 1-1/4 in., No. 2, F.H.
17681	18614	Foot Lifter Treadle Shaft, for 14376
37739	18611	Thread Cone (wood)
12572	18621	Needle Thread Tension Releasing Disc, for 268263
26737	18613	Machine Cut-out Cover Ball, for 226145
500140	18610	Needle Set Screw, for 268151, 268152, 268154, 268156 to 268158, 268509, 268892, 268894 and 269176
50326C	18621	Needle Thread Tension Stud, for 59533
50581R	18614	Foot Lifter Treadle Extension Screw for 14376
51570C	18621	Needle Thread Tension Thumb Nut, for 59539
52843	18612	Drip Pan Screw Washer (leather)
54279	18621	Needle Thread Tension Thread Guide (double) Nos. 59537 to 59539, for 268263
59537	18621	Needle Thread Tension Spring Bush (front)
59538	18621	Needle Thread Tension Spring Bush (back)
59539	18621	Needle Thread Tension Stud 50326C with 51570C

NUMERICAL LIST OF PARTS

No.	Plate	Name
57425	18604	Looper Carrier Crank Clamping Stud Washer
131188	18612	Machine Base Oil Drain Jar Clamp, for 131217
131189	18612	Machine Base Oil Drain Jar Clamp Lever, for 131217
131217	18612	Machine Base Oil Drain Jar Clamp 131188 with 131189, for 228452
131266	18612	Machine Base Oil Drain Jar Nipple (short), for 228452
131741	18621	Needle Thread Tension Spring, for 268263
131961	18612	Machine Base Oil Drain Jar (glass), for 228452
131962	18612	Machine Base Oil Drain Jar Cap, for 228452
139158	18621	Looper Thread Guide (top of Arm), for 268218
150203	18627	Thread Unwinder Spool Rest Cushion (felt), for 228650, 228653, 228655 and 228657
200004E	18607	Arm Screw
200019E	18612	Drip Pan Screw
200029E	18607	Arm Head Screw, for 268001
200035D	18621	Looper Thread Guide Screw
200035E	18605	Spreader Bar Bearing Screw, for 268014
200040C	18603	Feed Dog Screw
200047D	18601	Arm Shaft Ball Bearing (back) Housing Screw, for 268001
200047E	18621	Needle Thread Tension Bracket Screw
200053H	18607	Bed Plate Screw
200054C	18621	Looper Thread Tube Clamp Screw
200058C	18617	Needle Bar Rock Frame Driving Arm Pinch Screw, for 268161
200061C	18603	Feed Driving Rock Shaft Crank Pinch Screw, for 268073
200061C	18603	Feed Lifting Rock Shaft Crank Pinch Screw, for 268198
200064D	18621	Needle Thread Nipper Bearing Plate Screw
200069C	18617	Needle Bar Connecting Stud Pinch Screw, for 268141
200078H	18607	Arm Side Cover Screw
200078F	18602	Feed Regulating Stud Socket Screw
200082D	18621	Needle Thread Guide Screw
200085C	18604	Looper Carrier Shaft Bushing (left) Position Plate Screw
200089C	18604	Looper Carrier Crank Hinge Pin Pinch Screw, for 268091
200095H	18617	Needle Bar Connecting Link Cap Washer Screw
200098F	18602	Looper Thread Take-up Driving Connection Hinge Stud Set Screw, for 268115
200098F	18603	Looper Throw-out Safety Latch Spring Bracket Screw
200100E	18618	Throat Plate Screw

NUMERICAL LIST OF PARTS

No.	Plate	Name
200123D	18603	Feed Driving Connection Cap Screw
200123D	18617	Needle Bar Rock Frame Driving Connection Cap Screw
200125F	18617	Needle Set Screw, for 268603
200138D	18607	Bed Plate Slide Spring Screw, for 268019 and 268020
200173D	18617	Needle Bar Oiling Felt Holder Screw
200184H	18613	Machine Cut-out Cover Hinge Plate Screw
200268H	18613	Machine Cut-out Cover Hinge Screw
200303H	18604	Looper Driving Crank Oil Hole Cover Screw
200337C	18601	Needle Bar Rock Frame Regulating Stud Sleeve Set Screw
200341C	18627	Thread Unwinder Spool Rest Rod Set Screw, for 228647
200346C	18601	Needle Bar Crank Set Screw, for 268142
200353C	18604	Looper Driving Crank Position Screw, for 268277
200354C	18601	Arm Shaft Counter Balance Position Screw, for 268007
200354C	18602	Bed Shaft Counter Balance Position Screw, for 268007
200354C	18603	Feed Driving Rock Frame Position Screw, for 268069
200354C	18604	Looper Carrier Shaft Bushing Position Screw, for 268095 and 268097
200354C	18601	Needle Bar Crank Position Screw, for 268142
200362C	18601	Arm Shaft Counter Balance Set Screw, for 268007
200362C	18602	Bed Shaft Counter Balance Set Screw, for 268007
200362C	18603	Feed Driving Rock Frame Set Screw, for 268069
200362C	18604	Looper Carrier Shaft Bushing Set Screw, for 268095 and 268097
200362C	18604	Looper Driving Crank Set Screw, for 268277
200362C	18602	Looper Thread Take-up Lever Hinge Stud Set Screw
200362C	18604	Looper Throw-out Gear Set Screw, for 268126
200364C	18604	Looper Throw-out Gear Locking Plunger Stop Screw Set Screw
200364C	18601	Needle Bar Rock Frame Regulating Stud Cap Set Screw, for 264709
200364C	18602	Spreader Driving Eccentric Counter Balance Set Screw, for 268189
200364C	18602	Spreader Driving Eccentric Set Screw, for 268188
200373C	18603	Feed Lifting Link Hinge Pin Set Screw, for 268034 and 268075
200373C	18605	Spreader Driving Crank Position Screw, for 268187
200376C	18602	Looper Thread Take-up Driving Eccentric Set Screw, for 268113

NUMERICAL LIST OF PARTS

No.	Plate	Name
269546	18624	Presser Foot (hinged, compensating) complete, 46 needle hole, 3/16 - 1 - 3/16 in. gauge, for felling, Nos. 269511, 269512, 269516, 269544, 269545, 350068D, 350122H, two each 200581H, 206335, 226080 and 269515
269547	18624	Throat Plate, 1/4 - 1 - 1/4 in. gauge, for 268522
269548	18624	Presser Foot Plate (left), for 269550
269549	18624	" " (right), for 269550
269550	18624	Presser Foot (hinged, compensating) complete, 46 needle hole, 1/4 - 1 - 1/4 in. gauge, Nos. 269511, 269512, 269516, 269548, 269549, 350068D, 350122H, two each 200581H, 206335, 226080 and 269515
270026	18602	Feed Regulating Stud Spring
3500130	18607	Foot Lifter Bell Crank Hinge Screw
350068D	18624	Presser Foot Connection Lever Hinge Screw, for 269517, 269546 and 269550
350089C	18624	Presser Foot Shank Pinch Screw, for 269511
350101C	18602	Feed Driving Eccentric Friction Adjusting Screw Set Screw, for 268068
350101C	18601	Needle Bar Rock Frame Driving Eccentric Friction Adjusting Screw Set Screw, for 268068
350101H	18621	Needle Thread Nipper Adjusting Collar Screw, for 201733XC
350101C	18627	Thread Unwinder Thread Tube Set Screw, for 228651, 228654, 228656 and 228658
350107C	18601	Balance Wheel Position Screw, for 268011
350120C	18618	Feed Dog Adjusting Screw, for 268036, to 268042, 268522, 268610, 268601, 269540 and 269542
350122H	18624	Presser Foot Shank Guide Plate Screw, for 269517, 269546 and 269550
350132C	18621	Looper Thread Take-up Thread Guide Screw
350149C	18605	Spreader Screw
350171C	18601	Arm Shaft Oil Slinger Set Screw, for 268008
350267E	18616	Looper Holder Screw
350381C	18607	Presser Bar Spring Adjusting Screw
350465C	18601	Arm Shaft Oil Stop Screw, for 268003
350466C	18605	Spreader Driving Rock Shaft Screw Stud
350467C	18602	Feed Driving Flange Set Screw, for 268068
350467C	18601	Needle Bar Rock Frame Driving Flange Set Screw, for 268068
350468E	18616	Looper Thread Guide (on Bed at Looper) Screw
350477C	18602	Feed Driving Eccentric Friction Adjusting Screw, for 268068

NUMERICAL LIST OF PARTS

No.	Plate	Name
350477C	18601	Needle Bar Rock Frame Driving Eccentric Friction Adjusting Screw, for 268068
350478C	18616	Looper Adjusting Screw, for 268103 to 268107, 268282, 268502, 268602, 268832, 268834 and 269051
350478C	18616	Looper Set Screw, for 268103 to 268107, 268282, 268502, 268602, 268832, 268834 and 269051
350483C	18621	Needle Thread Nipper Spring Plunger Screw Bearing
350496C	18621	Needle Thread Nipper Plunger Hinge Pin Set Screw, for 268229
351875	18617	Presser Bar Guide Bracket Roller, for 268174
351876	18605	Spreader Driving Rock Shaft Screw Stud Ball Roller, for 268233