


SINGER

300W

302W206


302W406

PARTS FOR 300W 101 107 104 105 194 195 300W201
203 204 205 40 405 302W101 206 406

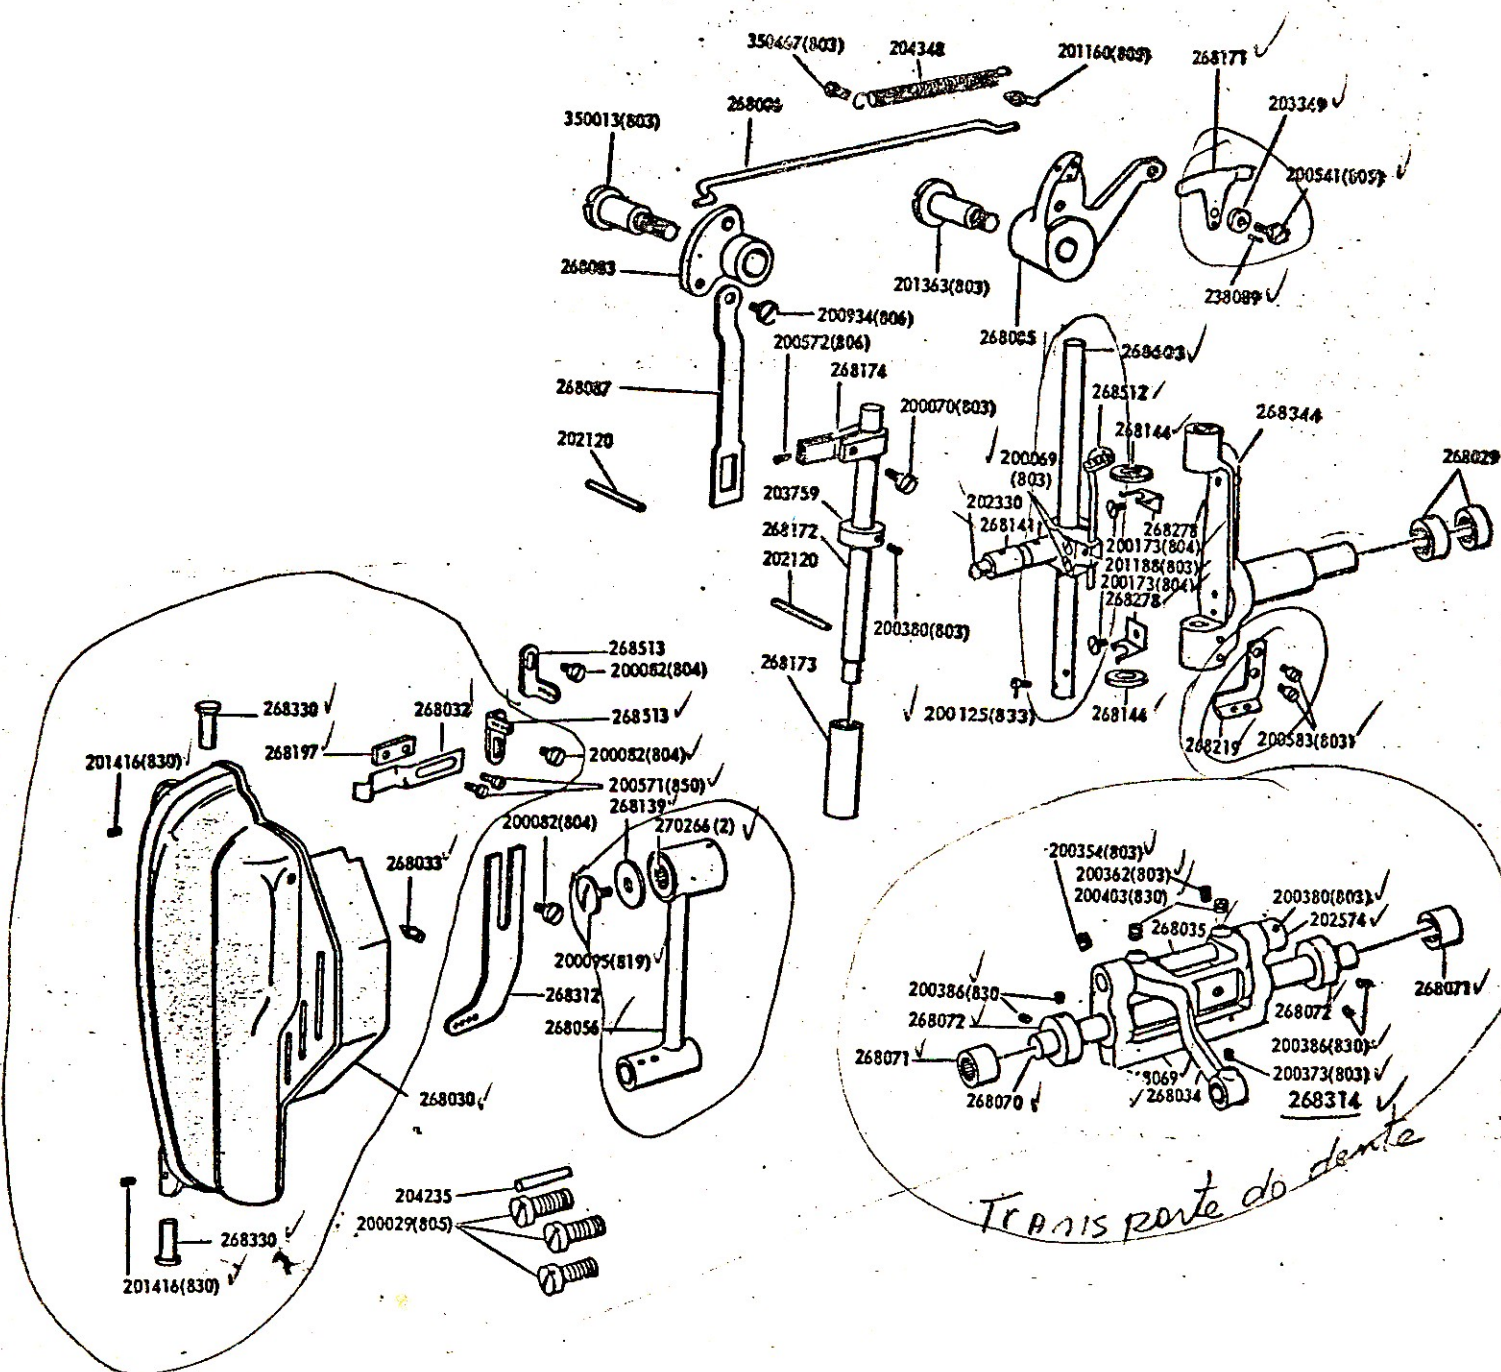

PARTS FOR 300W10T, 103, 104, 105, 194, 195, 300W20T, 203,
204, 205, 401, 405, 302W10T, 204, 406



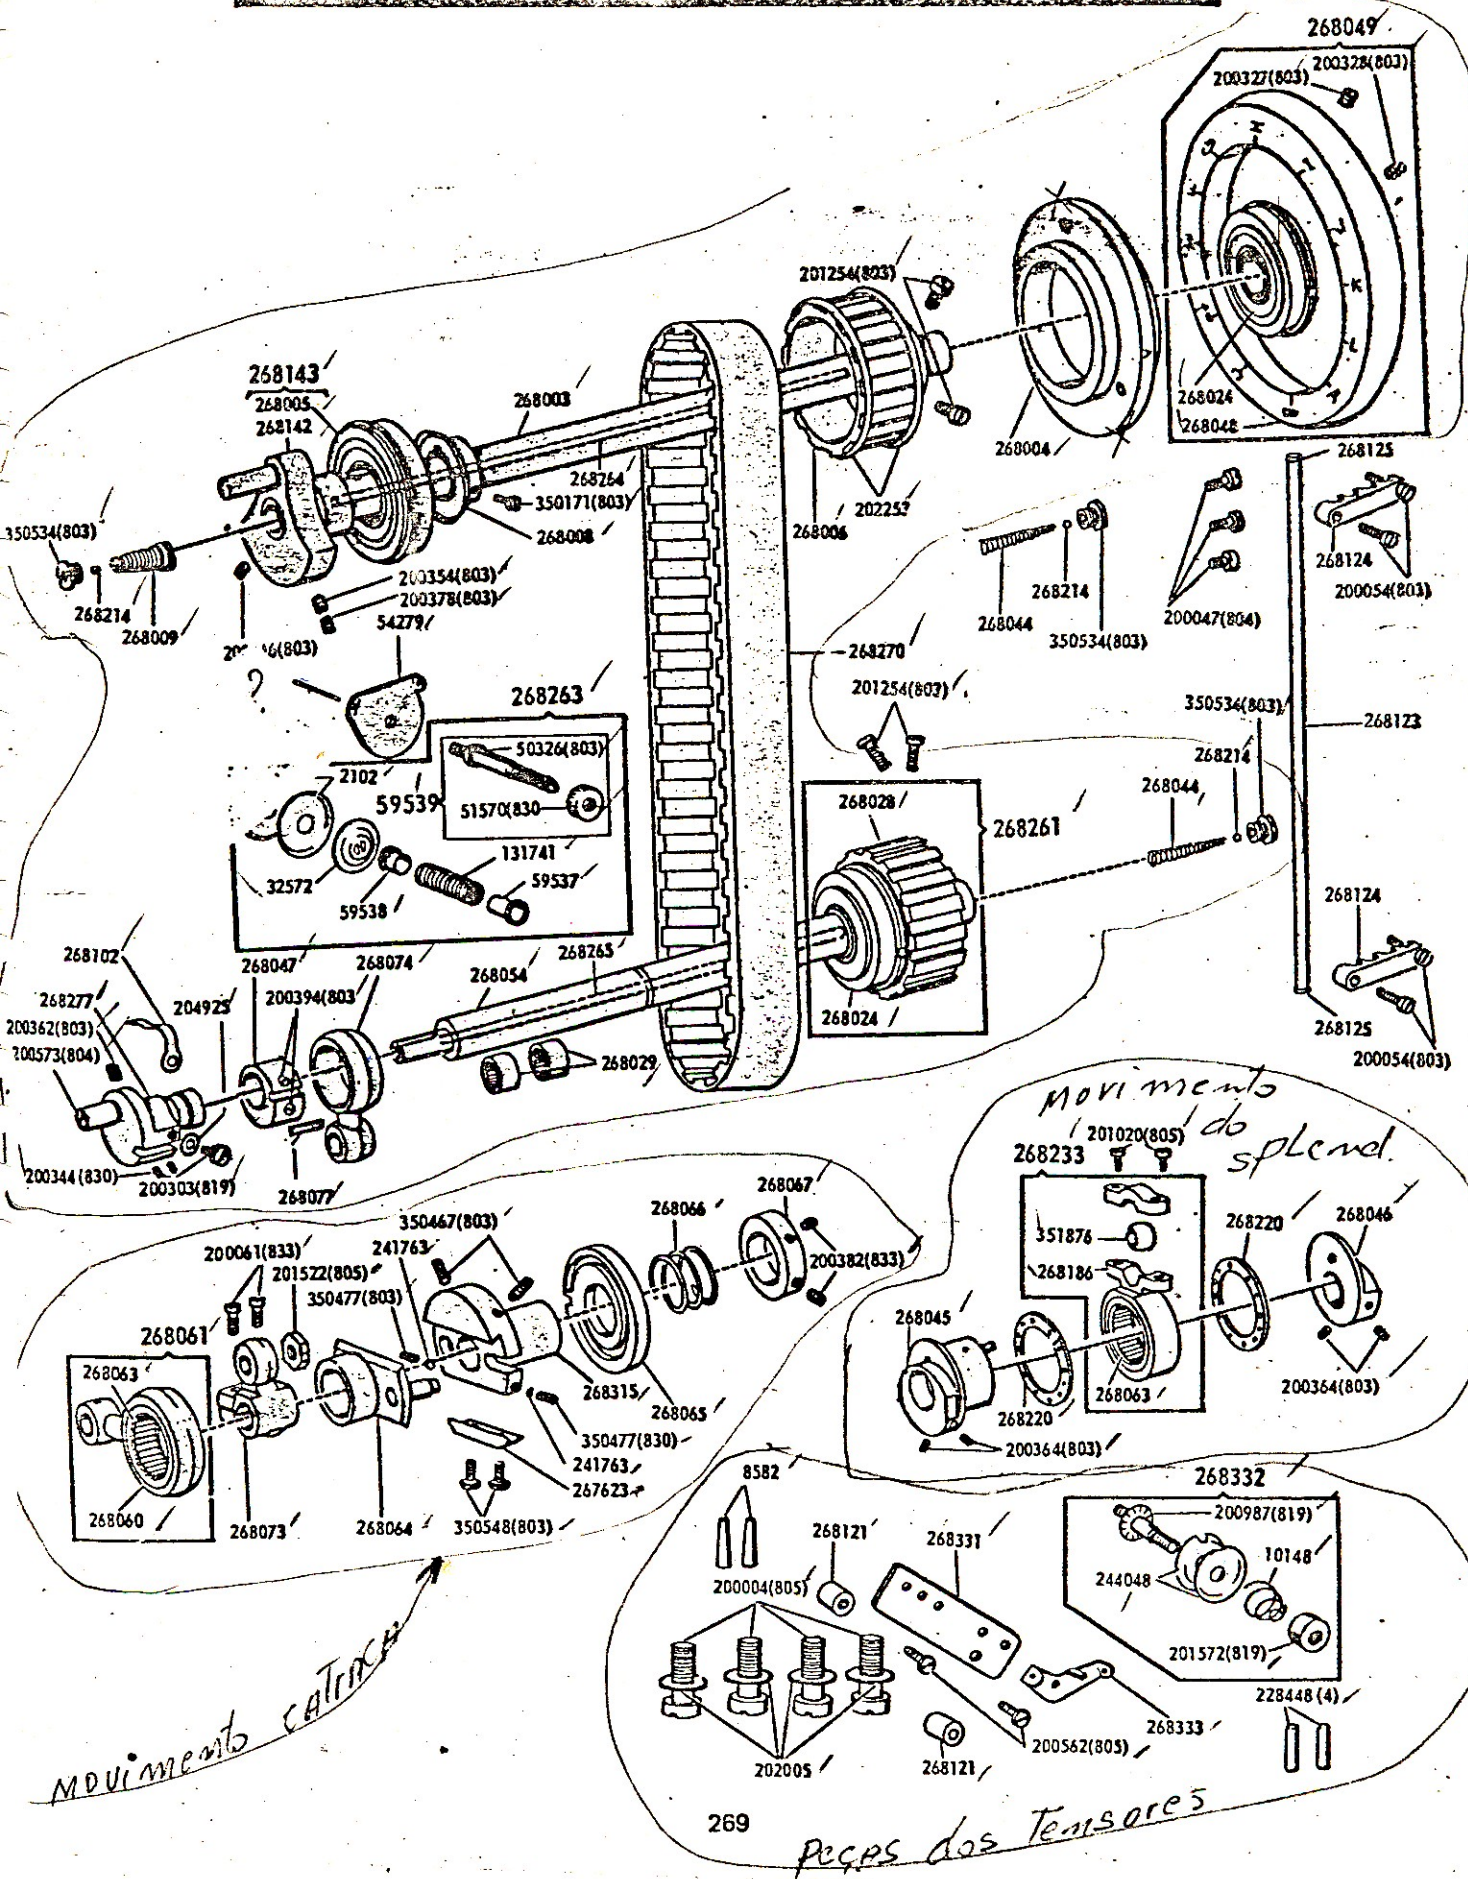

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
269682	Bed Plate (left) and Guard complete, 269680, 269681 and two 200181(804) (302W101)	269689	Throat Plate, for 269686 (302W101)	350381(803)	Presser Bar Spring Adjusting Screw	350478(833)	Looper Adjusting Screw
		270266	Needle Bar Connecting Link Needle Bearing(2)	350466(803)	Spreader Driving Rock Shaft Screw Stud with 263572	350478(833)	Looper Set Screw
269683	Bed Side Cover (back) (302W101)	350013(803)	Foot Lifter Bell Crank Hinge Screw	350467(830)	Needle Bar Rock Frame Driving Flange Set Screw(2)	350534(803)	Arm Shaft Oil Stop Ball Screw(2)
269687	Presser Foot Plate (302W101)	350149(803)	Spreader Screw	350467(830)	Presser Bar Spring Adjusting Screw Set Screw	350534(803)	Bed Shaft Oil Stop Ball Screw
		350171(803)	Arm Shaft Oil Slinger Set Screw			350548(803)	Needle Bar Rock Frame Driving Eccentric Friction Plate Screw(2)
269688	Presser Foot (spring hinged) complete, 40 needle hole, 206335, 226080, 268275, 268612 and 269687 (302W101)	350267(805)	Looper Holder Screw	350477(830)	Needle Bar Rock Frame Driving Eccentric Friction Plate Screw Set Screw(2)	351876	Spreader Driving Rock Shaft Screw Stud Ball Roller
		350318(805)	Looper Thread Guide (on Bed at Looper) Screw				

FITTINGS

STANDARD - GAUGES	LOOPER HOLDER	NEEDLE BAR ROCK FRAME THREAD GUIDE	NEEDLE HOLDER	PRESSER FOOT (COMPLETE)	SPREADER	THROAT PLATE
302W206						
3/4"	268105	268255	268154	269574	268376	269597
7/8"	268105	268255	268154	269574	268376	269651
1"	268106	268256	268156	269574	268377	269598
1-1/4"	268107	268268	268157	269577	268378	269597
1-3/8"					268378	269651
1-1/2"	268107	268268	268157	269577	268378	269598
1-3/4"	268282	268304	268158	269577	268379	269597
2"	268282				268379	
302W406						
1/4, 1/4, 1/4"	269065	269138	269191	269237	269342	269597
5/16, 5/16, 5/16"	269065	269138	269192	269237	269342	269652
3/8, 3/8, 3/8"	269065	269138	269192	269237	269342	269652
1/2, 1/2, 1/2"	269065	269138	269193	269240	269342	269598
1/4, 1, 1/4"	269065	269138	269193	269240	269342	269598

When Ordering Fittings, State Gauge Required.

302W101 DROP FEED PARTS

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
200040(830)	Feed Dog Shank Screw	200382(833)	Feed Driving Eccentric Adjusting Disc Spring Collar Set Screw(2)	201525(805)	Feed Dog Shank Screw Lock Nut	268047	Feed Lifting Eccentric with 268077 and two 200394(803)
200061(833)	Feed Driving Rock Shaft Crank Pinch Screw(2)	200386(830)	Feed Driving Rock Shaft Collar Set Screw(4)	201537(819)	Feed Dog Shank Adjusting Screw Lock Nut	268060	Feed Driving Connection
200061(833)	Feed Lifting Rock Shaft Crank Pinch Screw(2)	200386(803)	Feed Lifting Rock Shaft Collar Set Screw(4)	202574	Feed Dog Shank Collar with 200380(830)	268061	Feed Driving Connection 268060 with 268063
200078(806)	Feed Regulating Stud Socket Screw(2)	200394(803)	Feed Lifting Eccentric Set Screw(2)	208636	Feed Dog Shank Screw Washer	268062	Feed Driving Connection Hinge Stud with 268258
200100(803)	Feed Dog Screw(2)	200403(830)	Feed Bar Set Screw(2)	240245	Feed Regulating Stud Retaining Spring	268062	Feed Lifting Connection Hinge Stud with 268258
200123(804)	Feed Driving Connection Cap Screw	201256(830)	Feed Lifting Crank Pinch Screw	241763	Feed Driving Eccentric Friction Plate Screw Set Screw Packing (brass)(2)	268062	Feed Driving Connection Needle Bearing
200354(803)	Feed Driving Rock Frame Position Screw	201418(803)	Feed Lifting Rock Shaft Crank Position Screw	267623	Feed Driving Eccentric Friction Plate	268063	Feed Driving Eccentric Adjusting Disc
200362(803)	Feed Driving Rock Frame Set Screw	201522(805)	Feed Driving Connection Hinge Stud Nut	268034	Feed Bar with 200373(803) and two 200403(830)	268065	
200373(803)	Feed Lifting Link Hinge Pin Set Screw (2)	201522(805)	Feed Lifting Connection Hinge Stud Nut	268035	Feed Bar Hinge Pin		
200380(830)	Feed Bar Hinge Pin Collar Set Screw						

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
268066	Feed Driving Eccentric Adjusting Disc Spring	268073	Feed Driving Rock Shaft Crank with two 200061(833)	268198	Feed Lifting Rock Shaft Crank with 201418(803) and two 200061(833)	269684	Feed Driving Rock Shaft
268067	Feed Driving Eccentric Adjusting Disc Spring Collar with two 200382(833)	268074	Feed Lifting Connection	268258	Feed Driving Connection Hinge Stud Oil Packing (wick)	269685	Feed Lifting Rock Shaft
268069	Feed Driving Rock Frame with 200354(803) and 200362(803)	268075	Feed Lifting Crank with 200373(803) and 201256(830)	268258	Feed Lifting Connection Hinge Stud Oil Packing (wick)	269686	Feed Dog, 40 needle hole, with 267669 and two 200907(819) for 269689
268071	Feed Driving Rock Shaft Needle Bearing(2)	268077	Feed Lifting Eccentric Lubricating Pad (wood)	268258	Feed Lifting Link Hinge Pin Oil Packing (wick)(2)	270026	Feed Regulating Stud Spring
268071	Feed Lifting Rock Shaft Needle Bearing(2)	268078	Feed Lifting Link	268315	Feed Driving Flange with 267623, two each 241763, 350467(830), 350477(830) and 350548(803)	350467(830)	Feed Driving Flange Set Screw(2)
268072	Feed Driving Rock Shaft Collar with two 200386(830)(2)	268079	Feed Lifting Link Hinge Pin with 268258(2)	268315	Feed Driving Flange with 267623, two each 241763, 350467(830), 350477(830) and 350548(803)	350477(830)	Feed Driving Eccentric Friction Plate Screw Set Screw(2)
268072	Feed Lifting Rock Shaft Collar with two 200386(803)(2)	268081	Feed Regulating Stud	268316	Feed Dog Shank with 201537(819) and 350552(830)	350548(803)	Feed Driving Eccentric Friction Plate Screw(2)
		268082	Feed Regulating Stud Socket			350552(830)	Feed Dog Shank Adjusting Screw

302W206/406, PULLER FEED PARTS

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
913(806)	Puller Feed Roll (upper) Bar Spring Adjusting Screw(2)	200572(803)	Puller Feed Roll (upper) Bar Position Bracket Adjusting Screw(2)	269622	Puller Feed Cross Shaft Bracket	269640	Puller Feed Roll (upper)(2)
200017(803)	Puller Feed Cross Shaft Bracket Screw(2)	201052(833)	Puller Feed Driving Shaft Thrust Collar Set Screw	269623	Puller Feed Cross Shaft Bracket 269622 with two 268425	269641	Puller Feed Roll (upper) Bar Bracket
200017(803)	Puller Feed Driving Shaft Bracket Screw(3)	201188(803)	Puller Feed Roll (lower) Shaft Sprocket Set Screw	269624	Puller Feed Cross Shaft Worm with 200382(833) and 201220(833)	269642	Puller Feed Roll (upper) Bar Lifter Arm (left)
200035(803)	Puller Feed Roll (lower) Chain Idler Sprocket Bracket Screw(2)	201220(833)	Puller Feed Cross Shaft Worm Position Screw	269625	Puller Feed Cross Shaft Worm Gear with two 200362(803)	269643	Puller Feed Roll (upper) Bar Lifter Arm (right)
200041(805)	Puller Feed Driving Shaft Cover Screw (lower)	201220(833)	Puller Feed Driving Shaft Worm Gear Position Screw	269626	Puller Feed Driving Shaft	269644	Puller Feed Roll (upper) Bar Lifter Arm Block
200084(850)	Puller Feed Roll (upper) Bar Lifter Arm Screw(2)	201220(833)	Puller Feed Roll (upper) Bracket Position Screw(2)	269628	Puller Feed Driving Shaft Cover	269645	Puller Feed Roll (upper) Bar Position Bracket with 200572(803) and 350328(803)(2)
200354(803)	Puller Feed Roll (lower) Position Screw	201308(805)	Puller Feed Roll (upper) Bar Bracket Screw (upper)	269629	Puller Feed Driving Shaft Sprocket with 200447(830)	269646	Puller Feed Roll (upper) Bar Spring(2)
200362(803)	Puller Feed Cross Shaft Worm Gear Set Screw(2)	232866	Puller Feed Cross Shaft Bracket Position Pin(2)	269630	Puller Feed Driving Shaft Thrust Collar with 201052(833)	269647	Puller Feed Roll (upper) Bracket with 200382(833) and 201220(833)(2)
200362(803)	Puller Feed Driving Shaft Worm Gear Set Screw	232866	Puller Feed Driving Shaft Bracket Position Pin(4)	269631	Puller Feed Driving Shaft Worm with two 200382(833) (for 9 stitches per inch)	269648	Puller Feed Roll (upper) Shaft(2)
200362(803)	Puller Feed Roll (lower) Set Screw	267110	Puller Feed Roll (upper) Needle Bearing(4)	269632	Puller Feed Driving Shaft Worm Gear with 200362(803) and 201220(833) (for 9 stitches per inch)	269649	Puller Feed Driving Shaft Bracket (right)
200378(803)	Puller Feed Driving Shaft Collar Set Screw(2)	268424	Puller Feed Driving Shaft Collar with two 200378(803)	269633	Puller Feed Roll (lower) with 200354(803) and 200362(803)	269650	Puller Feed Driving Shaft Bracket 269649 with 268425 (Needle Bearing on left)
200382(833)	Puller Feed Cross Shaft Worm Set Screw	268425	Puller Feed Cross Shaft Needle Bearing(2)	269634	Puller Feed Roll (lower) Chain	269670	Puller Feed Roll (upper) 269640 with two 267110(2)
200382(833)	Puller Feed Roll (upper) Bracket Set Screw(2)	268425	Puller Feed Driving Shaft Needle Bearing(2)	269635	Puller Feed Roll (lower) Chain Idler Sprocket	269671	Puller Feed Roll (upper) Shaft Retaining Ring(2)
200394(803)	Puller Feed Roll (lower) Shaft Collar Set Screw(4)	268428	Puller Feed Roll (upper) Bar(2)	269636	Puller Feed Roll (lower) Chain Idler Sprocket Bracket with 350558(819)	269672	Puller Feed Roll (lower) Shaft Needle Bearing(2)
200447(830)	Puller Feed Driving Shaft Sprocket Set Screw	268448	Puller Feed Driving Shaft Bracket	269637	Puller Feed Roll (lower) Chain Idler Sprocket Pin	350149(803)	Puller Feed Roll (upper) Bar Lifter Arm Block Screw(2)
200563(805)	Puller Feed Roll (upper) Bar Bracket Screw (lower)	268449	Puller Feed Driving Shaft Bracket 268448 with 268425	269638	Puller Feed Roll (lower) Shaft	350328(803)	Puller Feed Roll (upper) Bar Position Bracket Pinch Screw(2)
200571(804)	Puller Feed Driving Shaft Cover Screw (upper)(2)	269618	Puller Feed Roll (lower) Shaft Collar with two 200394(803)(2)	269639	Puller Feed Roll (lower) Shaft Sprocket with 201188(803)	350558(819)	Puller Feed Roll (lower) Chain Idler Sprocket Pin Set Screw
		269621	Puller Feed Cross Shaft			350629(805)	Puller Feed Driving Shaft Bracket Screw (lower)