 
 


Form K2501
(Sup'des K1802)
Jan., 1924

 
ILLUSTRATED
LIST OF PARTS
FOR
Nos. 45K48, 45K57, 45K74 to
45K76 and 45K87 Machines

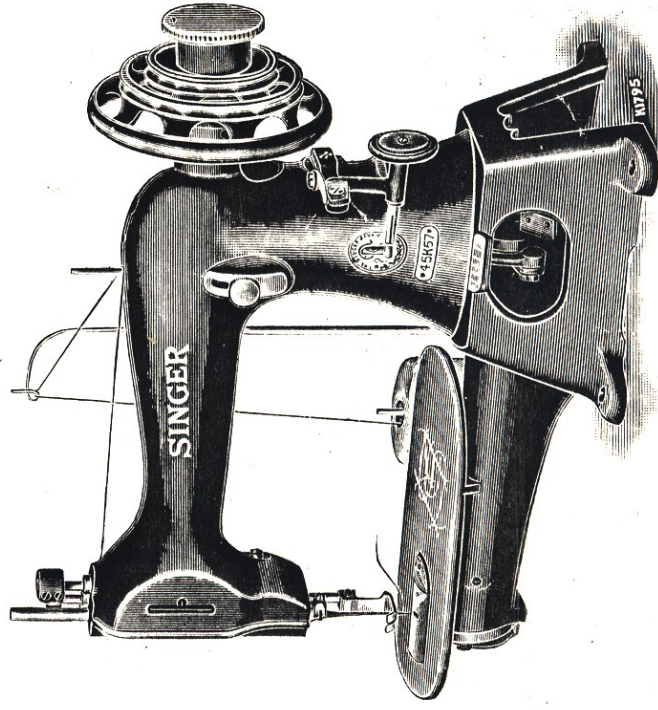



THE SINGER MANUFACTURING COMPANY

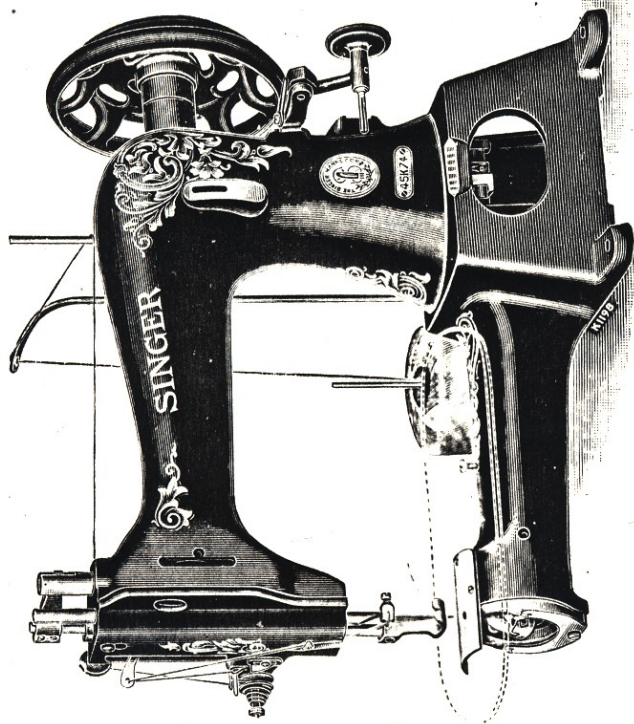

No. 45K74 MACHINE.

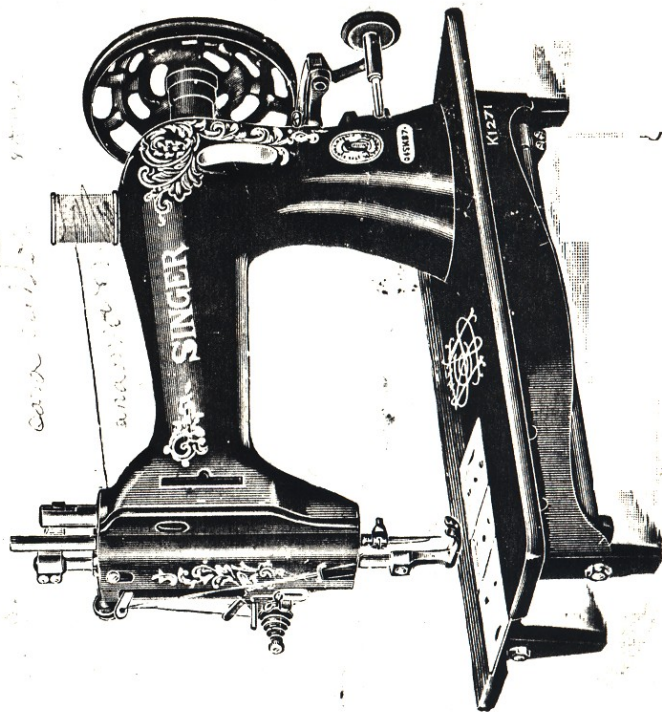


No. 45K87 MACHINE.

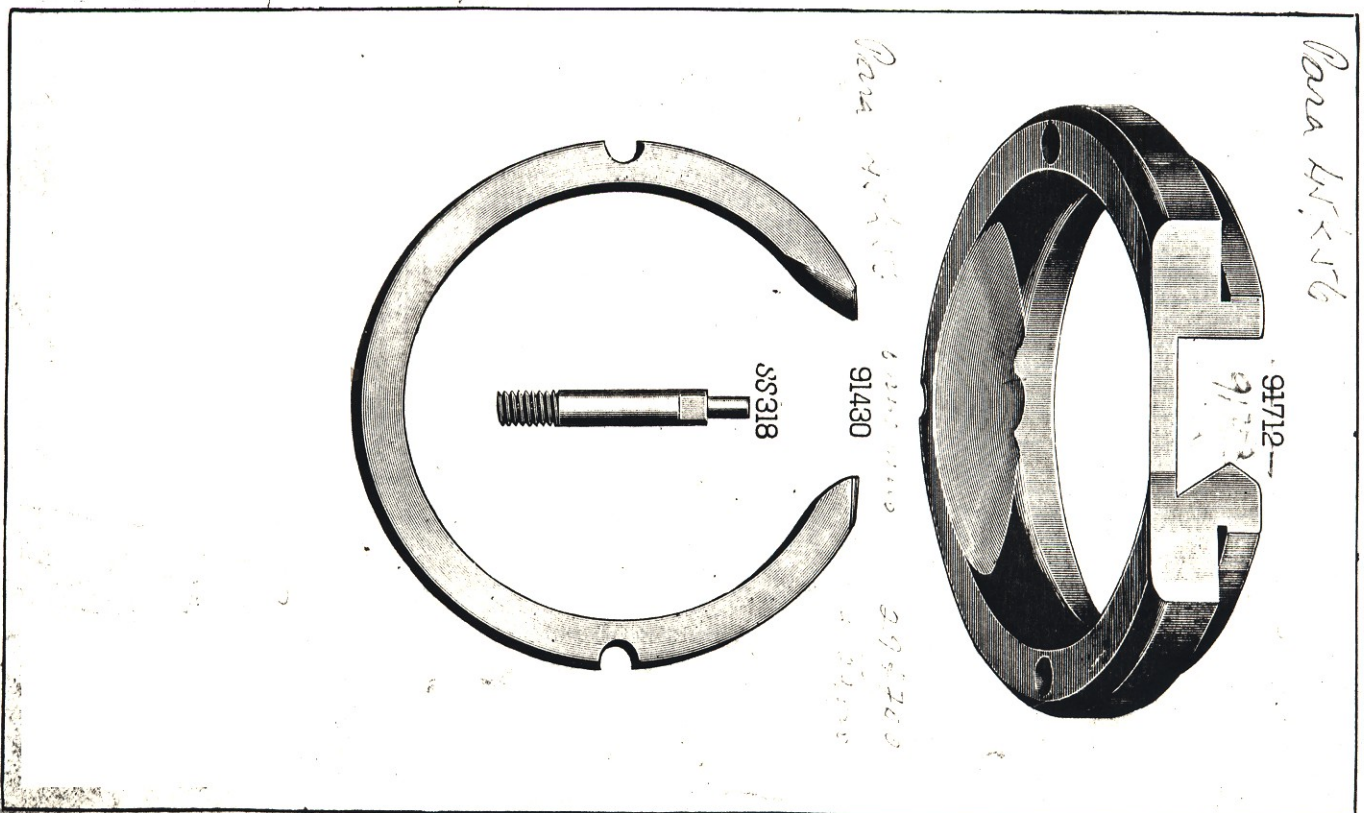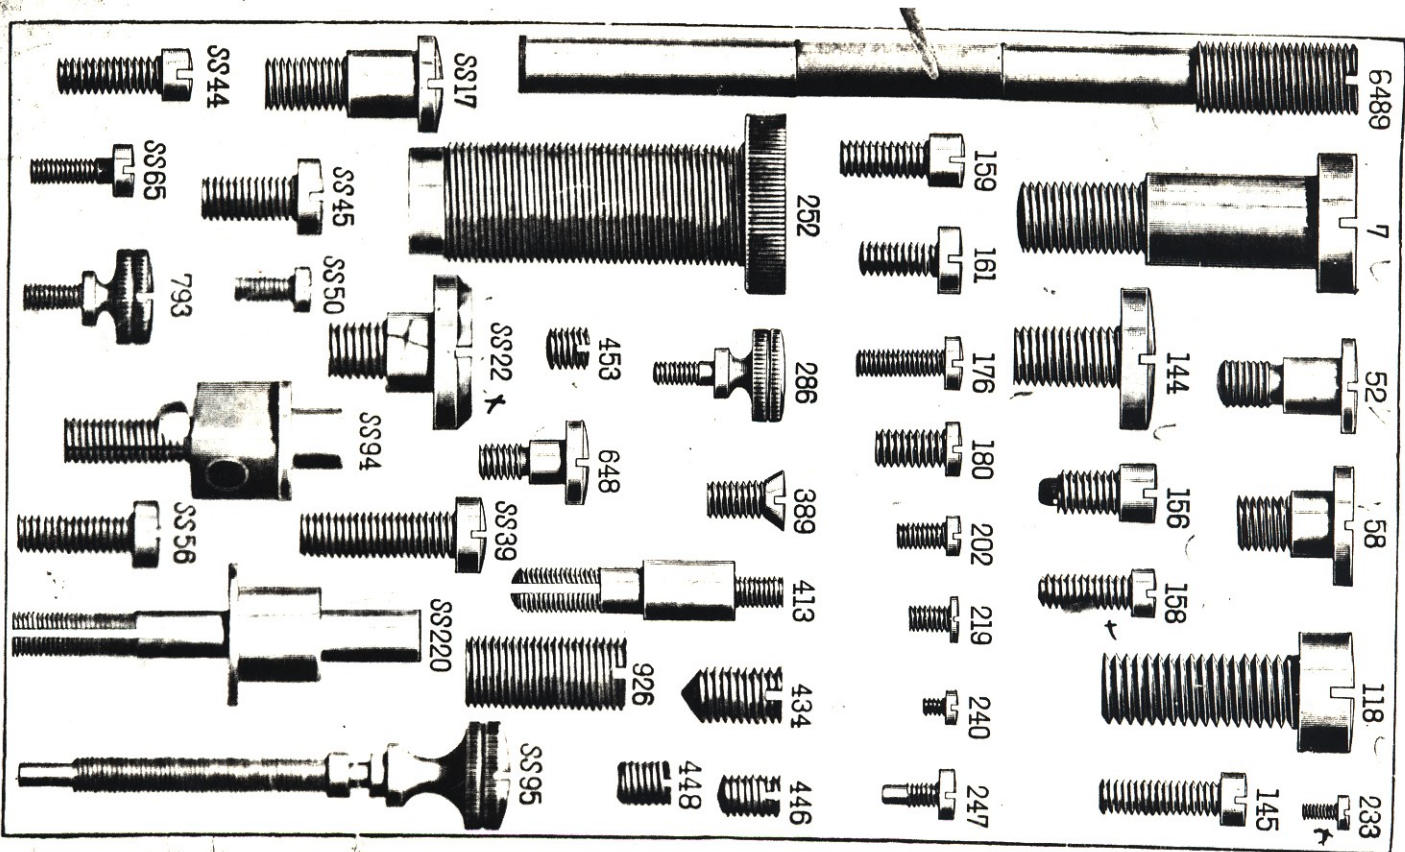  

91161




 91021

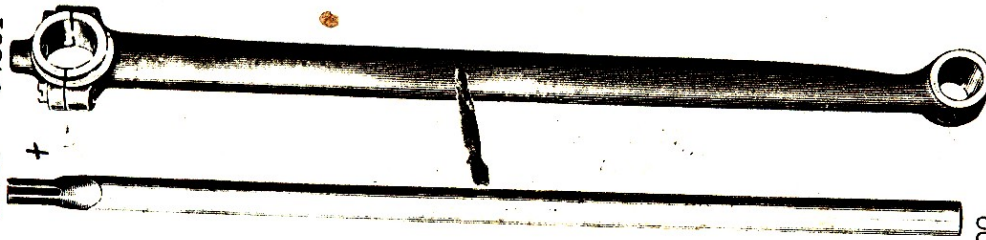

94801

 
91163

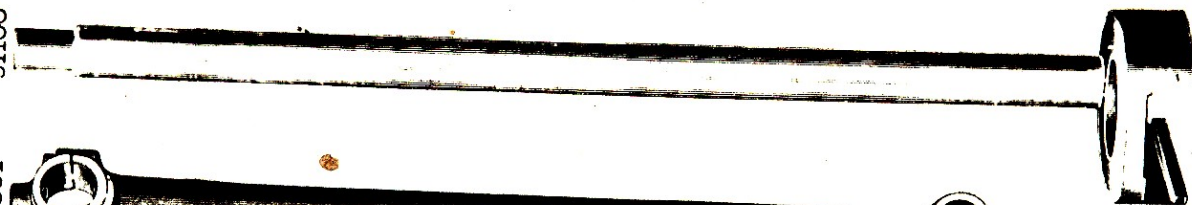

91171



 
82402


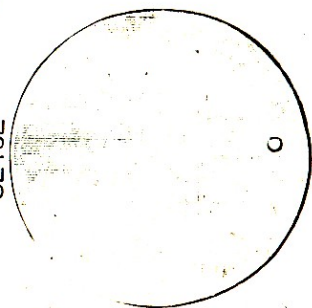




91028





        
 
91233

 
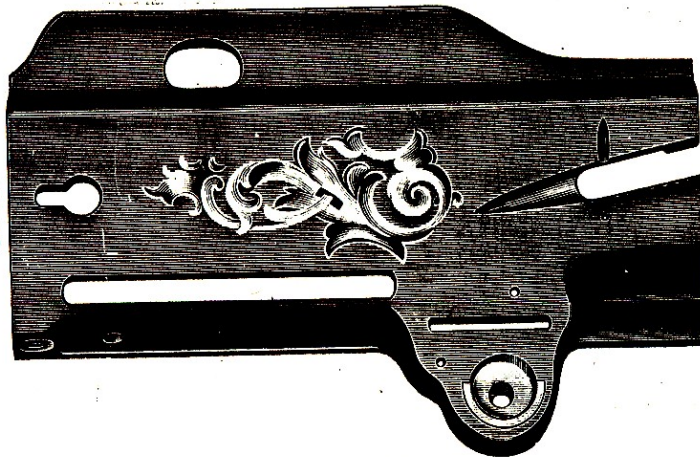 


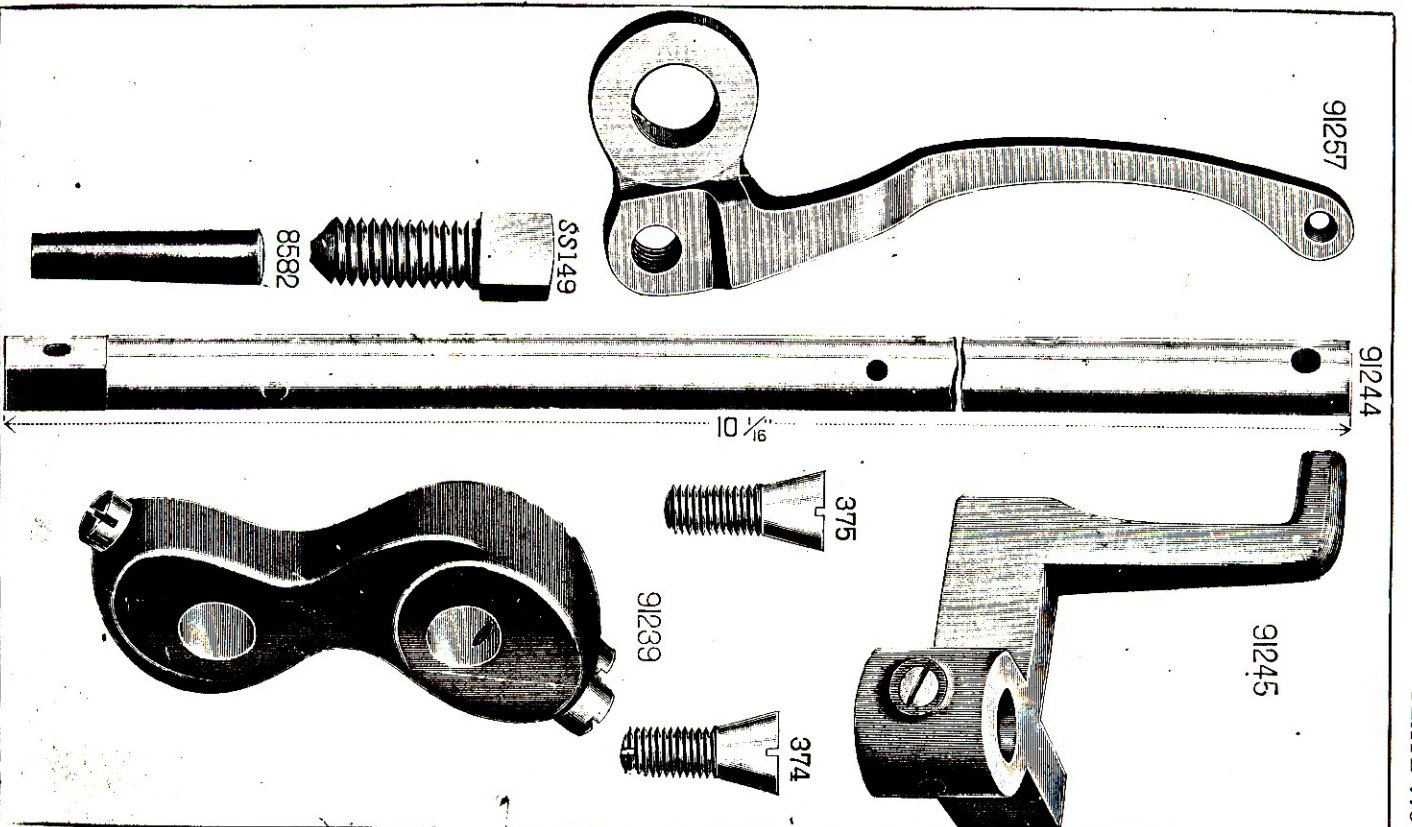 
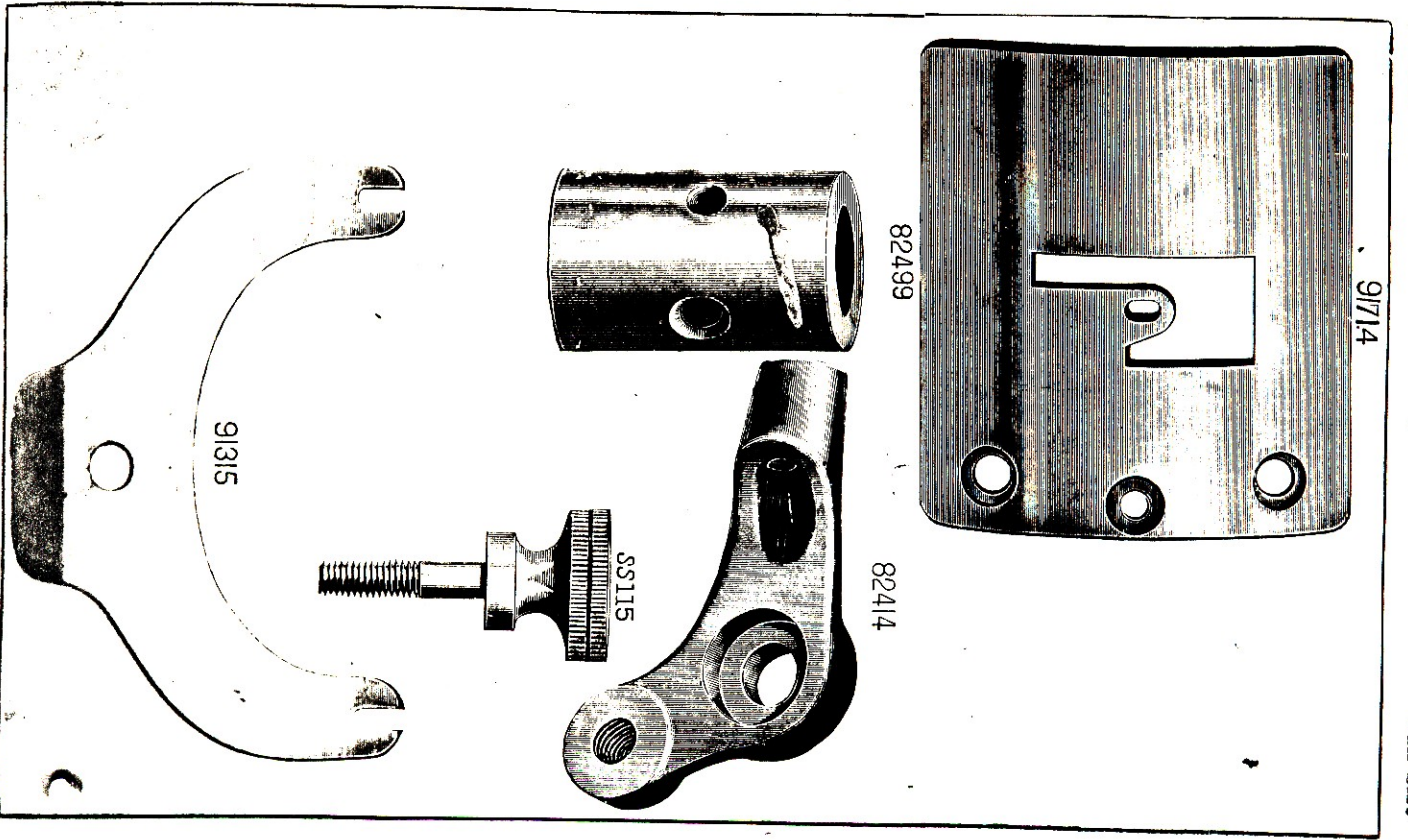 


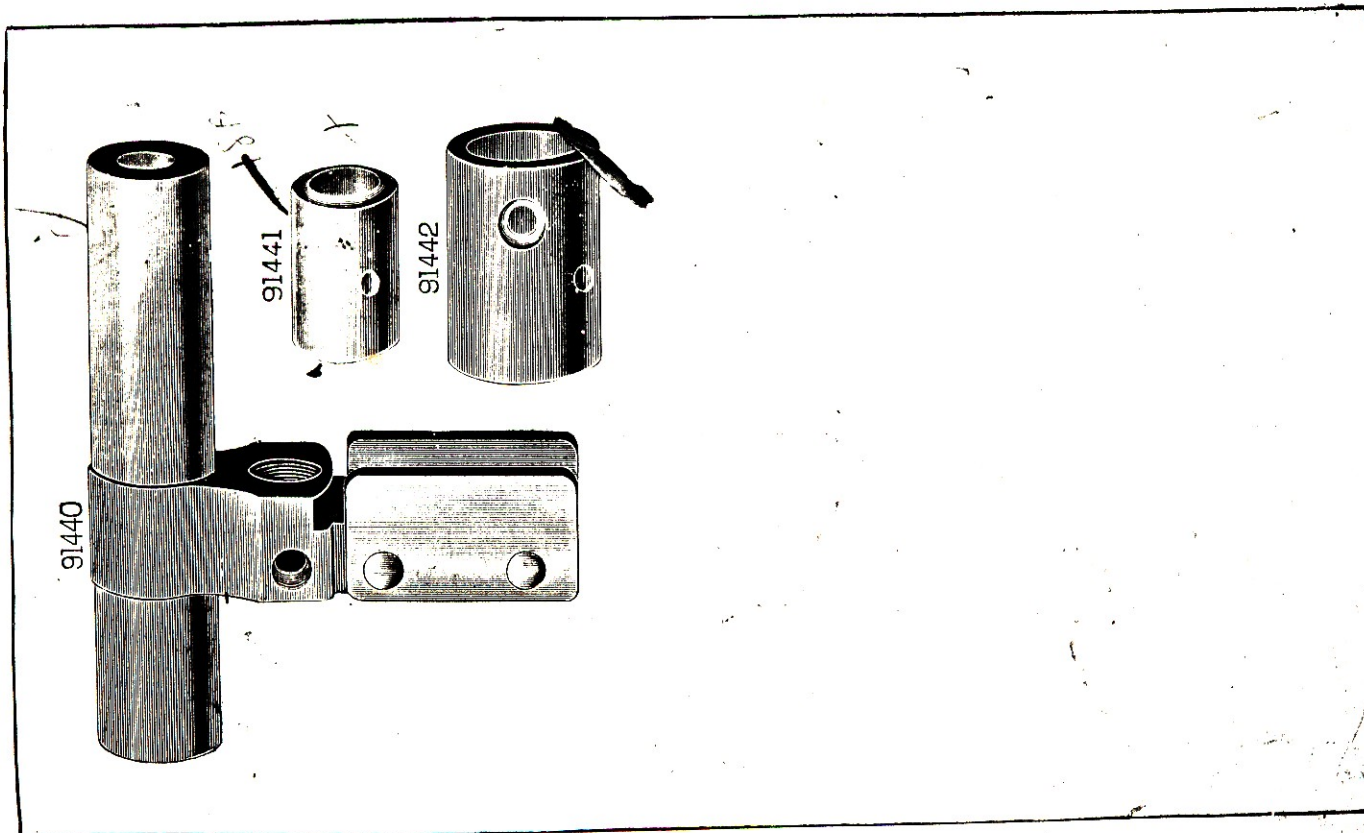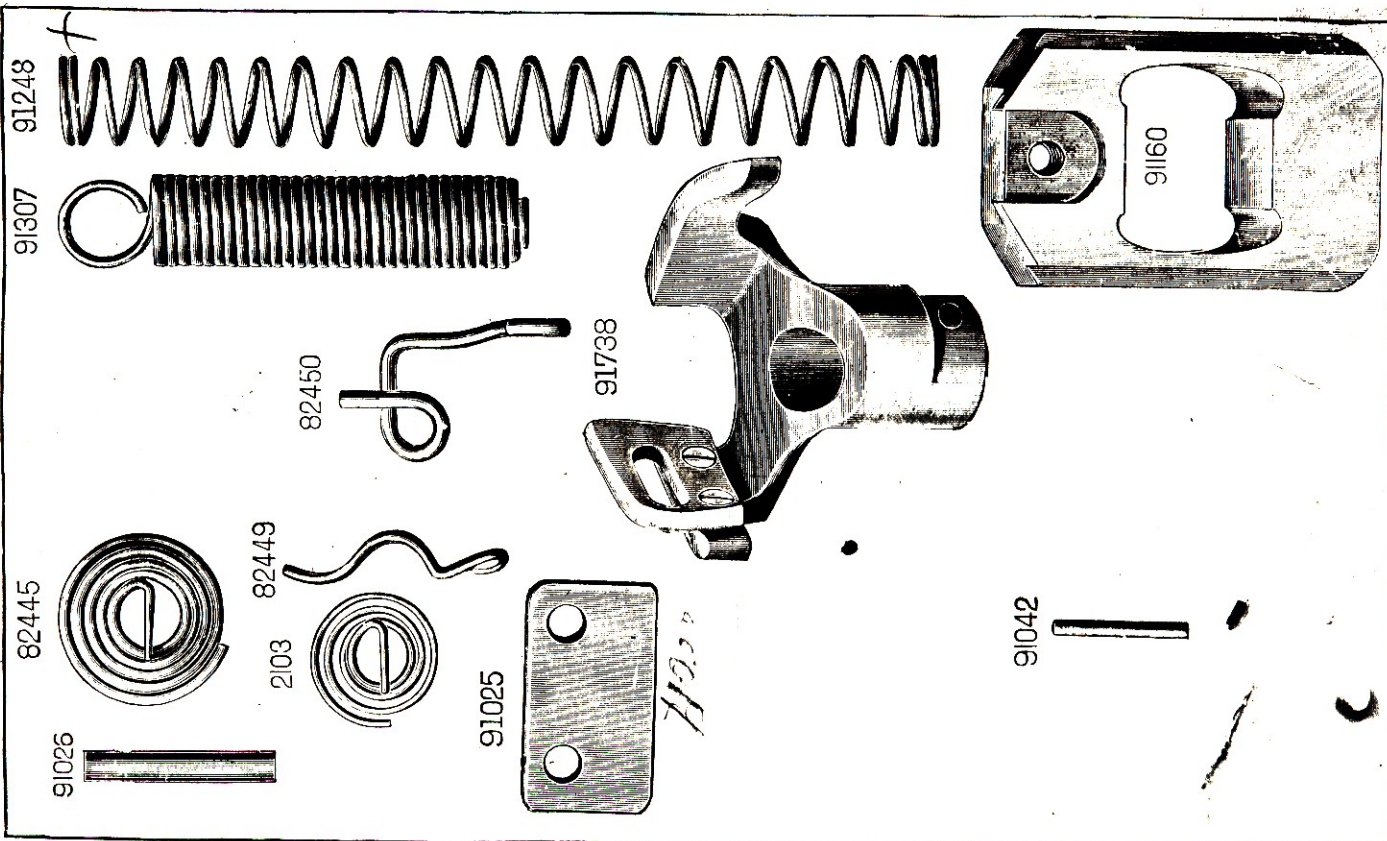 


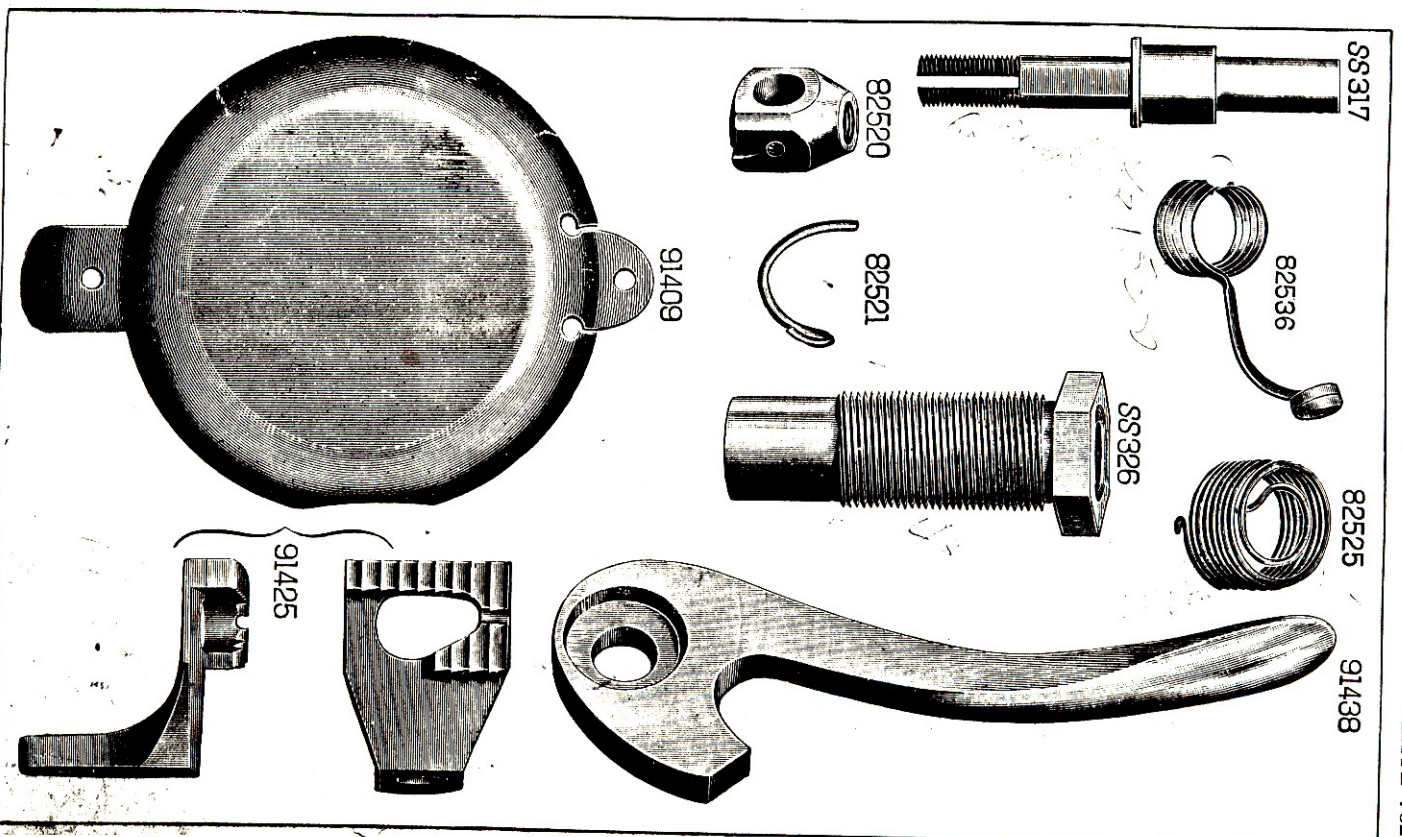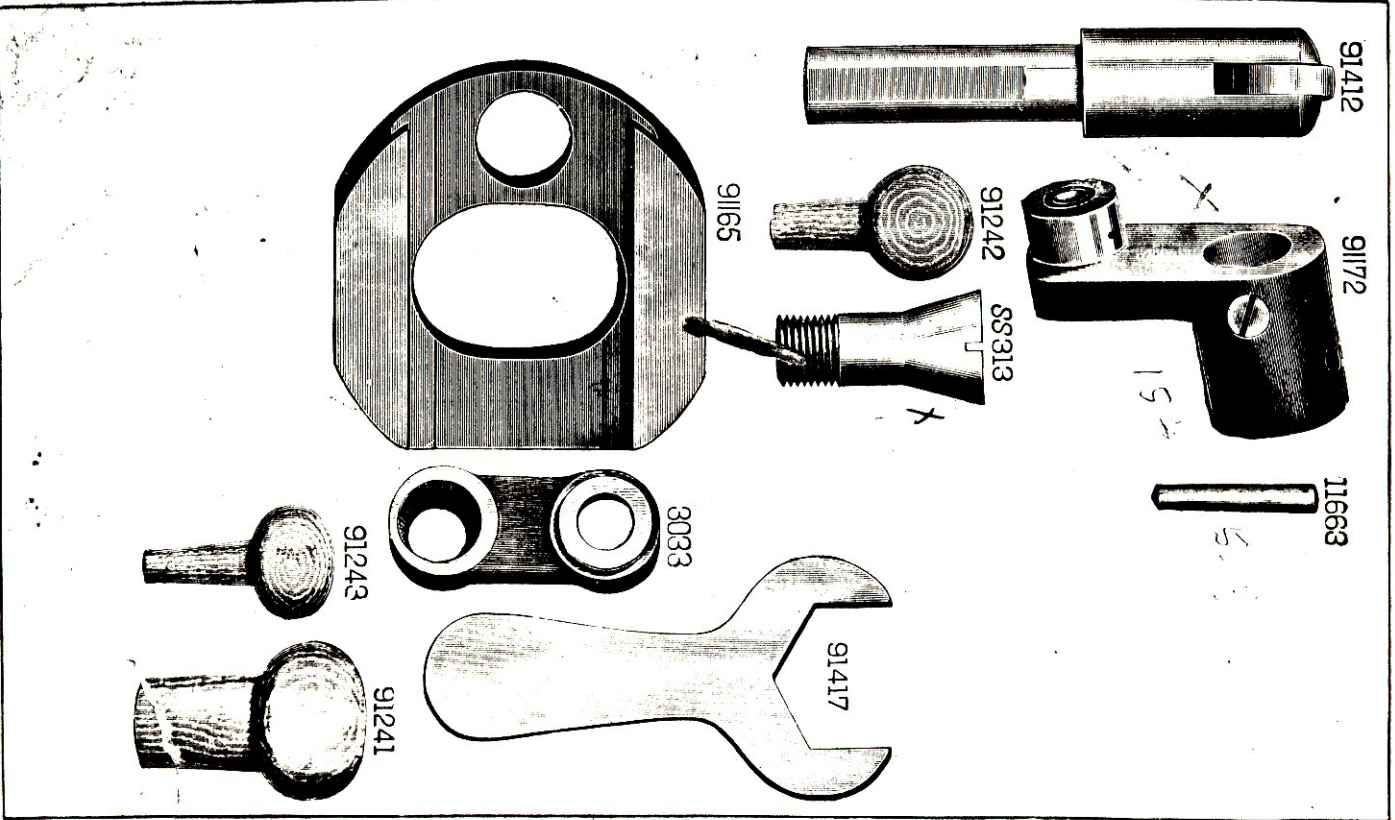

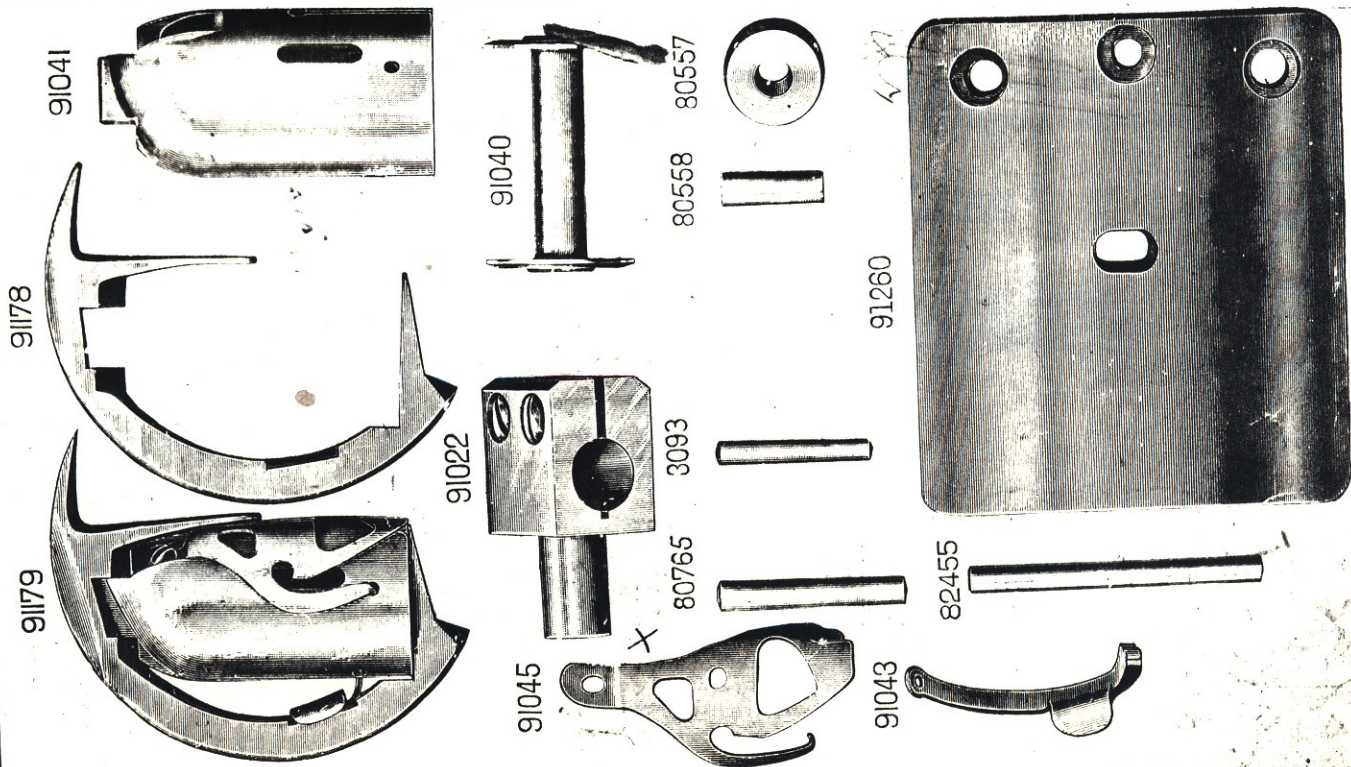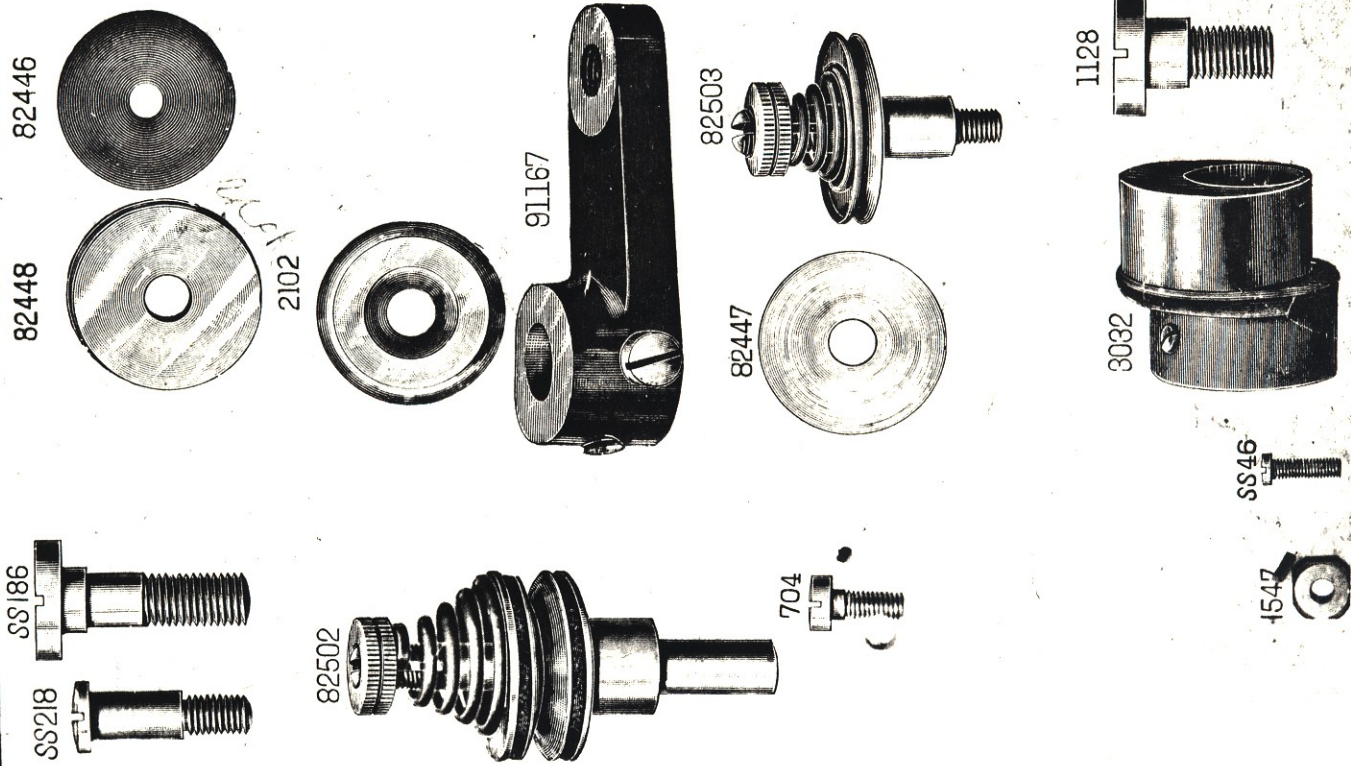


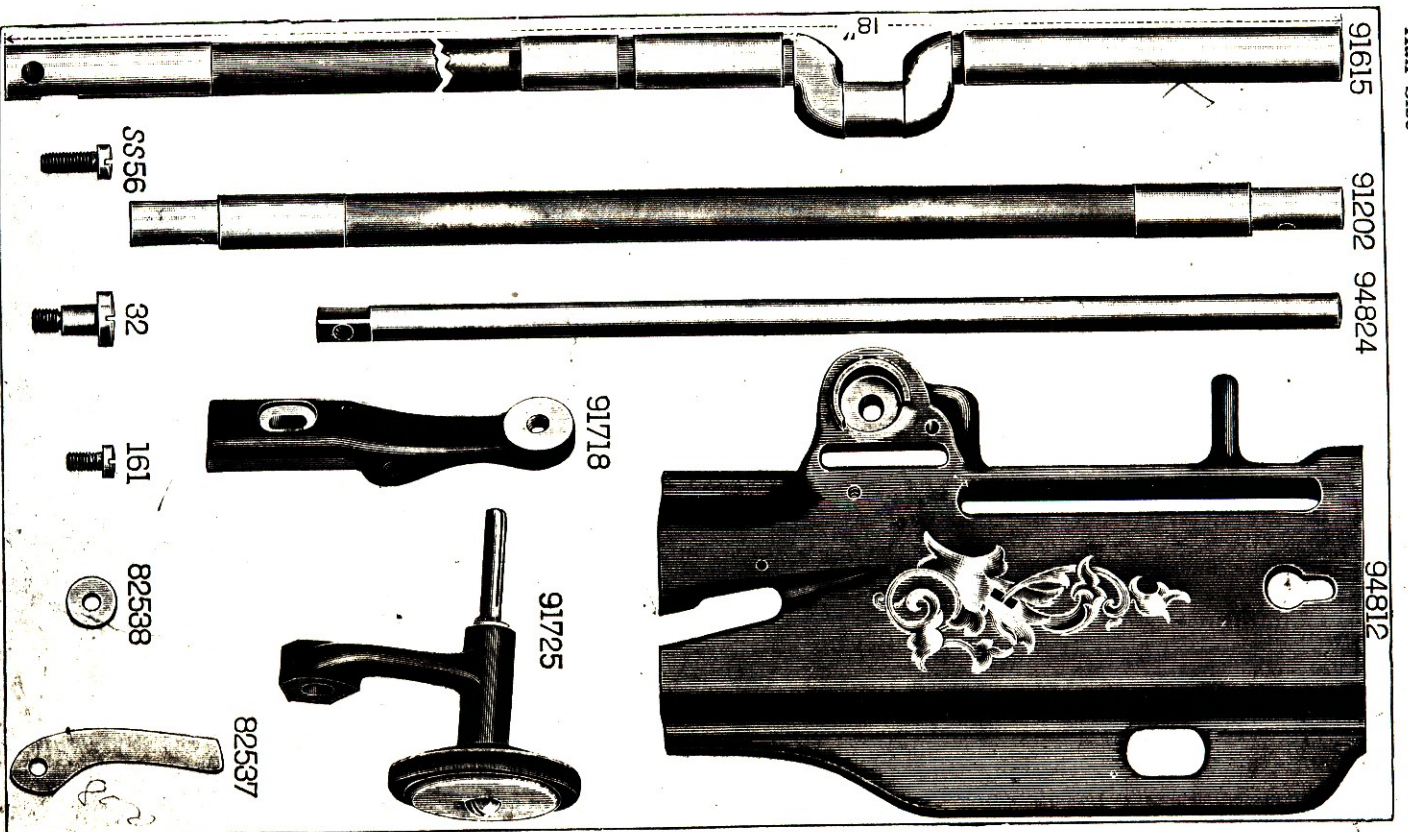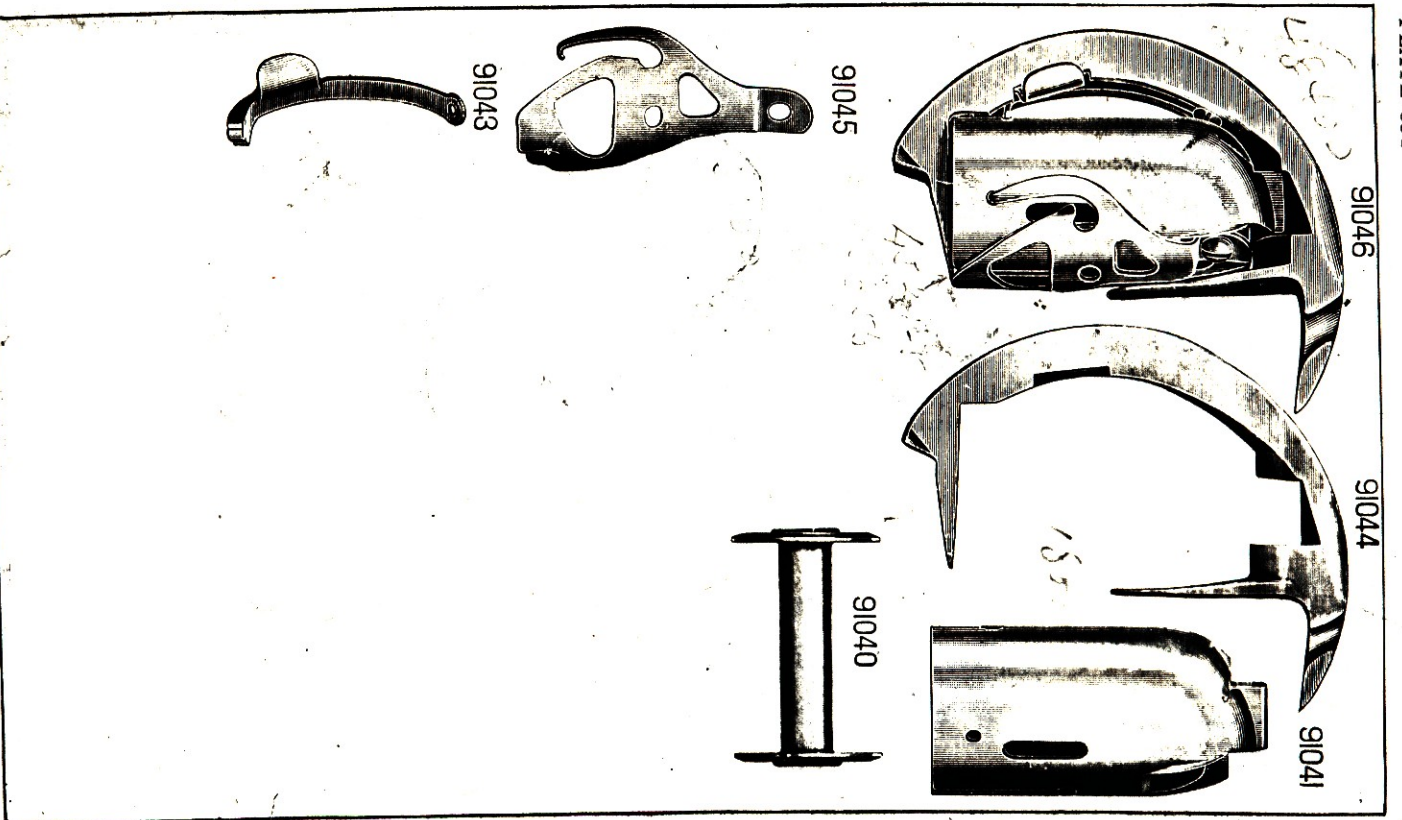

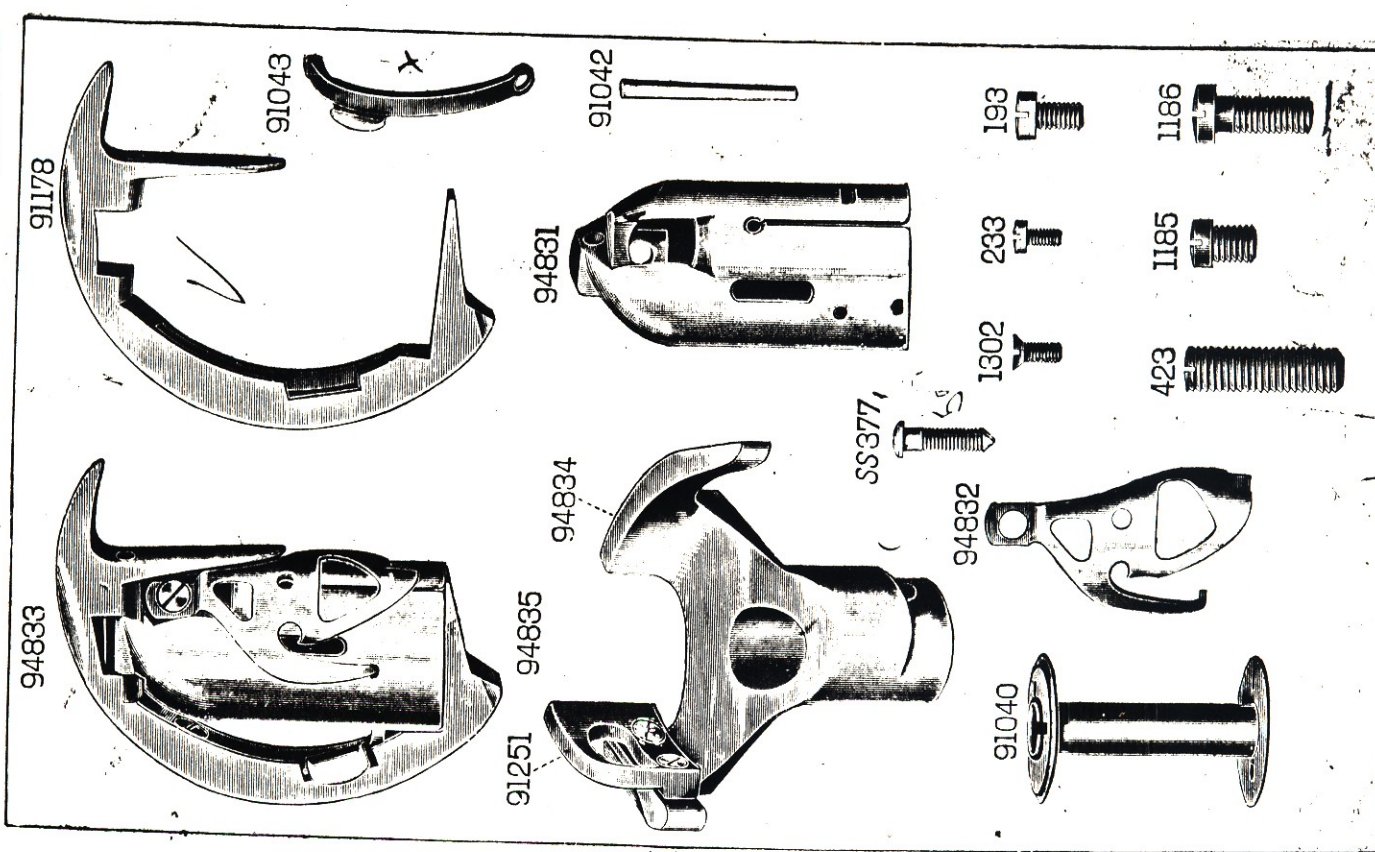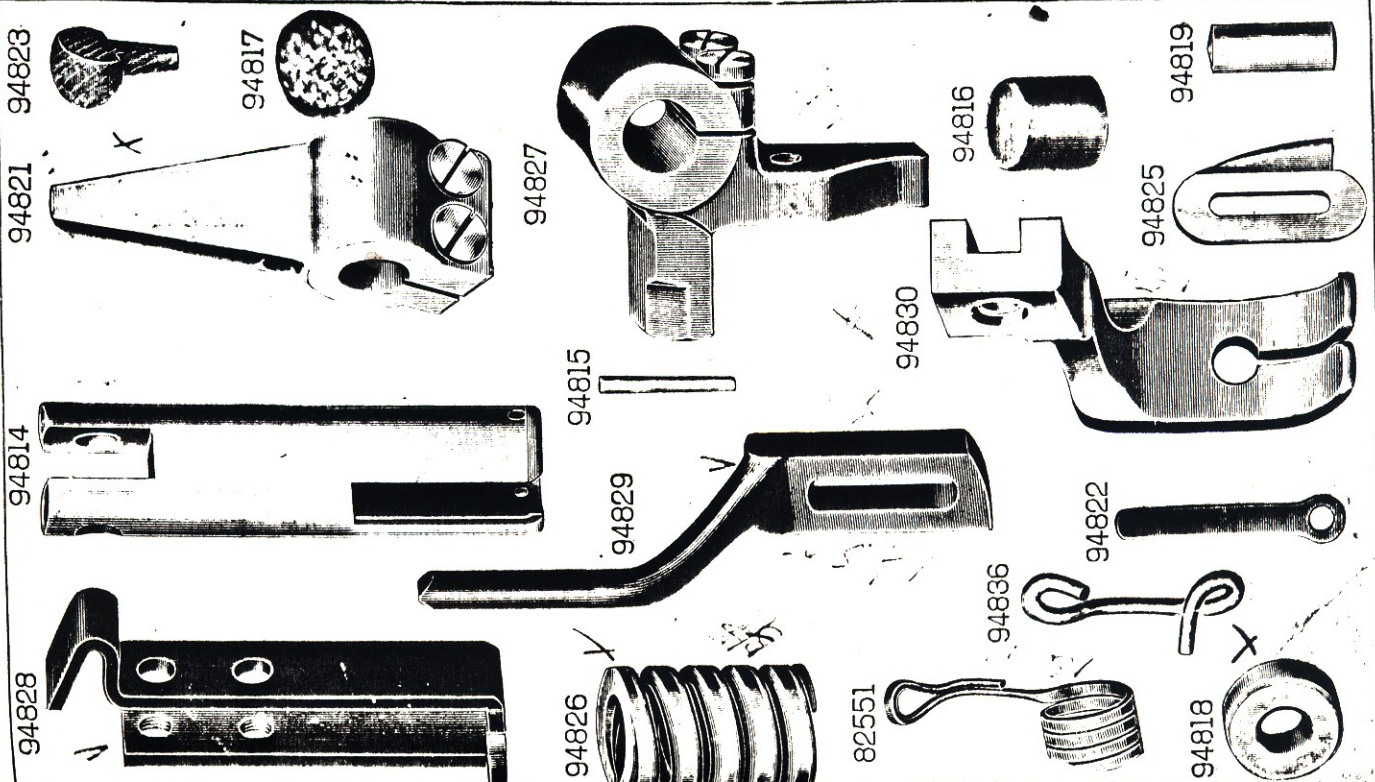

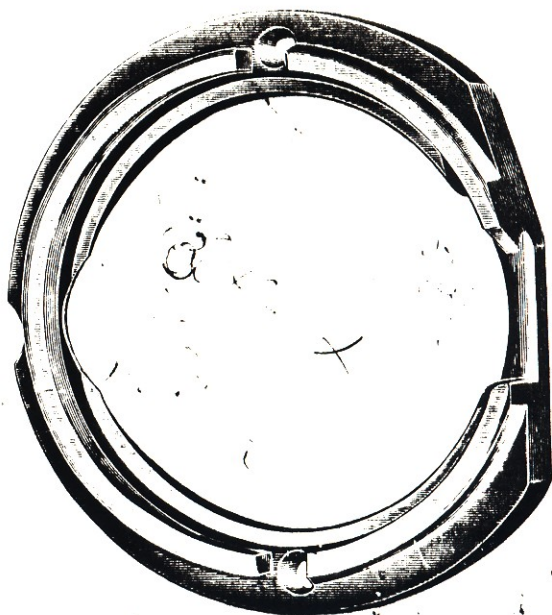


91753

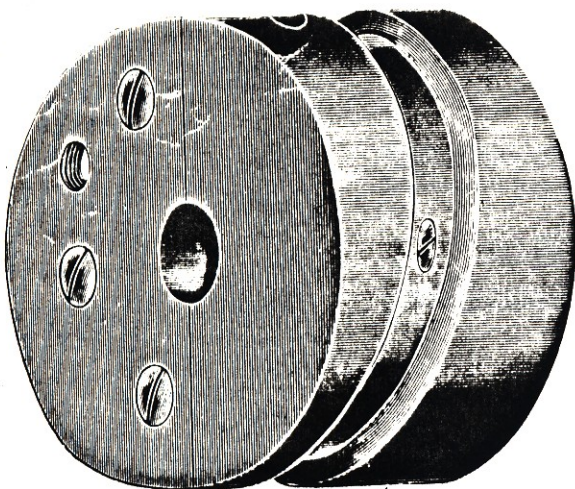 


94839

94838

 
94837

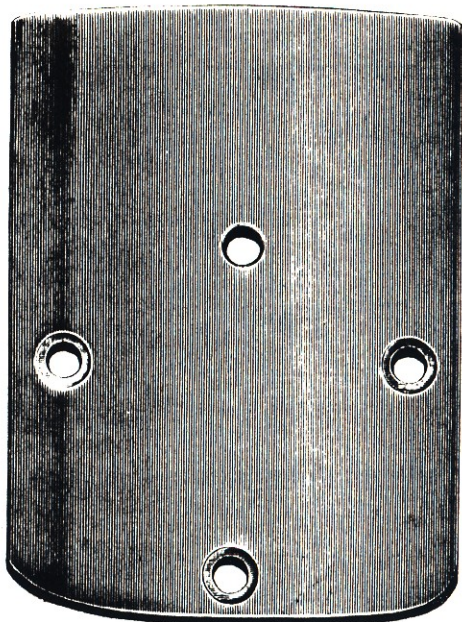



94840


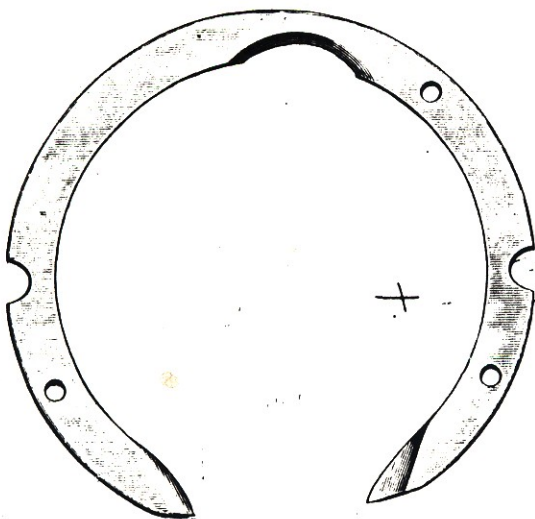 



91153

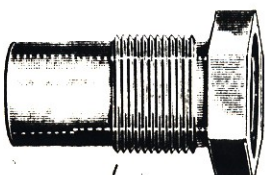 


SS425

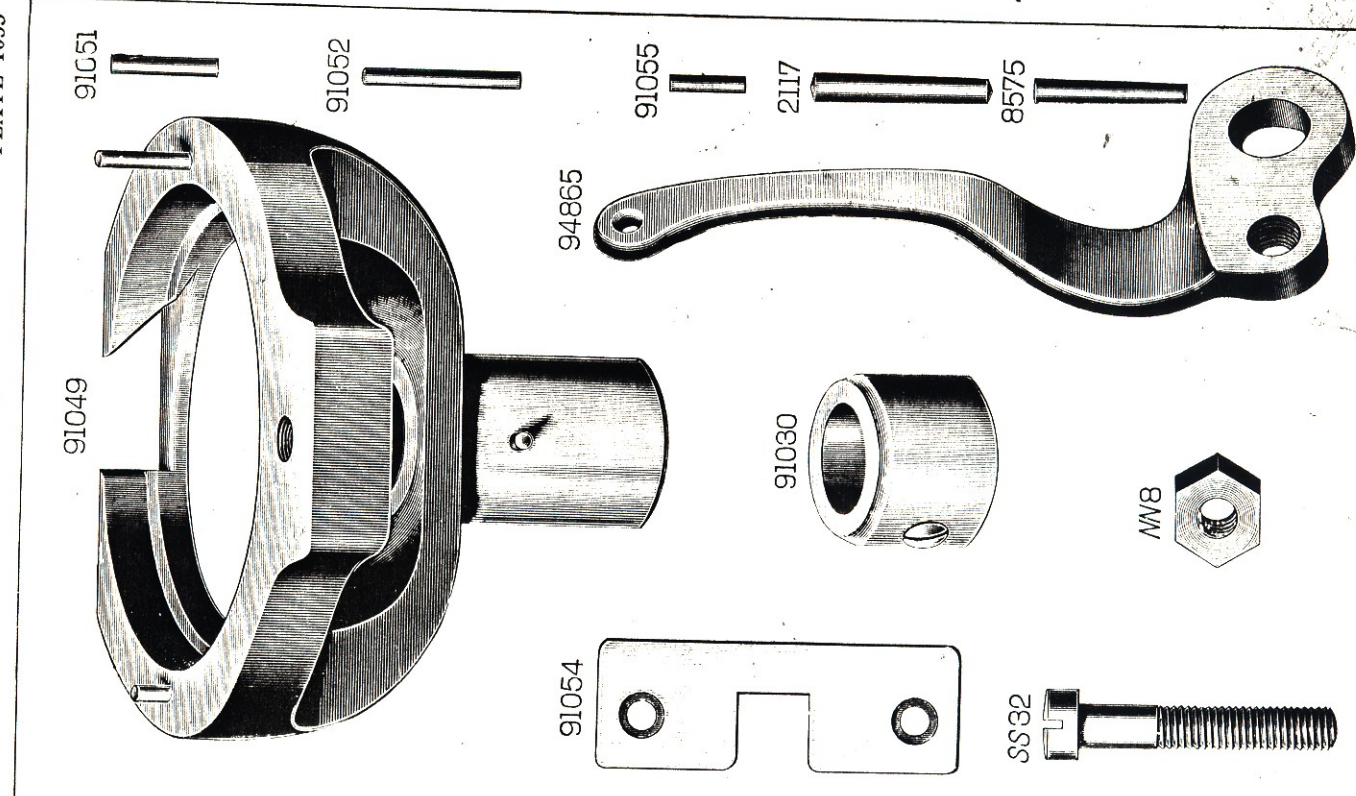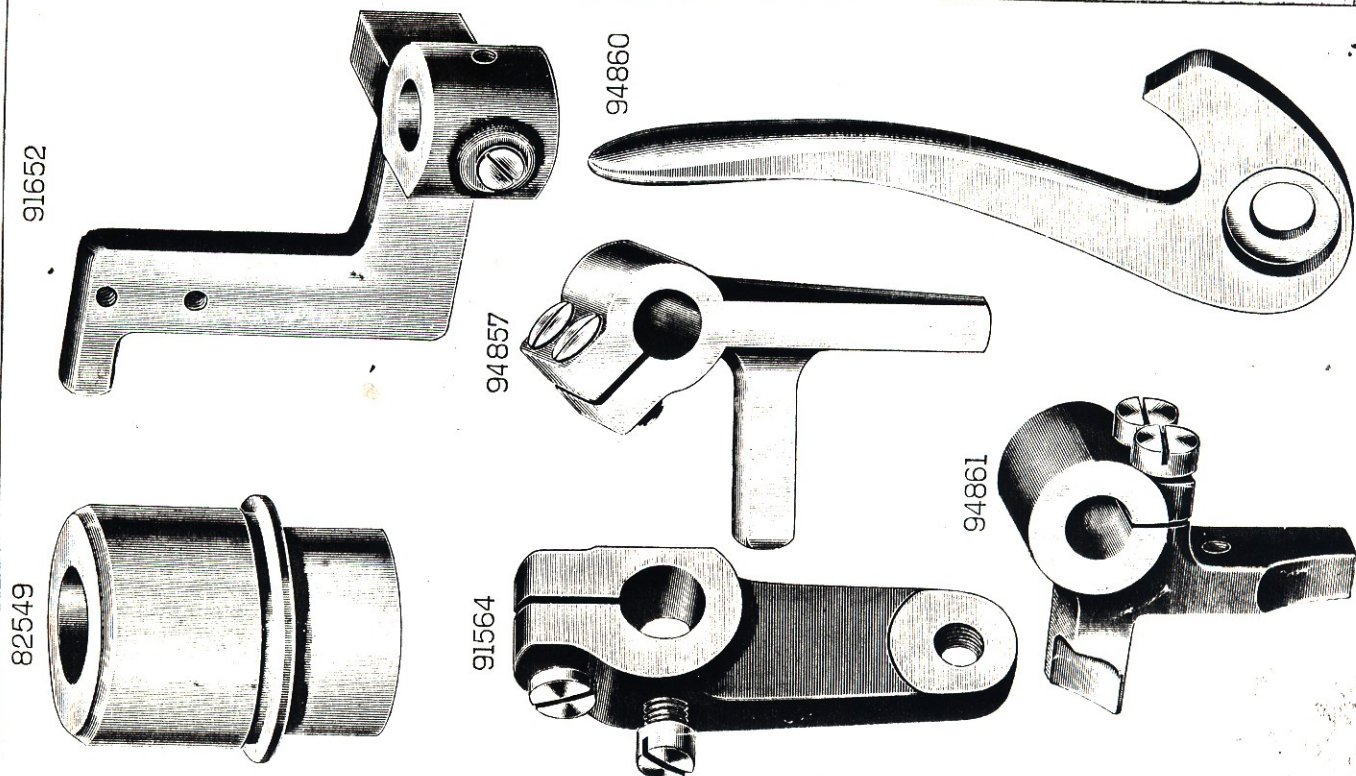  

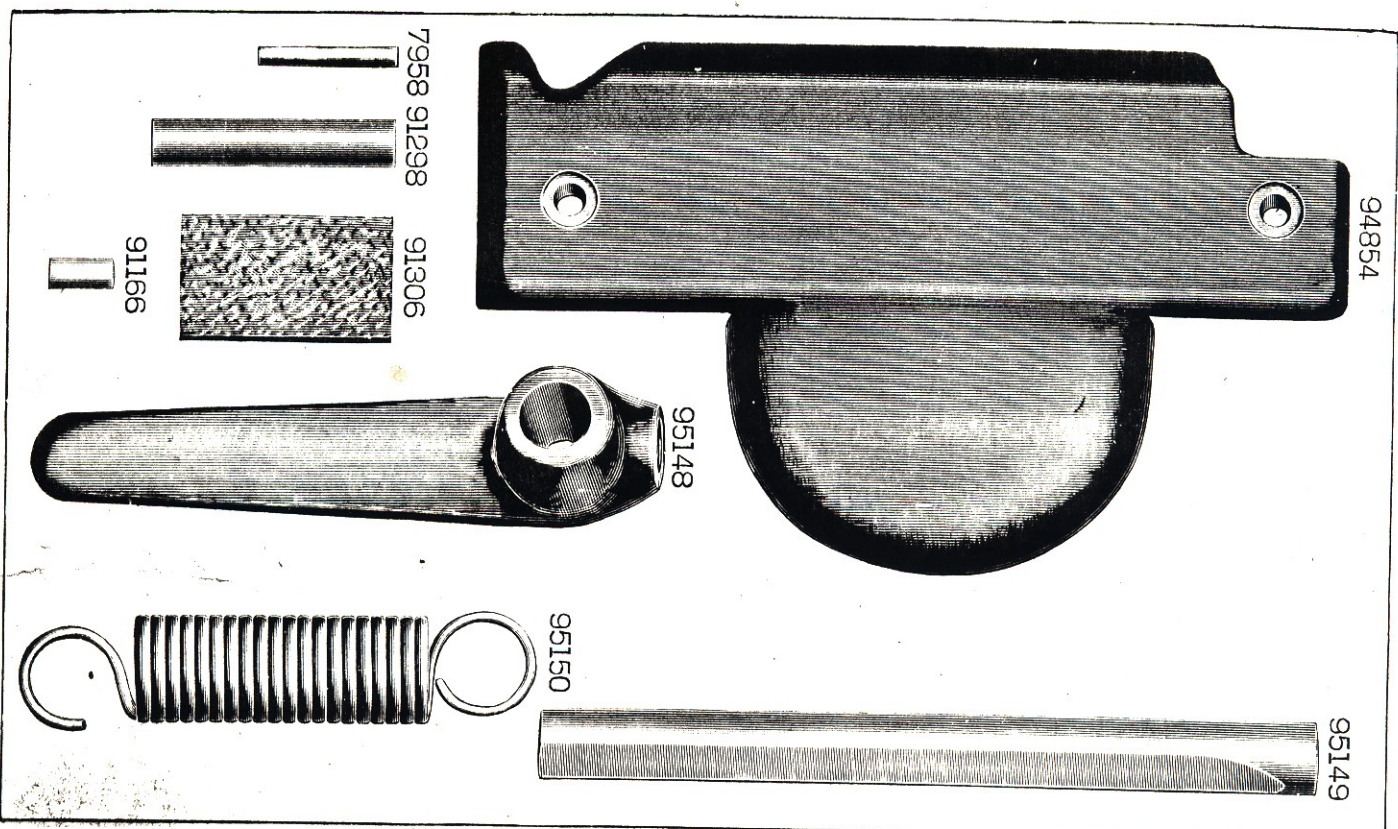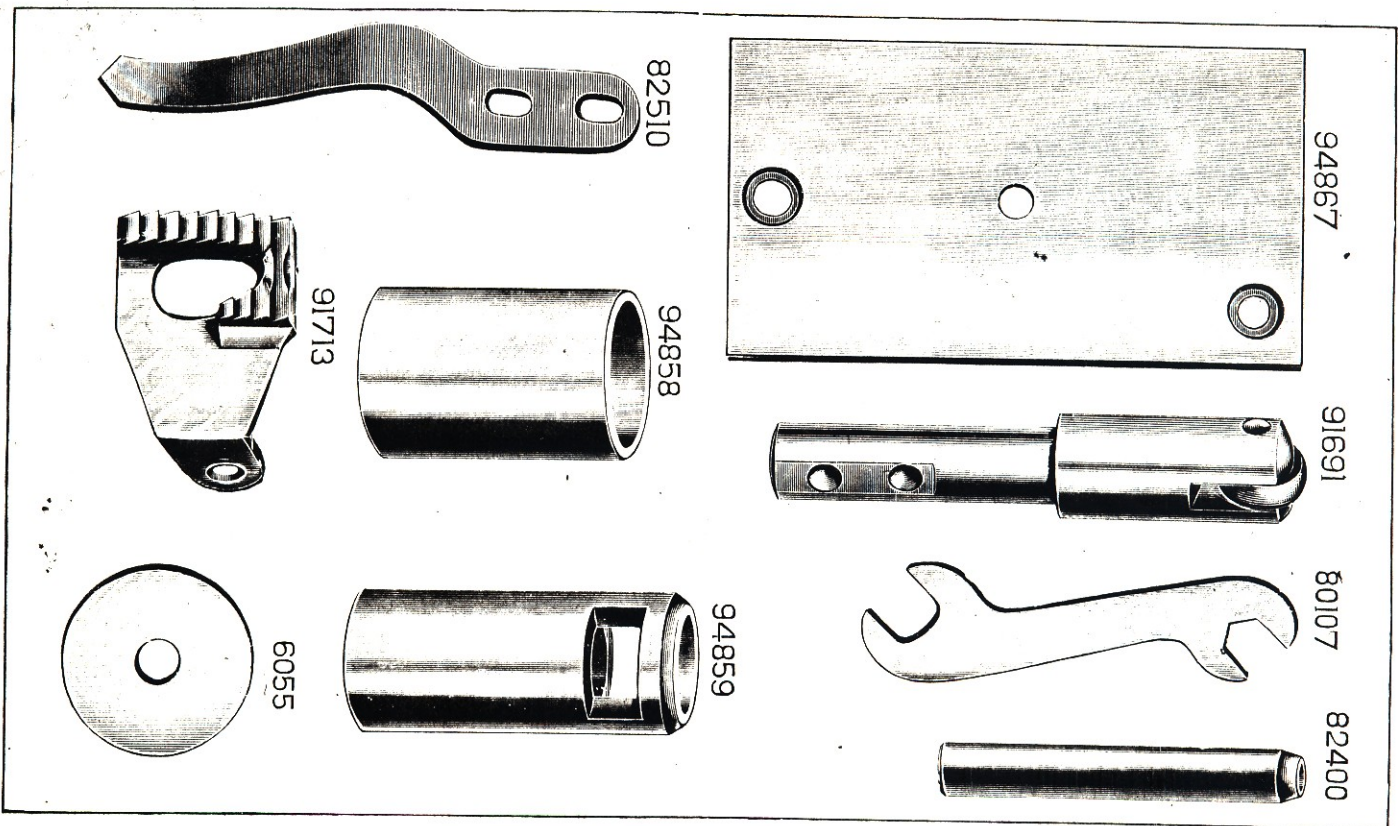  


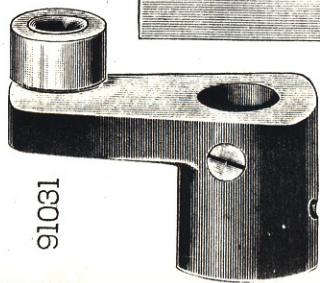 


91057

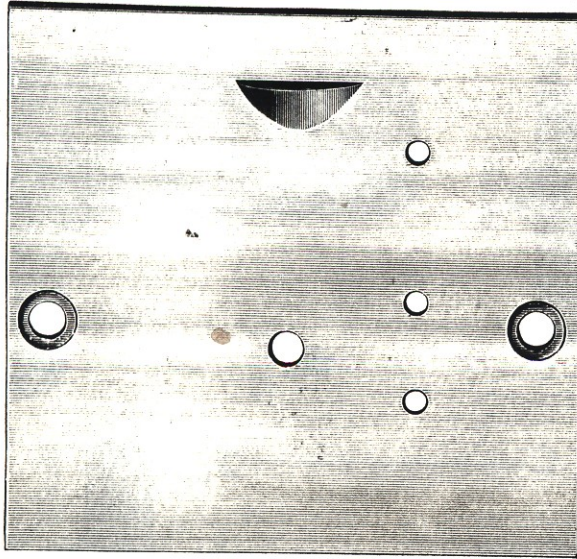 

91058

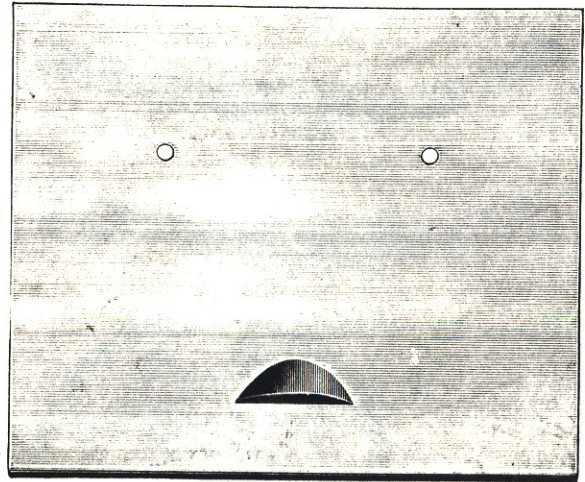 

91059

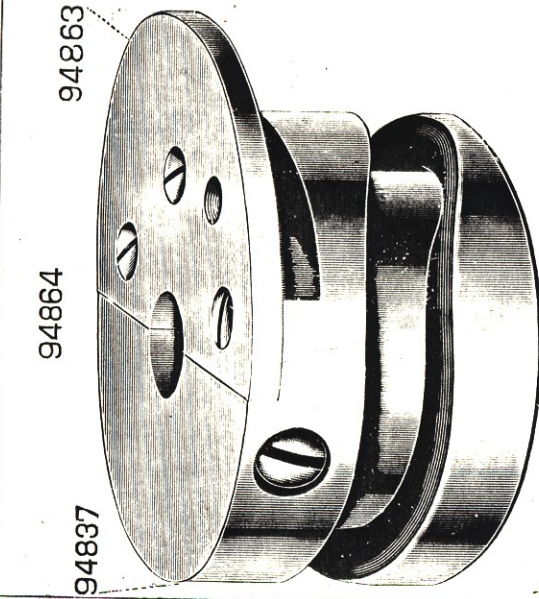 


94864


94863



91706

 91705

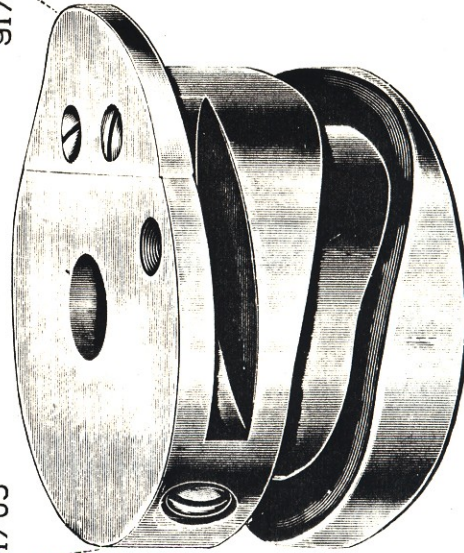


91736

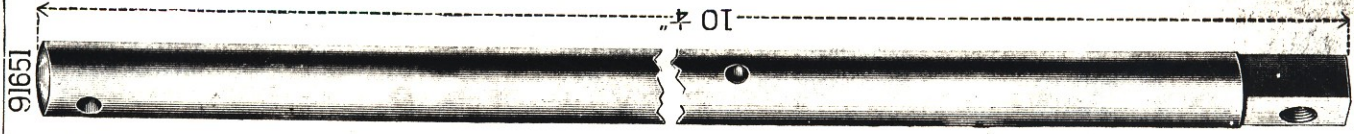 

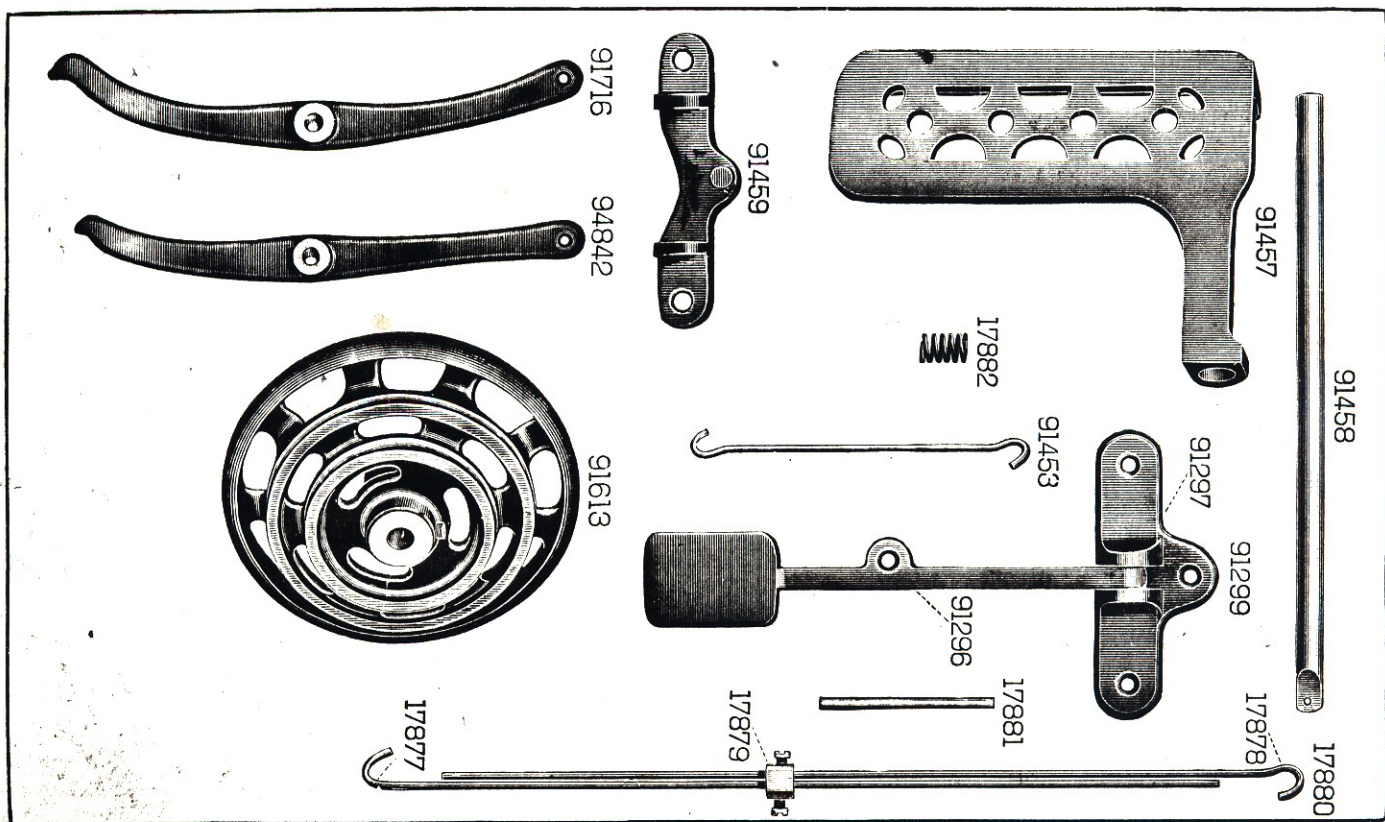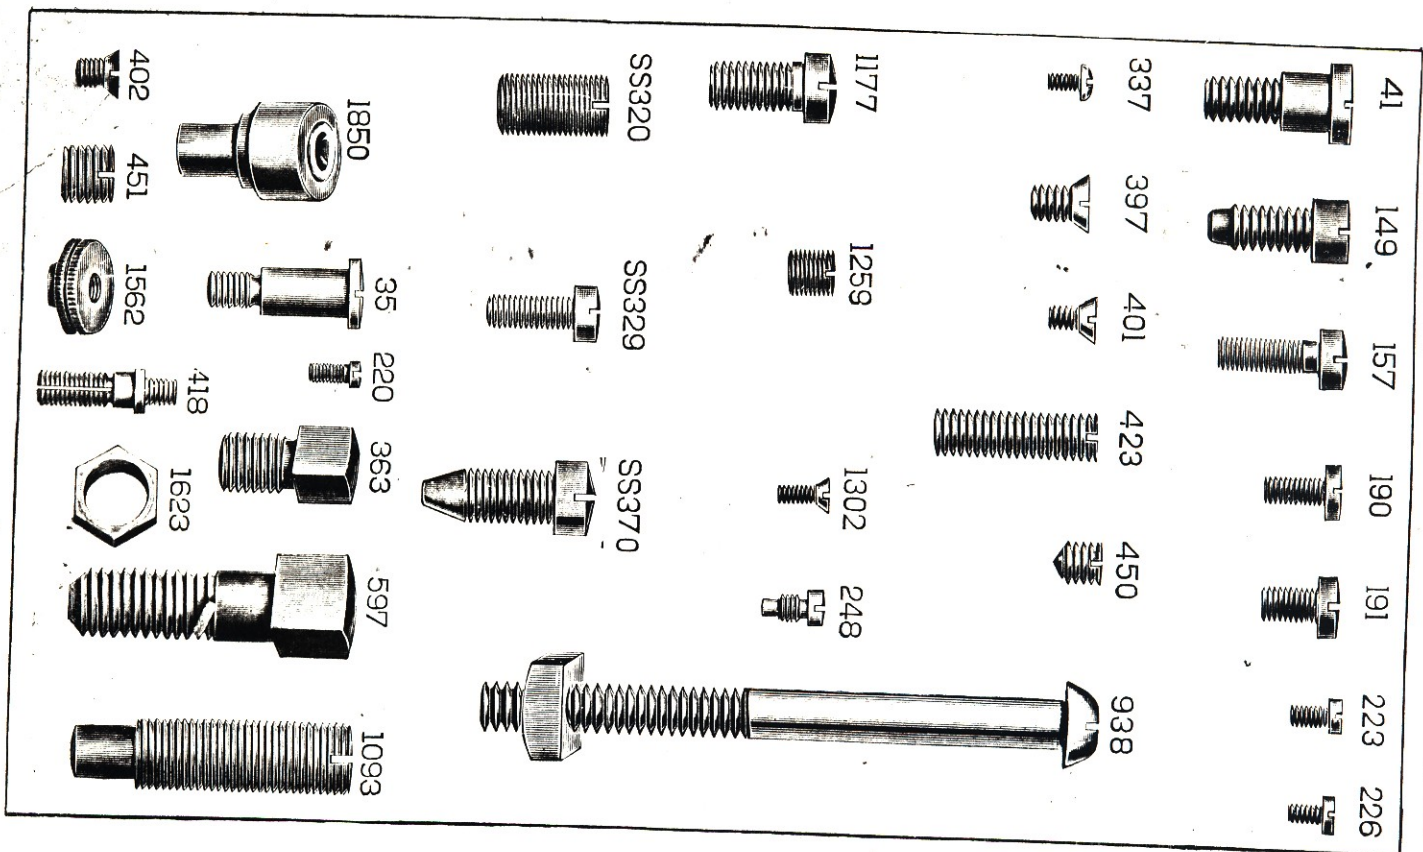  


91413

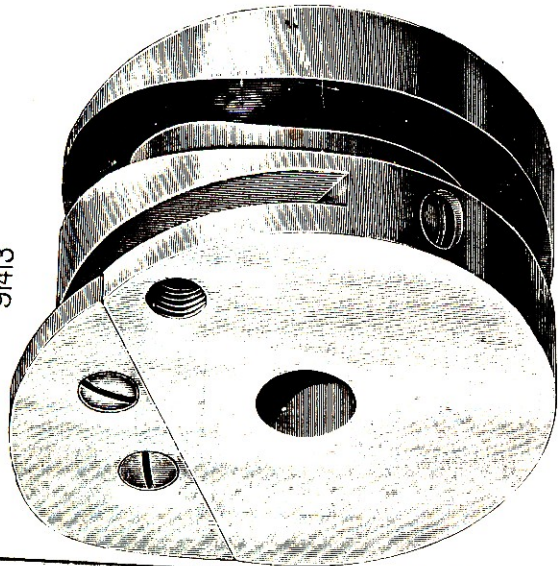 

157

 91249

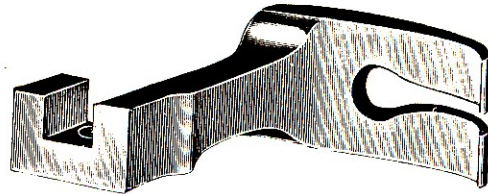

91247



444



1518



 
1519



1560



91255

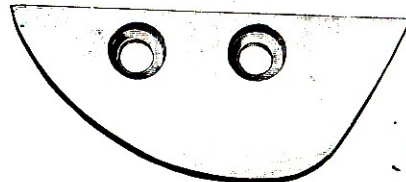


RR24




231



 
1513




91029

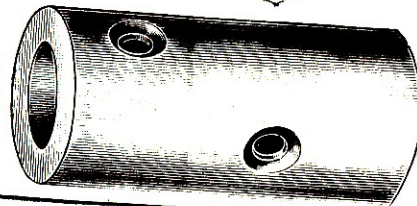 

82520

 


91050

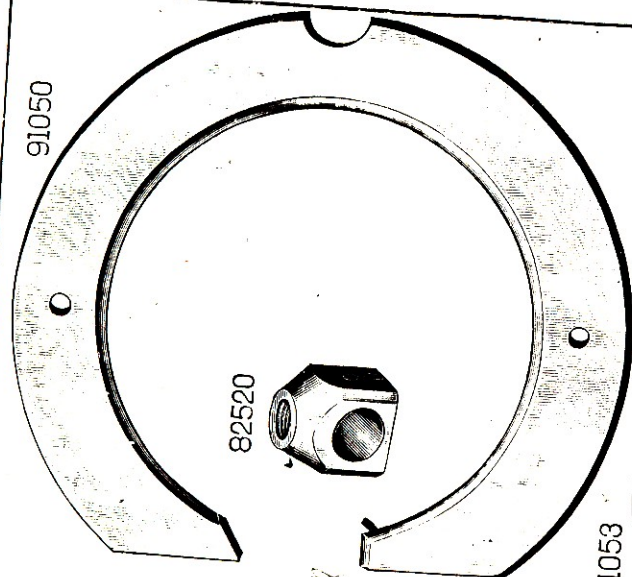 


82521



 
91053

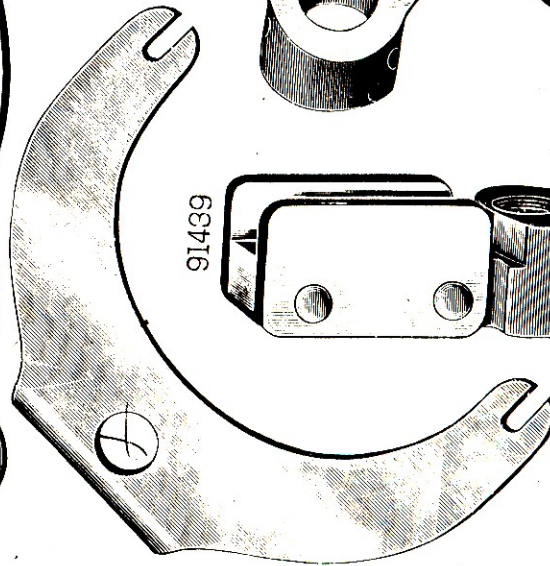

91439


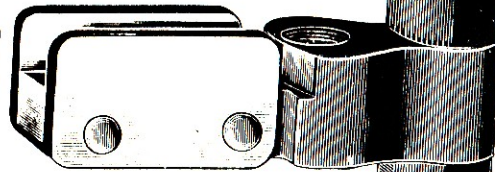 




91597

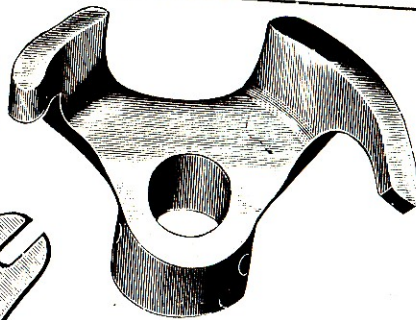 


11663




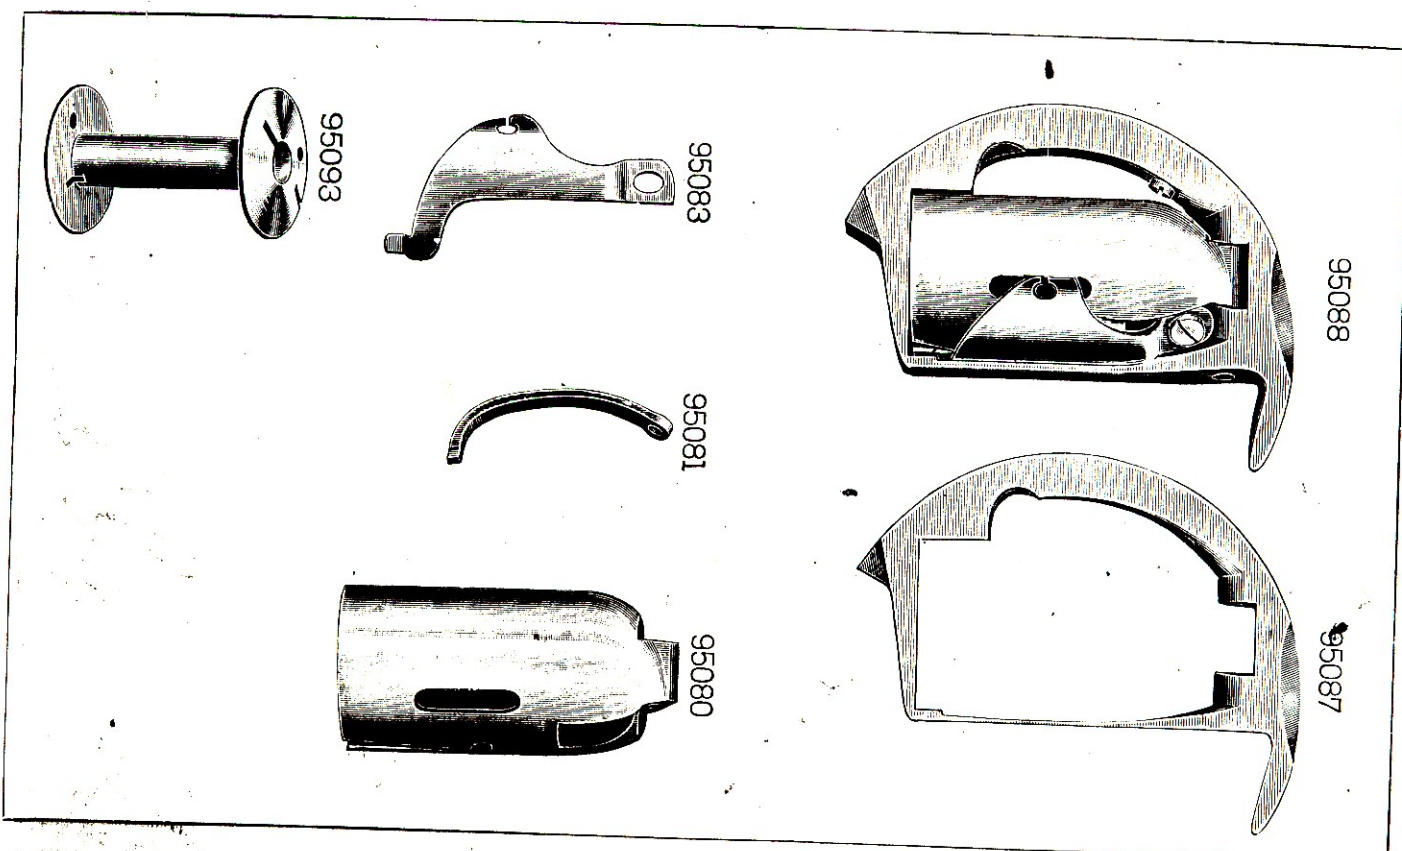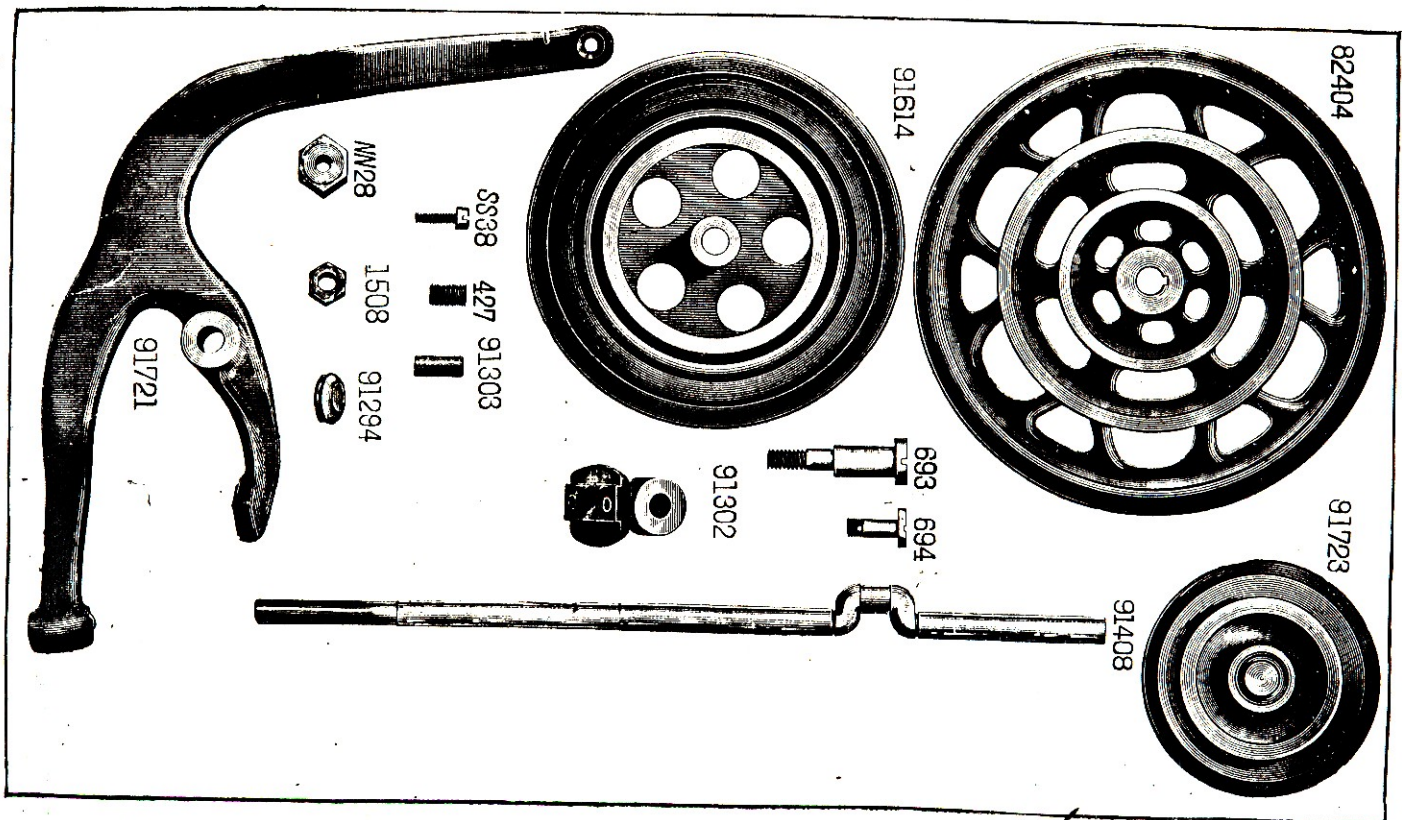  

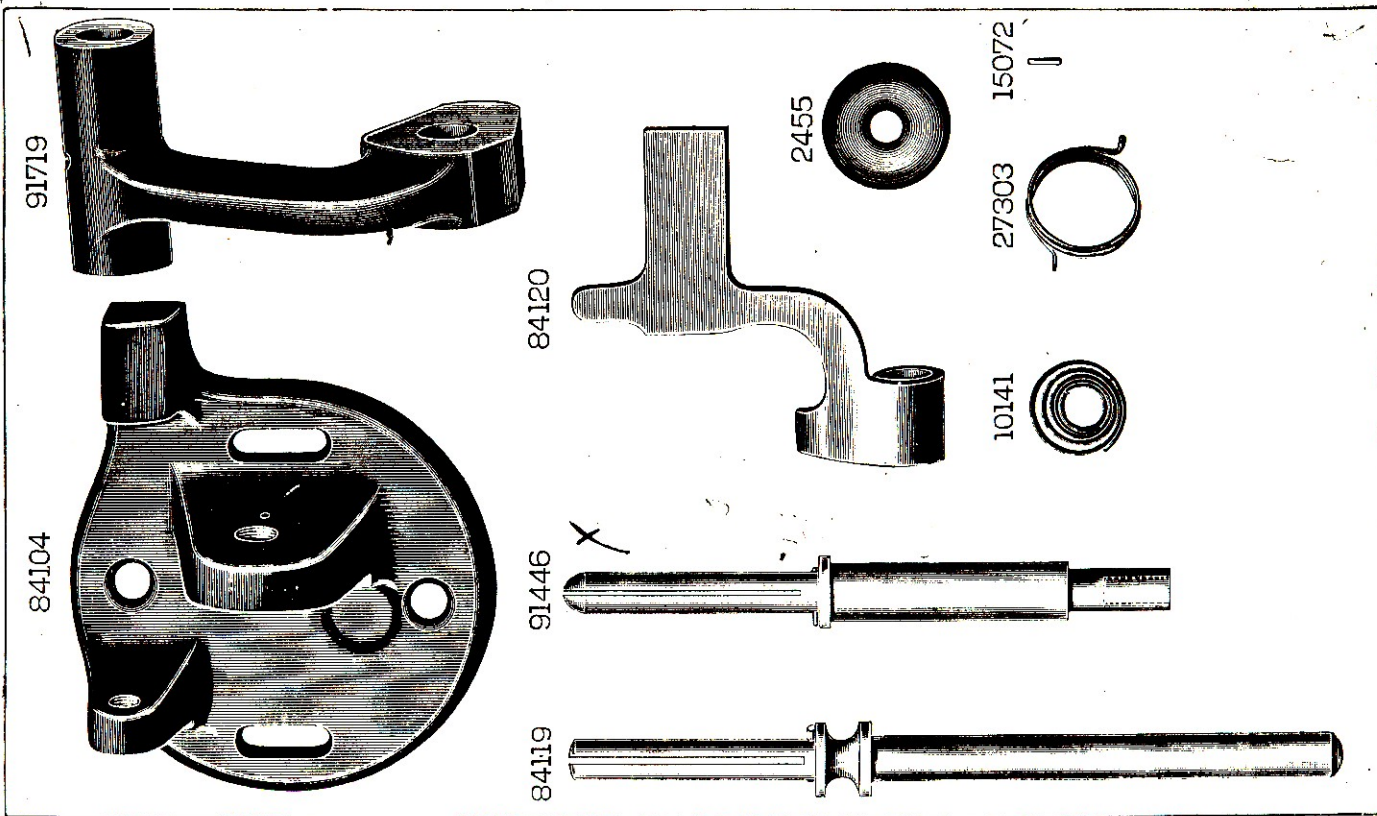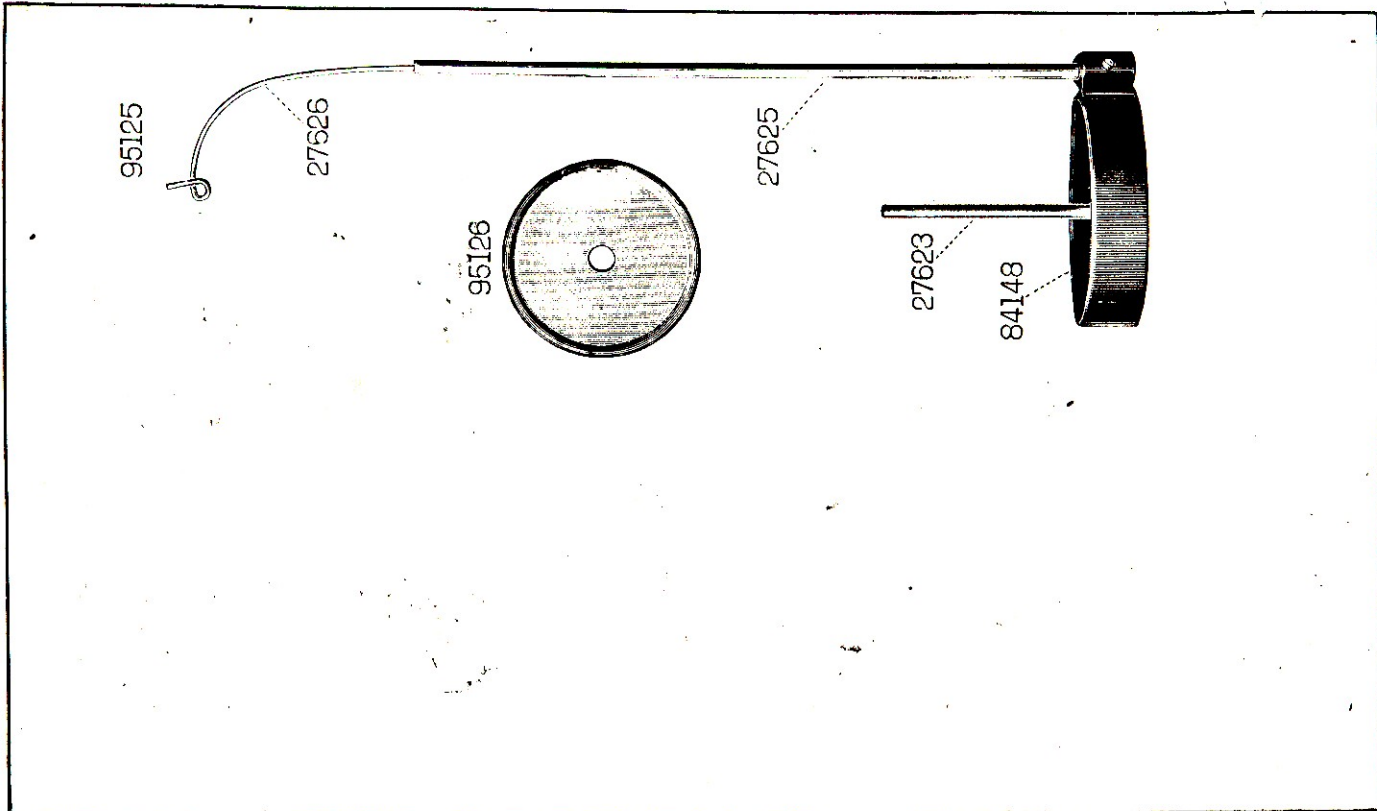  


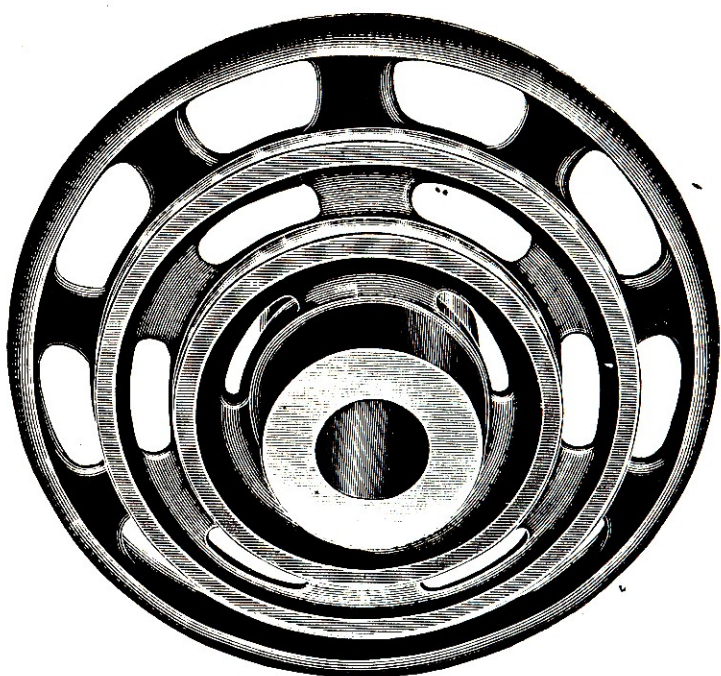 


95189

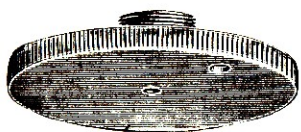 


SS463

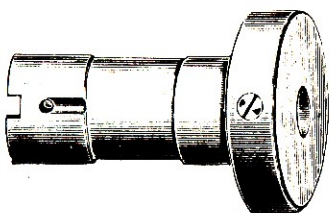 


95146

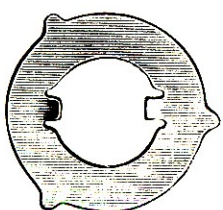 


95145

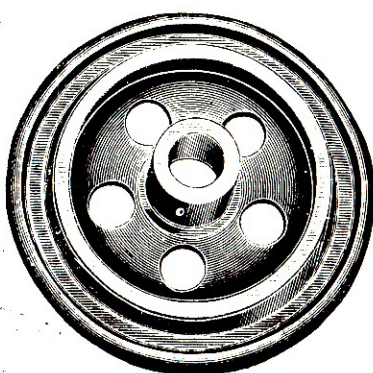 

95141

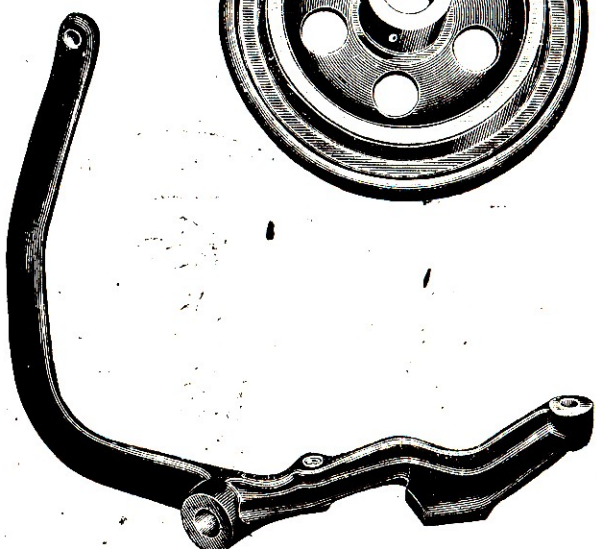 


95147

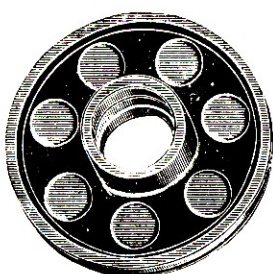 


95142

 
95098

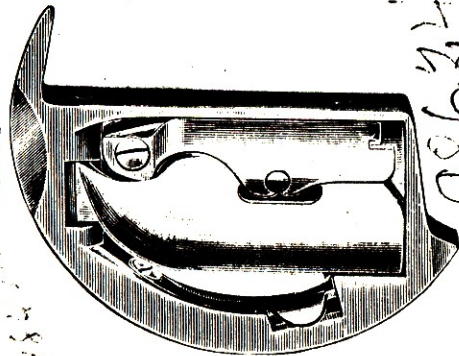


95188

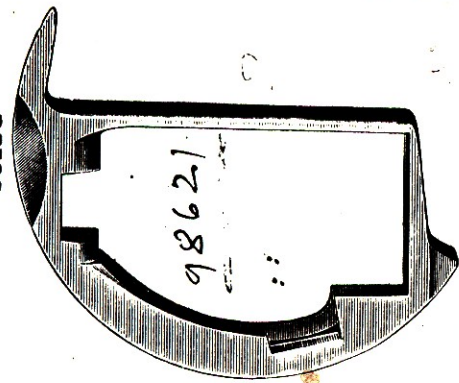 

95094

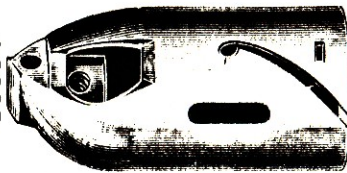 

95093

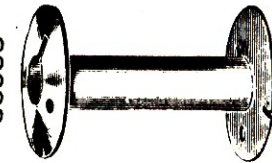 

98602
85095



91042



91043




SS377




233



 
27540

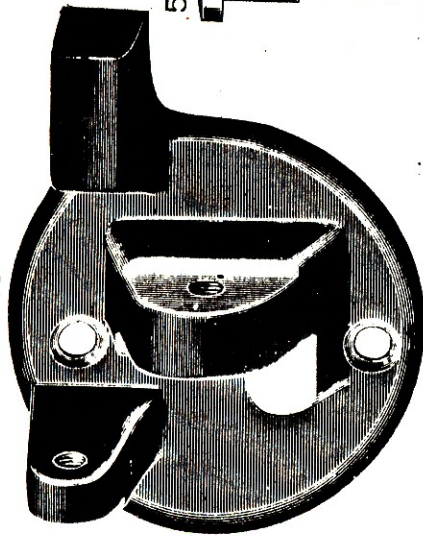

27302

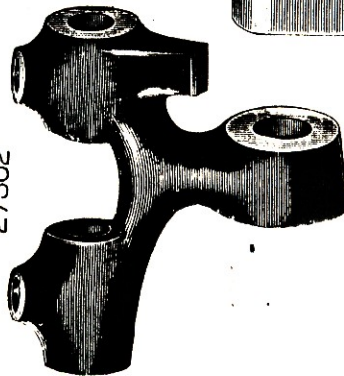 

95197

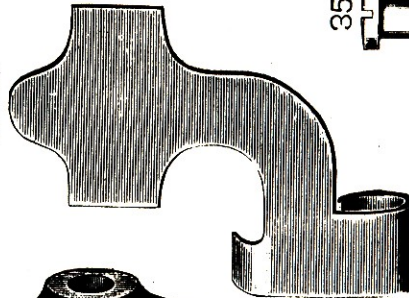 

27330



50356



35



 
1620

 


27303



27541

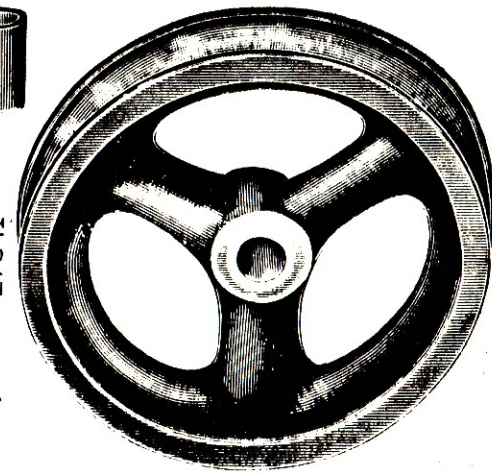

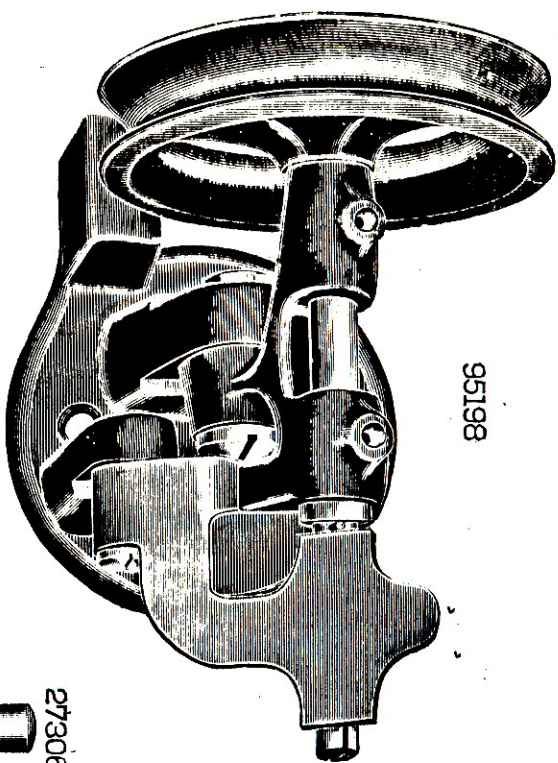

95198

27306

27307

 
 
2455

10141


1562

418

2106

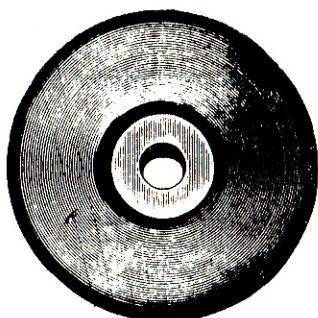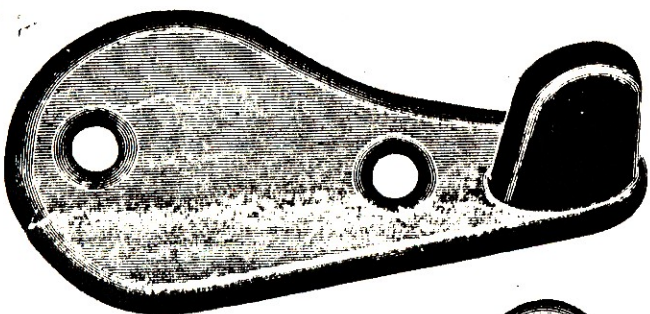

5963

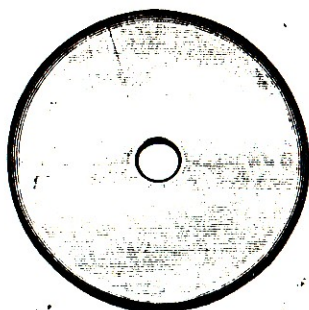 


5961

5960

82403


333

 94972

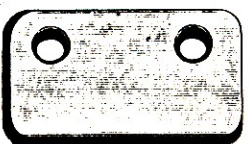

84118

 98601

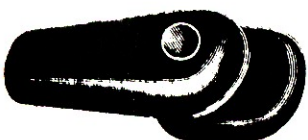

CONTENTS.

Parts complete for No. 45K48 Machine	...	...	Page 53
Parts Special to No. 45K57 Machine	...	...	58
Parts complete for No. 45K74 Machine	...	...	59
Parts Special to No. 45K75 Machine	...	...	63
Parts Special to No. 45K76 Machine	...	...	65
Parts complete for No. 45K87 Machine	...	...	68
Accessories	...	...	71
Bobbin Winders	...	...	72
Foot Lifters	...	...	73
Driving Attachment	...	...	74
Thread Unwinder	...	...	71
Obsolete Parts	...	...	75

ILLUSTRATED LIST OF PARTS

FOR

Nos. 45K48, 45K57, 45K74 to 45K76 and 45K87 MACHINES



In ordering from this List, the prefix and affix letters with the part number **MUST BE** quoted exactly as they are shown in the first column.

A number always indicates the same part in whatever List it may appear, or for whatever machine.

The prefix **SS** indicates Screws made only at Singer.

" " **NV** " Nuts made only at Singer.

" " **RR** " Rollers and Studs made only at Singer.

The affix Letters (where shown) indicate the style of finish, as follows:—

A. Hardened, Polished and Plated.

B. Polished and Plated.

C. Hardened only.

D. Polished only.

E. Soft, not Polished.

F. Hardened and Polished.

H. Blued.

J. Plated only.

K. Hardened and Plated.

L. Brass or Gilt.

M. Oxidised.

P. Japanned.

R. Parkersised.

T. Copper Plated.

In this series

1 to 1500 and 50001 to 51500 are Screw Numbers.

1501 " 1800 are Nut Numbers.

1801 " 2000 are Roller Numbers.

2001 " 50000 are numbers of machine parts, etc.

50001 " 100000 are number of machine parts, etc., made only at Singer.

Parts marked with an asterisk () are furnished only when the repairs are made at Factory.*

PARTS COMPLETE FOR No. 45K48 MACHINE

Cylinder Bed, Drop Feed, Needle Bar Link, Lifting Presser and Work Plate, for Darning and Patching Sacks.

No.	Plate	
*91444	—	Arm with 446c, 450c, 82499, 82549 and 91441
8582	778	" Dowel Pin (2)
118e	311	" Screw (3)
91615	1040	Arm Shaft
82549	1054	" " Bushing (front)
82499	777	" " " (back)
446c	311	" " " Set Screw for 82499
82400	1056	" " Oil Tube
144d	311	" " Screw
82402	775	Arm Side Cover
286d	311	" " " Thumb Screw
82403	1489	" " Spool Pin
91613	1061	Balance Wheel (two-speeds) with two 434c
434c	311	" " Set Screw
*91151	—	Bed (Cylinder) with 423c and 91442
94801	775	Crank Connecting Rod with 94802, 94872 and two 158e
*94802	—	" " " Cap
94872	—	" " " Oil Pad
158e	311	" " " Screw
SS313c	781	" " " Hinge Screw
SS45d	311	" " " " Set Screw
91233	776	Face Plate
SS45d	311	" " Screw (to attach to machine)
91234	—	Face Plate, complete, Nos. SS50f, 219f, 233d, 446c, 82449, 82450, 82455, 82502, 82503, 82525, 82551, 91233 and 91247
3032	785	Feed Cam with 446c
446c	311	" " Set Screw
3033	781	" " Connecting Link
375c	778	" " " Hinge Screw (2)
1518e	1080	" " " " Nut (2)

NO. 45K48 MACHINE PARTS.

No.	Plate
91713	1056
91160	780
704c	785
91161	775
375c	778
1518e	1080
82414	777
1128e	785
SS115d	777
*91162	—
91163	775
91565	—
91165	781
1259c	1060
91166	1057
91564	1054
1177c	1060
156f	311
91690	—
80557	783
80558	783
91691	1056
91238	—
149f	1060
2117	1035
149f	1060
91239	778
91021	775
91441	779
450c	1060
91022	783
158e	311
91240	1080
375c	778
1518e	1080
82520	782
156f	311
82521	782
226d	1060
82522	—
91241	781
91242	781
91243	781
94823	1041
Feed Dog	
"	Carrier
"	Screw
"	Forked Connection
"	"
"	Hinge Screw
"	"
"	Nut
"	Regulator
"	Hinge Screw
"	Thumb Screw
"	Rock Shaft
"	91162 with 91165 and 91166
"	91163 with 91564
"	Carrier Slide with 1259c
"	Set Screw
"	"
"	Steady Pin
"	Crank with 156f and 1177c
"	Clamping Screw
"	Position Screw
Lifting Presser Plunger	
"	Roller
"	"
"	Pin
"	91690 with 80557 and 80558
Lifting Presser Plunger Yoke	
"	Clamping Screw
"	"
"	Pin
"	Set Screw
"	91238 with three 149f
Needle Bar	
"	Bushing
"	Set Screw
"	Connection with two 158e
"	Clamping Screw
"	Link
"	"
"	Hinge Screw
"	"
"	Nut
Needle Clamp	
"	Screw
"	Thread Eyelet
"	"
"	82520 with 156f, 226d and 82521
Oil Hole Plug (Wood), large	
"	("), medium
"	("), small (3)
"	("), small, for Plunger

No.	Plane
91440	779
6489	311
1513j	1080
926c	311
1513j	1080
91025	780
94972	1489
91026	780
91171	775
91142	779
423c	1060
91172	781
11663	1081
1830	1060
453c	311
91651	1059
91247	1080
219f	311
91438	782
SS186d	785
1518e	1080
91652	1054
875	1055
446c	311
82510	1056
190f	1060
91711	—
SS326e	782
91248	780
91249	1080
SS329f	1060
1547c	785
95093	1469
95094	1469
91042	1469
91043	1469
233f	1469
95188	1469
95095	1469
SS377f	1469
95098	1469
Oscillating Rock Shaft with 91025, 94972 and two 91026	
" " Hinge Pin	Nut
" " " Nut	Screw Bearing
" " " " Screw Bearing	" Nut
" " " Steel Plate (bottom)	(top)
" " " Rivet	Rivet
Oscillating Shuttle Shaft	Bushing
" " " Set Screw	Set Screw
" " " Crank with 453c and 1830	Pin
" " " Pin	Roller and Stud
" " " Set Screw	Set Screw
Presser Bar (with squared end)	Automatic Thread Controller
" " Lifter	" "
" " Hinge Screw	" "
" " " Nut	" "
" " Lifting Bracket with 446c	Pin
" " " Pin	Set Screw
" " " Tension Release	" "
" " " Binding Screw	" "
" " " 91652 with 82510 and two 190f	" "
" " " Screw Bushing	" "
" " Spring	" "
Presser Foot	" "
" " Screw	" "
" " Nut	" "
Shuttle Bobbin	Cylinder
" " Hinge Pin	Latch Spring
" " " Screw	" "
" " Frame	Tension Spring
" " Adjusting Screw	" "
Shuttle (Cylinder) 2 1/2" diam., complete, Nos. 233f, SS377f	91042, 91043, 95093 to 95095 and 95188

No. 45K48 MACHINE PARTS

No.	Plate	
91737	—	Shuttle Driver ...
11863	1081	" " Pin ...
91251	1042	" " Thread Guard ...
223d	1060	" " " Screw ...
91738	780	Shuttle Driver, complete, Nos. 91251, 91737 and two 223d
91753	1043	Shuttle Race (Steel, hardened)
91315	777	" " Cap Spring ...
SS218f	785	" " " Screw ...
91409	782	" " Cover ...
SS318e	684	" " Position Screw Stud (2)
91153	1044	" " Ring ...
1302e	1060	" " " Screw (3)
SS317e	782	Tension Screw Stud ...
1560d	1080	" " " Regulating Thumb Nut ...
446c	311	" " " Set Screw ...
82445	780	" Spring ...
82446	785	" Washer (Felt) ...
82447	785	" " (Steel) ...
82448	785	" Wheel ...
82502	785	Tension, complete, Nos. SS317e, 1560d, 82445, 82448, two each 82446 and 82447
82551	1041	Thread Controlling Lever ...
82525	782	" " " Spring ...
82455	783	" " " Stop Pin ...
82450	780	Thread Eyelet ...
SS50f	311	" " Screw ...
82449	780	" Guard ...
233d	311	" " Screw ...
2102	785	Thread Retainer Disc ...
413e	311	" " Screw Stud ...
1560d	1080	" " " Regulating Thumb Nut ...
2103	780	" " Spring ...
82503	785	Thread Retainer, complete, Nos. 413e, 1560d, 2103 and two 2102

No. 45K48 MACHINE PARTS.

No.	Plate	
91705	1059	Thread Take-up Cam with SS320c and SS370c
91736	1059	" " Lifting Cam ...
704c	785	" " " " Screw (long)
191c	1060	" " " " " (short)
SS320c	1060	" " Set Screw ...
SS370c	1060	" " Timing Screw ...
91706	1059	" " 91705 with 191c, 704c and 91736
91257	778	" " Lever ...
SS22d	311	" " Hinge Screw ...
RR24	1080	" " Roller and Screw Stud ...
1519e	1080	" " " " " Nut
91258	—	" " 91257 with RR24 and 1519e
91714	777	Throat Plate for 91713 for Patching
91260	783	" " for Darning ...
231f	1080	" " Oil Hole Screw ...
180f	311	" " Screw (2) ...
91261	—	Work Plate ...
SS39d	311	" " Screw ...

PARTS COMPLETE FOR

No. 45K74 MACHINE

Cylinder Bed, No Feeding Mechanism, Needle Bar Link, Lifting Presser and Work Plate for Sack Darning.

PARTS SPECIAL TO

No. 45K57 MACHINE

FRICTION CONTROLLED BALANCE WHEEL

This machine is the same as 45K48 with the following exceptions:—

No.	Plate								
95189	1405	Balance Wheel	...	...	...	...	...	...	...
SS463d	1465	Clamp Stop Motion Clamp Screw	...	...	...	...	...	...	...
248f	1060	" " " Stop Screw	...	...	...	...	...	...	...
95145	1465	" " " Washer	...	...	...	...	...	...	...
95146	1465	" " " Flanged Bushing with two 434c	...	...	...	...	...	...	...
434c	311	" " " Set Screw	...	...	...	...	...	...	...
95190	—	Clamp Stop Motion, complete, Nos. 248f, SS463d, 95145 and 95146	...	...	...	...	...	...	...

No.	Plate								
*94810	—	Arm with 446c, 450c, 82499, 82549 and 91441	...	...	...	...	...	...	...
8582	778	" Dowel Pin (2)	...	...	...	...	...	...	...
118e	311	" Screw (3)	...	...	...	...	...	...	...
91615	1040	Arm Shaft	...	...	...	...	...	...	...
82499	777	" " Bushing (back)	...	...	...	...	...	...	...
82549	1054	" " " (front)	...	...	...	...	...	...	...
446c	311	" " " Set Screw for 82499	...	...	...	...	...	...	...
82400	1056	" " Oil Tube	...	...	...	...	...	...	...
144d	311	" " Screw	...	...	...	...	...	...	...
82402	775	Arm Side Cover	...	...	...	...	...	...	...
286d	311	" " Thumb Screw	...	...	...	...	...	...	...
82403	1489	" Spool Pin	...	...	...	...	...	...	...
91613	1061	Balance Wheel (two-speeds) with two 434c	...	...	...	...	...	...	...
434c	311	" " Set Screw	...	...	...	...	...	...	...
*94811	—	Bed (Cylinder) with 423c and 91442	...	...	...	...	...	...	...
94801	775	Crank Connecting Rod with 94802, 94872 and two 158e	...	...	...	...	...	...	...
*94802	—	" " " Cap	...	...	...	...	...	...	...
94872	—	" " " Oil Pad	...	...	...	...	...	...	...
158e	311	" " " Screw	...	...	...	...	...	...	...
SS313c	781	" " " Hinge Screw	...	...	...	...	...	...	...
SS45d	311	" " " Set Screw	...	...	...	...	...	...	...
94812	1040	Face Plate	...	...	...	...	...	...	...
SS45d	311	" " Screw (to attach to machine)	...	...	...	...	...	...	...
94813	—	Face Plate, complete, Nos. 219f, 233d, 446c, 82449, 82450, 82455, 82502, 82503, 82525, 82551, 94812, 94825, 94836 and two SS30f	...	...	...	...	...	...	...

No.	Plate	
94814	1041	Lifting Presser Plunger
94817	1041	" " " Buffer (Rubber)
94815	1041	" " " Pin
94816	1041	" " " Plug
94818	1041	" " " Roller
94819	1041	" " " " Pin
94820	—	Lifting Presser Plunger, complete, Nos. 94814 to 94816, 94818, 94819 and five 94817
94821	1041	Lifting Presser Plunger Bracket with two 1186f
1186f	1042	" " " Clamping Screw
94822	1041	" " " Spring
193d	1042	" " " " Screw
91021	775	Needle Bar
91441	779	" " " Bushing
450c	1060	" " " Set Screw
91022	783	" " " Connection with two 158e
158e	311	" " " Clamping Screw
91240	1080	" " " Link
375c	778	" " " " Hinge Screw
1518e	1080	" " " " " Nut
82520	782	Needle Clamp
156f	311	" " " Screw
82521	782	" " " Thread Eyelet
226d	1060	" " " " Screw
82522	—	" " " 82520 with 156f, 226d and 82521
91241	781	Oil Hole Plug (Wood), large
91242	781	" " " ("), medium
91243	781	" " " ("), small (5)
94823	1041	" " " ("), " for Plunger
91440	779	Oscillating Rock Shaft with 91025, 94972 and two 91026
6489	311	" " " Hinge Pin
1513j	1080	" " " " Nut
926c	311	" " " " Screw Bearing
1513j	1080	" " " " " Nut
91025	780	" " " Steel Plate (bottom)
94972	1489	" " " " (top)
91026	780	" " " " Rivet
91202	1040	Oscillating Shuttle Shaft
91442	779	" " " Bushing
423c	1042	" " " " Set Screw
91172	781	" " " Crank with 453c and 1850
11663	1081	" " " " Pin
1850	1060	" " " " Roller and Stud
453c	311	" " " " Set Screw

No.	Plate	
94824	1040	Presser Bar (with squared end)
94825	1041	" " " Automatic Thread Controller
219f	311	" " " " Screw
94826	1041	" " " Cushion Spring
91438	782	" " " Lifter
SS186d	785	" " " Hinge Screw
1518e	1080	" " " " Nut
94827	1041	" " " Lifting Bracket with two 1186d
1186d	1042	" " " Clamping Screw
94828	1041	" " " Sleeve
94829	1041	" " " Tension Release
157f	1060	" " " " Binding Screw (2)
SS425e	1044	" " " Screw Bushing
91248	780	" " " Spring
94830	1041	Presser Foot
SS329f	1080	" " " Screw
1547c	785	" " " Nut
95093	1469	Shuttle Bobbin
95094	1469	" " " Cylinder
91042	1469	" " " Hinge Pin
91043	1469	" " " Latch Spring
233f	1469	" " " " Screw
95188	1469	" " " Frame
95095	1469	" " " Tension Spring
SS377f	1469	" " " Adjusting Screw
95098	1469	Shuttle (Cylinder), 2 1/2" diam., complete, Nos. 233f, SS377f, 91042, 91043, 95093 to 95095 and 95188
94834	1042	Shuttle Driver
11663	1081	" " " Pin
91251	1042	" " " Thread Guard
223d	1060	" " " " Screw
94835	1042	Shuttle Driver, complete, Nos. 91251, 94834, and two 223d
91753	1043	Shuttle Race (Steel, hardened)
91315	777	" " " Cap Spring
SS218f	785	" " " " Screw
SS318e	684	" " " Position Screw Stud (2)
91153	1044	" " " Ring
1302e	1042	" " " " Screw (3)
SS317e	782	Tension Screw Stud
1560d	1080	" " " " Regulating Thumb Nut
446c	311	" " " " Set Screw

No.	Plate
82115	Tension Spring
82146	" - Washer (Felt)
82147	" " (Steel)
82148	" Wheel
82502	Tension, complete, Nos. SS317c, 1560d, 82145, 82148, two each 82146 and 82147
94836	Tension Thread Guide
SS30f	" " Screw
82551	Thread Controlling Lever
82525	" " Spring
82155	" " Stop Pin
82450	Thread Eyelet
SS30f	" " Screw
82149	Guard
233d	" " Screw
2102	Thread Retainer Disc
413e	" " Screw Stud
1560d	" " Regulating Thumb Nut
2103	" " Spring
82503	Thread Retainer, complete, Nos. 413e, 1560d, 2103 and two 2102
94837	Thread Take-up Cam with SS320c and SS370c
94838	" " Lifting Cam
191c	" " Screw
SS320c	" " Set Screw
SS370c	" " Timing Screw
94839	" " 94837 with 94838 and three 191c
91257	" " Lever
SS22d	" " Hinge Screw
RK24	" " Roller and Screw Stud
1519e	" " " " Nut
91258	" " 91257 with RK24 and 1519e
94840	Throat Plate
180f	" " Screw (3)
94841	Work Plate
SS39d	" " Screw

PARTS SPECIAL TO

No. 45K75 MACHINE



Cylinder Bed, no Feeding Mechanism, Needle Bar Link, Lifting Presser and Work Plate, Friction Controlled Balance Wheel, Fast and Loose Pulleys and Belt Shipper, for Sack Darning.

This machine is the same as 45K74 with the following exceptions.—

No.	Plate
*95154	—
	Arm with 446c, 450c, 82499, 82549 and 91441
95141	1466
	Balance Wheel ...
95142	1466
	" Loose Pulley ...
95143	—
	Balance Wheel, complete, Nos. 248f, SS463d, 95141, 95142, 95145 and 95146, for fast and loose Pulley
SS463d	1465
	Clamp Stop Motion Clamp Screw
248f	1060
	" " " Stop Screw ...
95145	1465
	" " " Washer ...
95146	1465
	" " " Flanged Bushing with two 434c ...
. 434c	311
	" " " Set Screw ...
95190	—
	Clamp Stop Motion, complete, Nos. 248f, SS463d, 95145 and 95146
95147	1466
	Driving Attachment Lever
1093c	1060
	" " Adjusting Screw ...
1623c	1060
	" " " Nut ...
95148	1057
	" " Belt Shifter ...
363c	1060
	" " Clamping Screw ...
95149	1057
	" " Rod ...
363c	1060
	" " " Rod ...
	" " " Clamping Screw ...
91302	1082
	" " Bracket ...
SS38c	1082
	" " Screw ...
91306	1057
	" " Friction Pad Leather ...
693d	1082
	" " Hinge Screw ...
NN29e	1082
	" " Nut ...

PARTS SPECIAL TO No. 45K75 MACHINE.

No.	Plate	
95150	1057	Driving Attachment Lever Spring
7958	1057	" " " Pin
95152	—	Driving Attachment Lever, complete, Nos. NN28c, SS38c, 693d, 1093c, 1623c, 91302, 91306, 95147, 95149, 95150, two each 7958, 95148 and three 363c
84275	—	Driving Attachment Shaft Pulley (sectional, grooved) 10" diam., with two 597c
597c	1060	" " " Clamping Screw
91296	1061	Driving Attachment Starting Lever
91297	1061	" " " Bracket
91298	1057	" " " Hinge Pin
—	—	" " " Screw (Wood) 1 1/4" No. 15
91299	1061	" " " Nos. 91296 to 91298 and three Wood Screws 1 1/4" No. 15
17877	1061	Driving Attachment Starting Lever Pitman Rod (lower)
17878	1061	" " " " (upper)
17879	1061	" " " " Clamp with two 161d
161d	311	" " " " Clamp Screw
17880	1061	Driving Attachment Starting Lever Pitman Rod, complete, Nos. 17877 to 17879
91460	—	Driving Attachment Starting Lever and Pitman, complete, Nos. 17880 and 91299
95153	—	Driving Attachment, complete, Nos. 84275, 91460, 95143 and 95152

PARTS SPECIAL TO No. 45K76 MACHINE

FRICTION CONTROLLED BALANCE WHEEL

This machine is the same as 45K74 with the following exceptions.—

No.	Plate	
95189	1465	Balance Wheel
SS463d	1465	Clamp Stop Motion Clamp Screw
248f	1060	" " " Stop Screw
95145	1465	" " " Washer
95146	1466	" " " Flanged Bushing with two 434c
434c	311	" " " Set Screw
95190	—	Clamp Stop Motion, complete, Nos. 248f, SS463d, 95145 and 95146

PARTS COMPLETE FOR No. 45K87 MACHINE

Flat Bed, No Feeding Mechanism, Needle Bar Link
and Lifting Presser, for Darning Oil Press Cloths

No.	Plate	
*94853	—	Arm with 440c, 450c, 82499, 82549 and 91441
94854	1057	" Cover ...
180f	311	" Screw (2) ...
8582	778	" Dowel Pin (2) ...
118e	311	" Screw (3) ...
91615	1040	Arm Shaft ...
82549	1054	" Bushing (front) ...
82499	777	" " (back) ...
446c	311	" Set Screw for 82499 ...
82400	1056	" Oil Tube ...
144d	311	" Screw ...
82402	775	Arm Side Cover ...
286d	311	" Thumb Screw ...
82403	1489	" Spool Pin ...
91613	1061	Balance Wheel (two-speeds) with two 434c
434c	311	" Set Screw ...
*91003	—	Bed ...
94801	775	Crank Connecting Rod with 94802, 94872 and two 158e
*94802	—	" Cap ...
94872	—	" Oil Pad ...
158e	311	" Screw ...
SS313c	781	" Hinge Screw ...
SS45d	311	" Set Screw ...
94855	—	Face Plate ...
SS45d	311	" Screw (to attach to machine) ...
94856	—	Face Plate, complete, Nos. SS50f, 219f, 233d, 446c, 82449, 82450, 82455, 82502, 82503, 82525, 82551, 91247 and 94856
94858	1056	Lifting Presser Dash Pot ...
94859	1056	" Plunger ...
397e	1060	" Screw ...

No.	Plate	
94814	1041	Lifting Presser Plunger ...
94817	1041	" Buffer (Rubber) ...
94815	1041	" Pin ...
94816	1041	" Plug ...
94818	1041	" Roller ...
94819	1041	" Pin ...
94820	—	Lifting Presser Plunger, complete, Nos. 94814 to 94816, 94818, 94819 and five 94817 ...
94857	1054	Lifting Presser Plunger Bracket with two 1186f
1186f	1042	" Clamping Screw ...
94822	1041	" Spring ...
193d	1042	" Screw ...
91021	775	Needle Bar ...
91441	779	" Bushing ...
450c	1060	" Set Screw ...
91022	783	" Connection with two 158e
158e	311	" Clamping Screw ...
91240	1080	" Link ...
375c	778	" Hinge Screw ...
1518e	1080	" Nut ...
82520	782	Needle Clamp ...
156f	311	" Screw ...
82521	782	" Thread Eyelet ...
226d	1060	" Screw ...
82522	—	" 82520 with 156f, 226d and 82521
91241	781	Oil Hole Plug (Wood), large
91242	781	" " ("), medium
91243	781	" " ("), small (5)
94823	1041	" " ("), small, for Plunger
91439	1081	Oscillating Rock Shaft with 91025, 94972 and two 91026
6489	311	" Hinge Pin
1513j	1080	" Nut
926c	311	" Screw Bearing
1513j	1080	" Nut
91025	780	" Steel Plate (bottom)
94972	1489	" (top)
91026	780	" Rivet
91028	776	Oscillating Shuttle Shaft
91029	1081	" Bushing
SS39c	311	" Set Screw
91030	1055	" Collar with 453c
453c	311	" Set Screw

No.	Plate	Oscillating Shuttle Shaft	Crack with 453c and 1850	91055	Shuttle Race	Position Pin	Shuttle Race	Position Pin
91031	1058	"	"	94862	"	"	"	"
111663	1081	"	"		"	"	"	"
1850	1060	"	"		"	"	"	"
453c	311	"	"		"	"	"	"
94824	1040	Presser Bar (with squared end)	"	91057	1058	Shuttle Race Slide (back)	"	"
91247	1080	"	"	180f	311	"	"	"
219f	311	"	"	91058	1058	"	"	"
98601	1489	"	"	91059	1058	"	"	"
94860	1054	"	"	337d	1060	"	"	"
SS5186d	785	"	"	91060	—	"	"	"
1518e	1080	"	"			"	"	"
94861	1054	"	"	SS317e	782	Tension Screw Stud	"	"
1186d	1042	"	"	1560d	1080	"	"	"
SS425e	1044	"	"	446c	311	"	"	"
91248	780	"	"	82445	780	"	"	"
		"	"	82446	785	"	"	"
		"	"	82447	785	"	"	"
		"	"	82448	785	"	"	"
91249	1080	Presser Foot	"	82502	785	"	"	"
SS329f	1060	"	"			"	"	"
1547c	785	"	"			"	"	"
95093	1469	Shuttle Bobbin	"			"	"	"
95094	1469	"	"	82551	1041	Thread Controlling Lever	"	"
91042	1469	"	"	82525	782	"	"	"
91043	1469	"	"	82455	783	"	"	"
233f	1469	"	"			"	"	"
95188	1469	"	"	82450	780	Thread Eyelet	"	"
95095	1469	"	"	SS50f	311	"	"	"
SS377f	1469	"	"	82449	780	"	"	"
95098	1469	"	"	233d	311	"	"	"
		Shuttle (Cylinder) 2 1/2" diam., complete, Nos. 233f, SS377f, 91042, 91043, 95093 to 95095 and 95188	"			"	"	"
91597	1081	Shuttle Driver	"	2102	785	Thread Retainer Disc	"	"
11663	1081	"	"	413e	311	"	"	"
		"	"	1560d	1080	"	"	"
		"	"	2103	780	"	"	"
91049	1055	Shuttle Race with 91051, 91052 and 91055	"	82503	785	Thread Retainer, complete, Nos. 413e, 1560d, 2103 and two 2102	"	"
94973	—	"	"			"	"	"
SS32f	1055	"	"			"	"	"
NN8e	1055	"	"			"	"	"
91050	1081	"	"			"	"	"
91051	1055	"	"			"	"	"
91052	1055	"	"			"	"	"
91053	1081	"	"			"	"	"
41d	1060	"	"			"	"	"
91054	1055	"	"			"	"	"
401f	1060	"	"			"	"	"

No.	Plate	
RR24	1080	Thread Take-up Lever Roller and Screw Stud
1519e	1080	" " " " Nut
94866	—	" " " " 94865 with RR24 and 1519e
94867	1056	Throat Plate
180f	311	" " Screw (2)
82550	—	Drip Pan

Accessories

No.	Plate	
—	—	Instruction Book
938e	1060	Machine Bolt with 1524e, 3" x 1/4" (4), for 45K48, 45K57 and 45K74 to 45K76 Machines
6055	1056	Machine Bolt Washer (4) for 45K48, 45K57 and 45K74 to 45K76 Machines
84118	1489	Machine Button with 84151 and Wood Screw 1 1/4" No. 9 R.H.B. for 45K87 Machine
—	—	Needles (6)
36578	—	Oilier
11831	—	Screw Driver (large)
25538	—	" " (Shuttle Tension)
95093	1262	Shuttle Bobbin (5)
80107	1056	Wrench for 1547

Thread Unwinder

No.	Plate	
27623	1401	Spool Pin
84148	1401	" Rest with 448c
95126	1401	" Weight 4" dia.
27625	1401	Thread Eyelet Rod
448c	311	" " Set Screw
27626	1401	" " Wire
27627	—	Thread Eyelet, complete, Nos. 27625 and 27626
—	—	Screw (Wood) 1 1/4" No. 10 (for fixing to Table)
95125	1401	Thread Unwinder, complete, Nos. 27623, 27627, 84148, 95126 and two Wood Screws 1 1/4" No. 10

Bobbin Winders

BOBBIN WINDER (Friction) for Fast Wheel and S.D.A. Machines

No.	Plate				
91718	1040	Bracket	...	...	...
SS56d	311	" Screw	...	...	...
91719	1464	Frame	...	...	...
32d	1040	" Hinge Screw	...	...	...
5960	1489	Friction Wheel (Leather)	...	...	...
5961	1489	" Washer	...	...	...
333d	1489	" " Screw	...	...	...
91446	1464	Spindle with 15072	...	...	...
15072	1464	" Bobbin Position Pin	...	...	...
5963	1489	" Flange	...	...	...
91725	1040	Frame, complete, Nos. 333d, 5960, 5961, 5963, 91446 and 91719	...	...	...
82537	1040	Spring	...	...	...
161d	311	" Screw	...	...	...
82538	1040	" Washer	...	...	...
91720	—	Bobbin Winder , complete, Nos. 32d, 161d, 82537, 82538, 91718 and 91725	...	...	...

BOBBIN WINDER (Swinging Automatic, Right Hand) for 95093

No.	Plate				
27540	1487	Base	...	...	...
—	—	" Screw (Wood) 1" No. 7 R.H.	...	...	...
27302	1487	Frame	...	...	...
50356b	1487	" Hinge Screw	...	...	...
1620j	1487	" " Nut	...	...	...
27303	1487	" Spring	...	...	...
27541	1487	Pulley	...	...	...
27330	1487	Spindle	...	...	...
27306	1488	Spool Pin	...	...	...
27307	1488	" Stand	...	...	...
27308	—	" " 27307 with 418d, 1562j, 2106, 10141, 27306, two 2455 and two Wood Screws 1" No. 10	...	...	...
95197	1487	Stop Latch	...	...	...
35d	1487	" Hinge Screw	...	...	...
2455	1488	Tension Disc	...	...	...
1562j	1488	" Regulating Thumb Nut	...	...	...
418d	1488	" Screw Stud	...	...	...
10141	1488	" Spring	...	...	...
2106	1488	Thread Guide	...	...	...
95198	1488	Bobbin Winder, Nos. 35d, 1620j, 27302, 27303, 27330, 27540, 27541, 50356b, 95197 and two Wood Screws 1" No. 7 R.H.	...	...	...
95199	—	Bobbin Winder (Swinging Automatic, right hand), complete, Nos. 27308 and 95199	...	...	...

Foot Lifters

FOOT LIFTER for No. 45K48 and 45K87 Machines

No.	Plate				
91716	1061	Arm Lever	...	...	...
694d	1082	" Hinge Screw	...	...	...
91457	1061	Foot Lever with 176c	...	...	...
91459	1061	" Bracket	...	...	...
17881	1061	" " Hinge Pin	...	...	...
—	—	" " Screw (Wood) 1 1/2" No. 15	...	...	...
91458	1061	" Extension	...	...	...
176c	311	" Set Screw	...	...	...
17882	1061	" Spring	...	...	...
91454	—	Foot Lever only, complete, Nos. 17881, 17882, 91457 to 91459 and two Wood Screws 1 1/2" No. 15	...	...	...
91453	1061	Foot Lever Pitman Connecting Hook (7" long)	...	...	...
17877	1061	" " Rod (lower)	...	...	...
17878	1061	" " " (upper)	...	...	...
17879	1061	" " " Clamp with two 161d	...	...	...
161d	311	" " " Screw	...	...	...
17880	1061	Foot Lever Pitman Rod, complete, Nos. 17877 to 17879	...	...	...
91455	—	Foot Lever, complete, Nos. 17880 and 91454	...	...	...
91456	—	Foot Lifter , complete, Nos. 694d, 91453, 91455 and 91716	...	...	...

FOOT LIFTER for No. 45K74 Machine

No.	Plate				
94842	1061	Arm Lever	...	...	...
694d	1082	" Hinge Screw	...	...	...
91457	1061	Foot Lever with 176c	...	...	...
91459	1061	" Bracket	...	...	...
17881	1061	" " Hinge Pin	...	...	...
—	—	" " Screw (Wood) 1 1/2" No. 15	...	...	...
91458	1061	" Extension	...	...	...
176c	311	" Set Screw	...	...	...
17882	1061	" Spring	...	...	...
91454	—	Foot Lever only, complete, Nos. 17881, 17882, 91457 to 91459, and two Wood Screws 1 1/2" No. 15	...	...	...
91453	1061	Foot Lever Pitman Connecting Hook (7" long)	...	...	...
17877	1061	" " Rod (lower)	...	...	...
17878	1061	" " " (upper)	...	...	...
17879	1061	" " " Clamp with two 161d	...	...	...
161d	311	" " " Screw	...	...	...
17880	1061	Foot Lever Pitman Rod, complete, Nos. 17877 to 17879	...	...	...
91455	—	Foot Lever, complete, Nos. 17880 and 91454	...	...	...
94843	—	Foot Lifter , complete, Nos. 694d, 91453, 91455 and 94842	...	...	...

Driving Attachment for

Nos. 45K48, 45K74 and 45K87 Machines

No.	Plate	
91614	1082	Balance Wheel with 434c, 431c, 91475 and four 402e ...
91723	1082	" " Friction Pulley (two-speeds) with 448c and 91294
91294	1082	" " " Centre Bearing ...
91475	—	" " " Ring (Cardboard) ...
402e	1080	" " " Screw ...
448c	311	" " " Set Screw ...
434c	311	" " " Set Screw (long) ...
431c	1080	" " " " (short) ...
91721	1082	Lever with 7958 and 91399 ...
91302	1082	" " Bracket ...
SS38c	1082	" " Screw ...
91303	1082	" " Centre Plug (Wood) ...
427c	1082	" " " Adjusting Screw ...
1508e	1082	" " " Nut ...
91306	1057	" " Friction Pad (Leather) ...
693d	1082	" " Hinge Screw ...
NN28e	1082	" " " Nut ...
91307	780	" " Spring ...
161c	311	" " Screw ...
7958	1057	" " " Pin ...
91722	—	Lever, complete, Nos. 161c, 427c, 1508e, 91302, 91303, 91307, 91721 and two SS38c ...
84275	—	Shaft Pulley (sectional, grooved) 10" diam., with two 597c
597c	1060	" " Clamping Screw ...
91296	1061	Starting Lever ...
91297	1061	" " Bracket ...
91298	1057	" " " Hinge Pin ...
—	—	" " " Screw (Wood) 1 1/4" No. 15 ...
91299	1061	" " Nos. 91296 to 91298 and three Wood Screws 1 1/4" No. 15
17877	1061	" " Pitman Rod (lower) ...
17878	1061	" " " " (upper) ...
17879	1061	" " " Clamp with two 161d ...
161d	311	" " " Screw ...
17880	1061	Starting Lever Pitman Rod, complete, Nos. 17877 to 17879 ...
91460	—	Starting Lever and Pitman, complete, Nos. 17880 and 91299 ...
91724	—	Driving Attachment, complete, Nos. NN28e, 693d, 84275, 91460, 91614, 91722 and 91723 ...

Obsolete Parts

No.	Plate	
91408	1082	Arm Shaft for 45K48 Machine ...
82399	—	" " Bushing (front) for 45K48 Machine ...
82404	1082	Balance Wheel (two-speeds) with two 434c for 45K48 Machine ...
91002	—	" " (two-speeds, heavy) with two 434c for 45K48 Machine
91425	782	Feed Dog for 45K48 Machine ...
91164	—	Feed Rock Shaft 91163 with 91167 for 45K48 Machine ...
91167	785	" " " Crank with 448c for 91164 ...
91411	—	Lifting Presser Plunger for 91412 ...
91412	781	" " " 91411 with 80557 and 80558 for 45K48 Machine
91244	778	Presser Bar (with squared end) for 45K48 Machine ...
91245	778	" " Lifting Bracket with 446c for 45K48 Machine ...
91481	—	" " " 446c for 91482 ...
91482	—	" " " 91481 with 82510 and two 190f for 45K48 Machine
91041	783	Shuttle Cylinder for 91046 and 91179 ...
95080	1262	" " " 95088 ...
94831	1042	" " " 94833 ...
91042	1469	" " " Hinge Pin for 91046, 91179, 94833 and 95088 ...
91043	783	" " " Latch Spring for 91046, 91179 and 94833 ...
95081	1262	" " " " 95088 ...
233f	311	" " " Screw for 91046, 91179 and 94833 ...
230f	1060	" " " " 95088 ...
91250	—	" " " Driver for 91252 ...
91252	—	" " " complete, Nos. 91250, 91251 and two 223d for 45K48 Machine
91178	783	Shuttle Frame for 91179 and 94833 ...
91044	834	" " " 91046 ...
95087	1262	" " " 95088 ...
91443	—	" " " Race (Cast Iron) for 45K48 Machine ...
91712	684	" " " (") " 45K48 Machine ...
91430	684	" " " Ring for 45K48 Machine ...
91472	—	" " " 45K48 Machine ...
91045	783	" " " Tension Spring for 91046 and 91179 ...
95083	1262	" " " 95088 ...
94832	1042	" " " 94833 ...
SS46f	785	" " " Adjusting Screw for 91046 and 91179 ...
SS377f	1042	" " " " 94833 ...
82536	782	Thread Controlling Lever for 45K48 Machine ...
82543	—	" " " 45K48 Machine ...
91407	—	Thread Take-up Cam with SS320c and 1065f for 91413 ...
91255	1080	" " " Lifting Cam for 91413 ...
91413	1080	" " " 91407 with 191c, 704c and 91255 for 45K48 Machine
91331	—	Throat Plate for 91425 for Patching for 45K48 Machine ...

BOBBIN WINDER (Swinging Automatic, Right Hand) for No. 95093

[illegible]

Numerical List of Parts

No.	Plate	
NN8e	1035	Shuttle Race Bearing Clamping Screw Nut for 45K87 Machine ...
SS22d	311	Thread Take-up Lever Hinge Screw ...
RR24	1080	Thread Take-up Lever Roller and Screw Stud for 91258 and 94866 ...
NN28e	1082	Driving Attachment Lever Hinge Screw Nut for 91724 and 95152 ...
32d	1040	Bobbin Winder Frame Hinge Screw for 84121 and 91720 ...
SS32f	1035	Shuttle Race Bearing Clamping Screw for 45K87 Machine ...
35d	1060	Bobbin Winder Stop Latch Hinge Screw for 84121 and 95198 ...
SS38c	1082	Driving Attachment Lever Bracket Screw for 91722 and 95152 ...
SS39c	311	Oscillating Shuttle Shaft Bushing Set Screw for 45K87 Machine ...
SS39d	311	Work Plate Screw for 45K48, 45K57 and 45K74 to 45K76 Machines ...
41d	1060	Shuttle Race Cap Spring Screw for 94862 ...
SS45d	311	Crank Connecting Rod Hinge Screw Set Screw
SS45d	311	Face Plate Screw (to attach to machine) ...
SS46f	785	Shuttle Tension Spring Adjusting Screw for 91046 and 91179 (Obsolete)
SS50f	311	Thread Eyelet Screw for 91234, 94813 and 94856 ...
SS50f	311	Tension Thread Guide Screw for 94813 ...
SS56d	311	Bobbin Winder Bracket Screw for 91720 ...
SS115d	777	Feed Regulator Thumb Screw for 45K48 and 45K57 Machines ...
118e	311	Arm Screw ...
144d	311	Arm Shaft Screw ...
149f	1060	Lifting Presser Plunger Yoke Clamping Screw for 91239 ...
149f	1060	Lifting Presser Plunger Yoke Set Screw for 91239 ...
156f	311	Feed Rock Shaft Crank Position Screw for 91564 ...
156f	311	Needle Clamp Screw for 82222 ...
157f	1060	Presser Bar Lifting Bracket Tension Release Binding Screw for 45K74 to 45K76 Machines ...

No.	Plate	
158e	311	Crank Connecting Rod Cap Screw for 94801
158e	311	Needle Bar Connection Clamping Screw for 91022
161c	311	Driving Attachment Lever Spring Screw for 91722
161d	311	Bobbin Winder Spring Screw for 91720
161d	311	Driving Attachment Starting Lever Pitman Rod Clamp Screw for 17879
161d	311	Foot Lifter Foot Lever Pitman Rod Clamp Screw for 17879
176c	311	Foot Lifter Foot Lever Extension Set Screw for 91457
180f	311	Arm Cover Screw for 45K87 Machine
180f	311	Shuttle Race Slide (back) Screw for 45K87 Machine
180f	311	Throat Plate Screw
SS186d	785	Presser Bar Lifter Hinge Screw
190f	1060	Presser Bar Lifting Bracket Tension Release Binding Screw for 91482 and 91711
191c	1060	Thread Take-up Cam Lifting Cam Screw for 91413, 91706, 94839 and 94864
198d	1042	Lifting Presser Plunger Bracket Spring Screw for 45K74 to 45K76 and 45K87 Machines
SS218f	785	Shuttle Race Cap Spring Screw for 45K48, 45K57 and 45K74 to 45K76 Machines
219f	311	Presser Bar Automatic Thread Controller Screw for 91234, 94813 and 94856
220f	1060	Shuttle Cylinder Latch Spring Screw for 95088 (Obsolete)
223d	1060	Shuttle Driver Thread Guard Screw for 91252, 91738 and 94835
226d	1060	Needle Clamp Thread Eyelet Screw for 82522
231f	1080	Throat Plate Oil Hole Screw for 45K48 and 45K57 Machines
233d	311	Thread Guard Screw for 91234, 94813 and 94856
233f	1469	Shuttle Cylinder Latch Spring Screw for 91046, 91179, 94833 and 95098
248f	1060	Clamp Stop Motion Clamp Stop Screw for 95143 and 95190
286d	311	Arm Side Cover Thumb Screw
SS313c	781	Crank Connecting Rod Hinge Screw
SS317e	782	Tension Screw Stud for 82502
SS318e	684	Shuttle Race Position Screw Stud for 45K48, 45K57 and 45K74 to 45K76 Machines
SS320c	1060	Thread Take-up Cam Set Screw for 91407, 91705 and 94837

No.	Plate	
SS326e	782	Presser Bar Screw Bushing for 45K48 and 45K57 Machines
SS329f	1060	Presser Foot Screw
333d	1489	Bobbin Winder Friction Wheel Washer Screw for 91725
337d	1060	Shuttle Race Slide (front) Spring Screw for 91060
363c	1060	Driving Attachment Lever Belt Shifter Clamping Screw for 95152
363c	1060	Driving Attachment Lever Belt Shifter Rod Clamping Screw for 95152
SS370c	1060	Thread Take-up Cam Timing Screw for 91705 and 94837
375c	778	Feed Connecting Link Hinge Screw for 45K48 and 45K57 Machines
375c	778	Feed Forked Connection Hinge Screw for 45K48 and 45K57 Machines
375c	778	Needle Bar Connection Link Hinge Screw
SS377f	1469	Shuttle Tension Spring Adjusting Screw for 94833, 95088 and 95098
397e	1060	Lifting Presser Dash Pot Screw for 45K87 Machine
401f	1060	Shuttle Race Loop Spreader Screw for 94973
402e	1060	Driving Attachment Balance Wheel Friction Pulley Ring Screw for 91614
413e	311	Thread Retainer Screw Stud for 82503
418d	1060	Bobbin Winder Tension Screw Stud for 27308
423c	1042	Oscillating Shuttle Shaft Bushing Set Screw for 91151 and 94811
SS425c	1044	Presser Bar Screw Bushing for 45K74 to 45K76 and 45K87 Machines
427c	1082	Driving Attachment Lever Centre Plug Adjusting Screw for 91722
434c	311	Balance Wheel Set Screw for 82404, 91002 and 91613
434c	311	Clamp Stop Motion Flanged Bushing Set Screw for 95146
434c	311	Driving Attachment Balance Wheel Set Screw for 91614
446c	311	Arm Shaft Bushing Set Screw for 91444, 94810, 94853 and 95154
446c	311	Feed Cam Set Screw for 3032
446c	311	Presser Bar Lifting Bracket Set Screw for 91245, 91481 and 91632
446c	311	Tension Screw Stud Set Screw for 91234, 94813 and 94856

No.	Plate	
448c	311	Driving Attachment Balance Wheel Friction Pulley Set Screw for 91723 ...
448c	311	Thread Unwinder Thread Eyelet Rod Set Screw for 84148 ...
450c	1060	Needle Bar Bushing Set Screw for 91444, 94810, 94853 and 95154 ...
451c	1060	Driving Attachment Balance Wheel Set Screw for 91614 ...
453c	311	Oscillating Shuttle Shaft Crank Set Screw for 91031 and 91172 ...
453c	311	Oscillating Shuttle Shaft Collar Set Screw for 91030 ...
SS463d	1465	Clamp Stop Motion Clamp Screw for 95143 and 95199 ...
597c	1060	Driving Attachment Shaft Pulley Clamping Screw for 84275 ...
693d	1082	Driving Attachment Lever Hinge Screw for 91724 and 95152 ...
694d	1082	Foot Lifter Arm Lever Hinge Screw for 91456 and 94843 ...
704c	785	Feed Dog Screw for 45K48 and 45K57 Mchs. Thread Take-up Cam Lifting Cam Screw for 91413 and 91706 ...
926c	311	Oscillating Rock Shaft Hinge Pin Screw Bearing ...
938e	1060	Machine Bolt with 1524e for 45K48, 45K57 and 45K74 to 45K76 Machines (Accessories) ...
1093c	1060	Driving Attachment Lever Adjusting Screw for 95152 ...
1128e	785	Feed Regulator Hinge Screw for 45K48 and 45K57 Machines ...
1177c	1060	Feed Rock Shaft Crank Clamping Screw for 91564 ...
1186d	1042	Presser Bar Lifting Bracket Clamping Screw for 94827 and 94861 ...
1186f	1042	Lifting Presser Plunger Bracket Clamping Screw for 94821 and 94857 ...
1259c	1060	Feed Rock Shaft Carrier Slide Set Screw for 91165 ...
1302e	1060	Shuttle Race Ring Screw for 45K48, 45K57, and 45K74 to 45K76 Machines ...
1508e	1082	Driving Attachment Lever Centre Plug Adjusting Screw Nut for 91722 ...
1513j	1080	Oscillating Rock Shaft Hinge Pin Nut ...
1513j	1080	Oscillating Rock Shaft Hinge Pin Screw Bearing Nut ...
1518e	1080	Feed Connecting Link Hinge Screw Nut for 45K48 and 45K57 Machines ...

No.	Plate	
1518e	1080	Feed Forked Connection Hinge Screw Nut for 45K48 and 45K57 Machines ...
1518e	1080	Needle Bar Connection Link Hinge Screw Nut ...
1518e	1080	Presser Bar Lifter Hinge Screw Nut ...
1519e	1080	Thread Take-up Lever Roller and Screw Stud Nut for 91258 and 94966 ...
1547c	785	Presser Foot Screw Nut ...
1560d	1080	Tension Screw Stud Regulating Thumb Nut for 82502 ...
1560d	1080	Thread Retainer Screw Stud Regulating Thumb Nut for 82503 ...
1562j	1060	Bobbin Winder Tension Regulating Thumb Nut for 27308 ...
1620j	1487	Bobbin Winder Frame Hinge Screw Nut for 95198 ...
1623c	1060	Driving Attachment Lever Adjusting Screw Nut for 95152 ...
1650	1060	Oscillating Shuttle Shaft Crank Roller and Stud for 91031 and 91172 ...
2102	785	Thread Retainer Disc for 82503 ...
2103	780	Thread Retainer Spring for 82503 ...
2106	1488	Bobbin Winder Thread Guide for 27308 ...
2117	1055	Lifting Presser Plunger Yoke Pin for 45K48 and 45K57 Machines ...
2455	1464	Bobbin Winder Tension Disc for 27308 ...
3032	785	Feed Cam with 446c for 45K48 and 45K57 Machines ...
3033	781	Feed Connecting Link for 45K48 and 45K57 Machines ...
5960	1489	Bobbin Winder Friction Wheel (Leather) for 91725 ...
5961	1489	Bobbin Winder Friction Wheel Washer for 91725 ...
5963	1489	Bobbin Winder Spindle Flange for 91725 ...
6055	1056	Machine Bolt Washer for 43K48, 45K57 and 45K74 to 45K76 Machines (Accessories) ...
6489	311	Oscillating Rock Shaft Hinge Pin ...
7958	1057	Driving Attachment Lever Spring Pin for 95152 ...
7958	1057	Driving Attachment Lever Spring Screw Pin for 91721 ...
8575	1055	Presser Bar Lifting Bracket Pin for 45K48 and 45K57 Machines ...
8582	778	Arm Dowel Pin ...
10141	1464	Bobbin Winder Tension Spring for 27308 ...
11663	1081	Oscillating Shuttle Shaft Crank Pin ...
11663	1081	Shuttle Driver Pin ...

No.	Plate	
11831	—	Screw Driver (large) ... (Accessories)
15072	1464	Bobbin Winder Spindle Bobbin Position Pin for 91446 ...
17877	1061	Driving Attachment Starting Lever Pitman Rod (lower) for 17880 ...
17877	1061	Foot Lifter Foot Lever Pitman Rod (lower) for 17880 ...
17878	1061	Driving Attachment Starting Lever Pitman Rod (upper) for 17880 ...
17878	1061	Foot Lifter Foot Lever Pitman Rod (upper) for 17880 ...
17879	1061	Driving Attachment Starting Lever Pitman Rod with two 161d for 17880 ...
17879	1061	Foot Lifter Foot Lever Pitman Rod Clamp with two 161d for 17880 ...
17880	1061	Driving Attachment Starting Lever Pitman Rod, complete, Nos. 17877 to 17879 for 91460 ...
17880	1061	Foot Lifter Foot Lever Pitman Rod, complete, Nos. 17877 to 17879 for 91455 ...
17881	1061	Foot Lifter Foot Lever Bracket Hinge Pin for 91454 ...
17882	1061	Foot Lifter Foot Lever Spring for 91454 ...
25538	—	Screw Driver (Shuttle Tension) (Accessories)
27302	1487	Bobbin Winder Frame for 84121 and 95198 ...
27303	1464	Bobbin Winder Frame Spring for 84121 and 95198 ...
27304	—	Bobbin Winder Pulley for 84121 (Obsolete)
27306	1488	Bobbin Winder Spool Pin for 27308 ...
27307	1488	Bobbin Winder Spool Stand for 27308 ...
27308	—	Bobbin Winder Spool Stand 27307 with 418d, 1562j, 2106, 10141, 27306, two 2455 and two Wood Screws 1" No. 10 for 84122 and 95199 ...
27330	1487	Bobbin Winder Spindle for 95198 ...
27540	1487	Bobbin Winder Base for 95198 ...
27541	1487	Bobbin Winder Pulley for 95198 ...
27623	1401	Thread Unwinder Spool Pin for 95125 ...
27625	1401	Thread Unwinder Thread Eyelet Rod for 27627 ...
27626	1401	Thread Unwinder Thread Eyelet Wire for 27627 ...
27627	—	Thread Unwinder Thread Eyelet, complete, Nos. 27625 and 27626 for 95125 ...
36578	—	Oil ... (Accessories)
50356b	1487	Bobbin Winder Frame Hinge Screw for 95198 ...
80107	1056	Wrench for 1547 ... (Accessories)

No.	Plate	
80557	783	Lifting Presser Plunger Roller for 91412 and 91691
80558	783	Lifting Presser Plunger Roller Pin for 91412 and 91691
82399	—	Arm Shaft Bushing (front) for 45K48 Machine (Obsolete)
82400	1056	Arm Shaft Oil Tube
82402	775	Arm Side Cover
82403	1489	Arm Spool Pin
82404	1082	Balance Wheel (two-speeds) with two 434c for 45K48 Machine (Obsolete)
82414	777	Feed Regulator for 45K48 and 45K57 Machines
82445	780	Tension Spring for 82502
82446	785	Tension Washer (Felt) for 82502
82447	785	Tension Washer (Steel) for 82502
82448	785	Tension Wheel for 82502
82449	780	Thread Guard for 91234, 94813 and 94856
82450	780	Thread Eyelet for 91234, 94813 and 94856
82455	783	Thread Controlling Lever Stop Pin for 91234, 94813 and 94856
82499	777	Arm Shaft Bushing (back) for 91444, 94810 94853 and 95154
82502	785	Tension, complete, Nos. SS317e, 1560d, 82445, 82448, two each 82446 and 82447 for 91234, 94813 and 94856
82503	785	Thread Retainer, complete, Nos. 413e, 1560d, 2103 and two 2102 for 91234, 94813 and 94856
82510	1056	Presser Bar Lifting Bracket Tension Release for 91482 and 91711
82520	782	Needle Clamp for 82522
82521	782	Needle Clamp Thread Eyelet for 82522
82522	—	Needle Clamp 82520 with 156f, 226d and 82521
82525	782	Thread Controlling Lever Spring for 91234, 94813 and 94856
82536	782	Thread Controlling Lever for 45K48 Machine (Obsolete)
82537	1040	Bobbin Winder Spring for 91720
82538	1040	Bobbin Winder Spring Screw Washer for 91720
82543	—	Thread Controlling Lever for 45K48 Machine (Obsolete)
82549	1054	Arm Shaft Bushing (front) for 91444, 94810, 94853 and 95154
82550	—	Drip Pan for 45K87 Machine
82551	1041	Thread Controlling Lever for 91234, 94813 and 94856

No.	Plate	
84104	1464	Bobbin Winder Base for 84121 (Obsolete)
84118	1489	Machine Button with 84151 and Wood Screw 1 1/4" No. 9 R.H.B. for 45K87 Machine
84119	1464	Bobbin Winder Spindle for 84121 (Accessories)
84120	1464	Bobbin Winder Stop Latch for 84121 (Obsolete)
84121	—	Bobbin Winder Nos. 32d, 35d, 27302 to 27304, 84104, 84119, 84120 and two Wood Screws 1" No. 7 R.H. for 84122 (Obsolete)
84122	—	Bobbin Winder (Swinging Automatic, right hand), complete, Nos. 27308 and 84121 for 95093 (Obsolete)
84148	1401	Thread Unwinder Spool Rest with 448c for 95125 (Obsolete)
84275	—	Driving Attachment Shaft Pulley (sectional, grooved), 10" diam. with two 587c for 91724 and 95153
91002	—	Balance Wheel (two-speeds, heavy) with two, 434c for 45K48 Machine (Obsolete)
*91003	—	Bed for 45K87 Machine (Obsolete)
91021	775	Needle Bar ...
91022	783	Needle Bar Connection with two 158e
91025	780	Oscillating Rock Shaft Steel Plate (bottom) for 91439 and 91440
91026	780	Oscillating Rock Shaft Steel Plate Rivet for 91439 and 91440
91028	776	Oscillating Shuttle Shaft for 45K87 Machine
91029	1081	Oscillating Shuttle Shaft Bushing for 45K87 Machine
91030	1055	Oscillating Shuttle Shaft Collar with 453c for 45K87 Machine
91031	1058	Oscillating Shuttle Shaft Crank with 453c and 1850 for 45K87 Machine
91041	783	Shuttle Cylinder for 91046 and 91179 (Obsolete)
91042	1469	Shuttle Cylinder Hinge Pin for 91046, 91179, 94833, 95088 and 95098
91043	1469	Shuttle Cylinder Latch Spring for 91046, 91179, 94833 and 95098
91044	834	Shuttle Frame for 91046 (Obsolete)
91045	783	Shuttle Tension Spring for 91046 and 91179 (Obsolete)
91049	1055	Shuttle Race with 91051, 91052 and 91055 for 94973 (Obsolete)
91050	1081	Shuttle Race Cap for 94862
91051	1055	Shuttle Race Cap Pin for 91049
91052	1055	Shuttle Race Cap Pin for 91049

No.	Plate	
91053	1081	Shuttle Race Cap Spring for 94862
91054	1055	Shuttle Race Loop Spreader for 94973
91055	1055	Shuttle Race Position Pin for 91049
91057	1058	Shuttle Race Slide (back) for 45K87 Machine
91058	1058	Shuttle Race Slide (front) for 91060
91059	1058	Shuttle Race Slide (front) Spring for 91060
91060	—	Shuttle Race Slide 91058 with 91059 and two 337d for 45K87 Machine
*91151	—	Bed (Cylinder) with 423c and 91442 for 45K48 and 45K57 Machines
91153	1044	Shuttle Race Ring for 45K48, 45K57 and 45K74 to 45K76 Machines
91160	780	Feed Dog Carrier for 45K48 and 45K57 Machines
91161	775	Feed Forked Connection for 45K48 and 45K57 Machines
*91162	—	Feed Rock Shaft for 91163
91163	775	Feed Rock Shaft 91162 with 91165 and 91166 for 91164 and 91565
91164	—	Feed Rock Shaft 91163 with 91167 for 45K48 Machine
91165	781	Feed Rock Shaft Carrier Slide with 1259c for 91163 (Obsolete)
91166	1057	Feed Rock Shaft Carrier Slide with 1259c for 91163
91167	785	Feed Rock Shaft Carrier Slide Steady Pin for 91163
91171	775	Feed Rock Shaft Crank with 448c for 91164 (Obsolete)
91172	781	Oscillating Shuttle Shaft for 45K48 and 45K57 Machines
91178	783	Oscillating Shuttle Shaft Crank with 453c and 1850 for 45K48, 45K57 and 45K74 to 45K76 Machines
91202	1040	Shuttle Frame for 91179 and 94833 (Obsolete)
91233	776	Oscillating Shuttle Shaft for 45K74 to 45K76 Machines
91234	—	Face Plate for 91234
91238	—	Face Plate, complete, Nos. SS50f, 219f, 238d, 446c, 82449, 82450, 82455, 82502, 82503, 82525, 82551, 91233 and 91247 for 45K48 and 45K57 Machines
91239	778	Lifting Presser Plunger Yoke for 91239
91240	1080	Lifting Presser Plunger Yoke 91238 with three 149f for 45K48 and 45K57 Machines
91241	781	Needle Bar Connection Link
91242	781	Oil Hole Plug (Wood), large
91242	781	Oil Hole Plug (Wood), medium
91243	781	Oil Hole Plug (Wood), small

No.	Plate	
91244	778	Presser Bar (with squared end) for 45K48 Machine ... (Obsolete)
91245	778	Presser Bar Lifting Bracket with 446c for 45K48 Machine ... (Obsolete)
91247	1080	Presser Bar Automatic Thread Controller for 91234 and 94856 ...
91248	780	Presser Bar Spring ...
91249	1080	Presser Foot for 45K48, 45K57 and 45K87 Machines ...
91250	—	Shuttle Driver for 91252 ... (Obsolete)
91251	1042	Shuttle Driver Thread Guard for 91252, 91738 and 94835 ...
91252	—	Shuttle Driver, complete, Nos. 91250, 91251 and two 223d for 45K48 Machine (Obs.)
91255	1080	Thread Take-up Cam Lifting Cam for 91413 (Obsolete)
91257	778	Thread Take-up Lever for 91258 ...
91258	—	Thread Take-up Lever 91257 with RP24 and 1519e for 45K48, 45K57 and 45K74 to 45K76 Machines ...
91260	783	Throat Plate for Darning for 45K48 and 45K57 Machines ...
91261	—	Work Plate for 45K48 and 45K57 Machines
91294	1082	Driving Attachment Balance Wheel Friction Pulley Centre Bearing for 91723 ...
91296	1061	Driving Attachment Starting Lever for 91299
91297	1061	Driving Attachment Starting Lever Bracket for 91299 ...
91298	1057	Driving Attachment Starting Lever Bracket
91299	1061	Hinge Pin for 91299 ...
91302	1082	Driving Attachment Starting Lever, Nos. 91296 to 91298 and three Wood Screws 1½ No. 15 for 91460 ...
91303	1082	Driving Attachment Lever Bracket for 91722 and 95152 ...
91306	1057	Driving Attachment Lever Centre Plug (Wood) for 91722 ...
91307	780	Driving Attachment Lever Friction Pad (Leather) for 91721 and 95152 ...
91315	777	Driving Attachment Lever Spring for 91722
91331	—	Shuttle Race Cap Spring for 45K48, 45K57 and 45K74 to 45K76 Machines ...
91407	—	Throat Plate for 91425 for Patching, for 45K48 Machine ... (Obsolete)
91408	1082	Thread Take-up Cam with SS320c and 1065c for 91413 ... (Obsolete)
		Arm Shaft for 45K48 Machine ... (Obsolete)

No.	Plate	
91409	782	Shuttle Race Cover for 45K48 and 45K57 Machines ...
91411	—	Lifting Presser Plunger for 91412 (Obsolete)
91412	781	Lifting Presser Plunger 91411 with 80557 and 80558 for 45K48 Machine (Obsolete)
91413	1080	Thread Take-up Cam 91407 with 191c, 704c, and 91255 for 45K48 Machine (Obsolete)
91425	782	Feed Dog for 45K48 Machine (Obsolete)
91430	684	Shuttle Race Ring for 45K48 Machine (Obs.)
91438	782	Presser Bar Lifter for 45K48, 45K57 and 45K74 to 45K76 Machines ...
91439	1081	Oscillating Rock Shaft with 91025, 94972 and two 91026 for 45K87 Machine ...
91440	779	Oscillating Rock Shaft with 91025, 94972 and two 91026 for 45K48, 45K57 and 45K74 to 45K76 Machines ...
91441	779	Needle Bar Bushing for 91444, 94810, 94853 and 95154 ...
91442	779	Oscillating Shuttle Shaft Bushing for 91151 and 94811 ...
91443	—	Shuttle Race (Cast Iron) for 45K48 Machine (Obsolete)
*91444	—	Arm with 446c, 450c, 82499, 82549 and 91441 for 45K48 and 45K57 Machines
91446	1464	Bobbin Winder Spindle with 15072 for 91725
91453	1061	Foot Lifter Foot Lever Pitman Connecting Hook (7" long) for 91456 and 94843 ...
91454	—	Foot Lifter Foot Lever only, complete, Nos. 17881, 17882, 91457 to 91459 and two Wood Screws 1½ No. 15 for 91455 ...
91455	—	Foot Lifter Foot Lever, complete, Nos. 17880 and 91454 for 91456 and 94843 ...
91456	—	Foot Lifter, complete, Nos. 694d, 91453, 91455 and 91716 for 45K48 and 45K87 Machines ...
91457	1061	Foot Lifter Foot Lever with 176c for 91454
91458	1061	Foot Lifter Foot Lever Extension for 91454
91459	1061	Foot Lifter Foot Lever Bracket for 91454 ...
91460	—	Driving Attachment Starting Lever and Pitman, complete, Nos. 17880 and 91299 for 91724 and 95153 ...
91472	—	Shuttle Race Ring for 45K48 Machine (Obs.)
91475	—	Driving Attachment Balance Wheel Friction Pulley Ring (Cardboard) for 91614 ...
91481	—	Presser Bar Lifting Bracket with 446c for 91482 ... (Obsolete)

No.	Plate	
91482	—	Presser Bar Lifting Bracket 91481 with 82510 and two 1906 for 45K48 Machine (Obs.)
91664	1054	Feed Rock Shaft Crank with 1566 and 1177c for 91565 ...
91565	—	Feed Rock Shaft 91163 with 91564 for 45K48 and 45K57 Machines ...
91597	1081	Shuttle Driver for 45K87 Machine ...
91613	1061	Balance Wheel (two-speeds) with two 434c for 45K48, 45K74 and 45K87 Machines
91614	1082	Driving Attachment Balance Wheel with 434c, 451c, 91475 and four 402e for 91724 ...
91615	1040	Arm Shaft ...
91651	1059	Presser Bar (with squared end) for 45K48 and 45K57 Machines ...
91652	1054	Presser Bar Lifting Bracket with 446c for 91711 ...
91690	—	Lifting Presser Plunger for 91691 ...
91691	1056	Lifting Presser Plunger 91690 with 80557 and 80558 for 45K48 and 45K57 Machines ...
91705	1059	Thread Take-up Cam with SS320c and SS370c for 91706 ...
91706	1059	Thread Take-up Cam 91705 with 191c, 704c and 91736 for 45K48 and 45K57 Machines
91711	—	Presser Bar Lifting Bracket 91652 with 82510 and two 1906 for 45K48 and 45K57 Mchs.
91712	684	Shuttle Race (Cast Iron) for 45K48 Machine (Obsolete)
91713	1056	Feed Dog for 45K48 and 45K57 Machines ...
91714	777	Throat Plate for 91713 for Patching, for 45K48 and 45K57 Machines ...
91716	1061	Foot Lifter Arm Lever for 91456 ...
91718	1040	Bobbin Winder Bracket for 91720 ...
91719	1464	Bobbin Winder Frame for 91725 ...
91720	—	Bobbin Winder, complete, Nos. 32d, 161d, 82537, 82538, 91718 and 91725 for Fast Wheel and S.D.A. Machines ...
91721	1082	Driving Attachment Lever with 7958 and 91306 for 91722 ...
91722	—	Driving Attachment Lever, complete, Nos. 161c, 427c, 1508e, 91302, 91303, 91307, 91721 and two SS38c for 91724 ...
91723	1082	Driving Attachment Balance Wheel Friction Pulley (two-speeds) with 448c and 91294 for 91724 ...
91724	—	Driving Attachment, complete, Nos. NV28e, 693d, 84275, 91460, 91614, 91722 and 91723 for 45K48, 45K74 and 45K87 Machines ...

No.	Plate	
91725	1040	Bobbin Winder Frame, complete, Nos. 332d, 5960, 5961, 5963, 91446 and 91719 for 91720 ...
91736	1059	Thread Take-up Cam Lifting Cam for 91706
91737	—	Shuttle Driver for 91738 ...
91738	780	Shuttle Driver, complete, Nos. 91251, 91737 and two 223d for 45K48 and 45K57 Machines ...
91733	1043	Shuttle Race (Steel, hardened) for 45K48, 45K37 and 45K74 to 45K76 Machines ...
94801	775	Crank Connecting Rod with 94802, 94872 and two 158e ...
*94802	—	Crank Connecting Rod Cap for 94801 ...
*94810	—	Arm with 446c, 450c, 82499, 82549 and 91441, for 45K74 and 45K76 Machines
*94811	—	Bed (Cylinder) with 423c and 91442 for 45K74 to 45K76 Machines ...
94812	1040	Face Plate for 94813 ...
94813	—	Face Plate, complete, Nos. 219f, 233d, 446c, 82449, 82450, 82455, 82502, 82503, 82525, 82551, 94812, 94825, 94836 and two SS50f for 45K74 to 45K76 Machines ...
94814	1041	Lifting Presser Plunger for 94820 ...
94815	1041	Lifting Presser Plunger Pin for 94820 ...
94816	1041	Lifting Presser Plunger Plug for 94820 ...
94817	1041	Lifting Presser Plunger Buffer (Rubber) for 94820 ...
94818	1041	Lifting Presser Plunger Roller for 94820 ...
94819	1041	Lifting Presser Plunger Roller Pin for 94820 ...
94820	—	Lifting Presser Plunger, complete, Nos. 94814 to 94816, 94818, 94819 and five 94817 for 45K74 to 45K76 and 45K87 Machines
94821	1041	Lifting Presser Plunger Bracket with two 1186f for 45K74 to 45K76 Machines ...
94822	1041	Lifting Presser Plunger Bracket Spring for 45K74 to 45K76 and 45K87 Machines ...
94823	1041	Oil Hole Plug (Wood), small, for Plunger ...
94824	1040	Presser Bar (with squared end) for 45K74 to 45K76 and 45K87 Machines ...
94825	1041	Presser Bar Automatic Thread Controller for 94813 ...
94826	1041	Presser Bar Cushion Spring for 45K74 to 45K76 Machines ...
94827	1041	Presser Bar Lifting Bracket with two 1186d for 45K74 to 45K76 Machines ...
94828	1041	Presser Bar Lifting Bracket Sleeve for 45K74 to 45K76 Machines ...

No.	Plate	
94829	1041	Presser Bar Lifting Bracket Tension Release for 45K74 to 45K76 Machines ...
94830	1041	Presser Foot for 45K74 to 45K76 Machines ...
94831	1042	Shuttle Cylinder for 94833 (Obsolete)
94832	1042	Shuttle Tension Spring for 94833 (Obsolete)
94834	1042	Shuttle Driver for 94835 ...
94835	1042	Shuttle Driver, complete, Nos. 91251, 94834 and two 223d for 45K74 to 45K76 Mchs.
94836	1041	Tension Thread Guide for 94813 ...
94837	1043	Thread Take-up Cam with SS320c and SS370c for 94839 and 94864 ...
94838	1043	Thread Take-up Cam Lifting Cam for 94839
94839	1043	Thread Take-up Cam 94837 with 94838 and three 191c for 45K74 to 45K76 Machines ...
94840	1044	Throat Plate for 45K74 to 45K76 Machines ...
94841	—	Work Plate for 45K74 to 45K76 Machines ...
94842	1061	Foot Lifter Arm Lever for 94843 ...
94843	—	Foot Lifter, complete, Nos. 694d, 91453, 91455 and 94842 for 45K74 Machine ...
*94853	—	Arm with 446c, 450c, 82499, 82549 and 91441 for 45K87 Machine ...
94854	1057	Arm Cover for 45K87 Machine ...
94855	—	Face Plate for 94856 ...
94856	—	Face Plate, complete, Nos. SS50f, 219f, 233d, 446c, 82449, 82450, 82455, 82502, 82503, 82525, 82531, 91247 and 94855 for 45K87 Machine ...
94857	1054	Lifting Presser Plunger Bracket with two 1186f for 45K87 Machine ...
94858	1056	Lifting Presser Dash Pot for 45K87 Machine ...
94859	1056	Lifting Presser Dash Pot Plunger for 45K87 Machine ...
94860	1054	Presser Bar Lifter for 45K87 Machine ...
94861	1054	Presser Bar Lifting Bracket with two 1186d for 45K87 Machine ...
94862	—	Shuttle Race (Adjustable), complete, Nos. 41d, 91050, 91053 and 94973 for 45K87 Machine ...
94863	1059	Thread Take-up Cam Lifting Cam for 94864
94864	1059	Thread Take-up Cam 94837 with 94863 and three 191c for 45K87 Machine ...
94865	1055	Thread Take-up Lever for 94866 ...
94866	—	Thread Take-up Lever 94865 with RR24 and 1519e for 45K87 Machine ...
94867	1056	Throat Plate for 45K87 Machine ...
94872	—	Crank Connecting Rod Cap Oil Pad for 94801

No.	Plate	
94972	1489	Oscillating Rock Shaft Steel Plate (top) for 91439 and 91440 ...
94973	—	Shuttle Race 91049 with 91054 and two 401f for 94862 ...
95080	1262	Shuttle Cylinder for 95088 (Obsolete)
95081	1262	Shuttle Cylinder Latch Spring for 95088 (Obsolete)
95083	1262	Shuttle Tension Spring for 95088 (Obsolete)
95087	1262	Shuttle Frame for 95088 ...
95093	1469	Shuttle Bobbin for 95098 ...
95094	1469	Shuttle Cylinder for 95098 ...
95095	1469	Shuttle Tension Spring for 95098 ...
95098	1469	Shuttle (Cylinder) 2 1/2" diam., complete, Nos. 233f, SS377f, 91042, 91043, 95093 to 95095 and 95188 ...
95125	1401	Thread Unwinder, complete, Nos. 27623, 27627, 84148, 95126 and two Wood Screws 1 1/4" No. 10 ...
95126	1401	Thread Unwinder Spool Weight, 4" dia., for 95125 ...
95141	1466	Balance Wheel for 95143 ...
95142	1466	Balance Wheel Loose Pulley for 95143 ...
95143	—	Balance Wheel, complete, Nos. 248f, SS463d, 95141, 95142, 95145 and 95146, for fast and loose Pulley, for 95153 ...
95145	1465	Clamp Stop Motion Clamp Washer for 95143 and 95190 ...
95146	1465	Clamp Stop Motion Flanged Bushing with two 434c, for 95143 and 95190 ...
95147	1466	Driving Attachment Lever for 95152 ...
95148	1057	Driving Attachment Lever Belt Shifter for 95152 ...
95149	1057	Driving Attachment Lever Belt Shifter Rod for 95152 ...
95150	1057	Driving Attachment Lever Spring for 95152
95152	—	Driving Attachment Lever, complete, Nos. NV28e, SS38c, 693d, 1093c, 1623c, 91302, 91306, 95147, 95149, 95150, two each 7958, 95148 and three 363c for 95153 ...
95153	—	Driving Attachment, complete, Nos. 84275, 91460, 95143 and 95152 for 45K75 Machine
*95154	—	Arm with 446c, 450c, 82499, 82549 and 91441 for 45K75 Machine
95188	1469	Shuttle Frame for 95098 ...

No.	Plate	
95189	1465	Balance Wheel for 45K57 and 45K76 Machines
95190	—	Clamp Stop Motion, complete, Nos. 248f, SS463d, 95145 and 95146 for 45K57, 45K75 and 45K76 Machines
95197	1487	Bobbin Winder Stop Latch for 95198
95198	1488	Bobbin Winder, Nos. 35d, 1620j, 27302, 27303, 27330, 27540, 27541, 50356b, 95197 and two Wood Screws 1" No. 7 R.H. for 95199
95199	—	Bobbin Winder (Swinging Automatic, right hand), complete, Nos. 27308 and 95198 for 95093
98601	1489	Presser Bar Cushion Spring for 45K87 Machine