 


Illustrated List of Parts

 
for

Nos. 45K57, 45K75, 45K76
and 45K87 MACHINES

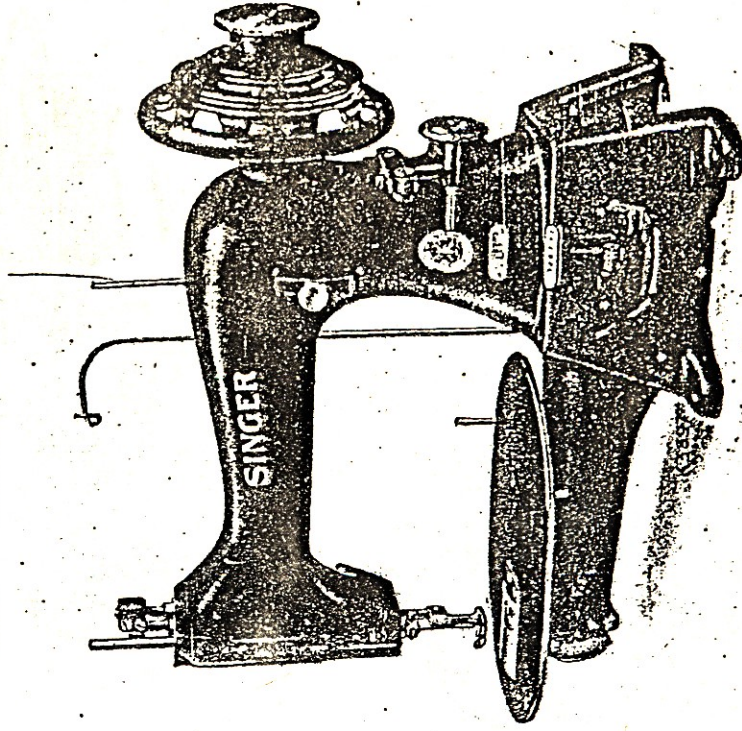


45K57 Machine


The Singer Manufacturing Company

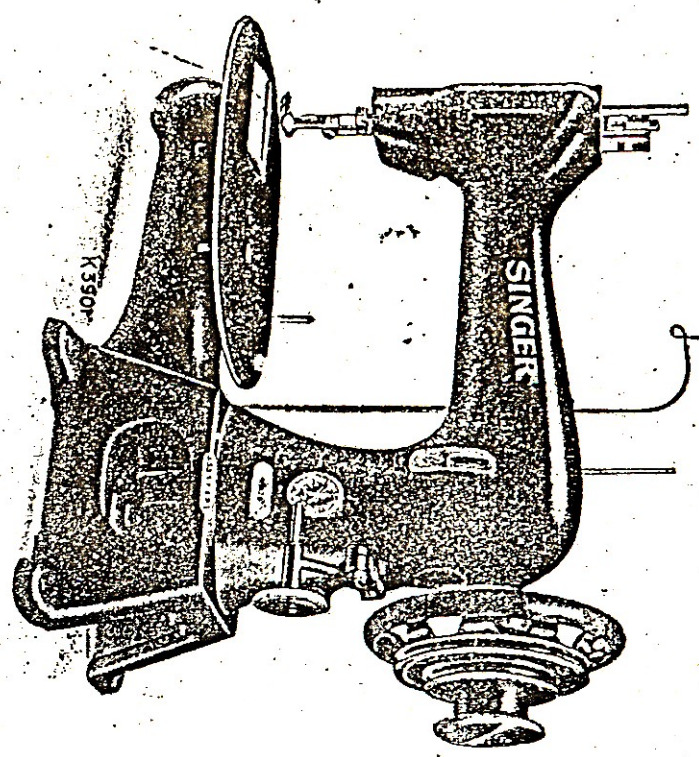

45K76 Machine

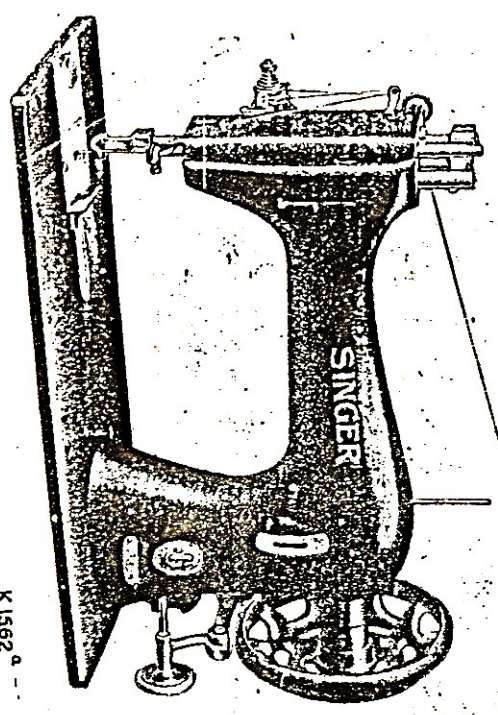 


45K87 Machine

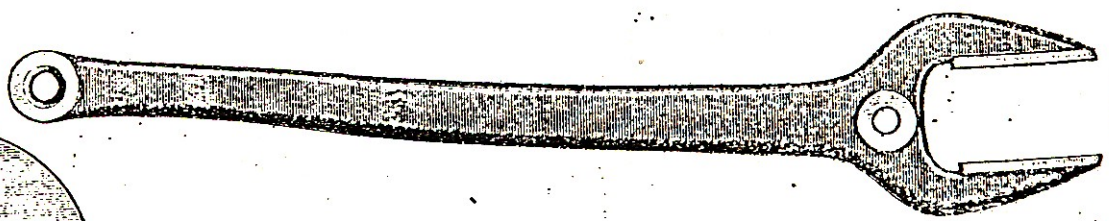 


91161



 91021

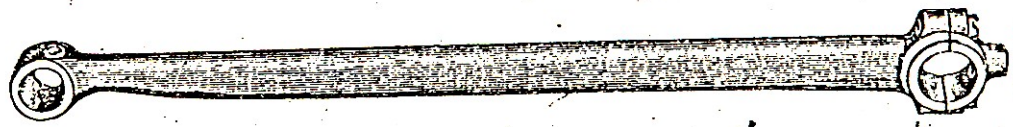


94801

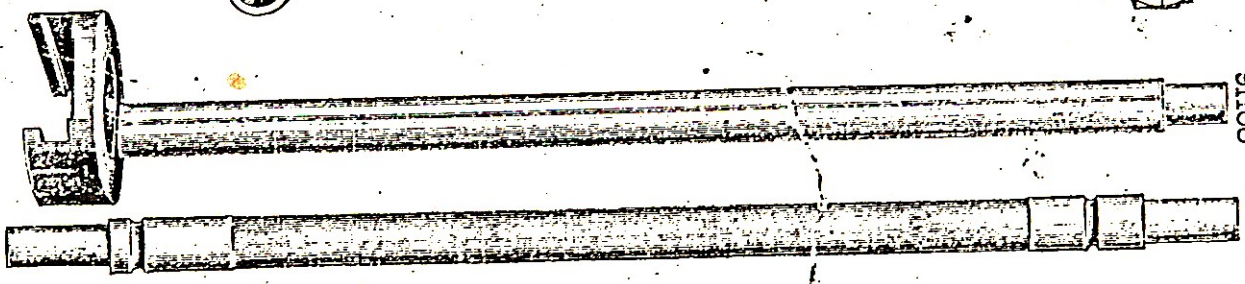 

91163

 91171

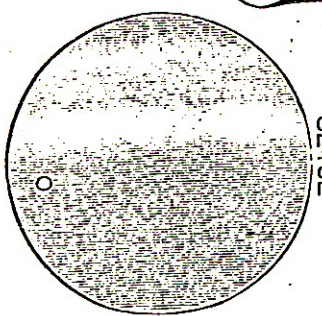

82402

CONTENTS

Parts complete for No. 45K57 Machine	...	...	Page 45
Parts special to No. 45K75 Machine	...	...	55
Parts complete for No. 45K76 Machine	...	...	50
Parts complete for No. 45K87 Machine	...	...	57
Accessories	...	...	62
Bobbin Winders	...	...	63
Driving Attachment	...	...	65
Foot Lifters	...	...	64
Obsolete Parts	...	...	66
Thread Unwinder	...	...	62
Numerical List of Parts	...	...	67

Parts complete for No. 45K57 Machine

A number always indicates the same part in whatever List it may appear, or for whatever machine.

A. Hardened, Polished, Nickel Plated and Buffed.

- Z.J. Nickel and Chromium Plated.
Z.T. Copper and Chromium Plated.

Parts complete for No. 45K57 Machine

No.	Plate	Arm with 446c, 430c, 15404, 82100, 82310, 01441 and two 15405	*01444	—	Arm with 446c, 430c, 15404, 82100, 82310, 01441 and two 15405
8582.	1740	" Dowel Pin (2)	...	...	...
118e	1601	" Screw (3)	...	...	...
01615	1040	Arm Shaft	...	...	...
82310	1054	" Bushing (front)	...	...	...
82100	777	" " (back)	...	...	...
446c	1002	" " Set Screw for 82100	...	...	...
82100	1056	" Oil Tube	...	...	...
144c	1601	" Screw	...	...	...
82402	775	Arm Side Cover	...	...	...
51224d	1602	" " Thumb Screw	...	...	...
82103	1480	" Spool Pin	...	...	...
05180	1465	Balance Wheel	...	...	...
*91161	—	Bed (Cylinder) with 423c and 01442	...	...	...
SS4634j	1465	Clamp Stop Motion Clamp Screw	...	...	...
248f	1060	" " Stop Screw	...	...	...
95145	1465	" " Washer	...	...	...
95146	1465	" " Flanged Bushing with two 431c	...	...	...
431c	1602	" " Set Screw	...	...	...
95100	—	Clamp Stop Motion, complete Nos. 248f, SS4634j 05144	...	...	...
		95146 and 95180	...	...	...
94801	775	Crank Connecting Rod with 94802, 94872 and two 135c	...	...	...
*94802	—	" " Cap	...	...	...
94872	1743	" " Oil Pad	...	...	...
135c	1601	" " Screw	...	...	...
98627	1743	" " Hinge Stud	...	...	...
08614	1743	" " Cotter Pin	...	...	...
1668c	1743	" " Nut	...	...	...
91233	776	Face Plate	...	...	...
SS45d	1601	" " Screw (to attach to machine)	...	...	...
91234	—	Face Plate, complete, Nos. SS50f, 210f, 233d, 440c, 82110, 82450, 82455, 82502, 82503, 82525, 82551, 91233 and 948	...	...	...

No. 45K57 MACHINE PARTS

No.	Plate		No.	Plate	
3032	1750	Feed Cam with 446c	82520	1031	Needle Clamp
446c	1602	" " Set Screw	82522	—	" " 82520 with 150f, 50406d and 82521
52185	1031	" Connecting Link	150f	1601	" " Screw
375c	1602	" " Hinge Screw (2)	82521	1031	" " Thread Eyelet
1518e	1603	" " " Nut (2)	50106d	1601	" " " Screw
98680	2334	Feed Dog	91241	1750	Oil Hole Plug (wood, large)
91160	779	" " Carrier	91242	1750	" " (" medium)
701c	1602	" " Screw	91243	1750	" " (" small) (5)
91161	775	" Forked Connection	94323	1041	" " (" small), for Plunger
375c	1602	" " Hinge Screw	98639	1769	Oscillating Rock Shaft with 98630, 98637, two each SS37e and 1099c
1518e	1603	" " " Nut	98042	779	" " " Hinge Pin
82414	777	" Regulator	1613j	1603	" " " " Nut
1128e	1602	" " Hinge Screw	SS531c	1769	" " " " Screw Bearing
SS115d	1601	" Thumb Screw	1513j	1603	" " " " " Nut
*91162	—	" Rock Shaft	98030	1769	" " " " Steel Plate (bottom)
91163	775	" " 91162 with 91165 and 91166	98037	1769	" " " " (top)
91565	—	" " 91163 " 91564	SS37e	1769	" " " " Binding Screw
91165	1750	" " Carrier Slide with 1259c	1698c	1769	" " " " " Lock Nut
1259c	1060	" " " Set Screw	98041	—	Oscillating Rock Shaft, complete, Nos. 1668c, 98014, 98627 and 98639
91166	1057	" " " Steady Pin	91171	775	Oscillating Shuttle Shaft
91564	1034	" " Crank with 156f and 1177c	91442	1769	" " " Bushing
1177c	1060	" " Clamping Screw	423c	1060	" " " " Set Screw
156f	1601	" " " Position Screw	91172	1750	" " " " Crank with 453c and 1850
91690	—	Lifting Presser Plunger	11663	1031	" " " " Pin
91691	1030	" " " 91690 with 80537 and 80558	1850	1603	" " " " Roller and Stud
80557	1749	" " " " Pin	453c	1602	" " " " Set Screw
80558	1749	" " " " " Pin	91651	1749	Presser Bar (with squared end)
91238	—	Lifting Presser Plunger Yoke	91438	1750	" " " Lifter
91230	779	" " " 91238 with three 149f	SS186d	1601	" " " Hinge Screw
149f	1060	" " " Clamping Screw	1618e	1603	" " " " Nut
2117	1053	" " " Pin	91652	1034	" " " Lifting Bracket with 446c
149f	1060	" " " " Set Screw	91711	—	" " " 91052 with 82510 and two 190f
91021	775	Needle Bar	8573	1053	" " " " Pin
91441	779	" " Bushing	446c	1003	" " " " Set Screw
4504	1060	" " " Set Screw	82510	1036	" " " " Tension Release
91022	779	" " Connection with two 158e	190f	1001	" " " " Binding Screw
158e	1601	" " " Clamping Screw	SS320e	1751	" " " Screw Bushing
91240	1751	" " " Link	91248	779	" " " Spring
375c	1602	" " " " Hinge-Screw	91249	1751	Presser Foot
1518e	1603	" " " " " Nut	SS320f	1603	" " " Screw
			1547c	1751	" " " Nut

No. 43K57 MACHINE PARTS

No.	Plate		No.	Plate	
82520	1031	Needle Clamp	82520	1031	Needle Clamp
82522	—	" " 82520 with 150f, 50406d and 82521	82522	—	" " 82520 with 150f, 50406d and 82521
150f	1601	" " Screw	150f	1601	" " Screw
82521	1031	" " Thread Eyelet	82521	1031	" " Thread Eyelet
50106d	1601	" " " Screw	50106d	1601	" " " Screw
91241	1750	Oil Hole Plug (wood, large)	91241	1750	Oil Hole Plug (wood, large)
91242	1750	" " (" medium)	91242	1750	" " (" medium)
91243	1750	" " (" small) (5)	91243	1750	" " (" small) (5)
94323	1041	" " (" small), for Plunger	94323	1041	" " (" small), for Plunger
98639	1769	Oscillating Rock Shaft with 98630, 98637, two each SS37e and 1099c	98639	1769	Oscillating Rock Shaft with 98630, 98637, two each SS37e and 1099c
98042	779	" " " Hinge Pin	98042	779	" " " Hinge Pin
1613j	1603	" " " " Nut	1613j	1603	" " " " Nut
SS531c	1769	" " " " Screw Bearing	SS531c	1769	" " " " Screw Bearing
1513j	1603	" " " " " Nut	1513j	1603	" " " " " Nut
98030	1769	" " " " Steel Plate (bottom)	98030	1769	" " " " Steel Plate (bottom)
98037	1769	" " " " (top)	98037	1769	" " " " (top)
SS37e	1769	" " " " Binding Screw	SS37e	1769	" " " " Binding Screw
1698c	1769	" " " " " Lock Nut	1698c	1769	" " " " " Lock Nut
98041	—	Oscillating Rock Shaft, complete, Nos. 1668c, 98014, 98627 and 98639	98041	—	Oscillating Rock Shaft, complete, Nos. 1668c, 98014, 98627 and 98639
91171	775	Oscillating Shuttle Shaft	91171	775	Oscillating Shuttle Shaft
91442	1769	" " " Bushing	91442	1769	" " " Bushing
423c	1060	" " " " Set Screw	423c	1060	" " " " Set Screw
91172	1750	" " " " Crank with 453c and 1850	91172	1750	" " " " Crank with 453c and 1850
11663	1031	" " " " Pin	11663	1031	" " " " Pin
1850	1603	" " " " Roller and Stud	1850	1603	" " " " Roller and Stud
453c	1602	" " " " Set Screw	453c	1602	" " " " Set Screw
91651	1749	Presser Bar (with squared end)	91651	1749	Presser Bar (with squared end)
91438	1750	" " " Lifter	91438	1750	" " " Lifter
SS186d	1601	" " " Hinge Screw	SS186d	1601	" " " Hinge Screw
1618e	1603	" " " " Nut	1618e	1603	" " " " Nut
91652	1034	" " " Lifting Bracket with 446c	91652	1034	" " " Lifting Bracket with 446c
91711	—	" " " 91052 with 82510 and two 190f	91711	—	" " " 91052 with 82510 and two 190f
8573	1053	" " " " Pin	8573	1053	" " " " Pin
446c	1003	" " " " Set Screw	446c	1003	" " " " Set Screw
82510	1036	" " " " Tension Release	82510	1036	" " " " Tension Release
190f	1001	" " " " Binding Screw	190f	1001	" " " " Binding Screw
SS320e	1751	" " " Screw Bushing	SS320e	1751	" " " Screw Bushing
91248	779	" " " Spring	91248	779	" " " Spring
91249	1751	Presser Foot	91249	1751	Presser Foot
SS320f	1603	" " " Screw	SS320f	1603	" " " Screw
1547c	1751	" " " Nut	1547c	1751	" " " Nut

No. 45K87 MACHINE PARTS

No.	Plate	
94814	1041	Lifting Presser Plunger
94817	1041	" " " Buffer (rubber)
94815	1041	" " " Pin
94816	1041	" " " Plug
94818	1041	" " " Roller
94819	1041	" " " Pin
94820	—	Lifting Presser Plunger, complete, Nos. 94814 to 94819, 94818, 94819 and five 94817
94857	1054	Lifting Presser Plunger Bracket with two 1186f
1186f	1751	" " " Clamping Screw
94822	1041	" " " Spring
193d	1751	" " " Screw
91021	775	Needle Bar
91441	779	" " " Bushing
450A	1060	" " " Set Screw
91022	779	" " " Connection with two 158e
158e	1001	" " " Clamping Screw
91240	1751	" " " Link
375c	1602	" " " Hinge Screw
1518e	1603	" " " " " Nut
82520	1081	Needle Clamp
82522	—	" " " 82520 with 1504, 50406d and 82521
150f	1001	" " " Screw
82521	1081	" " " Thread Eyelet
50406d	1601	" " " Screw
91241	1750	Oil Hole Plug (wood, large)
91242	1750	" " " (" medium)
91243	1750	" " " (" small) (5)
94823	1041	" " " (" "), for Plunger
98638	1769	Oscillating Rock Shaft with 98636, 98637, two each 55537e and 1698c
98642	779	" " " Hinge Pin
1513j	1603	" " " " " Nut
55531c	1769	" " " " " Screw Bearing
1513j	1603	" " " " " Nut
98636	1769	" " " Steel Plate (bottom)
98637	1769	" " " " (top)
55537e	1769	" " " Binding Screw
1698c	1769	" " " " " Lock Nut...
98640	—	Oscillating Rock Shaft, complete, Nos. 1698c, 98614, 98627 and 98638

No. 45K87 MACHINE PARTS

No.	Plate	
91028	776	Oscillating Shuttle Shaft
91029	1081	" " " Bushing
5539c	1601	" " " Set Screw
91030	1035	" " " Collar with 433c
433c	1602	" " " Set Screw
98631d	1769	" " " Crank with 98632, 433c and 1518e
11063	1081	" " " Pin
98632	1769	" " " Roller and Screw Stud
1518e	1603	" " " " " Nut
433c	1602	" " " Set Screw
94824	1040	Presser Bar (with squared end)
98901	1489	" " " Cushion Spring
94800	1054	" " " Lifter
55186d	1601	" " " Hinge Screw
1518e	1603	" " " " " Nut
94801	1054	" " " Lifting Bracket with two 1186d
1186d	1751	" " " Clamping Screw
55425e	1044	" " " Screw Bushing
91248	779	" " " Spring
91249	1751	Presser Foot
55320f	1602	" " " Screw
1547c	1751	" " " Nut
95093	1696	Shuttle Bobbin
95094	1696	" " " Cylinder
91042	1696	" " " Hinge Pin
91043	1696	" " " Latch Spring
55574d	1602	" " " Screw
98621	1696	" " " Frame
98602	1696	" " " Tension Spring
55377f	1696	" " " Adjusting Screw
98634	1696	Shuttle (Cylinder), 2 1/2" diam., complete, Nos. 55377f, 55574d, 91042, 91043, 95093, 95094, 98602 and 98621

No. 98624 can only be used with No. 98607 and not with old style Shuttle Drivers.

98007	1743	Shuttle Driver
No. 98607 can only be used with No. 98624 and not with old style Shuttles.		
11063	1081	Shuttle Driver Pin
91049	1053	Shuttle Race with 91051, 91052 and 91053
94973	—	" " " 91049 with 91054 and two 401f
55321f	1001	" " " Bearing Clamping Screw
55321f	1003	" " " " " Nut

No. 45K87 MACHINE PARTS

No.	Plate	
91050	1081	Shuttle Race Cap
91051	1053	" " " Pin (short) ...
91052	1053	" " " " (long) ...
91053	1081	" " " Spring ...
41d	1601	" " " Screw ...
91054	1035	" " " Loop Spreader ...
401f	1602	" " " " Screw ...
91055	1035	" " " Position Pin ...
94862	—	Shuttle Race (adjustable), complete, Nos. 41d, 91050, 91053 and 94073 ...
91057	1038	Shuttle Race Slide (back) ...
180f	1601	" " " (") Screw (2) ...
91058	1053	" " " (front) ...
91060	—	" " " 91058 with 91059 and two 337d ...
91059	1038	" " " (front) Spring ...
337d	1602	" " " (") " Screw ...
SS317e	1602	Tension Screw Stud ...
1560d	1603	" " " Regulating Thumb Nut ...
446c	1602	" " " Set Screw ...
82445	1081	" " " Spring ...
82446	779	" " " Washer (felt) ...
82447	1081	" " " (steel) ...
82448	779	" " " Wheel ...
82502	1749	Tension, complete, Nos. SS317e, 1600d, 82445, 82448, two each 82446 and 82447 ...
82551	1041	Thread Controlling Lever ...
82525	1081	" " " Spring ...
82455	779	" " " Stop Pin ...
82450	1081	Thread Dyelet ...
SS50f	1601	" " " Screw ...
82449	1081	" " " Guard ...
233d	1606	" " " Screw ...
2102	779	Thread Retainer Disc ...
* 413e	1602	" " " Screw Stud ...
1560d	1603	" " " Regulating Thumb Nut ...
2103	1081	" " " Spring ...
82503	1749	Thread Retainer, complete, Nos. 413e, 1600d, 2103 and two 2102 Retainer Screw Stud 413e with 1560d ...
33892	—	Thread Retainer Screw Stud 413e with 1560d for 82503

No. 45K87 MACHINE PARTS

No.	Plate	
94837	1043	Thread Take-up Cam with SS320c and SS370c ...
94864	1749	" " " 94837 with 94863 and three 191c ...
94863	1749	" " " Lifting Cam ...
191c	1060	" " " " Screw ...
SS320c	1602	" " " Set Screw ...
SS370c	1080	" " " Timing Screw ...
94865	1035	" " " Lever with 9219 ...
94866	—	" " " 94865 with RR24 and 1619c ...
SS22f	1601	" " " Hinge Screw ...
RR24	1603	" " " Roller and Screw Stud ...
1619c	1603	" " " " Nut ...
* 9219	—	" " " Thread Eyelet Bushing ...
94825	1041	" " " Spring Regulator ...
210f	1601	" " " " Screw ...
94867	1036	Throat Plate ...
180f	1601	" " " Screw (2) ...
82550	—	Drip Pan ...
* 15404	—	Trade Mark ...
15405	—	" " " Rivet ...

Accessories

No.	Plate	
51077e	1060	Instruction Book
		Machine Bolt, with 1524e, 3"x1/4" (4), for 45K57, 45K75 and 45K76 Machines
6053	1050	Machine Bolt Washer (4) for 45K57, 45K75 and 45K76 Machines
84118	1499	Machine Button, with 84151 and wood screw 1 1/2" No. 9 R.H.B., for 45K87 Machine
		Needles (6)
120342	1600	Oil
80811	1600	Screw Driver (large)
120378	1489	" " (Shuttle Tension)
95093	1096	Shuttle Bobbin (N) 2
80107	1056	Wrench for 1547

Thread Unwinder

No.	Plate	
27623	1401	Spool Pin
84148	1401	" Rest with 448c
95126	1401	" Weight 4" dia, (only supplied when specified on order)
27625	1401	Thread Eyelet Rod
448c	1602	" " Set Screw
27626	1401	" " Wire
27627	—	Thread Eyelet, complete, Nos. 27625 and 27626
—	—	Screw (wood) 1 1/2" No. 10 (for fixing to table)
95125	1401	Thread Unwinder, complete, Nos. 27623, 27627, 84148 and two wood screws 1 1/2" No. 10

Bobbin Winders

BOBBIN WINDER (Friction) for Fast Wheel and S.D.A. Machines

No.	Plate	
91718	1040	Bracket
SS364	1001	" Screw
91719	1751	Frame
32d	1001-	" Hinge Screw
5960	1489	Friction Wheel (leather)
5961	1489	" " Washer
333r	1489	" " Screw
91446	1751	Spindle with 15072
15072	1751	" Bobbin Position Pin
5963	1489	" Flange
91725	1040	Frame, complete, Nos. 333r, 5960, 5961, 5963, 91446 and 91719
82537	1040	Spring
101d	1001	" Screw
82538	1040	" " Washer
91720	—	Bobbin Winder, complete, Nos. 32d, 101d, 82537, 82538, 91718 and 91725

BOBBIN WINDER (Swinging Automatic, Right Hand) for 95093

No.	Plate	
27340	1487	Base
—	—	" Screw (wood) 1" No. 7 R.H.
27302	1487	Frame
50356b	1487	" Hinge Screw
1620j	1487	" " Nut
27303	1487	" Spring
27541	1487	Pulley
98673	1487	Spindle with 15072
15072	1751	" Bobbin Position Pin
27306	1488	Spool Pin
27307	1488	" Stand
427303	—	" " 27307, with 418d, 1602j, 2106, 10141, 27300, two each 2455 and wood screws 1" No. 10
95197	1487	Stop Latch
35d	1060	" " Hinge Screw
2455	1488	Tension Disc
1503j	1488	" Regulating Thumb Nut
418d	1488	" Screw Stud
10141	1488	" Spring
2106	1488	Thread Guide
95198	1488	Bobbin Winder, Nos. 35d, 1620j, 27302, 27303, 27540, 27541, 50356b, 95197, 98673 and two wood screws 1" No. 7 R.H.
95199	—	Bobbin Winder (Swinging Automatic, right hand), complete, Nos. 27308 and 95198

† As No. 27308 can be supplied either Plated or Japanned, it is necessary when ordering to state which is required.

Foot Lifter for Nos. 45K57 and 45K87 Machines

No.	Plate	Arm Lever	...	...	...	...	...	...	...
01716	1001	"	Hinge Screw	...	...	...	...	...	...
604d	1602	"	"	...	...	...	...	...	...
01457	1001	Foot Lever with 176c	...	...	...	...	...	...	...
01459	1001	"	Bracket	...	...	...	...	...	...
17881	1001	"	"	...	...	...	...	...	...
—	—	"	"	Hinge Pin	...	...	...	...	...
01458	1001	"	"	Screw (wood) 1" No. 12	...	...	...	...	...
176c	1601	"	Extension	...	...	...	...	...	...
08636	1001	"	"	Set Screw	...	...	...	...	...
01464	—	"	"	"	...	...	...	...	...
01453	1001	Foot Lever only, complete, Nos. 17881, 01457 to 01460, 08626 and two wood screws 1" No. 12...	...	...	...	...	...	...	...
17677	1001	Foot Lever Pitman Connecting Hook (7" long)	...	...	...	...	...	...	...
17673	1001	"	"	Rod (lower)	...	...	...	...	...
17679	1001	"	"	" (upper)	...	...	...	...	...
161d	1001	"	"	Clamp with two 161d	...	...	...	...	...
17880	1001	"	"	"	...	...	...	...	...
01455	—	Foot Lever Pitman Rod, complete, Nos. 17877 to 17879	...	...	...	...	...	...	...
01456	—	Foot Lever, complete, Nos. 17880 and 01454	...	...	...	...	...	...	...
—	—	Foot Lifter, complete, Nos. 604d, 01453, 01455 and 01716	...	...	...	...	...	...	...

Foot Lifter for 45K75 and 45K76 Machines

This Foot Lifter is the same as 01456 with the following exceptions:—

No.	Plate	Arm Lever	...	...	...	...	...	...	...
04842	1001	"	"	"	"	"	"	"	"
04843	—	Foot Lifter, complete, Nos. 604d, 01453, 01455 and 04842	...	...	...	...	...	...	...

Driving Attachment

No.	Plate	Balance Wheel with 434c, 451c, 01475 and four 402c	...	...	...	...	...	...	...
01614	1082	"	"	Friction Pulley (two-speeds) with 44c and 01204	...	...	...	...	...
01723	1082	"	"	"	...	...	...	...	...
01204	1082	"	"	"	...	...	...	...	...
01475	1082	"	"	"	...	...	...	...	...
402c	1002	"	"	"	...	...	...	...	...
448c	1602	"	"	"	...	...	...	...	...
431c	1602	"	"	"	...	...	...	...	...
451c	1602	"	"	"	...	...	...	...	...
01721	1082	"	"	Set Screw (long)	...	...	...	...	...
01202	1082	"	"	" (short)	...	...	...	...	...
01302	1082	Lever with 7038 and 01306	...	...	...	...	...	...	...
SS38c	1001	"	"	Bracket	...	...	...	...	...
01303	1082	"	"	"	...	...	...	...	...
427c	1602	"	"	Centre Plug (wood)	...	...	...	...	...
1508c	1603	"	"	Adjusting Screw	...	...	...	...	...
01306	1057	"	"	"	...	...	...	...	...
603d	1002	"	"	Friction Pad (leather)	...	...	...	...	...
NV28c	1603	"	"	Hinge Screw	...	...	...	...	...
01307	779	"	"	"	...	...	...	...	...
161c	1601	"	"	"	...	...	...	...	...
7038	1057	"	"	Screw	...	...	...	...	...
01722	—	"	"	"	...	...	...	...	...
84275	1082	Lever, complete, Nos. NV28c, 161c, 427c, 603d, 1508c, 01302, 01303, 01307, 01721 and two SS38c	...	...	...	...	...	...	...
607c	1602	Shaft Pulley (sectional, grooved) 10" diam., with two 307c	...	...	...	...	...	...	...
01206	1001	"	"	Clamping Screw	...	...	...	...	...
01207	1001	"	"	"	...	...	...	...	...
01208	1057	"	"	Bracket	...	...	...	...	...
—	—	"	"	"	...	...	...	...	...
01209	1001	"	"	"	...	...	...	...	...
17877	1001	"	"	"	...	...	...	...	...
17878	1001	"	"	"	...	...	...	...	...
17879	1001	"	"	"	...	...	...	...	...
161d	1001	"	"	"	...	...	...	...	...
17880	1001	"	"	"	...	...	...	...	...
01460	—	"	"	"	...	...	...	...	...
91724	—	"	"	"	...	...	...	...	...

Driving Attachment, complete, Nos. 84275, 01460, 01614, 01722 and 01723 ...

Obsolete Parts

No.	Plate	
91023	779	Oscillating Rock Shaft Steel Plate (bottom) for 98628 and 98630
94972	1489	" " " (top) for 98628 and 98630 ...
91026	1749	" " " Rivet for 98628 and 98630
98628	1743	" " " with 91025, 94972 and two 91026, 45K87 Machine
98630	1743	" " " 91025, 94972 and two 91026, for 45K57, 45K75 and 45K76 Machine

Numerical List of Parts

No.	Plate	
NN8e	1603	Shuttle Race Bearing Clamping Screw Nut for 45K87 Machine ...
SS22f	1601	Thread Take-up Lever Hinge Screw ...
RA24	1603	Thread Take-up Lever Roller and Screw Stud for 91258 and 94866 ...
NN28e	1603	Driving Attachment Lever Hinge Screw Nut for 91722 and 95152 ...
32d	1601	Bobbin Winder Frame Hinge Screw for 91720
SS32f	1601	Shuttle Race Bearing Clamping Screw for 45K87 Machine ...
35d	1000	Bobbin Winder Stop Latch Hinge Screw for 95198 ...
SS38c	1601	Driving Attachment Lever Bracket Screw for 91722 and 95152 ...
SS39c	1601	Oscillating Shuttle Shaft Bushing Set Screw for 45K87 Machine ...
SS39d	1601	Work Plate Screw for 45K57, 45K75 and 45K76 Machines ...
41d	1601	Shuttle Race Cap Spring Screw for 94862 ...
SS45d	1601	Face Plate Screw (to attach to machine) ...
SS50f	1601	Thread Eyelet Screw for 91234, 94813 and 94856 ...
SS50f	1601	Tension Thread Guide Screw for 94813 ...
SS56d	1601	Bobbin Winder Bracket Screw for 91720 ...
RR82	1789	Oscillating Shuttle Shaft Crank Roller and Screw Stud for 98634 and 98635 ...
SS115d	1601	Feed Regulator Thumb Screw for 45K57 Machine ...
118e	1601	Arm Screw ...
144c	1601	Arm Shaft Screw ...
149f	1080	Lifting Presser Plunger Yoke Clamping Screw for 91239 ...
149f	1080	Lifting Presser Plunger Yoke Set Screw for 91239 ...
156f	1061	Feed Rock Shaft Crank Position Screw for 91564 ...
156f	1601	Needle Clamp Screw for 82522 ...
157f	1601	Presser Bar Lifting Bracket Tension Release Binding Screw for 45K75 and 45K76 Machines ...
158e	1001	Crank Connecting Rod Cap Screw for 94801 and 98664 ...
158e	1601	Needle Bar Connection Clamping Screw for 91022 ...

NUMERICAL LIST OF PARTS

No.	Plate	
161c	1601	Driving Attachment Lever Spring Screw for 01722
161d	1601	Bobbin Winder Spring Screw for 01720
161d	1601	Driving Attachment Starting Lever Pitman Rod Clamp Screw for 17879
161d	1601	Foot Lifter Foot Lever Pitman Rod Clamp Screw for 17879
176c	1601	Foot Lifter Foot Lever Extension Set Screw for 01457
180f	1601	Arm Cover Screw for 45K87 Machine
180f	1601	Shuttle Race Slide (back) Screw for 45K87 Machine
180f	1601	Throat Plate Screw
SS186d	1601	Presser Bar Lifter Hinge Screw
190d	1601	Driving Attachment Lever Friction Pad Screw for 95152
190f	1601	Presser Bar Lifting Bracket Tension Release Binding Screw for 01711
191c	1600	Thread Take-up Cam Lifting Cam Screw for 94830 and 94864
193d	1761	Lifting Presser Plunger Bracket Spring Screw for 45K75, 45K76 and 45K87 Machines
SS208f	1769	Throat Plate Oil Hole Screw for 45K67 Machine
SS218d	1761	Shuttle Race Cap Spring Screw for 45K57, 45K75 and 45K76 Machines
219f	1601	Thread Take-up Spring Regulator Screw for 91234, 94813 and 94856
223d	1600	Shuttle Driver Thread Guard Screw for 98611
233d	1606	Thread Guard Screw for 01234, 94813 and 94856
248f	1000	Clamp Stop Motion Clamp Stop Screw for 95190 and 98625
SS317e	1602	Tension Screw Stud for 82502
SS318e	1751	Shuttle Race Position Screw Stud for 45K57, 45K75 and 45K76 Machines
SS320c	1602	Thread Take-up Cam Set Screw for 94837
SS326e	1761	Presser Bar Screw Bushing for 45K57 Machine
SS329f	1602	Presser Foot Screw
333r	1450	Bobbin Winder Friction Wheel Washer Screw for 91725
337d	1602	Shuttle Race Slide (front) Spring Screw for 01060
363c	1060	Driving Attachment Lever Belt Shifter Clamping Screw for 95152

NUMERICAL LIST OF PARTS

No.	Plate	
363c	1060	Driving Attachment Lever Belt Shifter Rod Clamping Screw for 95152
SS370c	1060	Thread Take-up Cam Timing Screw for 94837
375c	1602	Feed Connecting Link Hinge Screw for 45K57 Machine
376c	1602	Feed Forked Connection Hinge Screw for 45K57 Machine
378c	1602	Needle Bar Connection Link Hinge Screw
SS377f	1608	Shuttle Tension Spring Adjusting Screw for 98624
307e	1060	Lifting Presser Dash Pot Screw for 45K87 Machine
401f	1602	Shuttle Race Loop Spreader Screw for 94973
402e	1602	Driving Attachment Balance Wheel Friction Pulley Ring Screw for 91614
* 413e	1602	Thread Retainer Screw Stud for 62569 32872
418d	1488	Bobbin Winder Tension Screw Stud for 27308
423c	1060	Oscillating Shuttle Shaft Bushing Set Screw for 01131 and 94811
SS425e	1044	Presser Bar Screw Bushing for 45K75, 45K76 and 45K87 Machines
427c	1602	Driving Attachment Lever Centre Plug Adjusting Screw for 91722
434c	1602	Balance Wheel Set Screw for 91613
434c	1602	Clamp Stop Motion Flanged Bushing Set Screw for 95146
440c	1602	Driving Attachment Balance Wheel Set Screw for 91614
440c	1602	Arm Shaft Bushing Set Screw for 01444, 94810, 94853 and 95154
440c	1602	Feed Cam Set Screw for 3032
446c	1602	Presser Bar Lifting Bracket Set Screw for 91652
446c	1602	Tension Screw Stud Set Screw for 91234, 94813 and 94856
448c	1602	Driving Attachment Balance Wheel Friction Pulley Set Screw for 91723
448c	1602	Thread Unwinder Thread Eyelet Rod Set Screw for 81148
450f	1060	Needle Bar Bushing Set Screw for 91444, 94810, 94853 and 95154
451c	1602	Driving Attachment Balance Wheel Set Screw for 91614
453c	1602	Oscillating Shuttle Shaft Crank Set Screw for 91172, 98634 and 98635

NUMERICAL LIST OF PARTS

No.	Plate	
453c	1002	Oscillating Shuttle Shaft Collar Set Screw for 91030
SS403Nj	1463	Clamp Stop Motion Clamp Screw for 95190 and 98625
SS631c	1769	Oscillating Rock Shaft Hinge Pin Screw Bearing
SS637e	1769	Oscillating Rock Shaft Steel Plate Binding Screw for 98638 and 98639
SS574d	1602	Shuttle Cylinder Latch Spring Screw for 98624
597c	1602	Driving Attachment Shaft Pulley Clamping Screw for 84275
693d	1602	Driving Attachment Lever Hinge Screw for 91722 and 95152
694d	1602	Foot Lifter Arm Lever Hinge Screw for 91456 and 94843
704c	1602	Feed Dog Screw for 45K57 Machine
727c	1060	Driving Attachment Lever Adjusting Screw for 95152
1128e	1002	Feed Regulator Hinge Screw for 45K57 Machine
1177c	1060	Feed Rock Shaft Crank Clamping Screw for 91604
1186d	1751	Presser Bar Lifting Bracket Clamping Screw for 94827 and 94861
1186f	1751	Lifting Presser Plunger Bracket Clamping Screw for 94821 and 94857
1259c	1060	Feed Rock Shaft Carrier Slide Set Screw for 91165
1302e	1060	Shuttle Race Ring Screw for 45K57, 45K75 and 45K76 Machines
1308c	1603	Driving Attachment Lever Centre Plug Adjusting Screw Nut for 91722
1513j	1603	Oscillating Rock Shaft Hinge Pin Nut
1513j	1603	Oscillating Rock Shaft Hinge Pin Screw Bearing Nut
1518e	1603	Feed Connecting Link Hinge Screw Nut for 45K57 Machine
1518e	1603	Feed Forked Connection Hinge Screw Nut for 45K57 Machine
1518e	1603	Needle Bar Connection Link Hinge Screw Nut
1518e	1603	Oscillating Shuttle Shaft Crank Roller and Screw Stud Nut for 98634 and 98635
1518e	1603	Presser Bar Lifter Hinge Screw Nut
1519e	1603	Thread Take-up Lever Roller and Screw Stud Nut for 91258 and 94860

NUMERICAL LIST OF PARTS

No.	Plate	
1547c	1751	Presser Foot Screw Nut
1560d	1603	Tension Screw Stud Regulating Thumb Nut for 82502
1560d	1603	Thread Retainer Screw Stud Regulating Thumb Nut for 82503
1562j	1488	Bobbin Winder Tension Regulating Thumb Nut for 27308
1620j	1487	Bobbin Winder Frame Hinge Screw Nut for 95108
1623c	1060	Driving Attachment Lever Adjusting Screw Nut for 95152
1688c	1743	Crank Connecting Rod Hinge Stud Cotter Pin Nut for 98640 and 98641
1698c	1769	Oscillating Rock Shaft Steel Plate Binding Screw Lock Nut for 98638 and 98639
1850	1003	Oscillating Shuttle Shaft Crank Roller and Stud for 91172
2102	779	Thread Retainer Disc for 82503
2103	1081	Thread Retainer Spring for 82503
2106	1488	Bobbin Winder Thread Guide for 27308
2117	1055	Lifting Presser Plunger Yoke Pin for 45K57 Machine
2455	1488	Bobbin Winder Tension Disc for 27308
3032	1750	Feed Cam, with 446c, for 45K57 Machine
5960	1489	Bobbin Winder Friction Wheel (leather) for 91725
5961	1489	Bobbin Winder Friction Wheel Washer for 91725
5963	1489	Bobbin Winder Spindle Flange for 91725
6055	1056	Machine Bolt Washer for 45K57, 45K75 and 45K76 Machines
7958	1057	Driving Attachment Lever Spring Pin for 93152
7958	1057	Driving Attachment Lever Spring Screw Pin for 91721
8575	1055	Presser Bar Lifting Bracket Pin for 45K57 Machine
8583	1749	Arm Dowel Pin
*9210	—	Thread Take-up Lever Thread Eyelet Bushing for 91357 and 94865
10141	1488	Bobbin Winder Tension Spring for 27308
11663	1081	Oscillating Shuttle Shaft Crank Pin
11003	1081	Shuttle Driver Pin
1507g	1751	Bobbin Winder Spindle Bobbin Position Pin for 91446 and 98673
*15404	—	Trade Mark for 91444, 94810, 94853 and 95154

NUMERICAL LIST OF PARTS

No.	Plate	
15405	—	Trade Mark Rivet for 01444, 04810, 04853 and 05154 ...
17877	1061	Driving Attachment Starting Lever Pitman Rod (lower) for 17880 ...
17877	1061	Foot Lifter Foot Lever Pitman Rod (lower) for 17880 ...
17878	1061	Driving Attachment Starting Lever Pitman Rod (upper) for 17880 ...
17878	1061	Foot Lifter Foot Lever Pitman Rod (upper) for 17880 ...
17879	1061	Driving Attachment Starting Lever Pitman Rod Clamp, with two 161d, for 17880 ...
17879	1061	Foot Lifter Foot Lever Pitman Rod Clamp with two 161d, for 17880 ...
17880	1061	Driving Attachment Starting Lever Pitman Rod, complete, Nos. 17877 to 17879 for 01460 ...
17880	1061	Foot Lifter Foot Lever Pitman Rod, complete, Nos. 17877 to 17879 for 01455 ...
17881	1061	Foot Lifter Foot Lever Bracket Hinge Pin for 01454 ...
27302	1487	Bobbin Winder Frame for 05108 ...
27303	1487	Bobbin Winder Frame Spring for 05108 ...
27306	1488	Bobbin Winder Spool Pin for 27308 ...
27307	1488	Bobbin Winder Spool Stand for 27308 ...
†27308	—	Bobbin Winder Spool Stand 27307, with 418d, 1602j, 2106, 10141, 27306, two each 2456 and wood screws 1" No. 10 for 05109 ...
27540	1487	Bobbin Winder Base for 05108 ...
27541	1487	Bobbin Winder Pulley for 05108 ...
27623	1401	Thread Unwinder Spool Pin for 05125 ...
27626	1401	Thread Unwinder Thread Eyelet Rod for 27627 ...
27626	1401	Thread Unwinder Thread Eyelet Wire for 27627 ...
27627	—	Thread Unwinder Thread Eyelet, complete, Nos. 27625 and 27626, for 05125 ...
✓ 50360b	1487	Bobbin Winder Frame Hinge Screw for 05108
50406d	1601	Needle Clamp Thread Guide Screw for 82522
61077c	1000	Machine Bolt, with 1624e, 3" x 1/4", for 45K57, 45K75 and 45K76 Machines (Accessories)
61234d	1602	Arm Side Cover Thumb Screw ...
62165	1081	Feed Connecting Link for 45K67 Machine ...
80107	1056	Wrench for 1547 (Accessories)

† As No. 27308 can be supplied either Plated or Japanned, it is necessary, when ordering, to state which is required.

33892 — Thread Retainer Screw Stud 413e with 1560d, for 82503 ...

NUMERICAL LIST OF PARTS

No.	Plate	
80537	1749	Lifting Presser Plunger Roller for 01601 ...
80538	1740	Lifting Presser Plunger Roller Pin for 01601
82400	1036	Arm Shaft Oil Tube ...
82402	775	Arm Side Cover ...
82403	1489	Arm Spool Pin ...
82414	777	Feed Regulator for 45K67 Machine ...
82445	1081	Tension Spring for 82502 ...
82446	779	Tension Washer (felt) for 82502 ...
82447	1081	Tension Washer (steel) for 82502 ...
82448	779	Tension Wheel for 82502 ...
82449	1081	Thread Guard for 01234, 04813 and 04856 ...
82450	1081	Thread Eyelet for 01234, 04813 and 04856 ...
82455	770	Thread Controlling Lever Stop Pin for 01234, 04813 and 04856 ...
82490	777	Arm Shaft Bushing (back) for 01444, 04810, 04853 and 05154 ...
82502	1749	Tension, complete, Nos. 55317e, 1560d, 82445, 82448, two each 82446 and 82447 for 01234, 04813 and 04856 ...
82503	1749	Thread Retainer, complete, Nos. 413e, 1560d, 2103 and two 2102 for 01234, 04813 and 04856 ...
82510	1056	Presser Bar Lifting Bracket Tension Release for 01711 ...
82520	1081	Needle Clamp for 82522 ...
82521	1081	Needle Clamp Thread Eyelet for 82522 ...
82522	—	Needle Clamp 82520 with 1561, 50406d and 82521 ...
82525	1081	* Thread Controlling Lever Spring for 01234, 04813 and 04856 ...
82537	1040	Bobbin Winder Spring for 01720 ...
82538	1040	Bobbin Winder Spring Screw Washer for 01720 ...
82549	1054	Arm Shaft Bushing (front) for 01444, 04810, 04853 and 05154 ...
82550	—	Drip Pan for 45K87 Machine ...
82551	1041	Thread Controlling Lever for 01234, 04813 and 04856 ...
84118	1480	Machine Button, with 84161 and wood screw 1 1/4" No. 0 R.H.D., for 45K87 Machine (Accessories)
84148	1401	Thread Unwinder Spool Rest, with 448c, for 05125 ...
84275	1082	Driving Attachment Shaft Pulley (sectional, grooved), 10" diam., with two 507c, for 01724 and 05163 ...
86611	1600	Screw Driver (large) ... (Accessories)

NUMERICAL LIST OF PARTS

NUMERICAL LIST OF PARTS

No.	Plate	No.	Plate
*91003	—	91234	—
91021	Bed for 45K87 Machine ...		Face Plate, complete, Nos. SS506, 2196, 233d, 440c, 82449, 82450, 82455, 82502, 82503, 82525, 82551, 91233 and 914825 for 45K57 Machine ...
91022	Needle Bar ...	91238	—
91025	Needle Bar Connection with two 158e ...	91239	Lifting Presser Plunger Yoke for 91239 ...
	Needle Bar ...		Lifting Presser Plunger Yoke 91238, with three 149f, for 45K57 Machine ...
91026	Oscillating Rock Shaft Steel Plate (bottom) for 98628 and 98630 ...	91240	Needle Bar Connection Link ...
91026	Oscillating Rock Shaft Steel Plate Rivet for 98628 and 98630 ...	91241	Oil Hole Plug (wood, large) ...
91028	Oscillating Shuttle Shaft for 45K87 Machine (Obsolete) ...	91242	Oil Hole Plug (wood, medium) ...
91029	Oscillating Shuttle Shaft Bushing for 45K87 Machine ...	91243	Oil Hole Plug (wood, small) ...
91030	Oscillating Shuttle Shaft Collar, with 453c, for 45K87 Machine ...	91248	Presser Bar Spring ...
91042	Shuttle Cylinder Hinge Pin for 98624 ...	91249	Presser Foot for 45K57 and 45K87 Machines ...
91043	Shuttle Cylinder Latch Spring for 98624 ...	91257	Thread Take-up Lever, with 9219, for 91258 ...
91049	Shuttle Race, with 91051, 91052 and 91055, for 94973 ...	91258	Thread Take-up Lever 91257, with RR24 and 1519e, for 45K57, 45K75 and 45K76 Machines ...
91050	Shuttle Race Cap for 94862 ...	91260	Throat Plate for Darning, for 45K57 Machine ...
91051	Shuttle Race Cap Pin (short) for 91049 ...	91261	Work Plate for 45K57 Machine ...
91052	Shuttle Race Cap Pin (long) for 91049 ...	91294	Driving Attachment-Balance Wheel Friction Pulley Centre Bearing for 91723 ...
91053	Shuttle Race Cap Spring for 94862 ...	91296	Driving Attachment Starting Lever for 91299 ...
91054	Shuttle Race Loop Spreader for 94973 ...	91297	Driving Attachment Starting Lever Bracket for 91299 ...
91055	Shuttle Race Position Pin for 91049 ...	91298	Driving Attachment Starting Lever Bracket Hinge Pin for 91299 ...
91057	Shuttle Race Slide (back) for 45K87 Machine ...	91299	Driving Attachment Starting Lever, Nos. 91296 to 91298 ...
91058	Shuttle Race Slide (front) for 91060 ...		14 No. 15, for 91480 ...
91059	Shuttle Race Slide (front) Spring for 91060 ...	91302	Driving Attachment Lever Bracket for 91722 and 95152 ...
91060	Shuttle Race Slide 91058, with 91059 and two 337d, for 45K87 Machine ...	91303	Driving Attachment Lever Centre Plug ...
*91151	—	91306	Driving Attachment Lever Friction Pad (wood) for 91722 ...
91153	Bed (Cylinder), with 423c and 91442, for 45K57 Machine ...	91307	Driving Attachment Lever Friction Pad (leather) for 91721 ...
91160	Shuttle Race Ring for 45K57, 45K75 and 45K76 Machines ...	91307	Driving Attachment Lever Spring for 91722 ...
91161	Feed Dog Carrier for 45K57 Machine ...	91315	Shuttle Race Cap Spring for 45K57, 45K75 and 45K76 Machines ...
*91162	Feed Forked Connection for 45K57 Machine ...	91409	Shuttle Race Cover for 45K57 Machine ...
91163	Feed Rock Shaft for 91163 ...	91438	Presser Bar Lifter for 45K57, 45K75 and 45K76 Machines ...
91163	Feed Rock Shaft 91162, with 91165 and 91166, for 91565 ...	91441	Needle Bar Bushing for 91444, 914810, 914833 and 95154 ...
91165	Feed Rock Shaft Carrier Slide, with 1259c, for 91163 ...	91442	Oscillating Shuttle Shaft Bushing for 91151 ...
91166	Feed Rock Shaft Carrier Slide Steady Pin for 91163 ...	*91444	—
91171	Oscillating Shuttle Shaft for 45K57 Machine ...		Arm, with 440c, 450c, 15404, 82499, 82549, 91441 and two 15405, for 45K57 Machine ...
91172	Oscillating Shuttle Shaft Crank, with 433c and 1850, for 45K57 Machine ...	91440	Bobbin Winder Spindle, with 15072, for 91725 ...
91202	Oscillating Shuttle Shaft for 45K75 and 45K76 Machines ...		
91233	Face Plate for 91234 ...		

76 NUMERICAL LIST OF PARTS

No.	Plate	No.	Plate
01453	1061 Foot Lifter Foot Lever Pitman Connecting Hook (7" long) for 01456 and 04843 ...	01722	— Driving Attachment Lever, complete, Nos. AN28e, 101c, 427c, 603d, 1508e, 01302, 01303, 01307, 01721 and two SS38c for 01724 ...
01454	— Foot Lifter Foot Lever only, complete, Nos. 17881, 01457 to 01459, 98626 and two wood screws 1" No. 12 for 01453 ...	01723	1082 Driving Attachment Balance Wheel Friction Pulley (two-speeds), with 448c and 01294, for 01724 ...
01455	— Foot Lifter Foot Lever, complete, Nos. 17880 and 01454 for 01456 and 04843 ...	01724	— Driving Attachment, complete, Nos. 8427b, 01460, 01614, 01722 and 01723 ...
01456	— Foot Lifter, complete, Nos. 694d, 01453, 01455 and 01716 for 45K57 and 45K87 Machines ...	01725	1040 Bobbin Winder Frame, complete, Nos. 3337, 5960, 5961, 5963, 01406 and 01710 for 01720 ...
01457	1061 Foot Lifter Foot Lever, with 176c, for 01454 ...	01753	1043 Shuttle Race (steel, hardened) for 45K57, 45K75 and 45K76 Machines ...
01458	1061 Foot Lifter Foot Lever Extension for 01454 ...	04801	775 Crank Connecting Rod, with 04802, 04872 and two 158e, for 45K57, 45K75 and 45K76 Machines ...
01459	1061 Foot Lifter Foot Lever Bracket for 01454 ...	*04802	— Crank Connecting Rod Cap for 04801 and 98664 ...
01460	— Driving Attachment Starting Lever and Pitman, complete, Nos. 17880 and 01299 for 01724 and 05153 ...	*04810	— Arm, with 440c, 450f, 15404, 82409, 82549, 01441 and two 15405, for 45K76 Machines ...
01475	1082 Driving Attachment Balance Wheel Friction Pulley Ring (cardboard) for 01614 ...	*04811	— Bed (Cylinder), with 423c and 98633, for 45K75 and 45K76 Machines ...
01564	1054 Feed Rock Shaft Crank, with 1561 and 1177c, for 01565 ...	04812	1040 Face Plate for 04813 ...
01565	— Feed Rock Shaft 01163, with 01564, for 45K57 Machine ...	04813	— Face Plate, complete, Nos. 219f, 233d, 446c, 82440, 82450, 82455, 82502, 82503, 82525, 82551, 04812, 04825, 04836 and two SS50f, for 45K75 and 45K76 Machines ...
01613	1061 Balance Wheel (two-speeds), with two 434c, for 45K87 Machine ...	04814	1041 Lifting Presser Plunger for 04820 ...
01614	1082 Driving Attachment Balance Wheel, with 434c, 434e, 434f, 01475 and four 402e, for 01724 ...	04815	1041 Lifting Presser Plunger Pin for 04820 ...
01616	1040 Shaft ...	04816	1041 Lifting Presser Plunger Plug for 04820 ...
01652	740 Presser Bar (with squared end) for 45K57 Machine ...	04817	1041 Lifting Presser Plunger Buffer (rubber) for 04820 ...
01652	1054 Presser Bar Lifting Bracket, with 446c, for 01711 ...	04818	1041 Lifting Presser Plunger Roller for 04820 ...
01690	— Lifting Presser Plunger for 01691 ...	04819	1041 Lifting Presser Plunger Roller Pin for 04820 ...
01691	1056 Lifting Presser Plunger 01690, with 80557 and 80558, for 45K57 Machine ...	04820	— Lifting Presser Plunger, complete, Nos. 04814 to 04816, 04818, 04819 and five 04817 for 45K75, 45K76 and 45K87 Machines ...
01711	— Presser Bar Lifting Bracket 01652, with 82510 and two 100f, for 45K57 Machine ...	04821	1041 Lifting Presser Plunger Bracket, with two 1186f, for 45K75 and 45K76 Machines ...
01714	777 Throat Plate for 98080 for Patching, for 45K57 Machine ...	04822	1041 Lifting Presser Plunger Bracket Spring for 45K75, 45K76 and 45K87 Machines ...
01716	1061 Foot Lifter Arm Lever for 01456 ...	04823	1041 Oil Hole Plug (wood, small), for Plunger ...
01718	1010 Bobbin Winder Bracket for 01720 ...	04824	1040 Presser Bar (with squared end) for 45K75, 45K76 and 45K87 Machines ...
01719	761 Bobbin Winder Frame for 01725 ...	04825	1041 Thread Take-up Spring Regulator for 01234, 04813 and 04836 ...
01720	— Bobbin Winder (friction), complete, Nos. 32d, 161d, 82537, 82538, 01718 and 01725 for Fast Wheel and S.D.A. Machines ...		
01721	1082 Driving Attachment Lever, with 7058 and 01306, for 01722 ...		

No.	Plate	
94826	1041	Presser Bar Cushion Spring for 45K75 and 45K76 Machines
94827	1041	Presser Bar Lifting Bracket, with two 1186d, for 45K75 and 45K76 Machines
94828	1041	Presser Bar Lifting Bracket Sleeve for 45K75 and 45K76 Machines
94829	1041	Presser Bar Lifting Bracket Tension Release for 45K75 and 45K76 Machines
94830	1041	Presser Foot for 45K75 and 45K76 Machines
94836	1041	Tension Thread Guide for 94813
94837	1749	Thread Take-up Cam, with SS320c and SS370c, for 94839 and 94864
94838	1043	Thread Take-up Cam Lifting Cam for 94839
94839	1043	Thread Take-up Cam 94837, with 94838 and three 101c, for 45K57, 45K75 and 45K76 Machines
94840	1044	Throat Plate for 45K75 and 45K76 Machines
94841	—	Work Plate for 45K75 and 45K76 Machines
94842	1001	Foot Lifter Arm Lever for 94843
94843	—	Foot Lifter, complete, Nos. 694d, 91453, 91455 and 94842, for 45K75 and 45K76 Machines
*94853	—	Arm, with 440c, 450A, 15404, 82499, 82549, 91441 and two 15405, for 45K87 Machine
94854	1037	Arm Cover for 45K87 Machine
94855	—	Face Plate for 94856
94856	—	Face Plate, complete, Nos. SS60f, 219f, 233d, 446c, 82449, 82450, 82455, 82502, 82503, 82525, 82551, 94825 and 94855 for 45K87 Machine
94857	1054	Lifting Presser Plunger Bracket, with two 1186f, for 45K87 Machine
94858	1056	Lifting Presser Dash Pot for 45K87 Machine
94859	1056	Lifting Presser Dash Pot Plunger for 45K87 Machine
94860	1054	Presser Bar Lifter for 45K87 Machine
94861	1064	Presser Bar Lifting Bracket, with two 1186d, for 45K87 Machine
94862	—	Shuttle Race (adjustable), complete, Nos. 41d, 91030, 91033 and 94973, for 45K87 Machine
94863	1749	Thread Take-up Cam Lifting Cam for 94864
94864	1749	Thread Take-up Cam 94837, with 94863 and three 101c, for 45K87 Machine
94865	1055	Thread Take-up Lever, with 9219, for 94866
94866	—	Thread Take-up Lever 94865, with RR24 and 1510e, for 45K87 Machine

No.	Plate	
94867	1056	Throat Plate for 45K87 Machine
94872	1743	Crank Connecting Rod Cap Oil Pad for 94891 and 98664
94972	1489	Oscillating Rock Shaft Steel Plate (top) for 98628 and 98630
94973	—	Shuttle Race 91049, with 91054 and two 401f, for 94862
95093	1696	Shuttle Bobbin for 98024
95094	1696	Shuttle Cylinder for 98624
95125	1401	Thread Unwinder, complete, Nos. 27623, 27627, 84148 and two wood screws 1 1/2 No. 10
95126	1401	Thread Unwinder Spool Weight, 4" diam., for 95125 (only supplied when specified on order)
95141	1466	Balance Wheel for 95143
95142	1466	Balance Wheel Loose Pulley for 95143
95143	—	Balance Wheel, complete, Nos. 95141 and 95142, for fast and loose pulley, for 98625
95145	1465	Clamp Stop Motion Clamp Washer for 95190 and 98625
95146	1465	Clamp Stop Motion Flanged Bushing, with two 434c, for 95190 and 98625
95148	1037	Driving Attachment Lever Belt Shifter for 95152
95149	1037	Driving Attachment Lever Belt Shifter Rod for 95152
95150	1037	Driving Attachment Lever Spring for 95152
95152	—	Driving Attachment Lever, complete, Nos. NV28e, 693d, 727c, 1623c, 7958, 91302, 95149, 95150, 98307, 98643, two each SS38c, 190d, 95148 and three 363c, for 95153
95153	—	Driving Attachment, complete, Nos. 81275, 91460, 95152 and 98625 for 45K75 Machine
*95154	—	Arm, with 440c, 450A, 15404, 82499, 82549, 91441 and two 15405, for 45K75 Machine
95189	1465	Balance Wheel for 95190
95190	—	Clamp Stop Motion, complete, Nos. 248f, SS4638J, 95145, 95146 and 95189 for 45K57 and 45K76 Machines
95107	1487	Bobbin Winder Stop Latch for 95198
95108	1488	Bobbin Winder, Nos. 135d, 1620j, 27302, 27303, 27540, 27541, 50336b, 95197, 98673 and two wood screws 1" No. 7 R.H. for 95190

NUMERICAL LIST OF PARTS

No.	Plate	
05109	—	Robbin Winder (Swinging Automatic, right hand), complete, Nos. 27308 and 05108 for 05093 ...
08507	2354	Driving Attachment Lever Friction Pad (leather) for 05152 ...
08601	1430	Presser Bar Cushion Spring for 45K87 Machine ...
08602	1696	Shuttle Tension Spring for 08634 ...
08606	2354	Red Oil Pad for 45K75 and 45K76 Machines
08607	1743	Shuttle Driver for 45K87 Machine

No. 08607 can only be used with No. 08624 and not with old style Shuttles.

08609	1743	Shuttle Driver and Feed Raising Cam for 08611 ...
08610	1743	Shuttle Driver Thread Guard for 08611 ...
08611	1743	Shuttle Driver and Feed Raising Cam, complete, Nos. 08609, 08610 and two 223d, for 45K57, 45K75 and 45K76 Machines ...

No. 08611 can only be used with No. 08624 and not with old style Shuttles.

08614	1743	Crank Connecting Rod Hinge Stud Cotter Pin for 08640 and 08641 ...
08621	1696	Shuttle Frame for 08624 ...
08624	1696	Shuttle (Cylinder), 2 1/4" diam., complete, Nos. SS377f, SS574d, 91042, 91043, 95093, 95004, 08602 and 08621 ...


No. 08624 can only be used with Nos. 08607 and 08611 and not with old style Shuttle Drivers.

08625	—	Clamp Stop Motion, complete, Nos. 248f, SS463d, 95143, 05145 and 05146, for 05153 ...
08626	1061	Foot Lifter Foot Lever Spring for 01454 ...
08627	1743	Crank Connecting Rod Hinge Stud for 08640 and 08641 ...
08628	1743	Oscillating Rock Shaft, with 01025, 04072 and two 01026, for 45K87 Machine
08630	1743	Oscillating Rock Shaft, with 01025, 04072 and two 01026, for 45K57, 45K75 and 45K76 Machines ...
08633	1769	Oscillating Shuttle Shaft Bushing for 04811 (Obsolete)
08631	1709	Oscillating Shuttle Shaft Crank, with RR62, 453c and 1518e, for 45K87 Machine ...


NUMERICAL LIST OF PARTS

No.	Plate	
08635	2354	Oscillating Shuttle Shate Crank, with RR62, 453c and 1518e, for 45K75 and 45K76, 45K87 Machines ...
08636	1769	Oscillating Rock Shaft Steel Plate (bottom) for 08638 and 08639 ...
08637	1769	Oscillating Rock Shaft Steel Plate (top) for 08638 and 08639 ...
08638	1769	Oscillating Rock Shaft, with 08636, 08637, two each SS537c and 1698c, for 08640 ...
08639	1769	Oscillating Rock Shaft, with 08636, 08637, two each SS537c and 1698c, for 08641 ...
08640	—	Oscillating Rock Shaft, complete, Nos. 1698c, 08614, 08627 and 08638, for 45K87 Machine ...
08641	—	Oscillating Rock Shaft, complete, Nos. 1698c, 08614, 08627 and 08639, for 45K57, 45K75 and 45K76 Machines ...
08642	779	Oscillating Rock Shaft Hinge Pin ...
08643	1466	Driving Attachment Lever for 05152 ...
08644	776	Crank Connecting Rod, with 04802, 04872 and two 1698, for 45K87 Machine ...
08673	1487	Robbin Winder Spindle with 15072, for 05108
08680	2354	Feed Dog for 45K57 Machine ...

 
91233

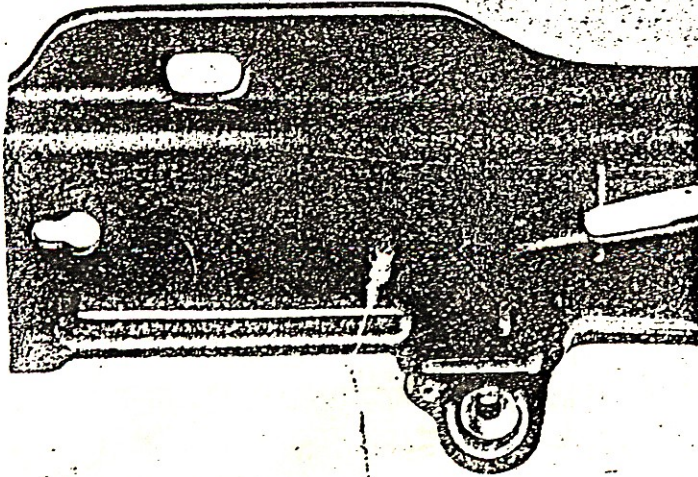


98664

 


91028

 


91714

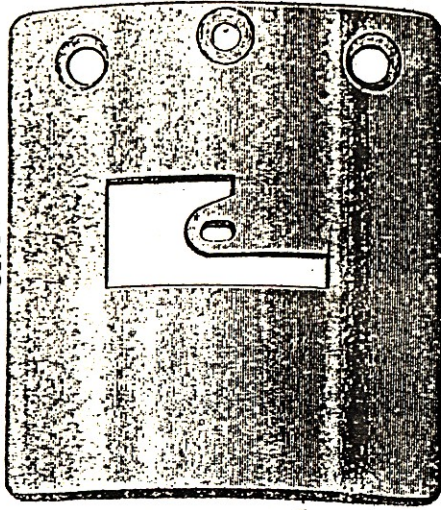 


82499

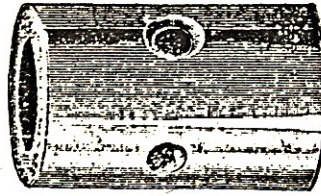 


82414


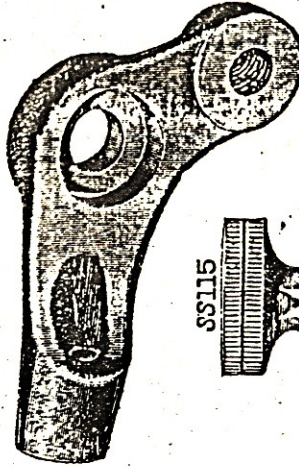 




SS115

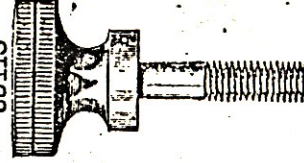 


91315

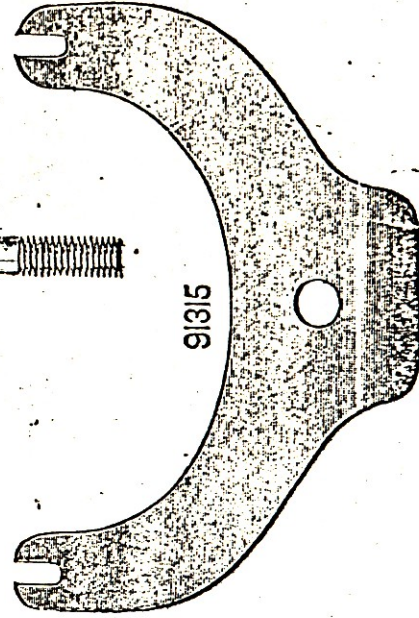 

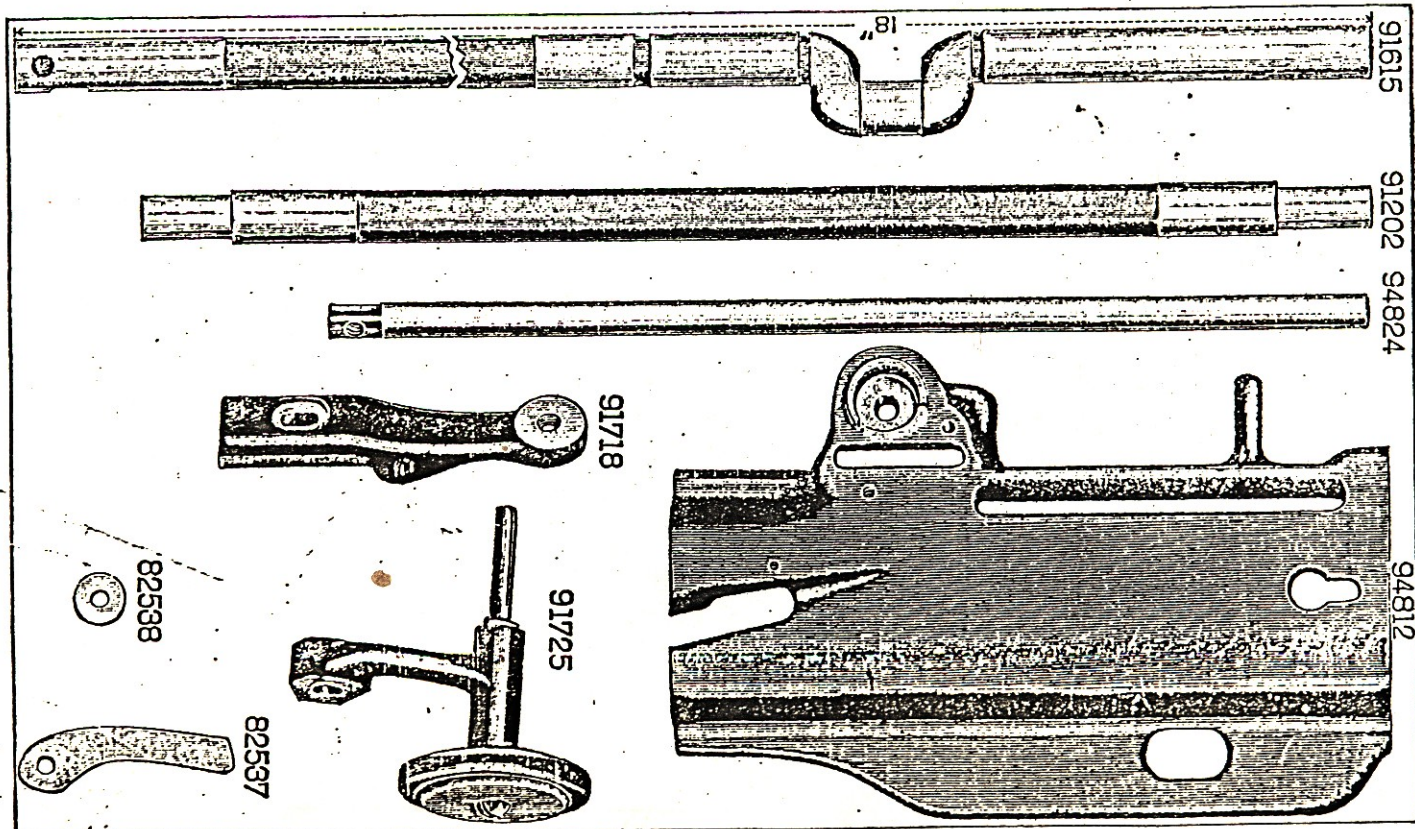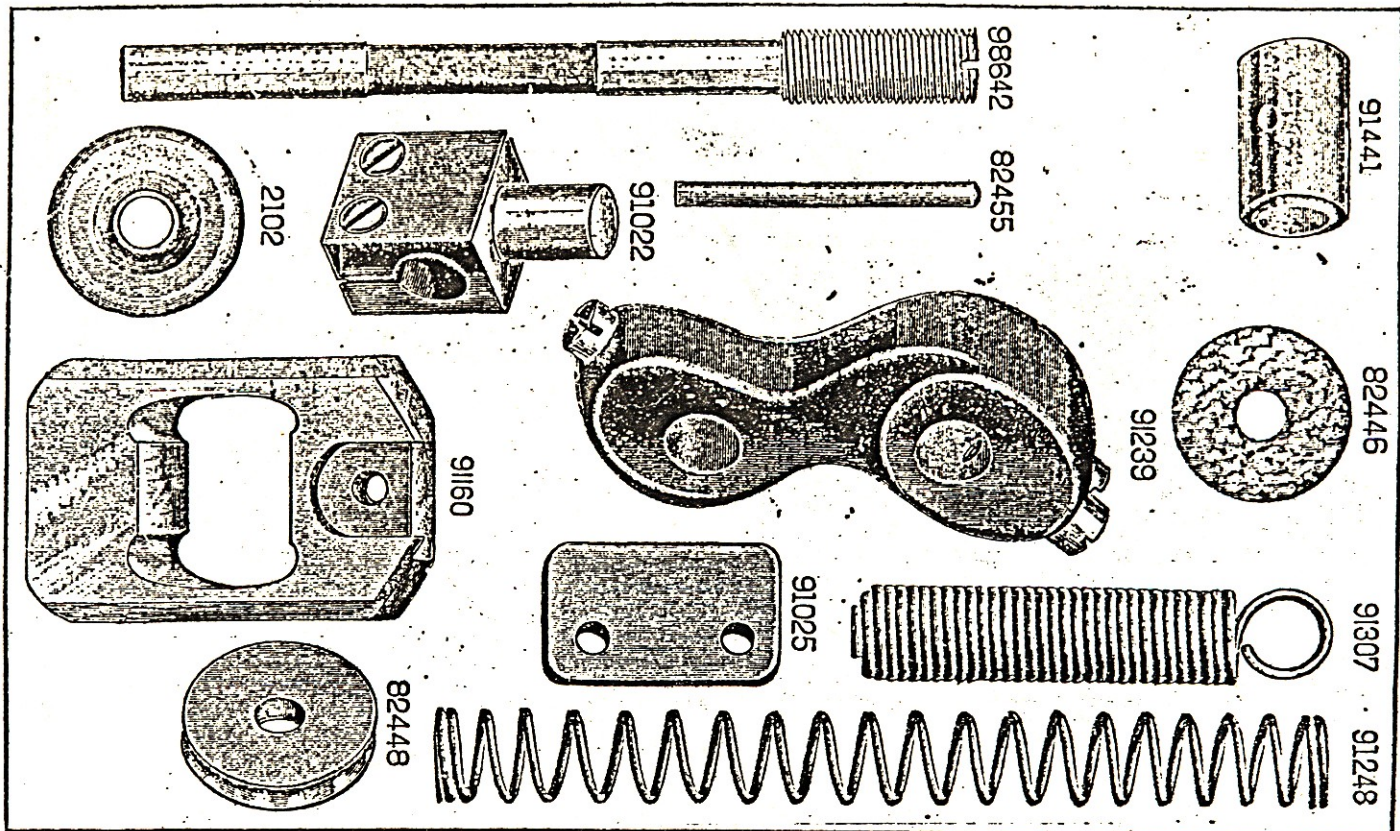  


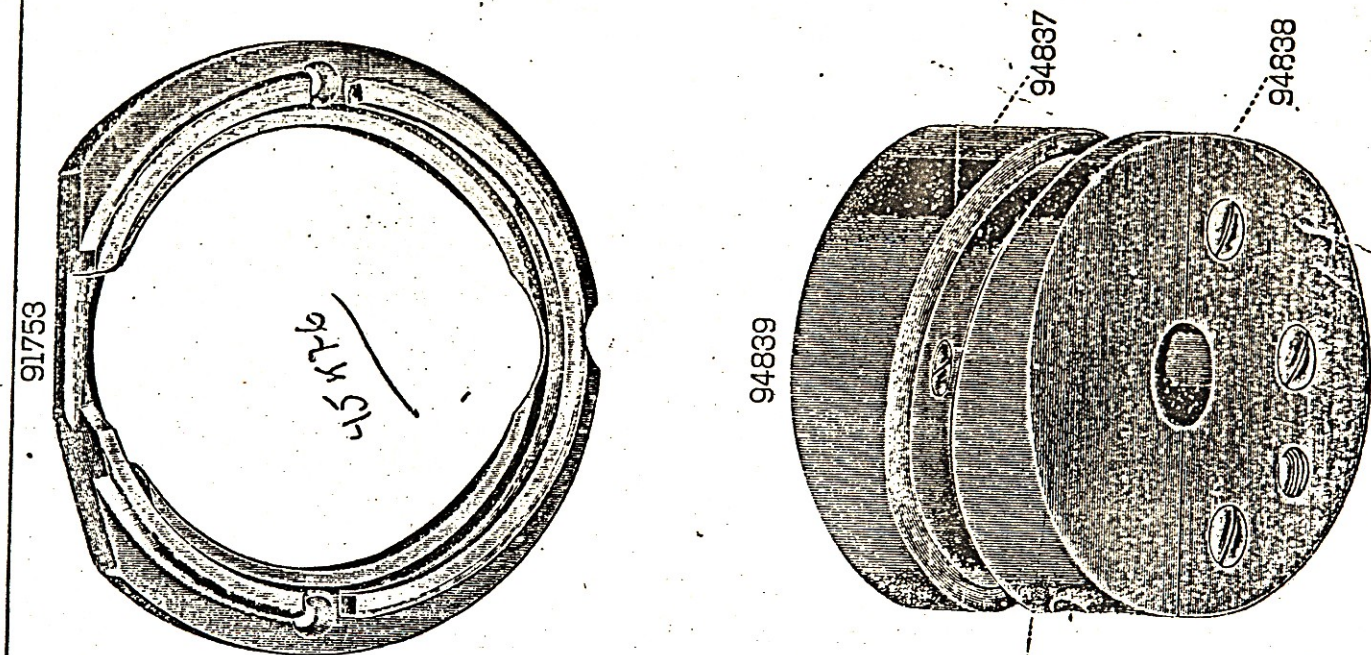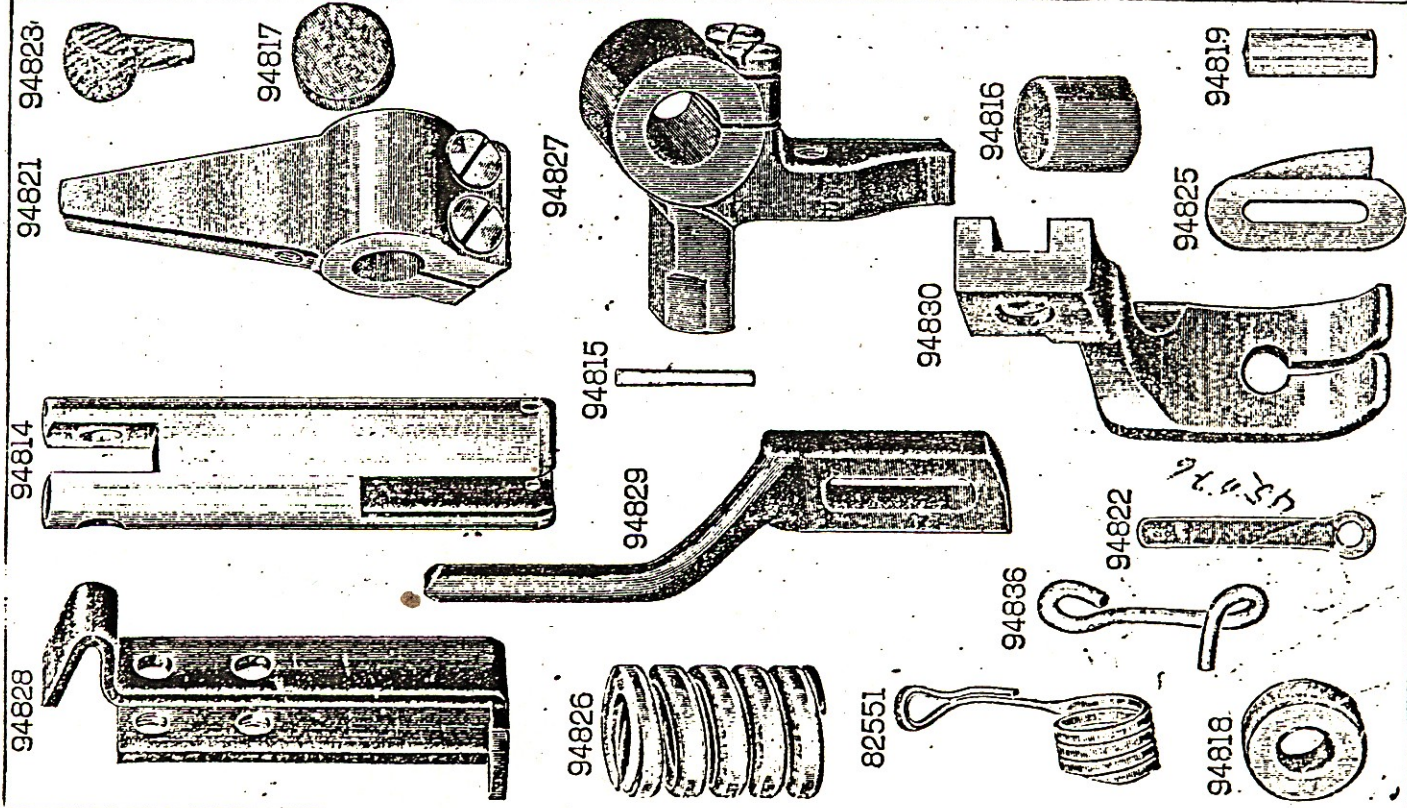  


94840

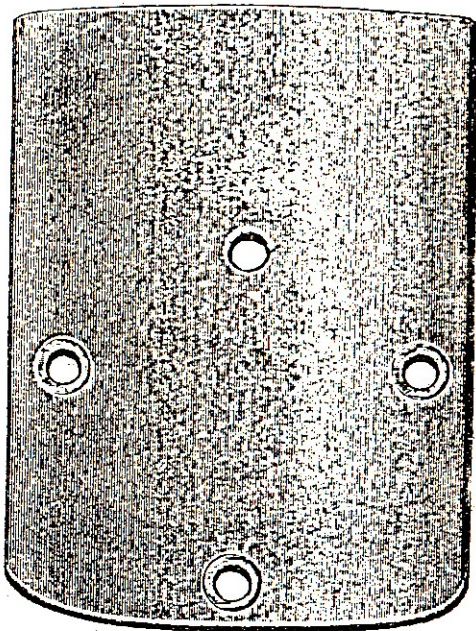 


91153

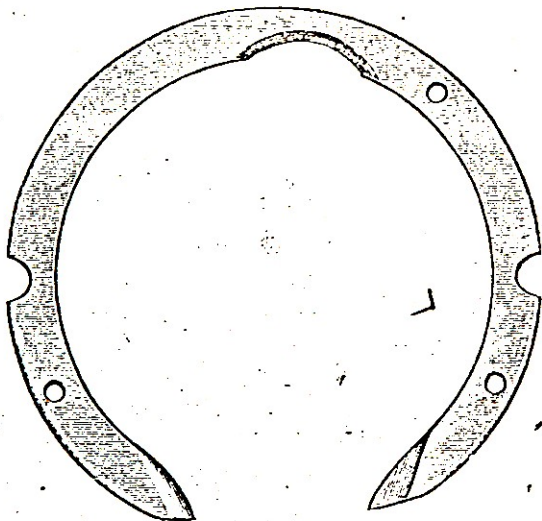 


SS425

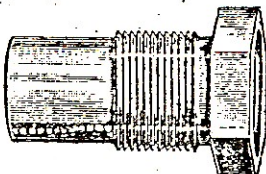 


82549

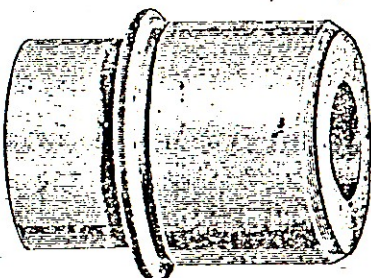 


98674

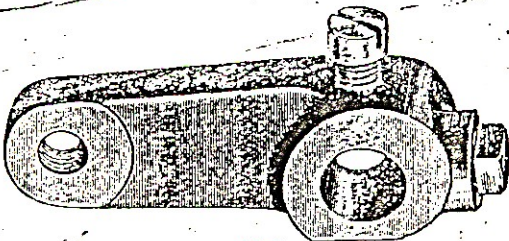 


SS517

 


94857

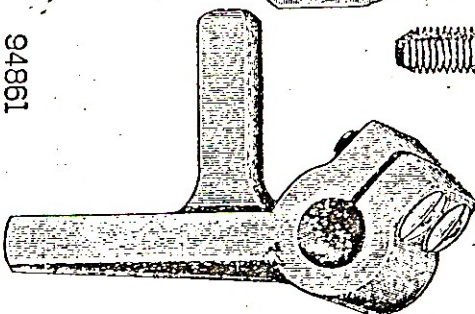 


94861


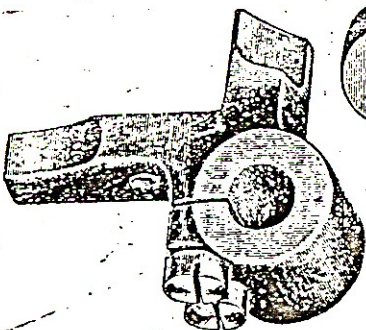 


91652

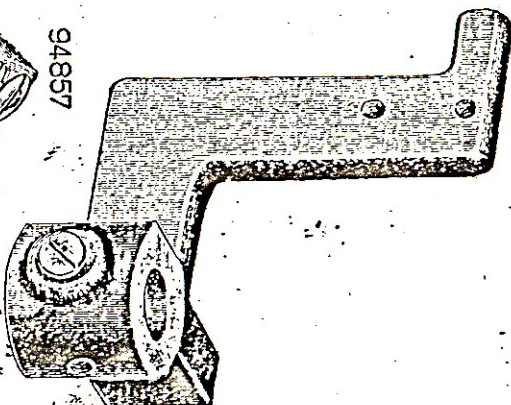 


94860

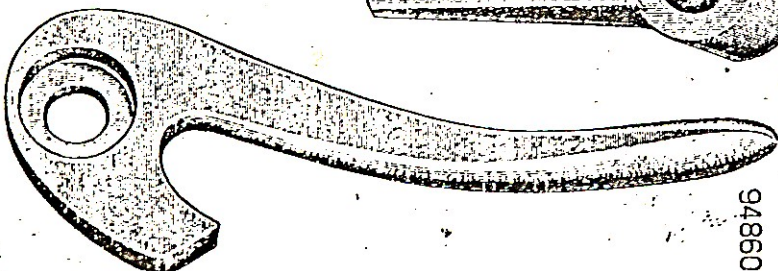 

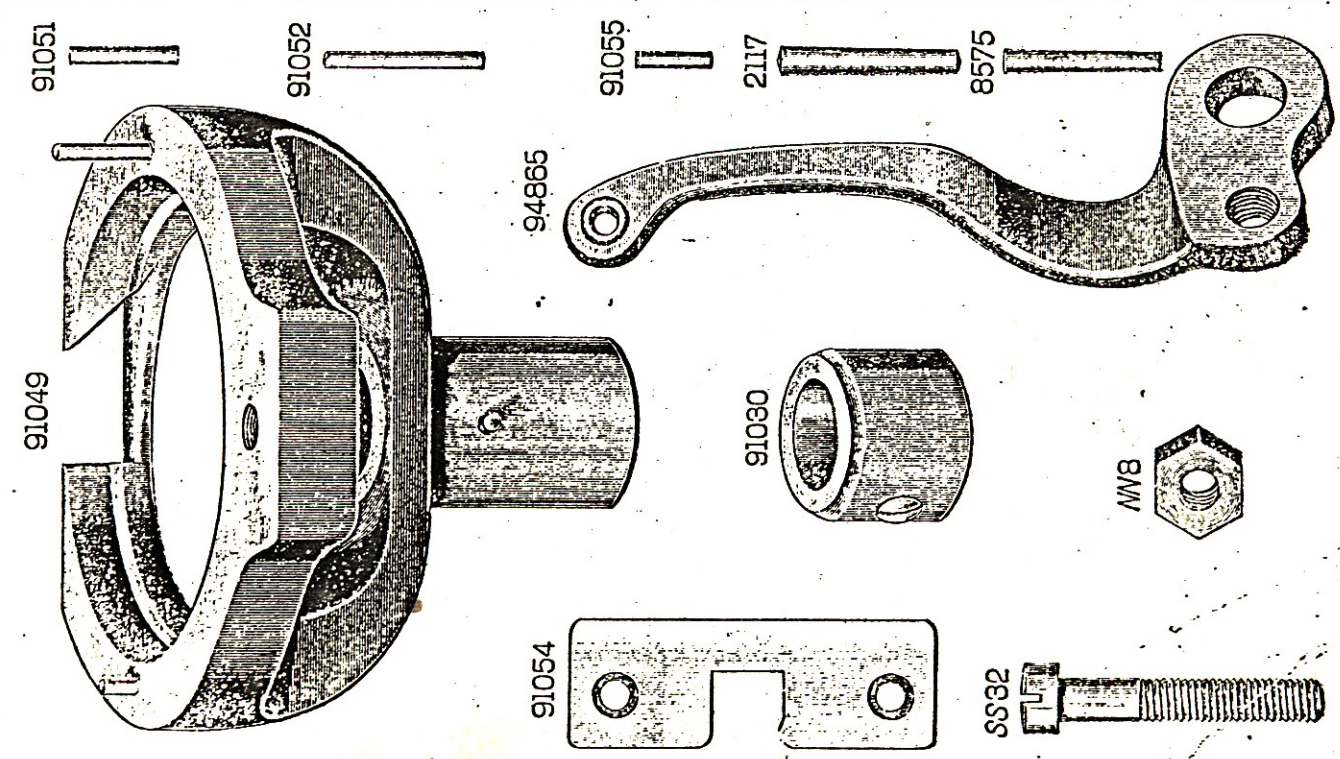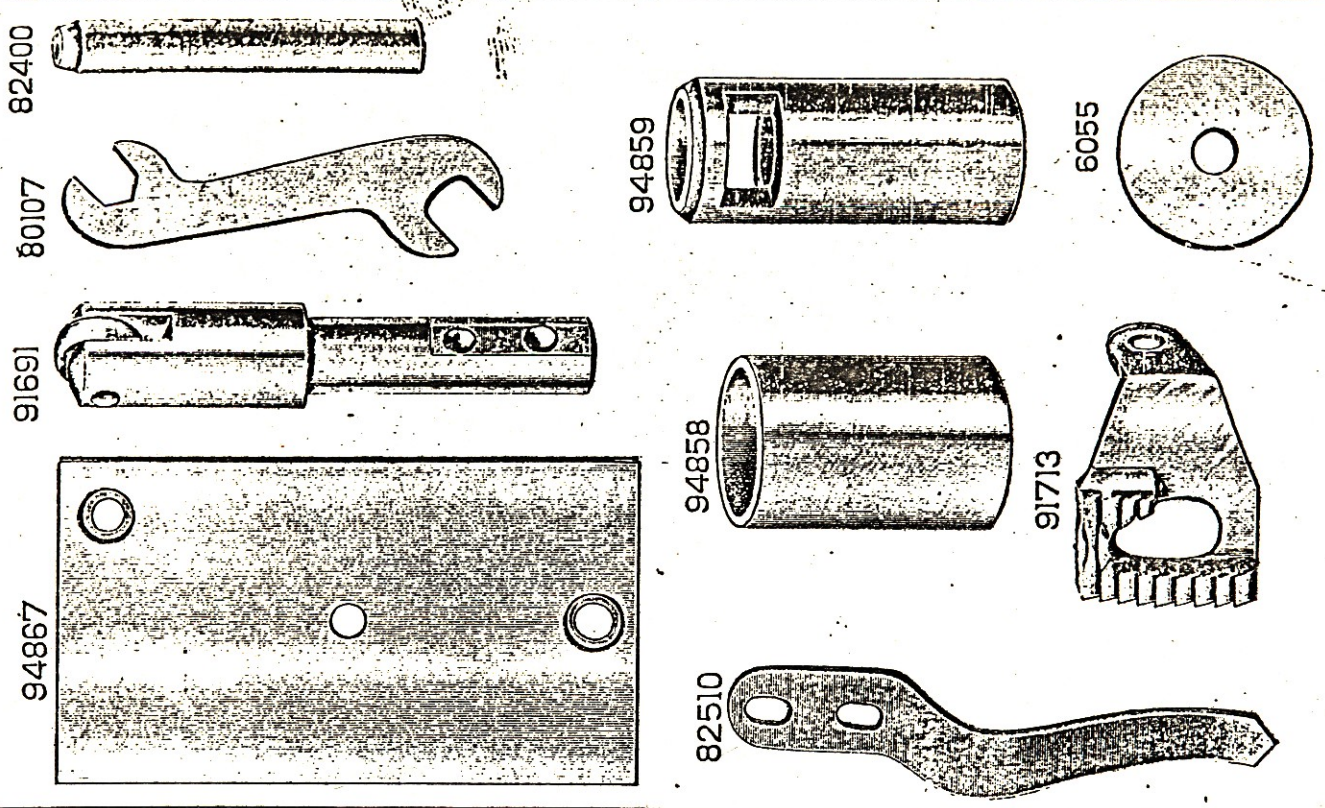  

94854

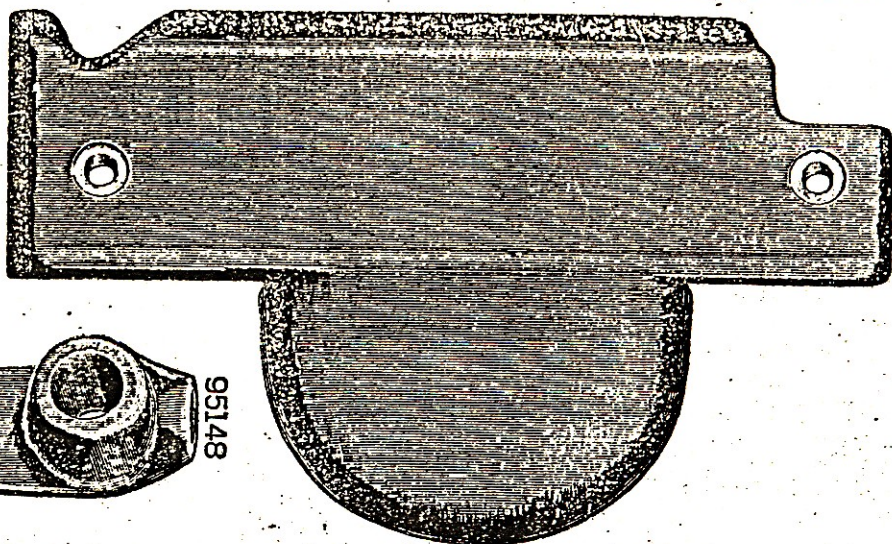 


95149



95148



 
95150

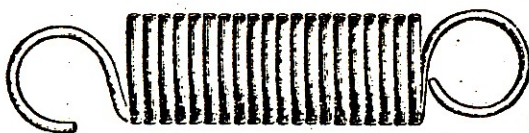

7958 91298



 
91306

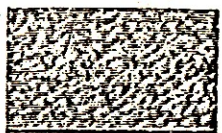


91166



 91057


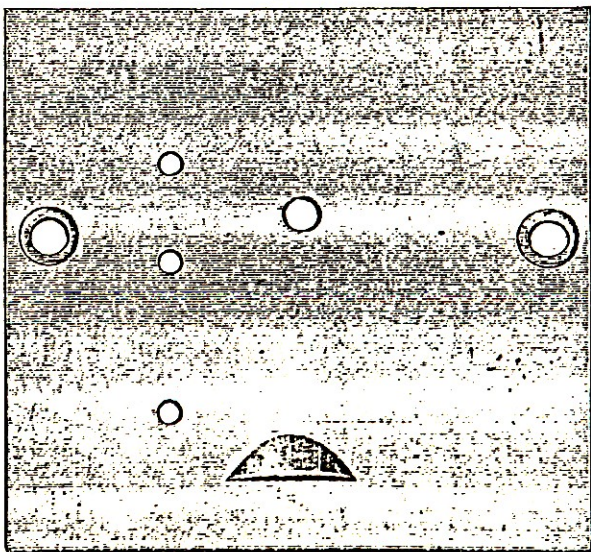


91058

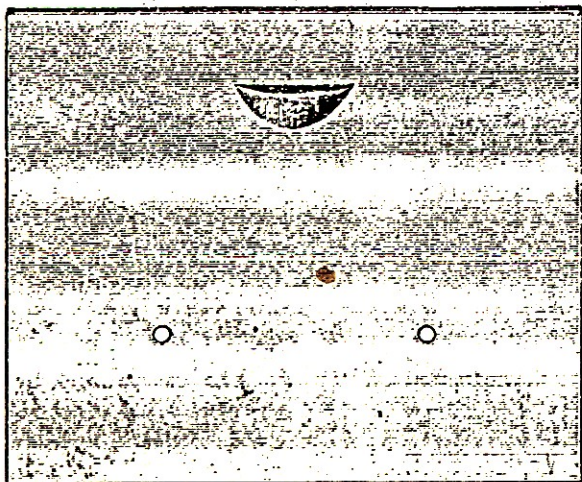 


91059




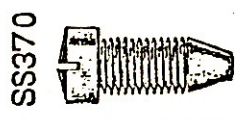  


91614

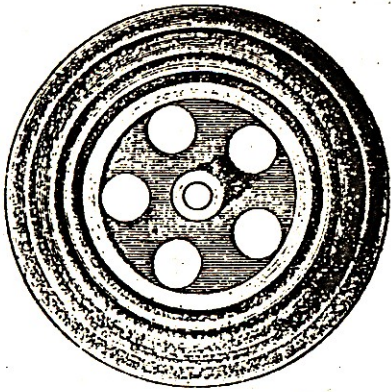 


91475

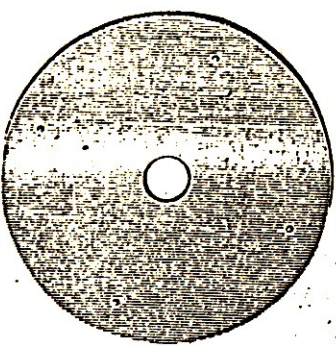 

84275

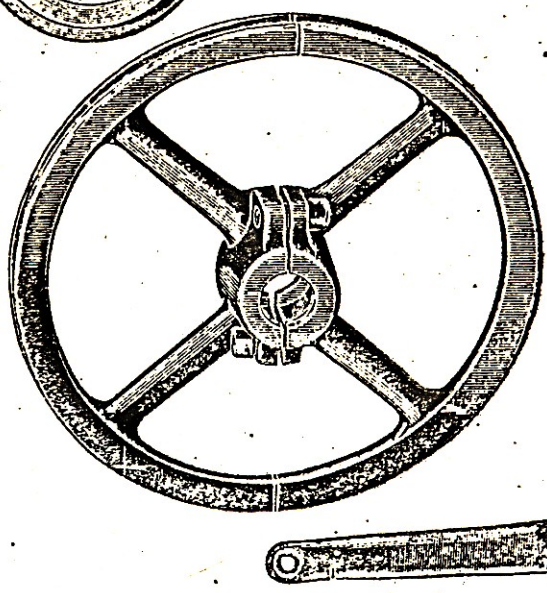 

91723

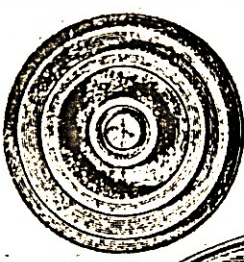 


91294





91302


 
91721

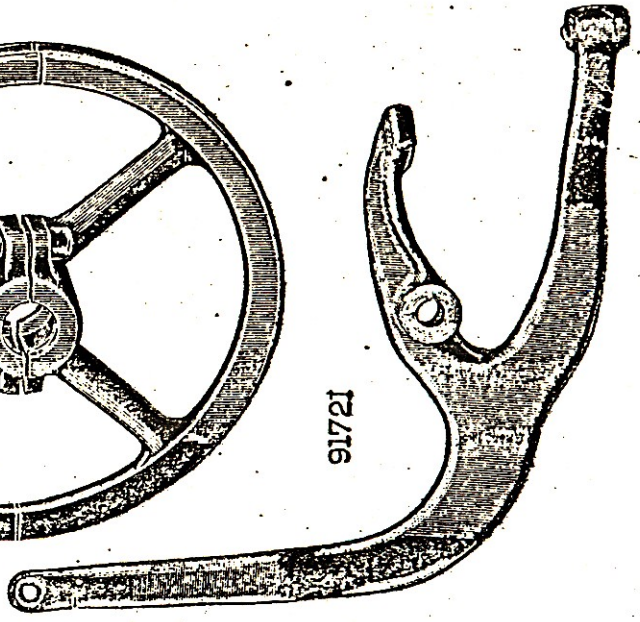


91303



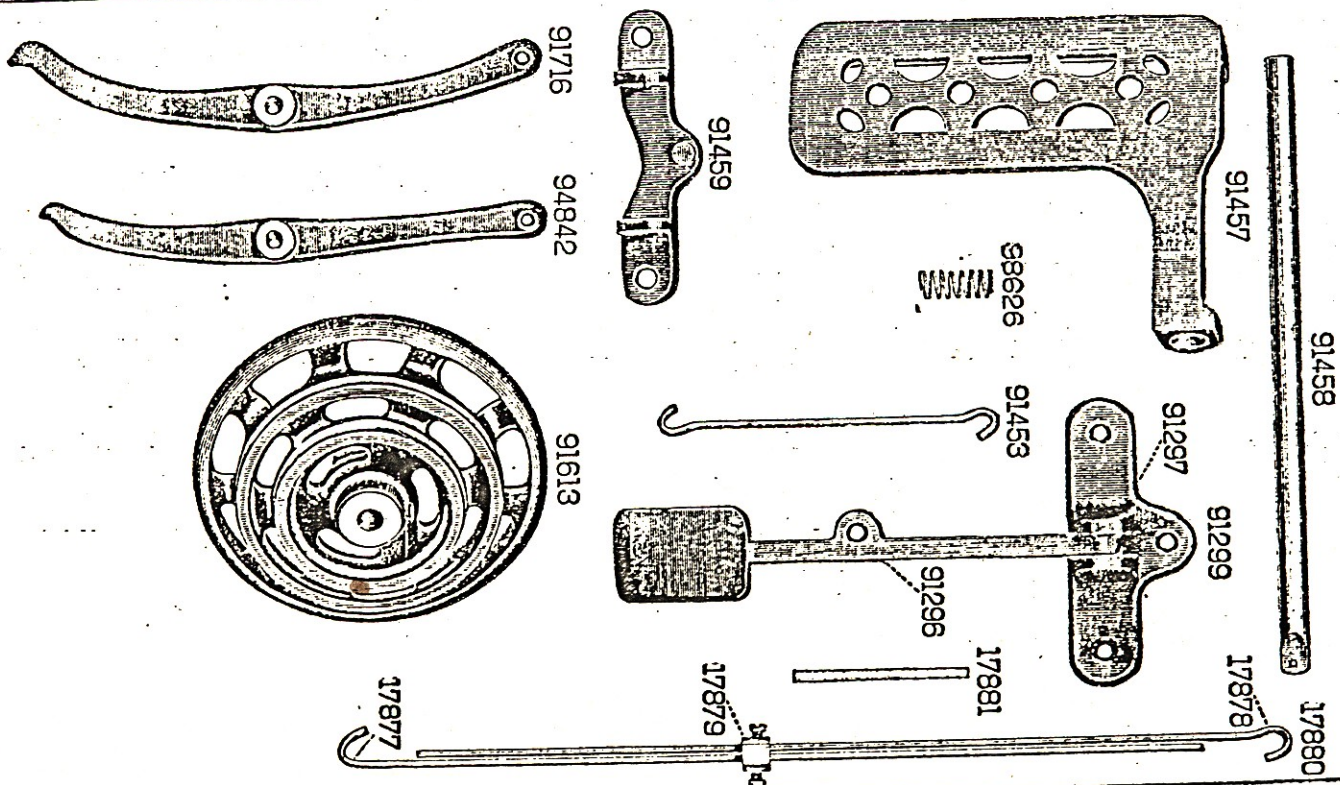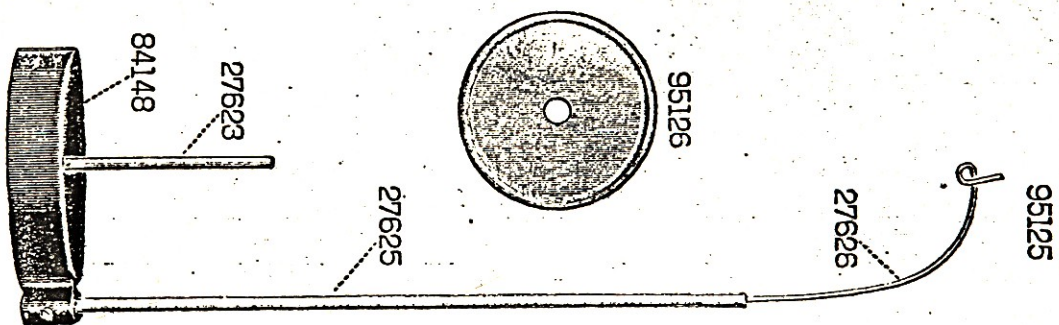  

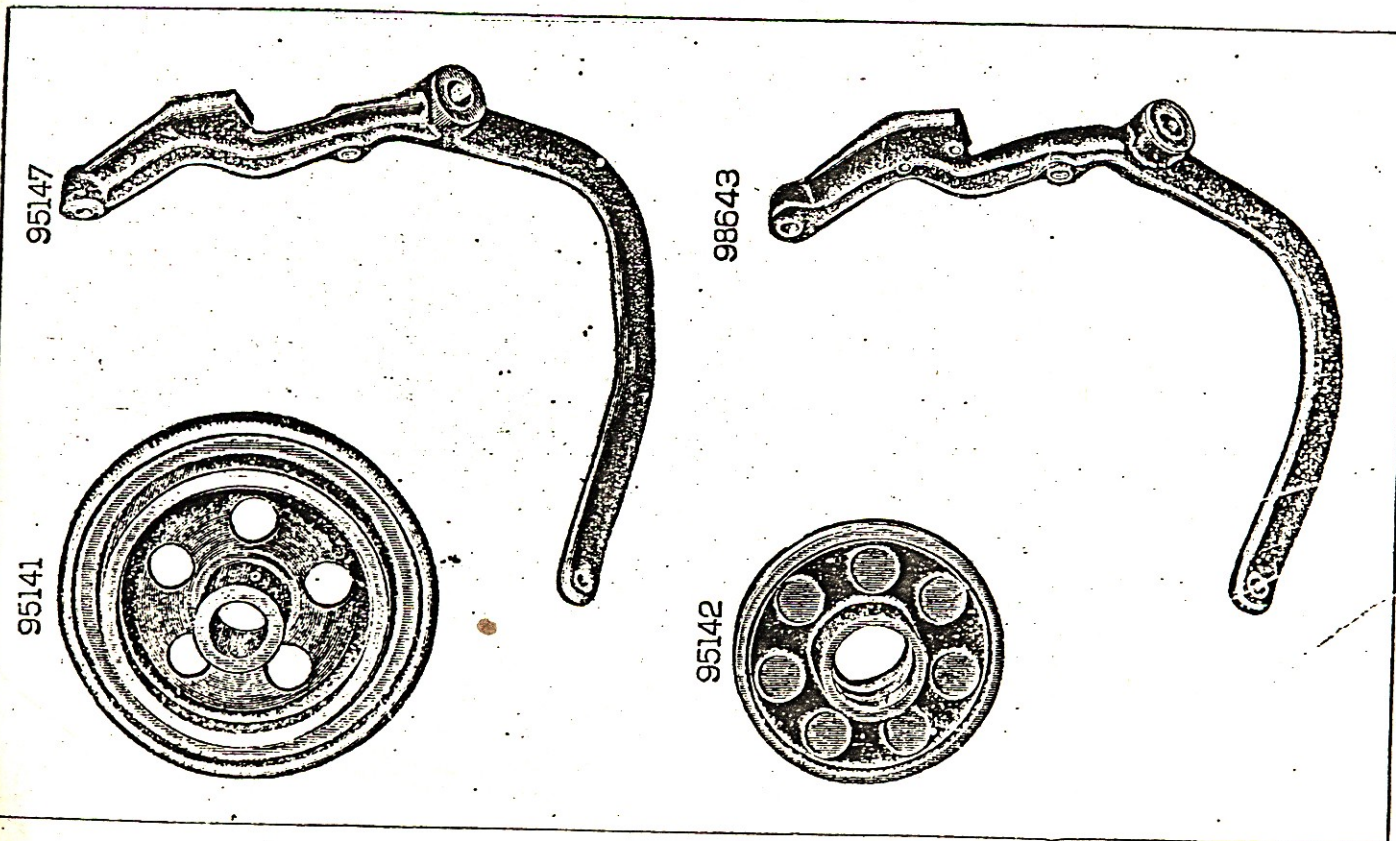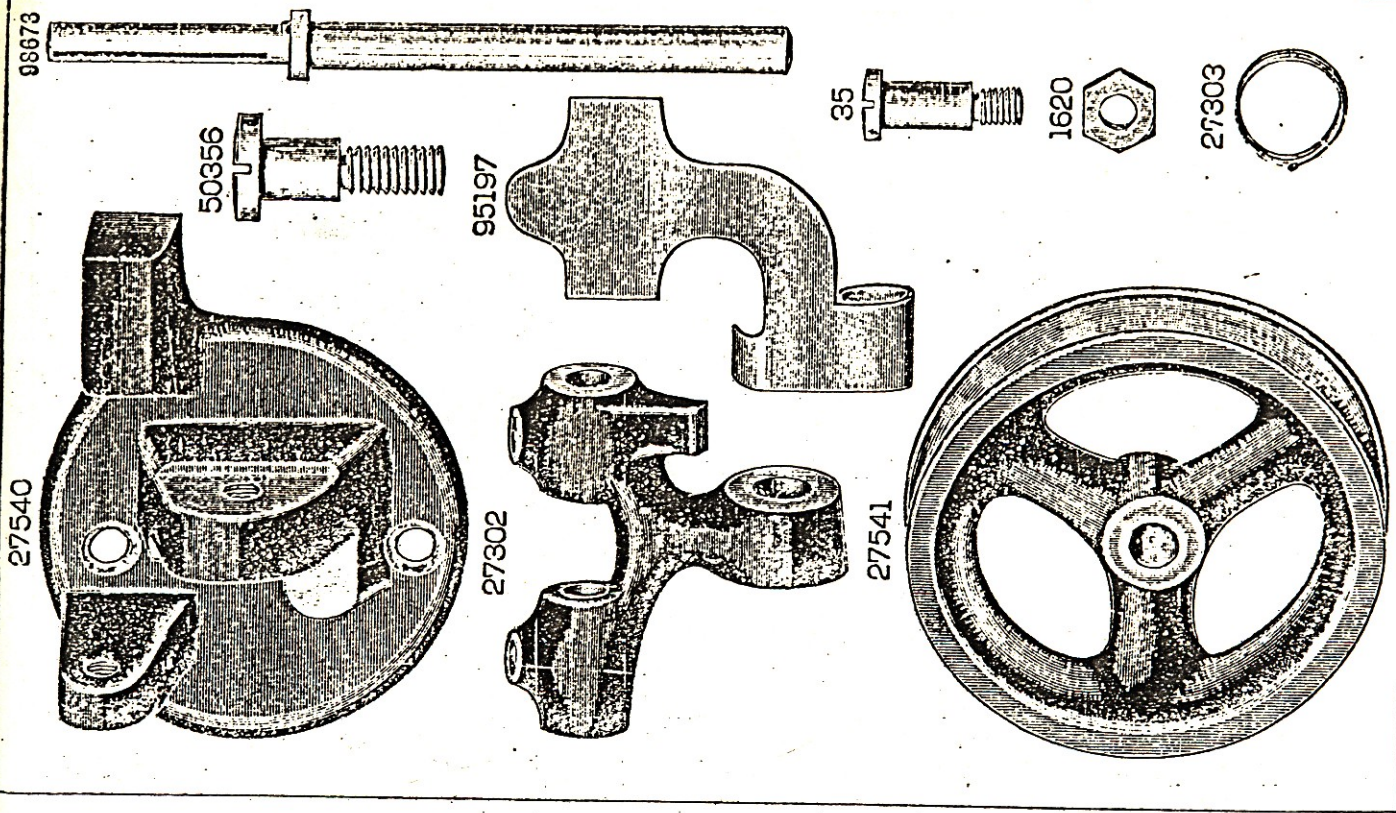  

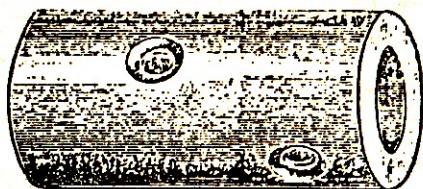 


91029




82521

 
91053

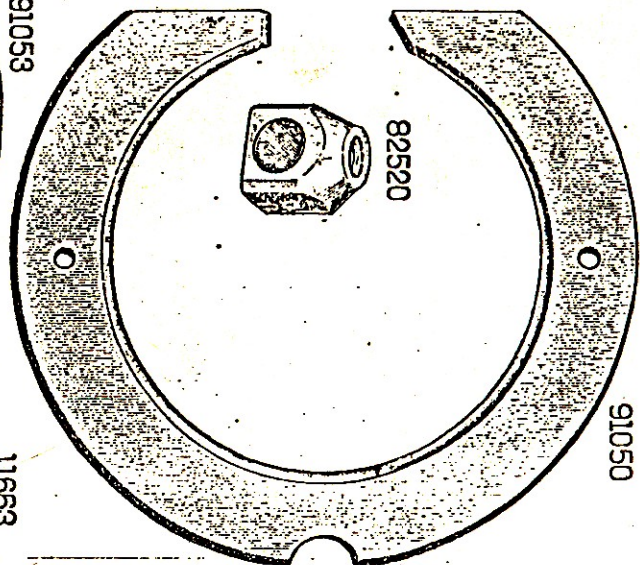


91050

 

82520

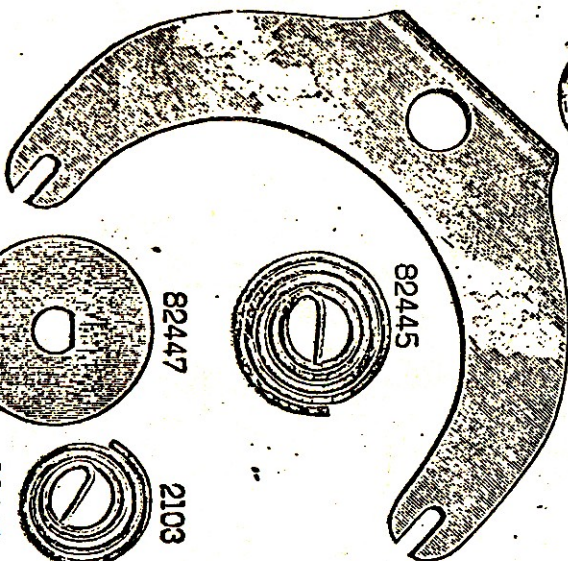 

82445

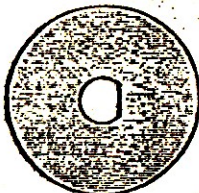 

82447



2103

 
82449



82450




82525

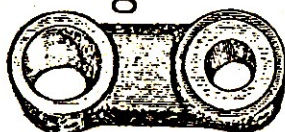


52165



 
11663

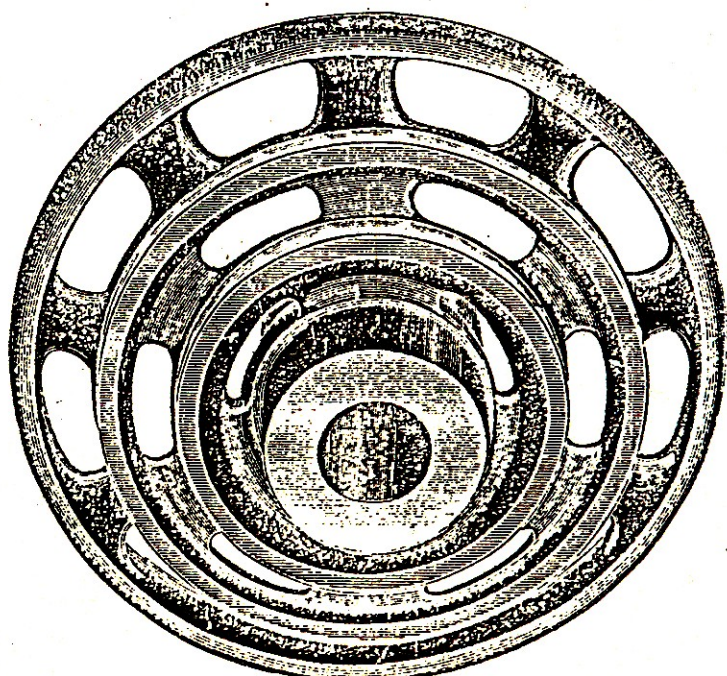


95189

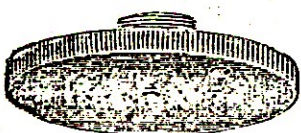 



SS463

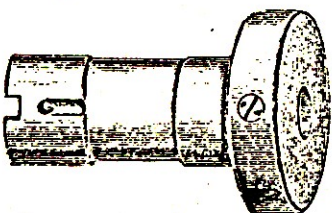 


95146

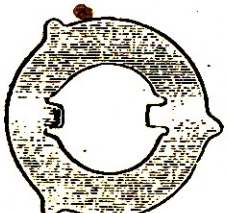 


95145

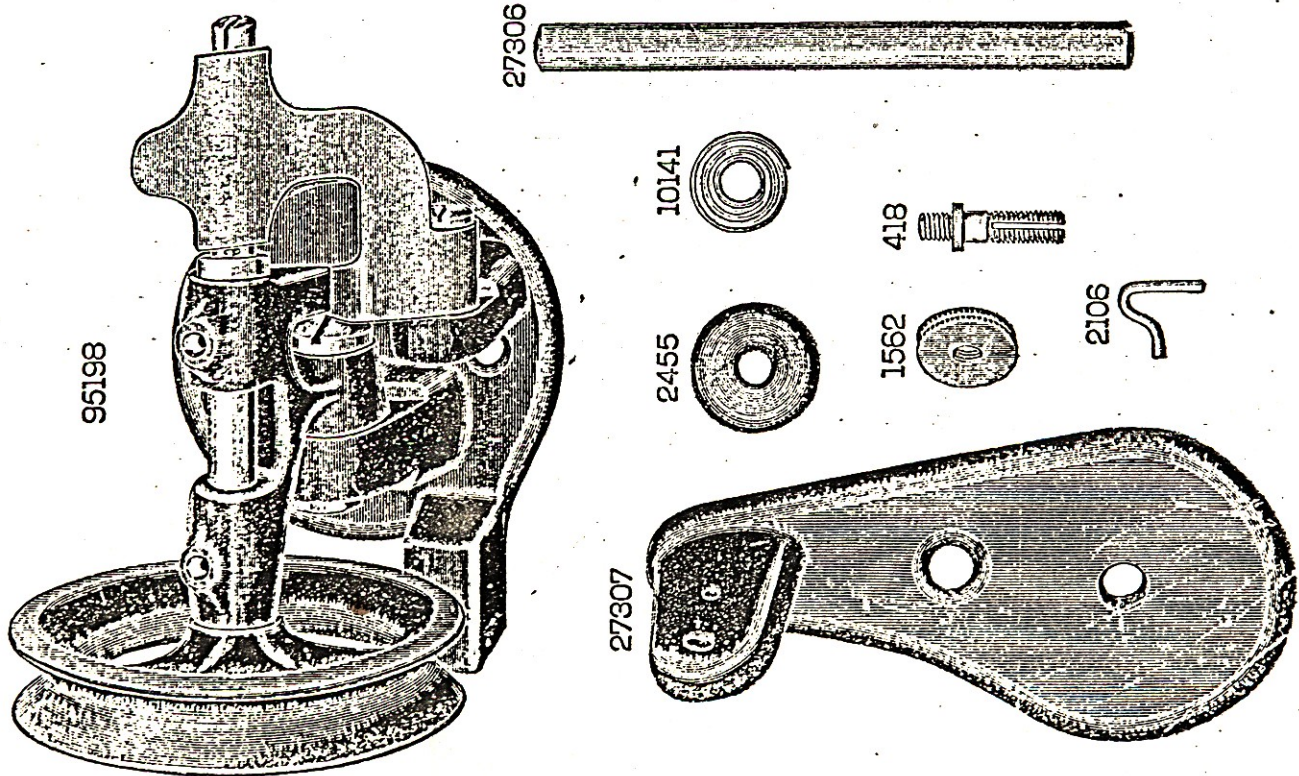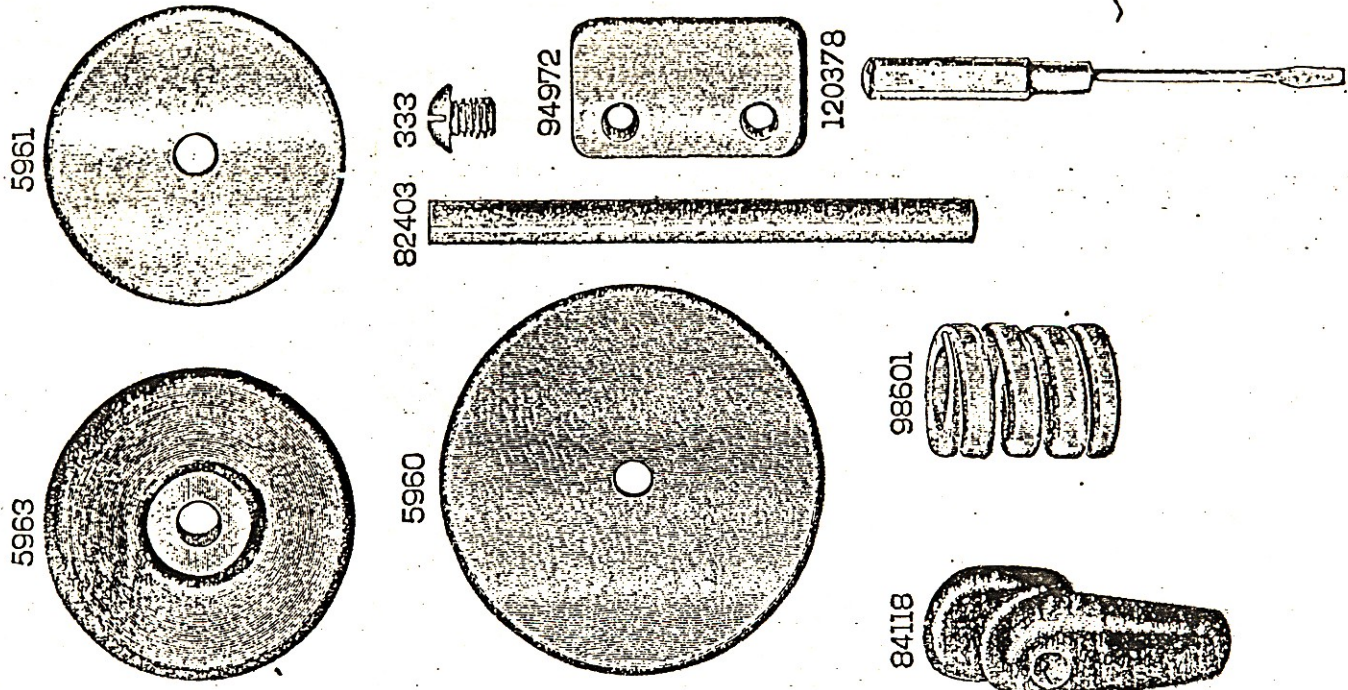  


86611

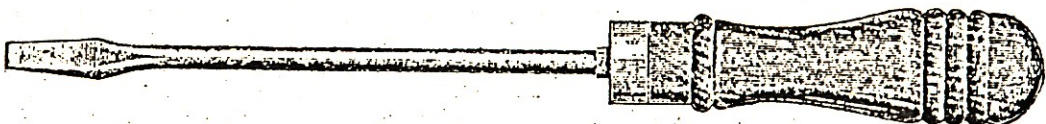 

120342

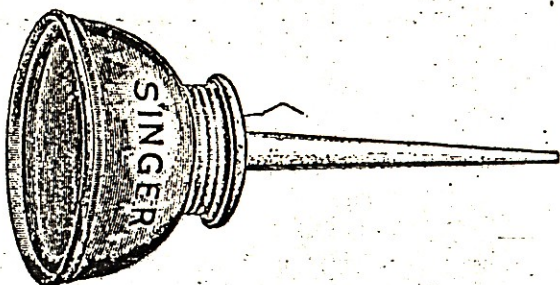 

SS22

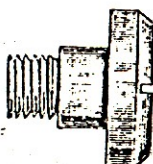 


SS32



SS38



 SS39



41




SS45



SS46



 32

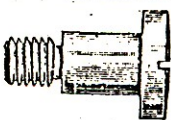

SS50




SS56




SS65



 SS115

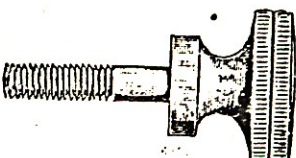

118

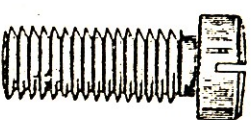 


161



220



 144

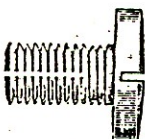

156



157



158



176



180



SS186



190



207



219



 
50406




233



286



287

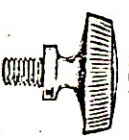 


304










313



        SS313

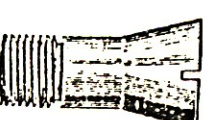

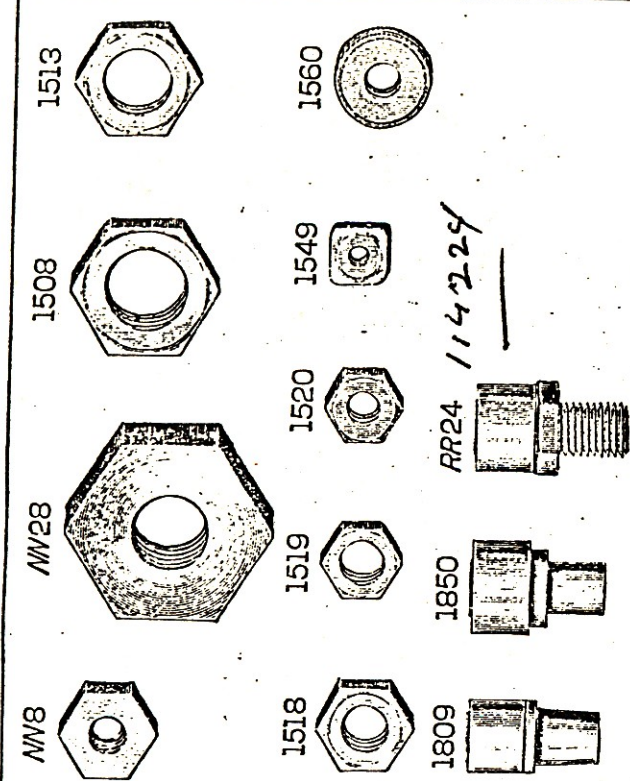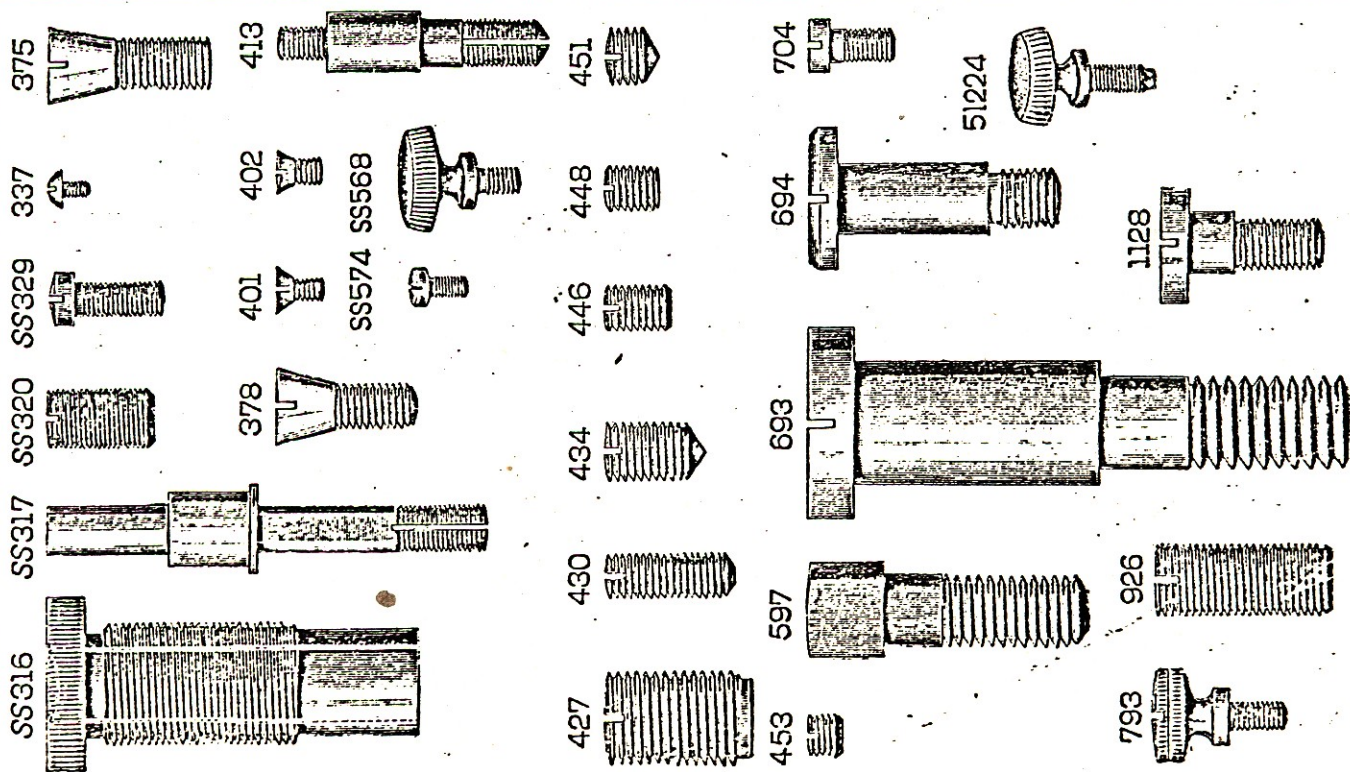

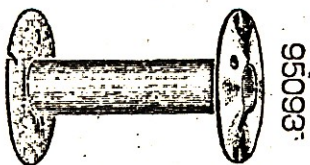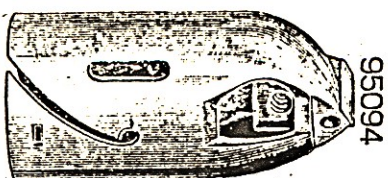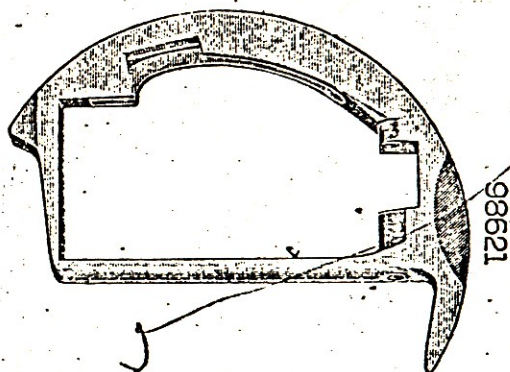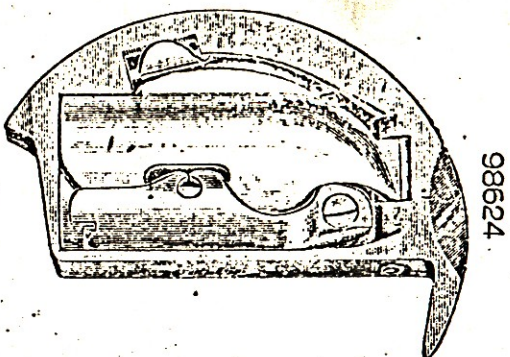

91042



91043




SS377




233




 
98627

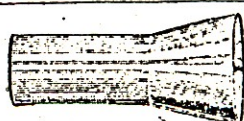

94872

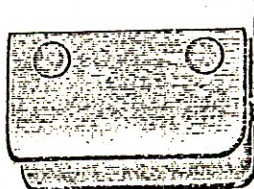 

98607

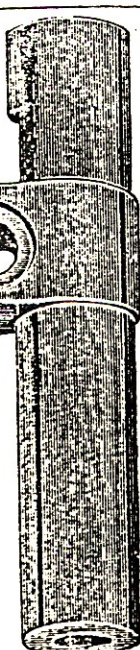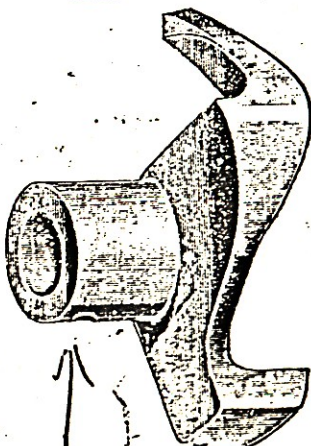  

98630

98614



 
1668

 
 


 
 
98611

98609


98610

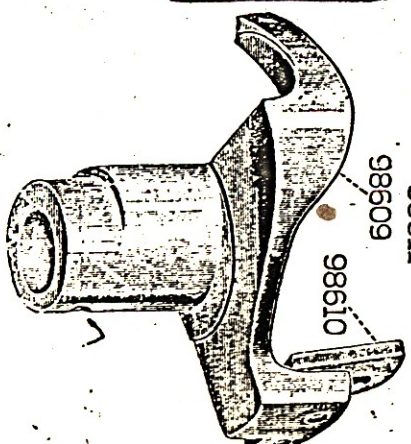

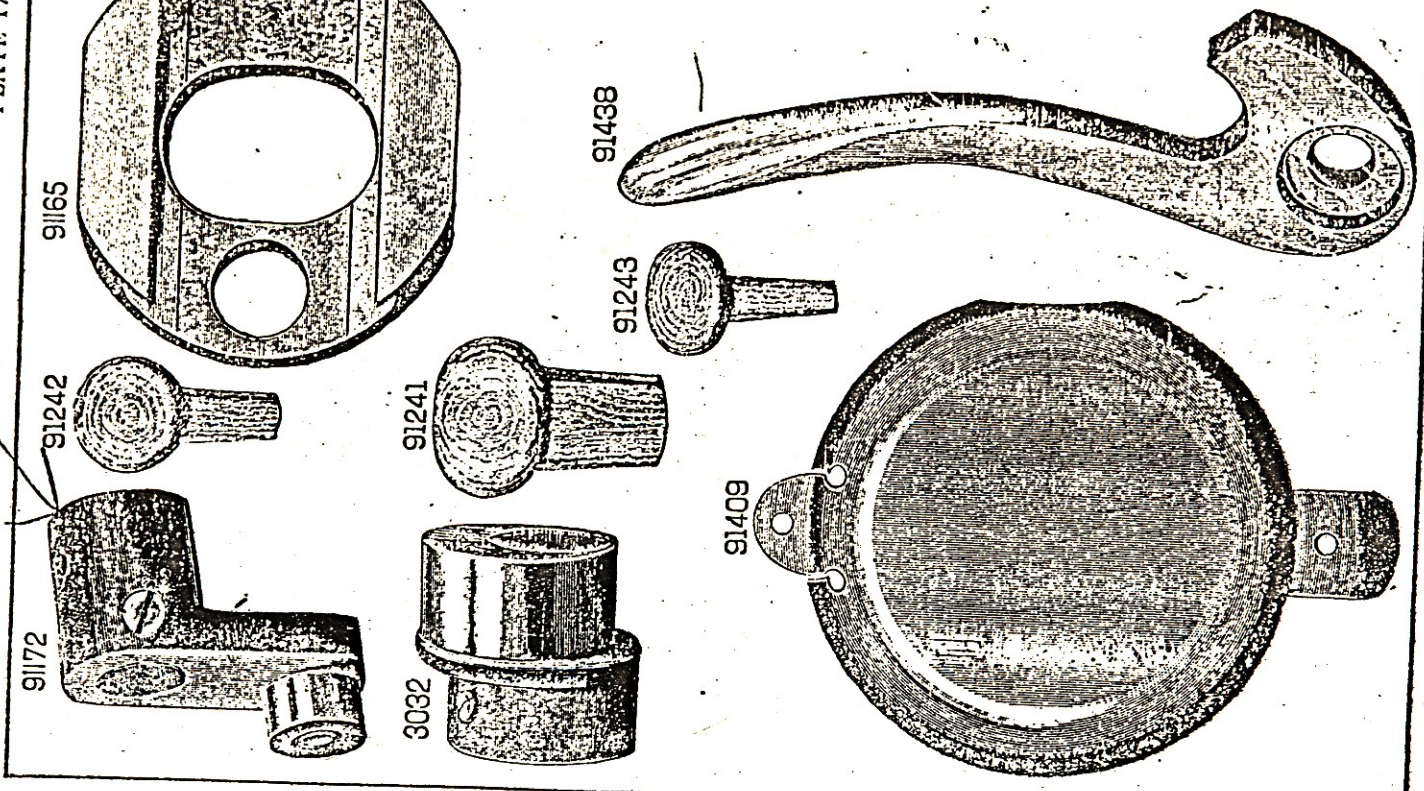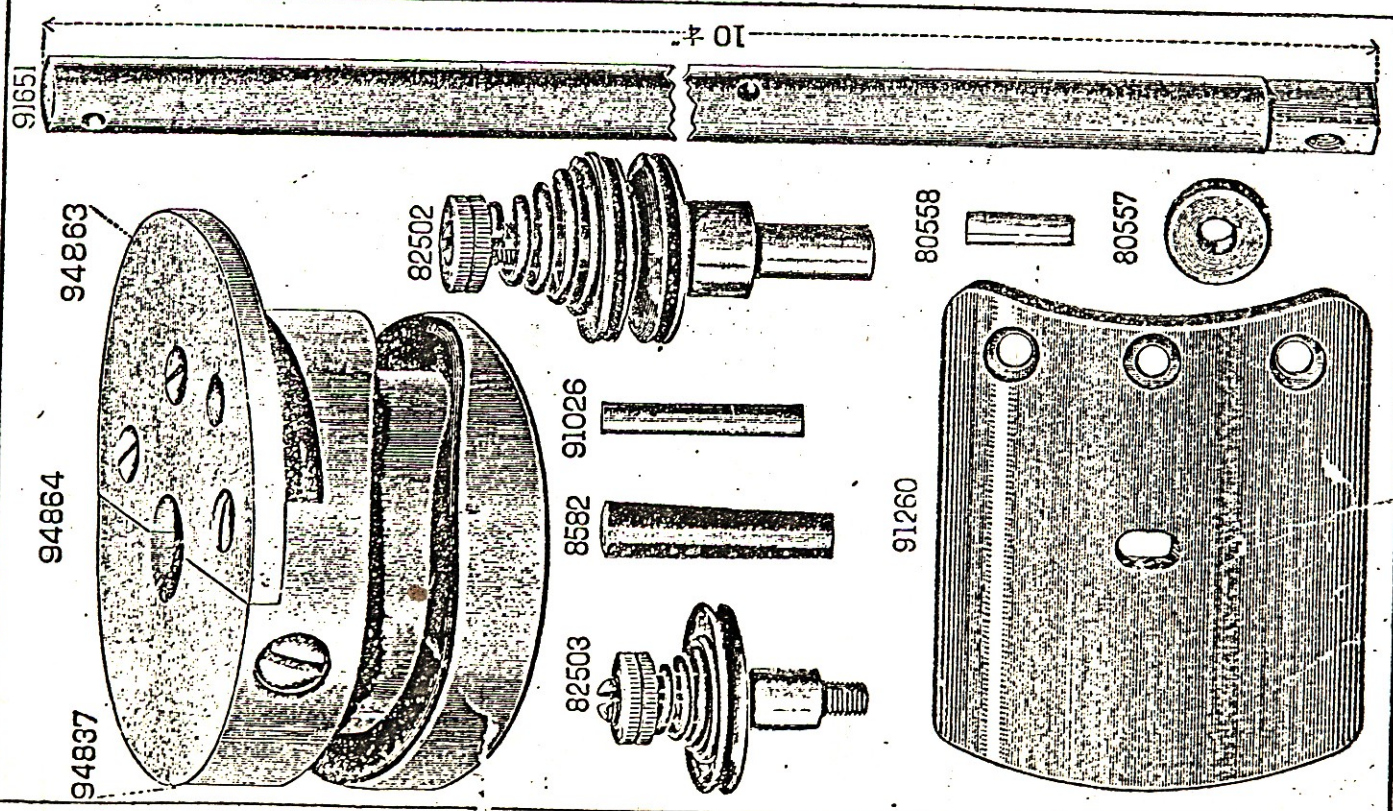


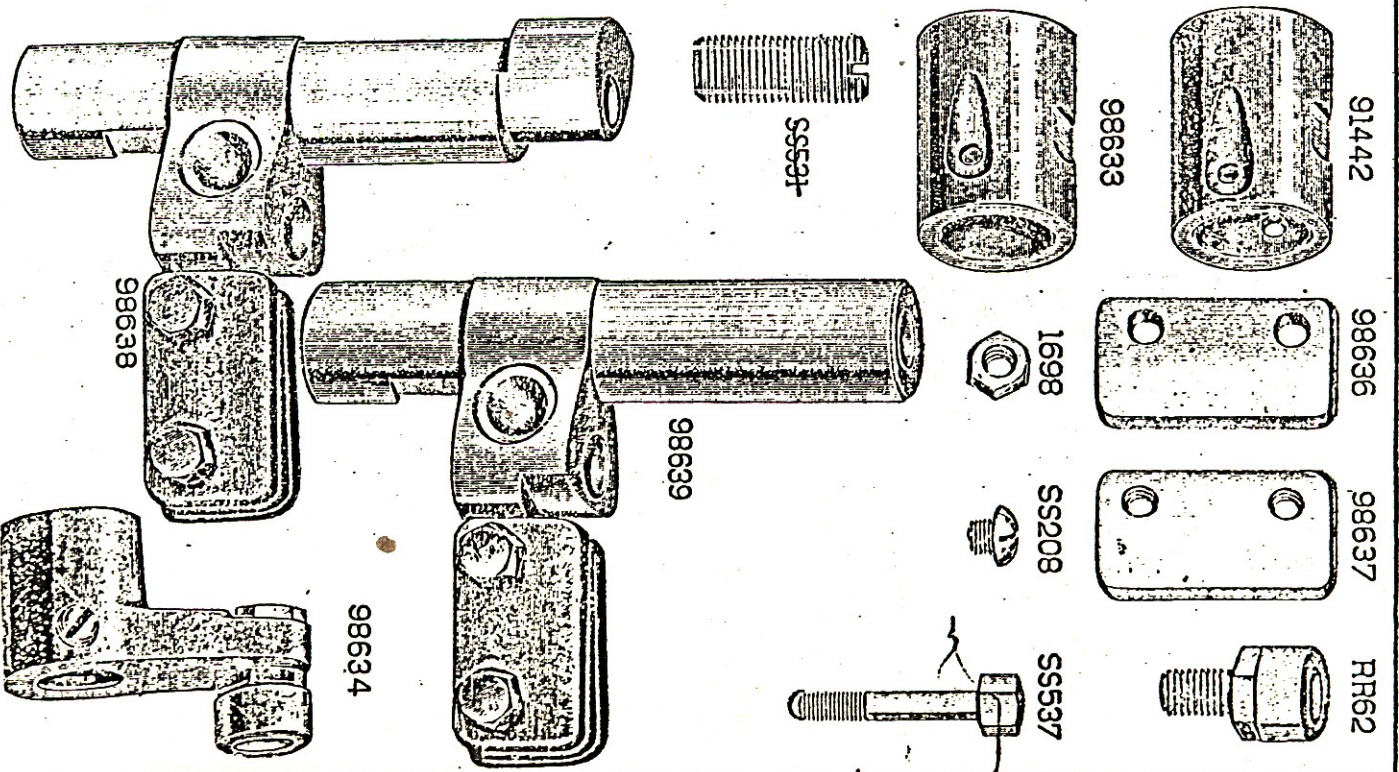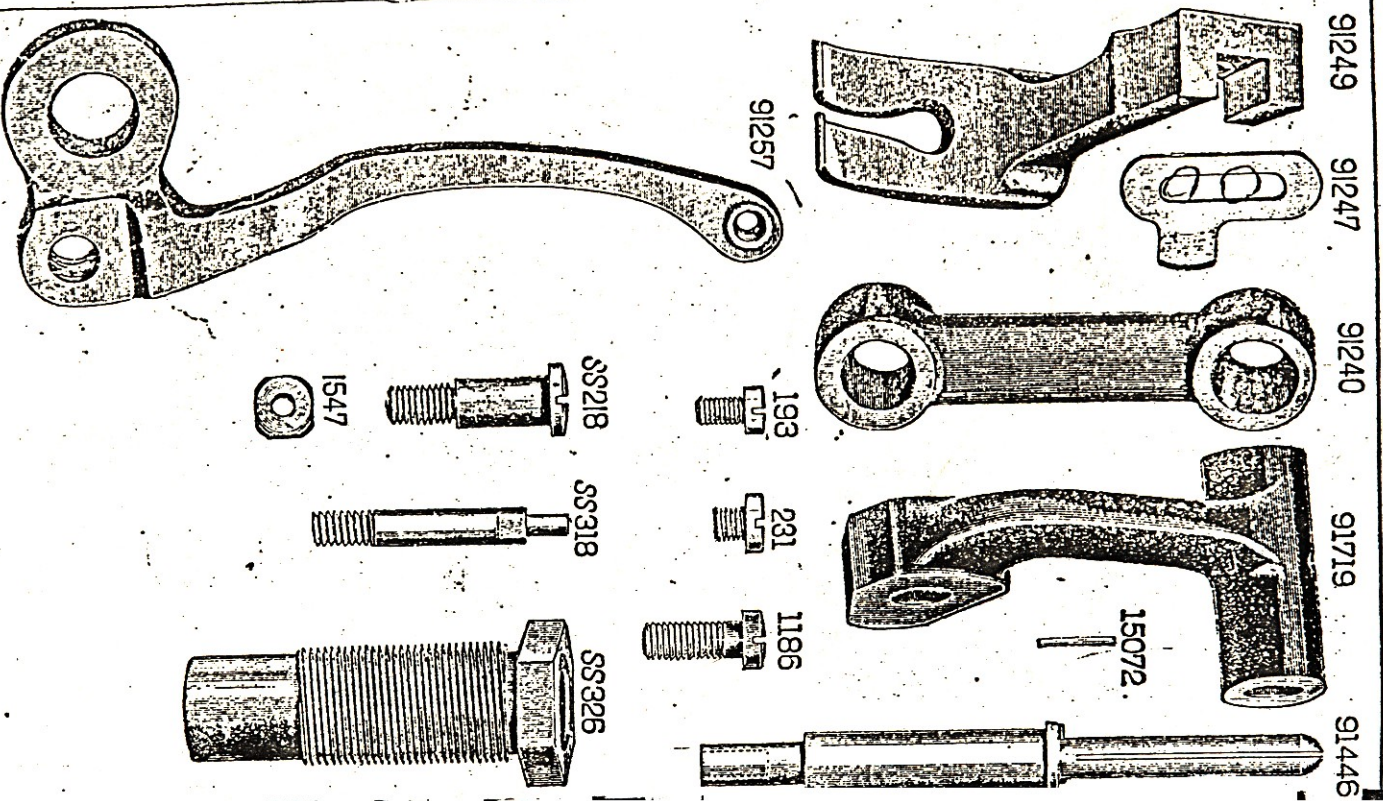

98680

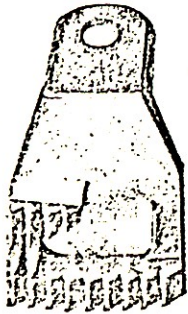 

98635

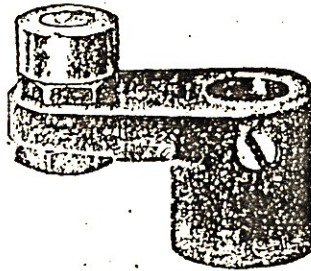 

98606



98507

