 


ESCANIADO



POCKET WELTING MACHINE

series 46/47

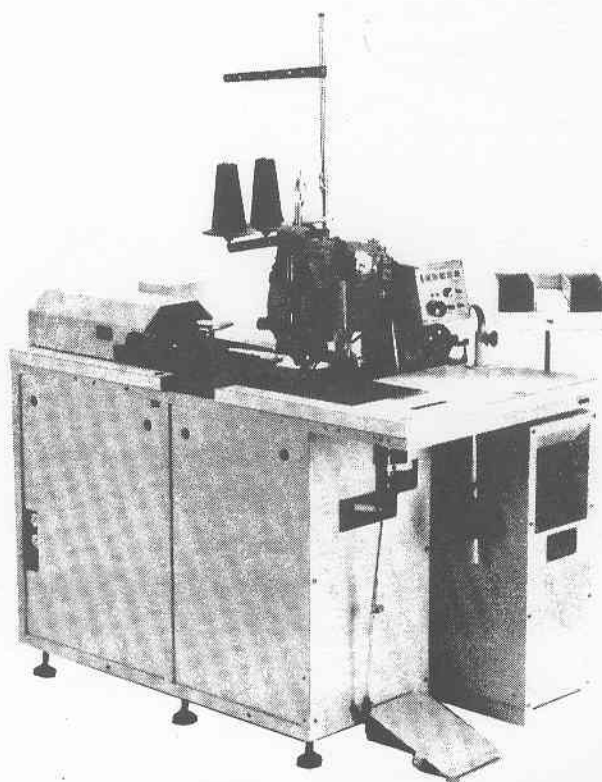

Cavemac

Controle do Acervo de Catálogos

Identificação	646
Edição	1985
Conteúdo	REECE 46





00000646



Illustrated

CONTENTS


MACHINE BODY & THREADING	2/2 - 2/3
UPPER SHAFT & NEEDLE BAR ROCKING MECHANISM	2/4 - 2/5
PRESSER FOOT, FEED, & ROTARY HOOK MECHANISM	2/6 - 2/7
LOWER SHAFT	2/8 - 2/9
LUBRICATION	2/10 - 2/11
THREAD STAND	2/12 - 2/13
PARTS ON SEWING MACHINE	2/14 - 2/17
FRAMES & COVERS	2/18 - 2/19
TABLE	2/20 - 2/21
THREAD TRIMMING	2/22 - 2/23
CENTER KNIFE	2/24 - 2/25
TAB KNIFE	2/26 - 2/29
CLAMP FOOT	2/30 - 2/33
CLAMP FOOT CYLINDER	2/34 - 2/35
PEDAL	2/36 - 2/37
CONTROL BOXES	2/38 - 2/39
INTERRELATED SWITCHES	2/40 - 2/41
ELECTRICAL APPLIANCES	2/42 - 2/43
AIR & HYDRAULIC PARTS	2/44 - 2/45
PARTS SPECIAL TO SERIES 46 MODELS	2/46 - 2/49
ACCESSORIES	2/50 - 2/51
PARTS INDEX	3/1 - 3/10

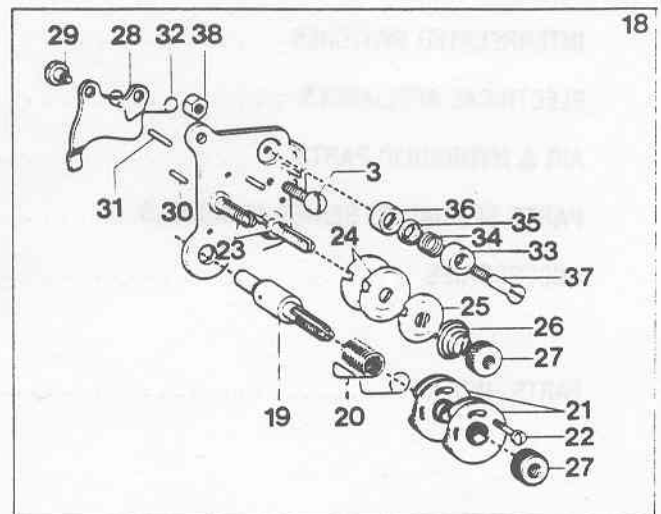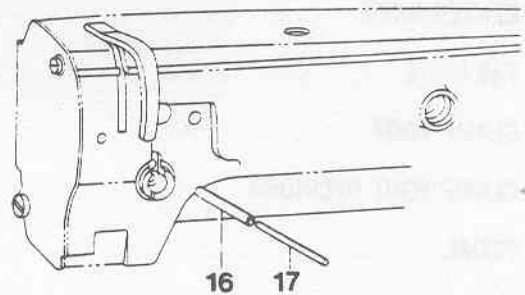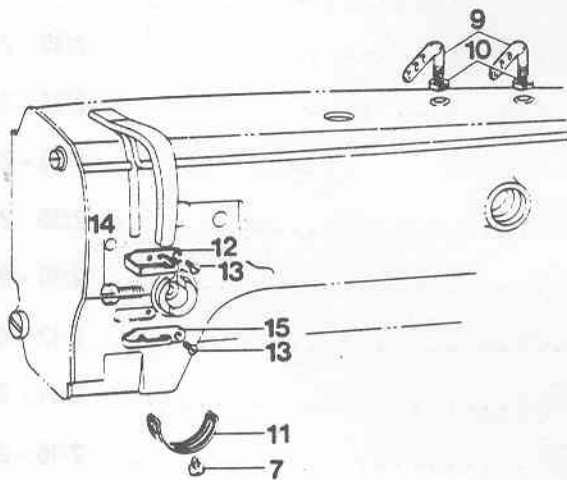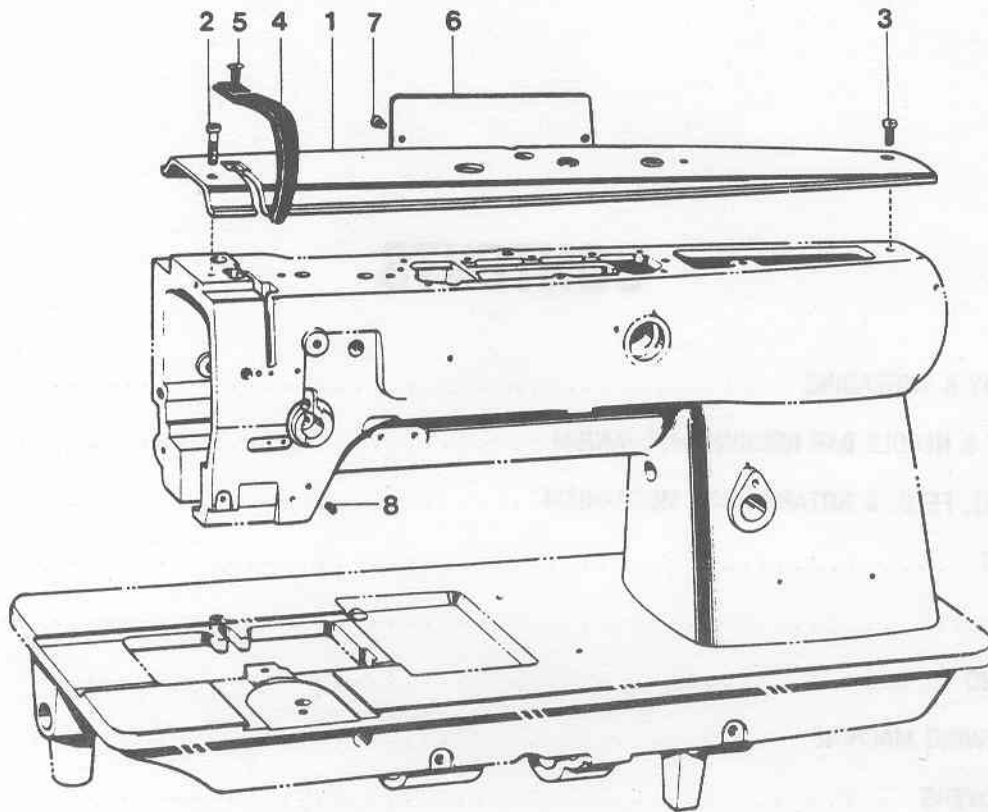    

MACHINE BODY & THREADING

2/3







Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-5-001	Cover	31	46-1001-5-012	Pin
2	46-1000-8-200	Screw	32	46-1001-5-015	Tension Rules Spring
3	46-1000-8-201	Screw	33	46-1001-5-005	Cap
4	46-1001-5-000	Take-up Cover	34	46-1001-5-006	Thread Guide Spring
5	46-1000-8-228	Screw			
6	46-1001-5-002	Rear Cover	35	46-1001-5-007	Disc
7	46-1000-8-202	Screw	36	46-1001-5-008	Thread Guide Bracket
8	46-1000-8-245	Screw	37	46-1000-8-225	Stud Screw
9	46-1001-5-003	Thread Guide	38	46-1000-8-223	Nut
10	46-1000-8-252	Nut			
11	46-1001-5-019	Stop			
12	46-1001-5-020	Thread Guide (Upper)			
13	46-1000-8-229	Screw			
14	46-1000-8-203	Screw			
15	46-1001-5-021	Thread Guide (Center)			
16	46-1001-5-022	Tube			
17	46-1001-5-023	Tension Release Bar			
18	46-1001-5-111	Upper Tension Control Assembly			
19	46-1001-5-017	Tension Stud			
20	46-1001-5-018	Take-up Spring			
21	46-1001-5-016	Spring Guide Assembly			
22	46-1000-8-204	Screw			
23	46-1001-5-110	Tension Stud			
24	46-1001-5-011	Tension Disc			
25	46-1001-5-010	Tension Disc			
26	46-1001-5-009	Tension Spring			
27	46-1000-8-256	Tension Control Nut			
28	46-1001-5-014	Tension Rules Plate			
29	46-1000-8-224	Stud Screw			
30	46-1001-5-013	Pin			

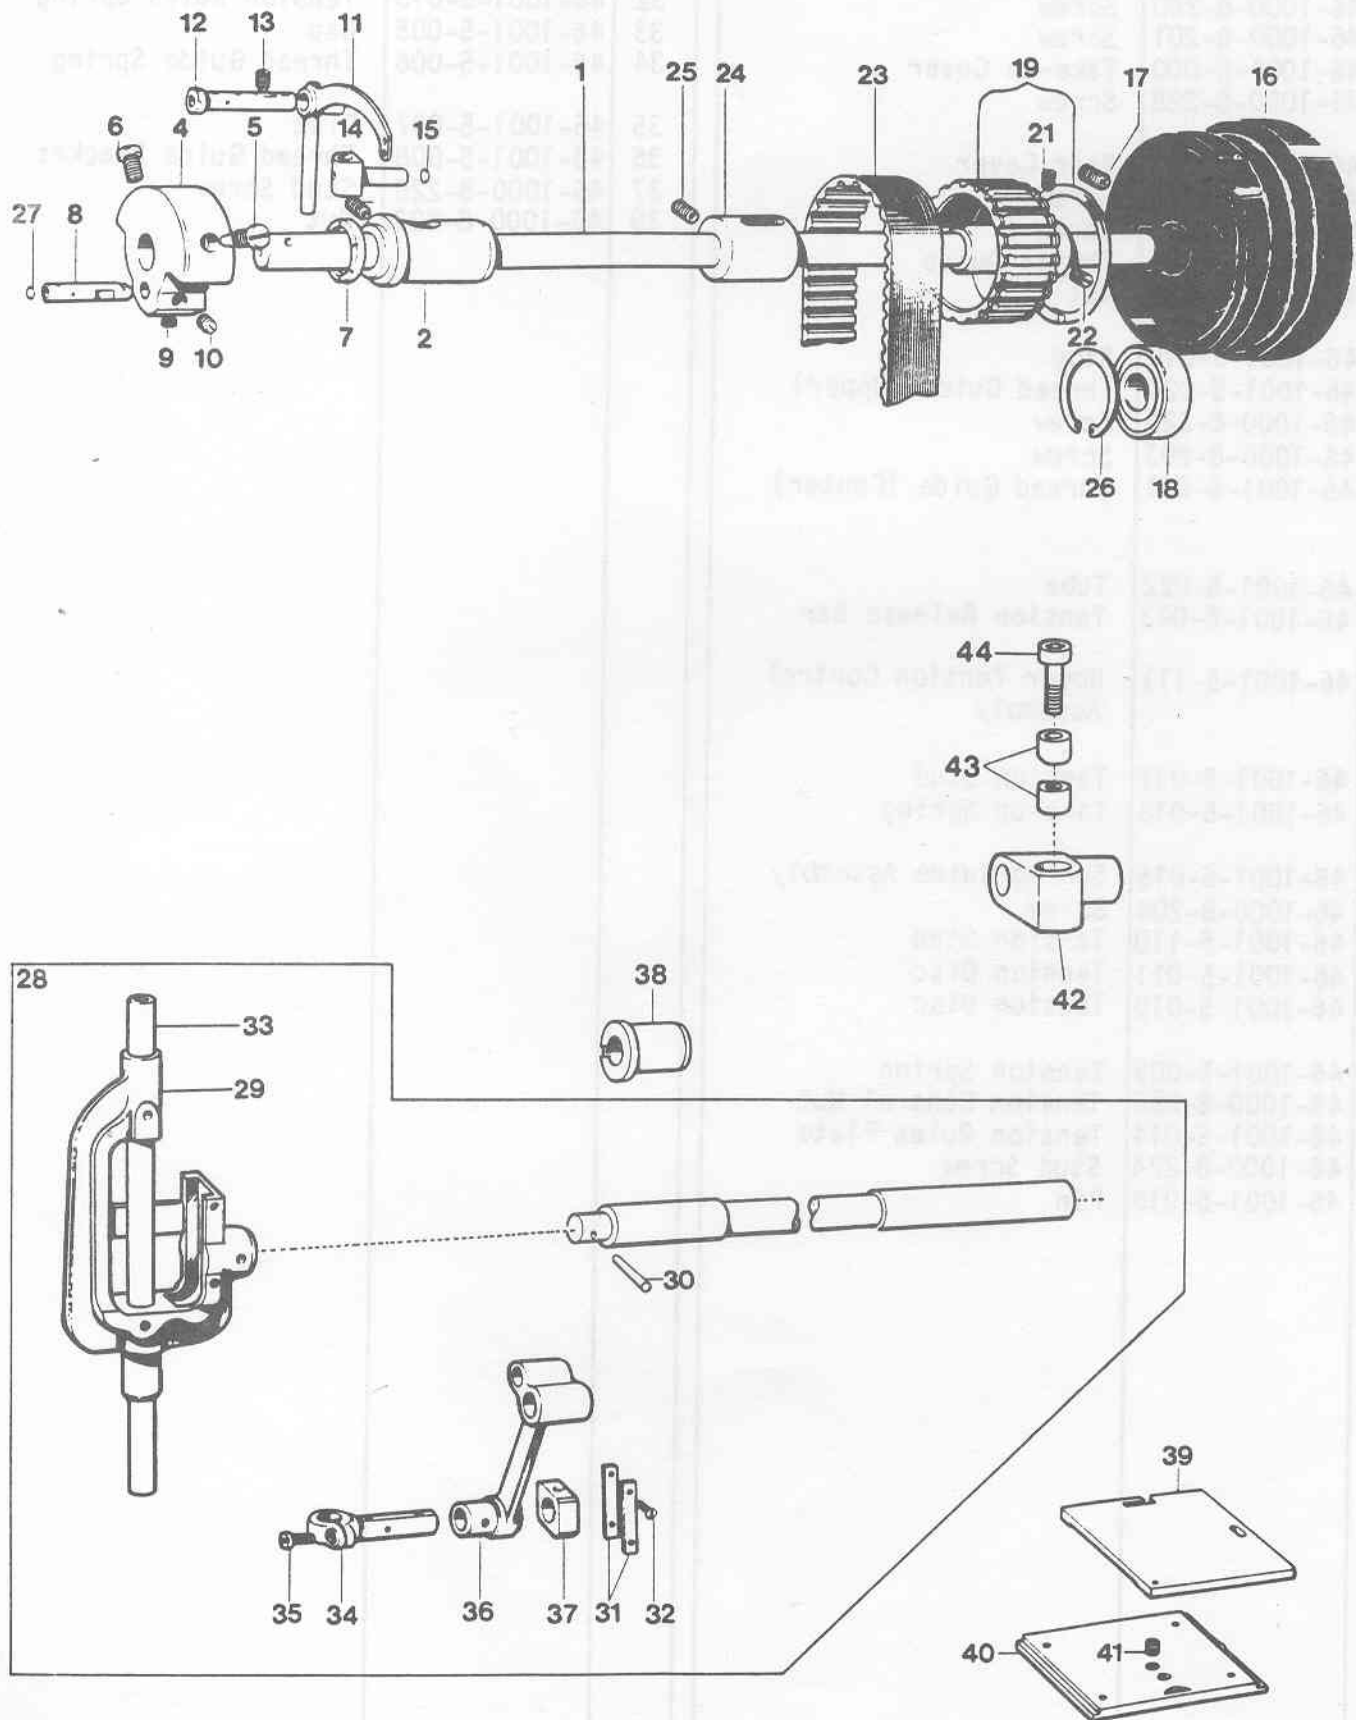 

UPPER SHAFT & NEEDLE BAR ROCKING MECHANISM

2/5


Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-5-036	Upper Shaft	36	46-1001-5-046	Crank Rod
2	46-1001-5-035	Bushing (L.H.)	37	46-1001-5-047	Guide Slide Block
3	46-1000-8-223	Screw	38	46-1001-5-051	Needle Bar Rock
4	46-1001-5-003	Counter Weight			Shift Bush (L.H.)
5	46-1000-8-205	Screw	39	46-1001-5-025	Slide Plate (R.H.)
6	46-1000-8-206	Screw	40	46-1001-5-026	Slide Plate Front Asm.
7	46-1001-5-034	Thrust Ring	41	46-1000-8-238	Screw
8	46-1001-5-031	Crank	42	46-1001-5-183	Rock Shaft Stop
9	46-1000-8-234	Screw	43	46-1001-5-184	Sleeve
10	46-1000-8-235	Screw	44	46-1000-9-753	Screw
11	46-1001-5-028	Thread Take-up			
12	46-1001-5-027	Stud			
13	46-1000-8-233	Screw			
14	46-1001-5-029	Take-up Slide Block			
15	46-1001-5-030	Pusher			
16	46-1001-5-042	Pulley			
17	46-1000-8-233	Screw			
18	46-1001-5-041	Bearing			
19	46-1001-5-039	Timing Belt Wheel Asm.			
20					
21	46-1000-8-236	Screw			
22	46-1000-8-237	Screw			
23	46-1001-5-038	Timing Belt			
24	46-1001-5-037	Upper Shaft Bushing (Center)			
25	46-1000-8-233	Screw			
26	46-1001-5-040	'C'-Ring			
27	46-1001-5-032	Pusher			
28	46-1001-5-050	Crank Assembly			
29	46-1001-5-048	Needle Bar Support			
30	46-1001-5-109	Taper Pin			
31	46-1001-5-049	Needle Bar Guide Plate			
32	46-1000-8-230	Screw			
33	46-1001-5-044	Needle Bar			
34	46-1001-5-045	Clamp			
35	46-1000-8-207	Screw			

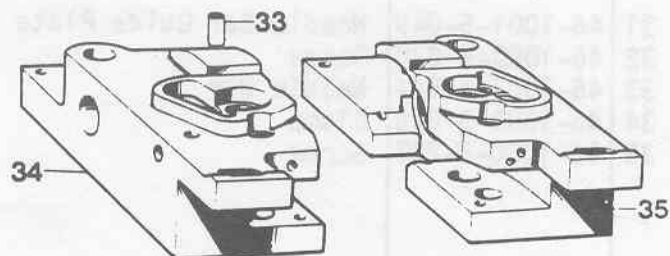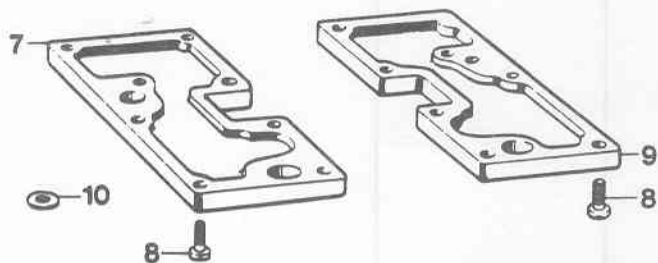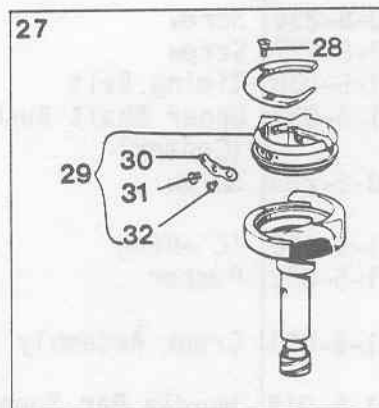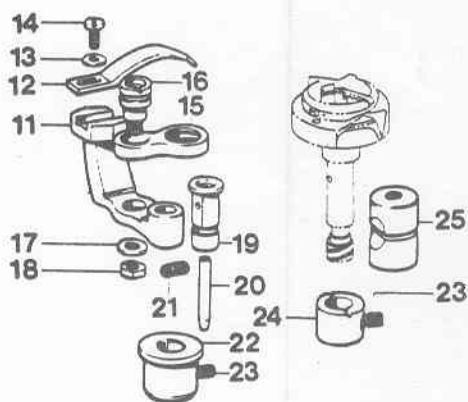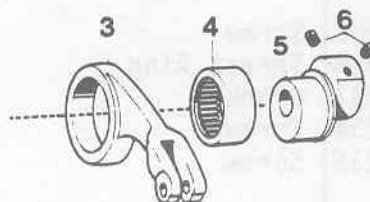      

PRESSER FOOT, FEED, & ROTARY HOOK MECHANISM

2/7


Det. No.	Part Number	Description			
1	46-1001-5-054	Bushing			
2	46-1000-8-289	Screw			
3	46-1001-5-056	Rod			
4	46-1001-5-057	Needle Bearing			
5	46-1001-5-058	Eccentric Wheel			
6	46-1000-8-239	Screw			
7	46-1001-5-084	Oil Reservoir (L.H.)			
8	46-1000-8-208	Screw			
9	46-1001-5-088	Oil Reservoir (R.H.)			
10	46-1000-8-258	Washer			
11	46-1001-5-069	Opener Crank			
12	46-1001-5-068	Bobbin Case Opener			
13	46-1000-5-259	Washer			
14	46-1000-8-207	Screw			
15	46-1001-5-070	Opener Link			
16	46-1001-5-071	Link Standard Opener			
17	46-1000-8-257	Washer			
18	46-1000-8-254	Nut			
19	46-1001-5-072	Stud			
20	46-1001-5-073	Tube			
21	46-1000-8-241	Screw			
22	46-1001-5-074	Rotary Hook Bushing (Lower)			
23	46-1000-8-240	Screw			
24	46-1001-5-075	Rotary Hook Bushing (Upper)			
25	46-1001-5-076	Sleeve			
26	46-1001-5-081	Bobbin			
27	46-1001-5-112	Outer Rotary Hook Assembly			
28	46-1000-8-232	Screw			
29	46-1001-5-079	Inner Rotary Hook Assembly			
30	46-1001-5-078	Tension Adjusting Spring			
31	46-1000-8-209	Tension Adjusting Screw			
32	46-1000-8-210	Screw			
33	46-1001-5-086	Tube			
34	46-1001-5-082	Rotary Hook Base (L.H.)			
35	46-1001-5-087	Rotary Hook Base (R.H.)			

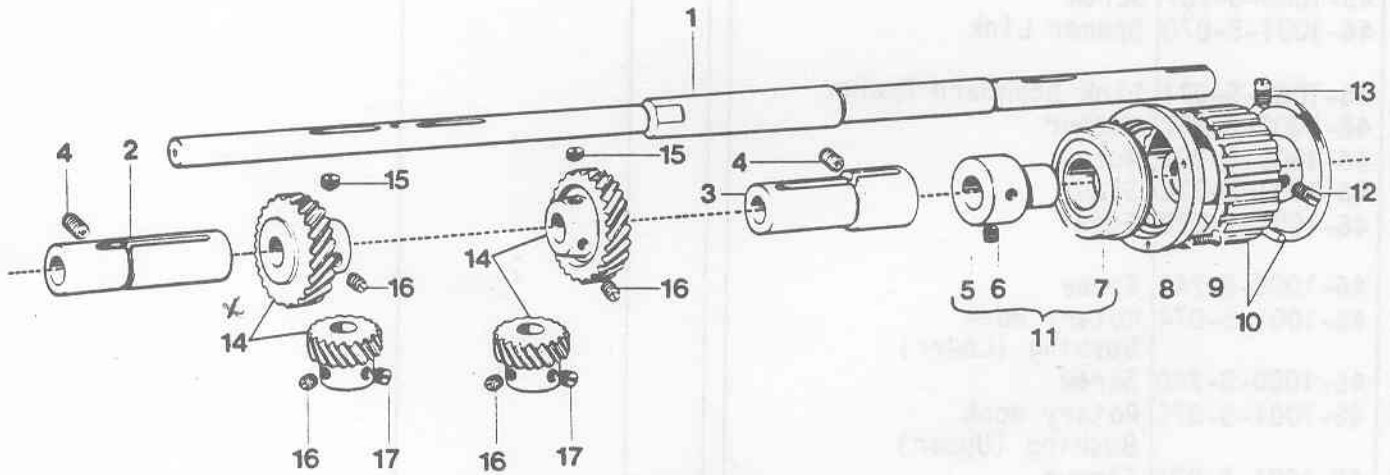 




LOWER SHAFT

2/9


Det. No.	Part Number	Description			
1	46-1001-5-059	Lower Shaft			
2	46-1001-5-060	Rotary Hook Bush. (L.H.)			
3	46-1001-5-061	Rotary Hook Bush. (R.H.)			
4	46-1000-8-239	Screw			
5	46-1001-5-062	Bearing Holder			
6	46-1000-8-242	Screw			
7	46-1001-5-063	Bushing			
8	46-1001-5-065	Ring			
9	46-1000-8-231	Screw			
10	46-1001-5-066	Timing Belt Wheel (Lower) Assembly			
11	46-1001-5-064	Bearing Holder Assembly			
12	46-1000-8-237	Screw			
13	46-1000-8-236	Screw			
14	46-1001-5-067	Spiral Gear Assembly			
15	46-1000-8-243	Screw			
16	46-1000-8-235	Screw			
17	46-1000-8-234	Screw			

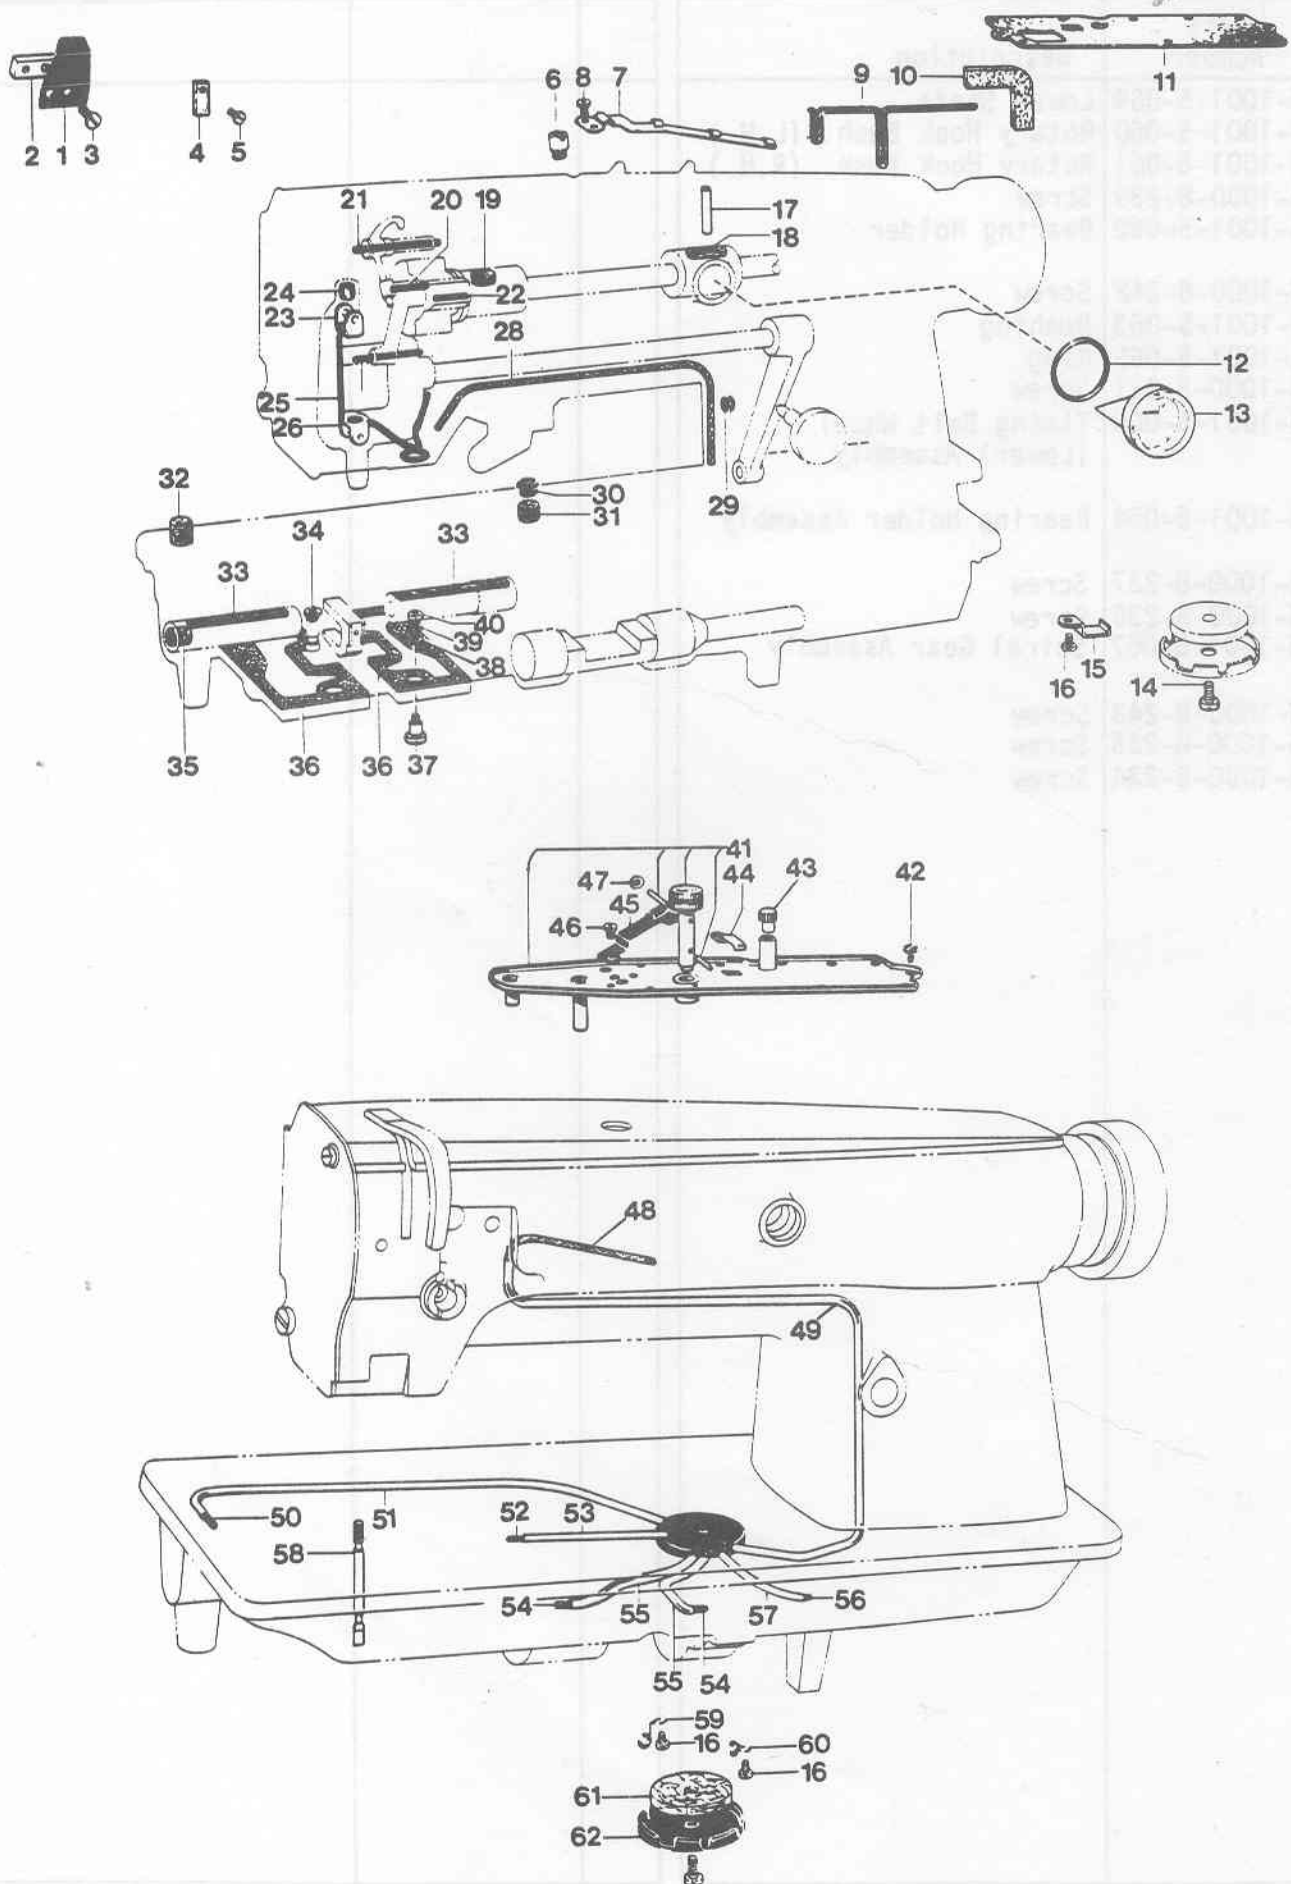 

Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-5-096	Plate	41	46-1001-5-089	Oil Receiver Plate Asm.
2	46-1001-5-097	Retainer	42	46-1000-8-202	Screw
3	46-1000-8-211	Screw	43	46-1001-5-092	Cap
4	46-1000-8-277	Felt	44	46-1001-5-091	Clamp
5	46-1000-8-215	Screw	45	46-1001-5-090	Spring Plate
6	46-1000-8-248	Tube	46	46-1000-8-216	Screw
7	46-1001-5-094	Clamp	47	46-1000-8-261	Washer
8	46-1000-8-212	Screw	48	46-1000-8-282	Wick
9	46-1000-8-267	Wick	49	46-1001-5-099	Tube
10	46-1000-8-273	Felt	50	46-1000-8-283	Wick
11	46-1001-5-093	Gasket	51	46-1001-5-100	Tube
12	46-1001-5-095	Gasket	52	46-1000-8-284	Wick
13	46-1001-5-108	Oil Gauge	53	46-1001-5-101	Tube
14	46-1000-8-213	Screw	54	46-1000-8-285	Wick
15	46-1001-5-091	Clamp	55	46-1001-5-102	Tube
16	46-1000-8-214	Screw	56	46-1000-8-286	Wick
17	46-1001-5-073	Tube	57	46-1001-5-101	Tube
18	46-1000-8-279	Felt	58	46-1001-5-085	Dip Stick
19	46-1000-8-274	Felt	59	46-1001-5-107	Clamp
20	46-1000-8-272	Wick	60	46-1001-5-106	Clamp
21	46-1000-8-269	Wick	61	46-1000-8-287	Felt
22	46-1000-8-268	Wick	62	46-1001-5-105	Supporter
23	46-1001-5-052	Felt Support (Upper)			
24	46-1001-5-043	Needle Bar Cap			
25	46-1000-8-266	Wick			
26	46-1001-5-053	Felt Support (Lower)			
27	46-1000-8-271	Wick			
28	46-1000-8-270	Wick			
29	46-1001-5-104	Cap			
30	46-1001-5-098	Oil Cap			
31	46-1000-8-275	Felt			
32	46-1000-8-276	Felt			
33	46-1000-8-278	Felt			
34	46-1000-8-280	Felt			
35	46-1000-8-281	Felt			
36	46-1001-5-083	Gasket			
37	46-1000-8-226	Screw			
38	46-1000-8-260	Washer			
39	46-1000-8-264	Lock Washer			
40	46-1000-8-255	Nut			

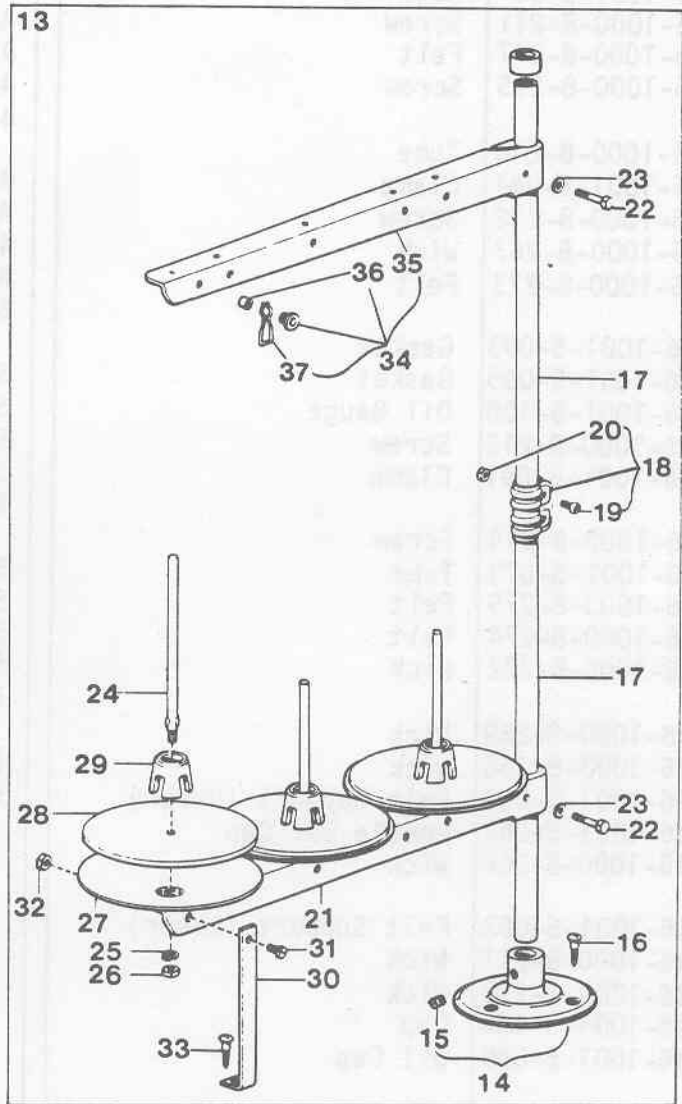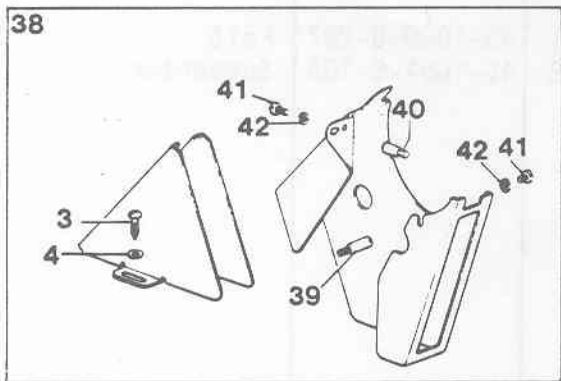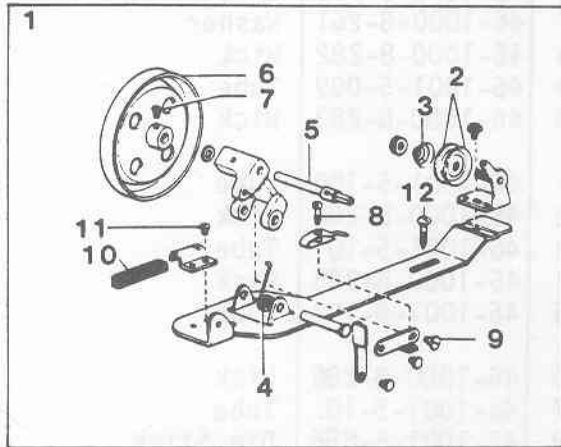   

Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-5-174	Bobbin Winder Assembly	36	46-1001-5-181	Bushing
2	46-1001-5-170	Tension Disc	37	46-1001-5-182	Spring
3	46-1001-5-169	Tension Spring	38	46-1001-5-175	Belt Cover Assembly
4	46-1001-5-171	Spring	39	46-1000-8-249	Stud
5	46-1001-5-168	Shaft	40	46-1000-8-250	Stud
6	46-1001-5-173	Bobbin Winder Wheel Assembly	41	46-1000-8-233	Screw
7	46-1000-8-217	Screw	42	46-1000-8-264	Lock Washer
8	46-1000-8-218	Screw	43	46-1000-8-246	Screw
9	46-1000-8-277	Screw	44	46-1000-8-263	Washer
10	46-1001-5-172	Stop			
11	46-1000-8-219	Screw			
12	46-1000-8-246	Screw			
13	46-1001-5-167	Thread Stand Assembly			
14	46-1001-5-166	Base Assembly			
15	46-1000-8-244	Screw			
16	46-1000-8-247	Screw			
17	46-1001-5-157	Tube			
18	46-1001-5-158	Stand			
19	46-1000-8-220	Screw			
20	46-1000-8-251	Nut			
21	46-1001-5-164	Holder			
22	46-1000-8-221	Bolt			
23	46-1000-8-262	Washer			
24	46-1001-5-159	Shaft			
25	46-1000-8-265	Spring Washer			
26	46-1000-8-251	Nut			
27	46-1001-5-162	Base			
28	46-1001-5-161	Mat			
29	46-1001-5-160	Cushion			
30	46-1001-5-163	Support			
31	46-1000-8-222	Screw			
32	46-1000-8-251	Nut			
33	46-1000-8-247	Screw			
34	46-1001-5-156	Thread Guide Assembly			
35	46-1001-5-164	Holder			

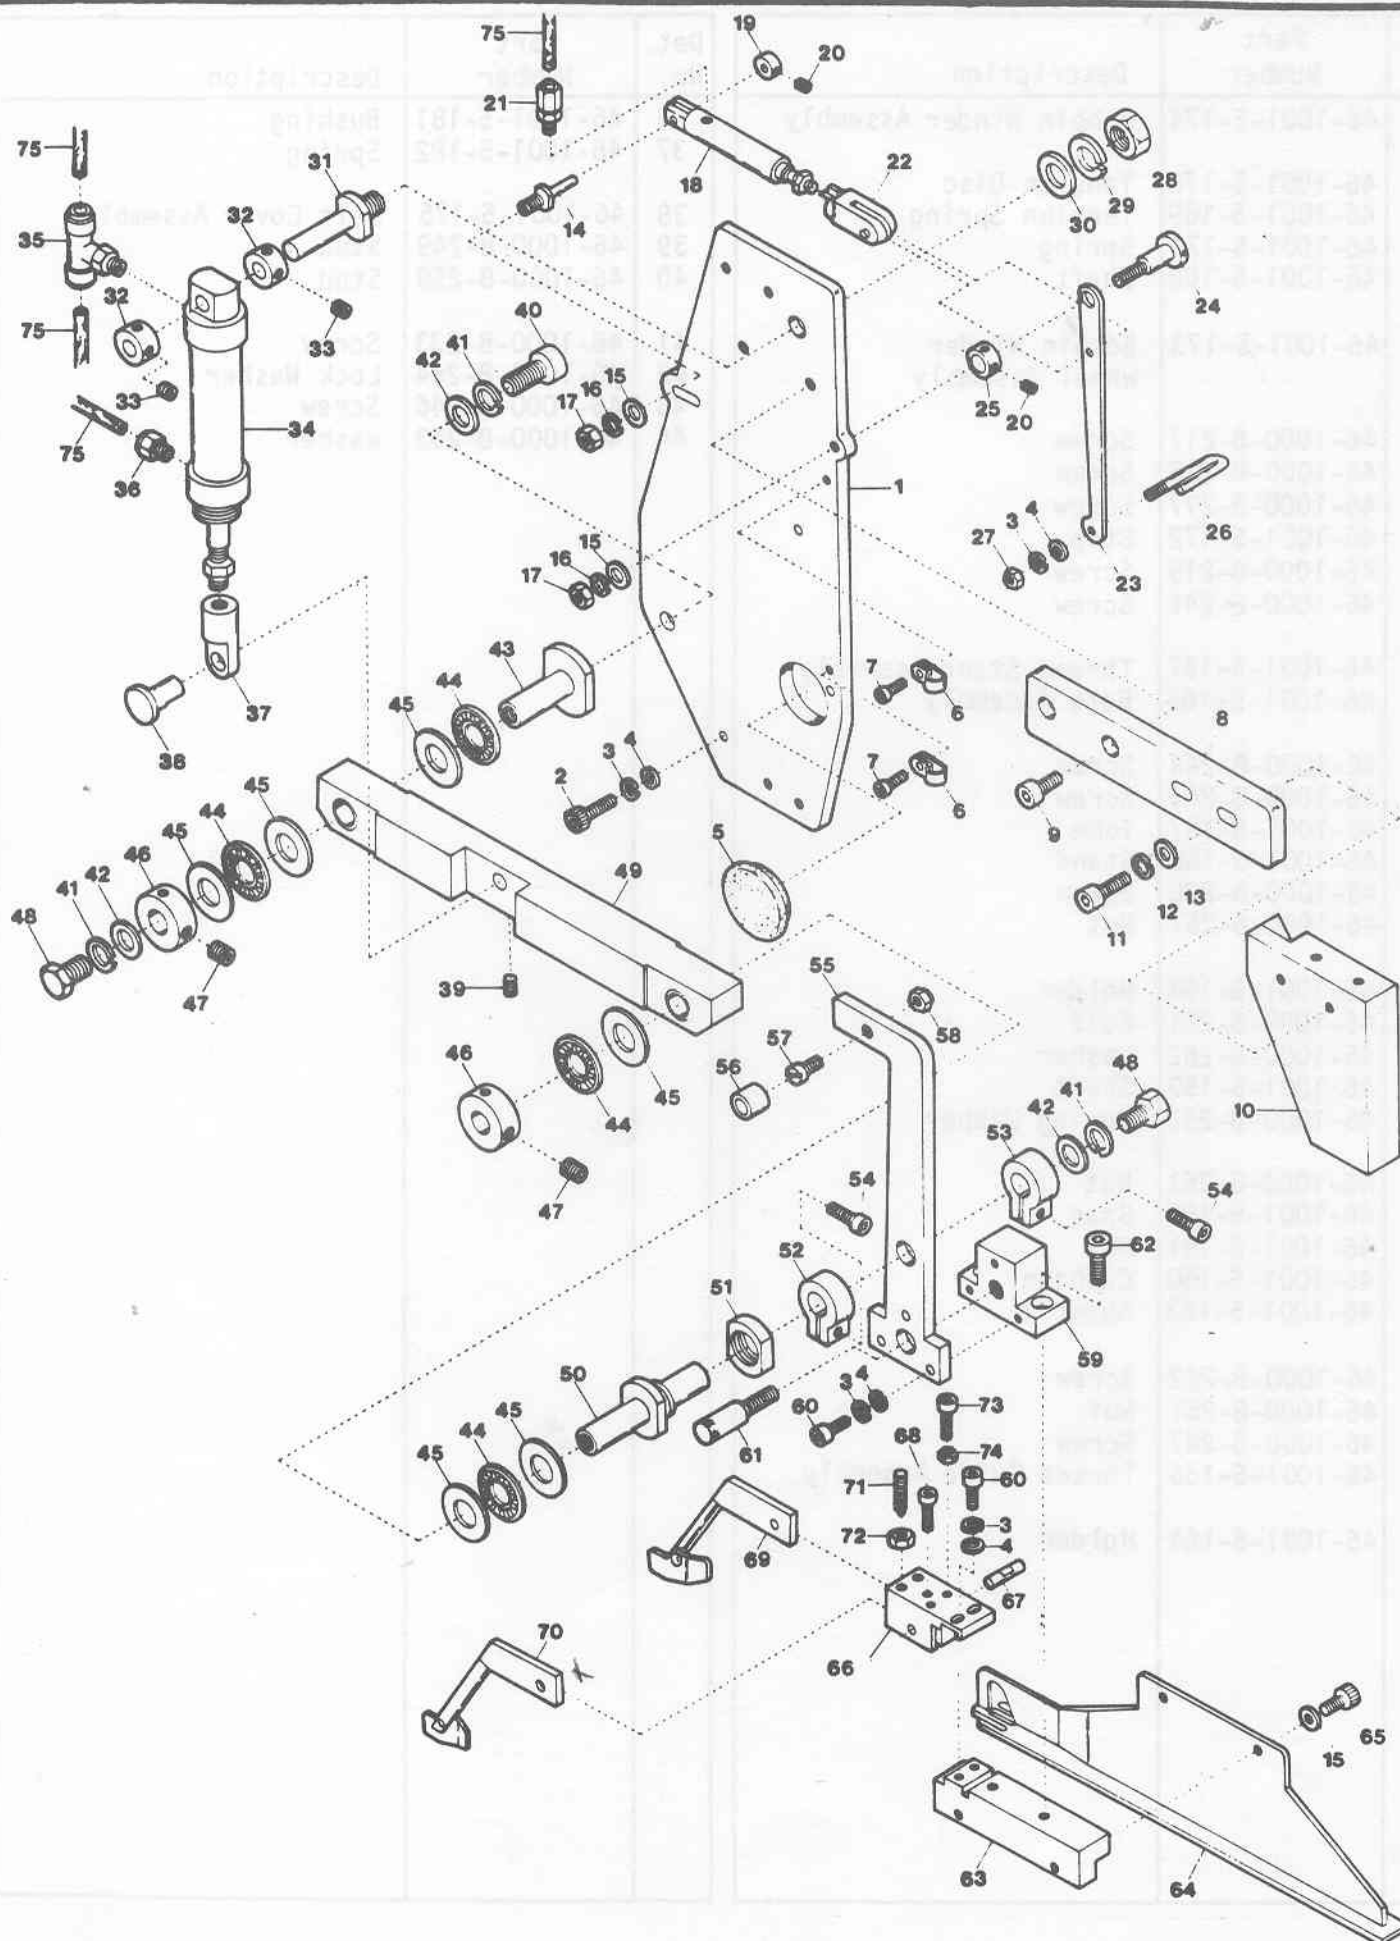 


Det. No.	Part Number	Description
1	46-1001-4-546	Cover
2	46-1000-9-749	Screw
3	46-1000-0-644	Washer
4	46-1000-0-655	Washer
5	46-1002-0-047	Plug
6	46-1006-0-248	Clamp
7	46-1000-9-994	Screw
8	46-1001-4-534	Arm
9	46-1000-9-980	Screw
10	46-1001-4-219	Cam Block
11	46-1000-9-970	Screw
12	46-1000-0-667	Lock Washer
13	46-1000-0-663	Washer
14	46-1001-4-539	Pin
15	46-1000-0-669	Washer
16	46-1000-0-677	Lock Washer
17	46-1000-0-009	Nut
18	46-1001-0-249	Cylinder
19	46-1008-0-714	Collar
20	46-1000-3-312	Screw
21	46-1001-0-258	Straight Connector
22	46-1001-0-283	Clevis
23	46-1001-4-566	Pin
24	46-1000-6-192	Screw
25	46-1009-4-562	Collar
26	46-1001-4-525	Draw-Off
27	46-1000-0-015	Nut
28	46-1000-0-260	Nut
29	46-1000-0-439	Lock Washer
30	46-1000-0-612	Washer
31	46-1001-4-523	Pin
32	46-1007-7-296	Collar
33	46-1000-3-433	Screw
34	46-1001-0-247	Cylinder
35	46-1001-0-271	Connector
36	46-1001-0-055	Straight
37	46-1001-0-285	Clevis
38	46-1001-4-533	Pin
39	46-1000-3-659	Screw
40	46-1000-9-936	Screw
41	46-1000-0-676	Lock Washer
42	46-1000-0-666	Washer
43	46-1001-4-524	Pin (Rear)
44	46-1001-4-571	Thrust Bearing
45	46-1001-4-572	Spacer

Det. No.	Part Number	Description
46	46-1007-7-286	Collar
47	46-1000-3-635	Screw
48	46-1000-9-777	Screw
49	46-1001-4-536	Arm
50	46-1001-4-527	Pin (Front)
51	46-1001-4-526	Nut
52	46-1001-4-520	Collar (L.H.)
53	46-1001-4-519	Collar (R.H.)
54	46-1000-9-935	Screw
55	46-1001-4-215	Lever
56	46-1001-4-186	Cam Roller
57	46-1001-6-186	Screw
58	46-1000-0-063	Nut
59	46-1001-4-222	Block
60	46-1000-9-748	Screw
61	46-1000-6-191	Screw
62	46-1000-6-210	Screw
63	46-1001-4-223	Patch Guide Mounting Block
64		PATCH GUIDE See Chart Below
65	46-1000-9-751	Screw
66	46-1001-4-537	Block (10mm)
	46-1001-4-538	Block (12mm)
67	46-1001-4-521	Shaft (10mm)
	46-1001-4-522	Shaft (12mm)
68	46-1000-9-745	Screw
69	46-1001-4-543	Presser Feet (R.H.)
70	46-1001-4-540	Presser Feet (L.H.)
71	46-1001-4-535	Plunger
72	46-1000-0-206	Lock Nut
73	46-1000-9-744	Screw
74	46-1000-0-012	Lock Nut
75	46-1001-0-260	Vinyl Tube, specify length


PATCH GUIDE

Part No.	Bite Size	Welt Size	Width
46-1001-4-556	10mm	Double	17mm
46-1001-4-557	10mm	Double	17.5mm
46-1001-4-558	12mm	Double	21mm
46-1001-4-558	12mm	Double	22mm
46-1001-4-559	12mm	Double	23mm
46-1001-4-560	10mm	Single	17mm
46-1001-4-561	10mm	Single	17.5mm
46-1001-4-570	12mm	Single	21mm
46-1001-4-562	12mm	Single	22mm
46-1001-4-563	12mm	Single	23mm

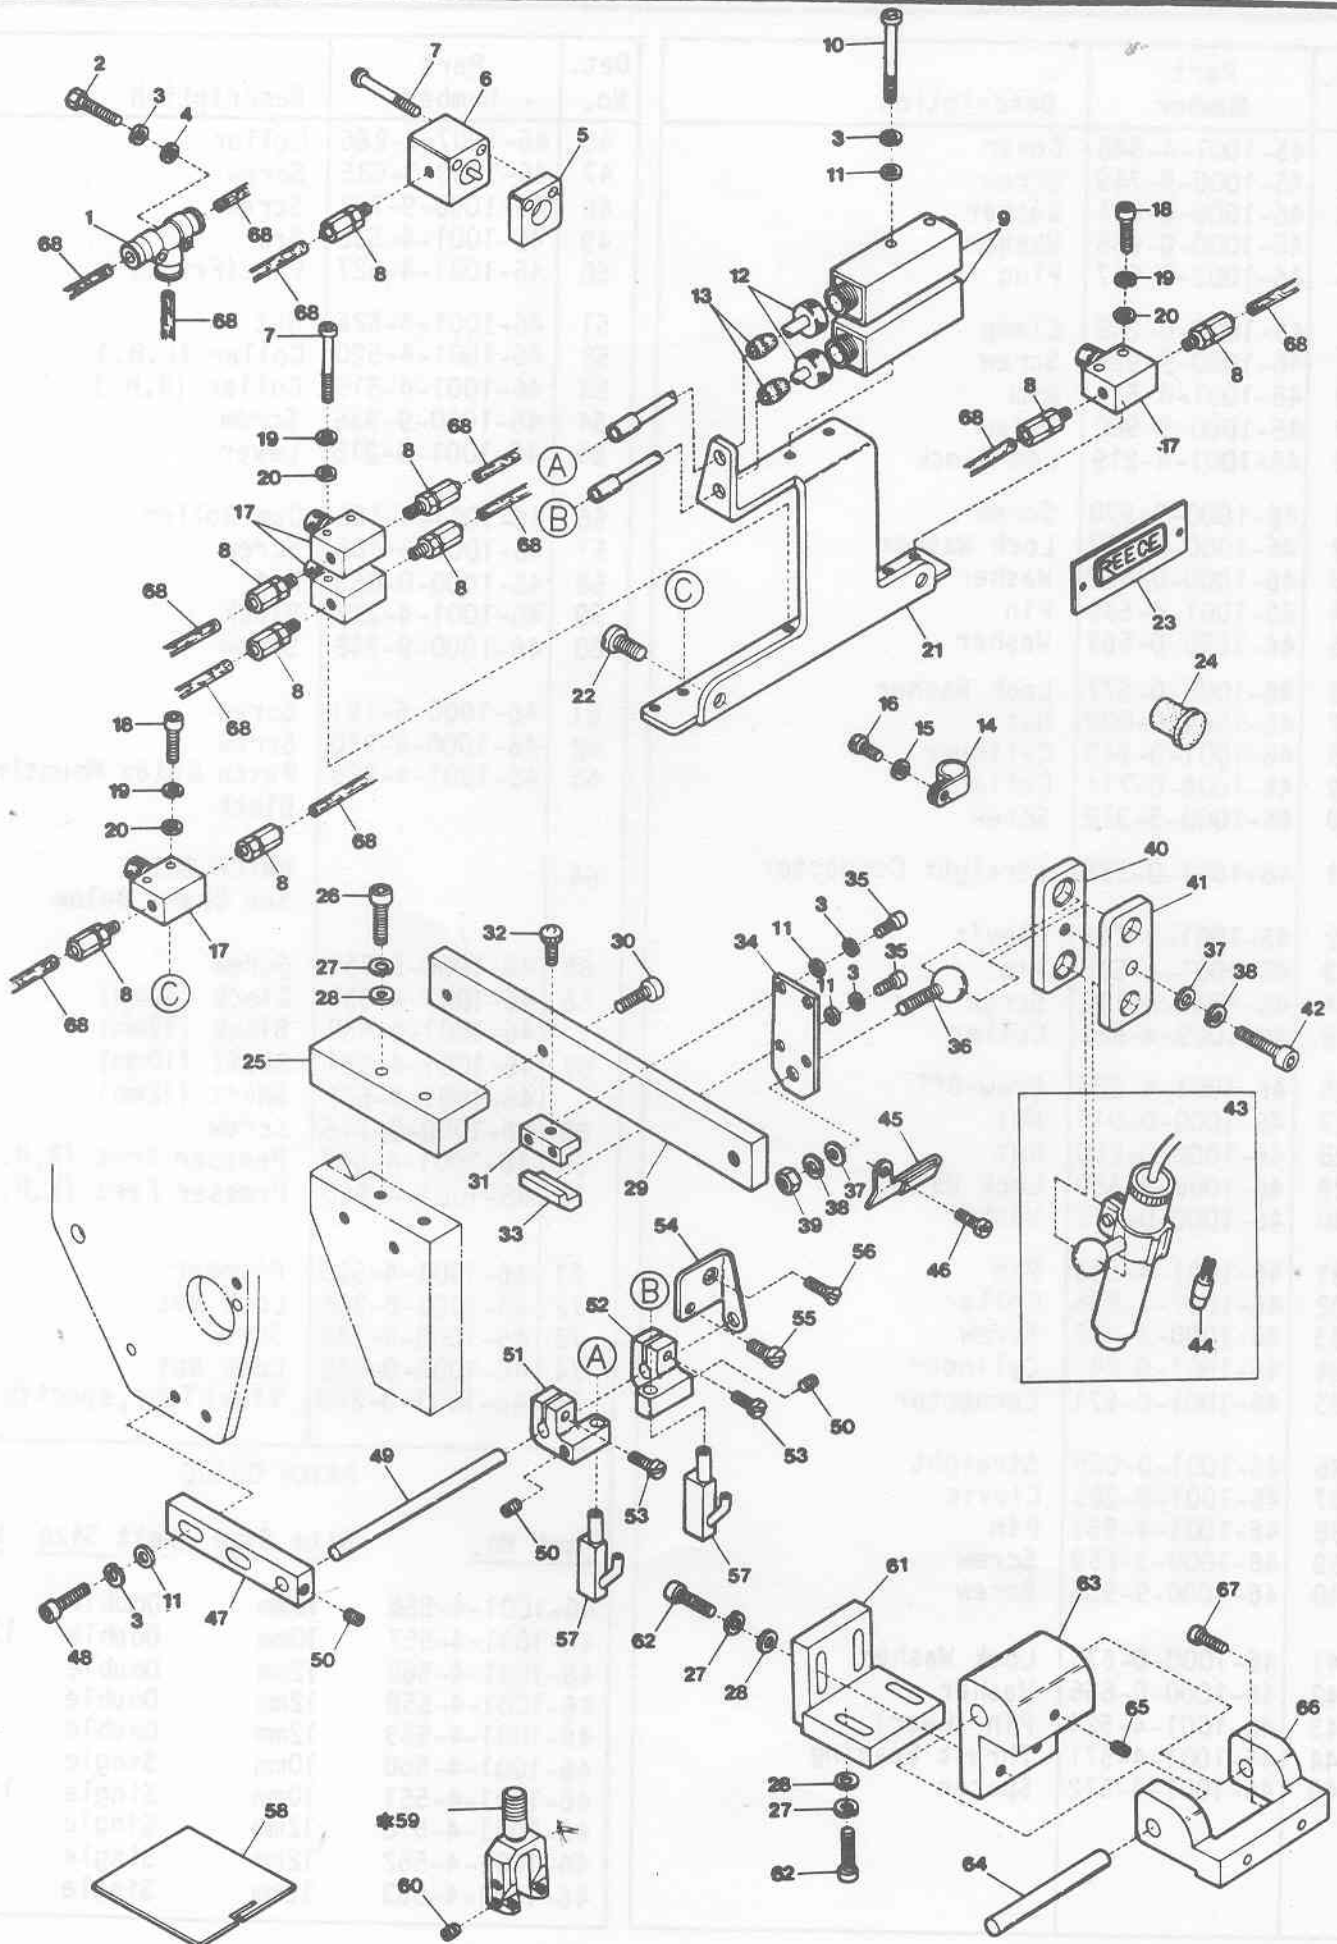 


Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-0-288	T-Connector	42	46-1000-0-758	Screw
2	46-1000-4-104	Screw	43	46-1001-0-901	Work Locating Lamp Complete Assembly
3	46-1000-0-644	Washer	44	46-1001-0-920	Bulb
4	46-1000-0-532	Washer	45	46-1001-4-413	Eyelet
5	46-1001-4-410	Holder	46	46-1000-5-000	Screw
6	46-1001-0-246	Cylinder	47	47-1001-4-415	Holder (L.H.)
7	46-1000-9-768	Screw	48	46-1000-9-749	Screw
8	46-1001-0-258	Connector	49	47-1001-4-432	Shaft
9	47-1001-0-907	Photo Sensor	50	46-1000-3-656	Screw
10	46-1000-9-963	Screw	51	47-1001-4-416	Holder (L.H.)
11	46-1000-0-665	Washer	52	47-1001-4-417	Holder (R.H.)
12	47-1001-0-908	Glass Fiber Unit	53	46-1000-9-746	Screw
13	47-1002-1-465	Bushing	54	47-1001-4-414	Holder (R.H.)
14	46-1001-0-721	Clamp	55	46-1000-9-604	Screw
15	46-1000-0-533	Washer	56	46-1000-9-127	Screw
16	46-1000-1-175	Screw	57	47-1001-4-422	Hood
17	46-1001-0-054	Speed Controller	58	46-1001-4-408	Slide Plate
18	46-1000-9-745	Screw	59	46-1001-4-433	Needle Head (10mm)*
19	46-1000-0-002	Lock Washer		46-1001-4-434	Needle Head (12mm)*
20	46-1000-0-014	Washer	60	46-1000-3-637	Needle Screw
21	47-1001-4-428	Support	61	46-1001-4-425	Hinge (Lower)
22	46-1000-4-642	Screw	62	46-1000-9-977	Screw
23	46-1001-4-409	Name Plate	63	46-1001-4-424	Hinge (Middle)
24	46-1002-0-046	Plug	64	46-1001-4-411	Hinge Shaft
25	46-1001-4-529	Holder	65	46-1000-9-736	Screw
26	46-1000-9-754	Screw	66	46-1001-4-423	Hinge (Upper)
27	46-1000-0-667	Lock Washer	67	46-1000-5-061	Screw
28	46-1000-0-663	Washer	68	46-1001-0-260	Vinyl Tube, spec. length
29	46-1001-4-530	Plate			
30	46-1000-9-752	Screw			
31	46-1001-4-531	Block (Upper)			
32	46-1000-6-435	Screw			
33	46-1001-4-532	Block (Lower)			
34	46-1001-5-528	Lamp Support			
35	46-1000-9-747	Screw			
36	46-1000-6-187	Ball Screw			
37	46-1000-00666	Washer			
38	46-1000-0-676	Lock Washer			
39	46-1000-0-016	Nut			
40	46-1001-4-224	Holder (L.H.)			
41	46-1001-4-225	Holder (R.H.)			




 
*For Needles, see Page 2/51, Detail 24

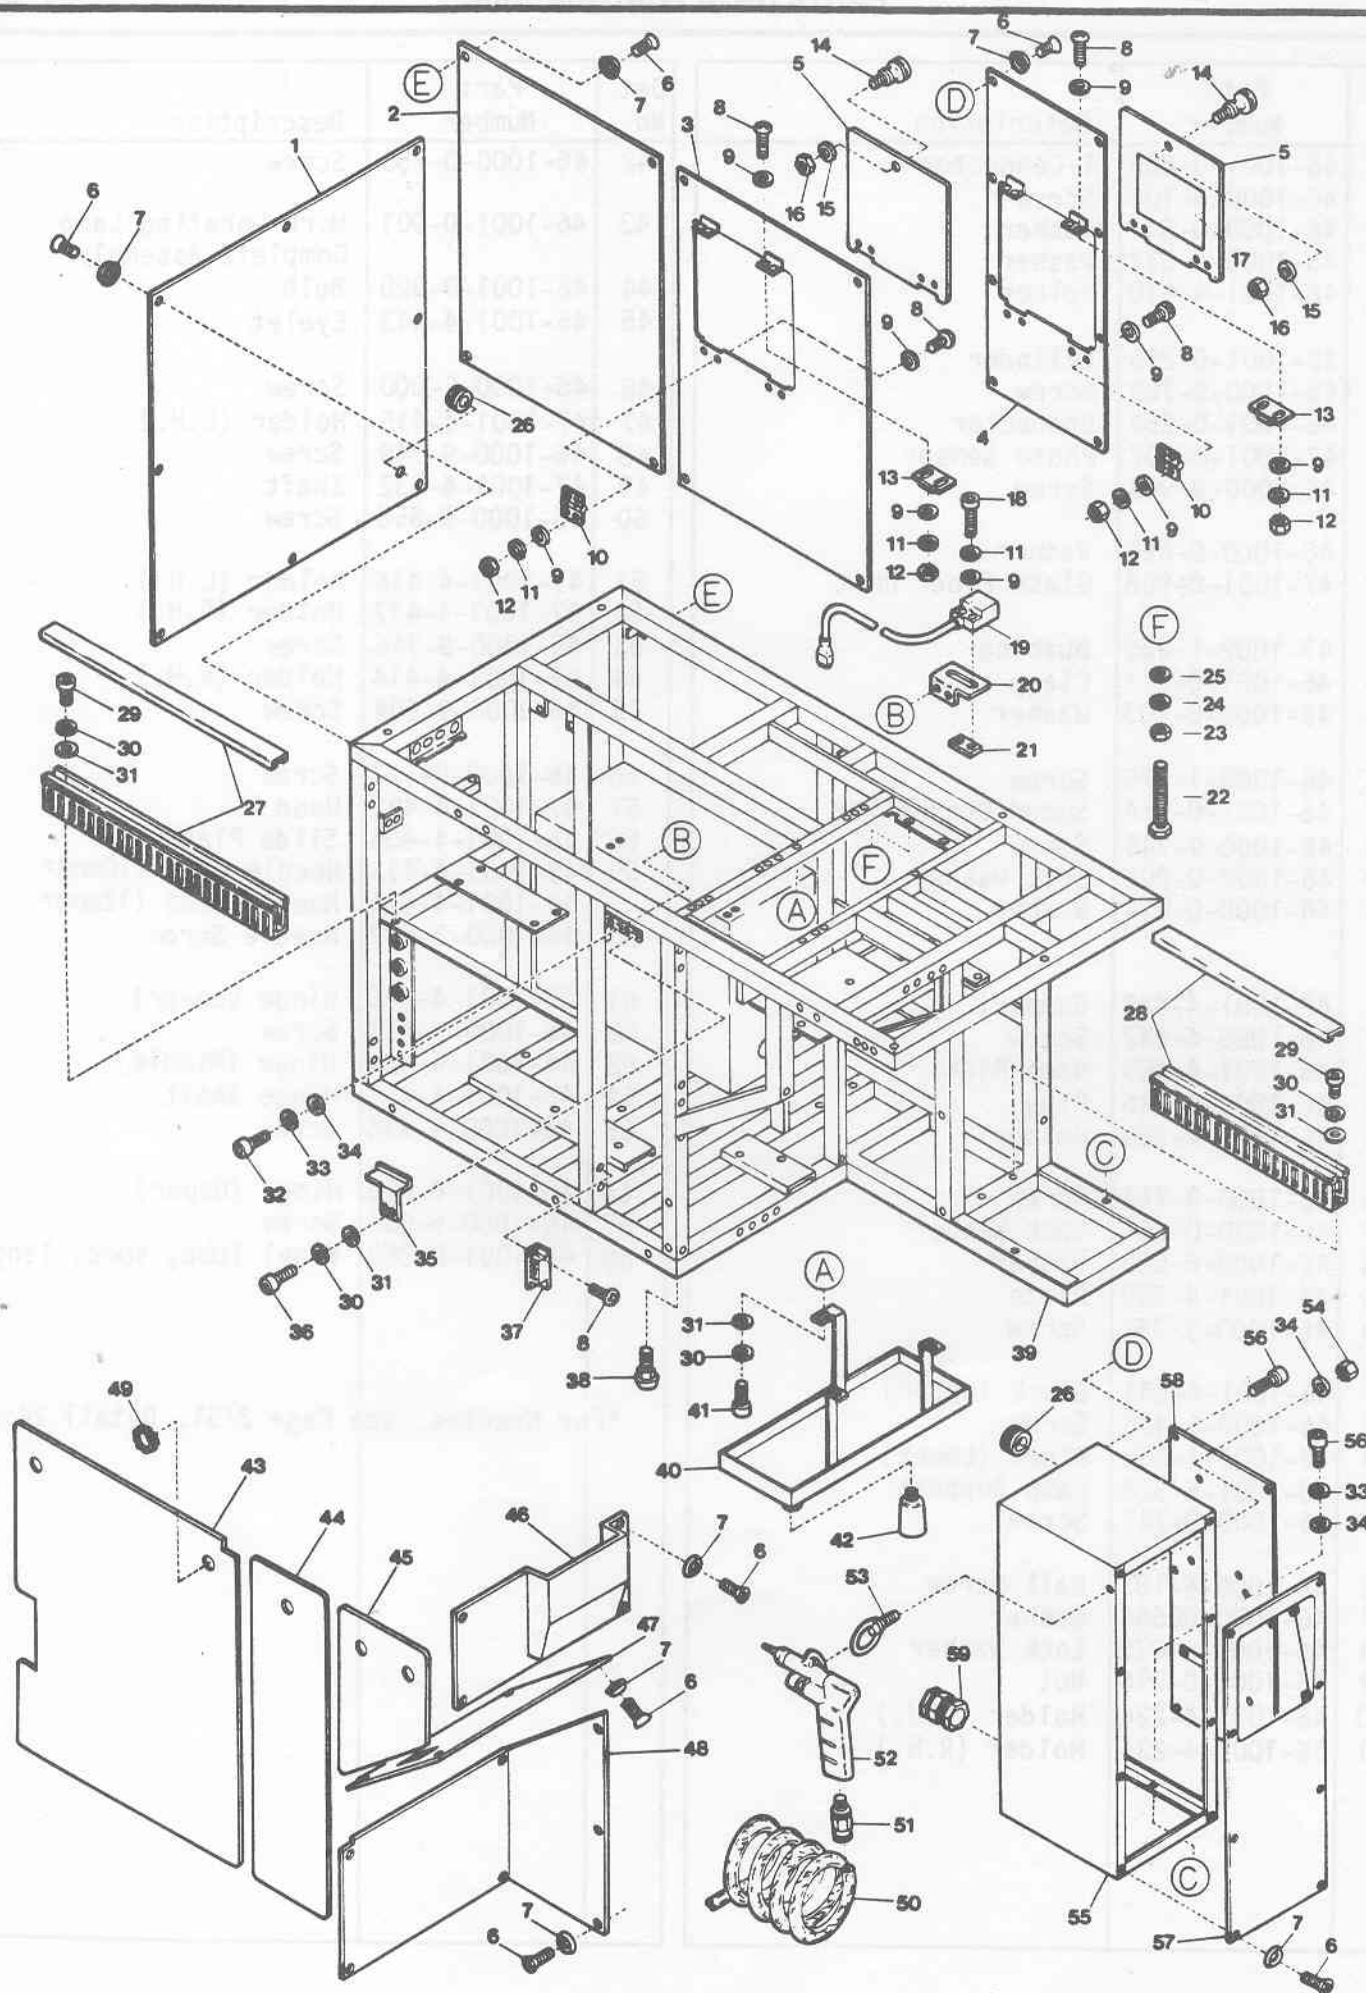

Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-4-728	Cover (Right-Rear)	41	46-1000-9-746	Screw
2	46-1001-4-729		42	46-1003-7-932	Oil Retainer
3	46-1001-4-730	(Right Front)	43	46-1001-4-727	Cover (Left-Rear)
4	46-1001-4-814	Cover (R.H.)	44	46-1001-4-922	Cover (Left-Rear)
5	46-1001-4-768	Door	45	46-1001-4-926	Cover (Left-Front)
6	46-1000-9-774	Screw	46	46-1001-40923	Cover (Front-Upper)
7	46-1000-0-670	Washer	47	46-1001-4-924	Cover (Front-Center)
8	46-1000-9-994	Screw	48	46-1001-4-925	Cover (Front Lower)
9	46-1000-0-014	Washer	49	46-1001-4-824	Bushing
10	46-1001-4-743	Hinge	50	46-1001-0-256	Spiral Tube
11	46-1000-0-002	Lock Washer	51	46-1001-0-264	Connector
12	46-1000-0-012	Nut	52	46-1001-0-094	Air Gun
13	46-1001-4-721	Magnetic Stop	53	46-1000-6-226	Eye Bolt
14	46-1000-6-434	Knob	54	46-1000-0-011	Nut
15	46-1000-0-532	Washer	55	46-1001-4-732	Control Box
16	46-1000-0-335	Nut	56	46-1000-9-980	Screw
17	46-1000-2-484	Sticker	57	46-1001-4-812	Cover (Front)
18	46-1000-9-764	Screw	58	46-1001-4-740	Plate
19	46-1001-0-902	Sensor Switch	59	46-1001-0-959	Bushing
20	46-1001-4-779	Switch Support			
21	46-1001-4-780	Nut Plate			
22	46-1000-6-232	Bolt			
23	46-1000-0-016	Nut			
24	46-1000-0-676	Lock Washer			
25	46-1000-0-666	Washer			
26	46-1001-0-958	Cord Bushing			
27	46-1001-0-880	Cord Duct (Large)			
28	46-1001-0-909	Cord Duct (Small)			
29	46-1000-9-974	Screw			
30	46-1000-0-644	Lock Washer			
31	46-1000-0-665	Washer			
32	46-1000-9-976	Screw			
33	46-1000-0-667	Lock Washer			
34	46-1000-0-663	Washer			
35	46-1001-4-715	Cover			
36	46-1000-9-747				
37	46-1001-4-719	Magnetic Stop			
38	46-1001-4-733	Adjustable Foot			
39	46-1001-4-915	Frame			
40	46-1001-4-770	Oil Receiver			

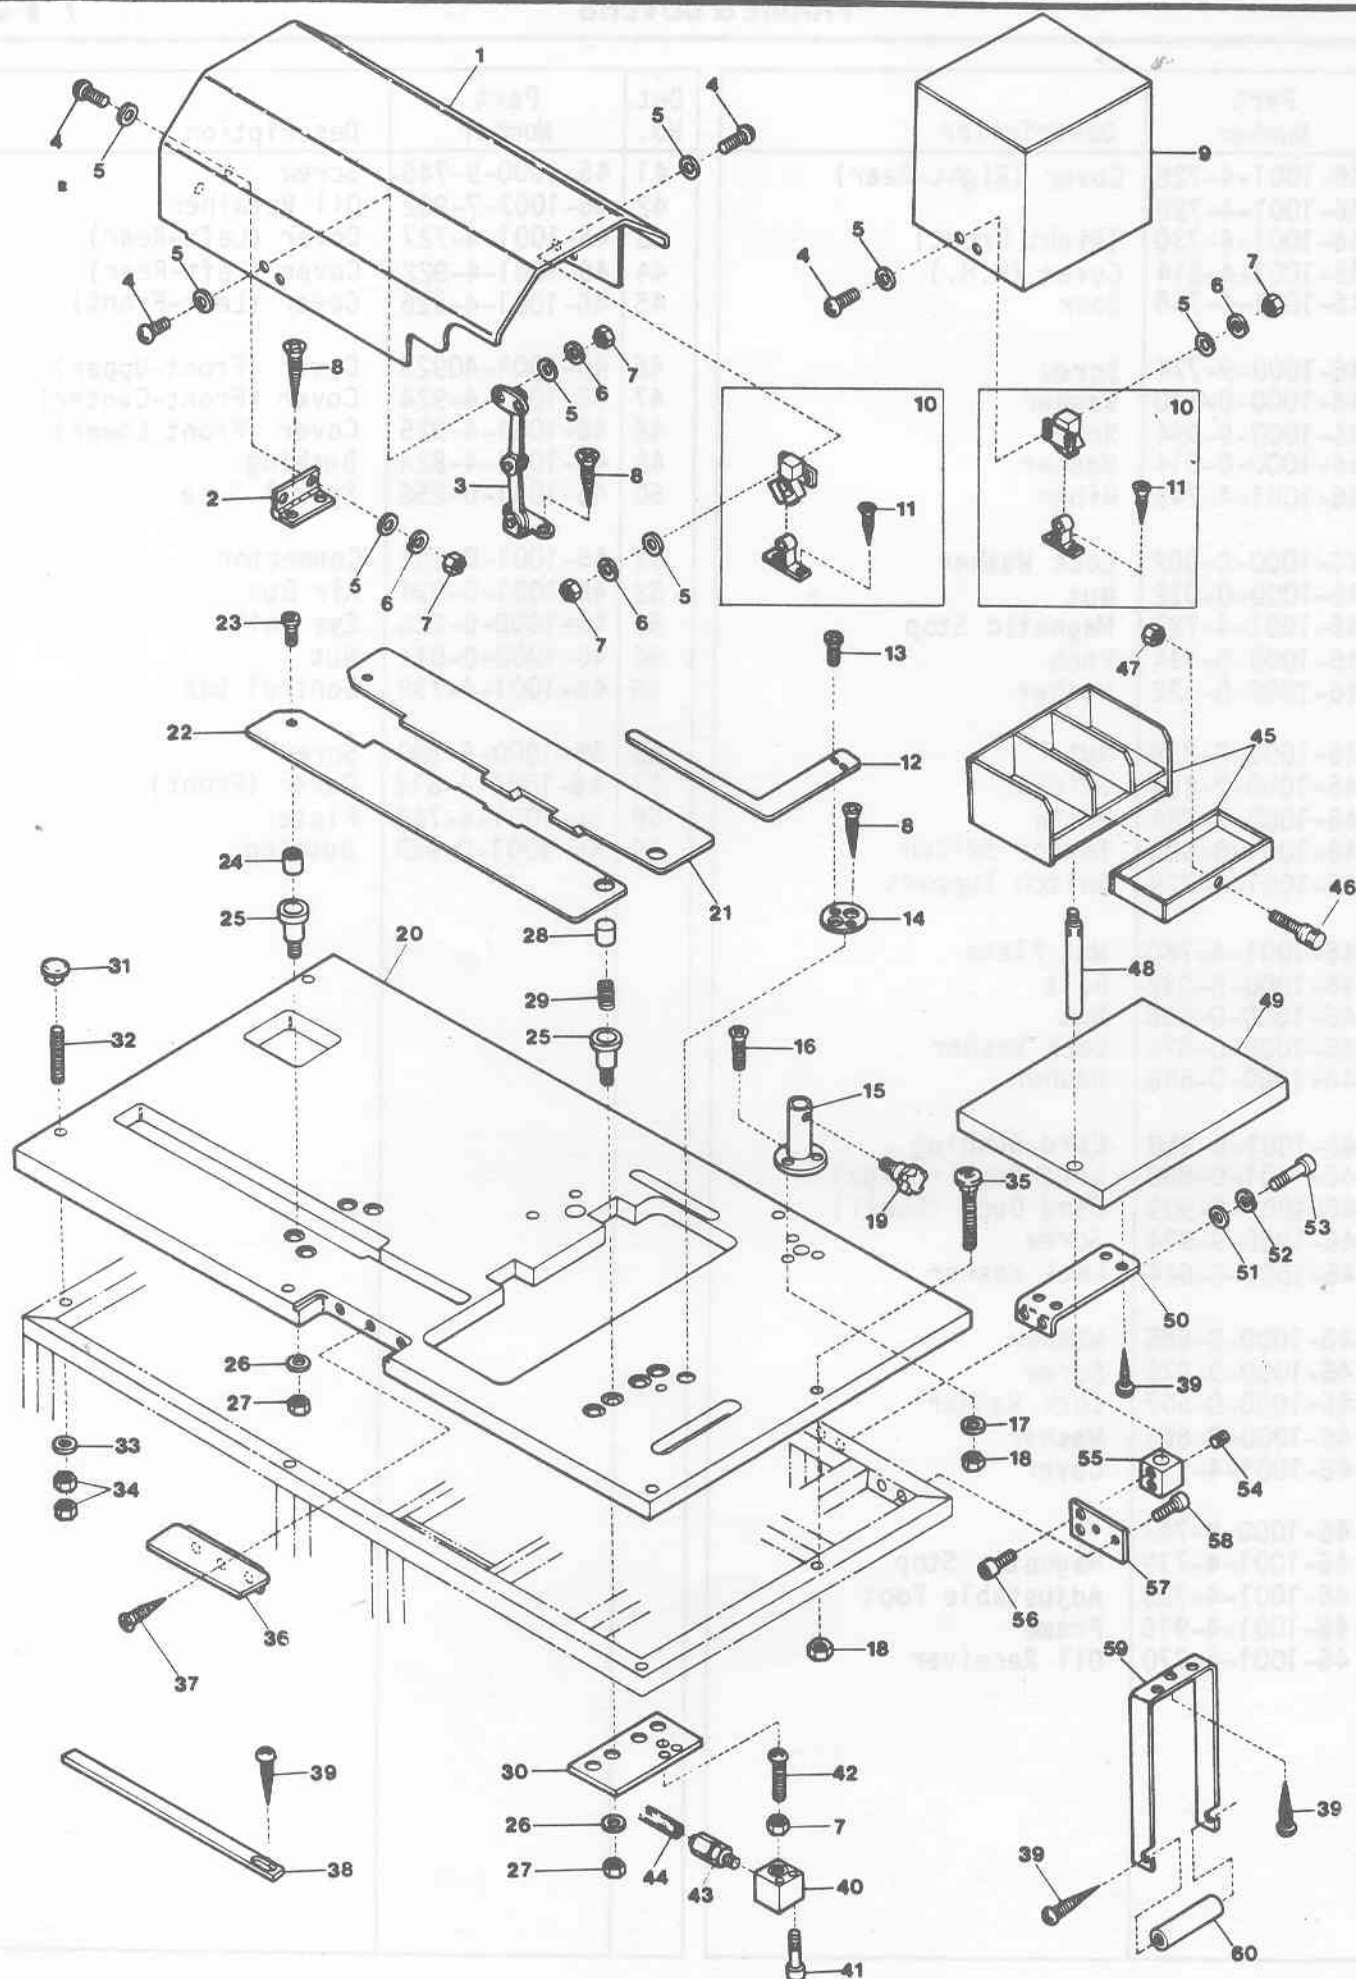 

Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-4-679	Cover	41	46-1000-9-979	Screw
2	46-1001-4-893	Hinge	42	46-1000-9-793	Screw
3	46-1001-4-655	Stay	43	46-1001-0-258	Fitting
4	46-1000-9-994	Screw	44	46-1001-0-260	Vinyl Tube, spec. length
5	46-1000-0-014	Washer	45	46-1001-4-680	Patch Tray
6	46-1000-0-002	Lock Washer	46	46-1000-6-444	Knob
7	46-1000-0-012	Nut	47	46-1000-0-332	Nut
8	46-1000-9-929	Screw	48	46-1001-4-302	Shaft
9	46-1001-4-823	Cover (Small)	49	46-1001-4-687	Table
10	46-1001-4-720	Stop	50	46-1001-4-668	Support
11	46-1000-6-203	Screw	51	46-1000-0-428	Washer
12	46-1001-4-675	Hold Down	52	46-1000-0-667	Lock Washer
13	46-1000-9-769	Screw	53	46-1000-9-755	Screw
14	46-1001-4-661	Plate	54	46-1000-9-740	Screw
15	46-1001-4-671	Holder	55	46-1001-4-300	Block
16	46-1000-6-218	Screw	56	46-1000-9-747	Screw
17	46-1000-0-429	Washer	57	46-1001-4-301	Bracket
18	46-1000-0-016	Nut	58	46-1000-9-976	Screw
19	46-1001-4-662	Knob	59	46-1001-4-718	Bracket
20	46-1001-4-658	Table	60	46-1001-4-717	Roller
21	46-1001-4-635	Slide Plate (R.H.)			
22	46-1001-4-636	Slide Plate (L.H.)			
23	46-1000-9-770	Screw			
24	46-1001-4-032	Pin			
25	46-1001-4-796	Slide Plate Holder			
26	46-1000-0-433	Washer			
27	46-1000-0-421	Nut			
28	46-1001-4-033	Stop Pin			
29	46-1001-4-056	Spring			
30	46-1001-4-663	Bracket			
31	46-1000-0-160	Nut			
32	46-1000-0-164	Bolt			
33	46-1000-0-162	Washer			
34	46-1000-0-061	Nut			
35	46-1000-6-196	Bolt			
36	46-1001-4-659	Plate			
37	46-1000-6-209	Screw			
38	46-1001-4-657	Hold Down (L.H.)			
39	46-1000-6-905	Screw			
40	46-1001-0-248	Cylinder			

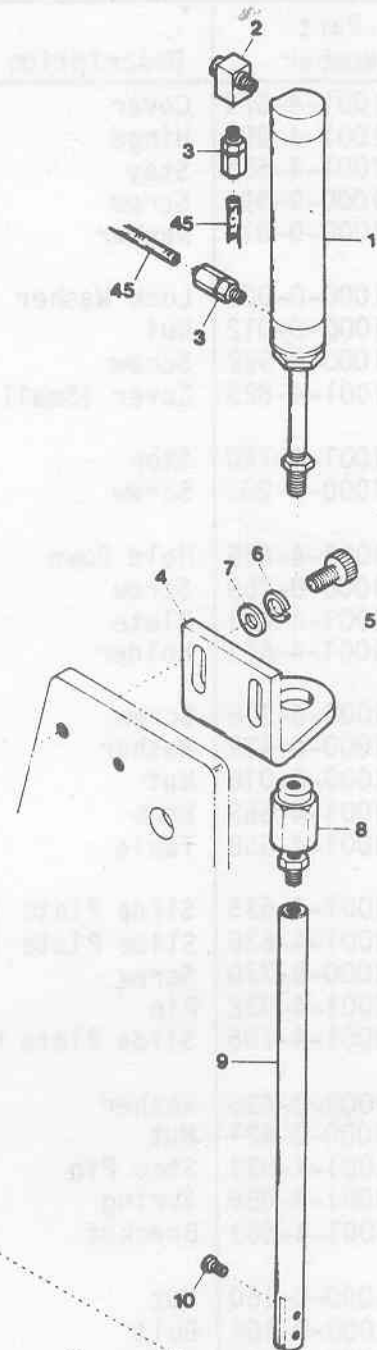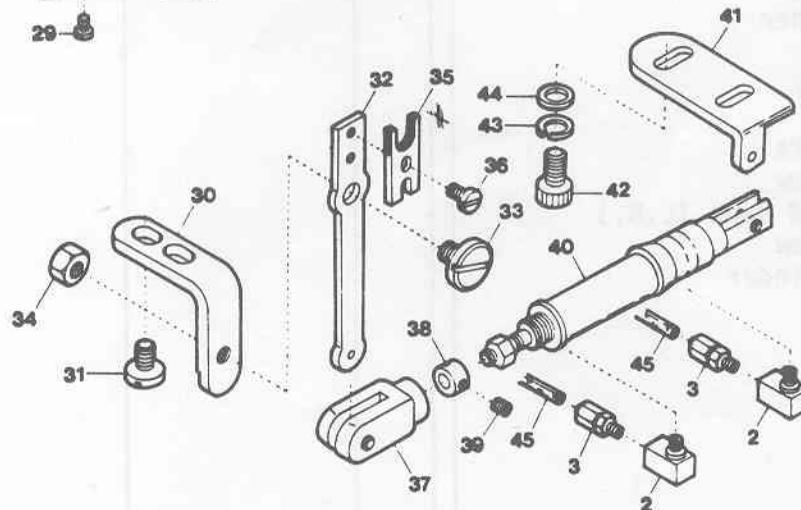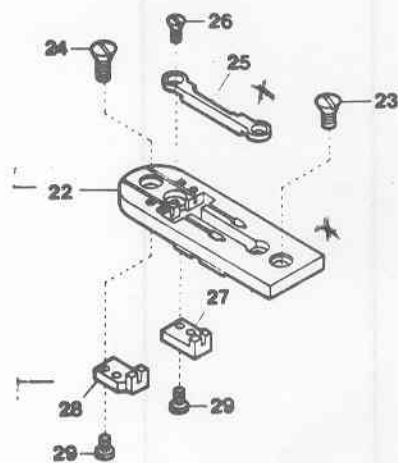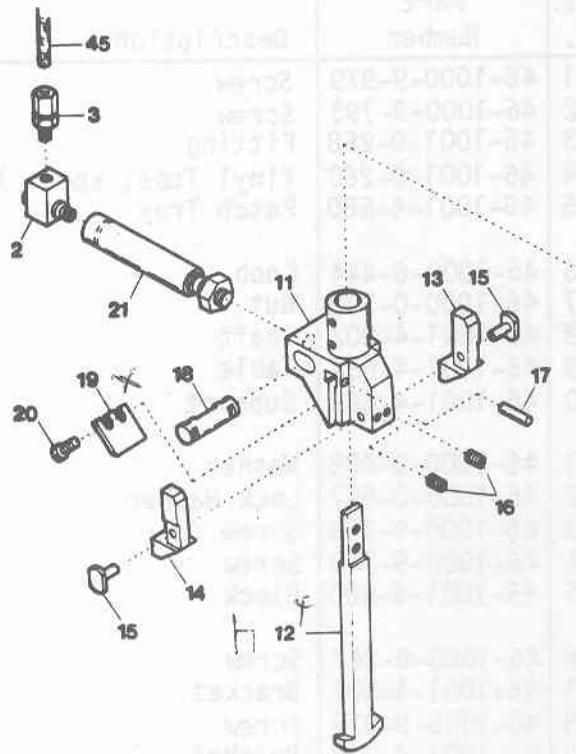    


THREAD TRIMMING


2/23

Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-0-241	Cylinder	31	46-1000-7-678	Screw
2	46-1001-0-019	Angle Fitting	32	46-1001-4-509	Knife Holder
3	46-1001-0-258	Straight Fitting	33	46-1000-6-198	Screw
4	46-1001-4-481	Support	34	46-1000-0-419	Nut
5	46-1000-9-752	Screw	35	46-1001-4-503	Knife (10mm)
				46-1001-4-504	Knife (12mm)
6	46-1000-0-677	Lock Washer	36	46-1000-4-358	Screw
7	46-1000-0-669	Washer	37	46-1001-0-283	Clevis
8	46-1001-4-840	Joint	38	46-1001-4-502	Collar
9	46-1001-4-482	Shaft	39	46-1000-9-735	Screw
10	46-1000-6-178	Screw	40	46-1001-0-242	Cylinder
11	46-1001-4-578	Support	41	46-1001-4-510	Support
12	46-1001-4-483	Pick Up (10mm)	42	46-1000-9-747	Screw
	46-1001-4-484	Pick Up (12mm)	43	46-1000-0-644	Lock Washer
13	46-1001-4-575	Holder (R.H.)	44	46-1000-0-665	Washer
14	46-1001-4-576	Holder (L.H.)	45	46-1001-0-260	Vinyl Tube, spec. length
15	46-1001-4-574	Pin			
16	46-1000-3-656	Screw			
17	46-1001-4-577	Pin			
18	46-1001-4-573	Pin			
19	46-1001-4-244	Blade			
20	46-1000-1-222	Screw			
21	46-1001-0-253	Cylinder			
22	46-1001-4-426	Plate (10mm)			
	46-1001-4-427	Plate (12mm)			
23	46-1000-9-127	Screw			
24	46-1000-9-142	Screw			
25	46-1001-4-267	Lower Knife			
26	46-1000-1-613	Screw			
27	46-1001-4-505	Knife (10mm--Right)			
	46-1001-4-507	Knife (12mm--Right)			
28	46-1001-4-506	Knife (10mm--Left)			
	46-1001-4-508	Knife (12mm--Left)			
29	46-1000-4-404	Screw			
30	46-1001-4-501	Plate			

 
CENTER KNIFE

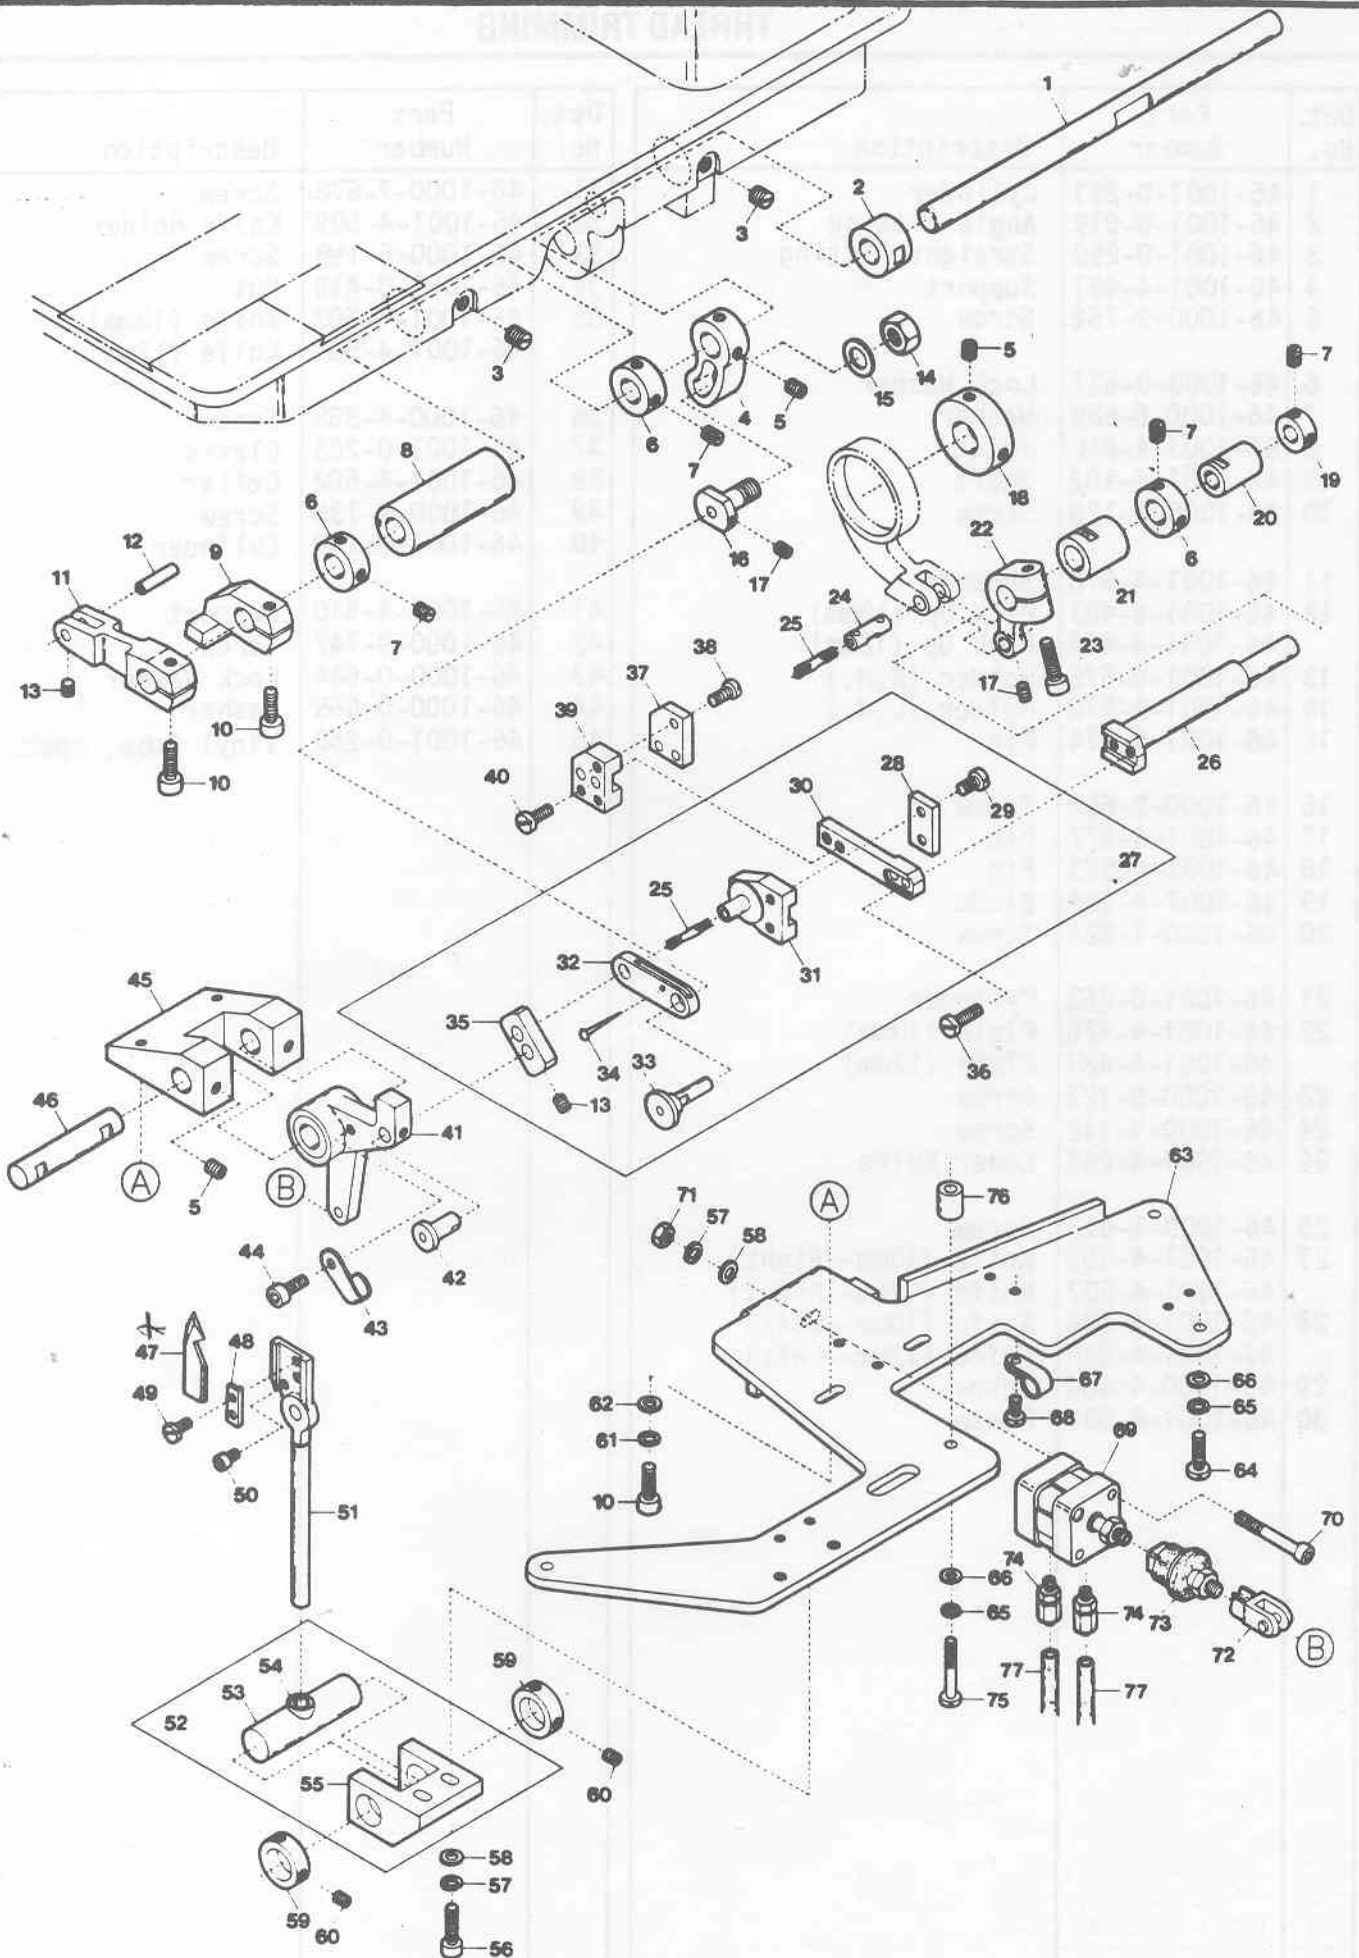


Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-4-458	Main Shaft	46	46-1001-4-436	Shaft
2	46-1001-5-185	Bushing	47	46-1001-4-478	Center Knife
3	46-1000-8-233	Screw	48	46-1001-4-459	Clamp
4	46-1001-4-469	Lever	49	46-1000-9-730	Screw
5	46-1000-3-662	Screw	50	46-1000-4-258	Screw
6	46-1003-2-820	Collar	51	46-1001-4-832	Holder
7	46-1000-7-650	Screw	52	46-1001-4-895	Center Knife Holder, Complete Assembly
8	46-1001-4-460	Bushing	53	46-1001-4-834	Guide Shaft
9	46-1001-4-448	Lever	54	46-1001-4-836	Bearing
10	46-1000-9-976	Screw	55	46-1001-4-833	Holder
11	46-1001-4-449	Lever	56	46-1000-9-752	Screw
12	46-1001-4-447	Pin	57	46-1000-0-677	Lock Washer
13	46-1000-3-656	Screw	58	46-1000-0-669	Washer
14	46-1000-0-054	Nut	59	46-1001-4-835	Collar
15	46-1000-0-432	Washer	60	46-1000-9-736	Screw
16	46-1001-4-454	Pin	61	46-1000-0-667	Lock Washer
17	46-1000-9-735	Screw	62	46-1000-0-663	Washer
18	46-1001-4-462	Thrust Collar	63	46-1001-4-479	Plate
19	46-1007-7-296	Collar	64	46-1000-1-156	Screw
20	46-1001-4-456	Bushing (Small)	65	46-1000-0-600	Lock Washer
21	46-1001-4-437	Bushing	66	46-1000-0-538	Washer
22	46-1001-4-463	Slider Lever	67	46-1003-6-133	Cord Clamp
23	46-1000-9-935	Screw	68	46-1000-9-994	Screw
24	46-1001-4-464	Pin	69	46-1001-0-243	Cylinder
25	46-1000-1-117	Oil Wick	70	46-1000-6-229	Screw
26	46-1001-4-468	Shaft	71	46-1000-0-009	Nut
27	46-1001-4-830	Regulator, Comp. Asm.	72	46-1001-4-442	Clevis
28	46-1001-4-466	Lid	73	46-1001-4-841	Joint
29	46-1000-9-150	Screw	74	46-1001-0-258	Straight Fitting
30	46-1001-4-467	Lever	75	46-1000-5-121	Screw
31	46-1001-4-472	Slider	76	46-1001-4-455	Spacer
32	46-1001-4-474	Link	77	46-1001-0-260	Specify length
33	46-1001-4-445	Pin			
34	46-1000-0-755	Pin			
35	46-1001-4-465	Link			
36	46-1000-1-170	Screw			
37	46-1001-4-471	Stop Plate			
38	46-1000-4-352	Screw			
39	46-1001-4-473	Slid Stop			
40	46-1000-4-440	Screw			
41	46-1001-4-894	Drive Lever			
42	46-1001-4-480	Pin			
43	46-1001-4-782	Clamp			
44	46-1000-9-746	Screw			
45	46-1001-4-438	Bracket			

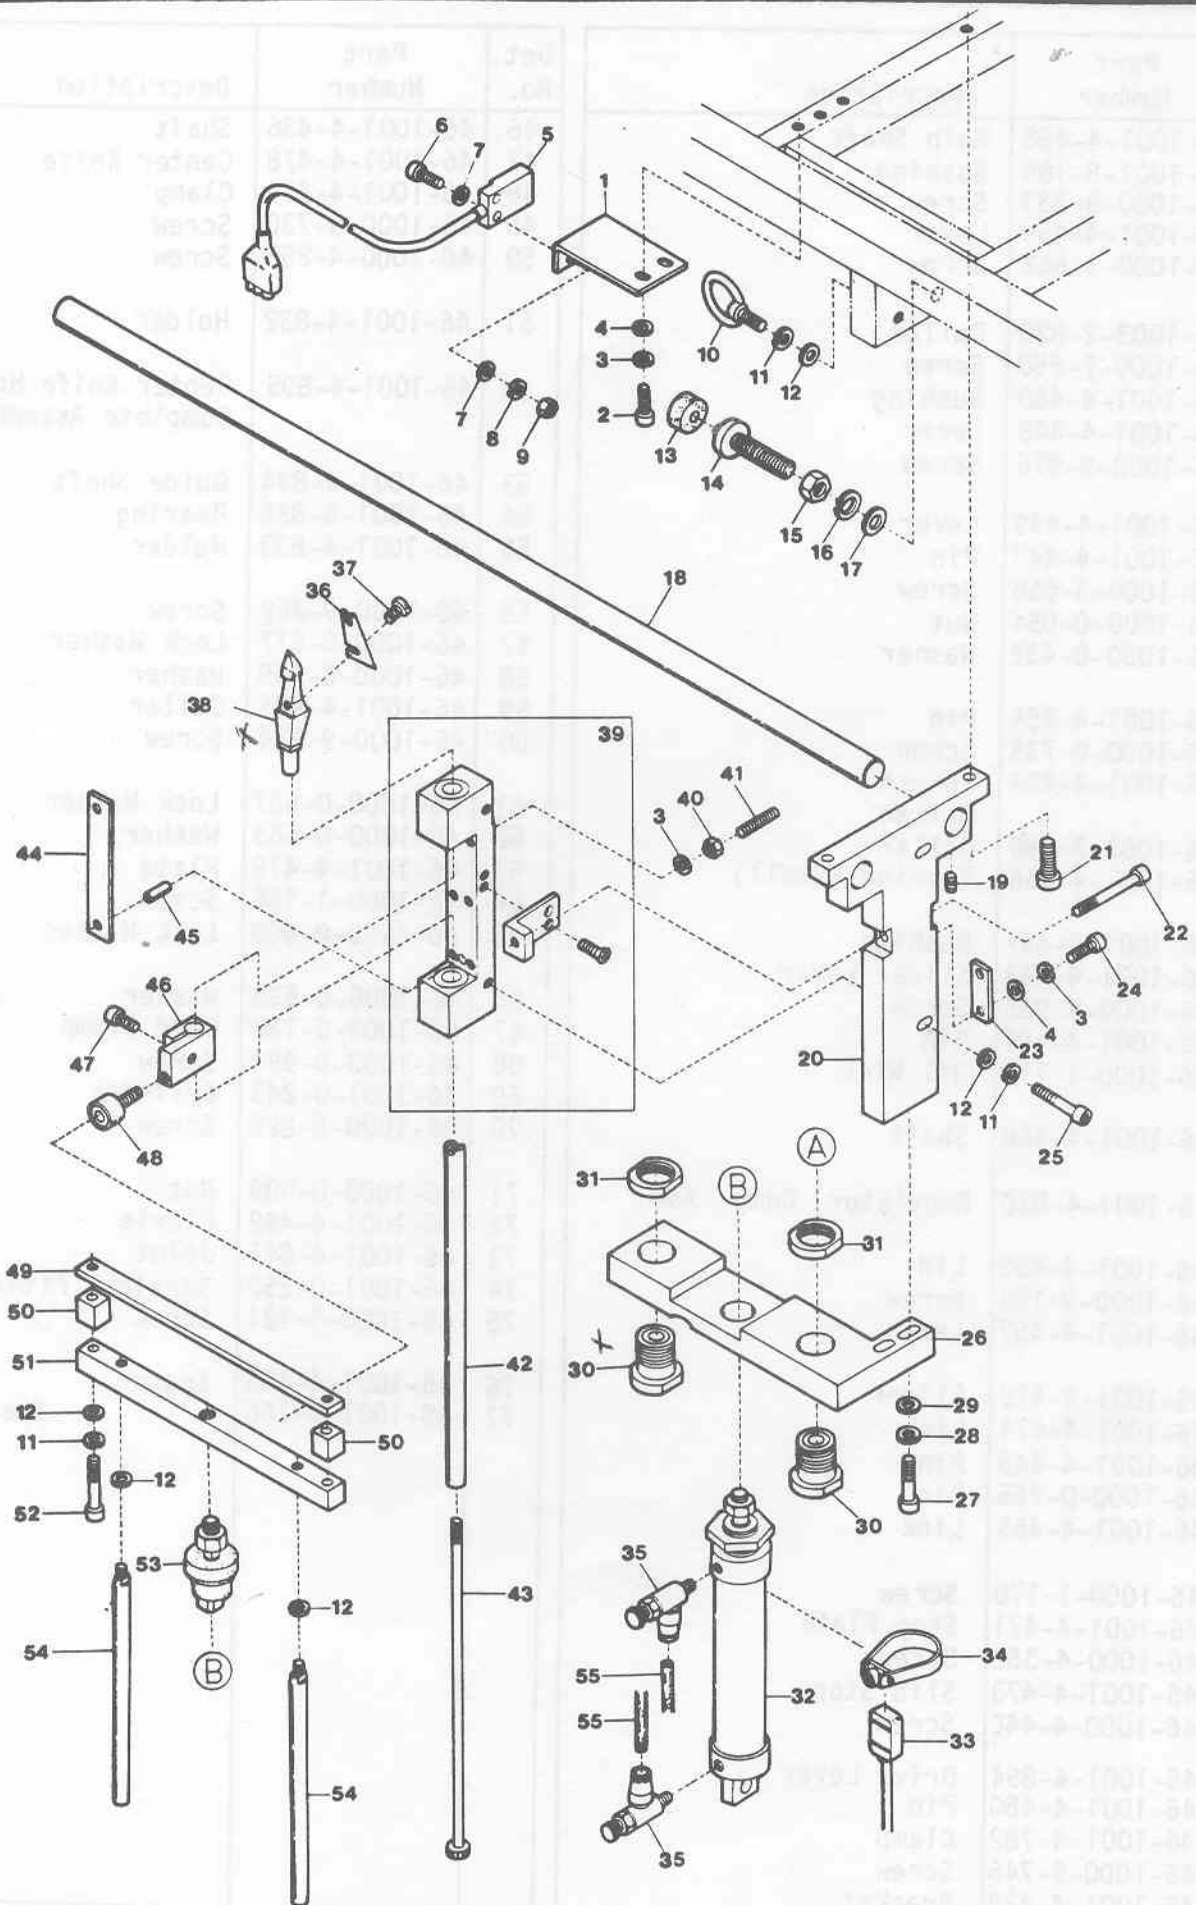 

Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-4-695	Bracket	36	46-1001-4-136	Tab Knife
2	46-1000-9-756	Screw	37	46-1000-9-798	Screw
3	46-1000-0-644	Washer	38	46-1001-4-702	Tab Knife Support, (10mm)
4	46-1000-0-665	Washer		46-1001-4-703	Tab Knife Support, (12mm)
5	46-1001-0-902	Switch			
6	46-1000-9-762	Screw	39	46-1001-4-897	Holder Front, Complete Assembly
7	46-1000-0-014	Washer	40	46-1000-0-015	Nut
8	46-1000-0-002	Lock Washer			
9	46-1000-0-012	Nut	41	46-1000-6-213	Screw
10	46-1000-6-226	Eyebolt	42	46-1001-4-700	Shaft
11	46-1000-0-667	Lock Washer	43	46-1001-4-692	Screw
12	46-1000-0-663	Washer	44	46-1001-4-691	Spacer
13	46-1001-4-143	Rubber Cushion	45	46-1000-0-035	Pin
14	46-1000-6-190	Bolt			
15	46-1000-0-260	Nut	46	46-1001-4-704	Holder (Front)
16	46-1000-0-439	Lock Washer	47	46-1000-9-752	Screw
17	46-1000-0-612	Washer	48	46-1001-4-144	Bearing
18	46-1001-4-110	Slide Shaft	49	46-1001-4-815	Guide (Upper)
19	46-1000-6-212	Screw	50	46-1001-4-817	Guide Spacer
20	46-1001-4-699	Shaft Bracket			
21	46-1000-9-936	Screw	51	46-1001-4-816	Guide (Lower)
22	46-1000-6-176	Screw	52	46-1000-9-964	Screw
23	46-1001-4-129	Plate	53	46-1001-4-842	Joint
24	46-1000-9-747	Screw	54	46-1001-4-701	Guide Shaft
25	46-1000-9-754	Screw	55	46-1001-0-260	Vinyl Tube, spec. length
26	46-1001-4-711	Bracket			
27	46-1000-9-940	Screw			
28	46-1000-0-676	Lock Washer			
29	46-1000-0-666	Washer			
30	46-1001-4-899	Bushing			
31	46-1001-4-709	Nut			
32	46-1001-0-240	Cylinder			
33	46-1001-0-921	Switch			
34	46-1001-0-300	Band			
35	46-1001-0-254	Speed Controller			

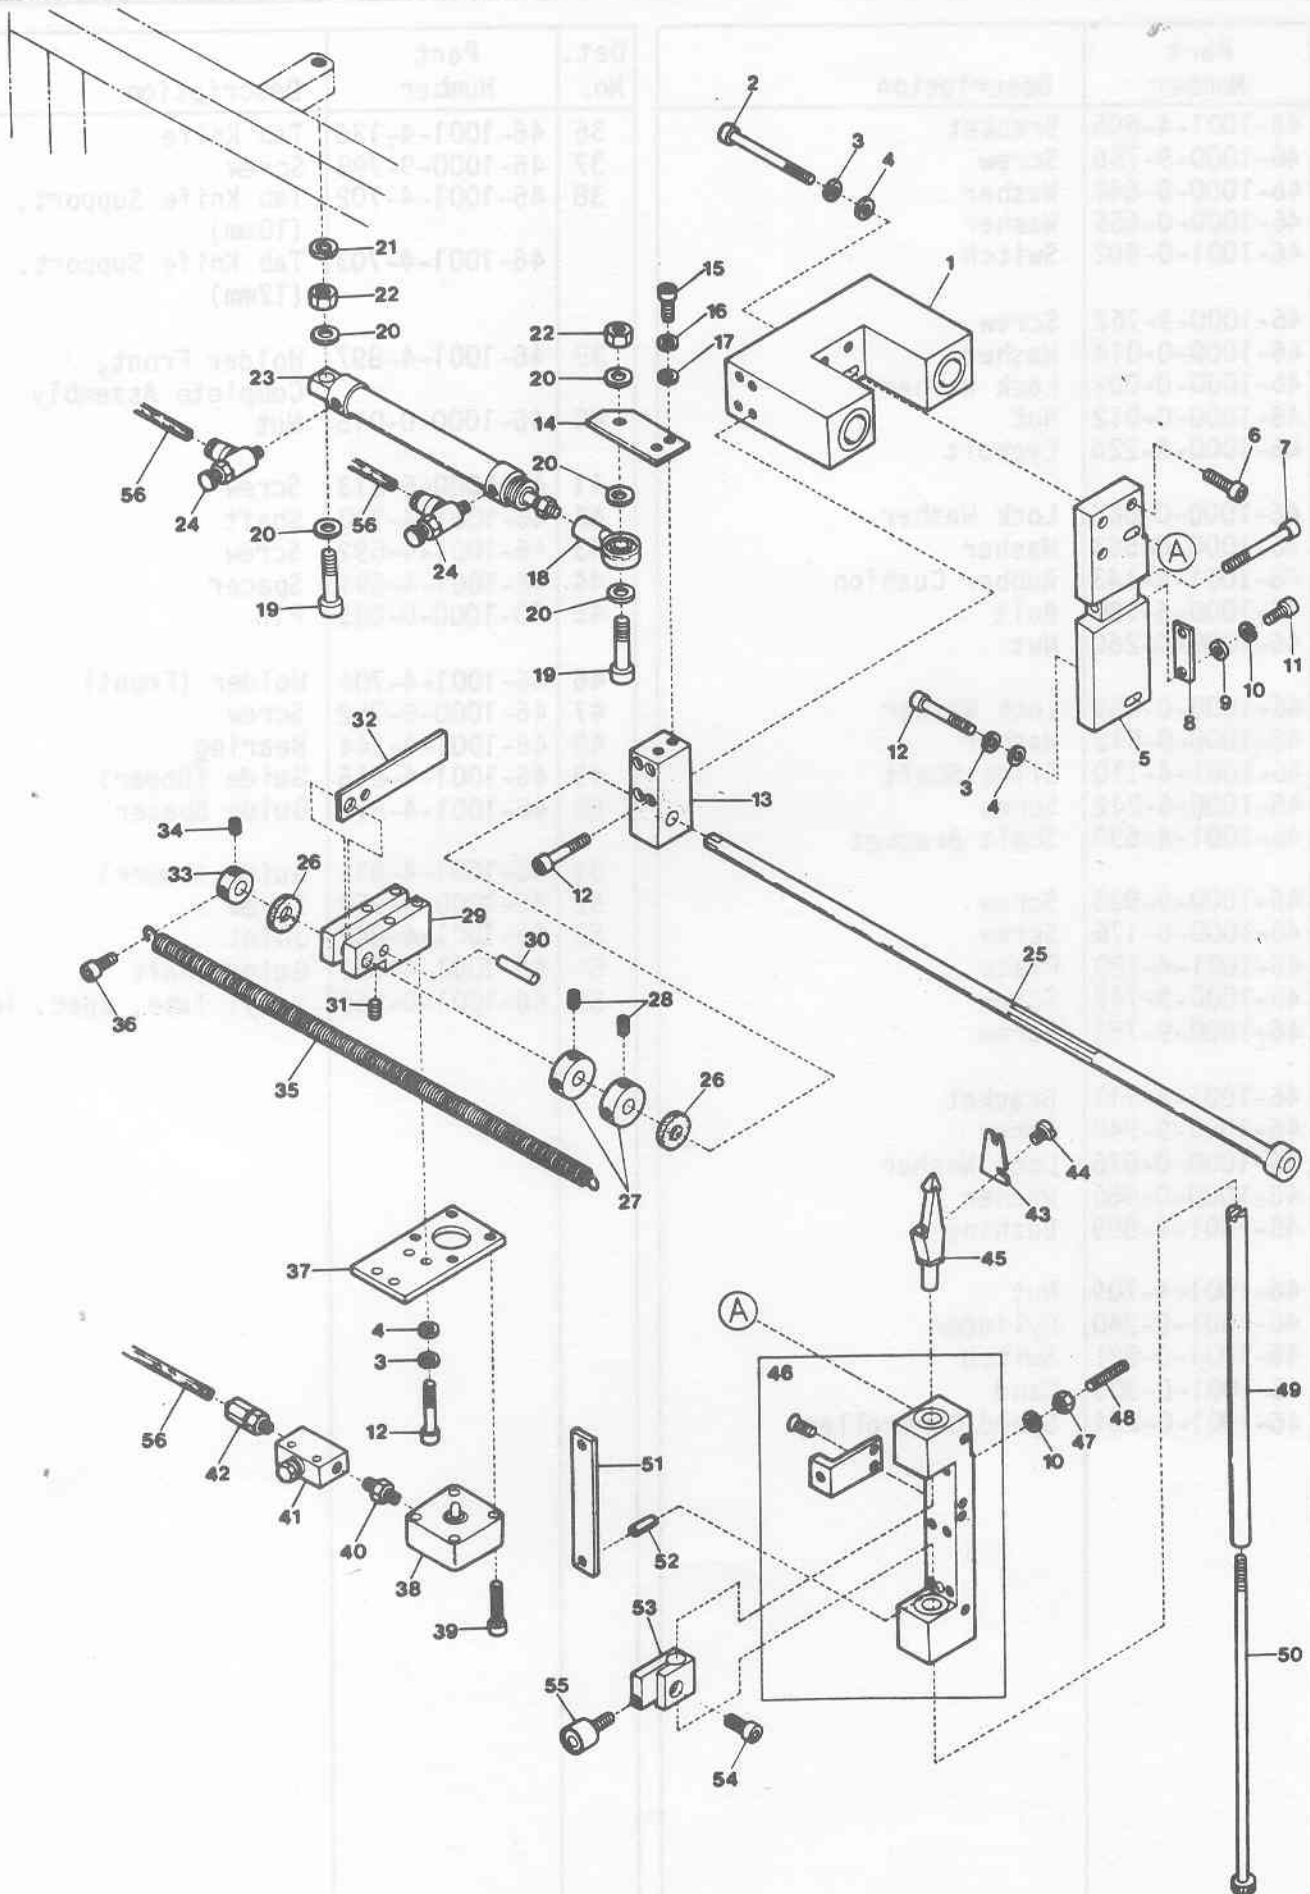 


Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-4-896	Slide Casing Unit	41	46-1001-0-054	Speed Controller
2	46-1000-6-225	Screw	42	46-1001-0-258	Straight Connector
3	46-1000-0-667	Lock Washer	43	46-1001-4-136	Tab Knife
4	46-1000-0-663	Washer	44	46-1000-9-798	Screw
5	46-1001-4-706	Holder	45	46-1001-4-702	Support (10mm)
6	46-1000-9-970	Screw		46-1001-4-703	Support (12mm)
7	46-1000-6-176	Screw	46	46-1001-4-898	Holder (R.H.) Complete Assembly
8	46-1001-4-129	Plate	47	46-1000-0-015	Nut
9	46-1000-0-665	Washer	48	46-1000-6-213	Screw
10	46-1000-0-644	Lock Washer	49	46-1001-4-700	Shaft
11	46-1000-9-746	Screw	50	46-1001-4-692	Screw
12	46-1000-9-745	Screw	51	46-1001-4-691	Spacer
13	46-1001-4-698	Stop	52	46-1000-0-035	Pin
14	46-1001-4-810	Support	53	46-1001-4-705	Holder (Rear)
15	46-1000-9-751	Screw	54	46-1000-9-752	Screw
16	46-1000-0-677	Lock Washer	55	46-1001-4-144	Bearing
17	46-1000-0-669	Washer	56	46-1001-0-260	Vinyl Tube, spec. length
18	46-1001-4-401	Rod End			
19	46-1000-6-220	Screw			
20	46-1000-0-666	Washer			
21	46-1000-0-676	Lock Washer			
22	46-1000-0-016	Nut			
23	46-1001-0-245	Cylinder			
24	46-1001-0-254	Speed Controller			
25	46-1001-4-118	Shaft			
26	46-1001-4-120	Rubber Cushion			
27	46-1001-4-778	Collar			
28	46-1000-9-740	Screw			
29	46-1001-4-697	Clamp			
30	46-1001-4-117	Pin			
31	46-1000-9-736	Screw			
32	46-1001-4-116	Clamp Plate			
33	46-1001-4-119	Collar			
34	46-1000-3-662	Screw			
35	46-1001-4-108	Spring			
36	46-1000-9-980	Screw			
37	46-1001-4-693	Plate			
38	46-1001-0-244	Cylinder			
39	46-1000-9-977	Screw			
40	46-1001-0-032	Close Nipple			

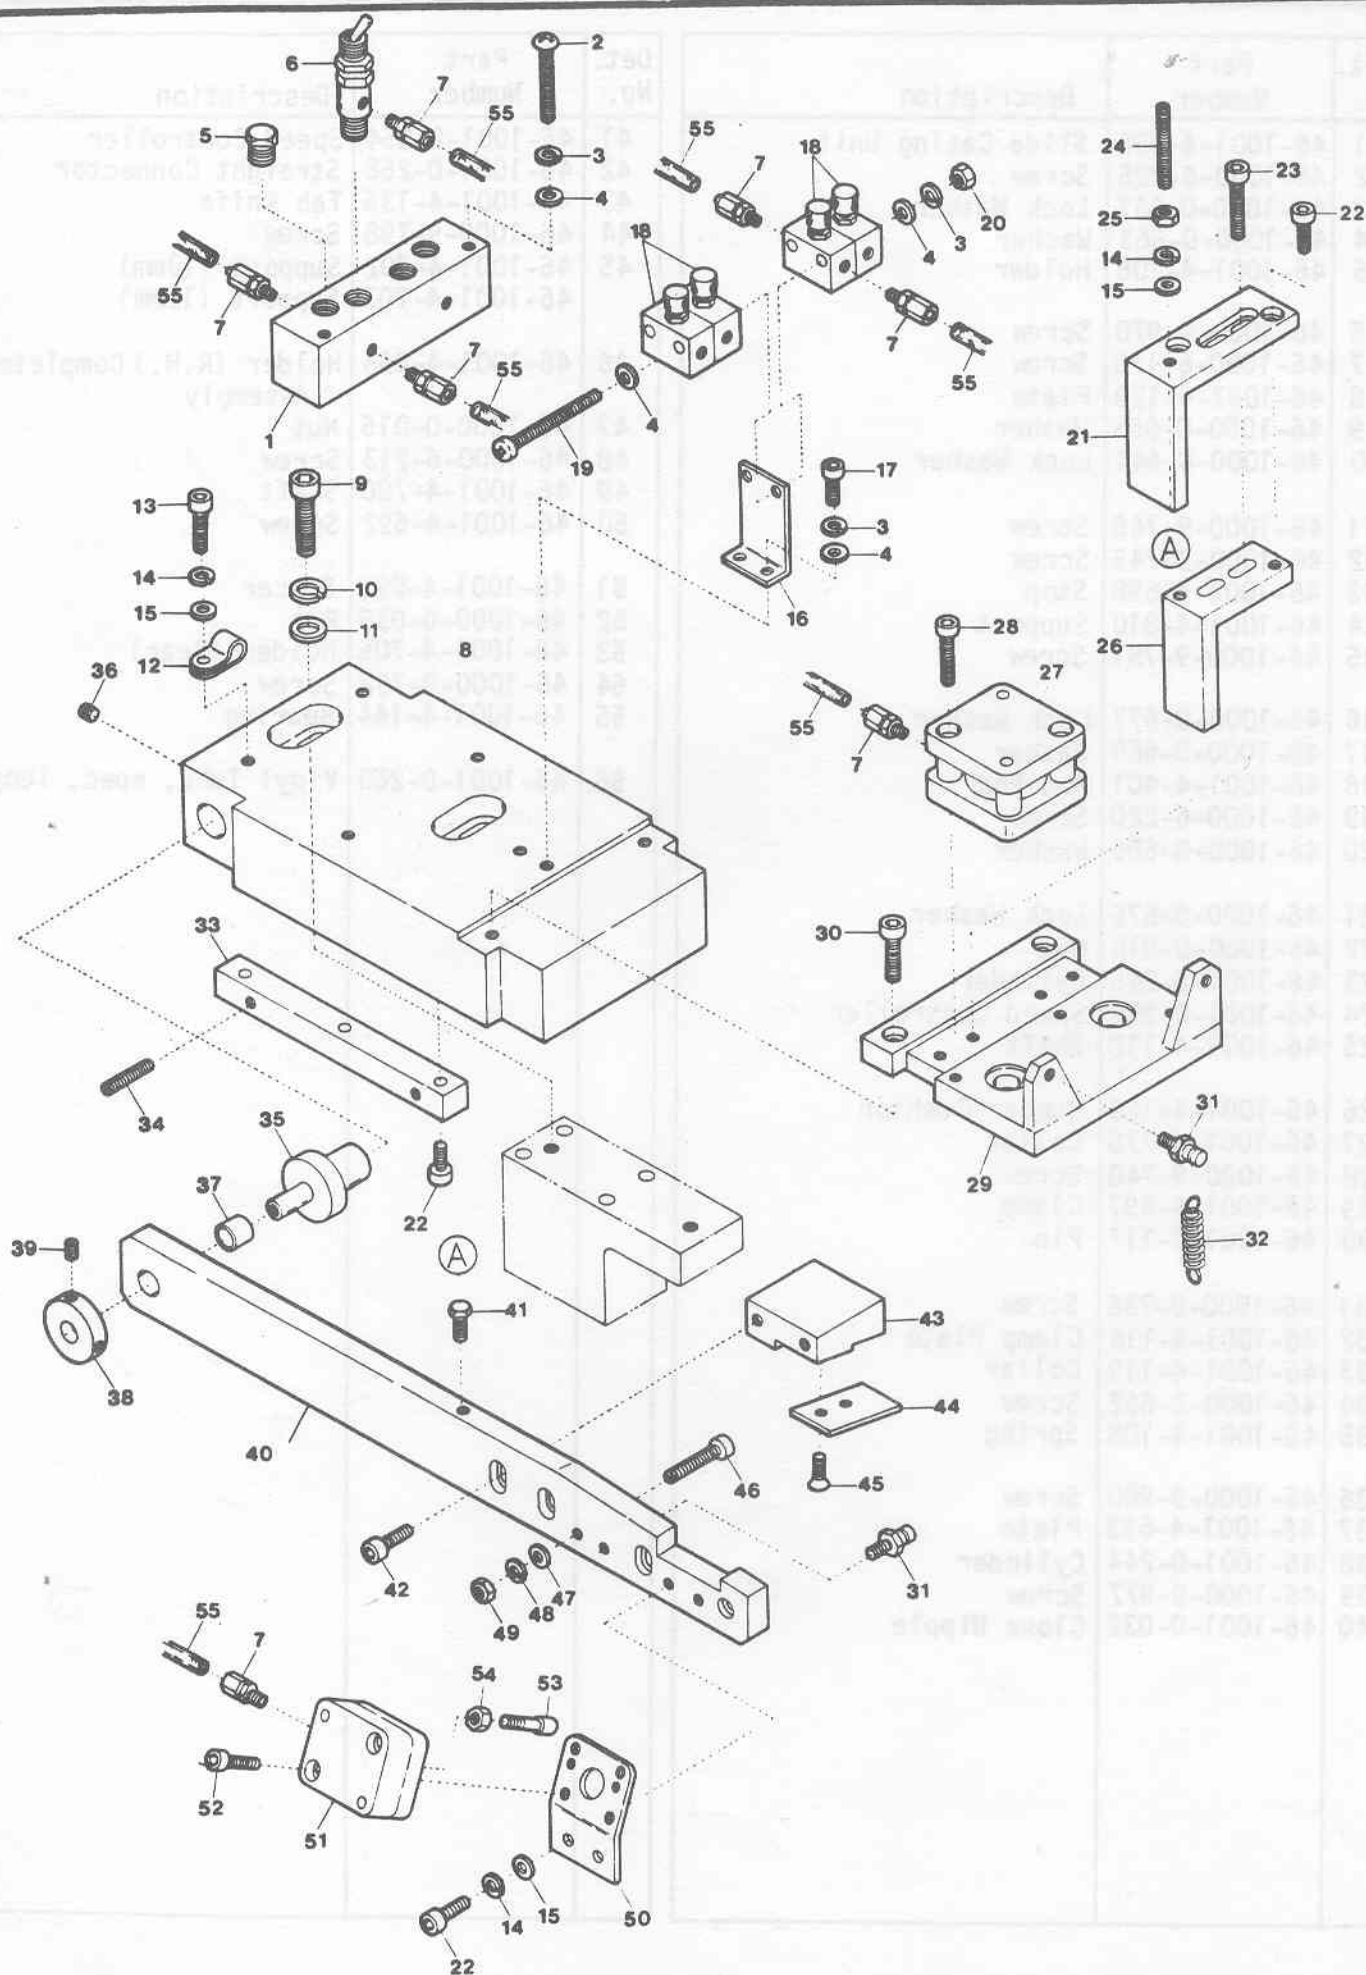 


Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-4-625	Manifold	36	46-1000-9-740	Screw
2	46-1000-6-214	Screw	37	46-1001-4-654	Bushing
3	46-1000-0-002	Lock	38	46-1001-4-592	Collar
4	46-1000-0-014	Washer	39	46-1000-3-665	Screw
5	46-1001-0-117	Seal Plug	40	46-1001-4-638	Clamp Arm (L.H.)
				46-1001-4-639	Clamp Arm (R.H.)
6	46-1001-0-182	TAC Valve	41	46-1000-6-215	Screw
7	46-1001-0-258	Connector	42	46-1000-9-976	Screw
8	46-1001-4-623	Block	43	46-1001-4-604	Brush Blade (L.H.)
9	46-1000-9-761	Screw		46-1001-4-603	Brush Blade (R.H.)
10	46-1000-0-439	Lock Washer	44	46-1001-4-011	Plate (L.H.)
				46-1001-4-010	Plate (R.H.)
11	46-1000-0-612	Washer	45	46-1000-9-776	Screw
12	46-1006-3-612	Clamp			
13	46-1000-9-992	Screw	46	46-1000-6-216	Screw
14	46-1000-0-644	Lock Washer	47	46-1000-0-663	Washer
15	46-1000-0-665	Washer	48	46-1000-0-667	Lock Washer
			49	46-1000-0-011	Nut
16	46-1001-4-606	Bracket	50	46-1001-4-597	Plate
17	46-1000-9-744	Screw			
18	46-1001-0-054	Speed Controller	51	46-1001-0-251	Cylinder
19	46-1000-6-223	Screw	52	46-1000-9-935	Screw
20	46-1000-0-012	Nut	53	46-1001-4-605	Screw
			54	46-1000-0-009	Nut
21	46-1001-4-598	Guide	55	46-1001-0-260	Vinyl Tube, spec. length
22	46-1000-9-747	Screw			
23	46-1000-9-750	Screw			
24	46-1000-6-213	Screw			
25	46-1000-0-015	Nut			
26	46-1001-4-599	Guide			
27	46-1001-0-250	Cylinder			
28	46-1000-9-755	Screw			
29	46-1001-4-622	Block			
30	46-1000-9-970	Screw			
31	46-1000-6-183	Screw			
32	46-1001-4-030	Spring			
33	46-1001-4-005	Block			
34	46-1000-9-738	Screw			
35	46-1001-4-591	Shaft			

 CLAMP FOOT

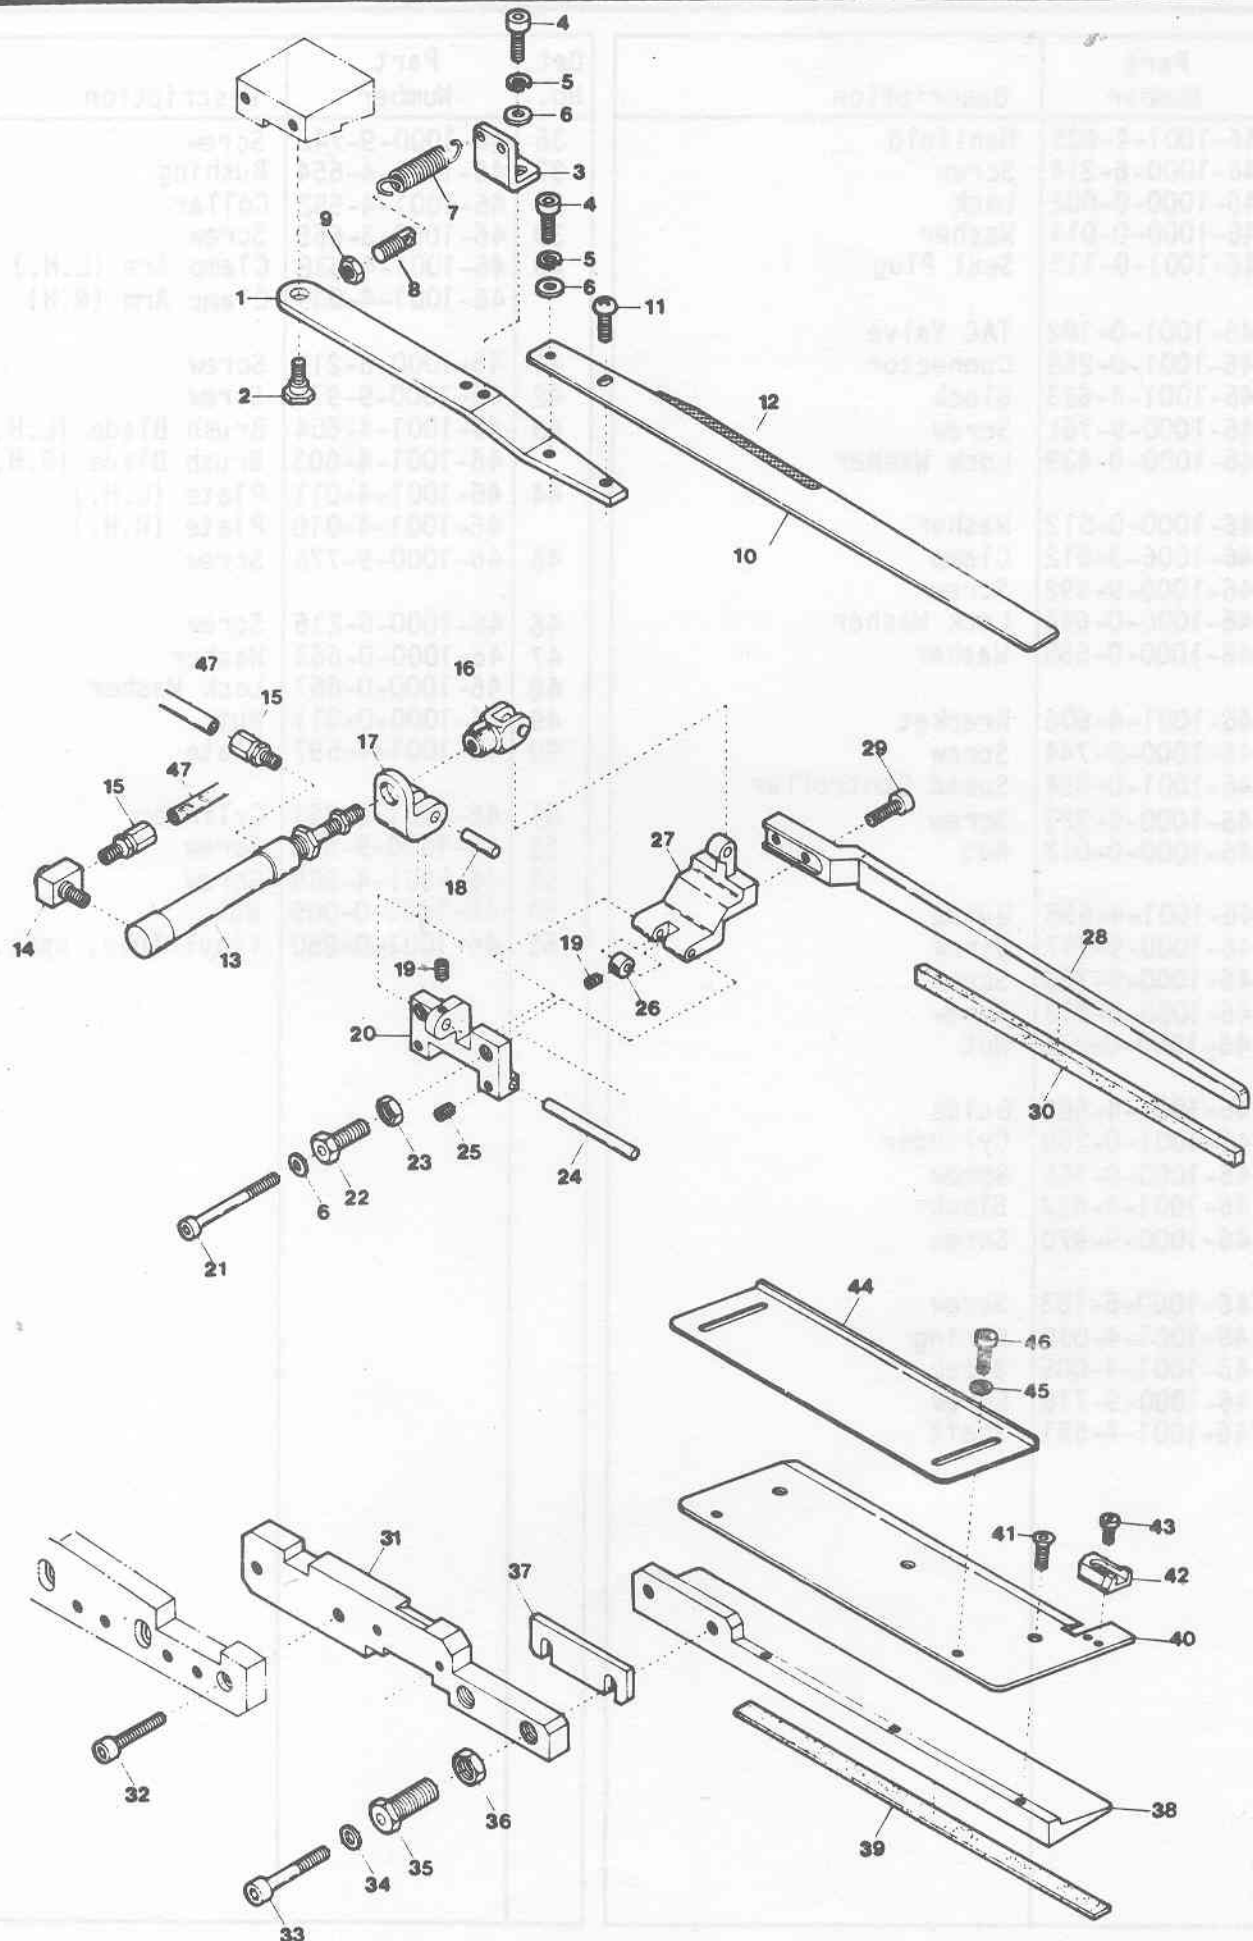

Det. No.	Part Number	Description
1	46-1001-4-620	Brush Arm (L.H.)
	46-1001-4-621	Brush Arm (R.H.)
2	46-1000-6-188	Screw
3	46-1001-4-607	Bracket
4	46-1000-6-202	Screw
5	46-1000-0-64	Lock Washer
6	46-1000-0-665	Washer
7	46-1001-4-643	Spring
8	46-1000-6-638	Stop Screw
9	46-1000-0-339	Nut
10	46-1001-4-616	Brush Blade (L.H.)
	46-1001-4-617	Brush Blade (R.H.)
11	46-1000-6-227	Screw
12	47-1001-0-825	Reflective Tape
13	47-1001-0-274	Cylinder
14	46-1001-0-019	Fitting
15	46-1001-0-258	Connector
16	47-1001-0-284	Clevis
17	47-1001-4-587	Bracket
18	47-1001-4-609	Pin
19	46-1000-3-656	Screw
20	47-1001-4-608	Bracket
21	46-1000-6-235	Screw
22	46-1000-6-193	Bolt
23	46-1000-0-145	Nut
24	47-1001-4-611	Shaft
25	46-1000-9-736	Screw
26	47-1001-4-610	Collar
27	47-1001-4-614	Bracket
28	47-1001-4-627	Flap Clamp (L.H.)
	47-1001-4-626	Flap Clamp (R.H.)
29	46-1000-9-746	Screw
30	47-1001-4-590	Flap Clamp Rubber


Det. No.	Part Number	Description
31	46-1001-4-646	Arm (L.H.)
	46-1001-4-645	Arm (R.H.)
32	46-1000-9-976	Screw
33	46-1000-6-228	Screw
34	46-1000-0-633	Washer
35	46-1000-6-184	Bolt
36	46-1000-6-185	Nut
37	46-1001-4-593	Spacer (3.0mm)
	46-1001-4-594	Spacer (3.25mm)
	46-1001-4-595	Spacer (4.5mm)
	46-1001-4-596	Spacer (5.0mm)
38	46-1001-4-629	Clamp Foot (L.H.)
	46-1001-4-628	Clamp Foot (R.H.)
39	46-1001-4-589	Rubber
40	47-1001-4-644	Plate (L.H.)
	47-1001-4-643	Plate (R.H.)
41	46-1000-6-217	Screw
42	47-1001-4-640	Flap Gauge (L.H.)
42	47-1001-4-641	Flap Gauge (R.H.)
43	46-1000-5-044	Screw
44	47-1001-4-619	Gauge Plate
45	46-1000-0-014	Washer
46	46-1000-9-995	Screw
47	46-1001-0-260	Vinyl Tube, spec. length

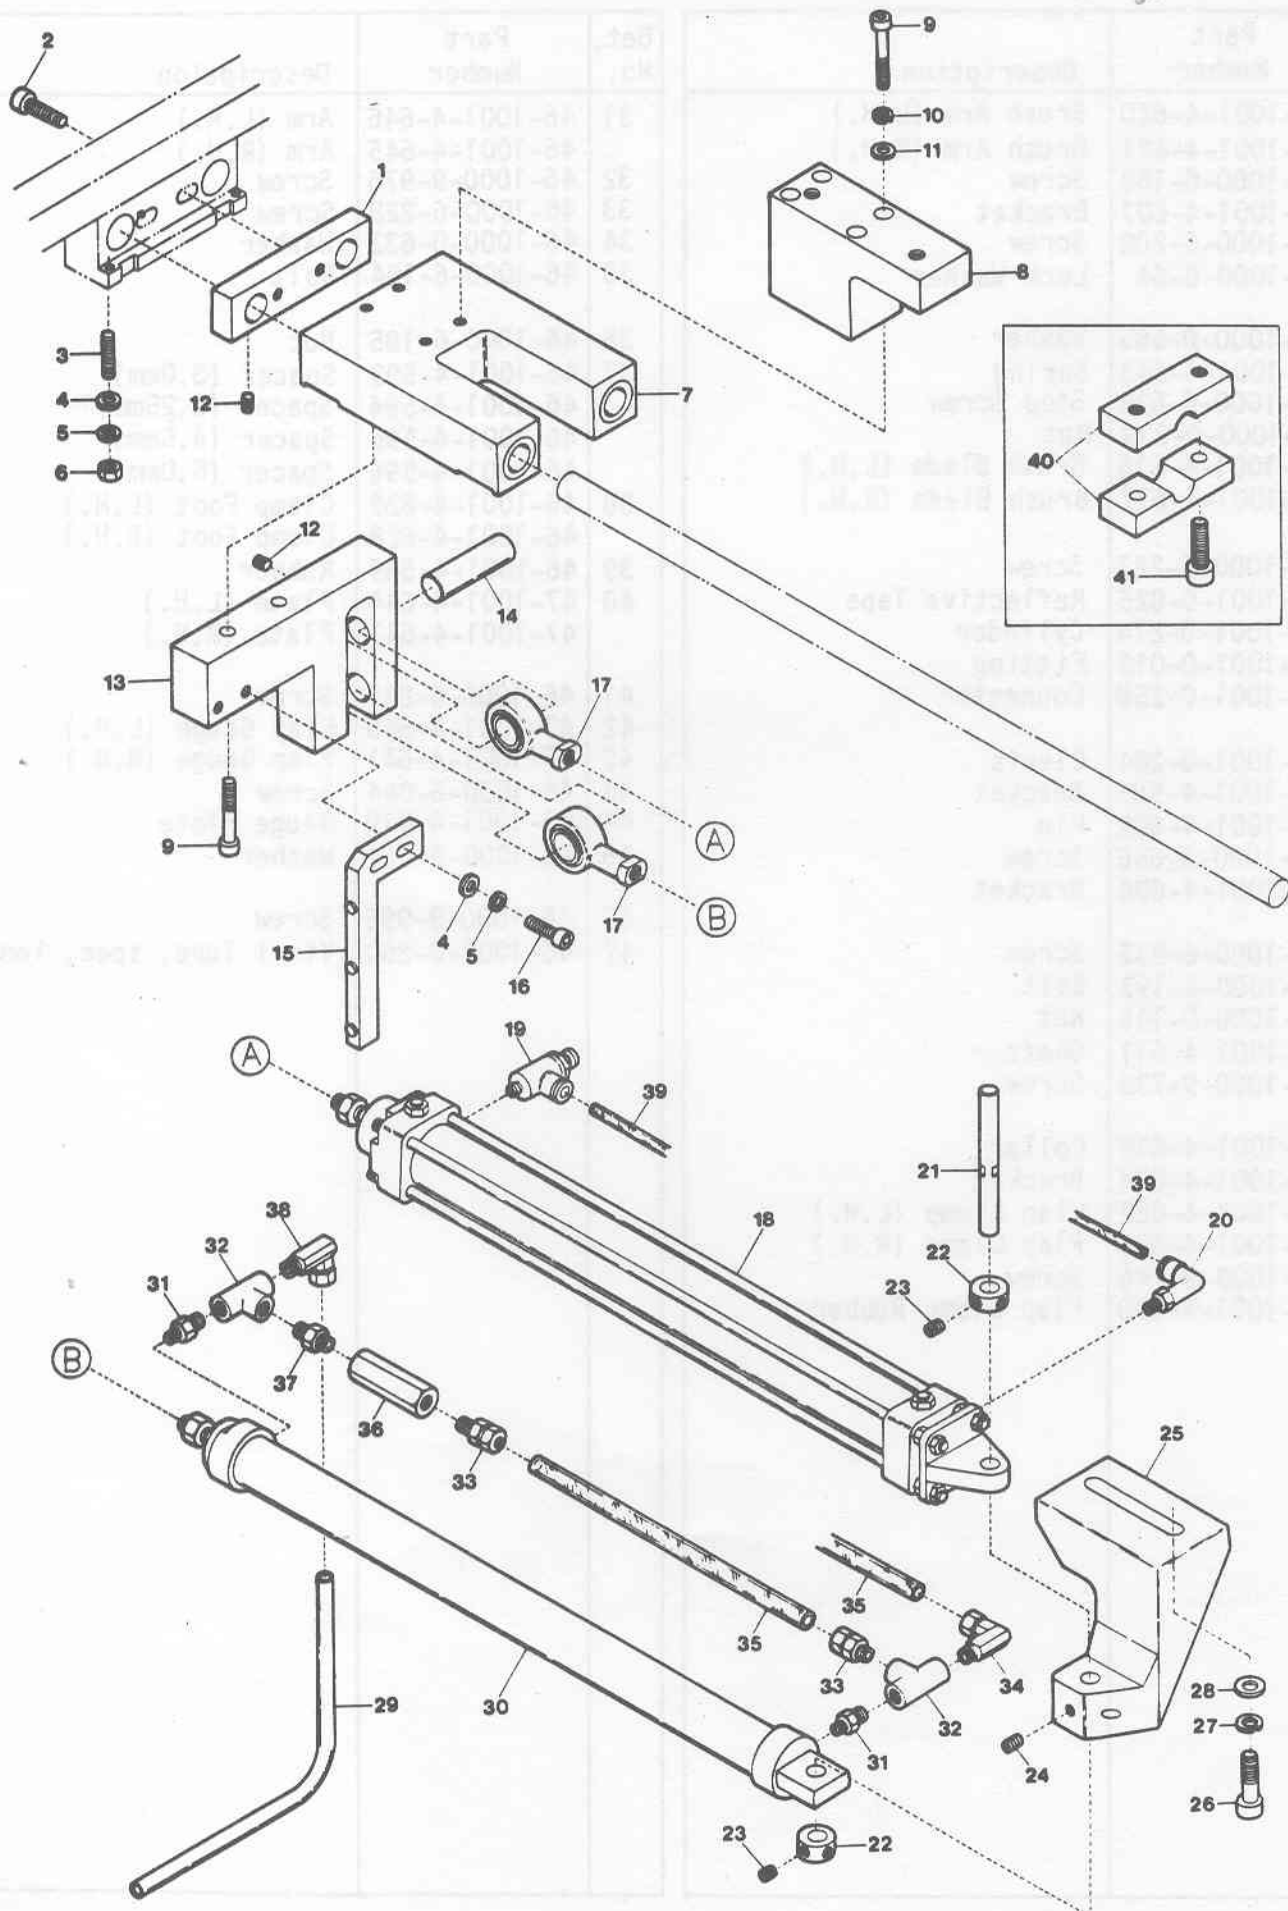 





CLAMP FOOT CYLINDER

2/35

Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-4-101	Holder, Rear	31	46-1001-0-209	Reducing Nipple
2	46-1000-9-758	Screw	32	46-1001-0-210	T-Fitting (3/8")
3	46-1000-9-738	Screw	33	46-1001-0-277	Connector (3/8")
4	46-1000-0-669	Washer	34	46-1001-0-207	Elbow
5	46-1000-0-677	Lock Washer	35	46-1001-0-282	Tube
6	46-1000-0-009	Nut	36	46-1001-0-176	Relief Valve
7	46-1001-4-112	Slide Bracket	37	46-1001-0-208	Close Nipple (3/8")
8	46-1001-4-106	Mount Block	38	46-1001-0-205	Elbow
9	46-1000-9-759	Screw	39	46-1001-0-261	Vinyl Tube, spec. length
10	46-1000-0-676	Lock Washer	40	46-1001-4-613	Shipping Clamp
11	46-1000-0-666	Washer	41	46-1000-9-753	Screw
12	46-1000-6-212	Screw			
13	46-1001-4-624	Bracket			
14	46-1001-4-600	Shaft			
15	46-1001-4-773	Magnet Unit			
16	46-1000-9-935	Screw			
17	46-1001-4-400	Rod End			
18	46-1001-0-252	Drive Cylinder			
19	46-1001-0-255	Speed Controller			
20	46-1001-0-264	Connector			
21	46-1001-4-648	Shaft			
22	46-1001-4-651	Collar			
23	46-1000-3-662	Screw			
24	46-1000-9-916	Screw			
25	46-1001-4-652	Bracket			
26	46-1000-9-760	Screw			
27	46-1000-0-439	Lock Washer			
28	46-1000-0-612	Washer			
29	46-1001-0-295	Copper Pipe			
30	46-1001-0-276	Cylinder			

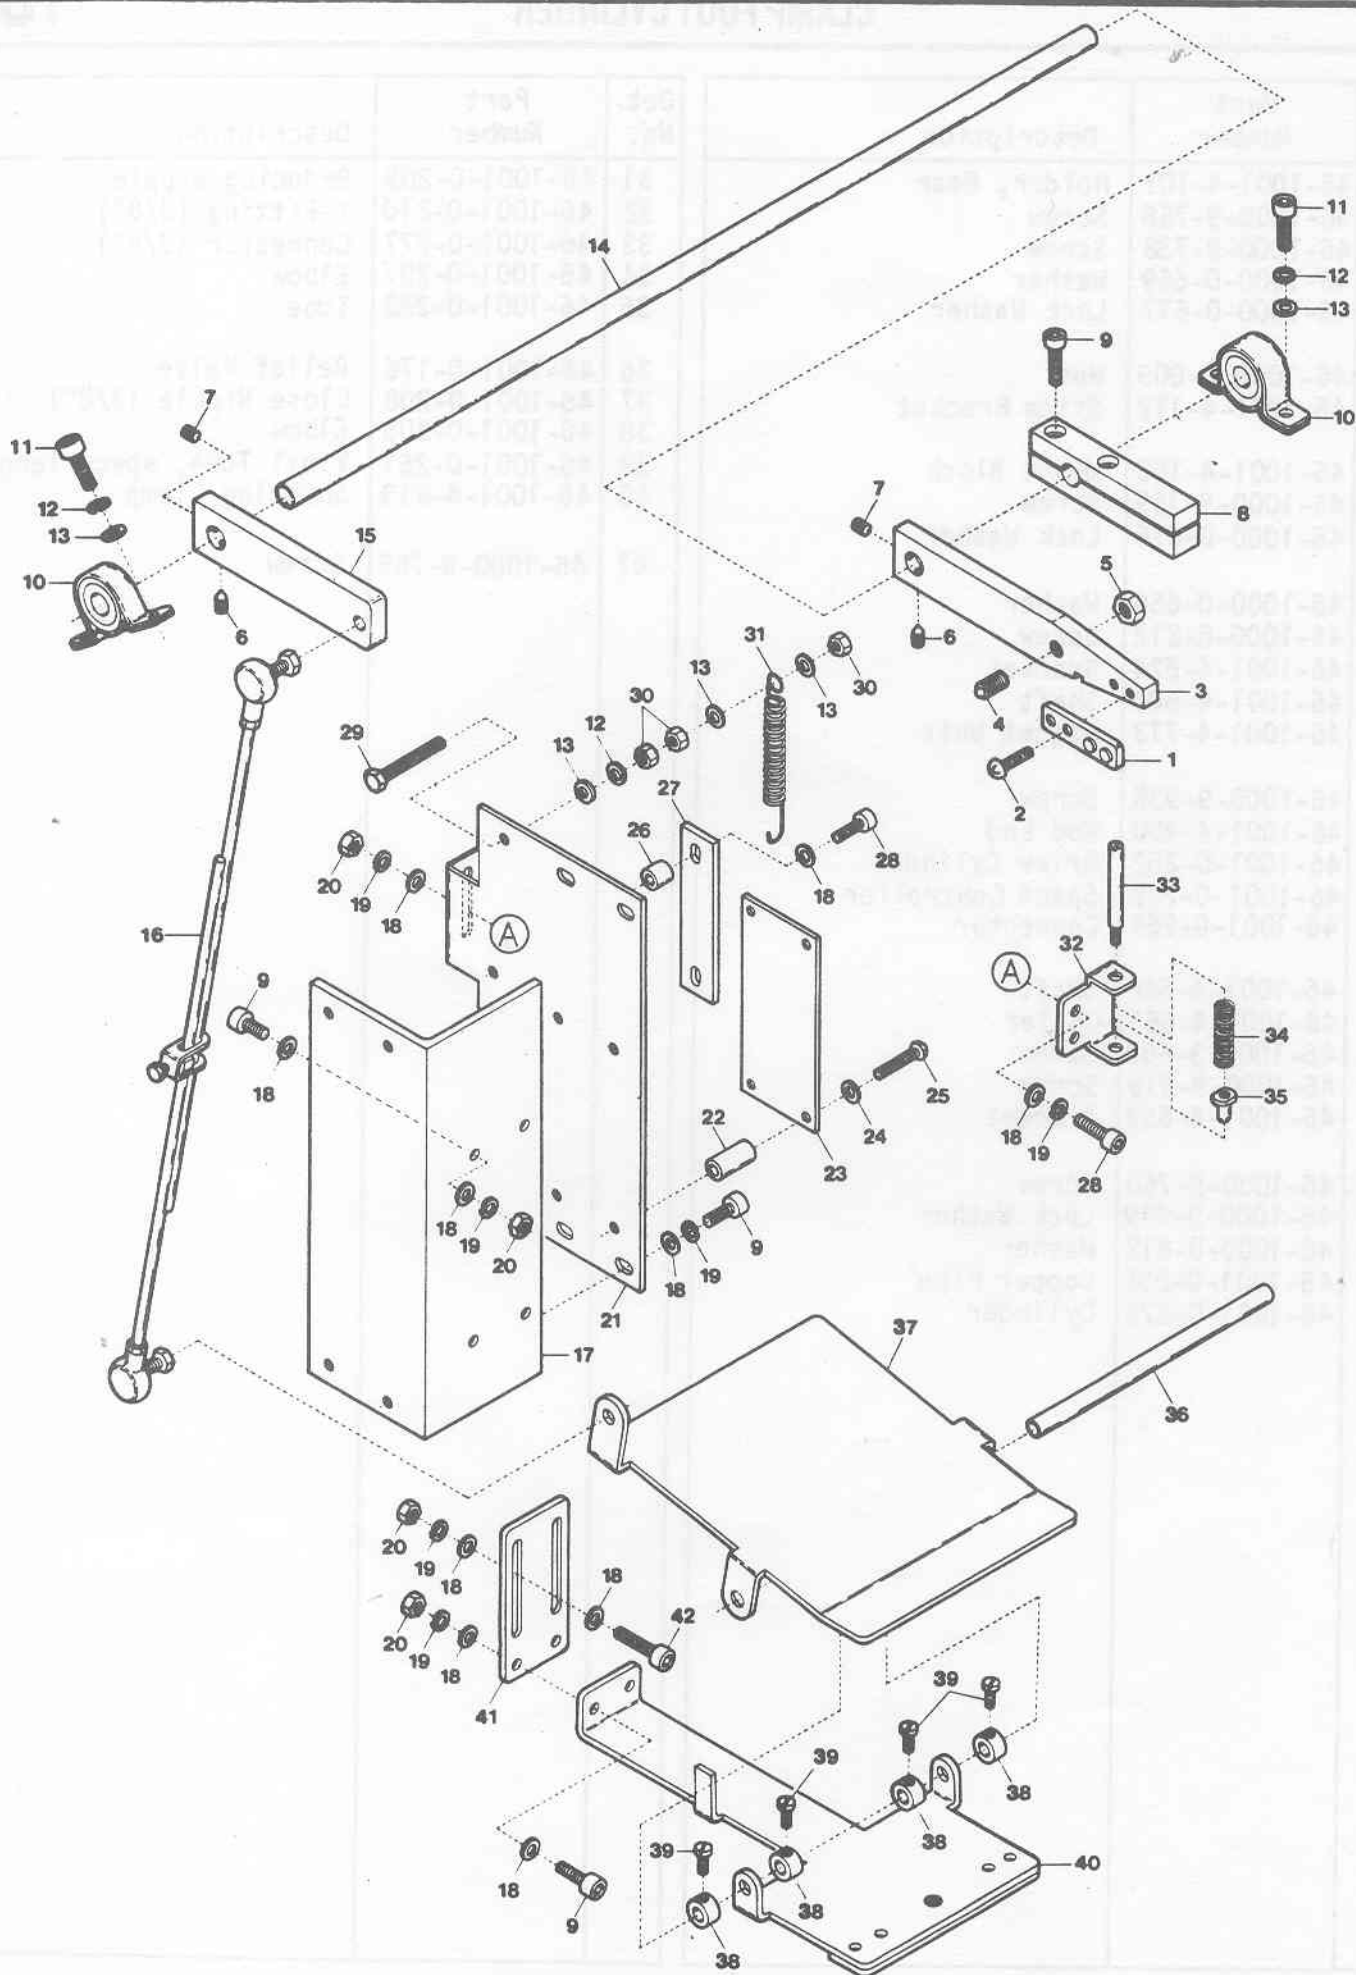 

Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-4-767	Magnet Unit	36	46-1001-4-765	Shaft
2	46-1000-9-956	Screw	37	46-1001-4-752	Pedal
3	46-1001-4-763	Holder	38	46-1003-2-719	Collar
4	46-1001-4-725	Spring Plunger	39	46-1000-4-351	Screw
5	46-1000-0-054	Nut	40	46-1001-4-753	Support Plate
6	46-1000-6-206	Screw	41	46-1001-4-739	Plate
7	46-1000-6-212	Screw	42	46-1000-6-201	Screw
8	46-1001-4-988	Stop (Lower)			
9	46-1000-9-970	Screw			
10	46-1001-4-758	Bearing			
11	46-1000-9-936	Screw			
12	46-1000-0-676	Lock Washer			
13	46-1000-0-666	Washer			
14	46-1001-4-769	Shaft (Upper)			
15	46-1001-4-919	Lever			
16	46-1001-4-722	Pitman Connecting Unit			
17	46-1001-4-921	Pedal Board Holder			
18	46-1000-0-663	Washer			
19	46-1000-0-667	Lock Washer			
20	46-1000-0-011	Nut			
21	46-1001-4-920	Support Plate			
22	46-1001-0-914	Spacer			
23	46-1001-4-903	Plate (Circuit Bd.)			
24	46-1000-0-014	Washer			
25	46-1000-9-957	Screw			
26	46-1001-4-917	Spacer			
27	46-1001-4-723	Plate			
28	46-1000-0-976	Screw			
29	46-1000-9-978	Bolt			
30	46-1000-0-016	Nut			
31	46-1001-4-757	Spring			
32	46-1001-4-759	Spring Bracket			
33	46-1001-4-756	Stop Pin			
34	46-1001-4-760	Spring (Upper)			
35	46-1001-4-761	Stop			

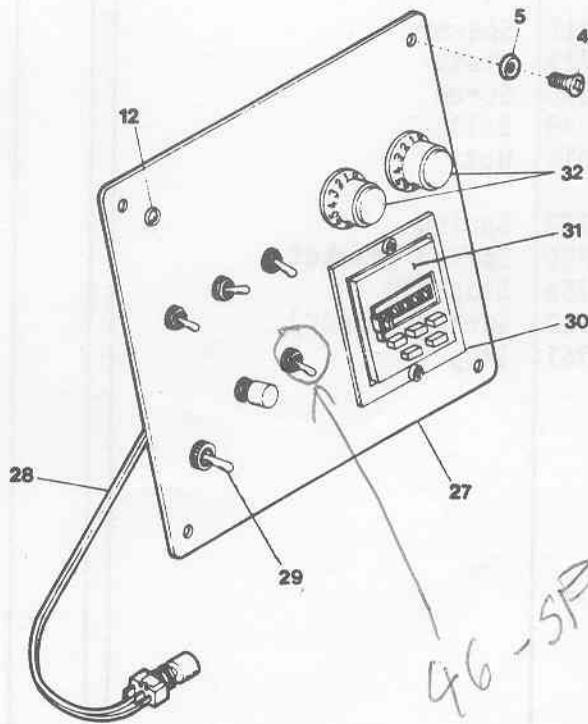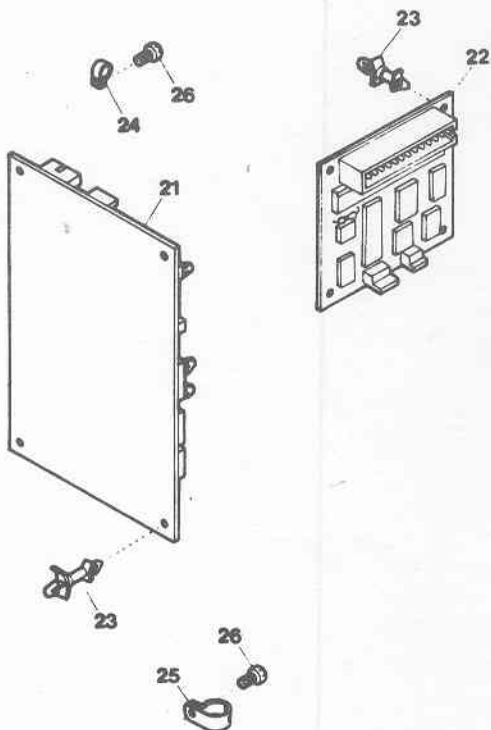  
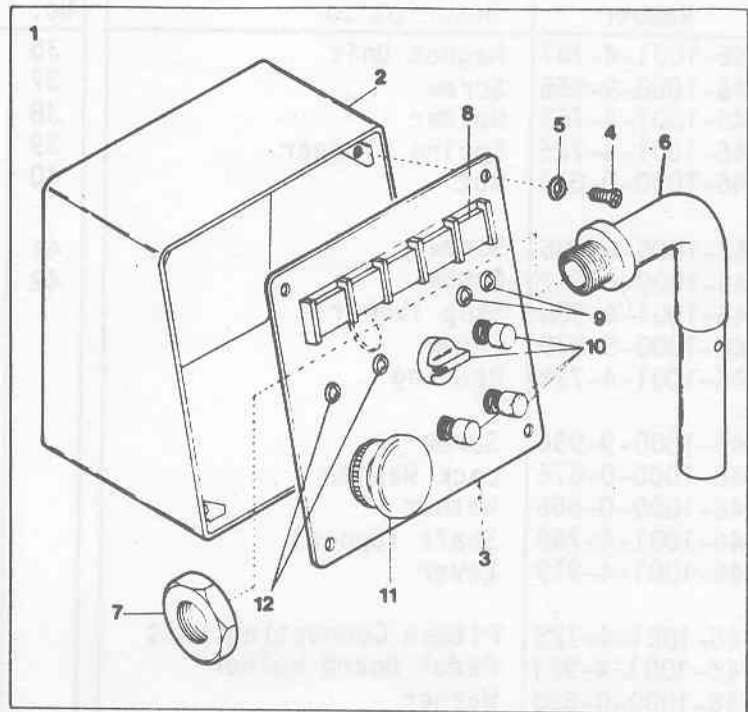 
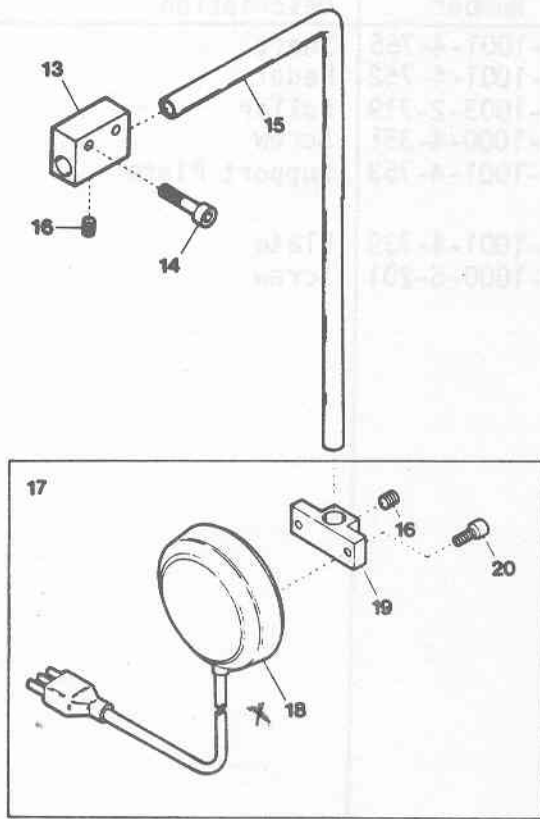 


46-SPEC-0-015

CONTROL BOX

2/39




Det. No.	Part Number	Description			
1	47-1001-4-911	Upper Control Box, Complete Assembly			
2	46-1001-4-839	Switch Box			
3	47-1001-4-827	Panel			
4	46-1000-9-774	Screw			
5	46-1000-0-670	Washer			
6	46-1001-4-673	Pipe			
7	46-1000-0-013	Nut			
8	46-1001-0-905	Switch			
9	47-1001-0-927	Indicator Lamp			
10	47-1001-0-926	Push-Button Switch			
11	46-1001-0-512	Stop Switch			
12	46-1001-0-961	"LED Unit			
13	46-1001-4-738	Bracket			
14	46-1000-6-205	Screw			
15	46-1001-4-747	Bracket			
16	46-1000-3-662	Screw			
17	46-1001-4-909	Knee Switch, Comp. Asm.			
18	46-1001-4-912	Knee Switch			
19	46-1001-4-737	Bracket			
20	46-1000-9-748	Screw			
21	46-1001-4-901	I.O. Board			
22	46-1001-4-900	CPU Board			
23	46-1001-0-954	Support			
24	46-1001-0-720	Clamp			
25	46-1001-0-721	Clamp			
26	46-1000-9-975	Screw			
27	47-1001-4-828	Control Panel			
28	47-1001-4-905	Switch			
29	46-1001-0-929	Power Switch			
30	46-1001-0-903	Counter Panel Socket			
31	46-1001-0-863	Counter			
32	46-1001-0-928	Resister Unit			

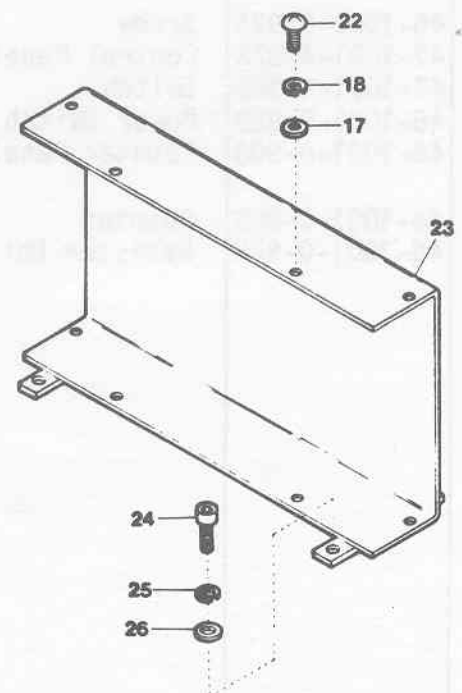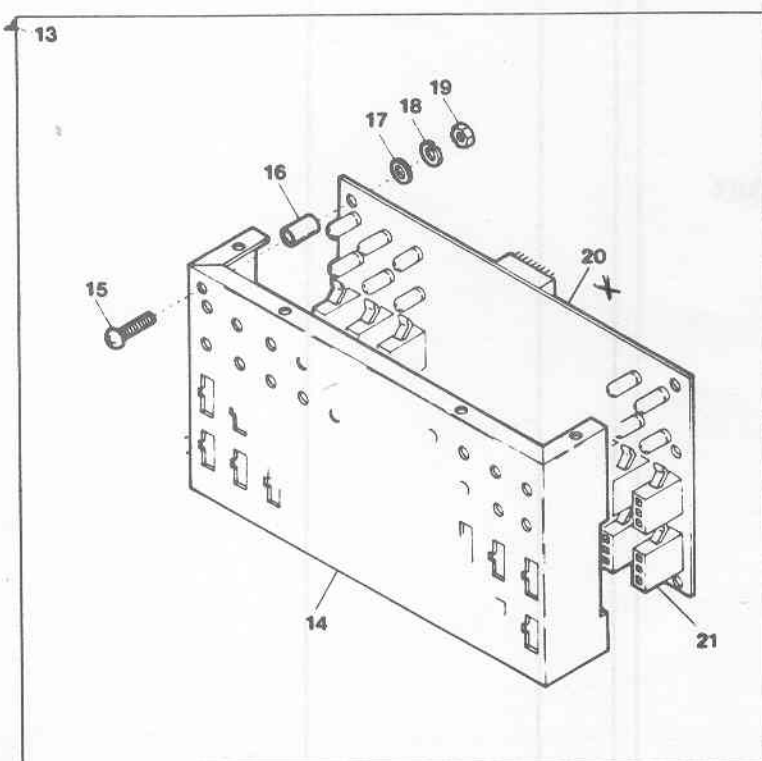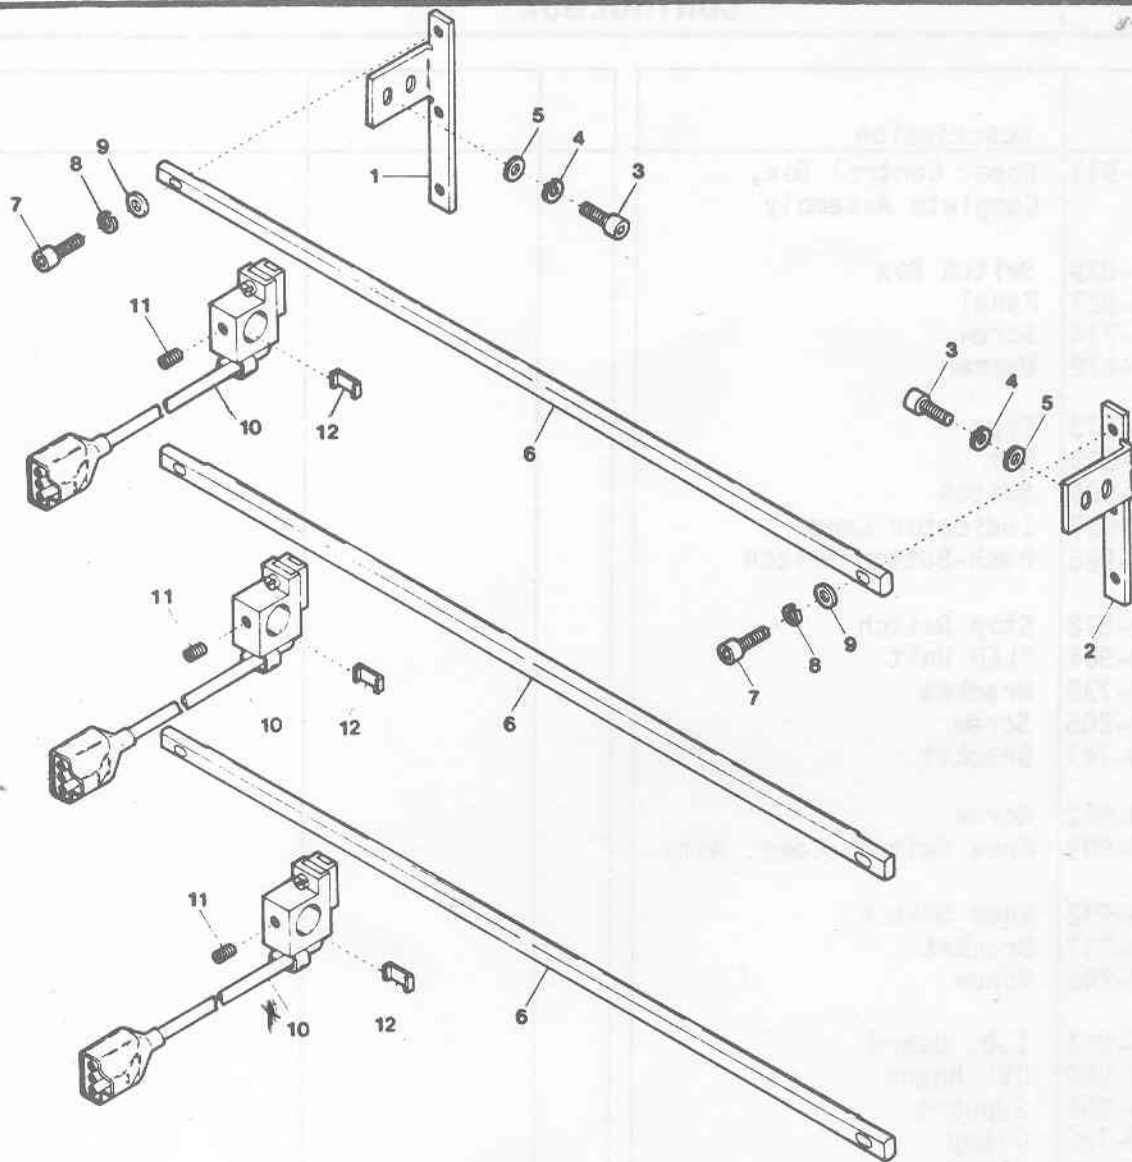   


INTERRELATED SWITCHES

2/41


Det. No.	Part Number	Description			
1	46-1001-1-790	Bracket (L.H.)			
2	46-1001-4-791	Bracket (R.H.)			
3	46-1000-9-747	Screw			
4	46-1000-0-644	Lock Washer			
5	46-1000-0-665	Washer			
6	46-1001-4-772	Switch Rail			
7	46-1000-9-752	Screw			
8	46-1000-0-677	Lock Washer			
9	46-1000-0-669	Washer			
10	46-1001-4-783	Hall Effect Switch (9cm-Cord)			
	46-1001-4-784	Hall Effect Switch (70cm-Cord)			
11	46-1000-3-662	Screw			
12	46-1001-4-771	Clamping Plate			
13	46-1001-4-916	Switch Box, Comp. Asm.			
14	46-1001-4-787	Switch Box			
15	46-1000-9-799	Screw			
16	46-1001-0-924	Support			
17	46-1000-0-014	Washer			
18	46-1000-0-002	Lock Washer			
19	46-1000-0-012	Nut			
20	46-1001-4-902	Switch Board			
21	46-1001-0-923	Connector			
22	46-1000-9-994	Screw			
23	46-1001-4-789	Cover			
24	46-1000-9-976	Screw			
25	46-1000-0-667	Lock Washer			
26	46-1000-0-663	Washer			

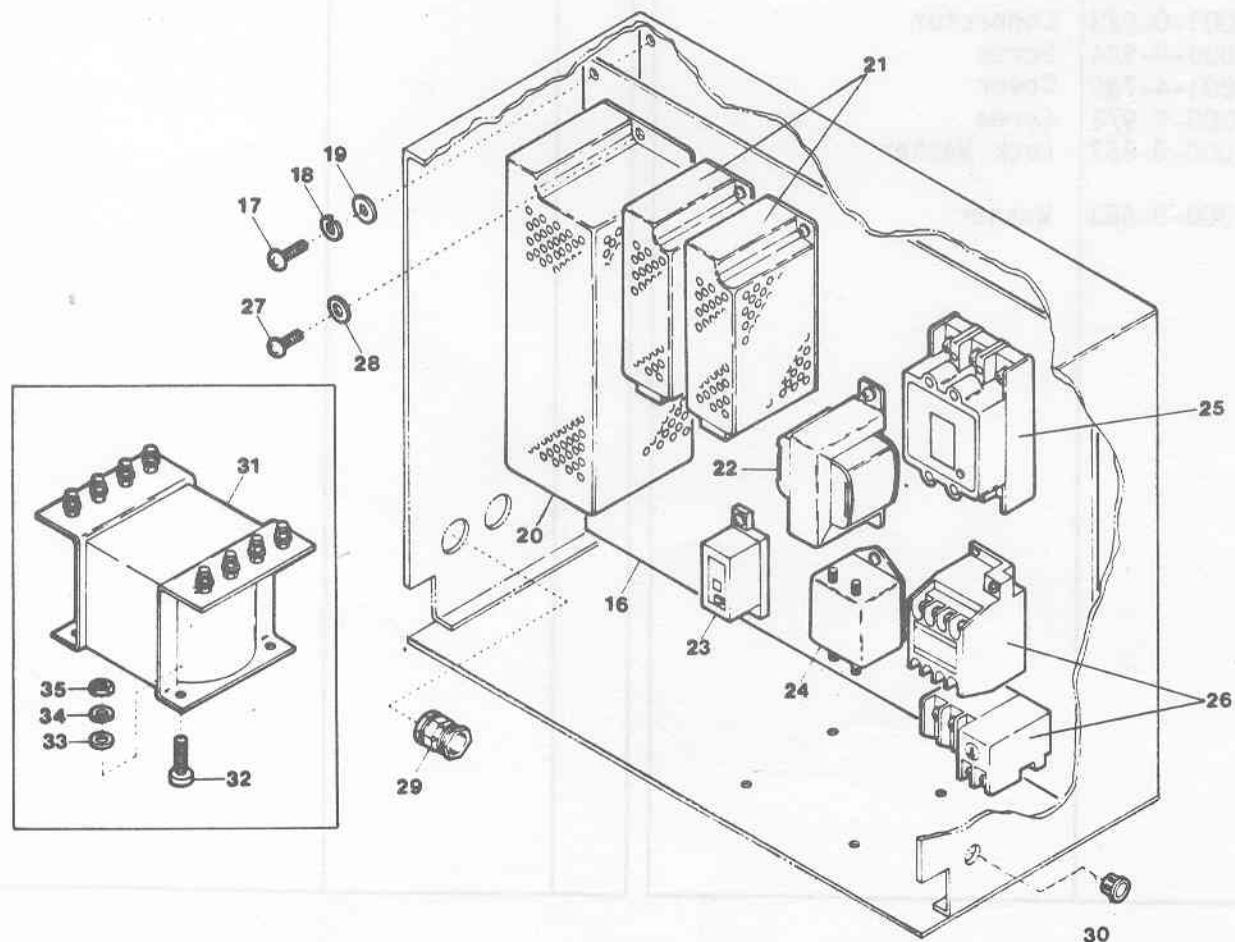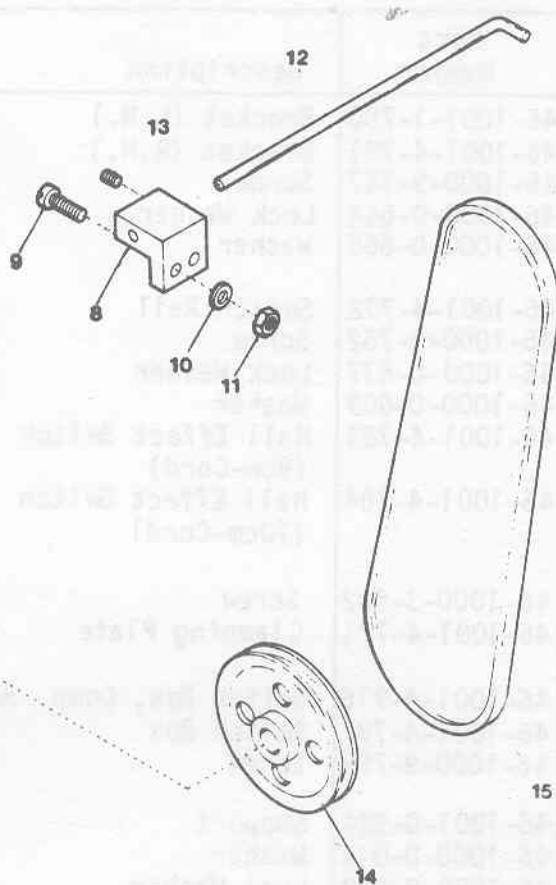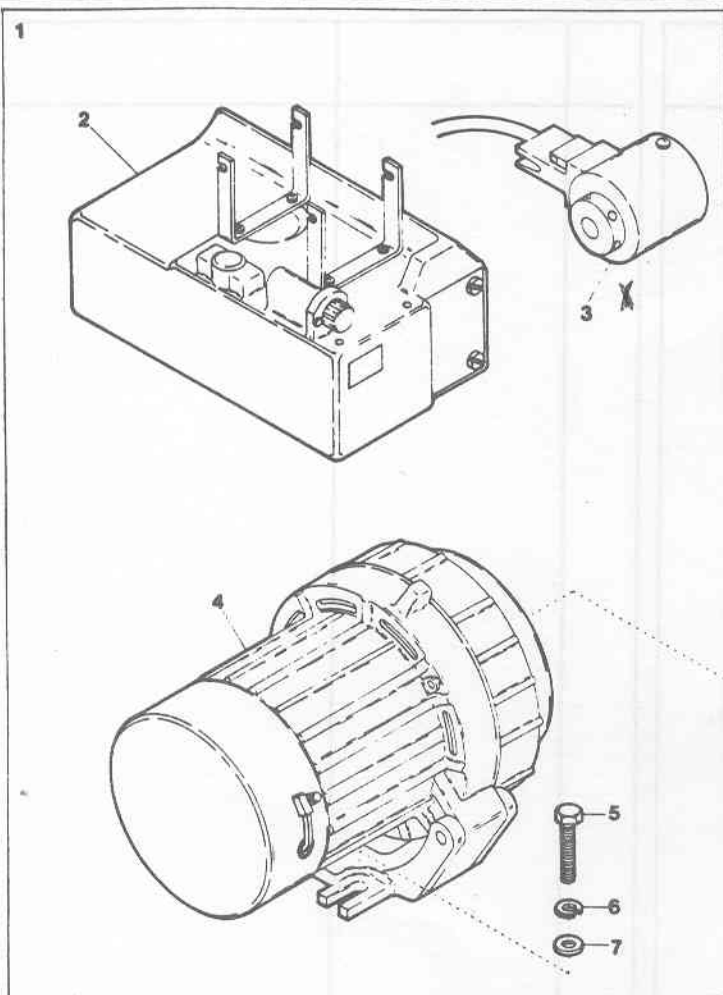   

Det. No.	Part Number	Description			
1	46-1001-0-900	Positioner Motor, Complete Set			
2	46-1001-0-957	Control Box			
3	46-1001-0-956	Synchronizer			
4	46-1001-0-955	Motor			
5	46-1000-9-928	Screw			
6	46-1000-0-439	Lock Washer			
7	46-1000-0-432	Washer			
8	46-1001-4-418	Positioning Pin			
9	46-1000-4-445	Screw			
10	46-1000-0-530	Washer			
11	46-1000-0-334	Nut			
12	46-1001-4-421	Pin			
13	46-1000-9-736	Screw			
14	46-1001-4-797	Pulley (100mm)			
	46-1001-4-798	Motor Pulley (120mm)			
15	46-1001-0-987	V-Belt (M52")			
	46-1001-0-988	V-Belt (M53")			
16	46-1001-4-746	Plate			
17	46-1000-9-953	Screw			
18	46-1000-0-667	Lock Washer			
19	46-1000-0-663	Washer			
20	46-1001-0-899	Regulator (24V)			
21	46-1001-0-898	Regulator (5V)			
22	46-1001-0-845	Transformer (200-220V)			
23	46-1001-0-842	Circuit Protector			
24	46-1001-0-846	Noise Filter			
25	46-1001-0-893	Breaker			
26	46-1001-0-894	Relay (200V)			
	46-1001-0-895	Relay (220V)			
	46-1001-0-896	Relay (380V)			
	46-1001-0-897	Relay (440V)			
27	46-1000-9-992	Screw			
28	46-1000-0-665	Washer			
29	46-1001-0-959	Bushing			
30	46-1001-0-958	Bushing			
31	46-1001-0-137	Transformer (europe)			
32	46-1000-9-752	Screw			
33	46-1000-0-669	Washer			
34	46-1000-0-677	Lock Washer			
35	46-1000-0-009	Nut			

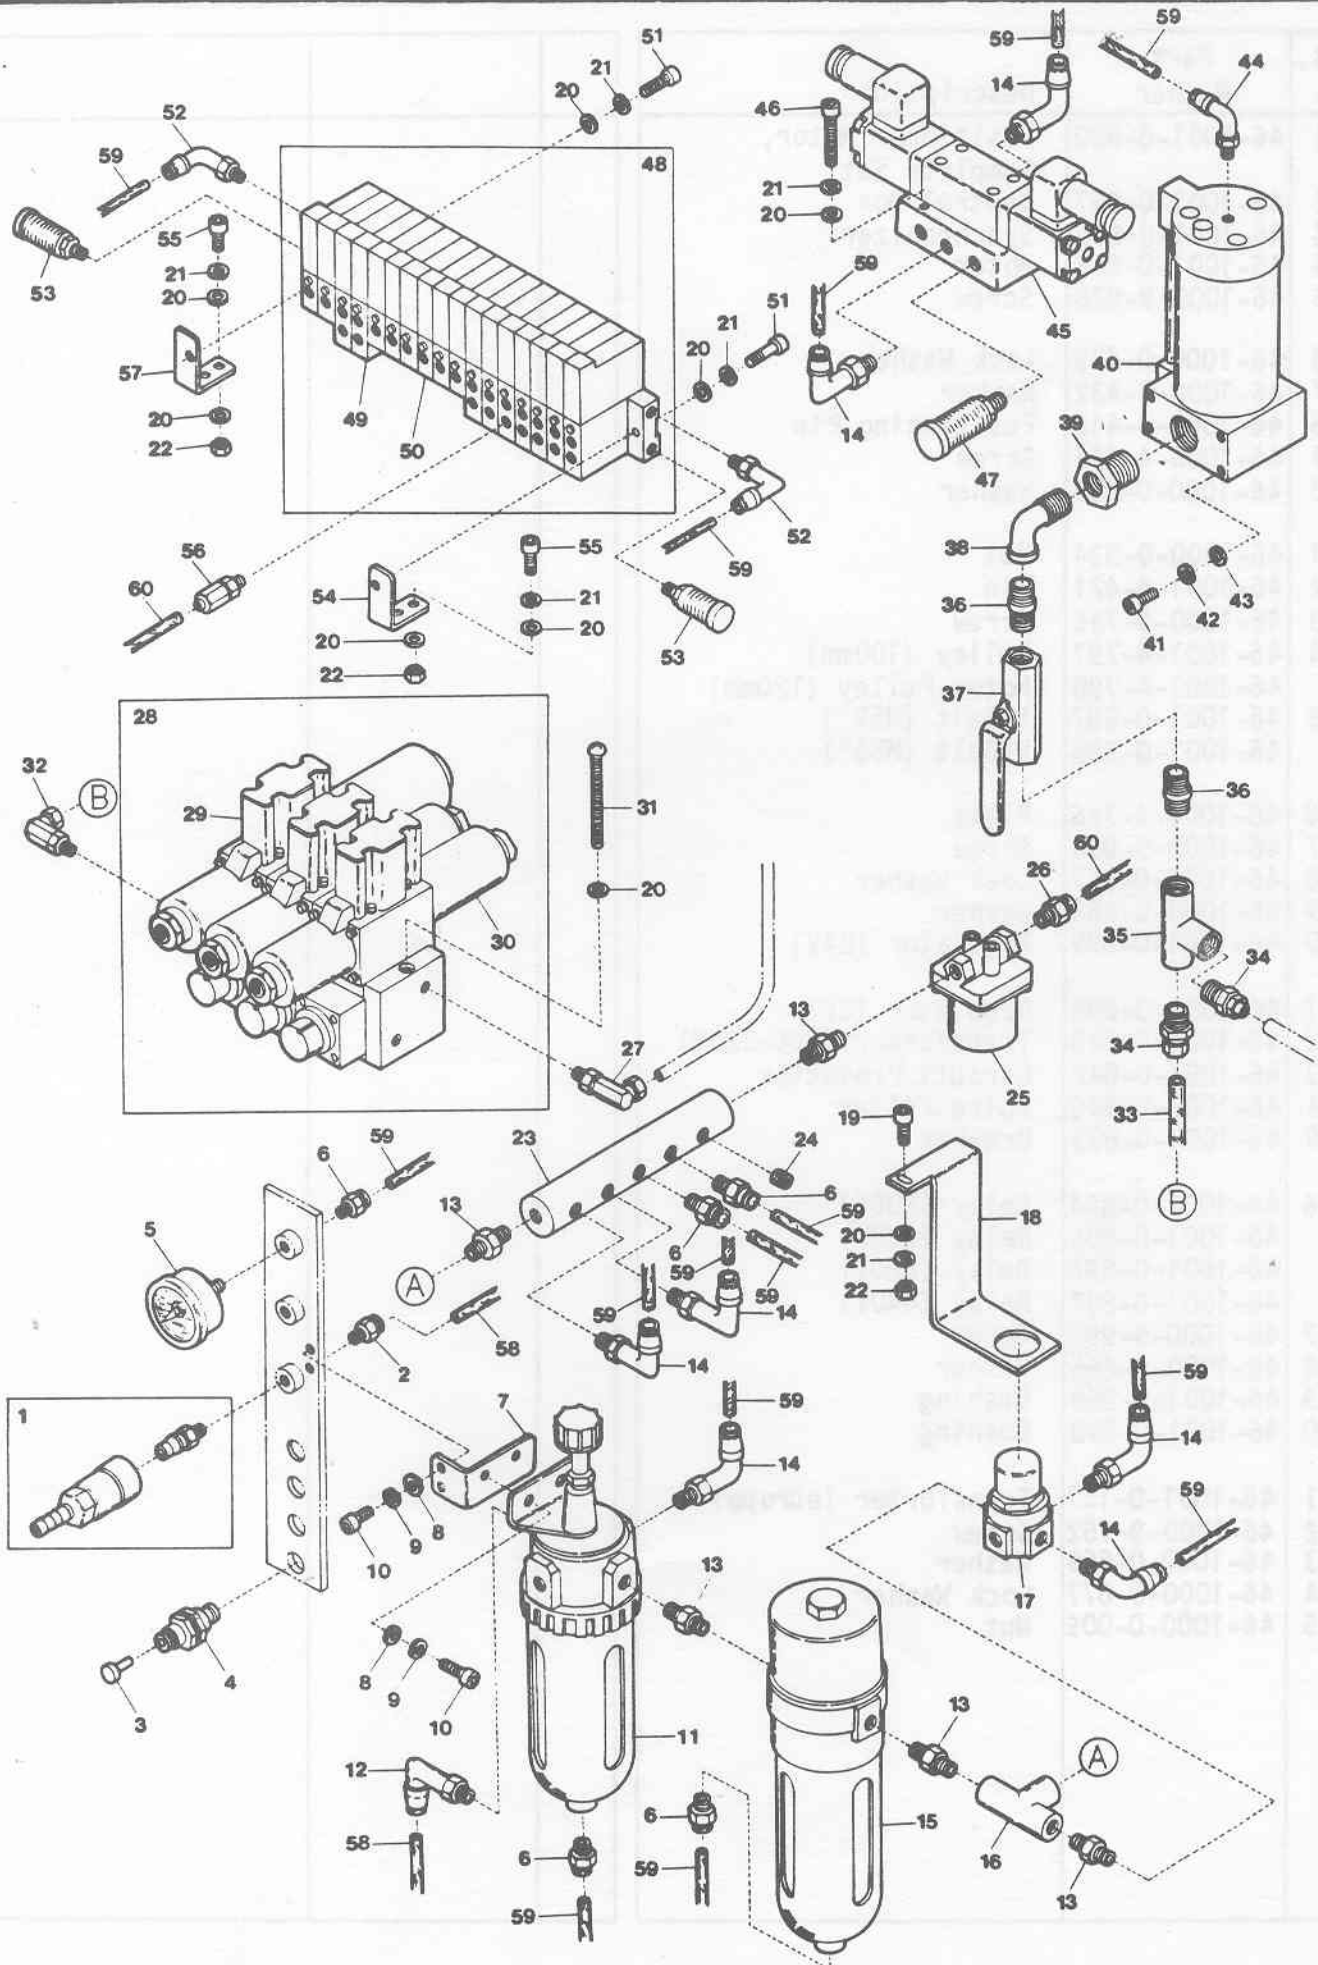 




Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-0-227	Coupler	36	46-1001-0-213	Close Nipple (1/2")
2	46-1001-0-265	Connector	37	46-1001-0-212	Shut Off
3	46-1001-0-278	Plug	38	46-1001-0-220	Elbow Connector
4	46-1001-0-270	Connector	39	46-1001-0-221	Reducer
5	46-1001-0-188	Pressure Gauge	40	46-1001-0-181	Reserver
6	46-1001-0-264	Connector	41	46-1000-9-752	Screw
7	46-1001-4-745	Support	42	46-1000-0-677	Lock Washer
8	46-1000-0-663	Lock Washer	43	46-1000-0-669	Washer
9	46-1000-0-667	Washer	44	46-1001-0-268	Elbow
10	46-1000-9-976	Screw	45	46-1001-0-238	Valve (5 Port-3 Post)
11	46-1001-0-184	Regulator	46	46-1000-6-216	Screw
12	46-1001-0-269	Elbow Connector	47	46-1001-0-257	Silencer
13	46-1001-0-023	Nipple (1/4)			
14	46-1001-0-267	Elbow Joint	48	46-1001-0-273	Manifold, Comp. Asm.
15	46-1001-0-239	Oil Mist Separator	49	46-1001-0-235	Manifold, Comp. Asm.
16	46-1001-0-021	Connector	50	46-1001-0-234	Manifold, Comp. Asm.
17	46-1001-0-185	Regulator	51	46-1000-9-750	Screw
18	46-1001-4-913	Support	52	46-1001-0-266	Elbow
19	46-1000-9-749	Screw	53	46-1001-0-143	Silencer
20	46-1000-0-665	Washer	54	46-1001-4-741	Support (R.H.)
21	46-1000-0-644	Lock Washer	55	46-1000-9-747	Screw
22	46-1000-0-015	Nut	56	46-1001-0-258	Connector
23	46-1001-4-744	Air Distributor	57	46-1001-4-742	Support (L.H.)
24	46-1001-0-118	Plug	58	46-1001-0-262	Vinyl Tube, spec.length
25	46-1001-0-125	Valve	59	46-1001-0-261	Vinyl Tube, spec.length
26	46-1001-0-078	Connector	60	46-1001-0-260	Vinyl Tube, spec.length
27	46-1001-0-205	Elbow			
28	46-1001-0-275	Hydraulic Valve, Complete Assembly			
29	46-1001-0-172	Valve			
30	46-1001-0-173	Valve			
31	46-1000-9-783	Screw			
32	46-1001-0-207	Elbow Joint			
33	46-1001-0-282	Hydraulic Tube			
34	46-1001-0-204	Union			
35	46-1001-0-216	"T" Connector (1/2")			

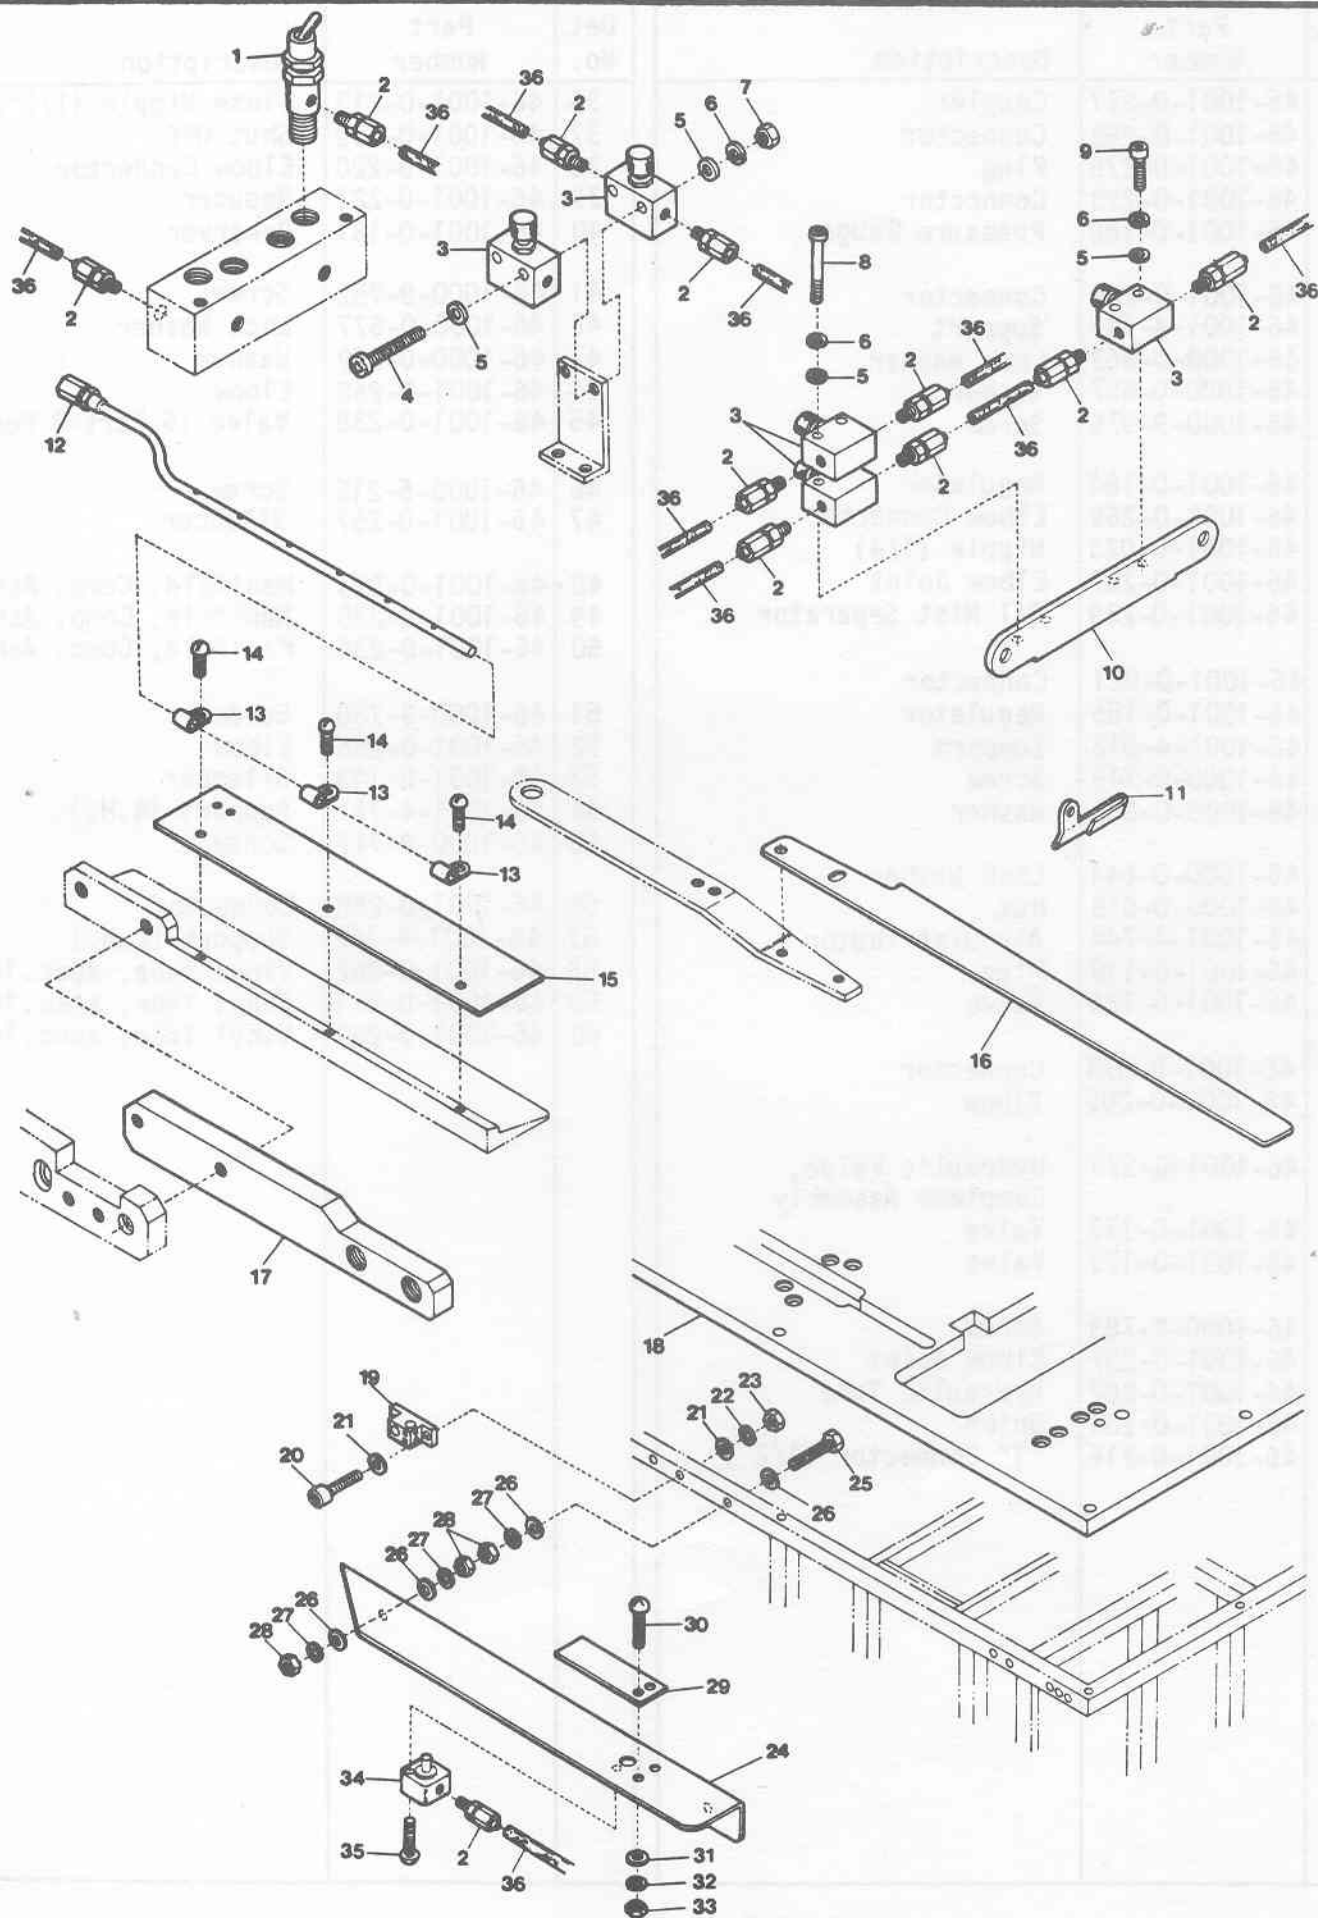 


PARTS SPECIAL TO SERIES 46 MODELS

2/47

Det. No.	Part Number	Description			
1	46-1001-0-182	TAC Valve			
2	46-1001-0-258	Connector			
3	46-1001-0-054	Controller			
4	46-1000-9-793	Screw			
5	46-1000-0-014	Washer			
6	46-1000-0-002	Washer			
7	46-1000-0-012	Nut			
8	46-1000-9-768	Screw			
9	46-1000-9-745	Screw			
10	46-1001-4-430	Support			
11	46-1001-4-260	Needle Thread Eyelet			
12	46-1001-4-601	Air Nozzle			
13	46-1001-4-647	Clamp			
14	46-1000-6-159	Screw			
15	46-1001-4-612	Plate			
16	46-1001-4-023	Brush Blade			
17	46-1001-4-618	Connecting Arm			
18	46-1001-4-674	Table			
19	46-1001-4-792	Support			
20	46-1000-6-225	Screw			
21	46-1000-0-663	Washer			
22	46-1000-0-667	Lock Washer			
23	46-1000-0-011	Nut			
24	46-1001-4-670	Extension Plate			
25	46-1000-6-232	Screw			
26	46-1000-0-666	Washer			
27	46-1000-0-676	Lock Washer			
28	46-1000-0-016	Nut			
29	46-1001-4-66-	Bag Hold Down (L.H.)			
30	46-1000-9-770	Screw			
31	46-1000-0-665	Washer			
32	46-1000-0-644	Lock Washer			
33	46-1000-0-015	Nut			
34	46-1001-0-248	Cylinder			
35	46-1000-9-979	Screw			
36	46-1001-0-260	Vinyl Tube, spec. length			

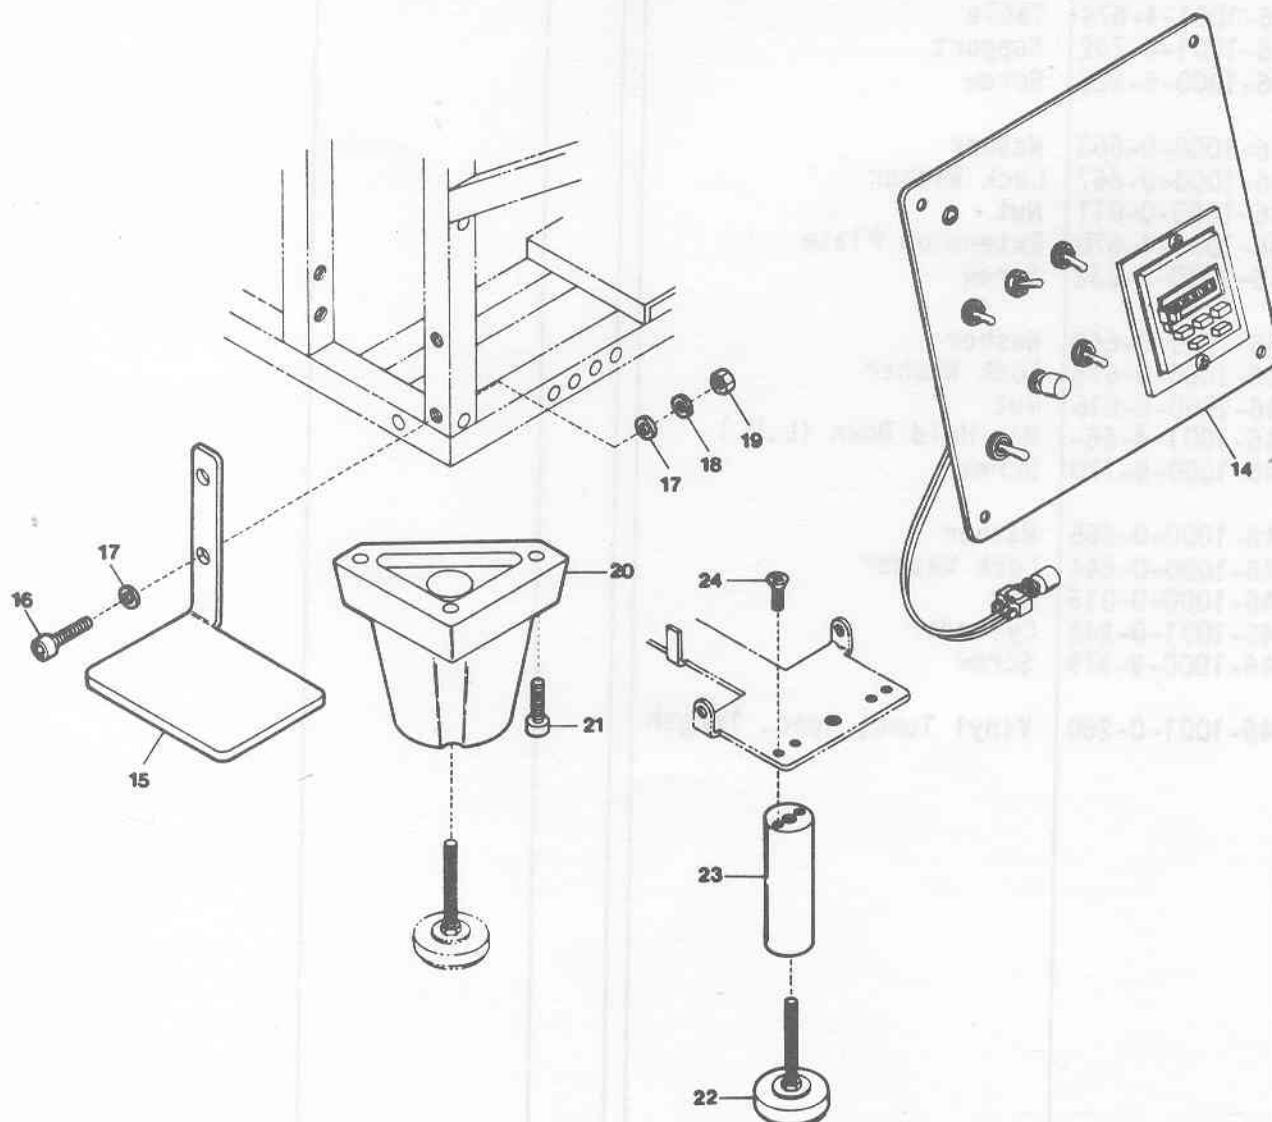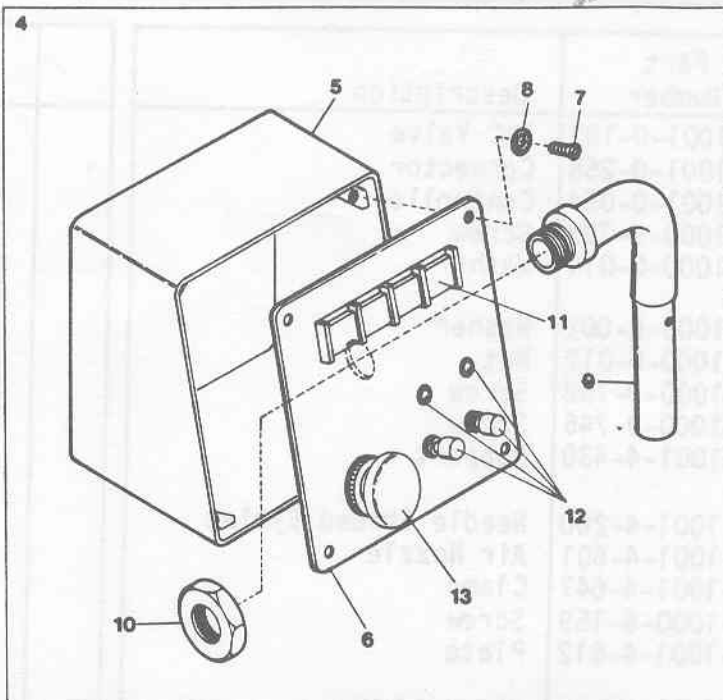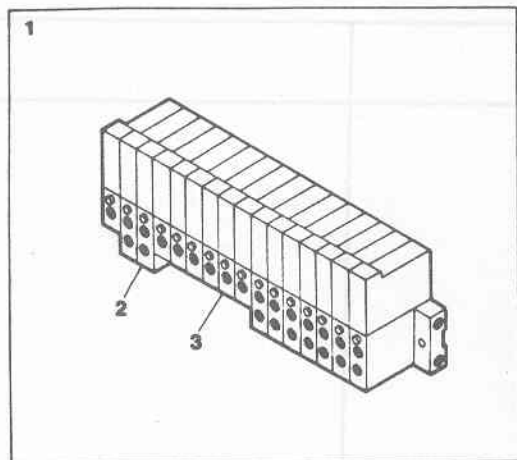   

Det. No.	Part Number	Description			
1	46-1001-0-237	Solenoid Valve, Complete Assembly			
2	46-1001-0-235	Valve (4 Way)			
3	46-1001-0-234	Valve (3 Way)			
4	46-1001-4-910	Upper Control Box, Complete Assembly			
5	46-1001-4-839	Box			
6	46-1001-4-825	Panel			
7	46-1000-9-774	Screw			
8	46-1000-0-670	Washer			
9	46-1001-4-673	Support			
10	46-1000-0-013	Nut			
11	46-1001-0-904	Length Switch			
12	46-1001-0-925	Push Buttons			
13	46-1001-0-512	Stop Switch			
14	46-1001-4-826	Control Panel			
15	46-1001-4-735	Foot Rest			
16	46-1000-9-970	Screw			
17	46-1000-0-663	Washer			
18	46-1000-0-667	Lock Washer			
19	46-1000-0-011	Nut			
20	46-1001-4-736	Extension Legs			
21	46-1000-9-761	Screw			
22	46-1001-4-724	Foot			
23	46-1001-4-734	Adjustable Foot			
24	46-1000-9-895	Screw			

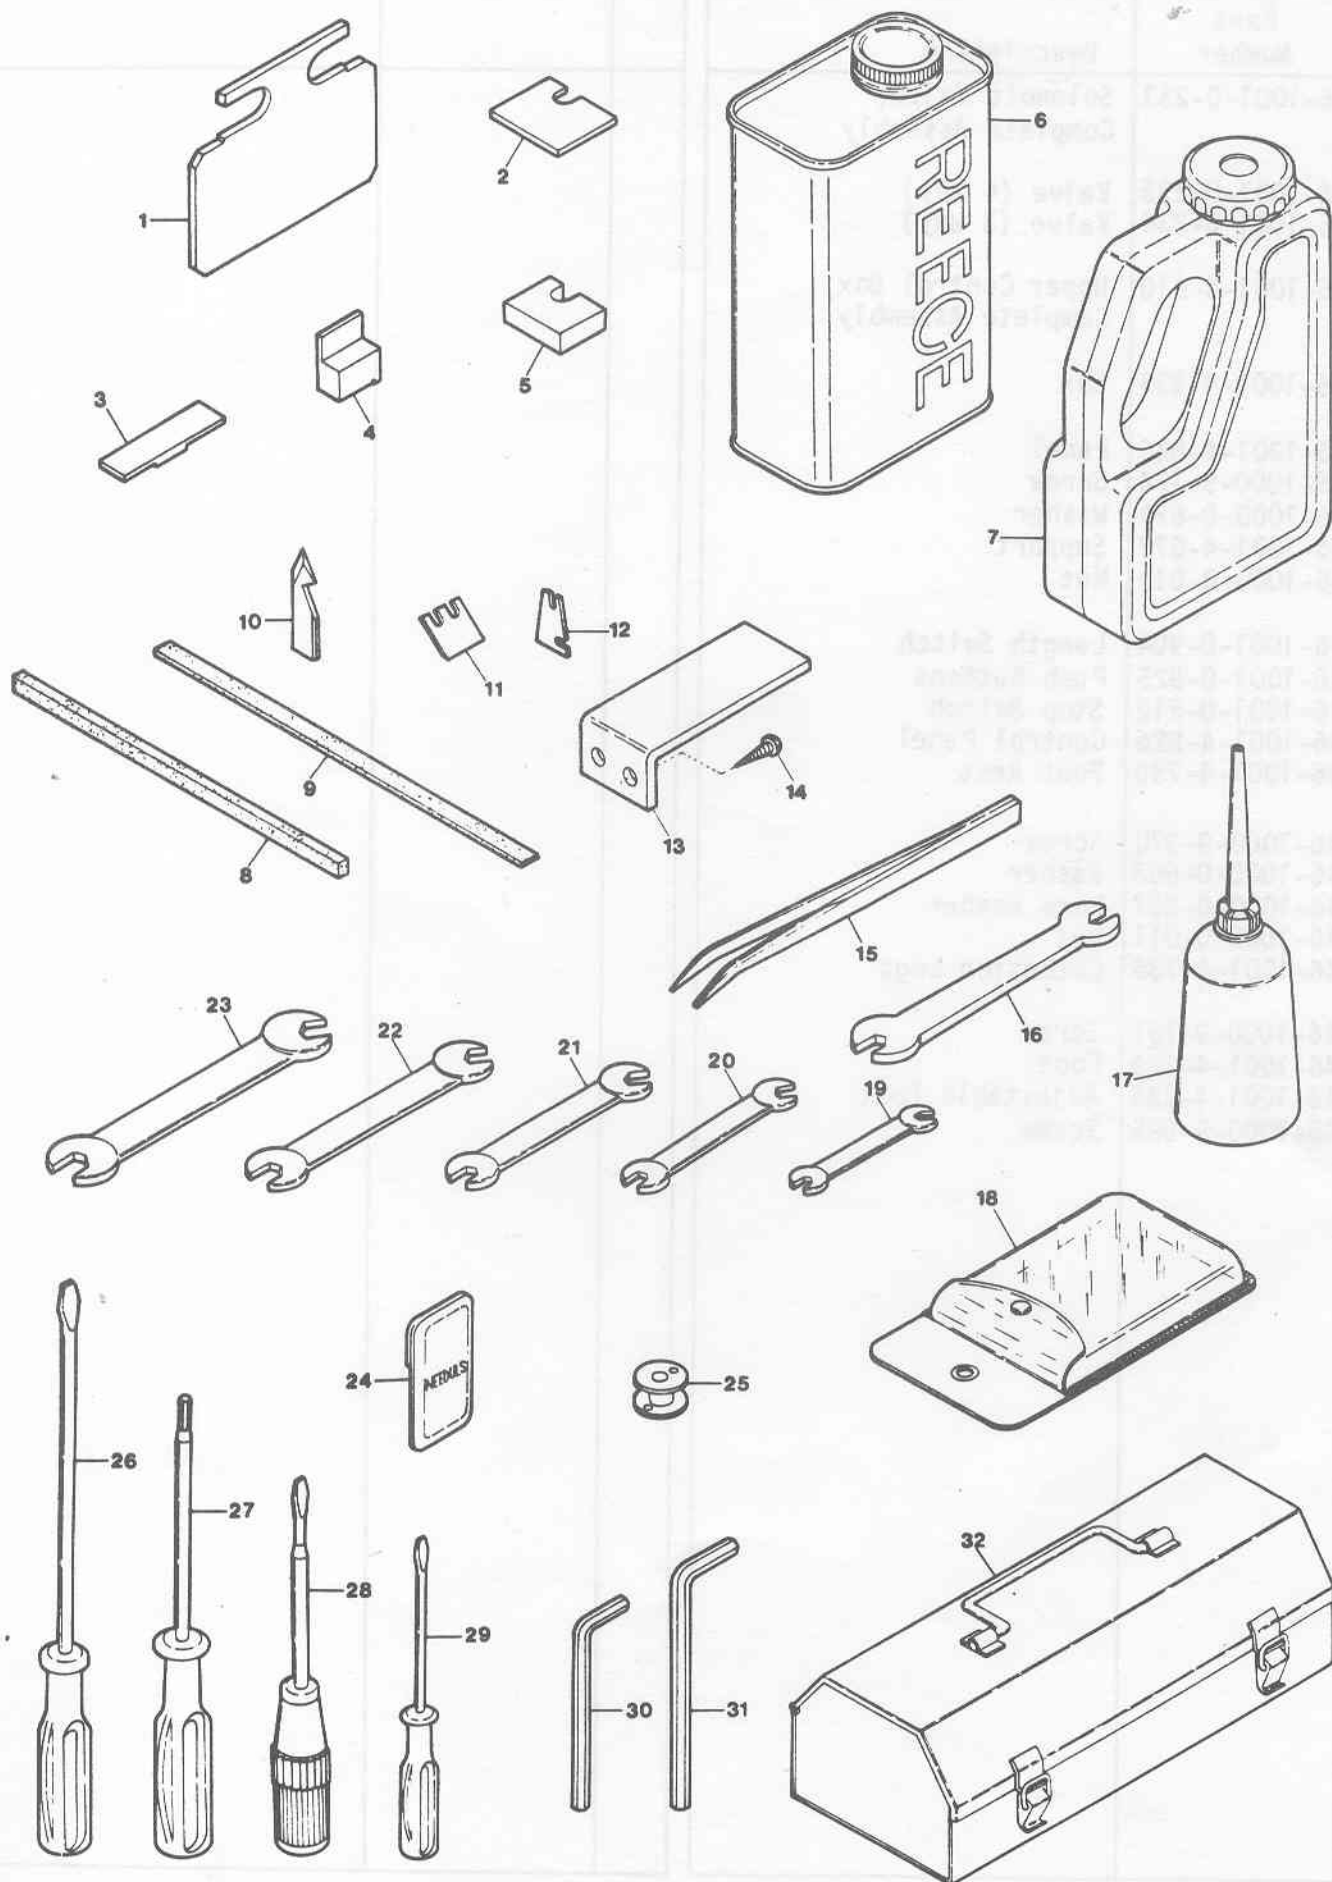 

Det. No.	Part Number	Description	Det. No.	Part Number	Description
1	46-1001-4-801	Clamp Foot Asm. Gauge 2.75mm	26	46-1001-5-151	Screw Driver (5.5x190mm)
	46-1001-4-802	Clamp Foot Asm. Gauge 4.5 5mm	27	46-1003-7-919	Hex Screw Driver (1.58mm.1/16")
2	46-1001-4-806	Needle/Hook Timing Gauge	28	46-1001-5-152	Screw Driver (3.4x70mm)
3	46-1001-4-803	Hook Height Gauge (0.75mm)	29	46-1001-5-153	Screw Driver (1.9x52mm)
	46-1001-4-804	Hook Height Gauge (0.9mm)	30	46-1001-5-180	Hex Wrench (2mm)
4	46-1001-4-800	Needle Height Gauge	31	46-1001-5-179	Hex Wrench (3mm)
5	46-1001-4-805	Needle/Hook Timing Gauge	32	46-1004-9-084	Accessories Box
6	46-1004-9-082	Hydraulic Press Oil, (1 liter)			
7	46-1001-5-177	Oil Tank			
8	46-1001-4-590	Flap Foot Rubber			
9	46-1001-4-589	Clamp Foot Rubber			
10	46-1001-4-478	Center Knife			
11	46-1001-4-244	Trimming Blade			
12	46-1001-4-136	Tab Knife			
13	46-1001-4-689	Lamp Holder			
14	46-1000-6-209	Wood Screw			
15	46-1003-7-909	Thread Tweezers			
16	46-1001-5-154	Spanner (8x9mm)			
17	46-1001-5-176	Oiler			
18	46-1004-9-083	Hexagon Wrench Set (8 Wrenches)			
19	46-1004-9-085	Spanner (7x5.5mm)			
20	46-1004-9-086	Spanner (8x7mm)			
21	46-1004-9-087	Spanner (12x10mm)			
22	46-1004-9-088	Spanner (13x11mm)			
23	46-1004-9-089	Spanner (17x14mm)			
24	02-0150-0-110	Needle, rd. pt., fine (0)			
	02-0150-0-111	Needle, rd. pt., medium (1)			
	02-0150-0-112	Needle, rd. pt., heavy (2)			
	02-0150-0-113	Needle, rd. pt., very heavy (3)			
	02-0150-0-114	Needle, rd. pt., extra heavy (4)			
25	46-1001-5-081	Bobbin			

PARTS INDEX

PARTS INDEX

Part Number	Page	Part Number	Page	Part Number	Page
45-1000-0-015	43	45-1000-0-015	30	45-1000-0-015	43
45-1000-0-015	42	45-1000-0-015	29	45-1000-0-015	42
45-1000-0-015	41	45-1000-0-015	28	45-1000-0-015	41
45-1000-0-015	40	45-1000-0-015	27	45-1000-0-015	40
45-1000-0-015	39	45-1000-0-015	26	45-1000-0-015	39
45-1000-0-015	38	45-1000-0-015	25	45-1000-0-015	38
45-1000-0-015	37	45-1000-0-015	24	45-1000-0-015	37
45-1000-0-015	36	45-1000-0-015	23	45-1000-0-015	36
45-1000-0-015	35	45-1000-0-015	22	45-1000-0-015	35
45-1000-0-015	34	45-1000-0-015	21	45-1000-0-015	34
45-1000-0-015	33	45-1000-0-015	20	45-1000-0-015	33
45-1000-0-015	32	45-1000-0-015	19	45-1000-0-015	32
45-1000-0-015	31	45-1000-0-015	18	45-1000-0-015	31
45-1000-0-015	30	45-1000-0-015	17	45-1000-0-015	30
45-1000-0-015	29	45-1000-0-015	16	45-1000-0-015	29
45-1000-0-015	28	45-1000-0-015	15	45-1000-0-015	28
45-1000-0-015	27	45-1000-0-015	14	45-1000-0-015	27
45-1000-0-015	26	45-1000-0-015	13	45-1000-0-015	26
45-1000-0-015	25	45-1000-0-015	12	45-1000-0-015	25
45-1000-0-015	24	45-1000-0-015	11	45-1000-0-015	24
45-1000-0-015	23	45-1000-0-015	10	45-1000-0-015	23
45-1000-0-015	22	45-1000-0-015	9	45-1000-0-015	22
45-1000-0-015	21	45-1000-0-015	8	45-1000-0-015	21
45-1000-0-015	20	45-1000-0-015	7	45-1000-0-015	20
45-1000-0-015	19	45-1000-0-015	6	45-1000-0-015	19
45-1000-0-015	18	45-1000-0-015	5	45-1000-0-015	18
45-1000-0-015	17	45-1000-0-015	4	45-1000-0-015	17
45-1000-0-015	16	45-1000-0-015	3	45-1000-0-015	16
45-1000-0-015	15	45-1000-0-015	2	45-1000-0-015	15
45-1000-0-015	14	45-1000-0-015	1	45-1000-0-015	14
45-1000-0-015	13	45-1000-0-015	0	45-1000-0-015	13
45-1000-0-015	12	45-1000-0-015	0	45-1000-0-015	12
45-1000-0-015	11	45-1000-0-015	0	45-1000-0-015	11
45-1000-0-015	10	45-1000-0-015	0	45-1000-0-015	10
45-1000-0-015	9	45-1000-0-015	0	45-1000-0-015	9
45-1000-0-015	8	45-1000-0-015	0	45-1000-0-015	8
45-1000-0-015	7	45-1000-0-015	0	45-1000-0-015	7
45-1000-0-015	6	45-1000-0-015	0	45-1000-0-015	6
45-1000-0-015	5	45-1000-0-015	0	45-1000-0-015	5
45-1000-0-015	4	45-1000-0-015	0	45-1000-0-015	4
45-1000-0-015	3	45-1000-0-015	0	45-1000-0-015	3
45-1000-0-015	2	45-1000-0-015	0	45-1000-0-015	2
45-1000-0-015	1	45-1000-0-015	0	45-1000-0-015	1
45-1000-0-015	0	45-1000-0-015	0	45-1000-0-015	0

PARTS INDEX

Part Number	Page	Det. No.
02-0150-0-110	51	24
02-0150-0-111	51	24
02-0150-0-112	51	24
02-0150-0-113	51	24
02-0150-0-114	51	24
46-1000-0-002	17	19
46-1000-0-002	19	11
46-1000-0-002	21	6
46-1000-0-002	27	8
46-1000-0-002	31	3
46-1000-0-002	41	18
46-1000-0-002	47	6
46-1000-0-009	15	17
46-1000-0-009	25	71
46-1000-0-009	31	54
46-1000-0-009	35	6
46-1000-0-009	43	35
46-1000-0-011	19	54
46-1000-0-011	31	49
46-1000-0-011	37	20
46-1000-0-011	47	23
46-1000-0-011	49	19
46-1000-0-012	15	74
46-1000-0-012	19	12
46-1000-0-012	21	7
46-1000-0-012	27	9
46-1000-0-012	31	20
46-1000-0-012	41	19
46-1000-0-012	47	7
46-1000-0-013	39	7
46-1000-0-013	49	10
46-1000-0-014	17	20
46-1000-0-014	19	9
46-1000-0-014	21	5
46-1000-0-014	27	7
46-1000-0-014	31	4
46-1000-0-014	33	45
46-1000-0-014	37	24
46-1000-0-014	41	17
46-1000-0-014	47	5
46-1000-0-015	15	27
46-1000-0-015	27	40
46-1000-0-015	29	47
46-1000-0-015	31	25
46-1000-0-015	45	22
46-1000-0-015	47	33

Part Number	Page	Det. No.
46-1000-0-016	17	39
46-1000-0-016	19	23
46-1000-0-016	21	18
46-1000-0-016	29	22
46-1000-0-016	37	30
46-1000-0-016	47	28
46-1000-0-035	27	45
46-1000-0-035	29	52
46-1000-0-054	25	14
46-1000-0-054	37	5
46-1000-0-063	15	58
46-1000-0-145	33	23
46-1000-0-160	21	31
46-1000-0-161	21	34
46-1000-0-162	21	33
46-1000-0-164	21	32
46-1000-0-206	15	72
46-1000-0-260	15	28
46-1000-0-260	27	15
46-1000-0-332	21	47
46-1000-0-334	43	11
46-1000-0-335	19	16
46-1000-0-339	33	9
46-1000-0-419	23	34
46-1000-0-421	21	27
46-1000-0-428	21	51
46-1000-0-429	21	17
46-1000-0-432	25	15
46-1000-0-432	43	7
46-1000-0-433	21	26
46-1000-0-439	15	29
46-1000-0-439	27	16
46-1000-0-439	31	10
46-1000-0-439	35	27
46-1000-0-439	43	6
46-1000-0-530	43	10
46-1000-0-532	17	4
46-1000-0-532	19	15
46-1000-0-533	17	15
46-1000-0-538	25	66
46-1000-0-600	25	65
46-1000-0-612	15	30
46-1000-0-612	27	17
46-1000-0-612	31	11
46-1000-0-612	35	28

Part Number	Page	Det. No.
46-1000-0-644	15	3
46-1000-0-644	17	3
46-1000-0-644	19	30
46-1000-0-644	23	43
46-1000-0-644	27	3
46-1000-0-644	29	10
46-1000-0-644	31	14
46-1000-0-644	33	5
46-1000-0-644	41	4
46-1000-0-644	45	21
46-1000-0-644	47	32
46-1000-0-655	15	4
46-1000-0-663	15	13
46-1000-0-663	17	28
46-1000-0-663	19	34
46-1000-0-663	25	62
46-1000-0-663	27	12
46-1000-0-663	29	4
46-1000-0-663	31	47
46-1000-0-663	33	34
46-1000-0-663	37	18
46-1000-0-663	41	26
46-1000-0-663	43	19
46-1000-0-663	45	8
46-1000-0-663	47	21
46-1000-0-663	49	17
46-1000-0-665	17	11
46-1000-0-665	19	31
46-1000-0-665	23	44
46-1000-0-665	27	4
46-1000-0-665	29	9
46-1000-0-665	31	15
46-1000-0-665	33	6
46-1000-0-665	41	5
46-1000-0-665	43	28
46-1000-0-665	45	20
46-1000-0-665	47	31
46-1000-0-666	15	42
46-1000-0-666	17	37
46-1000-0-666	19	25
46-1000-0-666	27	29
46-1000-0-666	29	20
46-1000-0-666	35	11
46-1000-0-666	37	13
46-1000-0-666	47	26
46-1000-0-667	15	12

PARTS INDEX

3/3

Part Number	Page	Det. No.
46-1000-0-667	17	27
46-1000-0-667	19	33
46-1000-0-667	21	52
46-1000-0-667	25	61
46-1000-0-667	27	11
46-1000-0-667	29	3
46-1000-0-667	31	48
46-1000-0-667	37	19
46-1000-0-667	41	25
46-1000-0-667	43	18
46-1000-0-667	45	9
46-1000-0-667	47	22
46-1000-0-667	49	18
46-1000-0-669	15	15
46-1000-0-669	23	7
46-1000-0-669	25	58
46-1000-0-669	29	17
46-1000-0-669	35	4
46-1000-0-669	41	9
46-1000-0-669	43	33
46-1000-0-669	45	43
46-1000-0-670	19	7
46-1000-0-670	39	5
46-1000-0-670	49	8
46-1000-0-676	15	41
46-1000-0-676	17	38
46-1000-0-676	19	24
46-1000-0-676	27	28
46-1000-0-676	29	21
46-1000-0-676	35	10
46-1000-0-676	37	12
46-1000-0-676	47	27
46-1000-0-677	15	16
46-1000-0-677	23	6
46-1000-0-677	25	57
46-1000-0-677	29	16
46-1000-0-677	35	5
46-1000-0-677	41	8
46-1000-0-677	43	34
46-1000-0-677	45	42
46-1000-0-755	25	34
46-1000-1-117	25	25
46-1000-1-117	25	25
46-1000-1-170	25	36
46-1000-1-175	17	16

Part Number	Page	Det. No.
46-1000-1-222	23	20
46-1000-1-613	23	26
46-1000-2-484	19	17
46-1000-3-312	15	20
46-1000-3-433	15	33
46-1000-3-635	15	47
46-1000-3-637	17	60
46-1000-3-656	17	50
46-1000-3-656	23	16
46-1000-3-656	25	13
46-1000-3-656	33	19
46-1000-3-659	15	39
46-1000-3-662	25	5
46-1000-3-662	29	34
46-1000-3-662	35	23
46-1000-3-662	39	16
46-1000-3-662	41	11
46-1000-3-665	31	39
46-1000-4-104	17	2
46-1000-4-258	25	50
46-1000-4-351	37	39
46-1000-4-352	25	38
46-1000-4-358	23	36
46-1000-4-404	23	29
46-1000-4-440	25	40
46-1000-4-445	43	9
46-1000-4-642	17	22
46-1000-5-000	17	46
46-1000-5-044	33	43
46-1000-5-061	17	67
46-1000-5-121	25	75
46-1000-6-159	47	14
46-1000-6-176	27	22
46-1000-6-176	29	7
46-1000-6-178	23	10
46-1000-6-183	31	31
46-1000-6-184	33	35
46-1000-6-185	33	36
46-1000-6-186	15	57
46-1000-6-187	17	36
46-1000-6-188	33	2
46-1000-6-190	27	14
46-1000-6-191	15	61
46-1000-6-192	15	24

Part Number	Page	Det. No.
46-1000-6-193	33	22
46-1000-6-196	21	35
46-1000-6-198	23	33
46-1000-6-201	37	42
46-1000-6-202	33	4
46-1000-6-203	21	11
46-1000-6-205	39	14
46-1000-6-206	37	6
46-1000-6-209	21	37
46-1000-6-209	51	14
46-1000-6-210	15	62
46-1000-6-212	27	19
46-1000-6-212	35	12
46-1000-6-212	37	7
46-1000-6-213	27	41
46-1000-6-213	29	48
46-1000-6-213	31	24
46-1000-6-214	31	2
46-1000-6-215	31	41
46-1000-6-216	31	46
46-1000-6-216	45	46
46-1000-6-217	33	41
46-1000-6-218	21	16
46-1000-6-220	29	19
46-1000-6-223	31	19
46-1000-6-225	29	2
46-1000-6-225	47	20
46-1000-6-226	19	53
46-1000-6-226	27	10
46-1000-6-227	33	11
46-1000-6-228	33	33
46-1000-6-229	25	70
46-1000-6-232	19	22
46-1000-6-232	47	25
46-1000-6-235	33	21
46-1000-6-434	19	14
46-1000-6-435	17	32
46-1000-6-444	21	46
46-1000-6-638	33	8
46-1000-6-764	27	6
46-1000-6-905	21	39
46-1000-7-650	25	7
46-1000-7-678	23	31
46-1000-8-200	3	2
46-1000-8-201	3	3

PARTS INDEX

Part Number	Page	Det. No.
46-1000-8-202	3	7
46-1000-8-202	11	42
46-1000-8-203	3	14
46-1000-8-204	3	22
46-1000-8-205	5	5
46-1000-8-206	5	6
46-1000-8-207	5	35
46-1000-8-207	7	14
46-1000-8-208	7	8
46-1000-8-209	7	31
46-1000-8-210	7	32
46-1000-8-211	11	3
46-1000-8-212	11	8
46-1000-8-213	11	14
46-1000-8-214	11	16
46-1000-8-215	11	5
46-1000-8-216	11	46
46-1000-8-217	13	7
46-1000-8-218	13	8
46-1000-8-219	13	11
46-1000-8-220	13	19
46-1000-8-221	13	22
46-1000-8-222	13	31
46-1000-8-223	13	41
46-1000-8-224	3	29
46-1000-8-225	3	37
46-1000-8-226	11	37
46-1000-8-227	13	9
46-1000-8-228	3	5
46-1000-8-229	3	13
46-1000-8-230	5	32
46-1000-8-231	9	9
46-1000-8-232	7	28
46-1000-8-233	5	3
46-1000-8-233	5	13
46-1000-8-233	5	17
46-1000-8-233	5	25
46-1000-8-233	25	3
46-1000-8-234	5	9
46-1000-8-234	9	17
46-1000-8-235	5	10
46-1000-8-235	5	16
46-1000-8-236	5	21
46-1000-8-236	9	13
46-1000-8-237	5	22

Part Number	Page	Det. No.
46-1000-8-237	9	12
46-1000-8-238	5	41
46-1000-8-239	7	6
46-1000-8-239	9	4
46-1000-8-240	7	23
46-1000-8-241	7	21
46-1000-8-242	9	6
46-1000-8-243	9	15
46-1000-8-244	13	15
46-1000-8-245	3	8
46-1000-8-246	13	12
46-1000-8-247	13	16
46-1000-8-247	13	33
46-1000-8-248	11	6
46-1000-8-249	13	39
46-1000-8-250	13	40
46-1000-8-251	13	20
46-1000-8-251	13	26
46-1000-8-251	13	32
46-1000-8-252	3	10
46-1000-8-253	3	38
46-1000-8-254	7	18
46-1000-8-255	11	40
46-1000-8-256	3	27
46-1000-8-257	7	17
46-1000-8-258	7	10
46-1000-8-259	7	13
46-1000-8-260	11	38
46-1000-8-261	11	47
46-1000-8-262	13	23
46-1000-8-263	13	44
46-1000-8-264	11	39
46-1000-8-264	13	42
46-1000-8-265	13	25
46-1000-8-266	15	25
46-1000-8-267	11	9
46-1000-8-268	11	22
46-1000-8-269	11	21
46-1000-8-270	11	28
46-1000-8-271	11	27
46-1000-8-272	11	20
46-1000-8-273	11	10
46-1000-8-274	11	19
46-1000-8-275	11	31
46-1000-8-276	11	32

Part Number	Page	Det. No.
46-1000-8-277	11	4
46-1000-8-278	11	33
46-1000-8-279	11	18
46-1000-8-280	11	34
46-1000-8-281	11	35
46-1000-8-282	11	48
46-1000-8-283	11	50
46-1000-8-284	11	52
46-1000-8-285	11	54
46-1000-8-286	11	56
46-1000-8-287	11	61
46-1000-8-289	7	2
46-1000-9-127	17	56
46-1000-9-127	23	23
46-1000-9-142	23	24
46-1000-9-150	23	29
46-1000-9-604	17	55
46-1000-9-730	25	49
46-1000-9-735	23	39
46-1000-9-735	25	17
46-1000-9-736	17	65
46-1000-9-736	25	60
46-1000-9-736	29	31
46-1000-9-736	33	25
46-1000-9-736	43	13
46-1000-9-738	31	34
46-1000-9-738	35	3
46-1000-9-740	21	54
46-1000-9-740	29	28
46-1000-9-740	31	36
46-1000-9-744	15	73
46-1000-9-744	31	17
46-1000-9-745	15	68
46-1000-9-745	17	18
46-1000-9-745	47	9
46-1000-9-746	17	53
46-1000-9-746	19	41
46-1000-9-746	25	44
46-1000-9-746	27	2
46-1000-9-746	33	29
46-1000-9-747	17	35
46-1000-9-747	19	36
46-1000-9-747	21	56
46-1000-9-747	23	42

PARTS INDEX

3/5

Part Number	Page	Det. No.
46-1000-9-747	27	24
46-1000-9-747	29	11
46-1000-9-747	31	22
46-1000-9-747	41	3
46-1000-9-747	45	55
46-1000-9-748	15	60
46-1000-9-748	19	20
46-1000-9-749	15	2
46-1000-9-749	17	48
46-1000-9-749	45	19
46-1000-9-750	31	23
46-1000-9-750	45	51
46-1000-9-751	15	65
46-1000-9-751	29	15
46-1000-9-752	17	30
46-1000-9-752	23	5
46-1000-9-752	25	56
46-1000-9-752	27	47
46-1000-9-752	29	54
46-1000-9-752	41	7
46-1000-9-752	43	32
46-1000-9-752	45	41
46-1000-9-753	5	44
46-1000-9-753	35	41
46-1000-9-754	17	26
46-1000-9-754	27	25
46-1000-9-754	29	12
46-1000-9-755	21	53
46-1000-9-755	31	28
46-1000-9-758	17	42
46-1000-9-758	35	2
46-1000-9-759	35	9
46-1000-9-760	35	26
46-1000-9-761	31	9
46-1000-9-761	49	21
46-1000-9-764	19	18
46-1000-9-768	37	7
46-1000-9-768	47	8
46-1000-9-769	21	13
46-1000-9-770	21	23
46-1000-9-770	47	30
46-1000-9-774	19	6
46-1000-9-774	39	4
46-1000-9-774	49	7
46-1000-9-776	31	45

Part Number	Page	Det. No.
46-1000-9-777	15	48
46-1000-9-783	45	31
46-1000-9-793	21	42
46-1000-9-793	47	4
46-1000-9-798	27	37
46-1000-9-798	29	44
46-1000-9-799	41	15
46-1000-9-895	49	24
46-1000-9-916	35	24
46-1000-9-928	43	5
46-1000-9-929	21	8
46-1000-9-935	15	54
46-1000-9-935	25	23
46-1000-9-935	31	52
46-1000-9-935	35	16
46-1000-9-936	15	40
46-1000-9-936	27	21
46-1000-9-936	37	11
46-1000-9-940	27	27
46-1000-9-953	43	17
46-1000-9-956	37	2
46-1000-9-957	37	25
46-1000-9-963	17	10
46-1000-9-964	27	52
46-1000-9-970	15	11
46-1000-9-970	29	6
46-1000-9-970	31	30
46-1000-9-970	37	9
46-1000-9-970	49	16
46-1000-9-974	19	29
46-1000-9-975	39	26
46-1000-9-976	19	32
46-1000-9-976	21	58
46-1000-9-976	25	10
46-1000-9-976	31	42
46-1000-9-976	33	32
46-1000-9-976	37	28
46-1000-9-976	41	24
46-1000-9-976	45	10
46-1000-9-977	17	62
46-1000-9-977	29	39
46-1000-9-978	37	29
46-1000-9-979	21	41
46-1000-9-979	47	35
46-1000-9-980	15	9

Part Number	Page	Det. No.
46-1000-9-980	19	56
46-1000-9-980	29	36
46-1000-9-992	31	13
46-1000-9-992	43	27
46-1000-9-994	15	7
46-1000-9-994	19	8
46-1000-9-994	21	4
46-1000-9-994	25	68
46-1000-9-994	41	22
46-1000-9-995	33	46
46-1001-0-019	23	2
46-1001-0-019	33	14
46-1001-0-021	45	16
46-1001-0-023	45	13
46-1001-0-032	29	40
46-1001-0-054	17	17
46-1001-0-054	29	41
46-1001-0-054	31	18
46-1001-0-054	47	3
46-1001-0-055	15	36
46-1001-0-078	45	26
46-1001-0-094	19	52
46-1001-0-117	31	5
46-1001-0-118	45	24
46-1001-0-125	45	25
46-1001-0-137	43	31
46-1001-0-143	45	53
46-1001-0-172	45	29
46-1001-0-173	45	30
46-1001-0-176	35	36
46-1001-0-181	45	40
46-1001-0-182	31	6
46-1001-0-182	47	1
46-1001-0-184	45	11
46-1001-0-185	45	17
46-1001-0-188	45	5
46-1001-1-204	45	34
46-1001-0-205	35	38
46-1001-0-205	45	27
46-1001-0-207	35	34
46-1001-0-207	45	32
46-1001-0-208	35	37
46-1001-0-209	35	31
46-1001-0-210	35	32

PARTS INDEX

Part Number	Page	Det. No.
46-1001-0-212	45	37
46-1001-0-213	45	36
46-1001-0-216	45	35
46-1001-0-220	45	38
46-1001-0-221	45	39
46-1001-0-227	45	1
46-1001-0-234	45	50
46-1001-0-234	49	3
46-1001-0-235	45	49
46-1001-0-235	49	2
46-1001-0-238	45	45
46-1001-0-239	45	15
46-1001-0-240	27	32
46-1001-0-241	23	1
46-1001-0-242	23	40
46-1001-0-243	25	69
46-1001-0-244	29	38
46-1001-0-245	29	23
46-1001-0-246	17	6
46-1001-0-247	15	34
46-1001-0-248	21	40
46-1001-0-248	47	34
46-1001-0-249	15	18
46-1001-0-250	31	27
46-1001-0-251	31	51
46-1001-0-252	35	18
46-1001-0-253	23	21
46-1001-0-254	27	35
46-1001-0-254	29	24
46-1001-0-255	35	19
46-1001-0-256	19	50
46-1001-0-257	45	47
46-1001-0-258	15	21
46-1001-0-258	17	8
46-1001-0-258	21	43
46-1001-0-258	23	3
46-1001-0-258	25	74
46-1001-0-258	29	42
46-1001-0-258	31	7
46-1001-0-258	33	15
46-1001-0-258	45	56
46-1001-0-258	47	2
46-1001-0-260	15	75
46-1001-0-260	17	68
46-1001-0-260	21	44

Part Number	Page	Det. No.
46-1001-0-260	23	45
46-1001-0-260	25	77
46-1001-0-260	27	55
46-1001-0-260	29	56
46-1001-0-260	31	55
46-1001-0-260	33	47
46-1001-0-260	45	60
46-1001-0-260	47	36
46-1001-0-261	35	39
46-1001-0-261	45	59
46-1001-0-262	45	5
46-1001-0-264	19	51
46-1001-0-264	35	20
46-1001-0-264	45	6
46-1001-0-265	45	2
46-1001-0-266	45	52
46-1001-0-267	45	14
46-1001-0-268	45	44
46-1001-0-269	45	12
46-1001-0-270	45	4
46-1001-0-271	15	35
46-1001-0-273	45	48
46-1001-0-273	49	1
46-1001-0-275	45	28
46-1001-0-276	35	30
46-1001-0-277	35	33
46-1001-0-278	45	3
46-1001-0-282	35	35
46-1001-0-282	45	33
46-1001-0-283	15	22
46-1001-0-283	23	37
46-1001-0-285	15	37
46-1001-0-288	17	1
46-1001-0-295	35	29
46-1001-0-300	27	34
46-1001-0-512	39	11
46-1001-0-512	49	13
46-1001-0-720	39	24
46-1001-0-721	17	14
46-1001-0-721	39	25
46-1001-0-842	43	23
46-1001-0-845	43	22
46-1001-0-846	43	24
46-1001-0-863	39	31

Part Number	Page	Det. No.
46-1001-0-880	19	27
46-1001-0-893	43	25
46-1001-0-894	43	26
46-1001-0-895	43	26
46-1001-0-896	43	26
46-1001-0-897	43	26
46-1001-0-898	43	21
46-1001-0-899	43	20
46-1001-0-900	43	1
46-1001-0-901	17	43
46-1001-0-902	19	19
46-1001-0-902	27	5
46-1001-0-903	39	30
46-1001-0-904	49	11
46-1001-0-905	39	8
46-1001-0-909	19	28
46-1001-0-914	37	22
46-1001-0-920	17	44
46-1001-0-921	27	33
46-1001-0-923	41	21
46-1001-0-924	41	16
46-1001-0-925	49	12
46-1001-0-928	39	32
46-1001-0-929	39	29
46-1001-0-954	39	23
46-1001-0-955	43	4
46-1001-0-956	43	3
46-1001-0-957	43	2
46-1001-0-958	19	26
46-1001-0-958	43	30
46-1001-0-959	19	59
46-1001-0-959	43	29
46-1001-0-961	39	12
46-1001-0-987	43	15
46-1001-0-988	43	15
46-1001-4-005	31	33
46-1001-4-010	31	44
46-1001-4-011	31	44
46-1001-4-023	47	16
46-1001-4-030	31	32
46-1001-4-032	21	24
46-1001-4-033	21	28
46-1001-4-056	21	29
46-1001-4-072	29	45

PARTS INDEX

3/7

Part Number	Page	Det. No.
46-1001-4-073	29	45
46-1001-4-101	35	1
46-1001-4-106	35	8
46-1001-4-108	29	35
46-1001-4-110	27	18
46-1001-4-112	35	7
46-1001-4-116	29	32
46-1001-4-117	29	30
46-1001-4-118	29	25
46-1001-4-119	29	33
46-1001-4-120	29	26
46-1001-4-129	27	23
46-1001-4-129	29	8
46-1001-4-136	27	36
46-1001-4-136	29	43
46-1001-4-136	51	12
46-1001-4-143	27	13
46-1001-4-144	27	48
46-1001-4-144	29	55
46-1001-4-186	15	56
46-1001-4-215	15	55
46-1001-4-219	15	10
46-1001-4-222	15	59
46-1001-4-223	15	63
46-1001-4-224	17	40
46-1001-4-225	17	41
46-1001-4-244	23	19
46-1001-4-244	51	11
46-1001-4-260	46	11
46-1001-4-267	23	25
46-1001-4-300	21	55
46-1001-4-301	21	57
46-1001-4-302	21	48
46-1001-4-400	35	17
46-1001-4-401	29	18
46-1001-4-408	17	58
46-1001-4-409	17	23
46-1001-4-410	17	5
46-1001-4-411	17	64
46-1001-4-413	17	45
46-1001-4-418	43	8
46-1001-4-421	43	12
46-1001-4-423	17	66
46-1001-4-424	17	63
46-1001-4-425	17	61

Part Number	Page	Det. No.
46-1001-4-426	23	22
46-1001-4-427	23	22
46-1001-4-430	47	10
46-1001-4-433	17	59
46-1001-4-434	17	59
46-1001-4-436	25	46
46-1001-4-437	25	21
46-1001-4-438	25	45
46-1001-4-442	25	72
46-1001-4-445	25	33
46-1001-4-447	25	12
46-1001-4-448	25	9
46-1001-4-449	25	11
46-1001-4-454	25	16
46-1001-4-455	25	76
46-1001-4-456	25	20
46-1001-4-458	25	1
46-1001-4-459	25	48
46-1001-4-460	25	8
46-1001-4-462	25	18
46-1001-4-463	25	22
46-1001-4-464	25	24
46-1001-4-465	25	35
46-1001-4-466	25	28
46-1001-4-467	25	30
46-1001-4-468	25	26
46-1001-4-469	25	4
46-1001-4-471	25	37
46-1001-4-472	25	31
46-1001-4-473	25	39
46-1001-4-474	25	32
46-1001-4-478	25	47
46-1001-4-478	25	10
46-1001-4-479	25	63
46-1001-4-480	25	42
46-1001-4-481	23	4
46-1001-4-482	23	9
46-1001-4-483	23	12
46-1001-4-484	23	12
46-1001-4-501	23	30
46-1001-4-502	23	38
46-1001-4-503	23	35
46-1001-4-504	23	35
46-1001-4-505	23	27
46-1001-4-506	23	28

Part Number	Page	Det. No.
46-1001-4-507	23	27
46-1001-4-508	23	28
46-1001-4-509	23	32
46-1001-4-510	23	41
46-1001-4-519	15	53
46-1001-4-520	15	52
46-1001-4-521	15	67
46-1001-4-522	15	67
46-1001-4-523	15	31
46-1001-4-524	15	43
46-1001-4-525	15	26
46-1001-4-526	15	51
46-1001-4-527	15	50
46-1001-4-528	17	34
46-1001-4-529	17	25
46-1001-4-530	17	29
46-1001-4-531	17	31
46-1001-4-532	17	33
46-1001-4-533	15	38
46-1001-4-534	15	8
46-1001-4-535	15	71
46-1001-4-536	15	49
46-1001-4-537	15	66
46-1001-4-538	15	66
46-1001-4-539	15	14
46-1001-4-540	15	70
46-1001-4-543	15	69
46-1001-4-546	15	1
46-1001-4-556	15	64
46-1001-4-557	15	64
46-1001-4-558	15	64
46-1001-4-559	15	64
46-1001-4-560	15	64
46-1001-4-561	15	64
46-1001-4-562	15	64
46-1001-4-563	15	64
46-1001-4-566	15	23
46-1001-4-568	15	64
46-1001-4-570	15	64
46-1001-4-571	15	44
46-1001-4-572	15	45
46-1001-4-573	23	18
46-1001-4-574	23	15
46-1001-4-575	23	13
46-1001-4-576	23	14

Part Number	Page	Det. No.
46-1001-4-577	23	17
46-1001-4-578	23	11
46-1001-4-589	33	39
46-1001-4-589	51	9
46-1001-4-590	51	8
46-1001-4-591	31	35
46-1001-4-592	31	38
46-1001-4-593	33	37
46-1001-4-594	33	37
46-1001-4-595	33	37
46-1001-4-596	33	37
46-1001-4-597	31	50
46-1001-4-598	31	21
46-1001-4-599	31	26
46-1001-4-600	35	14
46-1001-4-601	47	12
46-1001-4-603	31	43
46-1001-4-604	31	43
46-1001-4-605	31	53
46-1001-4-606	31	16
46-1001-4-607	33	3
46-1001-4-612	47	15
46-1001-4-613	35	40
46-1001-4-616	33	10
46-1001-4-617	33	
46-1001-4-618	47	17
46-1001-4-620	33	
46-1001-4-621	33	1
46-1001-4-622	31	29
46-1001-4-623	29	8
46-1001-4-624	35	13
46-1001-4-625	31	1
46-1001-4-628	33	38
46-1001-4-629	33	38
46-1001-4-635	21	21
46-1001-4-636	21	22
46-1001-4-638	31	40
46-1001-4-639	31	40
46-1001-4-645	33	31
46-1001-4-646	33	31
46-1001-4-647	47	13
46-1001-4-648	35	21
46-1001-4-651	35	22
46-1001-4-652	35	25
46-1001-4-653	33	7

Part Number	Page	Det. No.
46-1001-4-654	31	37
46-1001-4-655	21	3
46-1001-4-657	21	38
46-1001-4-658	21	20
46-1001-4-659	21	36
46-1001-4-660	47	29
46-1001-4-661	21	14
46-1001-4-662	21	19
46-1001-4-663	21	30
46-1001-4-668	21	50
46-1001-4-670	47	24
46-1001-4-671	21	15
46-1001-4-673	39	6
46-1001-4-673	49	9
46-1001-4-674	47	18
46-1001-4-675	21	12
46-1001-4-679	21	1
46-1001-4-680	21	45
46-1001-4-687	21	49
46-1001-4-689	51	13
46-1001-4-691	27	44
46-1001-4-691	29	51
46-1001-4-692	27	43
46-1001-4-692	29	50
46-1001-4-693	29	37
46-1001-4-695	27	1
46-1001-4-697	29	29
46-1001-4-698	29	13
46-1001-4-699	27	20
46-1001-4-700	27	42
46-1001-4-700	29	49
46-1001-4-701	27	54
46-1001-4-702	27	38
46-1001-4-703	27	38
46-1001-4-704	27	46
46-1001-4-705	29	53
46-1001-4-706	29	5
46-1001-4-709	27	31
46-1001-4-711	27	26
46-1001-4-715	19	35
46-1001-4-717	21	60
46-1001-4-718	21	59
46-1001-4-719	19	37
46-1001-4-720	21	10
46-1001-4-721	19	13
46-1001-4-722	37	16

Part Number	Page	Det. No.
46-1001-4-723	37	27
46-1001-4-724	49	22
46-1001-4-725	37	4
46-1001-4-727	19	43
46-1001-4-728	19	1
46-1001-4-729	19	2
46-1001-4-730	19	3
46-1001-4-732	19	55
46-1001-4-733	19	38
46-1001-4-734	49	23
46-1001-4-735	49	15
46-1001-4-736	49	20
46-1001-4-737	39	19
46-1001-4-738	39	13
46-1001-4-739	37	41
46-1001-4-740	19	58
46-1001-4-741	45	54
46-1001-4-742	45	57
46-1001-4-743	19	10
46-1001-4-744	45	23
46-1001-4-745	45	7
46-1001-4-746	43	16
46-1001-4-747	39	15
46-1001-4-752	37	37
46-1001-4-753	37	40
46-1001-4-756	37	33
46-1001-4-757	37	31
46-1001-4-758	37	10
46-1001-4-759	37	32
46-1001-4-760	37	34
46-1001-4-761	37	35
46-1001-4-763	37	3
46-1001-4-765	37	36
46-1001-4-767	37	1
46-1001-4-768	19	5
46-1001-4-769	37	14
46-1001-4-770	19	40
46-1001-4-771	41	12
46-1001-4-772	41	6
46-1001-4-773	35	15
46-1001-4-778	29	27
46-1001-4-779	19	20
46-1001-4-780	19	21
46-1001-4-782	25	43
46-1001-4-783	41	10

PARTS INDEX

3/9

Part Number	Page	Det. No.
46-1001-4-784	41	10
46-1001-4-787	41	14
46-1001-4-789	41	23
46-1001-4-790	41	1
46-1001-4-791	41	2
46-1001-4-792	47	19
46-1001-4-796	21	25
46-1001-4-797	43	14
46-1001-4-798	43	14
46-1001-4-800	51	4
46-1001-4-801	51	1
46-1001-4-802	51	1
46-1001-4-803	49	3
46-1001-4-804	51	3
46-1001-4-805	51	5
46-1001-4-806	51	2
46-1001-4-810	29	14
46-1001-4-812	19	57
46-1001-4-814	19	4
46-1001-4-815	27	49
46-1001-4-816	27	51
46-1001-4-817	27	50
46-1001-4-823	21	9
46-1001-4-824	19	49
46-1001-4-825	49	6
46-1001-4-826	49	14
46-1001-4-830	25	27
46-1001-4-832	25	51
46-1001-4-833	25	55
46-1001-4-834	25	53
46-1001-4-835	25	59
46-1001-4-836	25	54
46-1001-4-839	39	2
46-1001-4-839	49	5
46-1001-4-840	23	8
46-1001-4-841	25	73
46-1001-4-842	27	53
46-1001-4-893	21	2
46-1001-4-894	25	41
46-1001-4-895	25	52
46-1001-4-896	29	1
46-1001-4-897	27	39
46-1001-4-898	29	46
46-1001-4-899	27	30
46-1001-4-900	39	22

Part Number	Page	Det. No.
46-1001-4-901	39	21
46-1001-4-902	41	20
46-1001-4-903	37	23
46-1001-4-909	39	17
46-1001-4-910	49	4
46-1001-4-912	39	18
46-1001-4-913	45	18
46-1001-4-915	19	39
46-1001-4-916	41	13
46-1001-4-917	37	26
46-1001-4-918	37	8
46-1001-4-919	37	15
46-1001-4-920	37	21
46-1001-4-921	37	17
46-1001-4-922	19	44
46-1001-4-923	19	46
46-1001-4-924	19	47
46-1001-4-925	19	48
46-1001-5-000	3	4
46-1001-5-001	3	1
46-1001-5-002	3	6
46-1001-5-003	3	9
46-1001-5-005	3	33
46-1001-5-006	3	34
46-1001-5-007	3	35
46-1001-5-008	3	36
46-1001-5-009	3	26
46-1001-5-010	3	25
46-1001-5-011	3	24
46-1001-5-012	3	31
46-1001-5-013	3	30
46-1001-5-014	3	28
46-1001-5-015	3	32
46-1001-5-016	3	21
46-1001-5-017	3	19
46-1001-5-018	3	20
46-1001-5-019	3	11
46-1001-5-020	3	12
46-1001-5-021	3	15
46-1001-5-022	3	16
46-1001-5-023	3	17
46-1001-5-025	5	39
46-1001-5-026	5	40
46-1001-5-027	5	12
46-1001-5-028	5	11

Part Number	Page	Det. No.
46-1001-5-029	5	14
46-1001-5-030	5	15
46-1001-5-031	5	8
46-1001-5-032	5	27
46-1001-5-033	5	4
46-1001-5-034	5	7
46-1001-5-035	5	2
46-1001-5-036	5	1
46-1001-5-037	5	24
46-1001-5-038	5	23
46-1001-5-039	5	19
46-1001-5-040	5	26
46-1001-5-041	5	18
46-1001-5-042	5	16
46-1001-5-043	5	24
46-1001-5-044	5	33
46-1001-5-045	5	34
46-1001-5-046	5	36
46-1001-5-047	5	37
46-1001-5-048	5	29
46-1001-5-049	5	31
46-1001-5-050	5	28
46-1001-5-051	5	38
46-1001-5-052	11	23
46-1001-5-053	11	26
46-1001-5-054	7	1
46-1001-5-056	7	3
46-1001-5-057	7	4
46-1001-5-058	7	5
46-1001-5-059	9	1
46-1001-5-060	9	2
46-1001-5-061	9	3
46-1001-5-062	9	5
46-1001-5-063	9	7
46-1001-5-064	9	11
46-1001-5-065	9	8
46-1001-5-066	9	10
46-1001-5-067	9	14
46-1001-5-068	7	12
46-1001-5-069	7	11
46-1001-5-070	7	15
46-1001-5-071	7	16
46-1001-5-072	7	19
46-1001-5-073	7	20
46-1001-5-073	11	17

Part Number	Page	Det. No.
46-1001-5-074	7	22
46-1001-5-075	7	24
46-1001-5-076	7	25
46-1001-5-078	7	30
46-1001-5-079	7	29
46-1001-5-081	7	26
46-1001-5-081	51	25
46-1001-5-082	7	34
46-1001-5-083	11	36
46-1001-5-084	7	7
46-1001-5-085	11	58
46-1001-5-086	7	33
46-1001-5-087	7	35
46-1001-5-088	7	9
46-1001-5-089	11	41
46-1001-5-090	11	45
46-1001-5-091	11	15
46-1001-5-091	11	44
46-1001-5-092	11	43
46-1001-5-093	11	11
46-1001-5-094	11	7
46-1001-5-095	11	12
46-1001-5-096	11	1
46-1001-5-097	11	2
46-1001-5-098	11	30
46-1001-5-099	11	49
46-1001-5-100	11	51
46-1001-5-101	11	53
46-1001-5-102	11	55
46-1001-5-103	11	57
46-1001-5-104	11	29
46-1001-5-105	11	62
46-1001-5-106	11	60
46-1001-5-107	11	59
46-1001-5-108	11	13
46-1001-5-109	5	30
46-1001-5-110	3	23
46-1001-5-111	3	18
46-1001-5-112	7	27
46-1001-5-151	51	26
46-1001-5-152	51	28
46-1001-5-153	51	29
46-1001-5-154	51	16
46-1001-5-156	13	34
46-1001-5-157	13	17
46-1001-5-158	13	18

Part Number	Page	Det. No.
46-1001-5-159	13	24
46-1001-5-160	13	29
46-1001-5-161	13	28
46-1001-5-162	13	27
46-1001-5-163	13	30
46-1001-5-164	13	21
46-1001-5-164	13	35
46-1001-5-166	13	14
46-1001-5-167	13	13
46-1001-5-168	13	5
46-1001-5-169	13	3
46-1001-5-170	13	2
46-1001-5-171	13	4
46-1001-5-172	13	10
46-1001-5-173	13	6
46-1001-5-174	13	1
46-1001-5-175	13	38
46-1001-5-176	51	17
46-1001-5-177	51	7
46-1001-5-179	51	31
46-1001-5-180	51	30
46-1001-5-181	13	36
46-1001-5-182	13	37
46-1001-5-183	5	42
46-1001-5-184	5	43
46-1001-5-185	25	2
46-1002-0-046	17	24
46-1002-0-047	15	5
46-1003-2-719	17	38
46-1003-2-820	25	6
46-1003-6-133	25	67
46-1003-7-909	51	15
46-1003-7-919	51	27
46-1003-7-932	19	42
46-1004-9-082	51	6
46-1004-9-083	51	18
46-1004-9-084	51	32
46-1004-9-085	51	19
46-1004-9-086	51	20
46-1004-9-087	51	21
46-1004-9-088	51	22
46-1004-9-089	51	23

Part Number	Page	Det. No.
46-1006-0-248	15	6
46-1006-3-612	31	12
46-1007-7-286	15	46
46-1007-7-296	15	32
46-1007-7-296	25	19
46-1008-0-714	15	19
46-1009-4-562	15	25
47-1001-0-274	33	13
47-1001-0-284	33	16
47-1001-0-825	33	12
47-1001-0-907	17	9
47-1001-0-908	17	12
47-1001-0-926	39	10
47-1001-0-927	39	9
47-1001-4-414	17	54
47-1001-4-415	17	47
47-1001-4-416	17	51
47-1001-4-417	17	52
47-1001-4-422	17	57
47-1001-4-428	17	21
47-1001-4-432	17	49
47-1001-4-587	33	17
47-1001-4-590	33	30
47-1001-4-608	33	20
47-1001-4-609	33	18
47-1001-4-610	33	26
47-1001-4-611	33	24
47-1001-4-614	33	27
47-1001-4-619	33	44
47-1001-4-626	33	28
47-1001-4-627	33	28
47-1001-4-640	33	42
47-1001-4-641	33	42
47-1001-4-643	33	40
47-1001-4-644	33	40
47-1001-4-827	39	3
47-1001-4-828	39	27
47-1001-4-905	39	28
47-1001-4-911	39	1
47-1002-1-465	17	13