



GK31010


industrial sewing machine
parts catalogue



ORIGINAL


CHINA TYPICAL SEWING MACHINE CO.

1

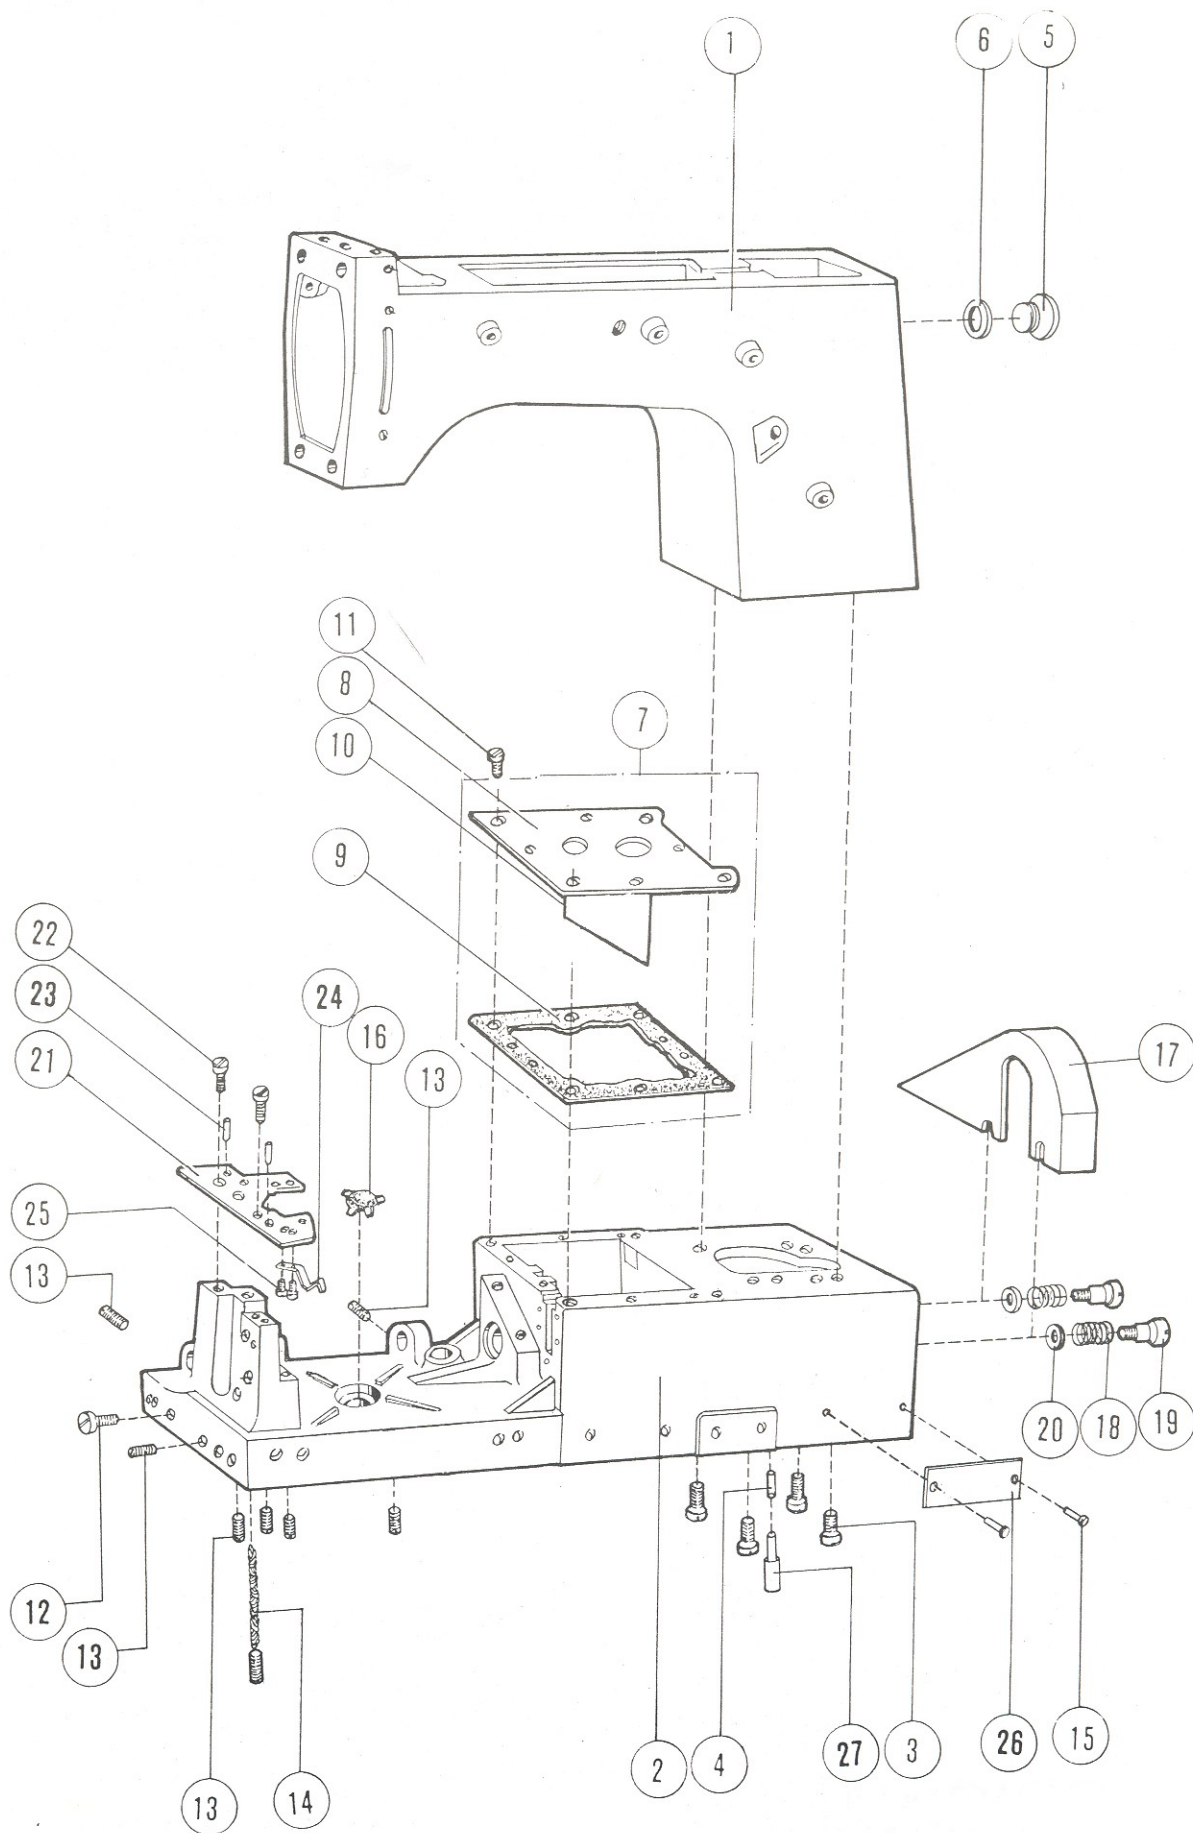


1. Arm & Bed Parts(1)

NO.	Ref. NO.	Description	QT.
1	65T1-001A1	Arm	1
2	65T1-001A2	Bed	1
3	GB70004	Screw	4
4	GB117-76	Pin	1
5	8A1-013	Screw	1
6	8A1-014	Washer	1
7	65T1-005	Bed cover assy.	1
8	8A1-015B1	Bed cover	1
9	8A1-015B2	Gasket	1
10	65T1-006	Oil deflecting plate	1
11	GB68002	Screw	8
12	BS40013	Oil adjusting screw	1
13	BS40012	Screw	8
14	8A1-032	Wick-packed spring	1
15	GB66002	Screw	2
16	8A1-034	Oil screen	1
17	8A1-035	Belt guard	1
18	8A1-036	Spring	2
19	BS20014	Screw	2
20	8A1-037	Washer	2
21	8A1-016	Throat plate support	1
22	BS10023	Screw	2
23	8A1-018	Pin	2
24	8A1-019	Latch spring	1
25	GB66012	Screw	2
26	65T1-003	Trade mark plate	1
27	65T1-002	Oil return pipe	1

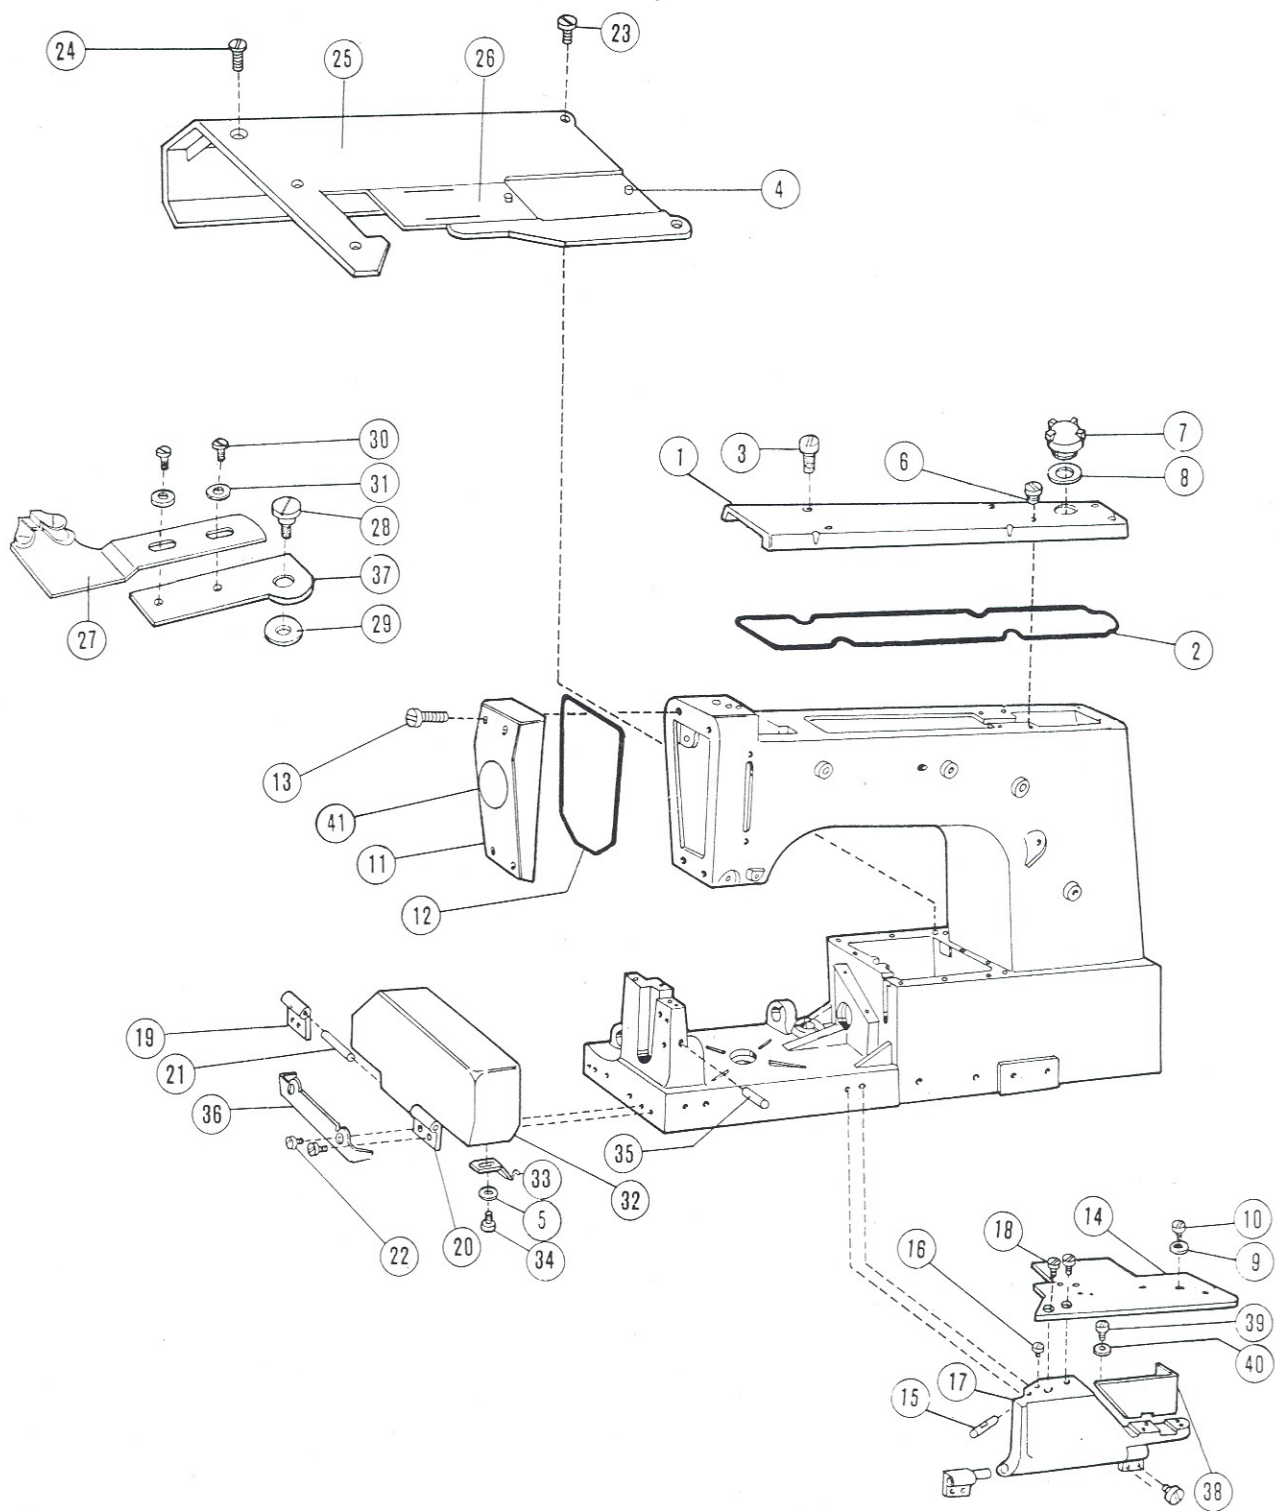

2. Arm & Bed Parts (2)


NO.	Ref. NO.	Description	QT.
1	65T1-004	Top cover	1
2	8A1-003	Gasket	1
3	GB66033	Screw	6
4	BS40011	Positioning screw	1
5	BQ10008	Washer	1
6	8A1-049	Decorative plate	1
7	43T1-002B2	Oil check window	1
8	43T1-002B3	Seal ring	1
9	8A1-039	Positioning ring	1
10	GB68002	Screw	1
11	8A1-009	Face plate	1
12	8A1-010	Gasket for face plate	1
13	GB66026	Screw	4
14	8A1-022	Cloth plate for front cover	1
15	8A1-020	Spring pin	1
16	GB66008	Screw	1
17	8A1-021	Front cover	1
18	GB69012	Screw	2
19	8A1-023	Left hinge	2
20	8A1-024	Right hinge	2
21	8A1-025	Hinge pin	4
22	GB66022	Screw	8
23	GB66018	Screw	2
24	GB69006	Screw	2
25	8A1-026	Cloth plate	1
26	8A1-027B	Slide plate assy.	1
	8A1-027B1	Slide plate	1
	8A1-027B2	Slide plate knob	1
27	8A1-040A	Edge guide assy.	1
	8A1-040A1	Top grip	1
	8A1-040A2	Bottom grip	1
	8A1-040A3	Edge guide plate	1
28	8A1-041	Screw	1
29	8A1-042	Washer	1
30	8A1-043	Screw	1
31	J00-54	Washer	1
32	8A1-028	Left cover	1
33	8A1-029	Latch spring	1
34	GB66012	Screw	1
35	8A1-030	Pin	1
36	8A1-031	Fitting plate for hinge	1
37	8A1-044	Edge guide base	1
38	8A1-047	Dust cover	1
39	GB66012	Screw	1
40	BQ10008	Washer	1

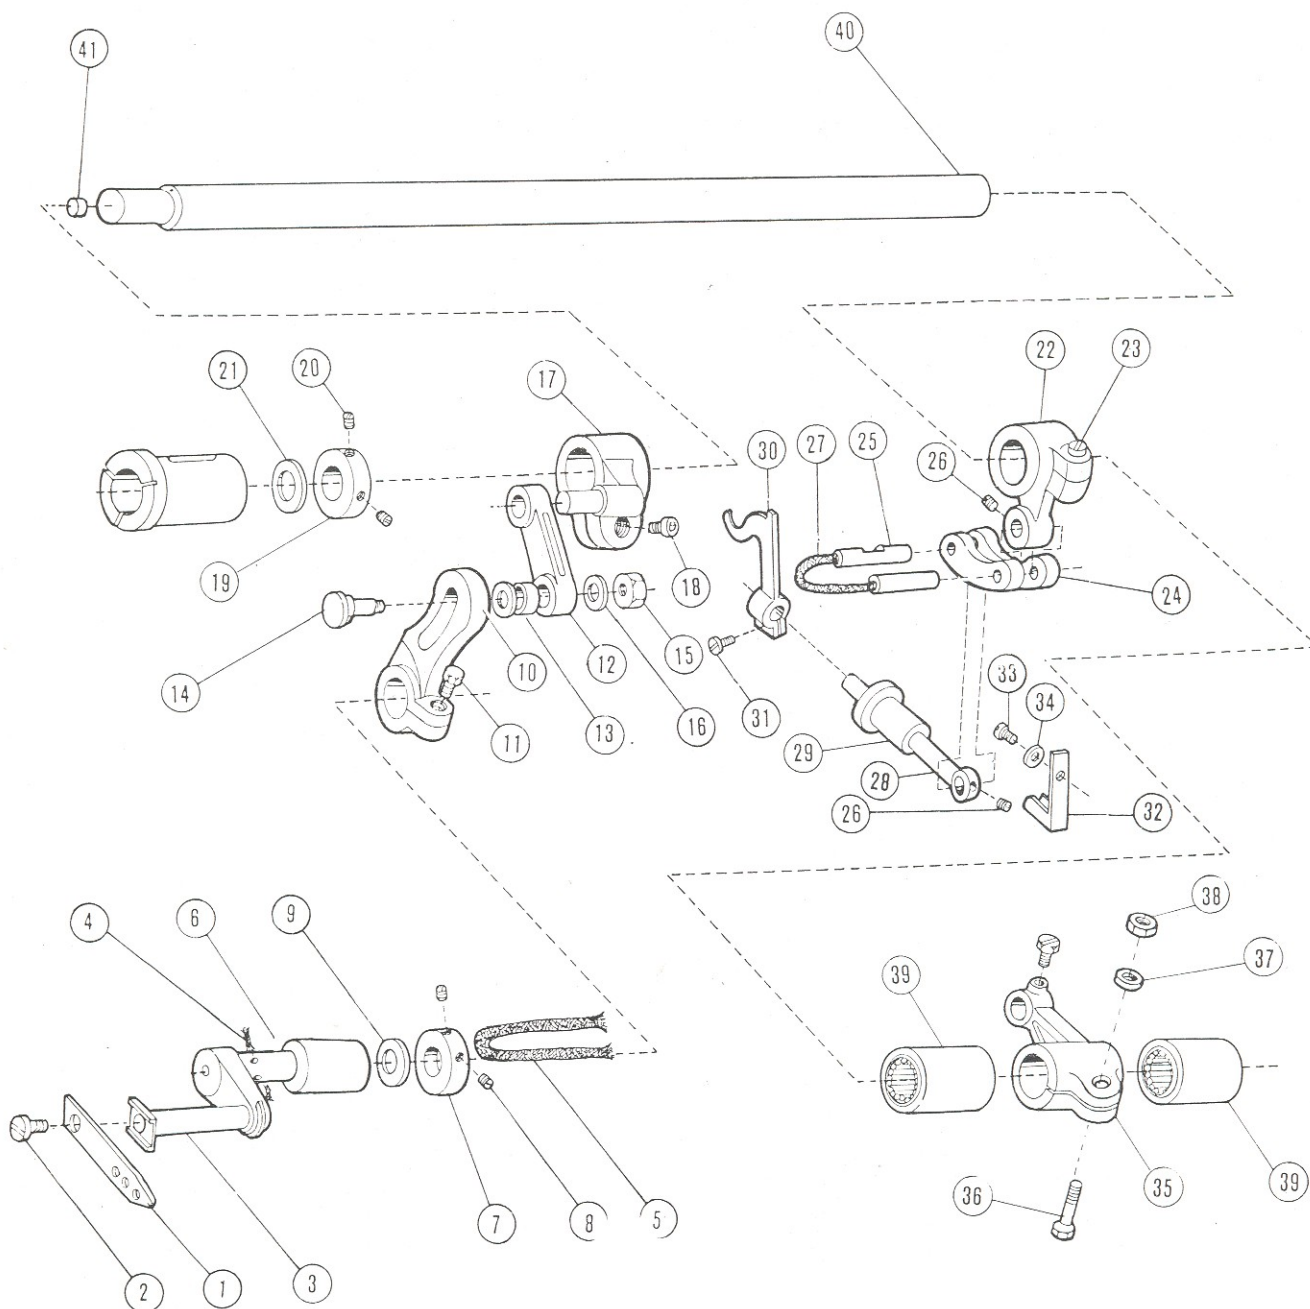

3. Needle Bar & Thread Take-up Mechanism(1)


NO.	Ref. NO.	Description	QT.
1	43T2-019	Thread take-up plate	1
2	43T2-020	Set screw	1
3	43T2-021	Thread take-up rock shaft	1
4		Oil wick	1
5		Oil wick	1
6	43T2-022	Bushing	1
7	43T2-023	Collar	1
8	GB74009	Set screw	2
9	43T2-024	Washer	1
10	43T2-025F1	Adjusting crank	1
11	43T2-025F2	Set screw	1
12	43T2-025F3	Link for adjusting crank	1
13	43T3-010E9	Roller	1
14	43T3-010E7	Screw	1
15	GB55001	Nut	1
16	43T3-010E10	Washer	2
17	65T2-009	Thread take-up crank	1
18	43T2-025F5	Set screw	1
19	65T2-008	Collar for arm shaft	1
20	GB74025	Set screw	2
21	BQ10052	Washer	1
22	8A2-055	Tension release crank	1
23	BS30009	Set screw	1
24	8A2-056	Link for tension release crank	1
25	8A2-057	Pin	2
26	GB74001	Set screw	2
27	8A3-033	Oil wick	1
28	8A2-058	Tension release bar	1
29	8A2-059	Bushing for tension release bar	1
30	8A2-060	Tension release bracket	1
31	GB66010	Set screw	1
32	8A2-061	Thread guide	1
33	GB66012	Screw	1
34	BQ10008	Washer	1
35	8A2-062	Arm shaft crank	1
36	8A2-019	Set screw	1
37	BQ10026	Washer	1
38	GB52006	Nut	1
39	65T2-015	Needle bearing (middle & right)	2
40	65T2-006B1	Arm shaft	1
41	65T2-006B2	Plug for arm shaft	1
42	8A2-049	Front bushing for arm shaft	1

4

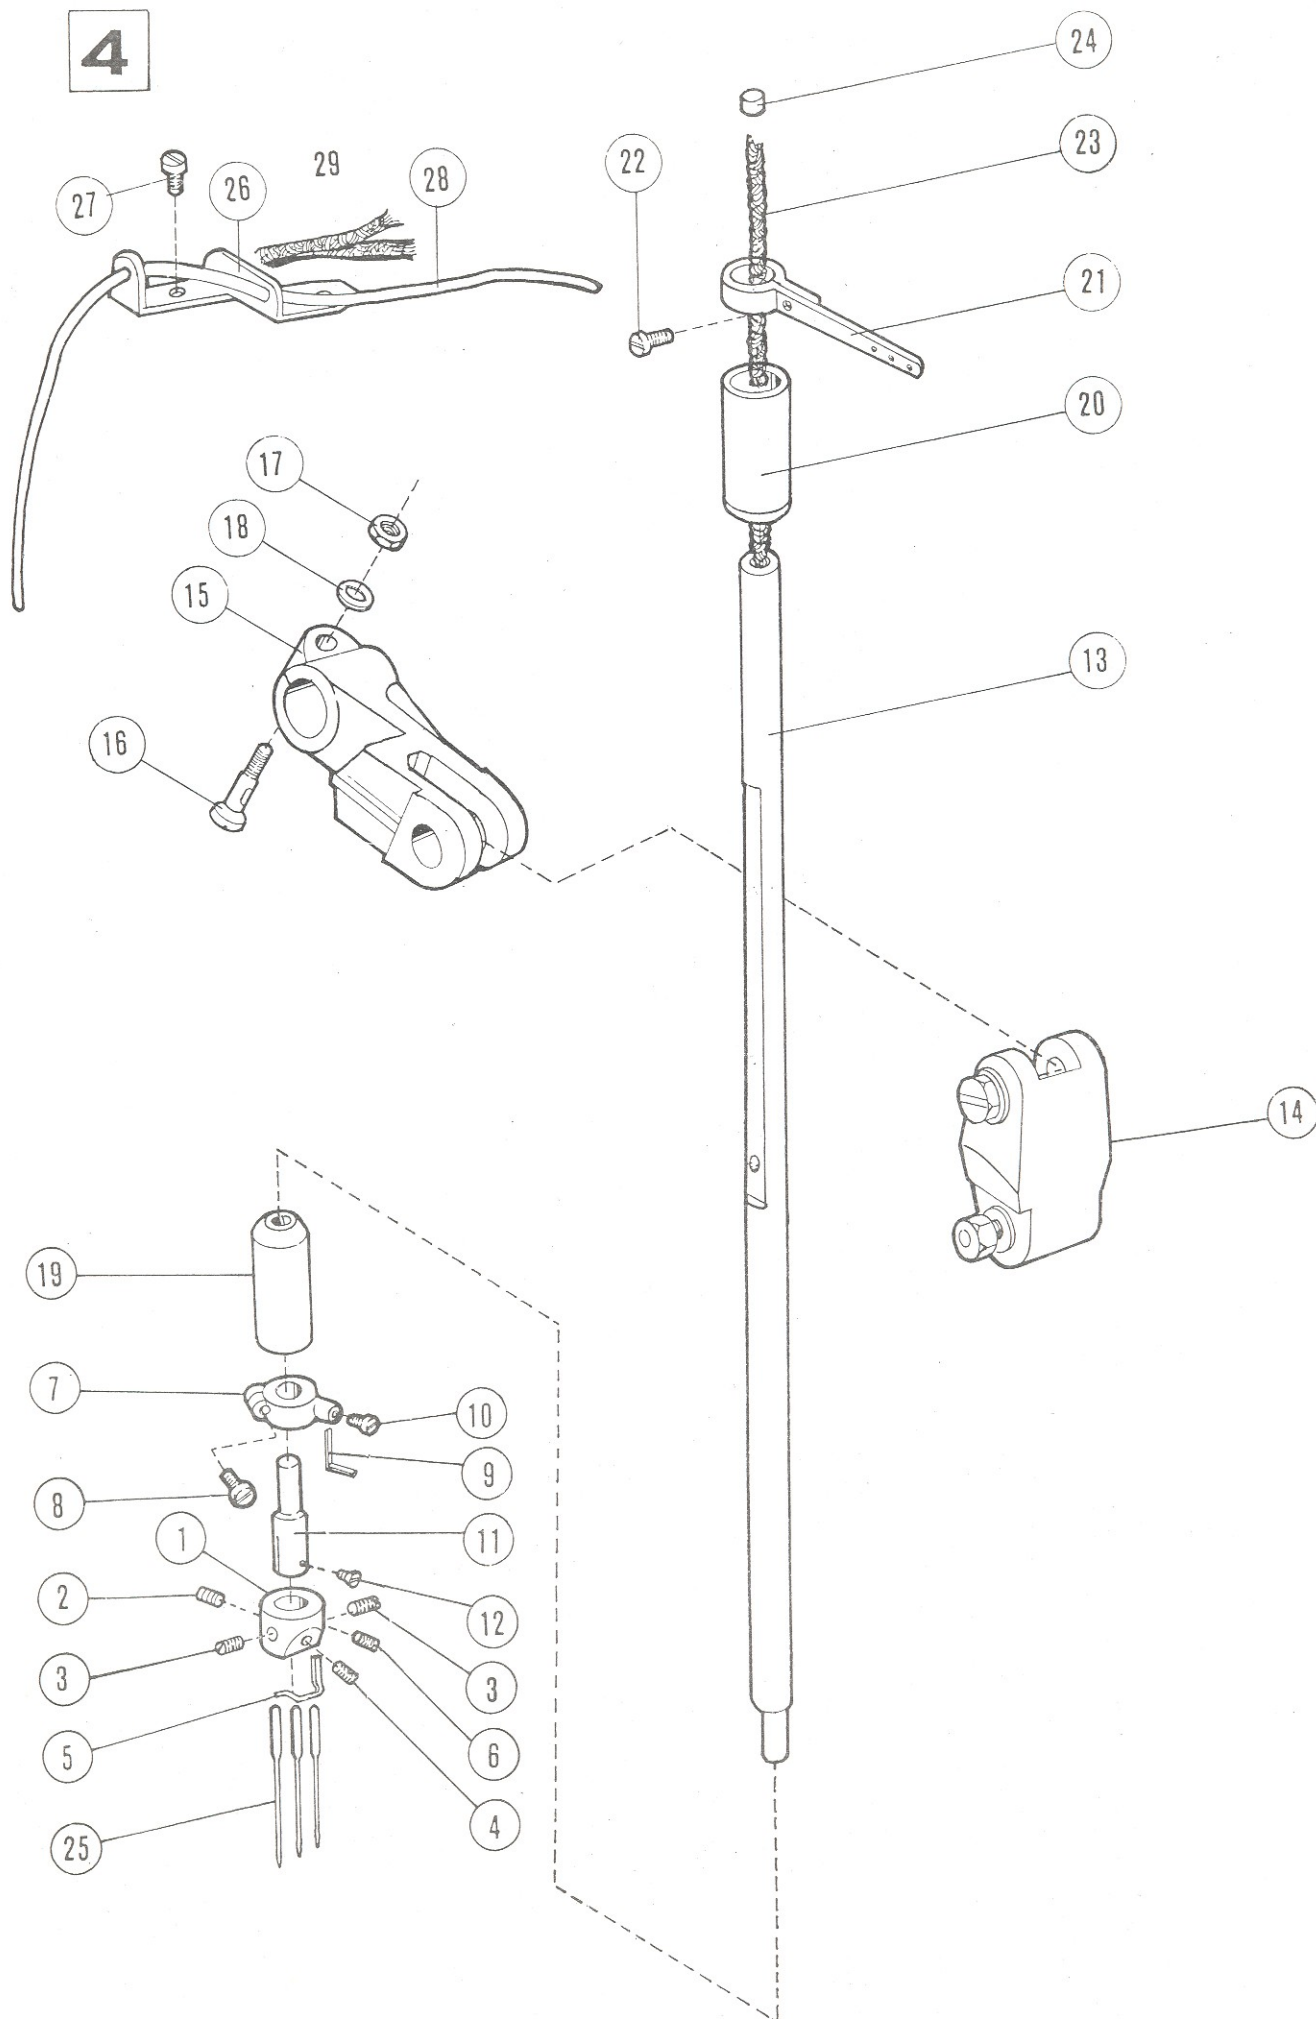


4. Needle Bar &. Thread Take-up Mechanism(2)

NO.	Ref. NO.	Description	QT.
1	8A2-001	Needle holder	1
2	8A2-002	Set screw	1
3	GB74008	Set screw	2
4	GB74002	Set screw	1
5	8A2-003	Thread guard	1
6	GB74001	Set screw	1
7	8A2-004	Holder for covering thread guard	1
8	BS30007	Set screw	1
9	8A2-006	Covering thread guard	1
10	GB66007	Set screw	1
11	8A2-007	Needle bar adapter	1
12	8A2-008	Positioning pin	2
13	8A2-009	Needle bar	1
14	65T2-001A	Needle bar fittings	
	43T2-003C2	Needle bar link	1
	43T2-003C3	Roller for needle bar	2
	43T2-003C4	Screw	1
	GB52002	Nut	1
	GB93-88	Washer	1
	43T2-003C5	Roller for link	2
	43T2-020	Screw	2
	GB93-76	Spring washer	2
	BQ10008	Washer	2
15	43T2-003C6	Needle bar crank	1
16	43T2-003C7	Screw	1
17	43T2-003C8	Nut	1
18	BQ10026	Washer	1
19	8A2-014	Needle bar bushing (lower)	1
20	8A2-015	Needle bar bushing (upper)	1
21	8A2-016	Thread take-up for needle bar	1
22	GB66009	Screw	1
23		Oil wick	1
24	8A2-010	Plug	1
25	DVX63-70(10)	Needle	3
26	8A2-080	Holder for oil wick	1
27	GB66012	Screw	1
28	65T2-005	Oil return pipe(front)	1
29	8A3-033	Oil wick	1

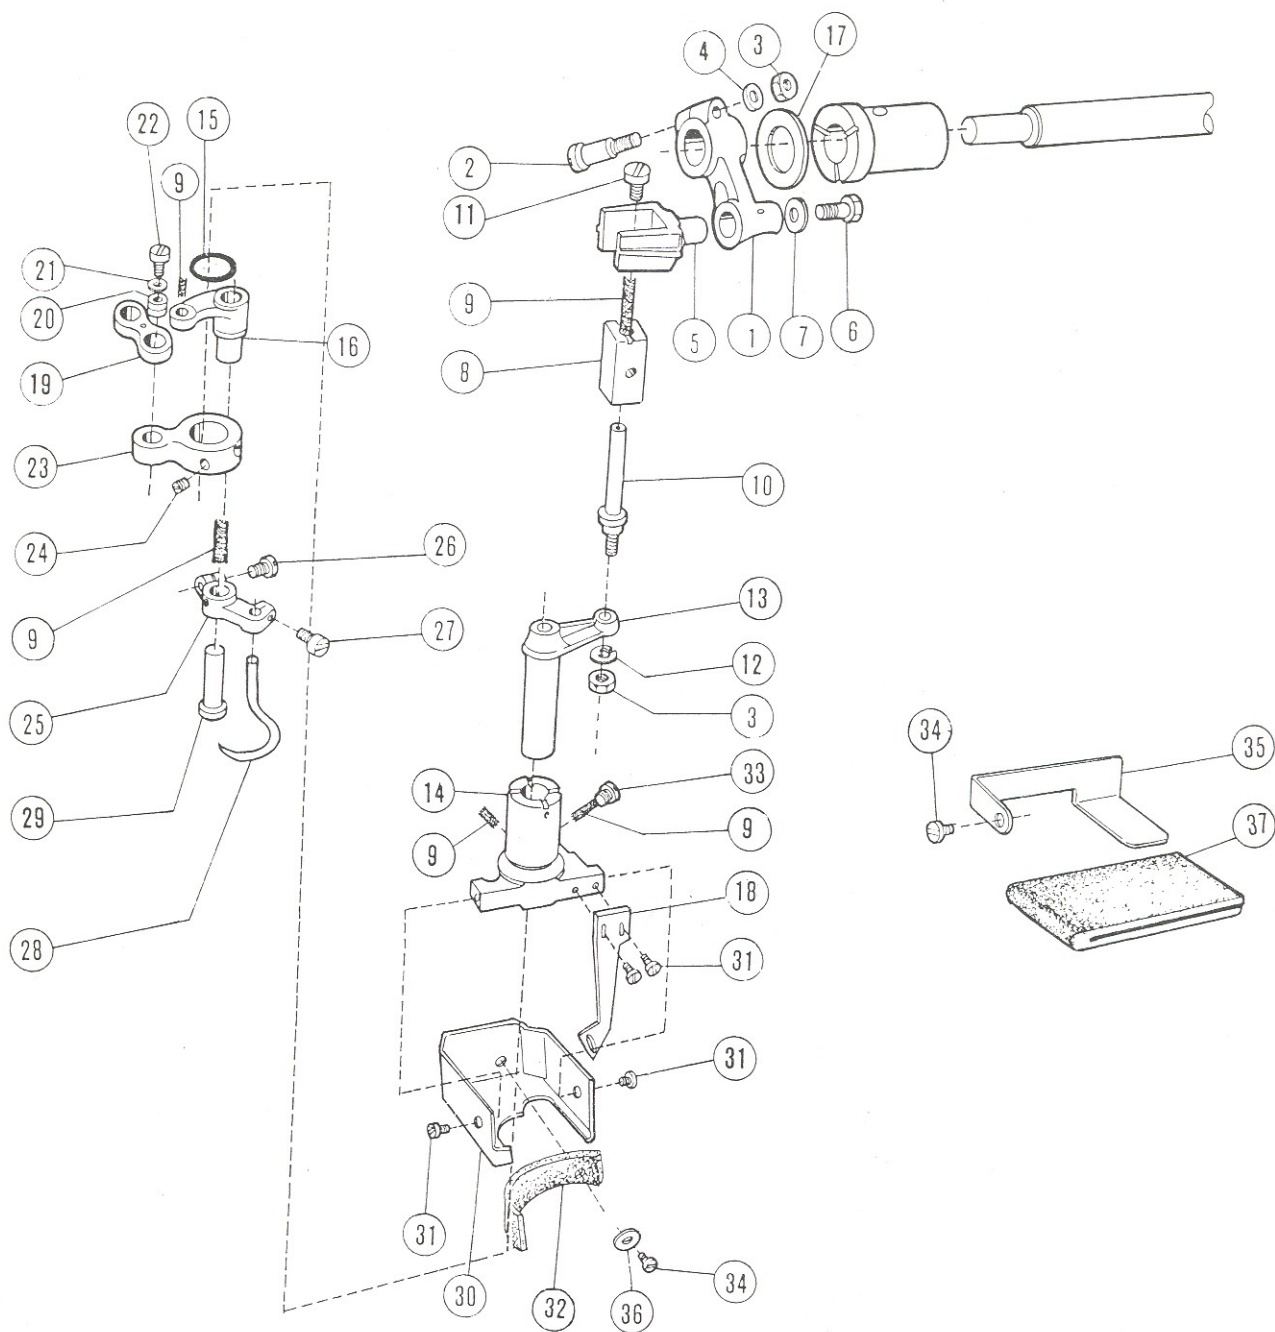


5. Meedle Bar &. Thread Take—up Mechanism(3)

NO.	Ref. NO.	Description	QT.
1	8A2—020	Coverseam crank	1
2	8A2—019	Set screw	1
3	GB52006	Nut	1
	GB52006	Nut	1
4	BQ10026	Washer	1
5	8A2—021	Slide block guide	1
6	GB66026	Screw	1
7	BQ10019	Washer	1
8	65T2—002	Slide block	1
9	8A3—033	Oil wick	1
	8A3—033	Oil wick	1
	8A3—033	Oil wick	1
	8A3—033	Oil wick	1
	8A3—033	Oil wick	1
	8A3—033	Oil wick	1
	8A3—033	Oil wick	2
10	65T2—003	Slide block shaft	1
11	8A2—024	Screw	1
12	8A2—025	C—type ring	1
13	8A2—026	Slide block crank	1
14	8A2—027	Slide block crank seat	1
15	8A2—028	Oil seal	1
16	8A2—029	Lower crank	1
17	BQ10050	Washer	1
18	8A2—044	Thread guide plate	1
19	8A2—036	Link for lower crank	1
20	8A2—037	Link bushing	2
21	BQ10017	Washer	2
22	GB29011	Screw	2
23	8A2—038	Link crank	1
24	GB74015	Set screw	2
25	8A2—032	Crank for top spreader	1
26	8A2—058	Set screw	1
27	BS30006	Set screw	1
28	8A2—034	Top spreader	1
29	8A2—030	Lower crank shaft	1
30	8A2—039	Crank seat guard	1
31	GB66012	Screw	2
	GB66012	Screw	2
32	8A2—040	Felt	1
33	BS10048	Set screw	1
34	GB66008	Screw	1
	GB66008	Screw	1
35	65T2—004	Fitting plate for felt	1
36	BQ10001	Washer	1
37	22T8—015	Filter felt	1

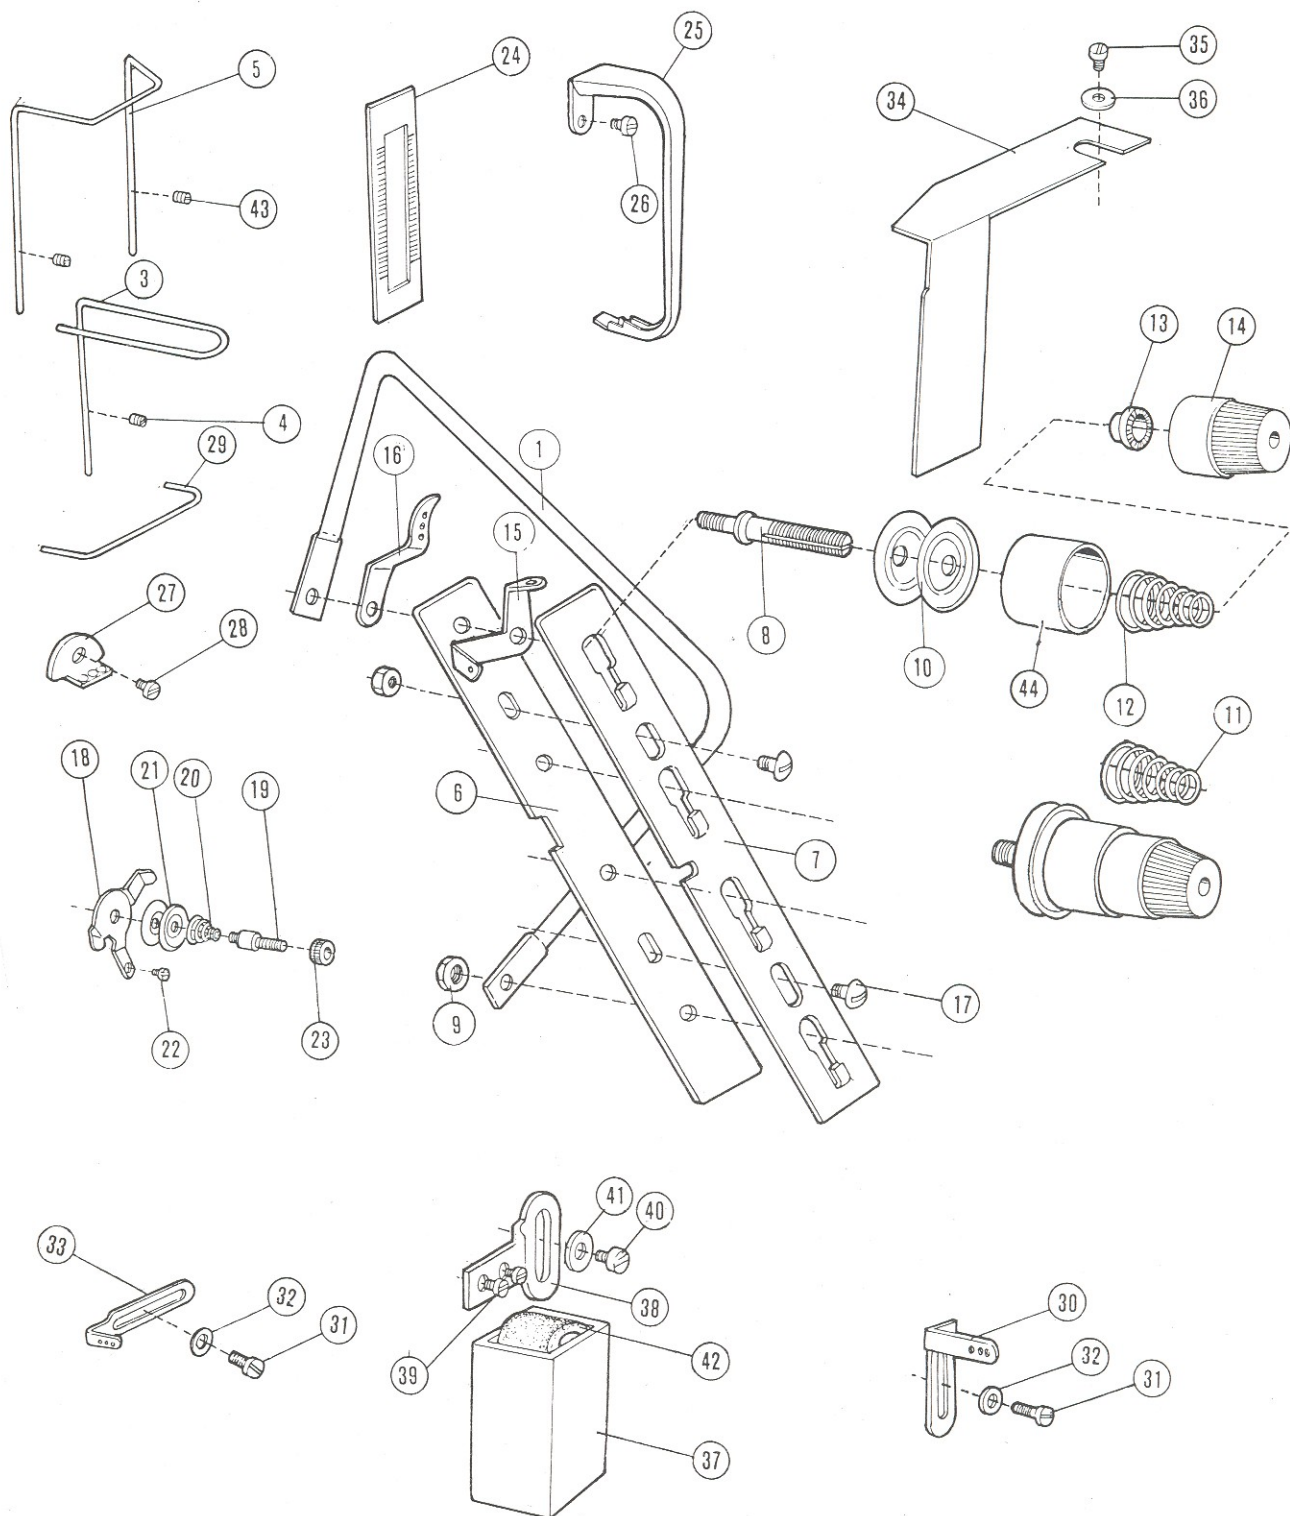


6. Needle Bar &. Thread Take—up Mechanism(4)

NO.	Ref. NO.	Description	QT.
1	8A2—086	Main thread guard	1
	(8A2—087)	Washer	1
3	8A2—071	Covering thread guard	1
4	BS10046	Screw	1
5	43T2—031	Thread take—up guard	1
6	8A2—072	Thread guide base	1
7	8A2—073	Thread release plate	1
8	65T2—011	Tension stud	5
9	GB52004	Nut	2
10	43T2—037G5	Tension disc	10
11	8A2—075	Tension spring	2
	8A2—075	Tension spring	3
13	43T2—037G10	Stop disc	5
14	43T2—037G11	Tension nut	5
15	8A2—078	Thread tension guide plate	5
16	8A2—079	Upper thread tension guide plate	5
17	GB66022	Screw	2
18	8A2—065	Covering thread guide plate	1
19	8A5—035E3	Tension stud	1
20	8A2—067	Tension spring	1
21	8A2—068	Tension disc	2
22	GB66015	Screw	1
23	8A2—088	Tension nut	1
24	43Y2—028	Scale plate	1
25	65T2—010	Thread take—up guard	
26	GB66013	Screw	
27	65T2—007	Thread guide plate for needle bar	1
28	GB68001	Screw	1
29	43T2—027	Thread guard for needle bar	1
30	8A2—051	Back thread guide	1
31	GB66015	Screw	1
	GB66015	Screw	1
32	BQ10008	Washer	1
	BQ10008	Washer	1
33	8A2—053	Upper thread guide	1
34	65T2—012	Oil guard for thread take—up	1
35	GB66012	Screw	1
36	BQ10008	Washer	1
37	48T9—001A1	Silicone oil cup	1
38	65T2—013	Bracket for silicone oil cup	1
39	GB66002	Screw	2
40	GB66015	Screw	1
41	BQ10008	Washer	1
42	65T2—014	Silicone oil felt	1
43	GB74011	Screw	2
44	43T2—037G7	Dust shield	5

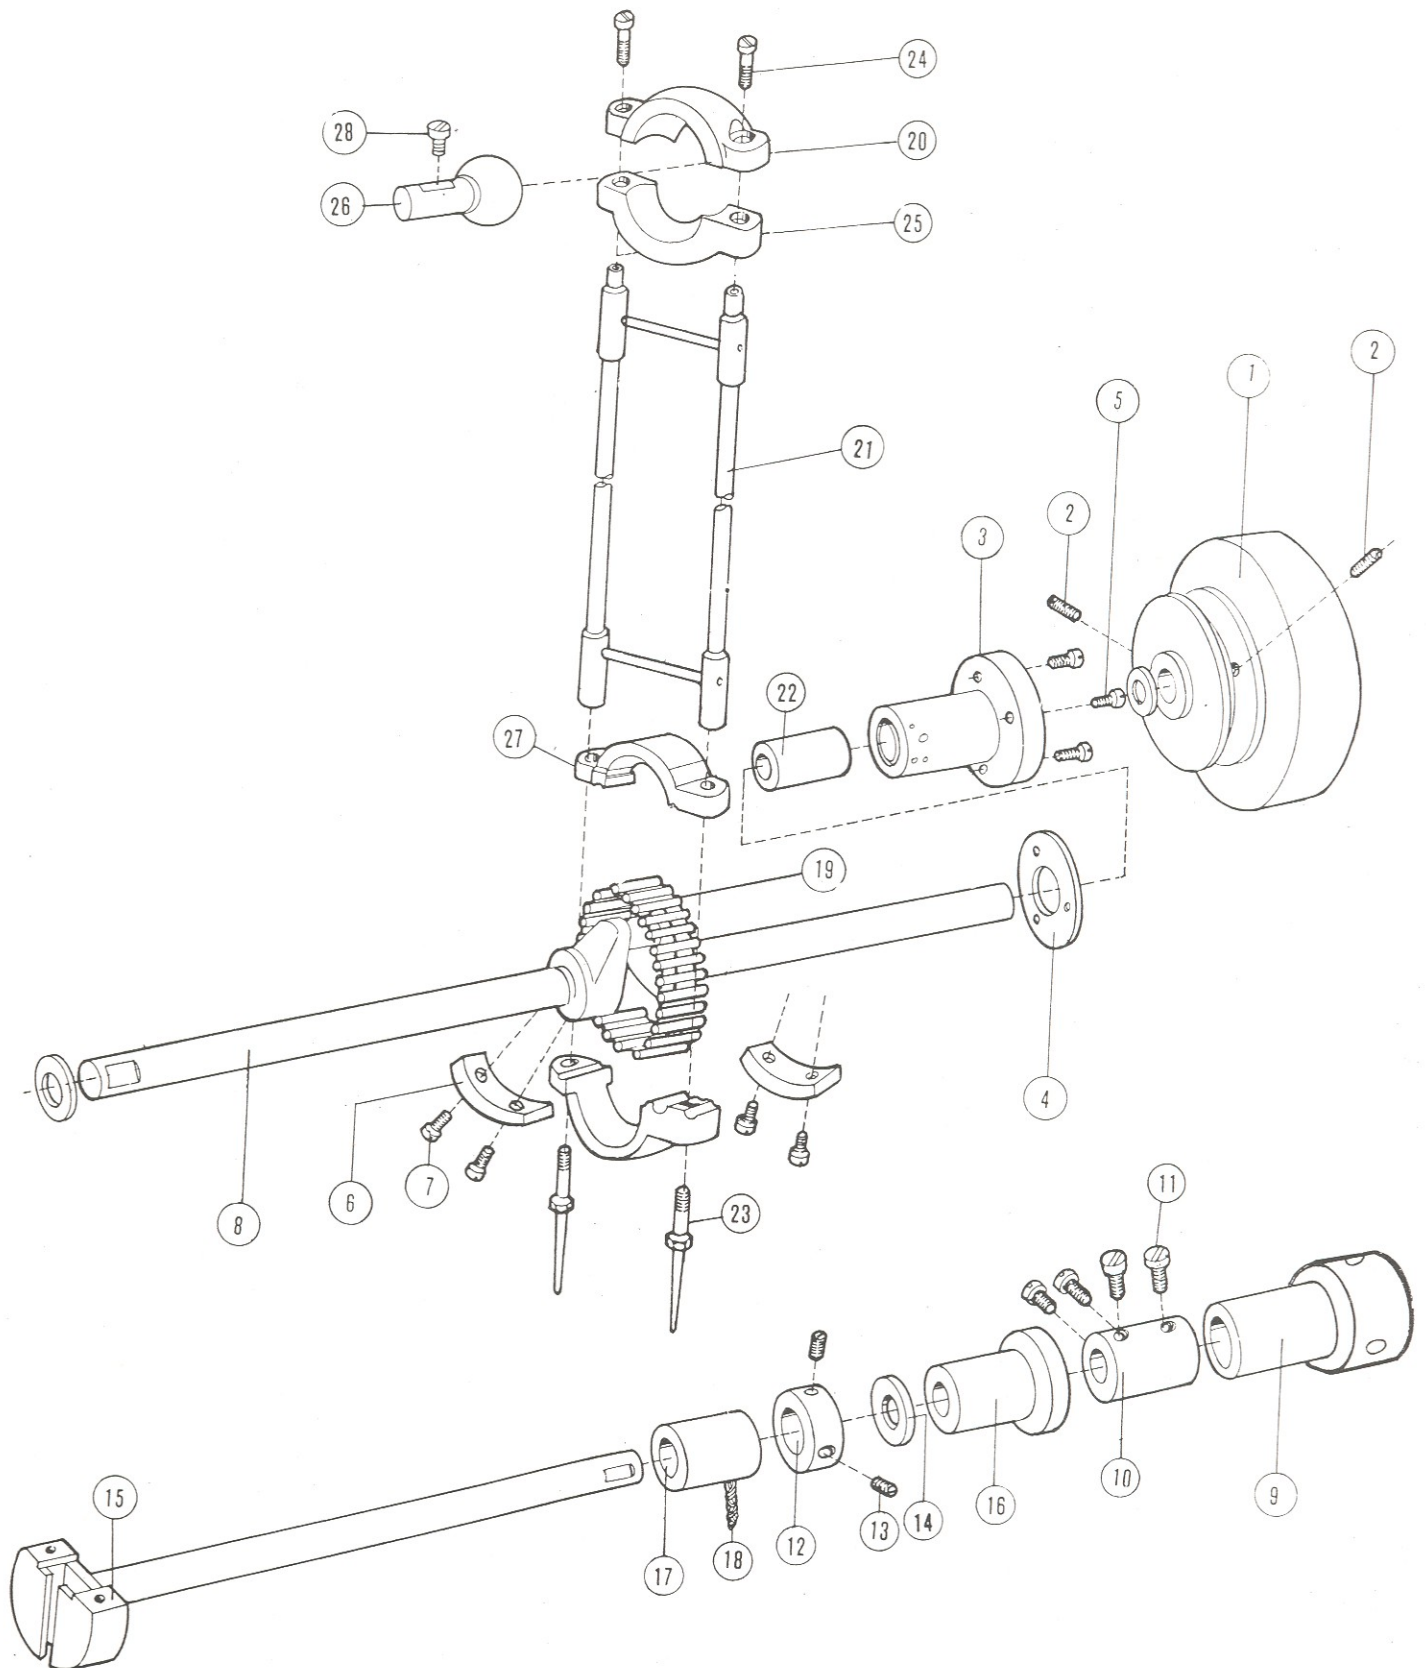

7. Feed &. Feed Lifting Mechanism(1)


NO.	Ref. NO.	Description	QT.
1	8A4-001	Machine pulley	1
2	65T4-005	Set screw	2
3	65T4-001A	Bushing socket assy.	1
	65T4-001A1	Bushing socket	1
4	8A4-003	Oil seal	1
5	GB66023	Screw	3
6	8A4-005	Balance weight	2
7	GB66024	Set screw	4
8	65T4-002	Back shaft segment	1
9	65T4-003	Front bushing for back shaft segment	1
10	8A4-009	Coupling	1
11	65T4-004	Screw	4
12	8A4-010	Collar	1
13	GB74025	Set screw	2
14	BQ10050	Washer	3
15	8A4-011	Front shaft segment	1
16	8A4-012	Back bushing	1
17	8A4-018	Front bushing	1
18	8A3-033	Oil wick	1
19	8A4-006	Needle roller	30
20	8A4-007A3	Upper cover of connecting rod	1
21	8A4-007A6	Connecting rod assy.	2
	8A4-007A7	Pin	2
22	65T4-001A2	Back bushing for back shaft segment	1
23	8A4-007A2	Screw	2
24	GB66019	Screw	2
25	8A4-007A4	Lower cover of connecting rod	1
26	8A2-063	Ball stud	1
27	8A4-007A1	Bearing bracket	1
28	BS30005	Screw	1

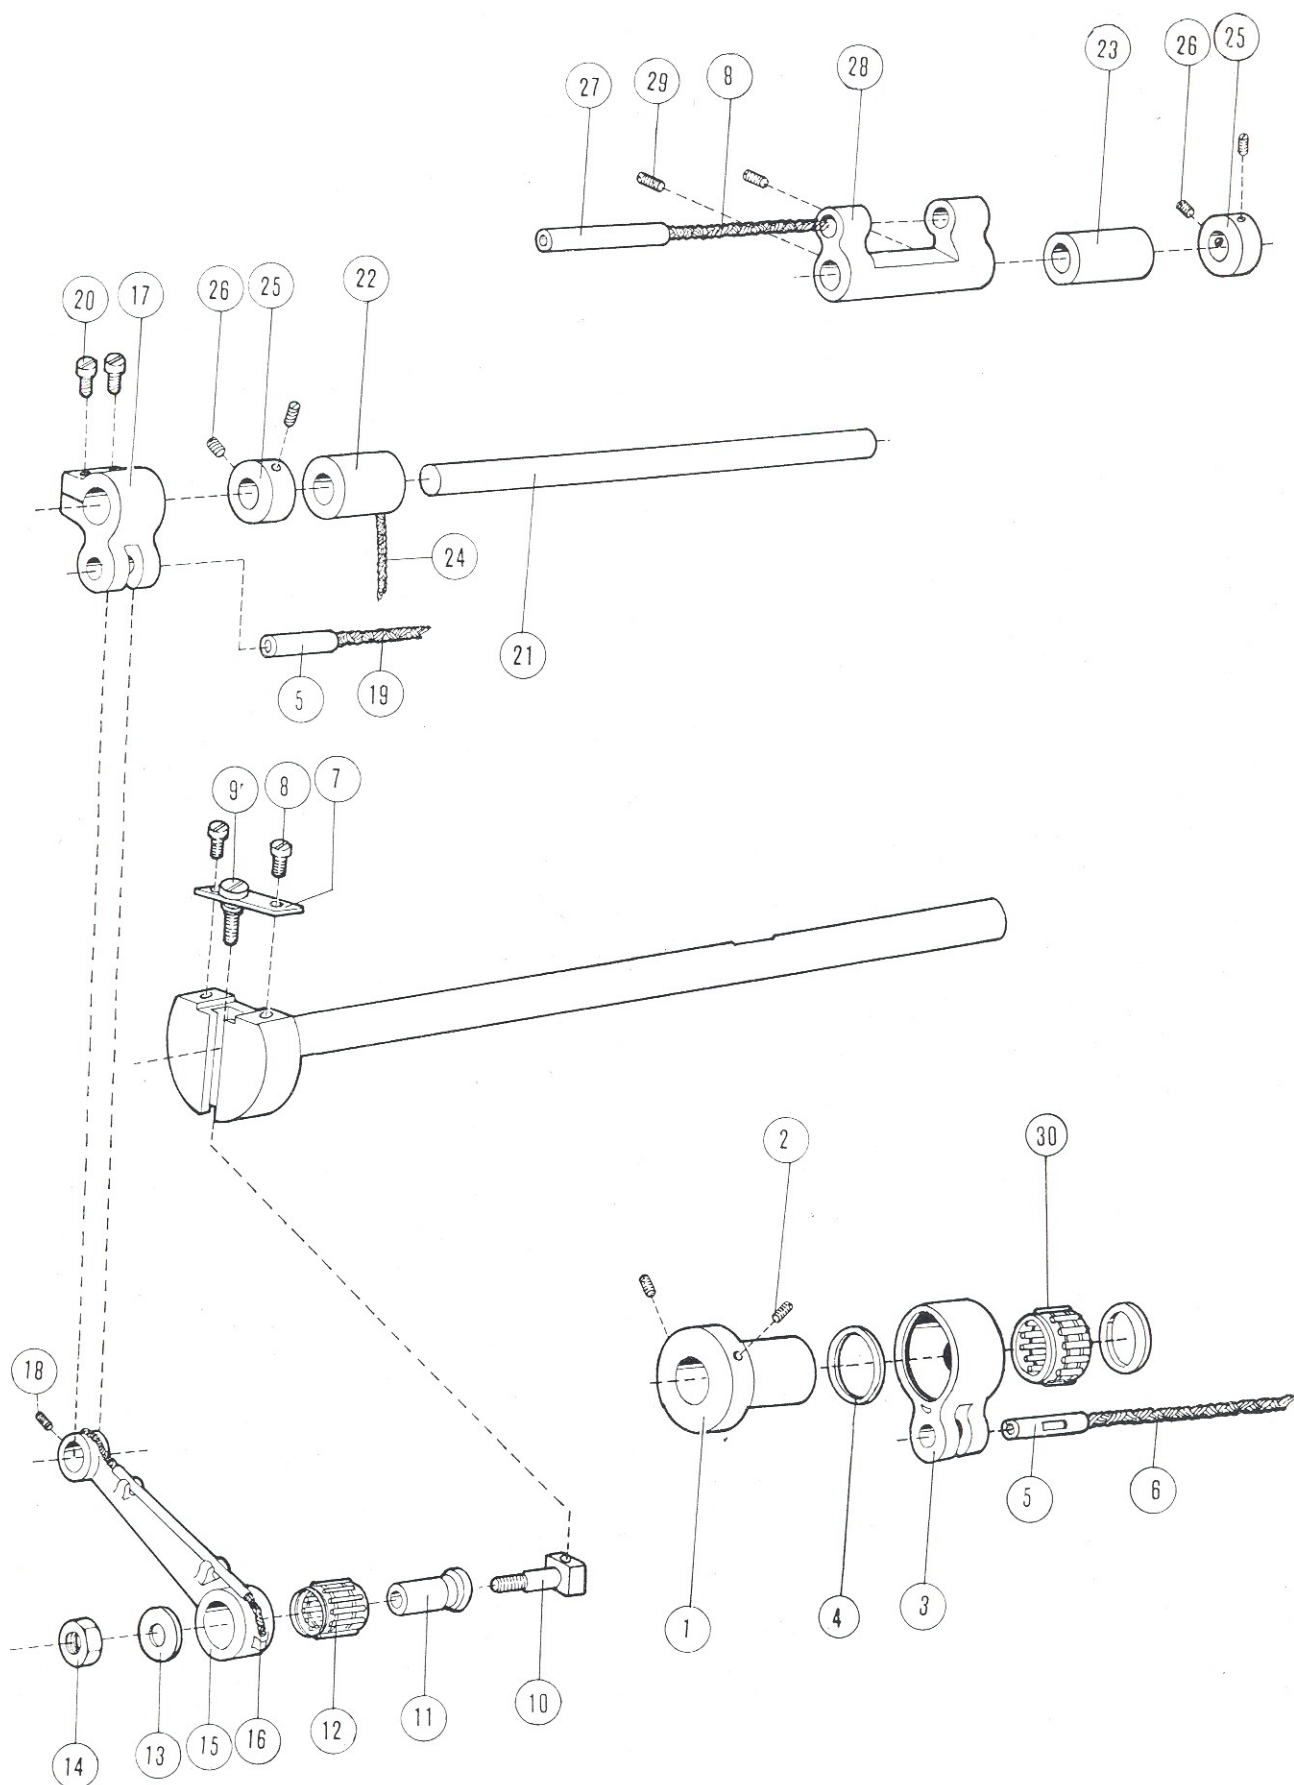

8. Feed &. Feed Lifting Mechanism(2)


NO.	Ref. NO.	Description	QT.
1	8A4-013	Feed lifting cam	1
2	GB74019	Set screw	2
3	8A4-014	Feed lifting link	1
4	8A4-015	Collar	2
5	8A4-017	Pin	1
	8A4-017	Pin	1
6	8A3-033	Oil wick	1
7	8A4-019	Positioning plate	1
8	GB66010	Screw	2
9	8A4-020	Adjusting screw	1
10	8A4-021	Feed regulating slide block	1
11	8A4-022	Slide block bushing	1
12	8A4-023C	Needle bearing assy.	1
	8A4-023C1	Needle roller	12
	8A4-023C2	Needle roller holder	1
13	BQ10028	Washer	1
14	GB52007	Nut	1
15	8A4-025D	Feed connecting rod assy.	1
	8A4-025D1	Feed connecting rod	1
	8A4-025D2	Oil pipe	1
16	8A3-033	Oil wick	1
17	8A4-026	Feed crank	1
18	GB74007	Set screw	1
19	8A3-033	Oil wick	1
	8A3-033	Oil wick	1
20	8A4-058	Screw	2
21	8A4-027	Feed rock shaft	1
22	8A4-028	Front bushing for feed rock shaft	1
23	8A4-028	Back bushing for feed rock shaft	1
24	8A3-033	Oil wick	1
25	8A4-029	Collar	2
26	GB74017	Set screw	4
27	8A4-032	Feed bar shaft	1
28	8A4-030	Feed bar crank	1
29	GB74030	Set screw	2
30	8A4-016B	Needle bearing assy.	1
	8A4-016B1	Needle roller	16
	8A4-016B2	Needle roller holder	1

9

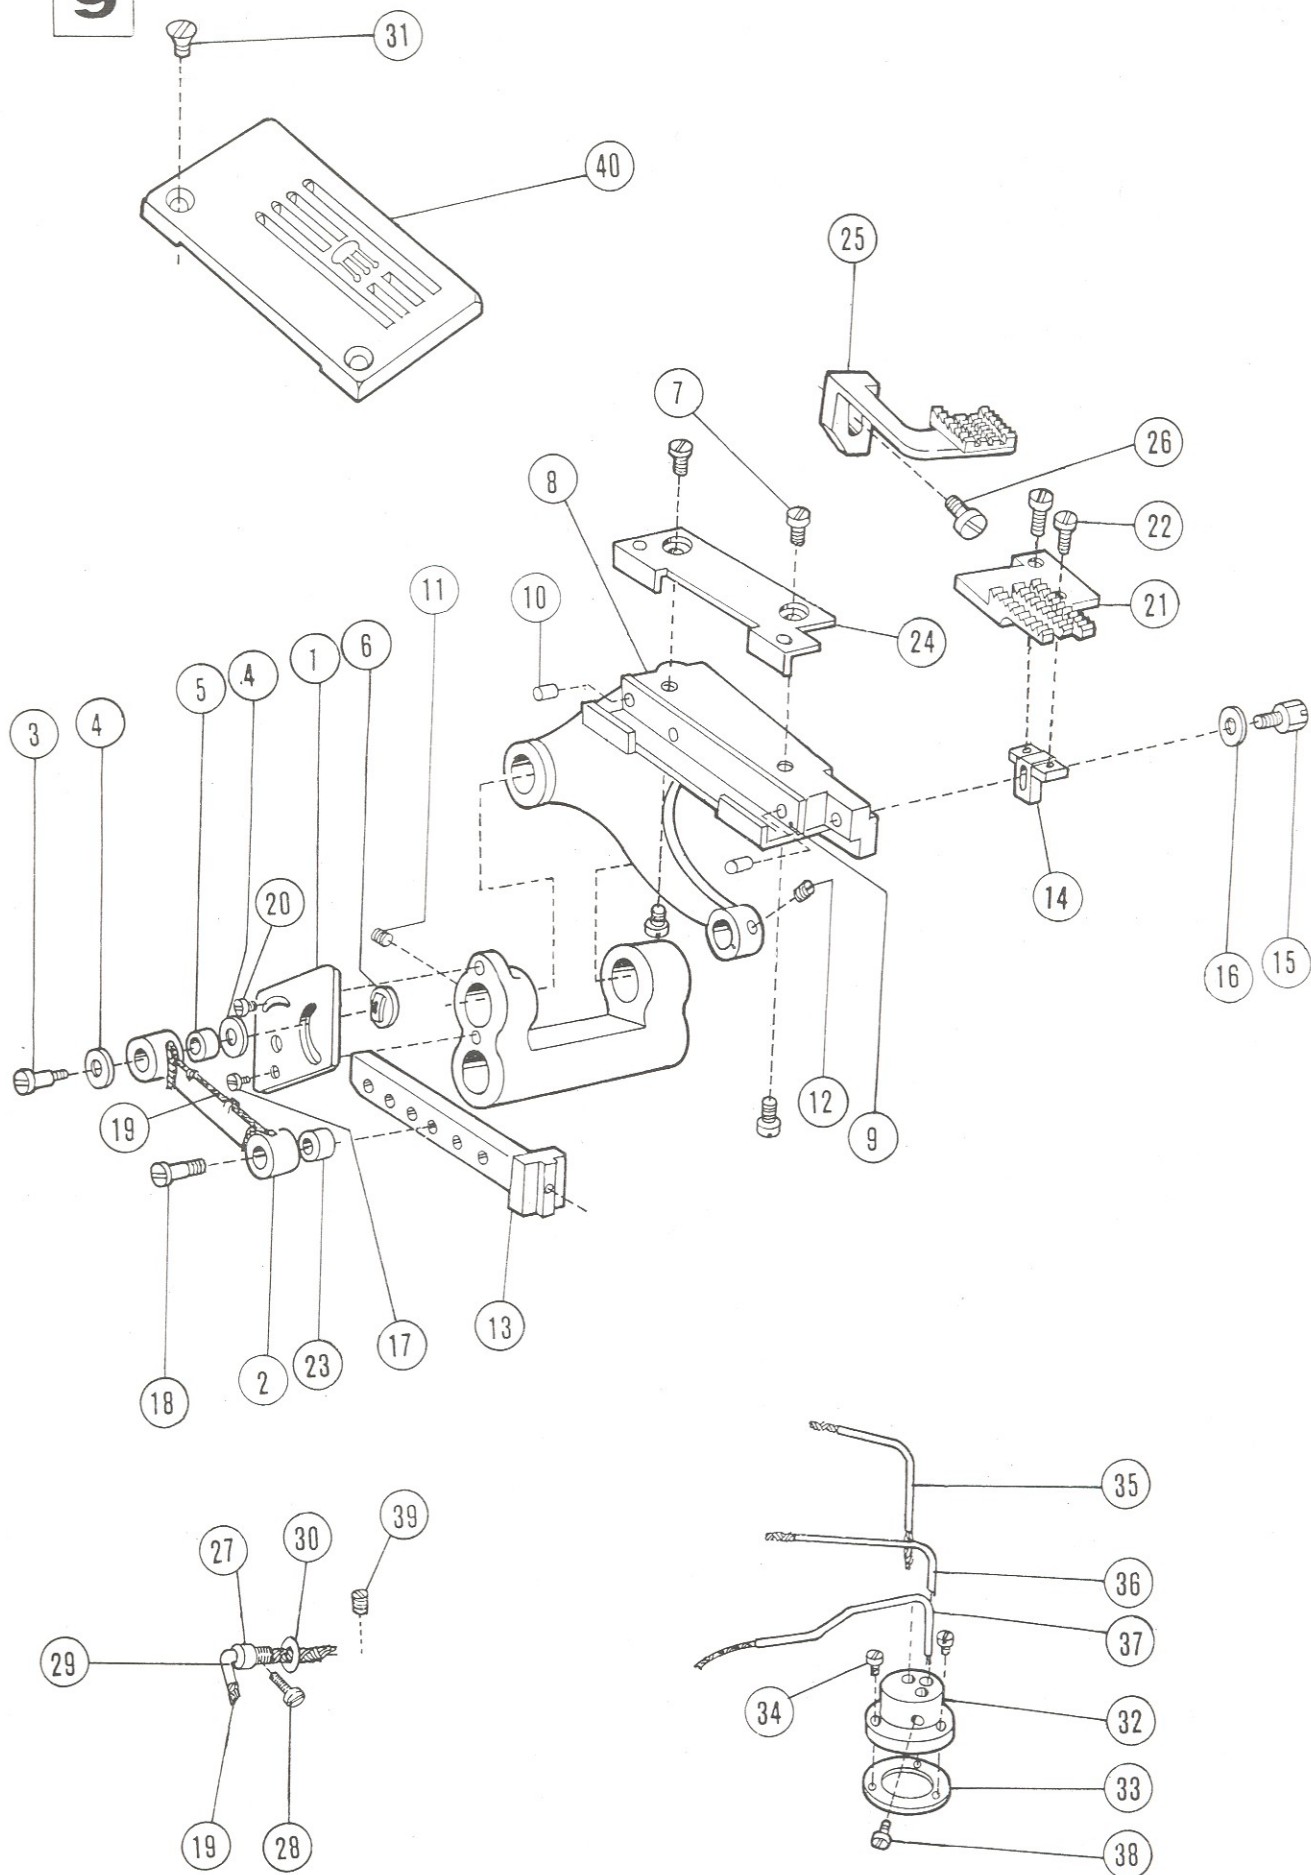


9. Feed &. Feed Lifting Mechanism(3)

NO.	Ref. NO.	Description	QT.
1	8A4-031	Regulating plate	1
2	8A4-033	Differential feed bar driving connection	1
3	GB29012	Adjusting screw	1
4	BQ10019	Washer	2
5	8A4-034	Roller	1
6	BL10007	Nut	1
7	BS10020	Screw	4
8	8A4-041	Feed bar	1
9	8A4-042	Shim plate	1
10	8A4-043	Pin	2
11	GB74018	Set screw	1
12	GB66010	Set screw	1
13	8A4-036	Slide block for differential feed dog	1
14	8A4-045	Feed bar carrier	1
15	8A4-046	Screw	1
16	BQ10017	Washer	1
17	8A4-056	Screw	1
18	8A4-057	Screw	1
19	8A3-033	Oil wick	1
	8A3-033	Oil wick	1
	8A3-033	Oil wick	1
	8A3-033	Oil wick	1
	8A3-033	Oil wick	1
	8A3-033	Oil wick	1
	8A3-033	Oil wick	1
20	GB66022	Adjusting screw	1
21	8A4-044	Feed dog	1
22	GB66010	Screw	2
23	8A4-037	Roller	1
24	8A4-038	Guide plate	2
25	8A4-040	Differential feed dog	1
26	GB66015	Screw	1
27	8A4-047	Bushing for oil pipe	1
28	GB66007	Set screw	1
29	8A4-048	Oil pipe	1
30	8A4-049	Washer	1
31	GB69005	Screw	2
32	8A4-050	Oil pipe socket	1
33	8A4-051	Oil seal	1
34	GB66016	Screw	3
35	8A4-052	Oil pipe	1
36	8A4-053	Oil pipe	1
37	8A4-054	Oil pipe	1
38	GB66008	Set screw	3
39	GB74026	Adjusting screw	1
40	8A4-055	Throat plate	1

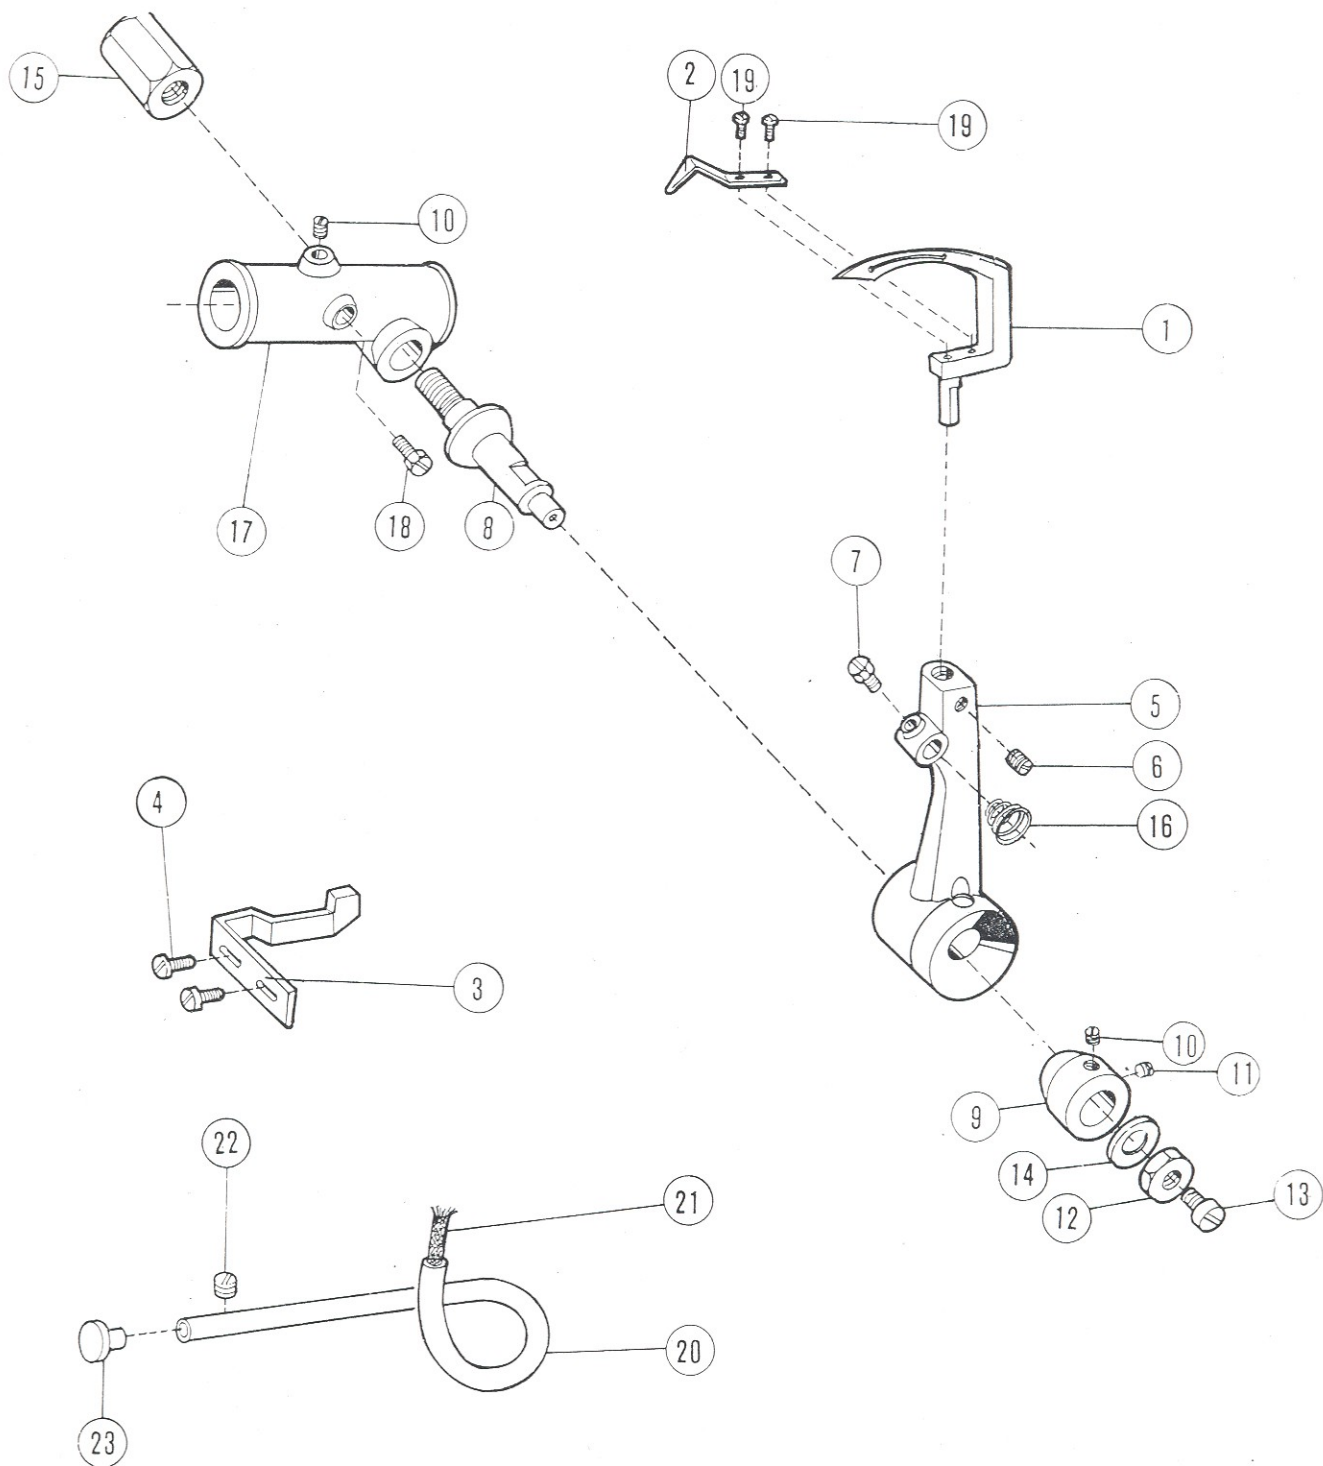


10. Looper Mechanism(1)

NO.	Ref. NO.	Description	QT.
1	8A5-044	Looper	
2	8A5-002	Thread guard	
3	8A5-001	Needle guard	
4	GB66015	Screw	
5	8A5-003	Looper holder	
6	BS10046	Set screw	
7	GB29009	Set screw	
8	8A5-005	Looper holder shaft	
9	8A5-006	Collar	
10	GB74017	Set screw	
	GB74017	Set screw	
11	BG74015	Set screw	
12	GB52006	Nut	
13	BS10026	Set screw	
14	BQ10024	Washer	
15	8A5-045	Nut	
16	8A5-043	Stop spring	
17	8A5-007	Looper holder crank	
18	8A5-008	Set screw	
19	GB66008	Screw	
20	8A5-041	Oil pipe	
21	8A3-033	Oil wick	
	8A3-033	Oil wick	
22	GB74028	Set screw	
23	8A5-042	Seal plug	

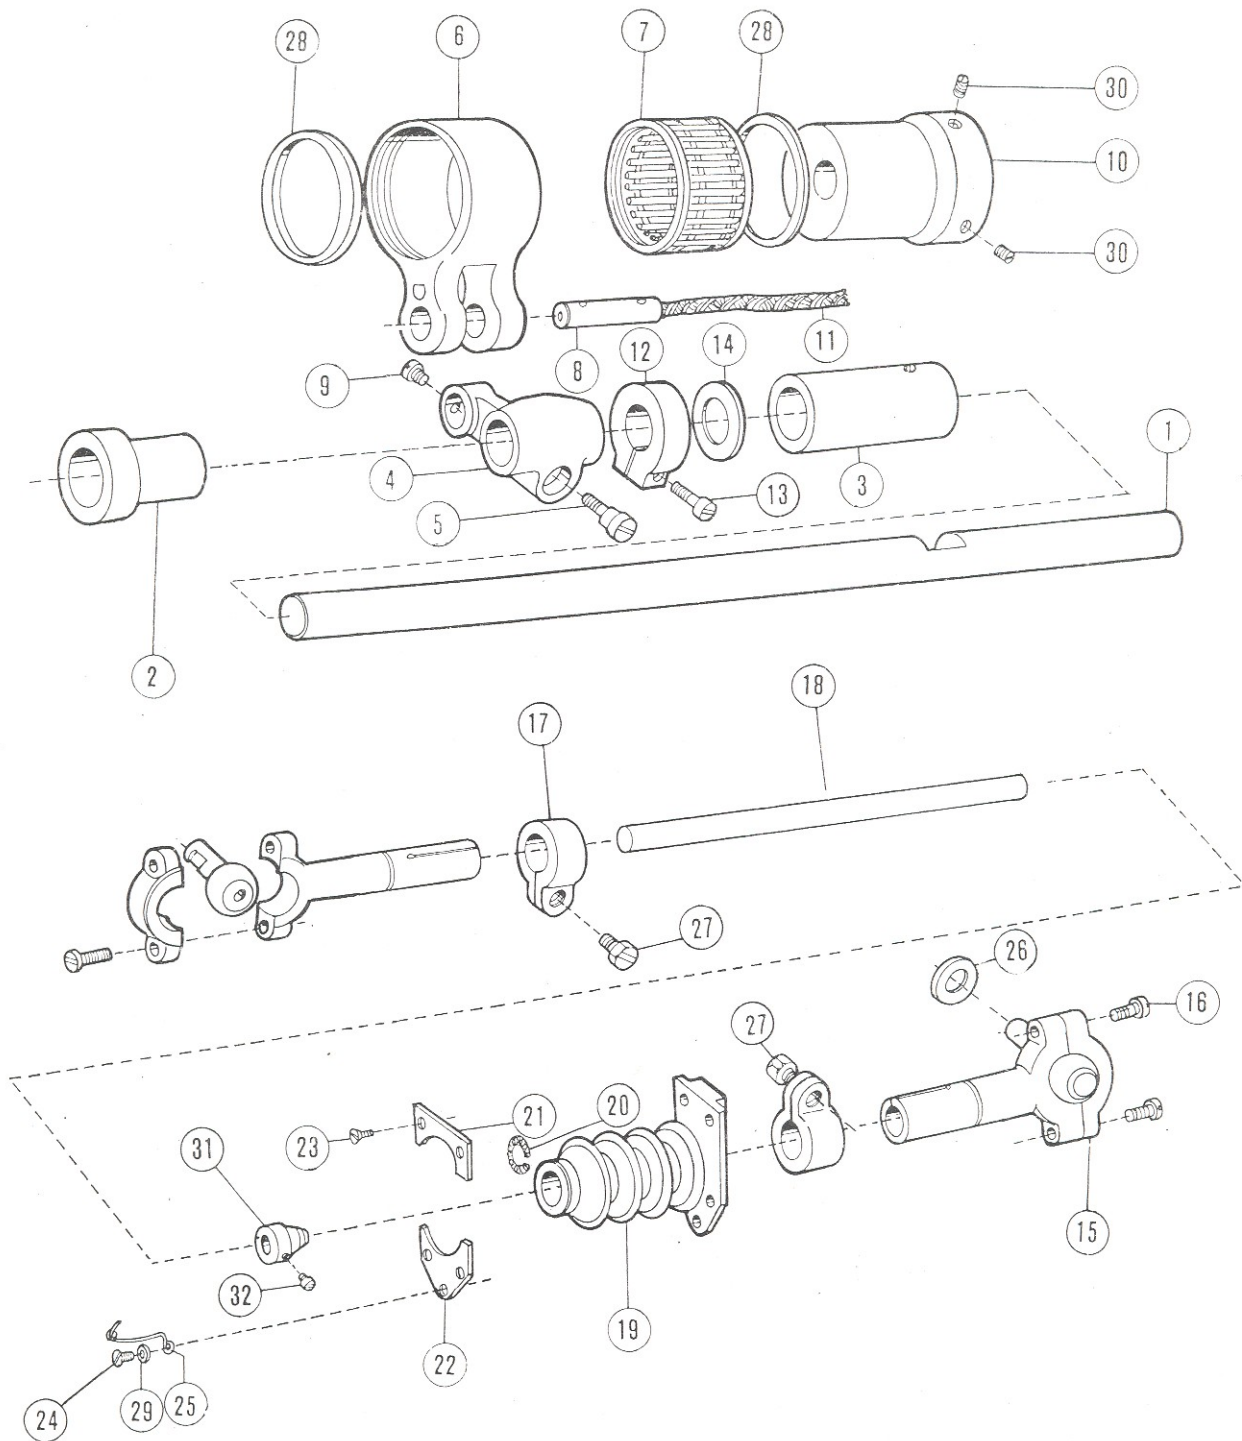

11. Looper Mechanism(2)


NO.	Ref. NO.	Description	QT.
1	8A5-009	Looper holder crank shaft	1
2	8A5-010	Front bushing	1
3	8A5-011	Back bushing	1
4	8A5-012	Crank shaft crank	1
5	BS30009	Set screw	1
6	8A4-014	Link for crank shaft crank	1
7	8A4-016B	Needle bearing assy.	1
	8A4-016B1	Needle roller	1
	8A4-016B2	Needle roller holder	16
8	8A4-017	Pin	1
9	GB66008	Screw	1
10	8A4-013	Link cam	1
11	8A3-033	Oil wick	1
12	8A5-014	Collar	1
13	BS30011	Set screw	1
14	BQ10048	Washer	1
15	43T5-006C1	Connecting rod assy.	2
	43T5-006C2	Ball stud	2
	43T5-006C1a	Connecting rod	2
	43T5-006C1b	Cap for connecting rod	2
16	43T5-006C1c	Screw	4
17	43T5-007	Adjusting collar	2
18	43T5-009	Adjusting rod	1
19	8A5-020	Oil guard sleeve	1
20	8A5-021	Lock spring	1
21	8A5-022	Upper stop plate	1
22	8A5-023	Lower stop plate	1
23	BS10017	Screw	4
24	BS10005	Screw	1
25	8A5-024	Thread finger	1
26	8A5-026	Washer	1
27	43T5-008	Set screw	2
28	8A4-015	Thrust ring	2
29	BQ10003	Washer	1
30	GB74019	Set screw	2
31	65T-001	Inner sleeve	1
32	GB66001	Set screw	1

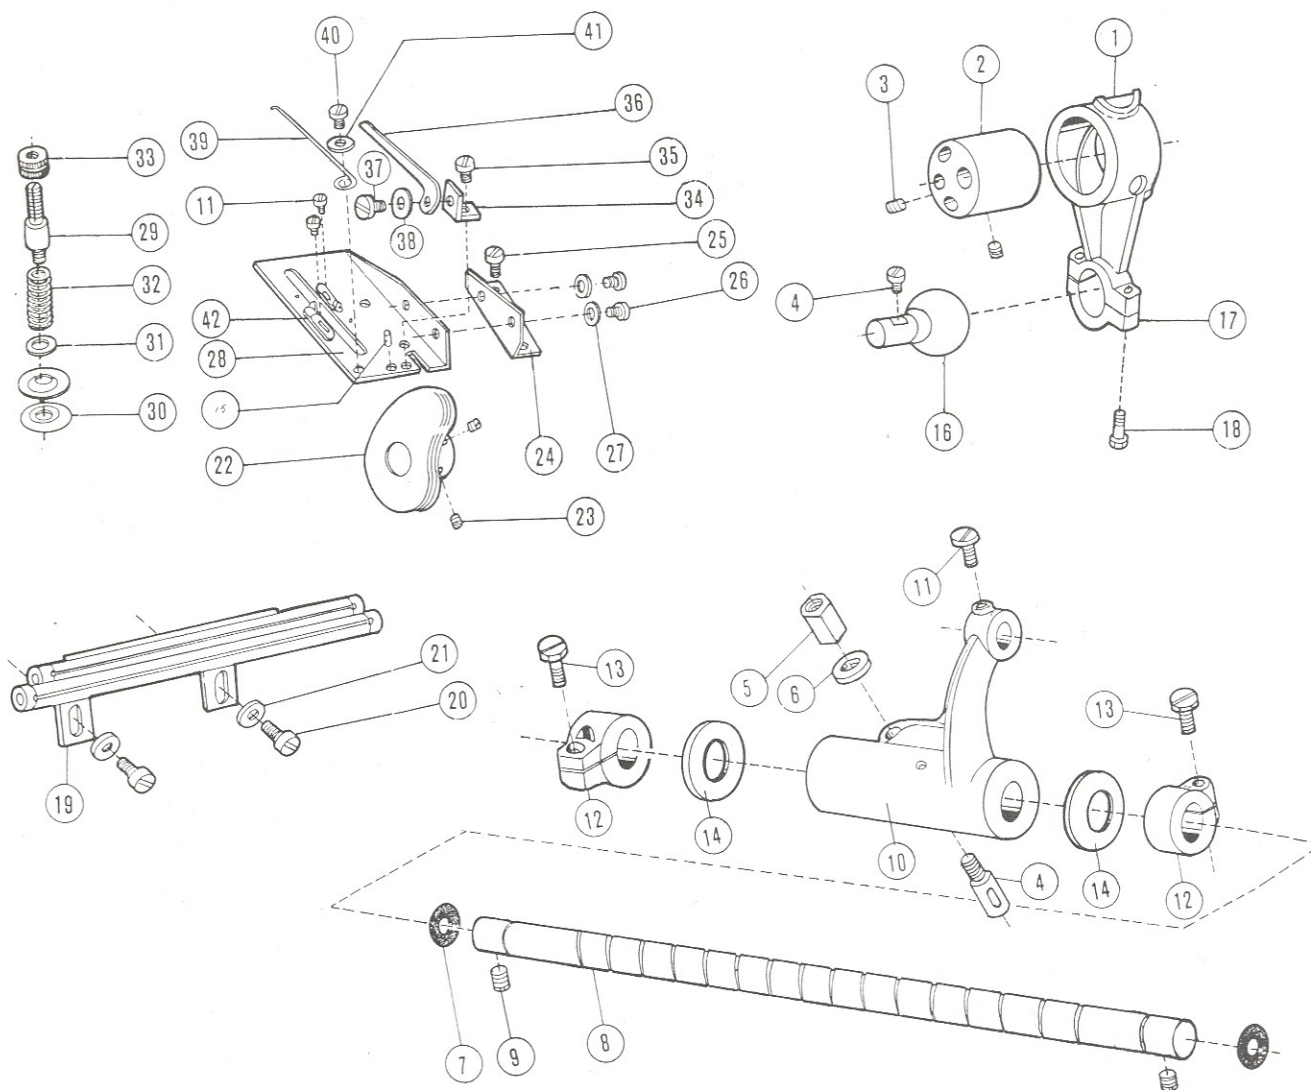

NO.	Ref. NO.	Description	QT.
36	8A5-037	Upper thread guide	1
37	GB29002	Screw	1
38	BQ10002	Washer	1
39	8A5-038	Lower thread guide	1
40	GB65002	Screw	1
41	BQ10002	Washer	1
42	8A5-039	Thread guide ring	2

12. Looper Mechanism(3)


NO.	Ref. NO.	Description	QT.
1	8A5-031C	Connecting rod assy.	1
	8A5-031C1	Connecting rod	1
2	8A5-032	Eccentric cam	1
3	GB74029	Set screw	2
4	8A5-046	Clamp screw	1
5	8A5-030	Clamp nut	1
6	BQ10018	Washer	1
7	8A5-029	Oil seal	2
8	8A5-040	Looper rock shaft	1
9	GB74035	Set screw	2
10	8A5-027	Crank for looper rock shaft	1
11	GB66001	Screw	2
12	8A5-014	Collar	2
13	BS30011	Set screw	2
14	BQ10048	Washer	2
15	85036F2	Pin	1
16	8A5-028	Ball stud	1
17	8A5-031C2	Connecting rod cap	1
18	43T5-001A1a3	Screw	2
19	8A5-025B	Thread guide tube assy.	1
	8A5-025B1	Setting plate	1
	8A5-025B2	Upper thread guide tube	1
	8A5-025B2	Lower thread guide tube	1
	8A5-025B3	Tube plug	4
20	GB66015	Screw	2
21	BQ10008	Washer	2
22	8A5-033D	Looper thread take-up cam assy.	1
	8A5-033D1	Cam disc	2
	8A5-033D2	Cam boss	1
	8A5-033D3	Spacer ring	1
23	GB74015	Set screw	2
24	8A5-034	Bracket for cam holder	1
25	GB66015	Screw	2
26	GB29001	Screw	2
27	BQ10001	Washer	2
28	8A5-035E	Cam holder assy.	
	8A5-035E1	Cam holder	1
	8A5-035E2	Thread guide spring	1
29	8A5-035E3	Tension stud	1
30	8A5-068	Tension disc	2
31	BQ10025	Washer	1
32	8A5-035E5	Tension spring	1
33	8A5-035E4	Tension nut	1
34	8A5-036F	Upper thread guide bracket assy.	1
	8A5-036F1	Upper thread guide bracket	1
	8A5-036F2	Pin	1
35	GB29002	Screw	1

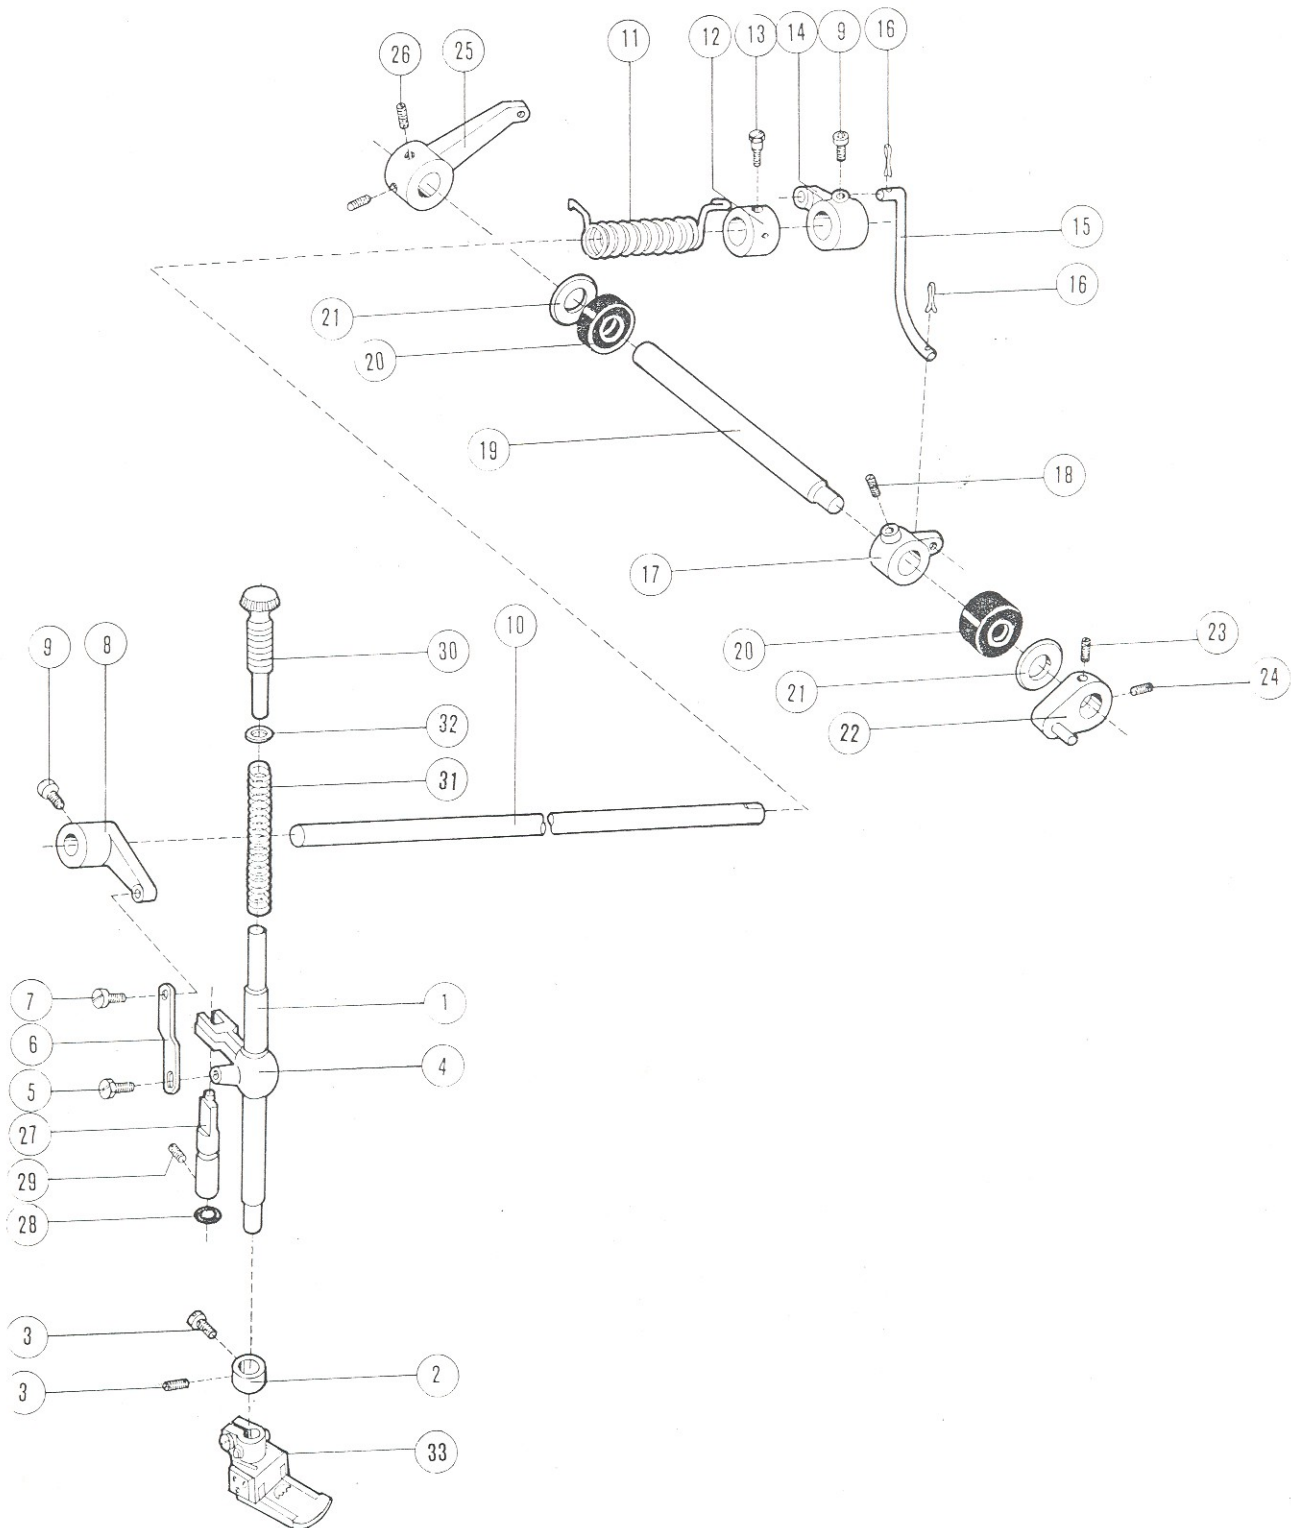

13. Presser Foot Mechanism

NO.	Ref. NO.	Description	QT.
1	8A6—002	Presser bar	1
2	8A6—003	Collar	1
3	BS10002	Set screw	2
4	8A6—004	Stopper	1
5	GB29007	Screw	1
6	8A6—005	Presser foot lifter link	1
7	BS20020	Screw	1
8	8A6—006	Foot lifter link lever	1
9	GB70001	Set screw	1
	GB70001	Set screw	1
10	8A6—007	Presser foot lifter shaft	1
11	8A6—008	Spring	
12	8A6—009	Collar	
13	BS30005	Set screw	1
14	8A6—011	Presser foot lifter crank	1
15	8A6—012	Connecting rod	1
16	GB91—76	Cotter pin	2
17	8A6—013	Inner presser foot lifter lever	1
18	GB74030	Set screw	1
19	8A6—014	Thread tension release shaft	1
20	8A6—015B	Oil seal assy.	2
	8A6—015B1	Rubber cup	2
	8A6—016	Spring	2
21	BQ10045	washer	2
22	8A6—017	Tread tension release lever assy.	1
	8A6—018	Pin	1
23	GB74017	Set screw	1
24	GB74015	Set screw	1
25	8A6—019	Presser foot lifter lever	1
26	GB74030	Set screw	2
27	9A6—003	Stopper shaft	1
28	8A6—023	Rubber ring	1
29	GB74032	Screw	1
30	8A6—020	Pressure regulating thumb screw	1
31	8A6—021	Presser spring	1
32	BQ10017	Washer	1
33	43T6—001A	Presser foot assy.	1
	43T6—001A1	Presser foot shoe	1
	43T6—001A2	Spring sole	2
	43T6—001A3	Pin	1
	43T6—001A4	Presser foot spring	1
	GB66008	Screw	1
	43T6—001A5	Pin for presser foot spring	2
	43T6—001A6	Presser foot pin	2
	43T6—001A7	Presser foot connector	1
	BS10004	Set screw	1

14

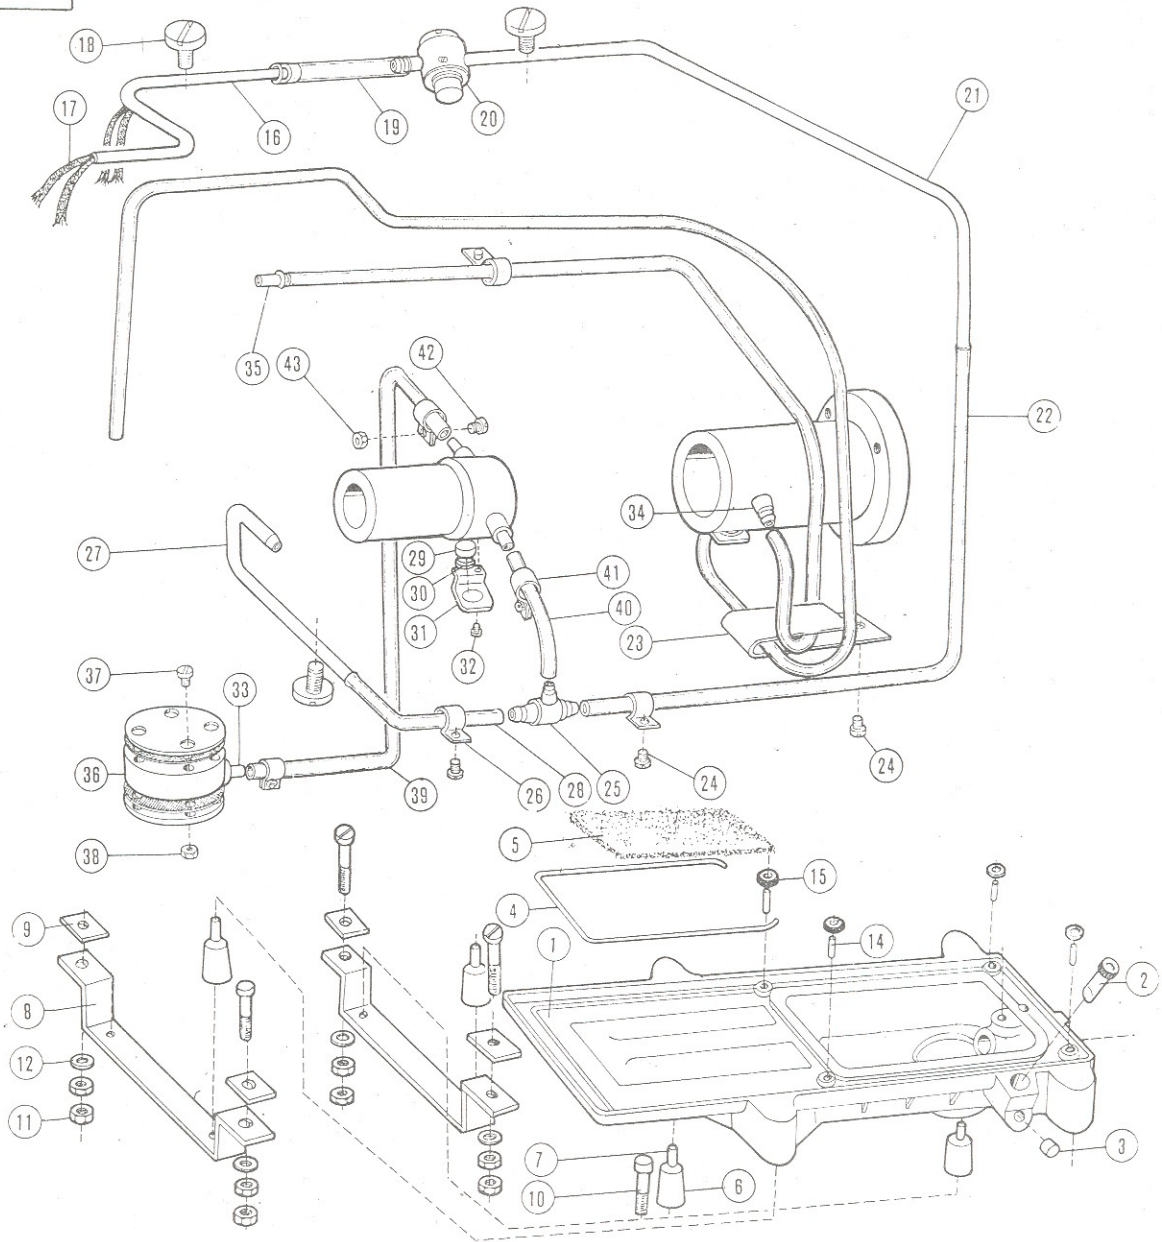



NO.	Ref. NO.	Description	QT.
37	GB29003	Screw	4
38	GB52001	Nut	4
39	52T7-003B4	Oil pipe	1
40	52T7-003B4	Oil outlet pipe	1
41	52T7-003B3	Hose joint clamp	4
42	GB66010	Screw	4
43	GB52001	Nut	4

14. Lubrication Mechanism

NO.	Ref. NO.	Description	QT.
1	8A3—001	Oil reservoir	1
2	8A3—004	Oil gauge	1
3	8A3—005	Plug	1
4	8A3—006	Oil gasket	1
5	8A3—014	Felt	1
6	8A3—015	Rubber cushion	4
7	8A3—016	Rubber cushion pin	4
8	8A3—029C	Holder plate assy.	2
	8A3—029C1	Holder plate	2
	8A3—029C2	Pin	4
9	8A3—030	Rubber pad	4
10	8A3—031	Bolt	4
11	GB52013	Nut	8
12	BQ10047	Washer	4
	(8A3—033)	Oil wick	
14	8A3—039	Pin	4
15	8A3—040	Oil seal ring	4
16	65T3—001	Oil pipe	1
17		Oil wick	1
18	BS10029	Screw	1
	BS10029	Screw	1
	BS10029	Screw	1
19		Oil pipe	1
20	65T3—002A	Oil pipe assy.	1
	GB896—88	C—type ring	1
	GB74002	Stop screw	1
21	65T3—002A3	Oil pipe	1
22		Connecting pipe	1
23	65T3—008	Oil pipe clamp	1
24	GB66012	Screw	1
	GB66012	Screw	3
25	58T7—004B1a	Three—way oil nozzle	1
26	65T3—003	Oil pipe clamp	3
27	65T3—004	Oil pipe	1
28		Connecting pipe	1
29	58T5—009	Plunger	2
30	58T5—010	Plunger spring	2
31	58T5—011	Plunger spring retainer	2
32	GB66008	Screw	2
33	65T3—005	Oil nozzle	3
34	22T4—007C2	Oil nozzle	2
35	65T3—006B	Oil intake pipe assy.	1
	65T3—006B1	Oil intake pipe	1
		Connecting pipe	1
	22T4—007C2	Oil nozzle	1
36	65T3—007	Oil filter assy.	1
	65T3—009	Filter cover	2
	65T3—010	Filter screen	2

15

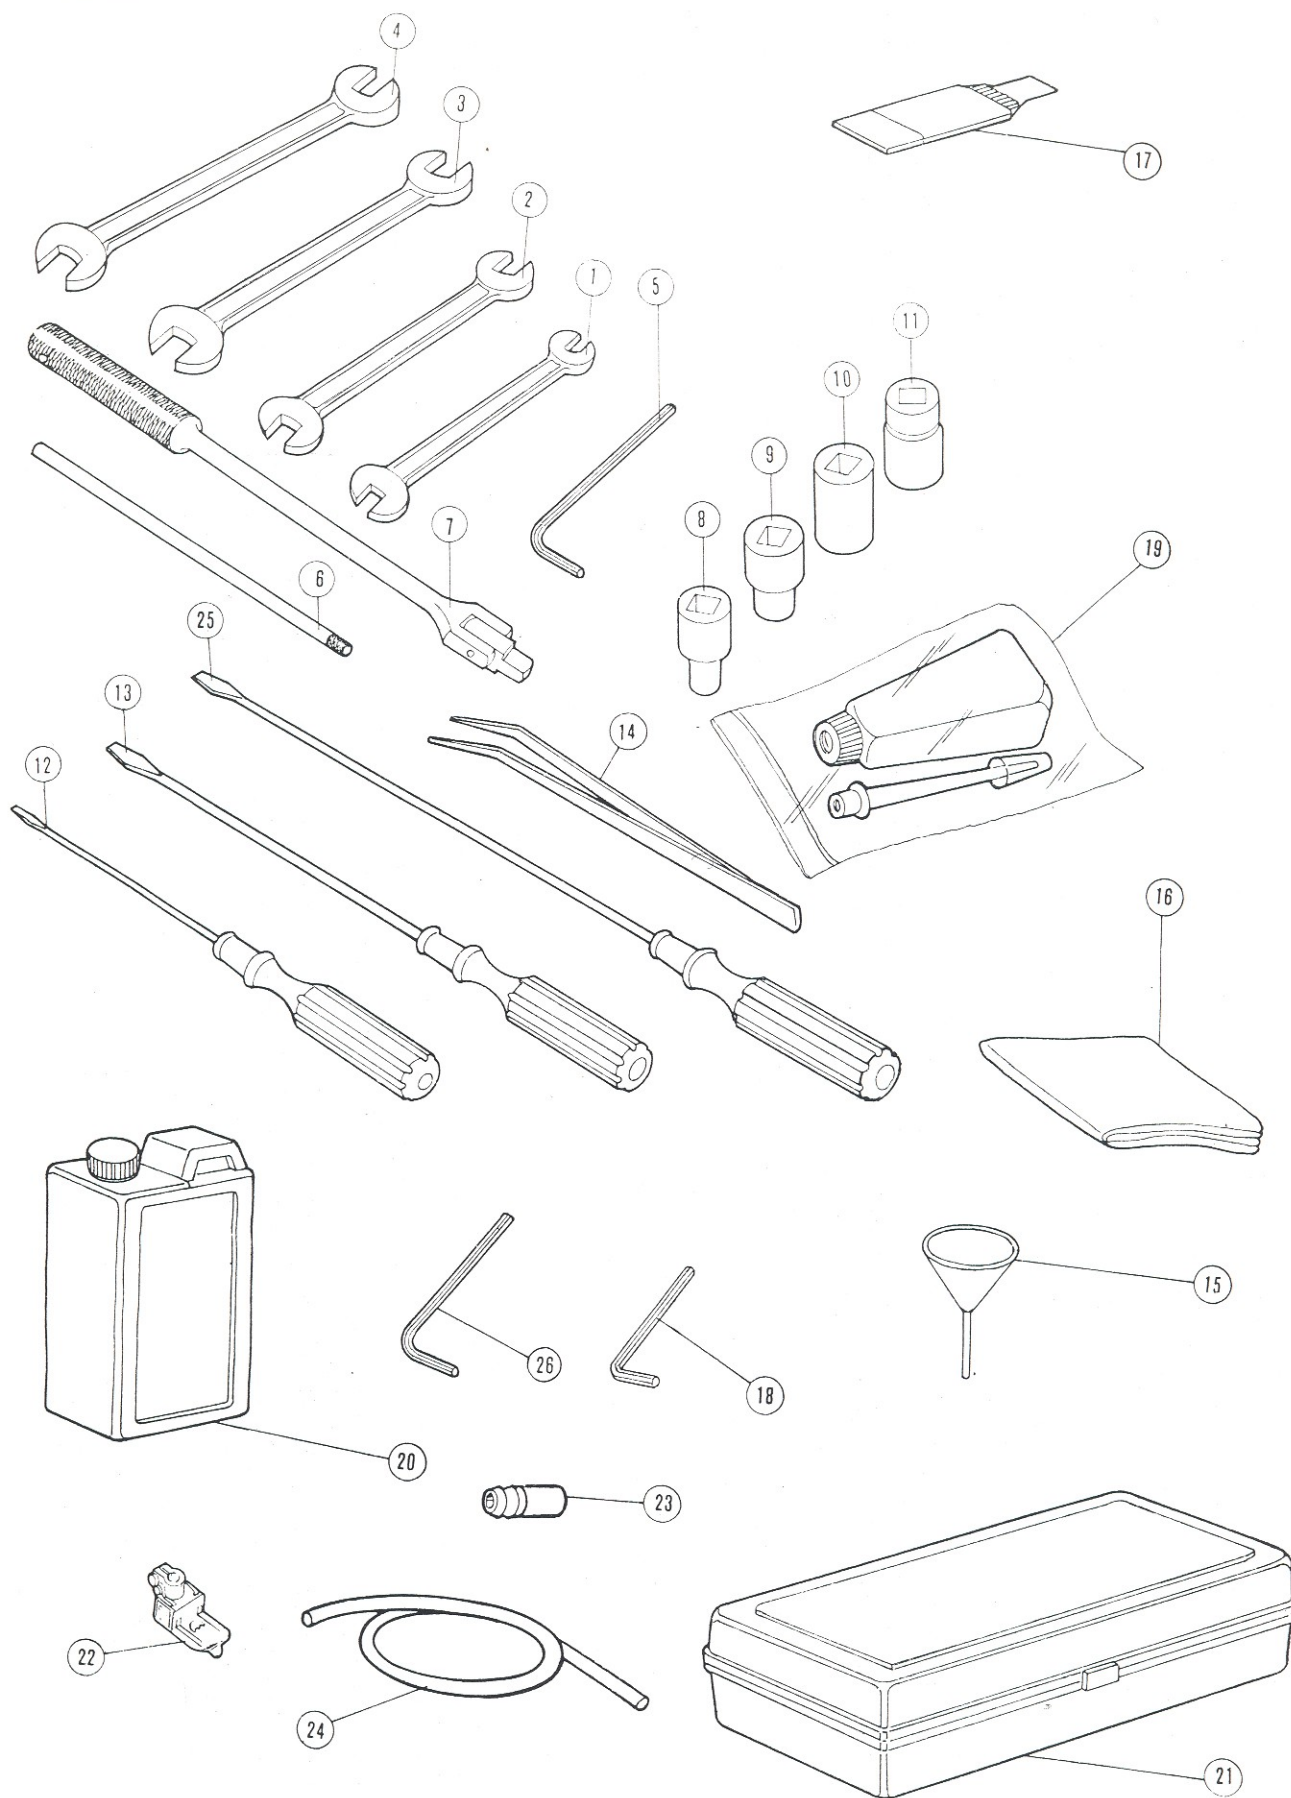

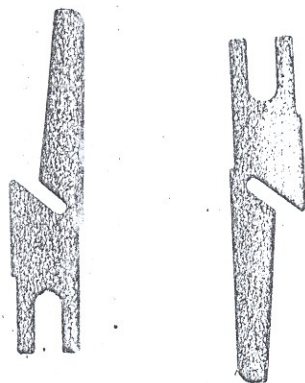

TV/PY/CAL

15. Accessories

NO.	Ref. NO.	Description	QT.
1		Double—end wrench 4×5	1
2		Double—end wrench 6×7	1
3		Double—end wrench 8×10	1
4		Double—end wrench 9×10	1
5		Allen wrench	3
6		Hand lever	1
7		Socket wrench	1
8		Socket	1
9		Socket	1
10		Socket	1
11		Socket	1
12		Screw driver	1
13		Screw driver	1
14		Tweezers	1
15		Funnel	1
16		Machine cover	1
17		Needle	1 pack
18		Allen wrench	1
19	22T9—011	Oil pot	1
20	22T9—017	Oil tank	1
21	22T9—008	Accessory box	1
22	8A6—001A	Presser foot assy.	1
23	22T4—007C2	Oil nozzle	2
24		Oil drain hose	0. 3m
25		Screw driver	1
26		Allen wrench (4mm, 5mm)	1 each
27		Silicone oil pot	1



CHINA TYPICAL SEWING MACHINE CO.