

SIRUBA

UF916-TRIMMER

transporte triple plano. 2 Aqs.

PARTS LIST FOR UA GROUP 系列圖 2/17

UA-K

UF916

 
A

B


C

D


E

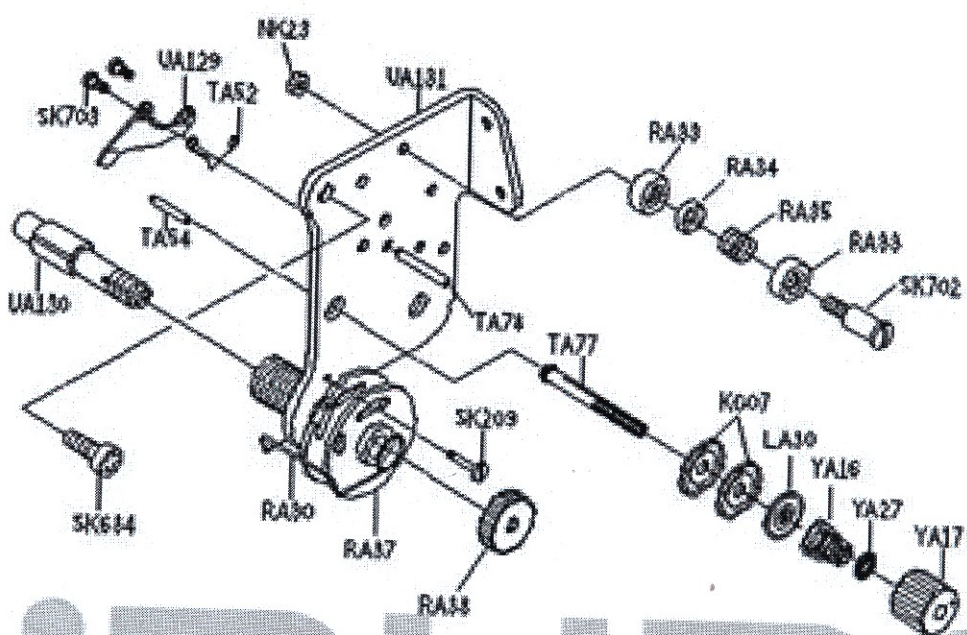

UF916 TRIMMER

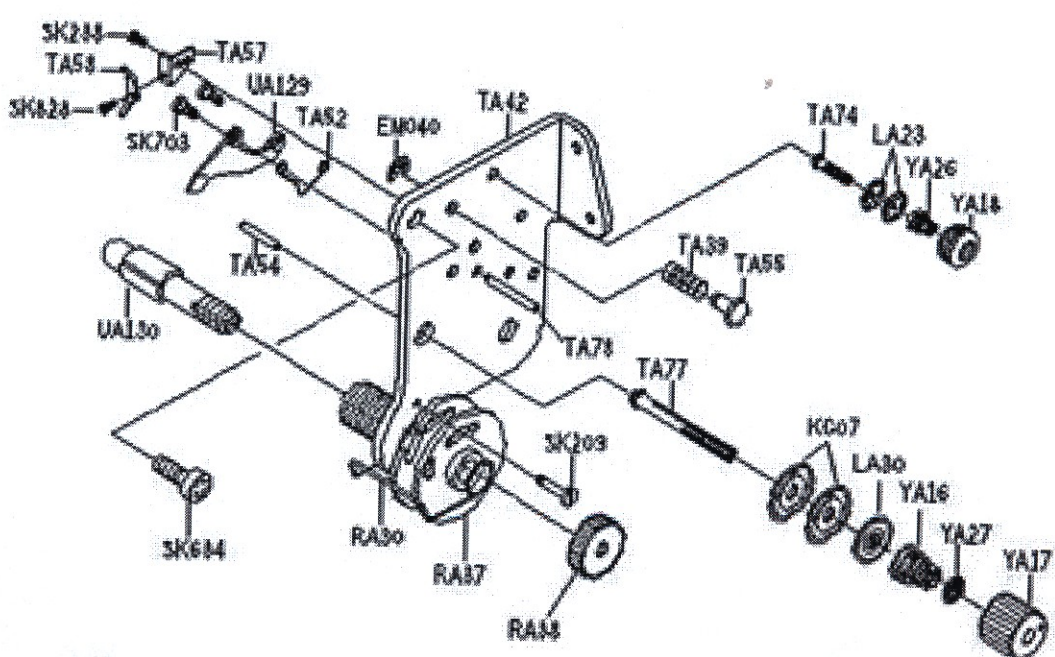 


PARTS LIST FOR UB GROUP 系列圖 8/17

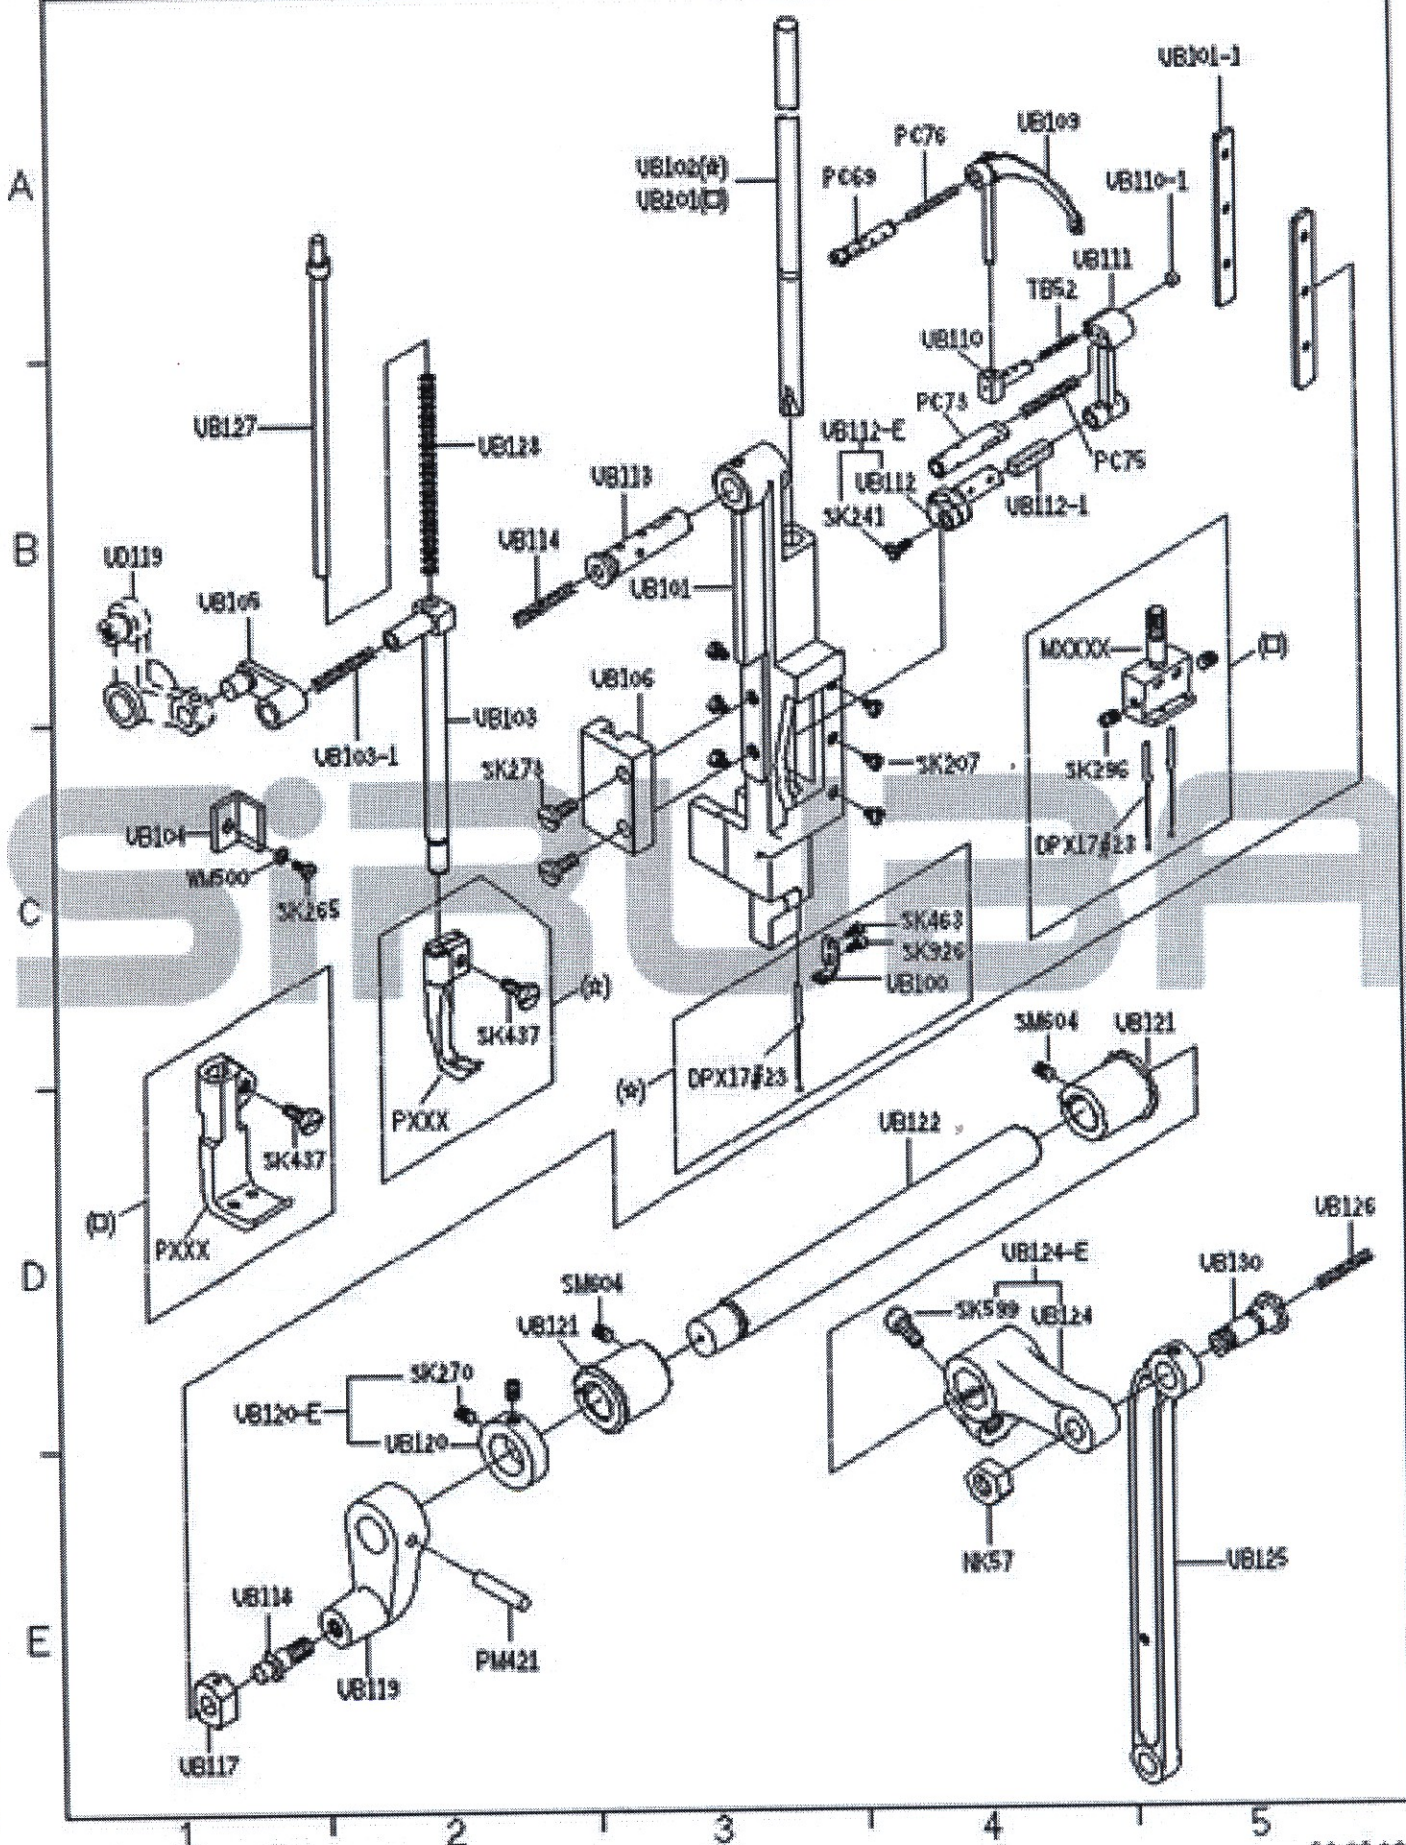 


FOR ALL UF916/UF926
 *USE FOR UF916/UF916 TRIMMER
 OUSE FOR UF926/UF926 TRIMMER

 
PARTS LIST FOR UC GROUP 系列圖 4/17

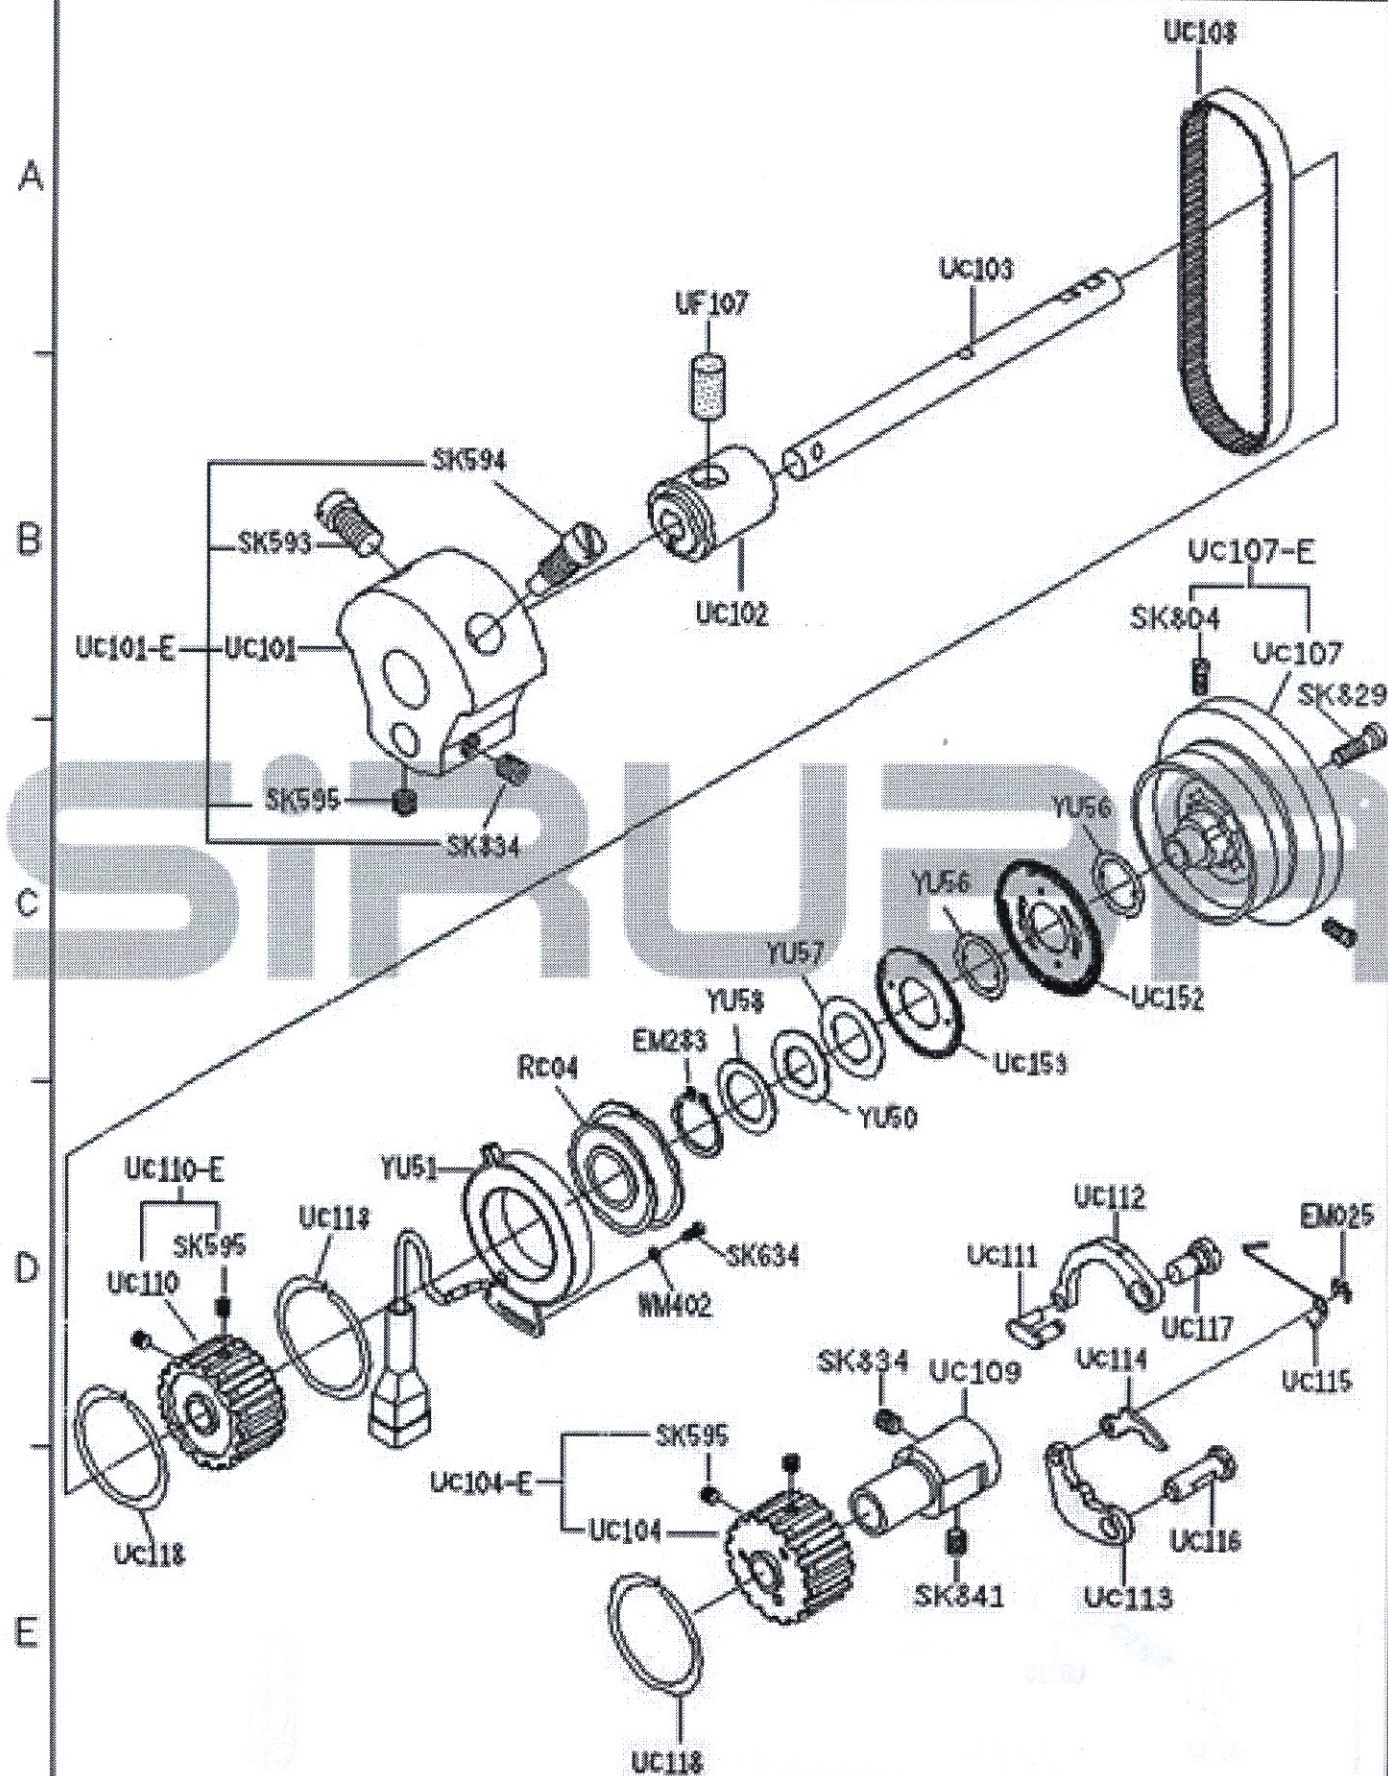


PARTS LIST FOR UE GROUP 系列 6/17

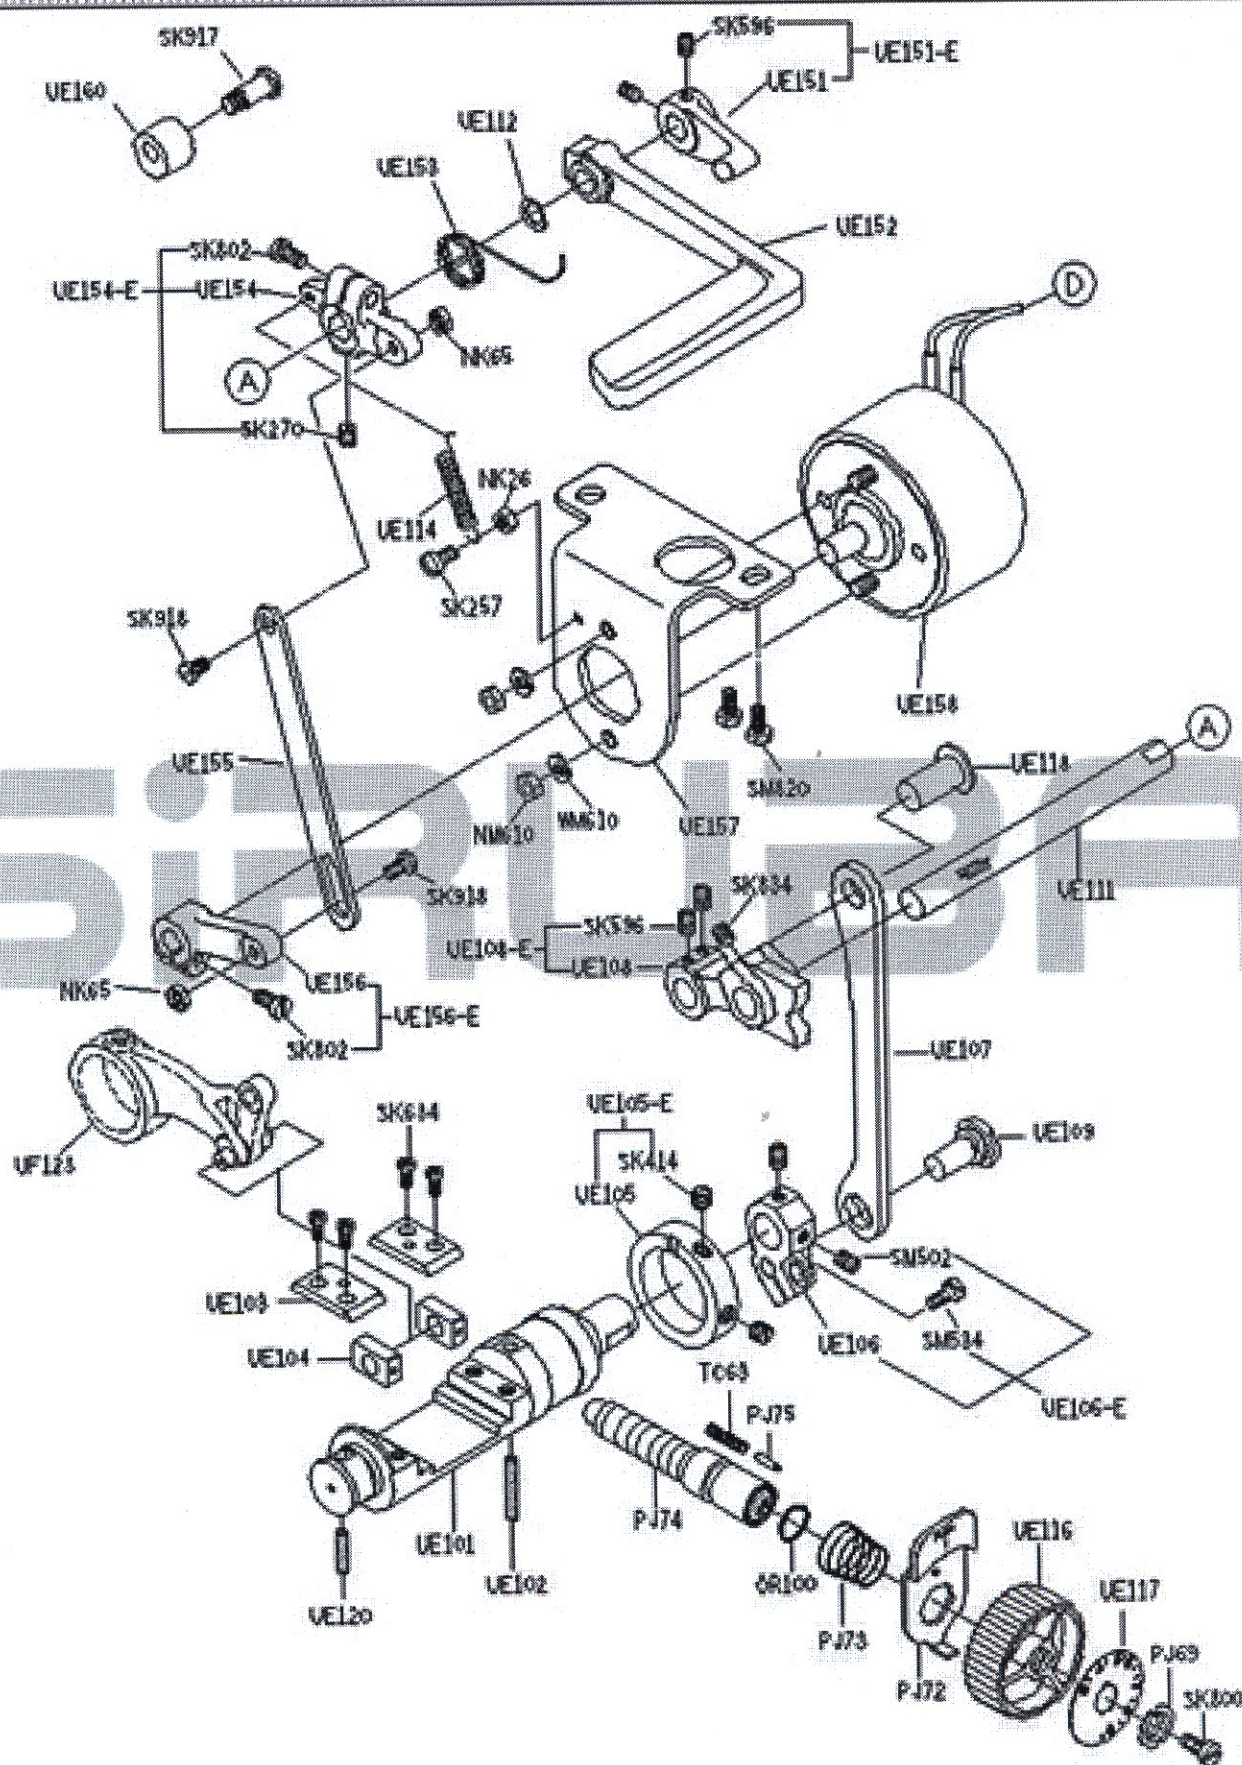 

PARTS LIST FOR UE GROUP 系列圖 7/17

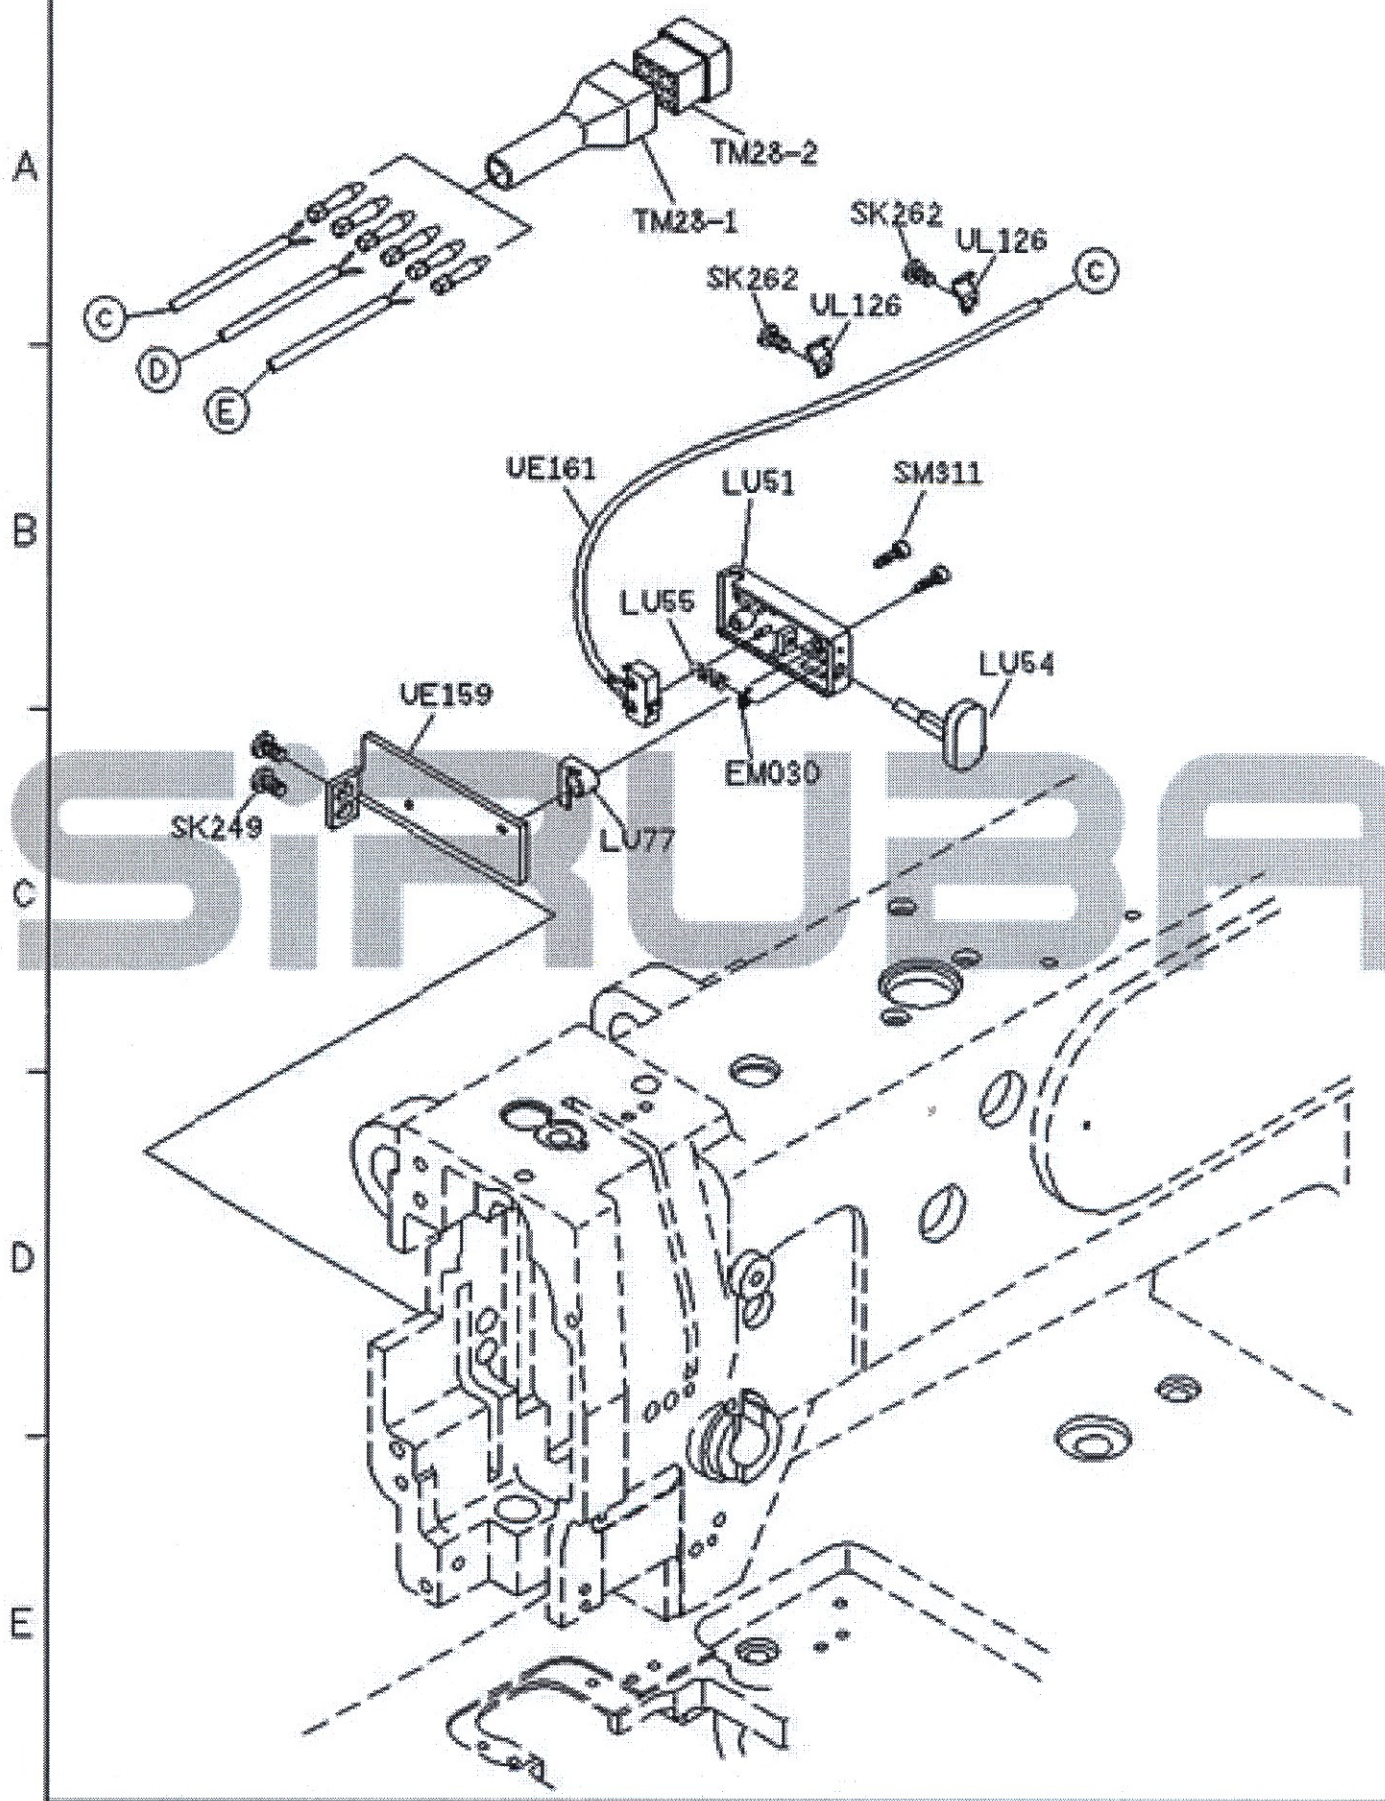 

PARTS LIST FOR UG GROUP 系列圖 9/17

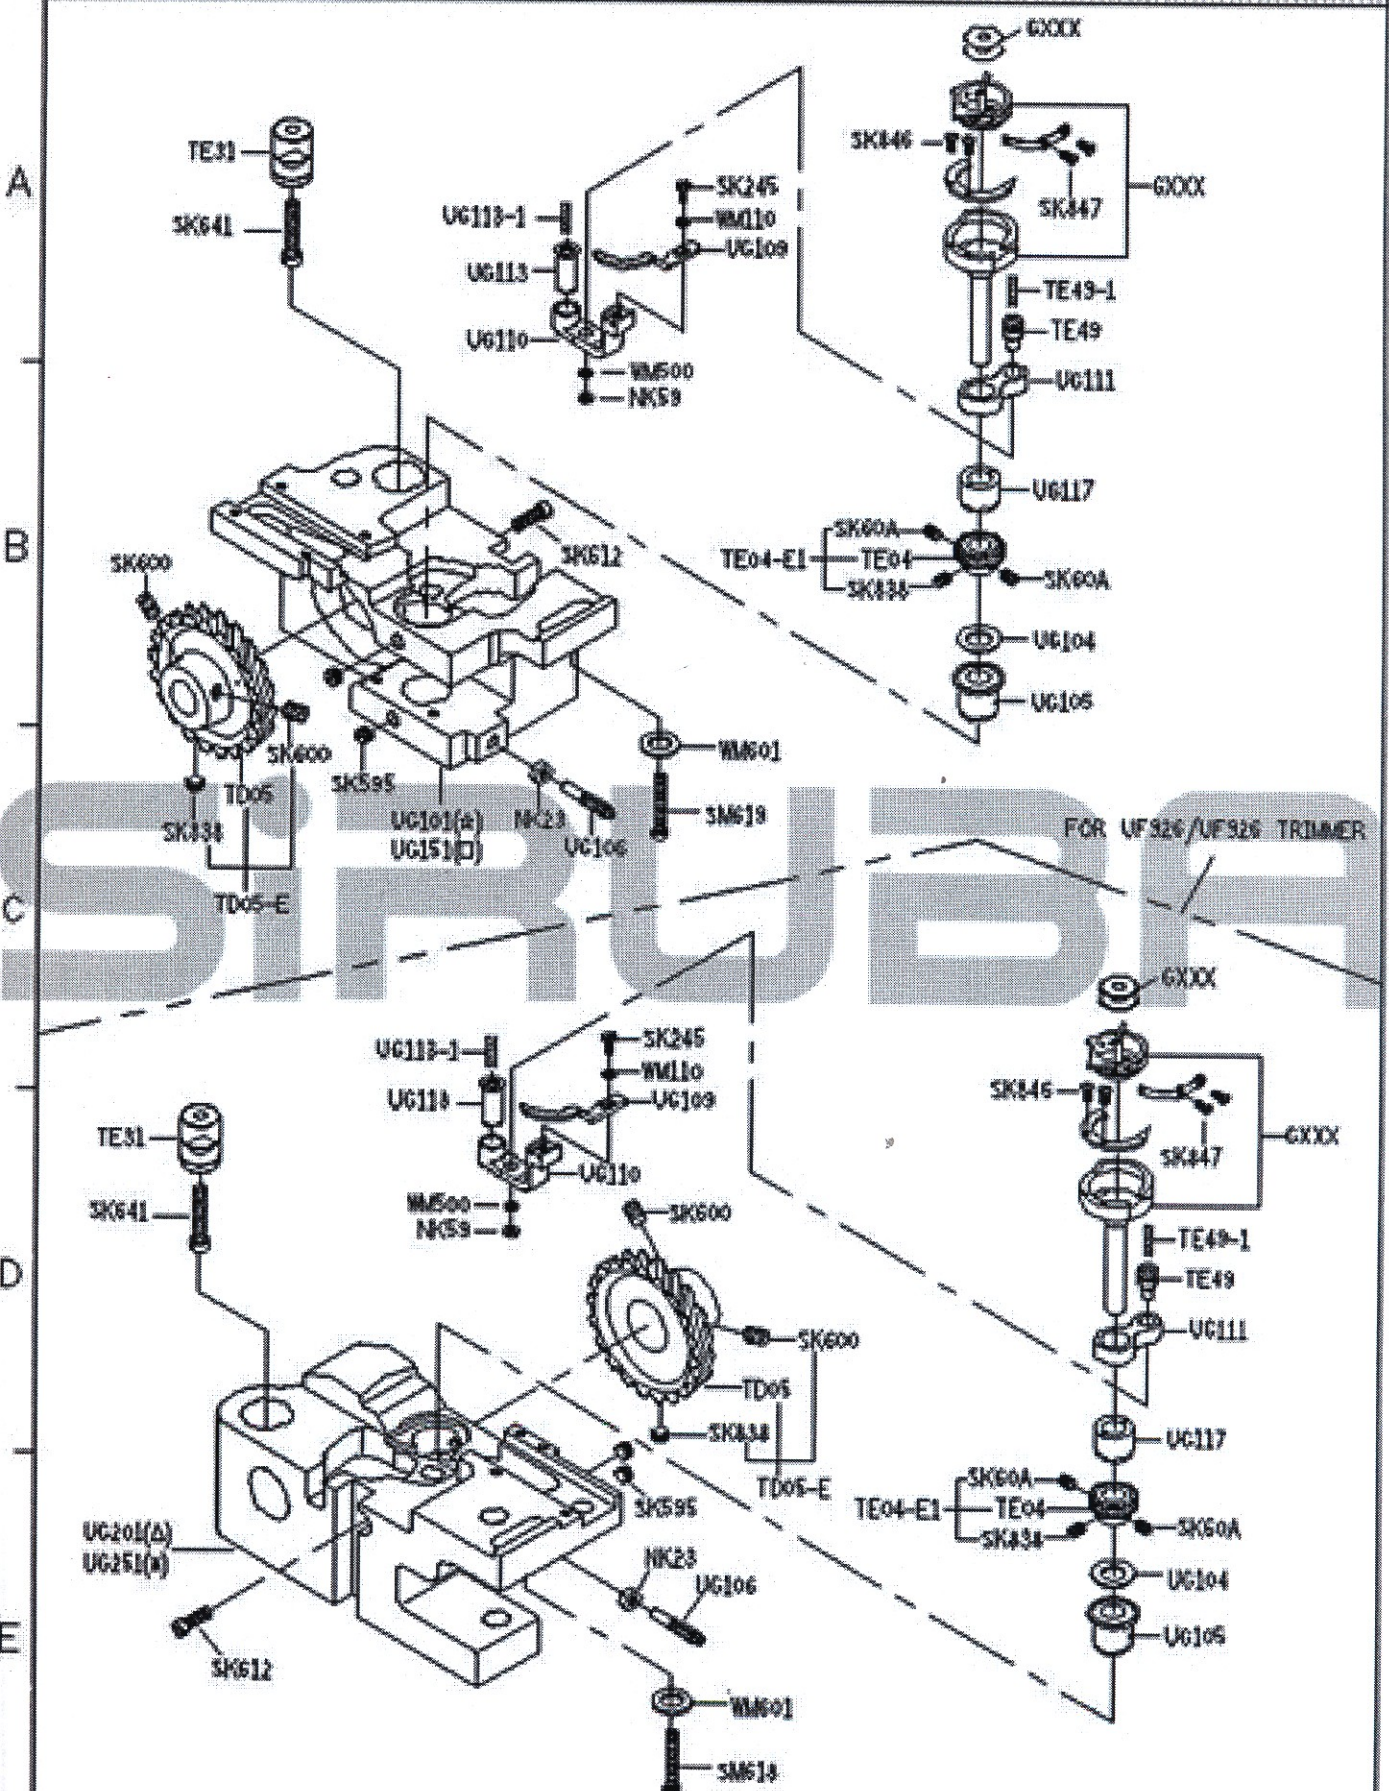 

FOR ALL UF916/UF926
 *USE FOR UF916/UF926
 ΔUSE FOR UF926

USE FOR UF916 TRIMMER/UF926 TRIMMER
USE FOR UF926 TRIMMER

920122

PARTS LIST FOR UJ GROUP 系列 10/17

RJ01-A

 
A

B

C


D

E

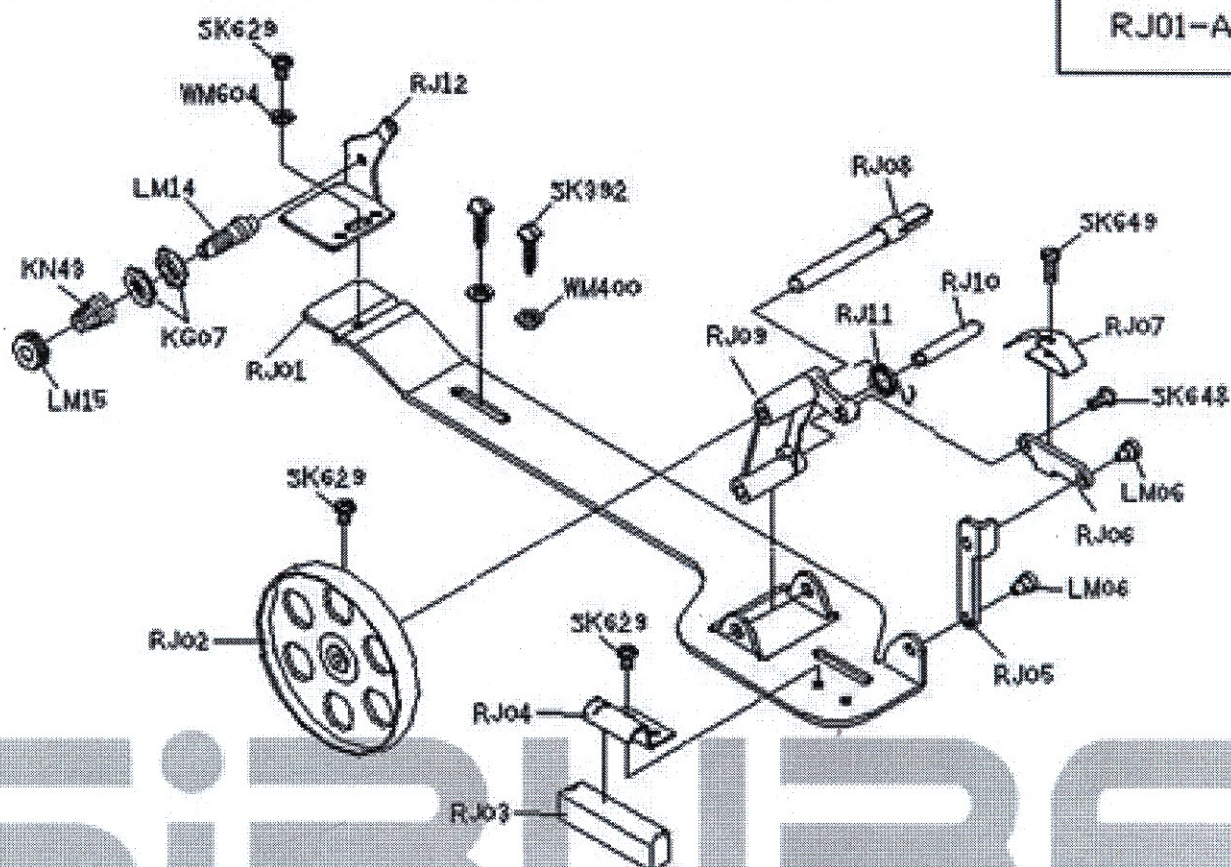


LM20-A

 LM24-E

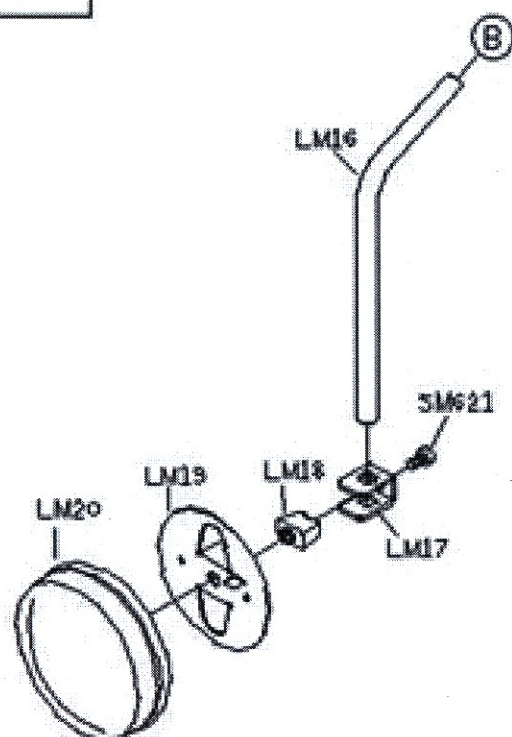

PARTS LIST FOR UL GROUP 系列圖 11/17

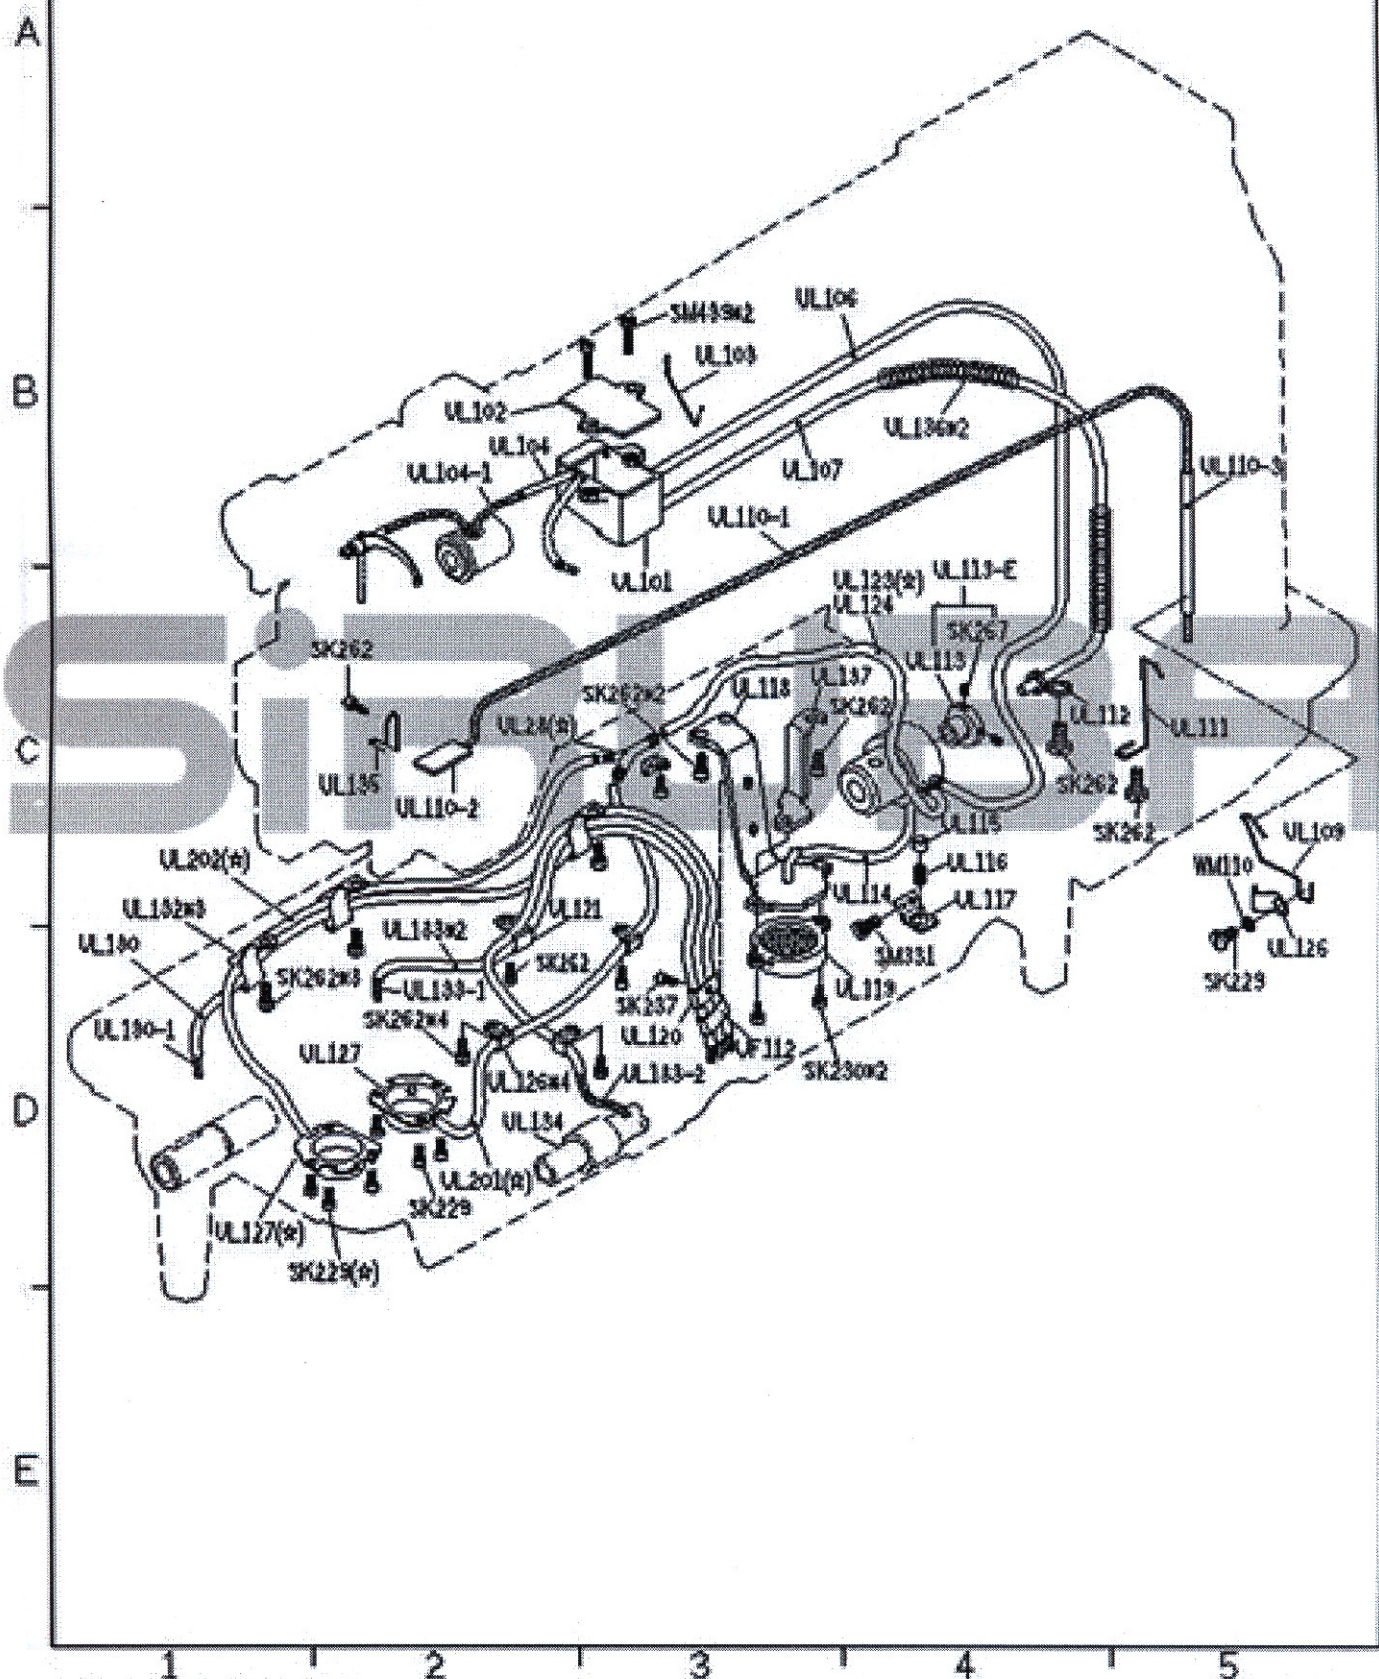 


FOR ALL UF916/UF926
 HUSE FOR UF926/UF926 TRIMMER

92.01.22

PARTS LIST FOR UM GROUP 系列

 A

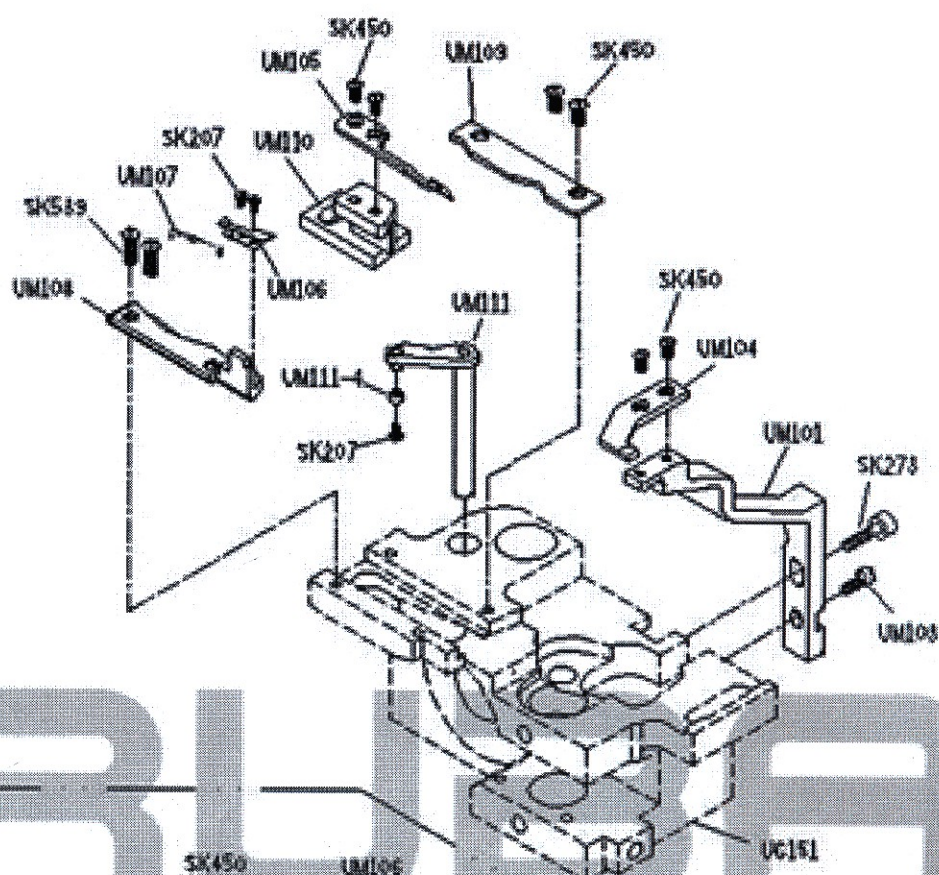


B

C

D

 E

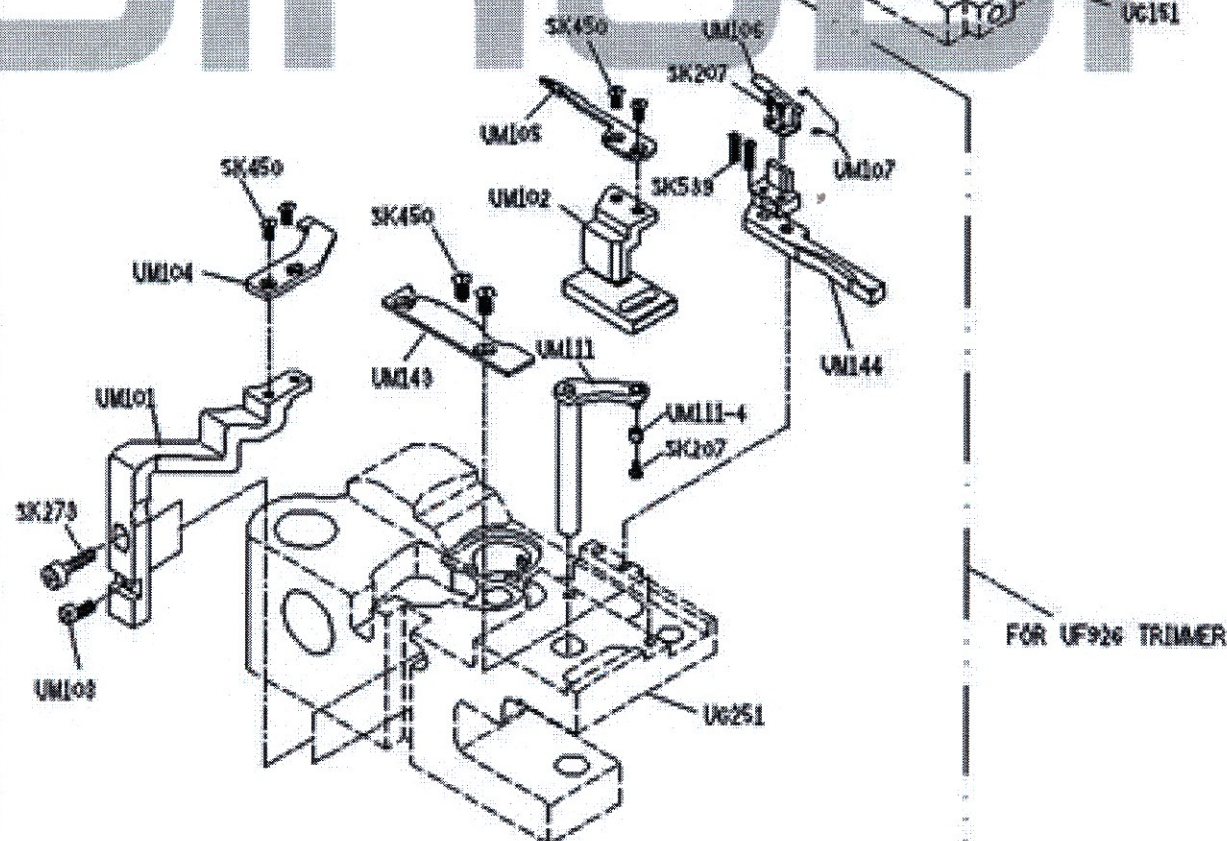


FOR UF926 TRIMMER

FOR UF916 TRIMMER/UF926 TRIMMER


92.01.22

 PARTS LIST FOR UM GROUP 系列

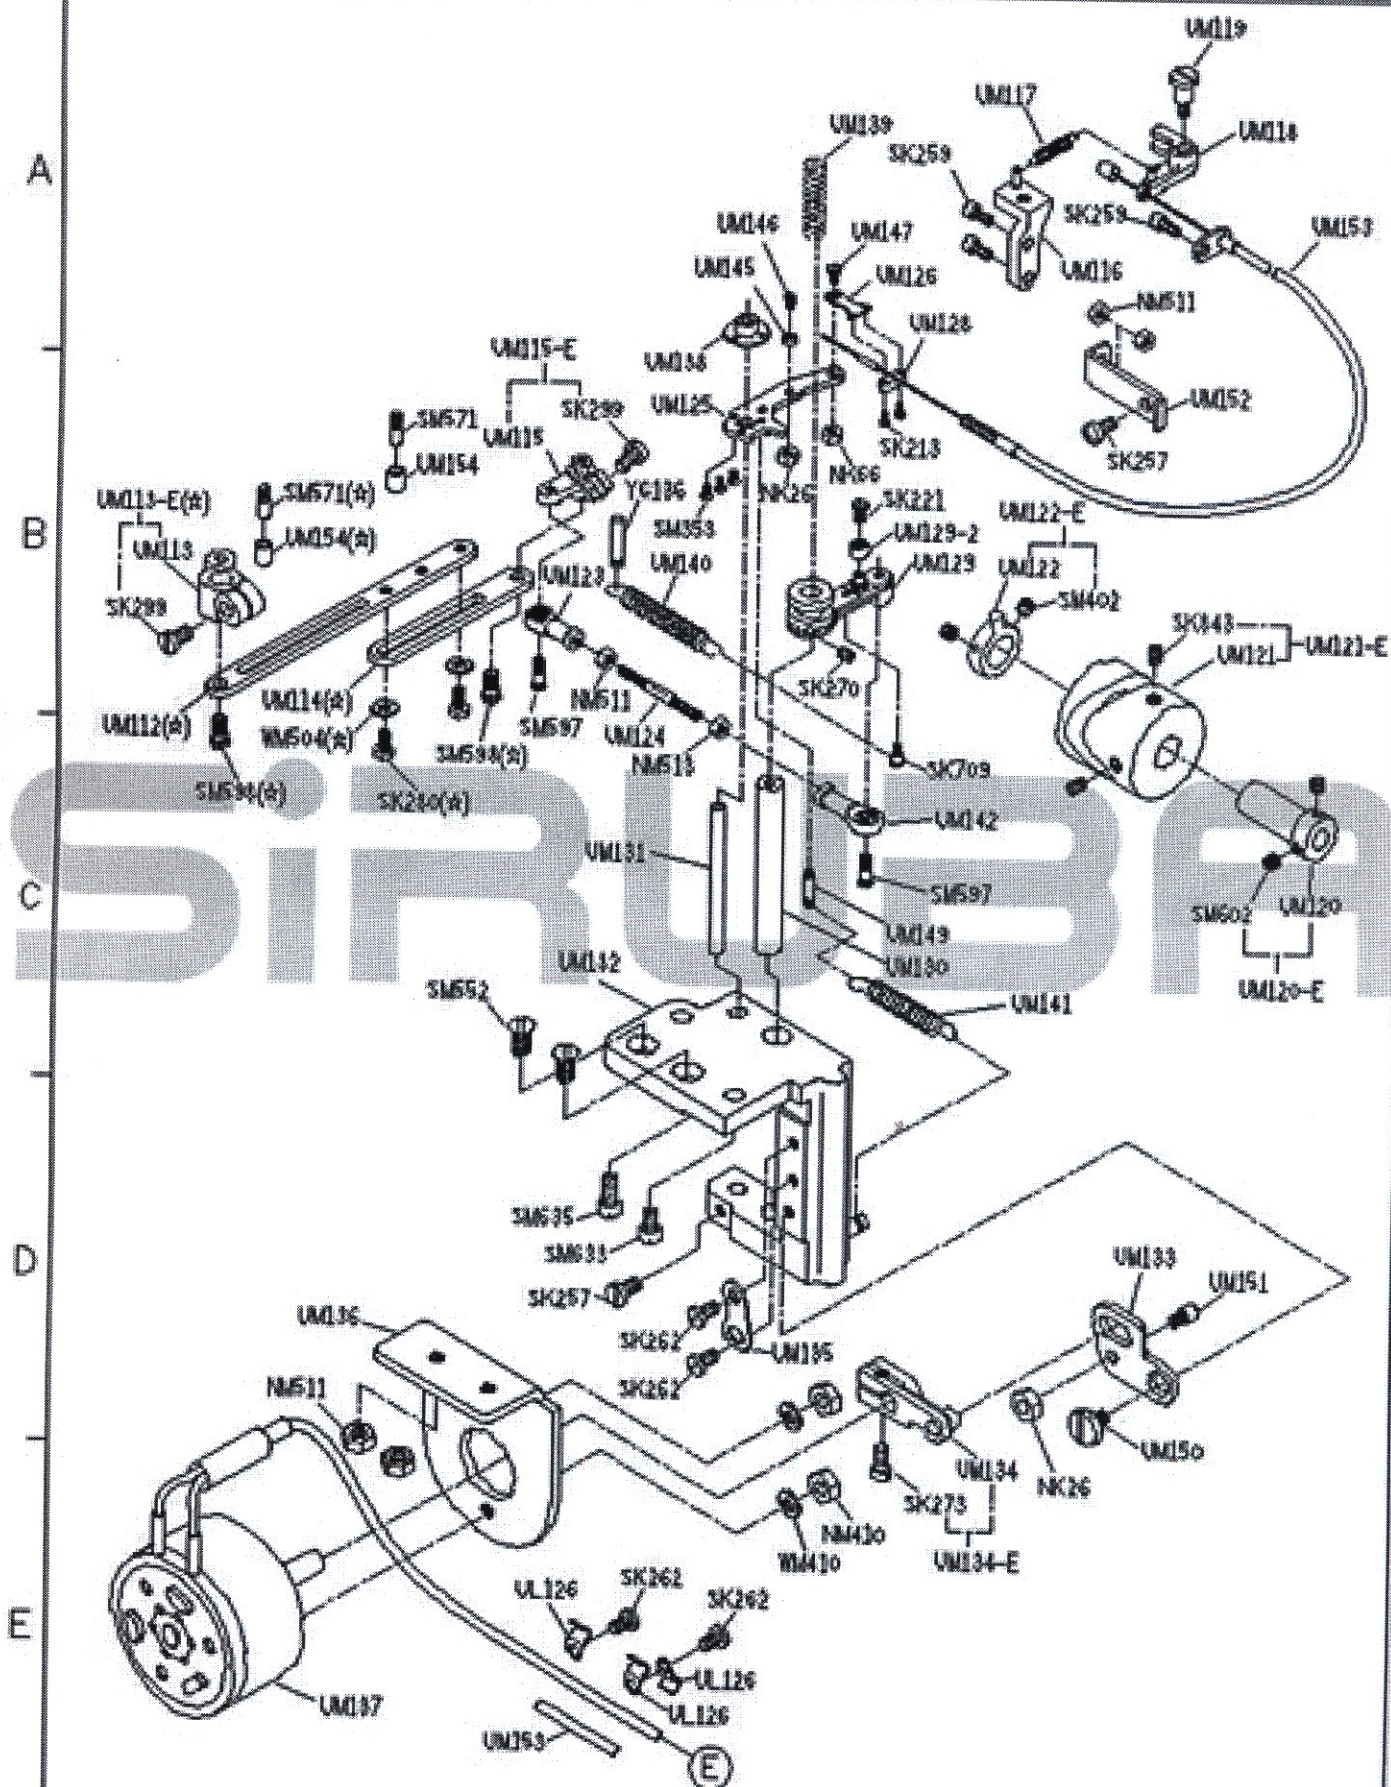

FOR UF316 TRIMMER/UF326 TRIMMER
 *USE FOR UF326TRIMMER

 PARTS LIST FOR UY GROUP 系列圖 14/17

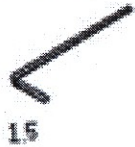MY09
六角扳手

15

KY10
六角扳手

2

MY10
六角扳手

25

MY11
六角扳手












3

MY12
六角扳手


4

KY11
六角扳手

           5

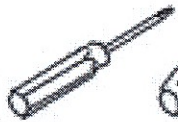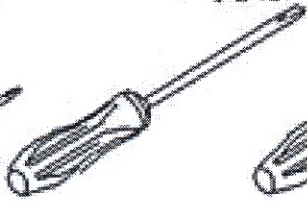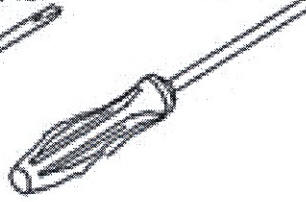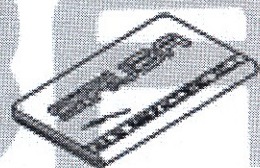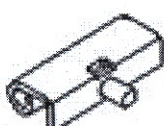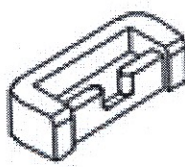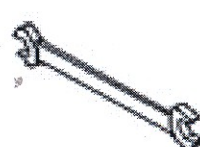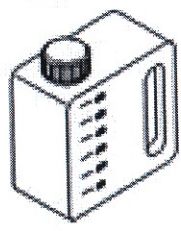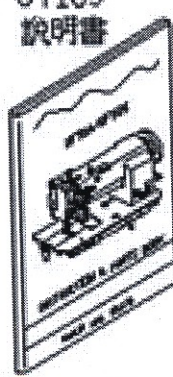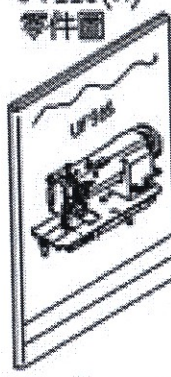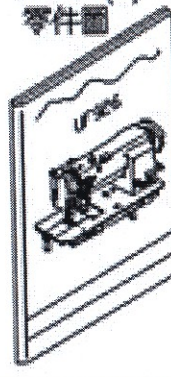MY13
一字扳手KY17
一字扳手KY16
一字扳手KY18
夾子YM11
調整扳手YM103*2
緩衝墊YM102*2
緩衝墊KZ03*1
乾燥劑G310*3
校子DP17#23
針MY01
防塵罩KY03
油壺LY05*2
後扭YMD4*2
後扭座YM106
支撐架BY19
開口扳手LY21-A
油罐KY26F
配件袋UY109
說明書UY110(☆)
零件圖UY111(Δ)
零件圖

 
PARTS LIST FOR UY GROUP 系列 15/17

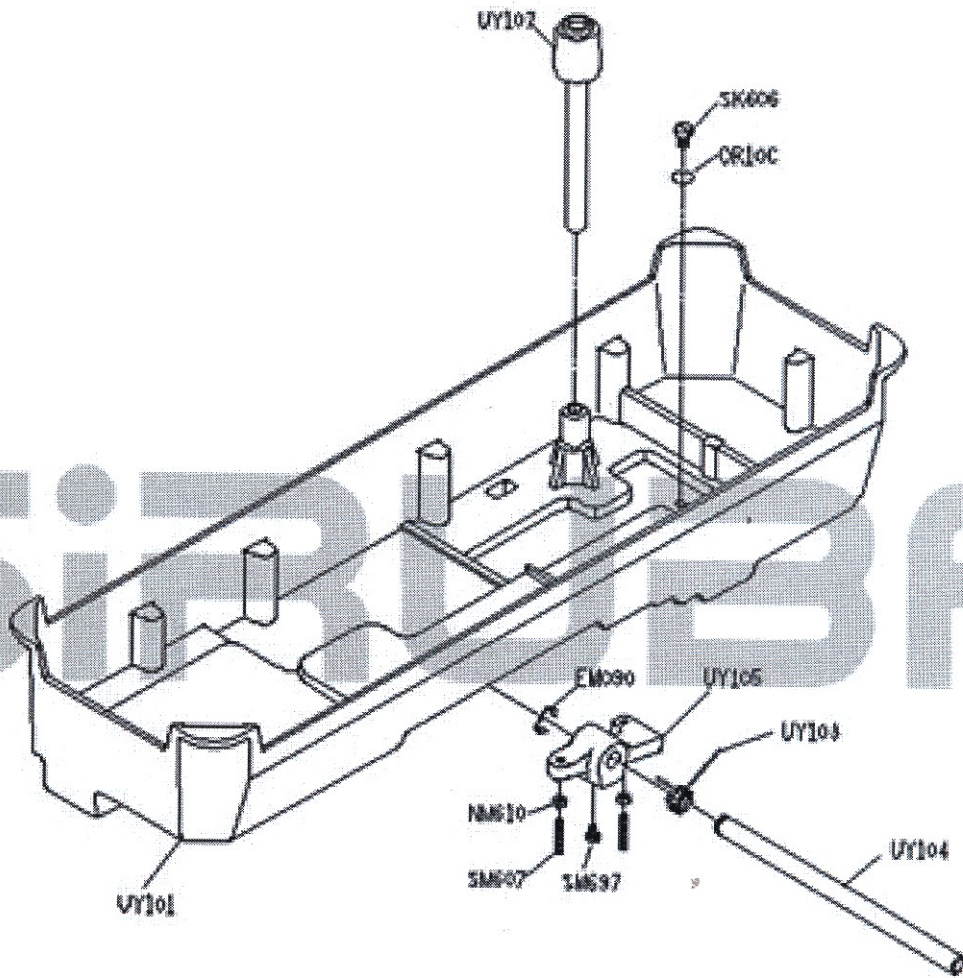


PARTS LIST FOR UY GROUP

系列 16/17


 
A

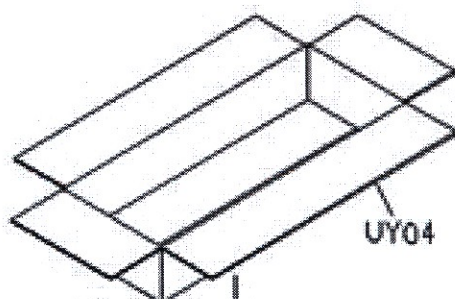


B

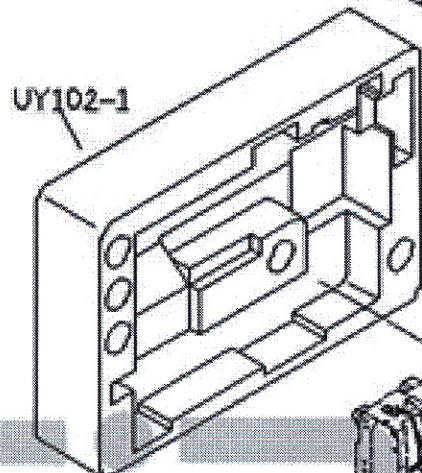 

C

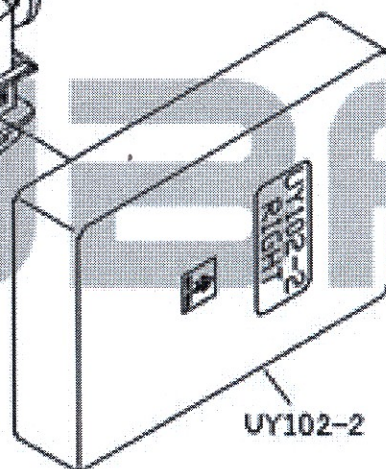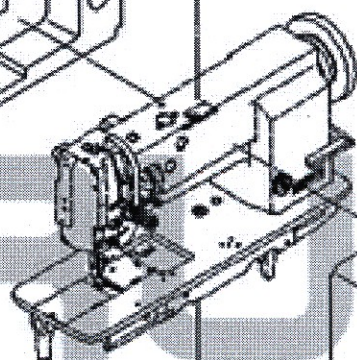  

D

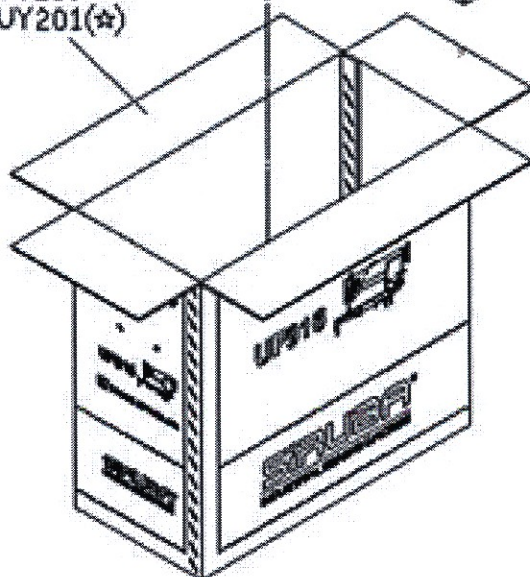 


E

1 2 3 4 5

FOR ALL UF916/UF926
*USE FOR UF926/UF926 TRIMMER

92.01.22

 PARTS LIST FOR THREAD STAND GROUP 系列 圖 17/17

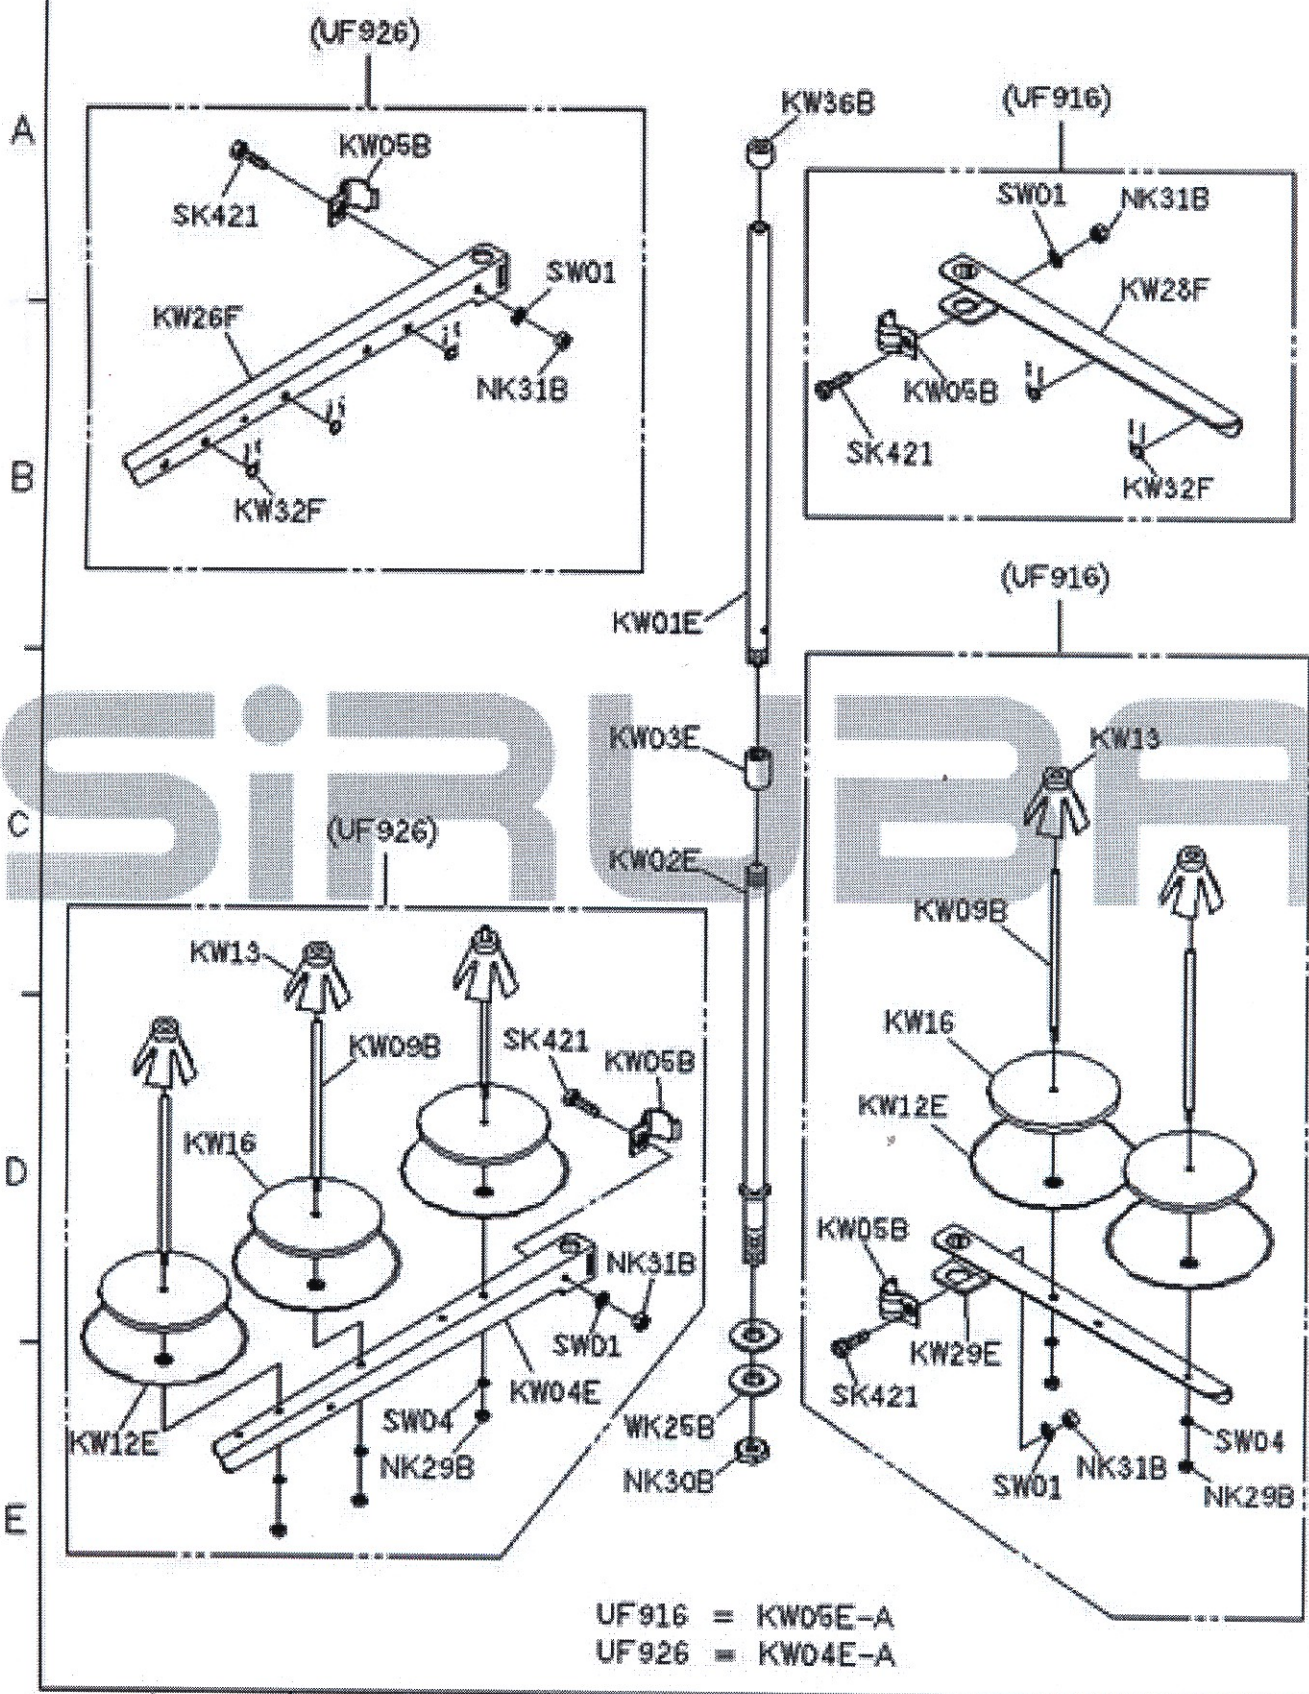

PARTS LIST FOR THREAD STAND GROUP 系列圖 17/17

A

B

C

D

E

KW36B


KW01E

KW03E

KW02E

WK25B

 NK30B

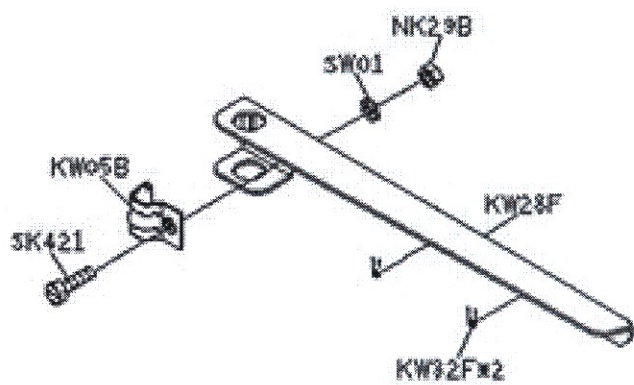

KW13E*2

KW09B*2

KW16*2

KW12E*2

KW29E

5K421

KW05B

SW01

NK29B

SW04*2

NK29B*2

KW02E-A

1

2

3

4

5

91.03.06

UF916 規格件表 / CONVERSION CHART

MODEL	MIDDLE PLATE	FEED BOX	OUT SIDE PRESSER FOOT	IN SIDE PRESSER FOOT	SLIDE PLATE(L)	SLIDE PLATE(R)	HORN ARM	FEED CASE ARM	DRIVEN	MIDDLE	SAFETY NETIC	OPERATING PANEL
機型	針板	送具	外押具	內押具	左面板	右面板	投頭	投殼	投干	針號	針防護罩	操作盒
UF916-X2	E642	D642	P642	P643	UA110	UA111	G165	—	G310	DP17#23	UA134	—
UF916-X2-A	E643	D643	P642	P643	UA110	UA153	G164	C404	G310	DP17#23	UA134	—
UF916-X2L-A	E643	D643	P642	P643	UA110	UA153	G173	—	G310	DP17#23	UA134	—
UF916-X2-B	E643	D643	P642	P643	UA110	UA153	G164	C404	G310	DP17#23	UA134	—
UF916-X2-8P	E643	D643	P642	P643	UA110	UA153	G164	C404	G310	DP17#23	UA134	—
UF916-X2L-8P	E643	D643	P642	P643	UA110	UA153	G173	—	G310	DP17#23	UA134	—
UF916-X2-C	E643	D643	P642	P643	UA110	UA153	G164	C404	G310	DP17#23	UA134	—
UF916-X2L-C	E643	D643	P642	P643	UA110	UA153	G173	—	G310	DP17#23	UA134	—
UF916-X2-0	E643	D643	P642	P643	UA110	UA153	G164	C404	G310	DP17#23	UA134	—
UF916-X2-0P	E643	D643	P642	P643	UA110	UA153	G173	—	G310	DP17#23	UA134	—
UF916-X2L-0P	E643	D643	P642	P643	UA110	UA153	G173	—	G310	DP17#23	UA134	—
UF916-X2-E	E643	D643	P642	P643	UA110	UA153	G164	C404	G310	DP17#23	UA134	LUIS4-A
UF916-X2L-E	E643	D643	P642	P643	UA110	UA153	G173	—	G310	DP17#23	UA134	LUIS4-A
UF916-X2-F	E643	D643	P642	P643	UA110	UA153	G164	C404	G310	DP17#23	UA134	LUIS4-A
UF916-X2-FP	E643	D643	P642	P643	UA110	UA153	G164	C404	G310	DP17#23	UA134	LUIS4-A
UF916-X2L-F	E643	D643	P642	P643	UA110	UA153	G173	—	G310	DP17#23	UA134	LUIS4-A
UF916-X2L-FP	E643	D643	P642	P643	UA110	UA153	G173	—	G310	DP17#23	UA134	LUIS4-A