


DB2-B757

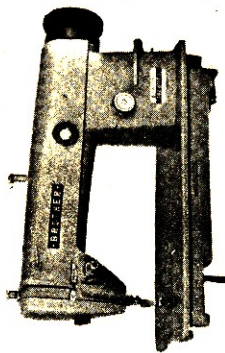

Please clarify Ref. No. and
Parts No. as well as parts name
When you place an order.


Cavemac

Controle do Acervo de Catálogos

Identificação	95
Edição	UNICA
Conteúdo	BROTHER DB2-B757

00000095



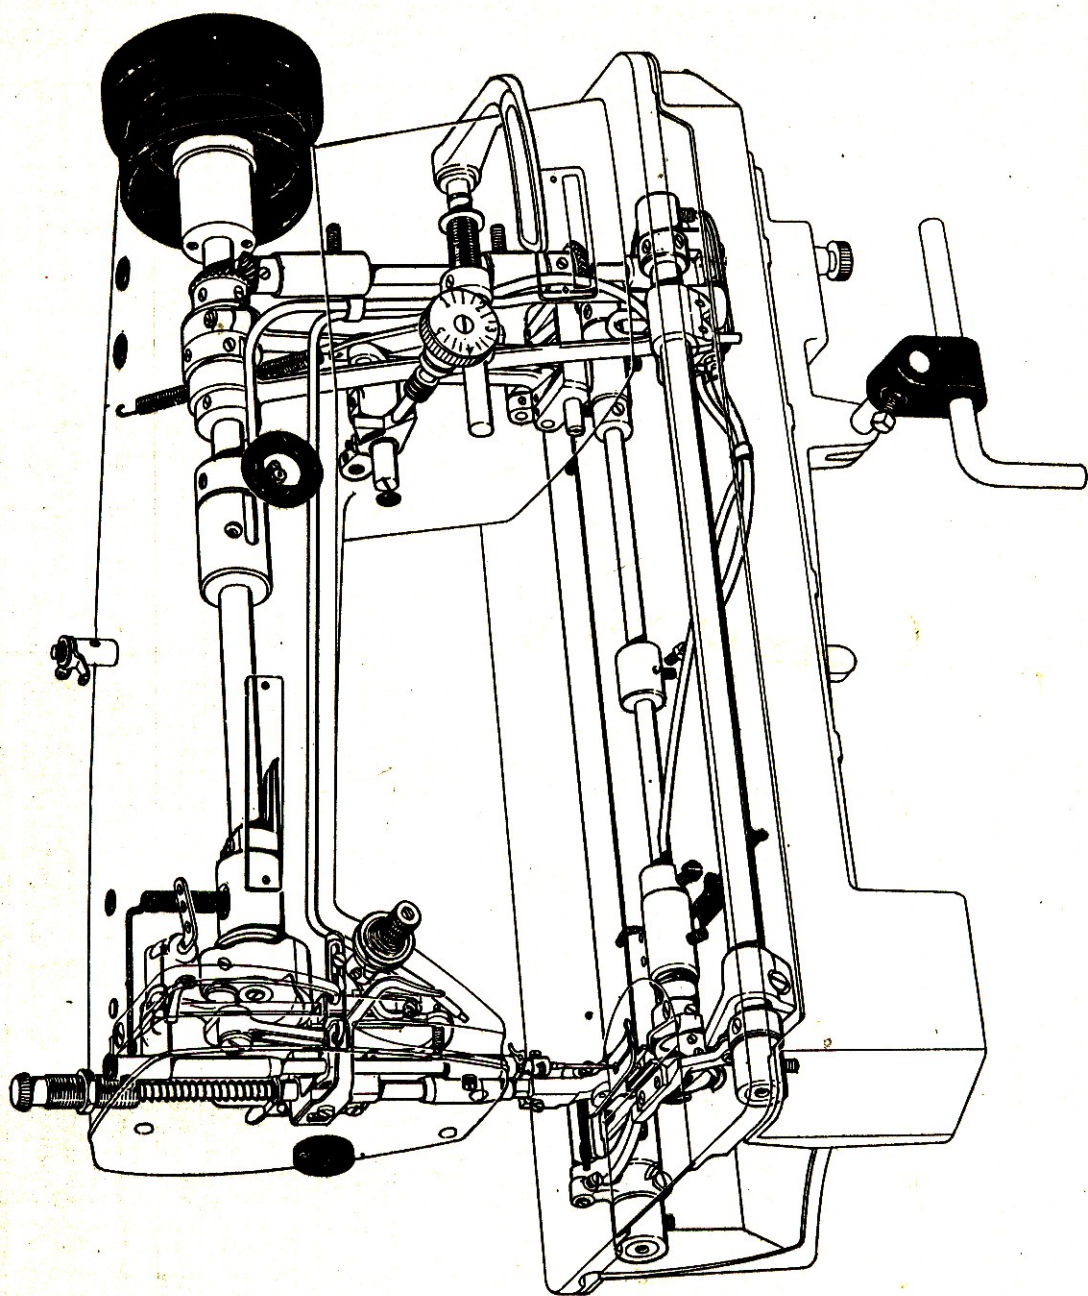

INDEX

B757-1


Parts-No.	Ref. No.	Remark	Parts-No.	Ref. No.	Remark	Parts-No.	Ref. No.	Remark	Parts-No.	Ref. No.	Remark
009660-3-02	B-38		100251-0-01	B-56		104449-0-01	A-3		108549-0-01	C-22	
025100-0-30	C-53		"	B-64		104450-0-01	A-1		108721-0-01	A-29	
028350-2-43	F-47		"	* D-40		104464-0-01	B-34		108748-0-01	C-26	
048040-3-42	C-34		"	D-42		104478-0-01	B-65		108749-0-01	C-49	
048070-3-42	C-18		"	E-23		104570-0-00	D-38		108801-0-01	F-21	
081007-0-70	F-31		100257-0-07	A-33		104521-0-01	D-35		108802-0-01	F-20	
081014-6-70	F-34		100260-0-01	B-2		104575-0-01	A-31		108804-0-01	F-1	
100013-0-03	B-42		"	B-6		104546-0-01	F-36		108809-0-01	B-24	
"	C-2		100265-0-34	B-10		104547-0-01	F-35		108960-0-02	A-8	
"	C-6		100266-0-01	A-12		104552-0-00	B-39		109144-0-01	E-18	
"	C-9		100268-0-04	A-13		104555-0-01	B-47		109145-0-01	E-22	
"	C-40		100287-0-04	A-10		104556-0-01	B-46		109151-0-01	C-21	
"	C-51		"	E-11		104564-0-01	C-28		109153-0-01	C-47	
"	E-7		100290-0-01	E-17		104566-0-01	F-24		109159-0-01	B-54	
100016-0-03	B-13		100294-0-01	E-16		104572-0-01	D-27		109160-0-01	D-18	
"	B-36		100320-0-03	D-14		104619-0-02	E-40		109163-0-01	B-13	
"	B-40		100327-0-01	C-20		104651-0-01	B-11		109171-0-01	F-22	
"	B-44		100328-0-01	C-19		104821-0-01	A-2		109172-0-01	F-18	
"	B-51		100334-0-01	D-5		104829-0-01	A-21		109173-0-01	D-20	
"	B-58		100369-0-01	D-23		104830-0-01	A-20		109191-0-00	F-4	
"	B-61		100388-0-04	A-38		104832-0-01	A-50		109193-0-01	F-7	
100022-0-04	E-32		100399-0-01	A-27		104833-0-01	A-19		109195-0-01	A-4	
100032-0-01	A-11		100400-0-00	A-26		104837-0-01	B-50		"	F-2	
100035-0-01	A-15		100402-0-02	A-22		104864-0-00	F-45		109714-0-00	F-25	
100080-0-03	D-4		100405-0-01	E-15		104869-0-02	D-30		109859-0-00	F-41	
100086-0-03	D-12		100463-0-01	E-38		"	F-8		110087-0-01	B-41	
"	D-46		100497-0-00	B-5		104882-0-01	E-37		110367-0-01	B-16	
"	F-40		100539-0-02	C-12		104883-0-02	E-31		110872-0-00	F-14	
100088-0-02	D-37		"	D-34		104884-0-01	E-34		"	F-17	
100134-0-01	A-30		100541-0-01	A-40		"	E-35		111198-0-01	F-5	
100136-0-01	A-32		"	D-11		104885-0-01	E-33		111237-0-01	B-22	
100137-0-01	A-47		"	E-8		104886-0-01	E-30		111455-0-01	A-5	
"	F-46		100541-0-02	C-55		104887-0-01	E-29		111459-0-01	B-37	
100185-0-05	B-25		100573-0-01	B-7		104890-0-02	E-36		111461-0-01	F-3	
100191-0-03	A-36		101482-0-01	C-4		105161-0-04	F-48		111462-0-01	B-4	
100218-0-01	C-29		101486-0-01	B-43		105234-0-01	C-11		111466-0-01	E-10	
"	C-32		101487-0-00	B-48		105295-0-03	F-23		111468-0-01	B-12	
"	C-38		101706-0-01	B-60		105670-0-00	B-49		111468-0-01	B-12	
"	C-46		"	D-8		106127-0-02	D-48		111469-0-01	E-6	
100218-0-02	D-28		"	D-17		106436-0-01	D-19		111470-0-00	E-14	
100242-0-04	A-16		"	D-36		106754-0-04	F-42		"	A-9	
"	F-6		"	D-44		107385-0-01	A-6		111476-0-01	A-23	
"	F-19		"	D-50		107407-0-02	D-22		111854-0-01	B-3	
100231-0-01	B-35		"	B-21		107428-0-01	C-8		111863-0-01	A-49	
"	B-52		103900-0-02	A-25		108520-0-01	A-52		111865-0-01		

INDEX

B757-2

Parts-No.	Ref. No.	Remark	Parts-No.	Ref. No.	Remark	Parts-No.	Ref. No.	Remark	Parts-No.	Ref. No.	Remark
112072-001	C-17		117242-001	B-1		118774-0-01	F-11		143288-0-00	F-12	
112406-001	E-45		117243-001	B-5		118778-0-01	A-48		143958-0-01	F-26	
112547-001	A-35		117258-001	F-16		118817-0-01	A-55		143989-0-01	E-39	
112775-001	B-8		117874-001	B-63		118821-0-01	B-32		144502-0-01	A-41 ~ 45	
112782-002	A-7		117875-001	D-39		118824-0-01	C-50,51		144503-0-01	A-45	
113280-001	E-12		118217-001	D-49		118825-0-01	C-50		144504-0-01	A-43	
113316-001	A-34		118672-001	A-53		118865-0-01	C-54		144505-0-01	A-42	
114294-001	A-24		118673-001	A-46		118996-0-00	F-10		144568-0-01	A-41	
114561-001	A-14		118675-001	A-51		140004-0-01	B-23		144751-0-00	D-6	
114747-001	F-29		118680-000	B-33		140353-0-01	B-20		144943-0-01	D-27,28	
114931-001	A-37		118713-001	C-30		140354-0-01	A-17		178213-0-01	D-2	
114909-001	E-25		118724-001	C-5		140356-0-01	D-24		180018-0-01	A-13 ~ 15	
114966-001	E-43		118725-001	C-7,8		140357-0-00	B-31		180022-0-01	B-52,53 D-39,40	
114967-001	E-42		118726-001	C-7		140407-0-01	E-3				
115244-001	B-45			C-31 ~ 34 36 ~ 38 42 ~ 45		140412-0-01	B-29				
115663-001	D-3		118727-001			140430-0-01	B-18		180023-0-01	B-63,64 D-39,40	
116231-001	A-57					140440-0-00	F-28		180102-0-01	E-5,7	
	B-11,12 14,15 17 ~ 23		118728-0-01	C-44		140480-0-01	F-32		180321-0-01	D-43,44	
116732-001			118729-001	C-37		140503-0-01	E-44		180322-0-01	D-48,49	
			118730-001	C-31		140518-0-01	F-30		180814-0-01	E-38 ~ 44	
116733-001	B-19		118731-001	C-45		140553-0-01	B-9		181994-0-01	B-42,43	
116734-001	B-15		118732-001	C-42		140704-0-01	A-54		181995-0-01	D-35,36	
116735-000	B-17		118733-001	C-43		140726-0-00	B-41		182056-0-01	E-9,10	
116766-001	D-7		118734-0-01	C-39		140757-0-01	D-21				
	D-41		118735-001	C-41		140885-0-01	A-39				
116768-001	D-45		118736-0-01	C-35		141167-0-00	E-24				
116780-001	D-26		118737-0-01	C-36		141168-0-01	E-26				
116782-001	D-25		118739-001	D-15		141207-0-01	E-1				
116793-001	D-31		118740-0-01	C-33		141208-0-01	E-2				
116794-001	D-32		118741-0-01	C-10 ~ 14		141728-0-01	E-4				
116796-001	F-15		118742-0-00	C-14		142014-0-01	E-45 ~ 49				
116799-001	F-30		118743-0-01	C-13		142015-0-01	E-46				
116817-001	F-13		118744-0-01	C-10		142016-0-01	E-48				
116838-000	D-10		118746-0-01	C-16		142017-0-01	E-47				
116917-001	D-1		118747-0-01	C-48		142018-0-01	E-49				
116918-001	D-43		118748-0-01	C-52		142482-0-01	C-23				
116919-001	D-16		118751-0-01	C-27		142572-0-01	D-47				
116920-001	D-9		118752-0-01	C-25		142573-0-01	D-13				
116922-001	A-28		118753-0-01	C-15		142708-0-00	B-57				
116924-001	F-9		118757-0-01	C-1		142709-0-00	B-62				
116927-000	F-38		118758-0-01	C-3		142746-0-01	C-56				
116998-001	B-53		118760-0-01	B-59		142747-0-01	C-24				
116999-001	B-55		118761-0-00	D-29		142756-0-01	E-23,24				
117093-000	F-44		118762-0-00	D-33		143196-0-01	F-33				
117168-0-01	B-14		118770-0-01	B-28		143212-0-01	A-56				


A

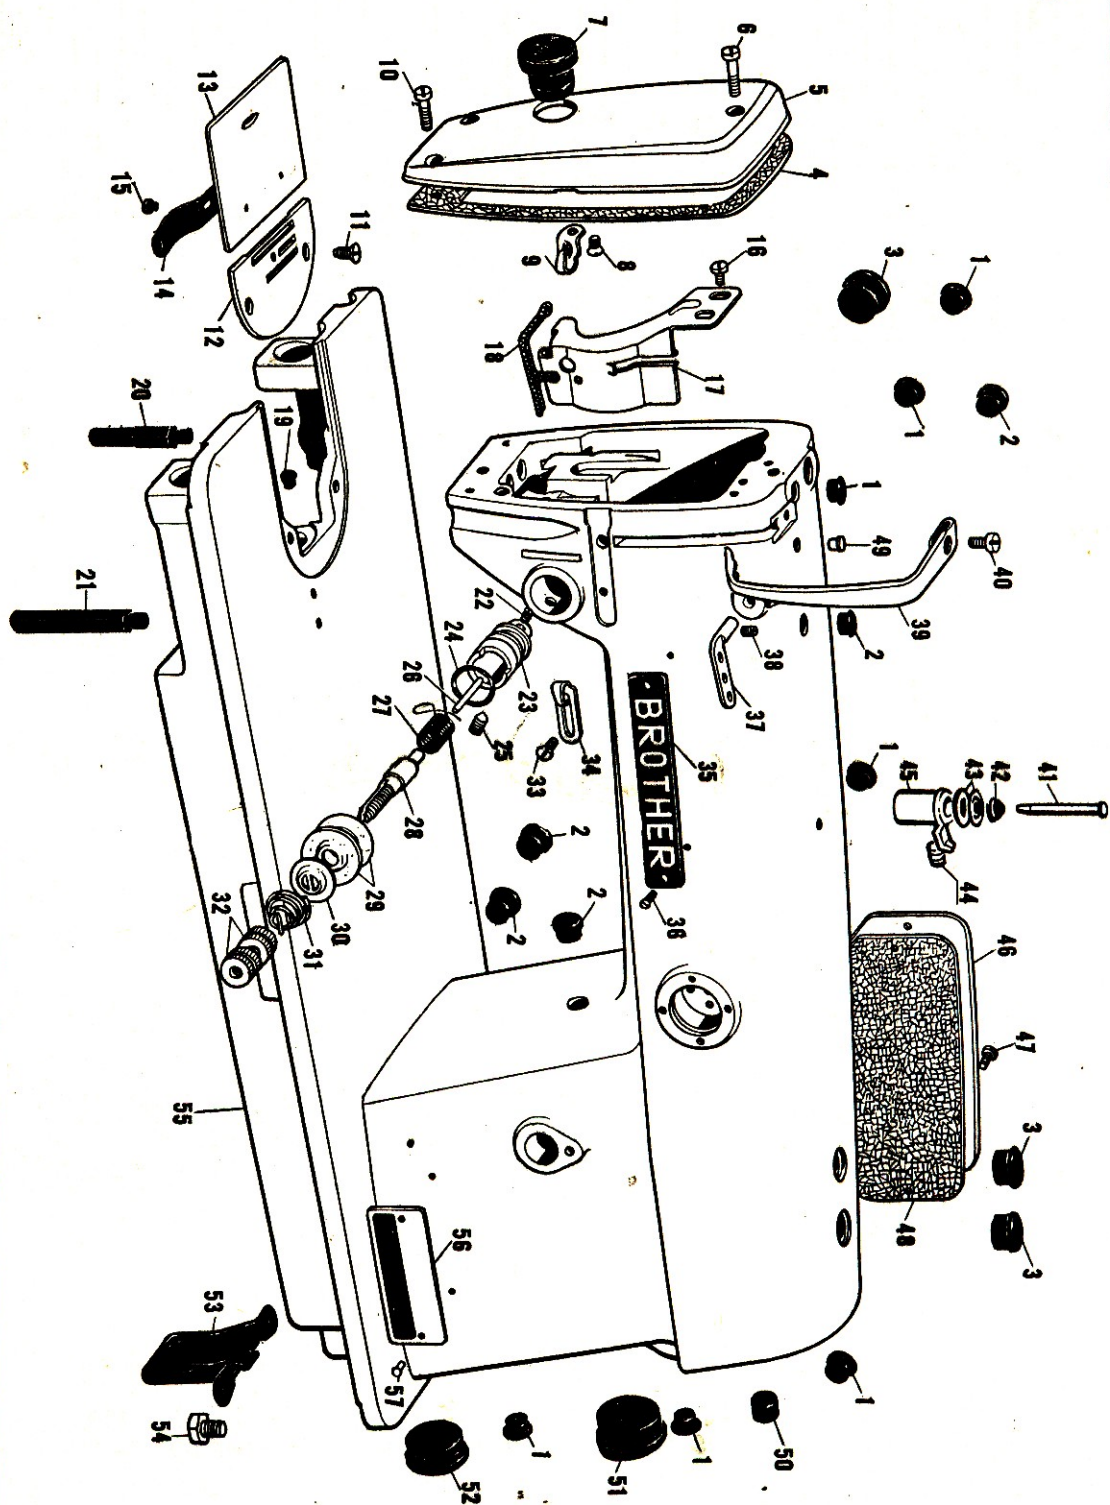

PARTS LIST for DB2-B757


Ref. No.	Name of Parts	Q'ty	Parts-No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts-No.	Assembly No.
A-1	Oil cap 7.5φ	7 pcs.	104450-0-01		A-46	Rear cover	1 pce.	118673-0-01	
A-2	Oil cap 10φ	5 "	104821-0-01		A-47	Set screw for A-46	4 pcs.	100137-0-01	
A-3	Oil cap 15φ	3 "	104449-0-01		A-48	Rear cover packing	1 pce.	118778-0-01	
A-4	Face plate packing	1 pce.	109195-0-01		A-49	Oil cap	1 "	111865-0-01	
A-5	Face plate	1 "	111455-0-01		A-50	Oil cap at inside of pulley	2 pcs.	104832-0-01	
A-6	Face plate set screw (upper)	1 "	107385-0-01		A-51	Oil cap for C-44	1 pce.	118675-0-01	
A-7	Oil cap for face plate	1 "	112782-0-02		A-52	Oil cap 19.4φ	1 "	108520-0-01	
A-8	Set screw for A-9	1 "	108960-0-02		A-53	Pump cover	1 "	118672-0-01	
A-9	Face plate thread Guide	1 "	111476-0-01		A-54	Set bolt for A-53	2 pcs.	140704-0-01	
A-10	Face plate set screw (lower)	2 pcs.	100287-0-04		A-55	Arm-bed	1 pce.	118817-0-01	
A-11	Set screw for A-12	2 "	100032-0-01		A-56	Model plate for DB2-B757-3	1 "	143212-0-01	
A-12	Needle plate	1 pce.	100266-0-01		A-57	Set pin for A-56	2 pcs.	116231-0-01	
A-13	Slide plate	1 "	100268-0-04						
A-14	Spring for A-13	1 "	114561-0-01	180018-0-01					
A-15	Set screw for A-14	2 pcs.	100035-0-01						
A-16	Set screw for A-17	2 "	100242-0-04						
A-17	Oil stopper plate	1 pce.	140354-0-01						
A-18	Wick 4 X 4 for A-17	1 "	109405-0-01						
A-19	Oil cap 4φ	1 "	104833-0-01						
A-20	Bed leg (B)	1 "	104830-0-01						
A-21	Bed leg (A)	1 "	104829-0-01						
A-22	Set screw for A-28	1 "	100402-0-02						
A-23	Upper thread tension bracket	1 "	111854-0-01						
A-24	Rubber ring for A-23	1 "	114294-0-01						
A-25	Set screw for A-23	1 "	103950-0-02						
A-26	Tension release pin	1 "	100400-0-00						
A-27	Thread take-up spring	1 "	116922-0-01						
A-28	Tension stud	1 "	100399-0-01						
A-29	Tension Disc	2 pcs.	108721-0-01						
A-30	Tension Disc washer	1 pce.	100134-0-01						
A-31	Tension spring	1 "	104525-0-01						
A-32	Tension control nut	2 pcs.	100136-0-01						
A-33	Set screw for A-34	1 pce.	100257-0-07						
A-34	Arm thread guide	1 "	113316-0-01						
A-35	Name plate	1 "	112547-0-01						
A-36	Set screw for A-35	2 pcs.	100191-0-03						
A-37	Thread retainer	1 pce.	114931-0-01						
A-38	Set screw for A-37	1 "	100388-0-04						
A-39	Thread take-up cover	1 "	140885-0-01						
A-40	Set screw for A-39	1 "	100541-0-01						
A-41	Pre-tension stud	1 "	144568-0-01						
A-42	Pre-tension spring	1 "	144505-0-01						
A-43	Pre-tension Disc	2 pcs.	144504-0-01						
A-44	Set screw for A-45	1 pce.	102716-0-03	144502-0-01					
A-45	Pre-tension	1 "	144503-0-01						

B

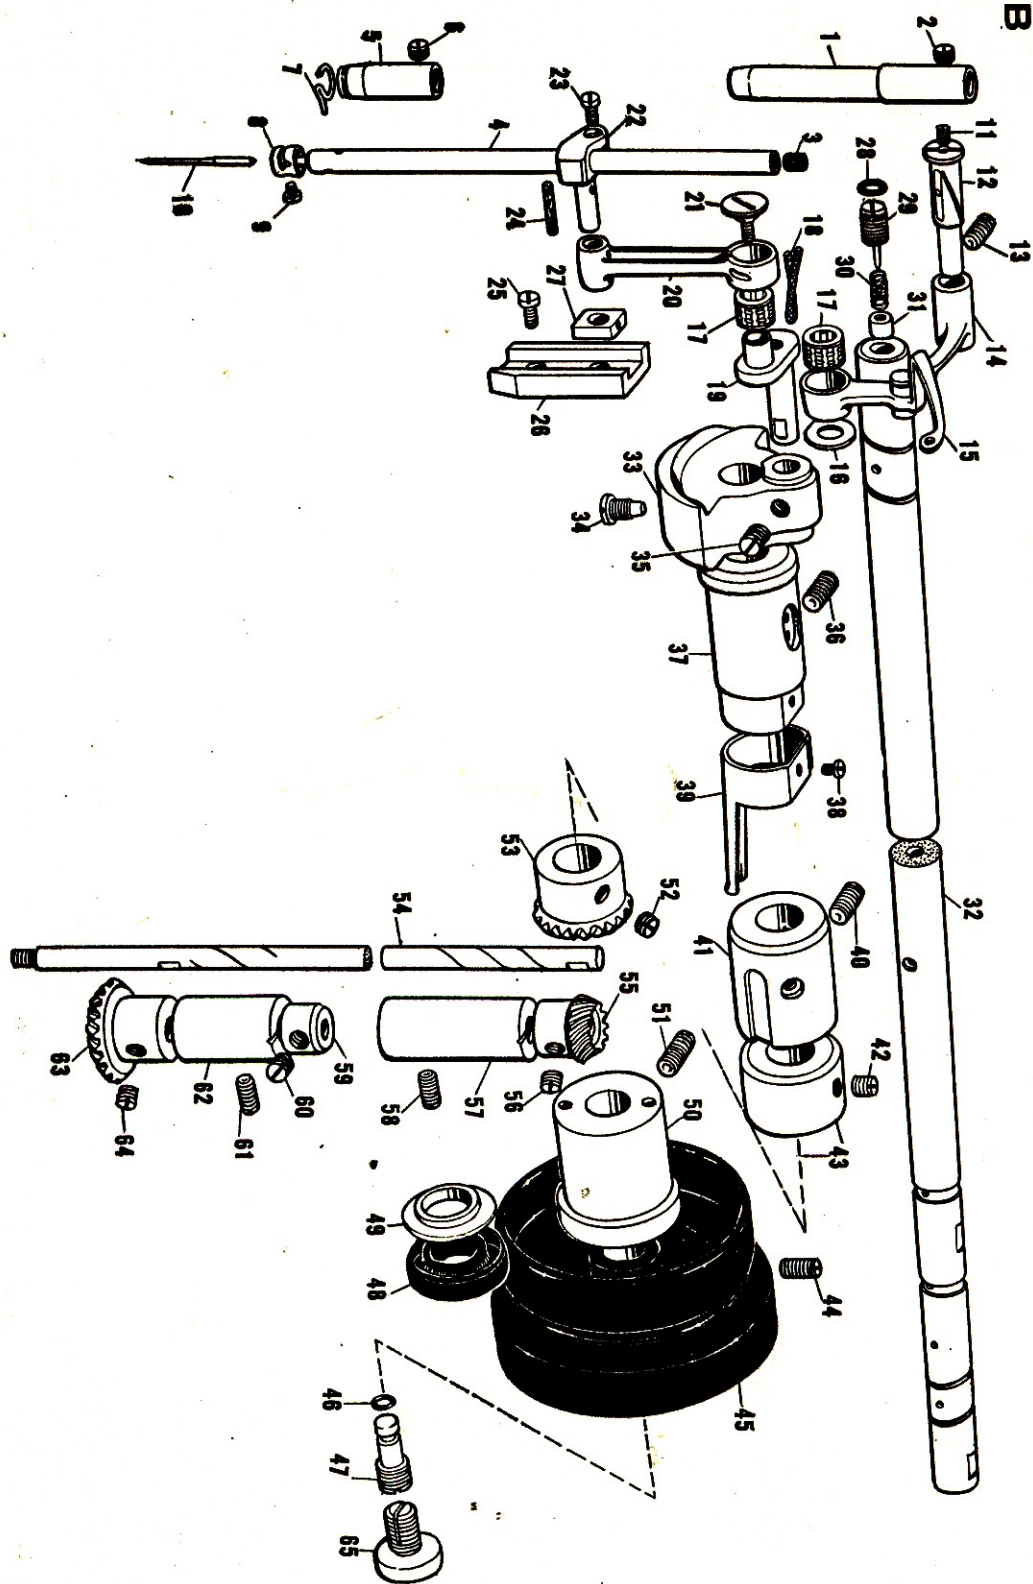


Ref. No.	Name of Parts	Q'ty	Parts-No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts-No.	Assembly No.
B-1	Needle bar bushing (upper)	1 pce.	117242-0-01		B-46	Rubber packing for B-47	1 pce.	104556-0-01	
B-4	Needle bar	1 "	111462-0-01		B-47	Oil screw right for upper shaft	1 "	104555-0-01	
B-5	Needle bar bushing (lower)	1 "	117243-0-01		B-48	Oil seal	1 "	101487-0-00	
B-2	Set screw for B-1	1 "	100260-0-01		B-49	Oil rejector for upper shaft	1 "	105670-0-00	
B-3	Needle bar cork	1 "	111863-0-01		B-50	Upper shaft bushing (right)	1 "	104837-0-01	
B-6	Set screw for B-5	1 "	100260-0-01		B-51	Set screw for B-50	2 pcs.	100251-0-01	
B-7	Thread guide for B-5	1 "	100573-0-01		B-52	Set screw for B-53	1 pce.	116998-0-01	
B-8	Needle bar thread guide	1 "	112775-0-01		B-53	Upper shaft gear	1 "	116999-0-01	
B-9	Set screw for needle	1 "	140553-0-01		B-55	Vertical shaft gear (upper)	2 pcs.	100251-0-01	
B-10	Needle DB X 1	1 "	100265-0-34		B-56	Set screw for B-55	1 pce.	109159-0-01	
B-11	Cap screw for B-12	1 "	104651-0-01		B-54	Vertical shaft	1 "	142708-0-00	
B-12	Stud for B-14	1 "	111468-0-01		B-57	Vertical shaft bushing (upper)	1 "	100016-0-03	
B-14	Thread take-up supporter	1 "	117168-0-01		B-58	Set screw for B-57	1 "	118760-0-01	
B-15	Thread take-up lever	2 pcs.	116735-0-00		B-59	Set collar for B-62	2 pcs.	101706-0-01	
B-17	Needle roller	1 pce.	140430-0-01	116732-0-01	B-60	Set screw for B-59	1 pce.	100016-0-03	
B-18	Wick 3 X 3 for B-19	1 "	116733-0-01		B-61	Set screw for B-62	1 "	142709-0-00	
B-19	Needle bar crank	1 "	140353-0-01		B-62	Vertical shaft bushing (lower)	1 "	117874-0-01	
B-20	Needle bar crank rod	1 "	103001-0-01		B-63	Vertical shaft gear (lower)	3 pcs.	100251-0-01	
B-21	Cap screw for B-19	1 "	111237-0-01		B-64	Set screw for B-63	1 pce.	117875-0-01	
B-22	Needle bar connecting stud	1 "	140004-0-01		D-39	Lower shaft gear	2 pcs.	100251-0-01	
B-23	Set screw for B-22	1 "	100016-0-03		D-40	Set screw for D-39	1 pce.	104478-0-01	
B-13	Set screw for B-12	1 "	110367-0-01		B-65	Set screw for arm pulley	1 pce.		
B-16	Needle bar crank washer	2 pcs.	108809-0-01						
B-24	Wick 6 X 6 for B-22	1 pce.	100185-0-05						
B-25	Set screw for B-26	1 "	102631-0-01						
B-26	Needle bar guide	1 "	102630-0-01						
B-27	Needle bar guide slide block	1 "	118770-0-01						
B-28	Rubber packing for B-29	1 "	140412-0-01						
B-29	Oil screw left for upper shaft	1 "	116799-0-01						
B-30	Spring for B-29	1 "	140357-0-00						
B-31	Push for B-29	1 "	118821-0-01						
B-32	Upper shaft	1 "	118680-0-00						
B-33	Counter weight	1 "	104464-0-01						
B-34	Set screw for B-33	2 pcs.	100251-0-01						
B-35	Set screw for B-33	1 pce.	100016-0-03						
B-36	Set screw for B-37	1 "	111459-0-01						
B-37	Upper shaft bushing (left)	1 "	009660-3-02						
B-38	Set screw for B-39	1 "	104552-0-00						
B-39	Oil flow for B-37	1 "	100016-0-03						
B-40	Set screw for B-41	1 "	140726-0-00						
B-41	Upper shaft bushing (intermediate)	2 pcs.	100013-0-03	181994-0-01					
B-42	Set screw for B-43	1 pce.	101486-0-01						
B-43	Upper shaft collar	2 pcs.	100016-0-03						
B-44	Set screw for B-45	1 pce.	115244-0-01						
B-45	Pulley	1 pce.							

C

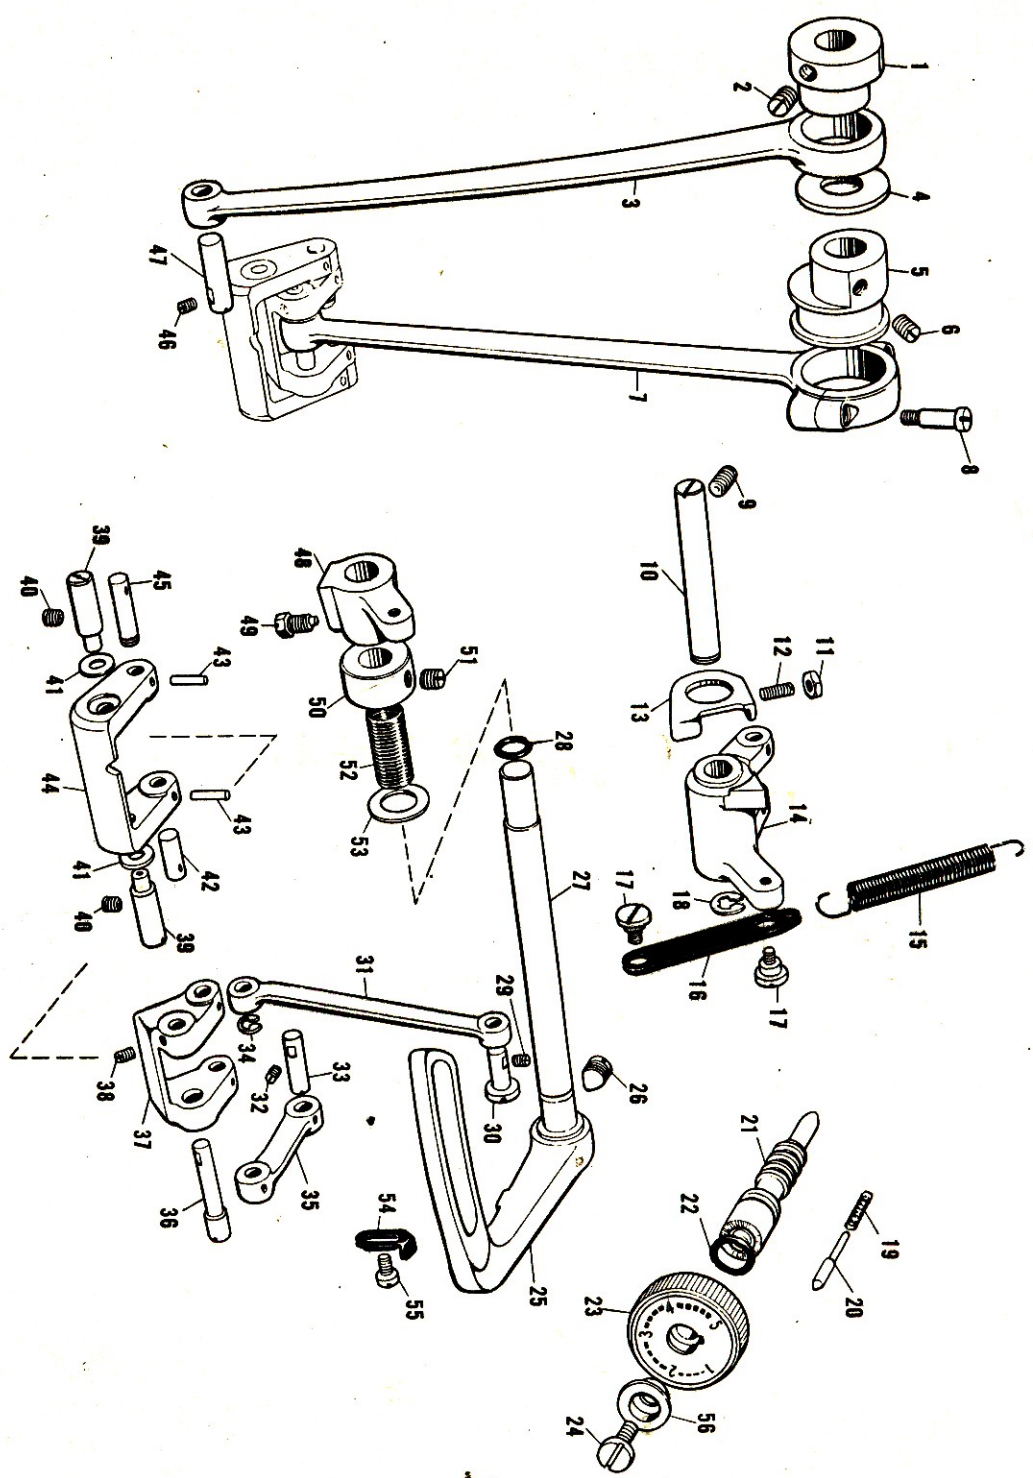


Ref. No.	Name of Parts	Q'ty	Parts-No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts-No.	Assembly No.
C-1	Vertical feed eccentric	1 pce.	118757-0-01		C-46	Set screw for C-47	1 pce.	100218-0-01	
C-2	Set screw for C-1	2 pcs.	100013-0-03		C-47	Stud for C-3	1 "	109153-0-01	
C-3	Vertical feed connecting rod	1 pce.	118758-0-01		C-48	Feed controller bracket	1 "	118747-0-01	
C-4	Stopper ring for C-3	1 "	101482-0-01		C-49	Set screw for C-48	1 "	108749-0-01	
C-5	Eccentric wheel	1 "	118724-0-01		C-50	Set collar for C-48	1 "	118825-0-01	118824-0-01
C-6	Set screw for C-5	2 pcs.	100013-0-03		C-51	Set screw for C-50	2 pcs.	100013-0-03	
C-7	Crank rod	1 pce.	118726-0-01	118725-0-01	C-52	Feed controller spring collar	1 pce.	118748-0-01	
C-8	Set screw for C-7	2 pcs.	107428-0-01		C-53	Washer for C-50	1 "	025100-1-30	
C-9	Set screw for C-10	1 pce.	100013-0-03		C-54	Reverse lever stopper	1 "	118865-0-01	
C-10	Feed controller shaft	1 "	118744-0-01		C-55	Set screw for C-54	1 "	100541-0-02	
C-11	Nut for C-12	1 "	105234-0-01		C-56	Washer for C-23	1 "	142746-0-01	
C-12	Set screw for C-13	1 "	100539-0-02	118741-0-01					
C-13	Feed controller plate	1 "	118743-0-01						
C-14	Feed controller	1 "	118742-0-00						
C-15	Feed controller spring	1 "	118753-0-01						
C-16	Feed regulator plate	1 "	118746-0-01						
C-17	Stud screw for C-16	2 pcs.	112072-0-01						
C-18	Stop ring for C-10	1 pce.	048070-3-42						
C-19	Notch spring for C-23	1 "	100328-0-01						
C-20	Notch for C-23	1 "	100327-0-01						
C-21	Length control screw	1 "	109151-0-01						
C-22	Packing for C-21	1 "	108549-0-01						
C-23	Length control	1 "	142482-0-01						
C-24	Set screw for C-23	1 "	142747-0-01						
C-25	Reverse lever	1 "	118752-0-01						
C-26	Set screw for C-25	1 "	108748-0-01						
C-27	Feed controller lever shaft	1 "	118751-0-01						
C-28	Rubber packing for C-27	1 "	104564-0-01						
C-29	Set screw for C-30	1 "	100218-0-01						
C-30	Stud for C-31	1 "	118713-0-01						
C-31	Feed regulator connecting rod	1 "	118730-0-01						
C-34	Stop ring for C-31	1 "	048040-3-42						
C-36	Stud for C-37	1 "	118737-0-01						
C-37	Level feed link	1 "	118729-0-01						
C-38	Set screw for C-36	1 "	100218-0-01	118727-0-01					
C-42	Stud (small) for C-44	1 "	118732-0-01						
C-43	Stopper pin for C-42, C-45	2 pcs.	118733-0-01						
C-44	Feed regulator	1 pce.	118728-0-01						
C-45	Stud (large) for C-44	1 "	118731-0-01						
C-32	Set screw for C-33	1 "	100218-0-01						
C-33	Feed lock shaft arm pin	1 "	118740-0-01						
C-35	Level feed connecting rod	1 "	118736-0-01						
C-39	Feed regulator stopper shaft	2 pcs.	118734-0-01						
C-40	Set screw for C-39	2 "	100013-0-03						
C-41	Washer for C-39	2 "	118735-0-01						

D

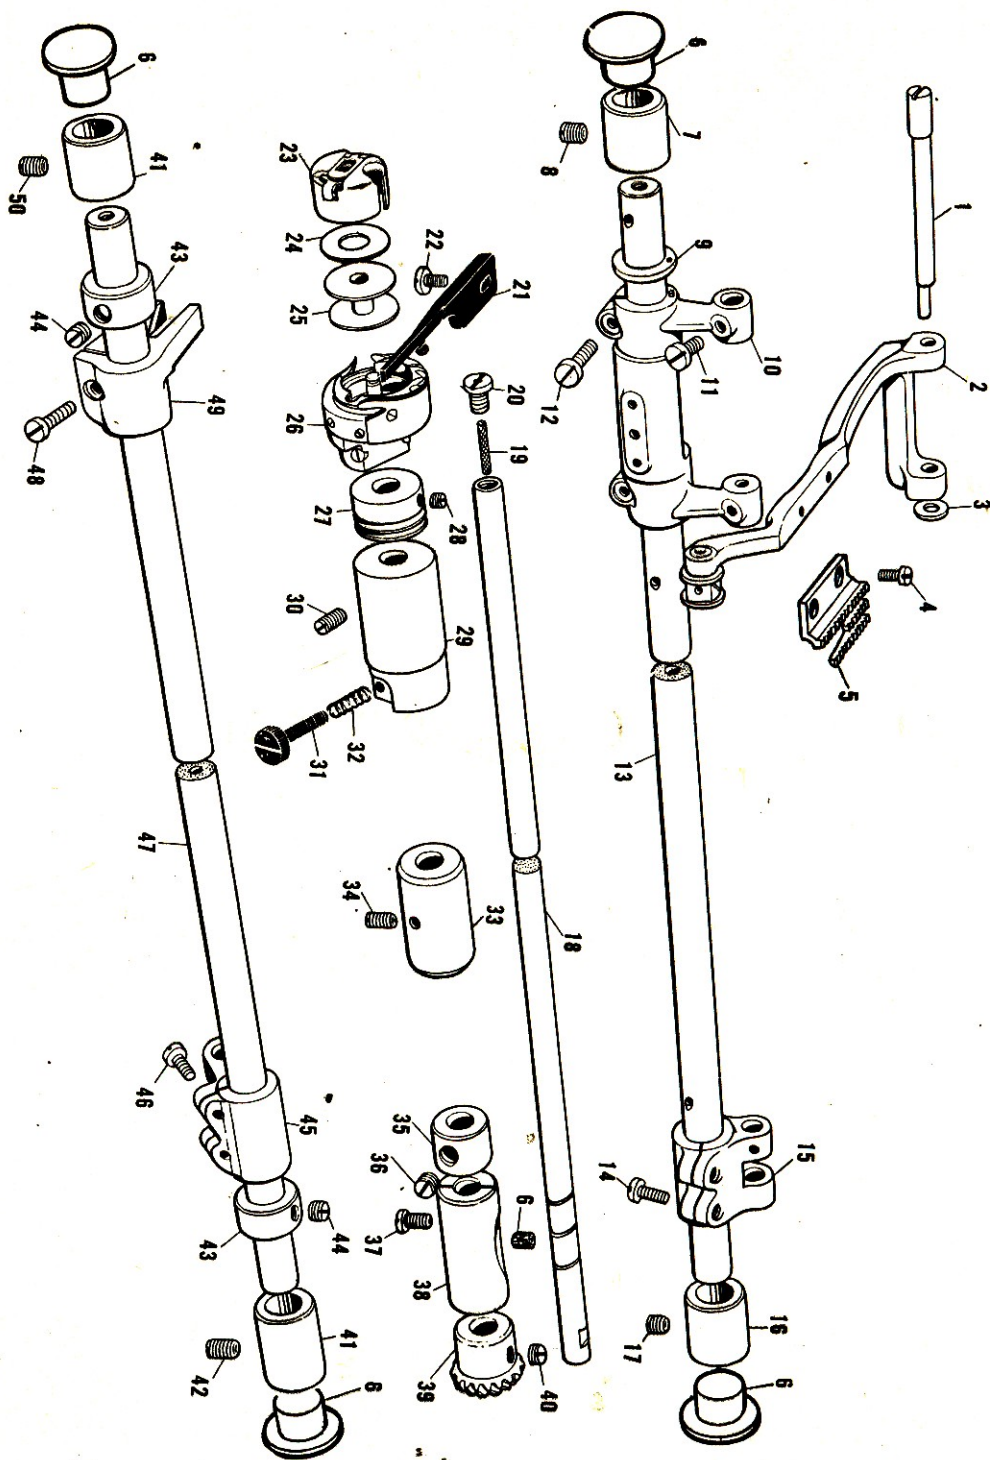


Ref. No.	Name of Parts	Q'ty	Parts-No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts-No.	Assembly No.
D-1	Feed bar shaft	1 pce.	116917-0-01		D-44	Set screw for D-43	4 pcs.	101706-0-01	180321-0-01
D-2	Feed bar assembly	1 "	178213-0-01		D-45	Vertical feed arm	1 pce.	116768-0-01	
D-3	Thrust ring for D-2	1 "	115663-0-01		D-46	Set screw for D-45	2 pcs.	100086-0-03	
D-4	Set screw for D-5	2 pcs.	100080-0-03		D-47	Vertical feed shaft	1 pce.	142572-0-01	
D-5	Feed dog for B757-3	1 pce.	100334-0-01		D-48	Set screw for D-49	1 "	106127-0-02	180322-0-01
D-6	Cap	4 pcs.	144751-0-00		D-49	Feed lifting arm	1 "	118217-0-01	
D-7	Feed rock shaft bushing (left)	1 pce.	116766-0-01		D-50	Set screw (left) for D-41	1 "	101706-0-01	
D-8	Set screw for D-7	1 "	101706-0-01						
D-9	Feed rock shaft thrust ring	1 "	116920-0-01						
D-10	Feed rock shaft arm bracket	1 "	116838-0-00						
D-11	Set screw for D-1	2 pcs.	100541-0-01						
D-12	Set screw for D-10	2 "	100086-0-03						
D-13	Feed rock shaft	1 pce.	142573-0-01						
D-14	Set screw for D-15	2 pcs.	100320-0-03						
D-15	Feed rock shaft arm	1 pce.	118739-0-01						
D-16	Feed rock shaft bushing (right)	1 "	116919-0-01						
D-17	Set screw for D-16	1 "	101706-0-01						
D-18	Lower shaft	1 "	109160-0-01						
D-19	Oil felt for lower shaft	1 "	106436-0-01						
D-20	Lower shaft oil cap screw	1 "	109173-0-01						
D-21	Bobbin case holder position bracket	1 "	140757-0-01						
D-22	Set screw for D-21	1 "	107407-0-02						
D-23	Bobbin case	1 "	100369-0-01						
D-24	Bobbin case sheet	1 "	140356-0-01						
D-25	Bobbin	1 "	116782-0-01						
D-26	Rotary hook assembly for B757-3	1 "	116780-0-01						
D-27	Oil rejector for lower shaft	1 "	104572-0-01	144943-0-01					
D-28	Set screw for D-27	2 pcs.	100218-0-02						
D-29	Lower shaft bushing (left)	1 pce.	118761-0-00						
D-30	Set screw for D-29	1 "	104869-0-02						
D-31	Oil flow adjusting screw	1 "	116793-0-01						
D-32	Spring for D-31	1 "	116794-0-01						
D-33	Lower shaft bushing (intermediate)	2 pcs.	118762-0-00						
D-34	Set screw for D-33	1 pce.	100539-0-02						
D-35	Set collar for D-38	1 "	104521-0-01	181995-0-01					
D-36	Set screw for D-35	2 pcs.	101706-0-01						
D-37	Set screw for D-38	1 pce.	100088-0-02						
D-38	Lower shaft bushing (right)	1 "	104520-0-00						
D-39	Lower shaft gear	1 "	117875-0-01						
D-40	Set screw for D-39	2 pcs.	100251-0-01						
B-63	Vertical shaft gear (lower)	1 pce.	117874-0-01	180023-0-01					
B-64	Set screw for B-63	3 pcs.	100251-0-01						
D-41	Vertical feed shaft bushing	2 pcs.	116766-0-01						
D-42	Set screw (right) for D-41	1 pce.	100251-0-01						
D-43	Vertical feed shaft collar	2 pcs.	116918-0-01	180321-0-01					

E

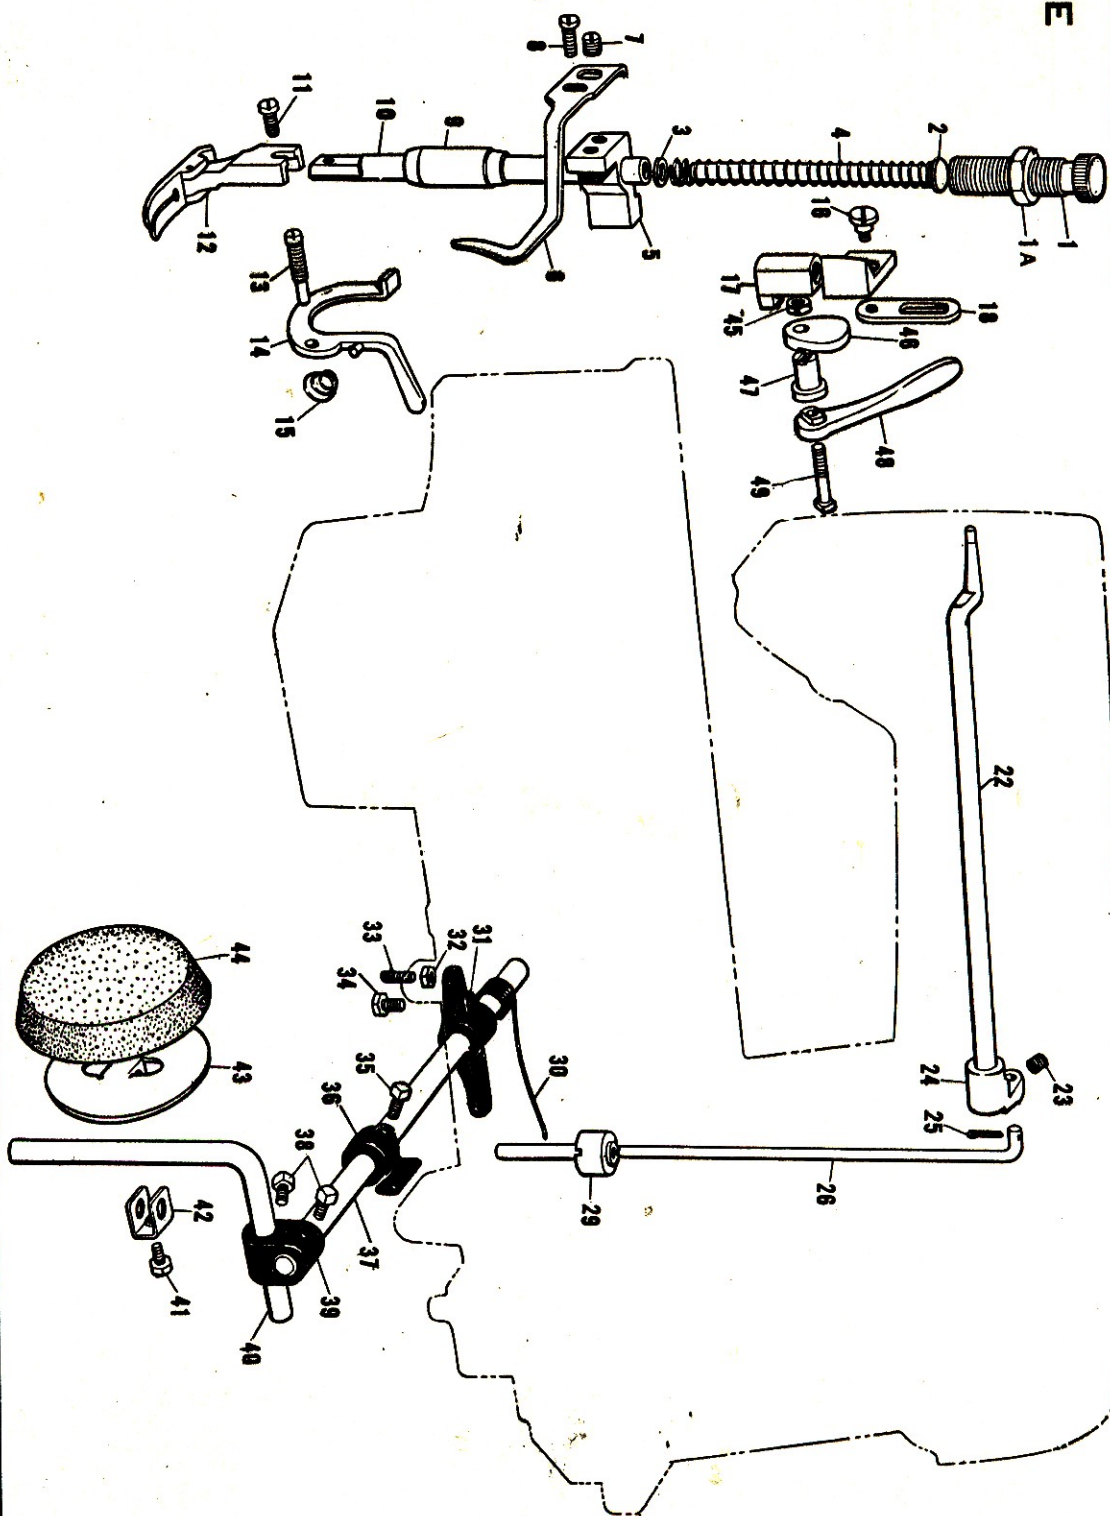

Ref. No.	Name of Parts	Q'ty	Parts-No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts-No.	Assembly No.
E-1	Pressure adjusting screw	1 pc.	141207-0-01						
E-1A	Nut for E-1	1 "	102412-0-01						
E-2	Presser spring bar	1 "	141208-0-01						
E-3	Presser spring washer	1 "	140407-0-01						
E-4	Presser spring	1 "	141728-0-01						
E-5	Presser bar bracket	1 "	100497-0-00						
E-7	Set screw for E-1	1 "	100013-0-03	180102-0-01					
E-6	Presser bar bracket thread guide	1 "	111469-0-01						
E-8	Set screw for E-6	1 "	100341-0-01						
E-9	Presser bar bushing	1 "	111467-0-01	182056-0-01					
E-10	Presser bar	1 "	111466-0-01						
E-11	Set screw for E-12	1 "	100287-0-04						
E-12	Presser foot	1 "	113280-0-01						
E-13	Hinge screw for E-14	1 "	109163-0-01						
E-14	Tension release crank	1 "	111470-0-00						
E-15	Tension release spring	1 "	100405-0-01						
E-16	Stud screw for E-18	1 "	100294-0-01						
E-17	Presser bar lifting bracket	1 "	100290-0-01						
E-18	Presser bar lifting connector	1 "	109144-0-01						
E-22	Knee lifter upper crank shaft	1 "	109145-0-01						
E-23	Set screw for E-24	1 "	100251-0-01						
E-24	Knee lifter crank (upper)	1 "	141167-0-00	142756-0-01					
E-25	Joint pin	1 "	114909-0-01						
E-26	Knee lifter joint	1 "	141168-0-01						
E-29	Knee lifter complying bar	1 "	104887-0-01						
E-30	Knee lifter spring	1 "	104886-0-01						
E-31	Knee lifter crank (lower)	1 "	104883-0-02						
E-32	Lock nut for E-33	1 "	100022-0-04						
E-33	Stopper screw for E-31	1 "	104885-0-01						
E-34	Set bolt for E-31	1 "	104884-0-01						
E-35	Set bolt for E-36	1 "	104884-0-01						
E-36	Stopper collar for E-29	1 "	104890-0-02						
E-37	Knee lifter shaft	1 "	104882-0-01						
E-38	Set bolt for E-39	2 pcs.	100463-0-01						
E-39	Knee lifter bracket	1 pc.	143989-0-01						
E-40	Knee lifter bar	1 "	104619-0-02						
E-41	Set screw for E-42	1 "	110087-0-01	180814-0-01					
E-42	Knee lifter plate stopper	1 "	114967-0-01						
E-43	Knee lifter plate	1 "	114966-0-01						
E-44	Knee lifter plate cover	1 "	140503-0-01						
E-45	Nut for E-49	1 "	112406-0-01						
E-46	Presser bar lifter cam	1 "	142015-0-01						
E-47	Presser bar lifter shaft	1 "	142017-0-01	142014-0-01					
E-48	Presser bar lifter lever	1 "	142016-0-01						
E-49	Set bolt	1 "	142018-0-01						

F

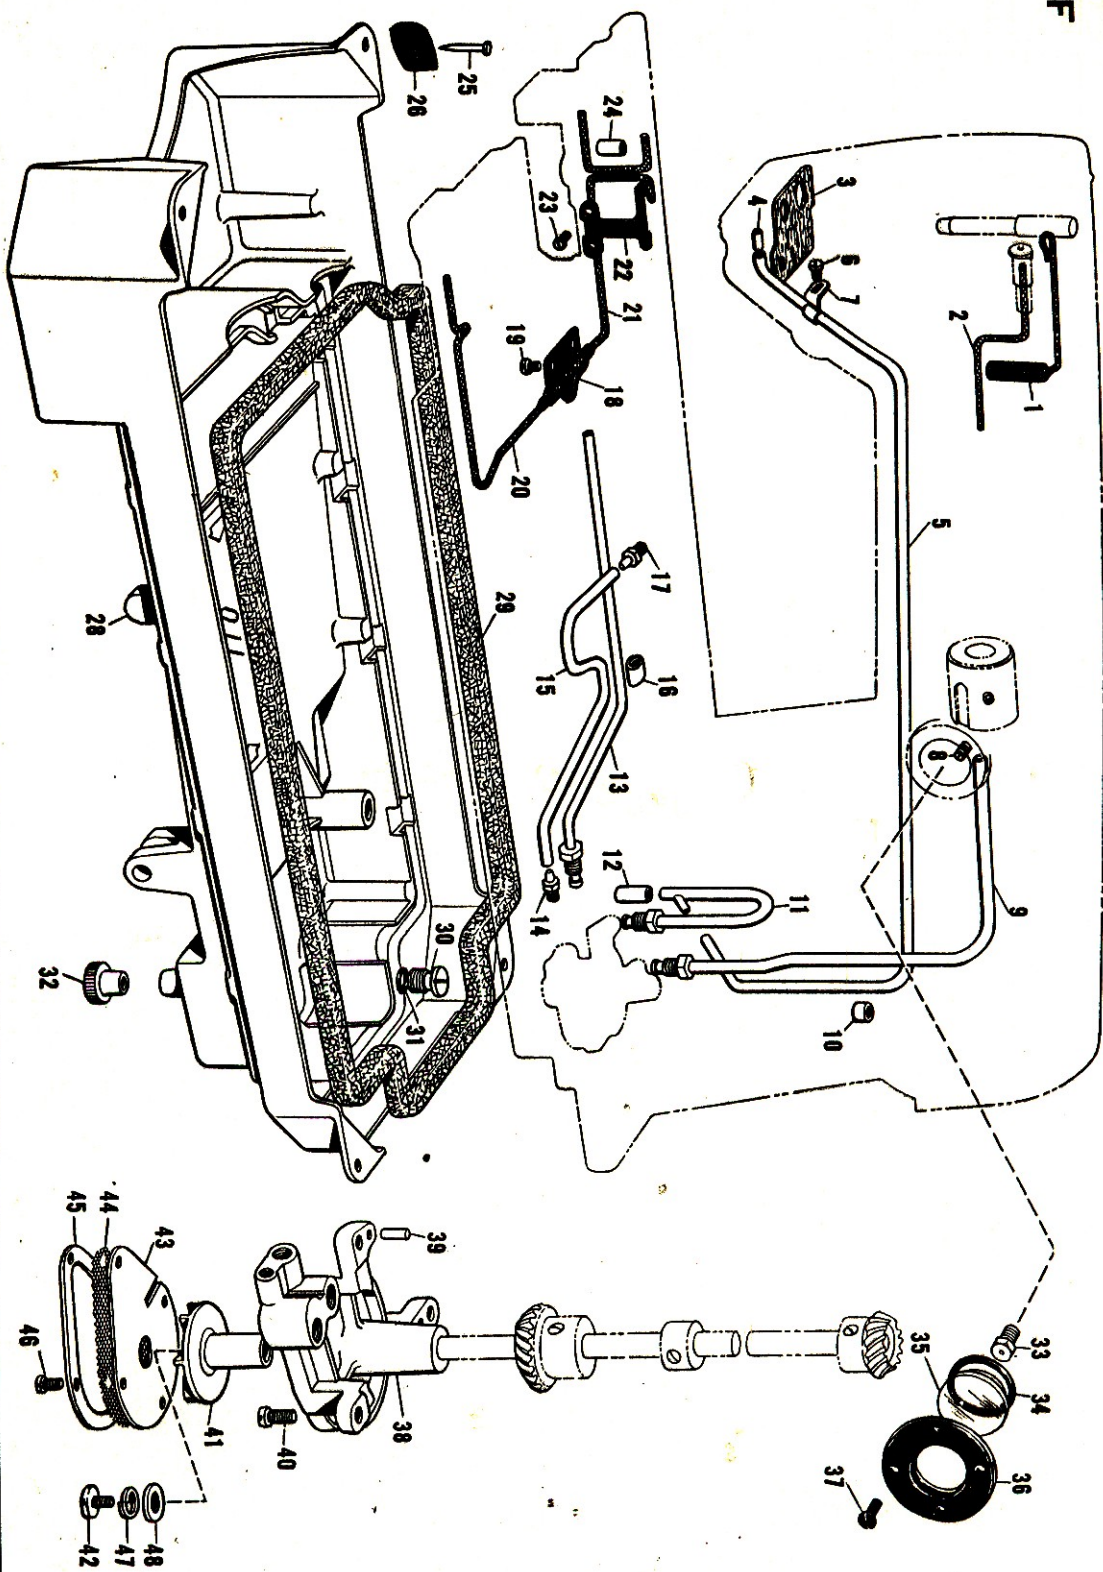

Ref. No.	Name of Parts	Q'ty	Parts-No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts-No.	Assembly No.
F-1	Wick 4 X 4 for needle bar	1 pce.	108804-0-01		F-47	Spring washer for F-42	1 pce.	028350-2-43	
F-2	Wick 4 X 4 for B-12	1 "	109405-0-01		F-48	Washer for F-42	1 "	105161-0-04	
F-3	Dust cover	1 "	111461-0-01						
F-4	Suction pipe for jet pump	1 "	109191-0-00						
F-5	Vinyl tube 3 X 600	1 "	111198-0-01						
F-6	Set screw for F-7	1 "	100242-0-04						
F-7	Tube holder for F-5	1 "	109193-0-01						
F-8	Set screw for F-9	1 "	104869-0-02						
F-9	Oil pipe for upper shaft	1 "	116924-0-01						
F-10	Vinyl tube 9 X 7	2 pcs.	118996-0-00						
F-11	Jet pump	1 pce.	118774-0-01						
F-12	Spring collar	1 "	143288-0-00						
F-13	Oil pipe for lower shaft	1 "	116817-0-01						
F-14	Oil plug for F-38	1 "	110872-0-00						
F-15	Vinyl tube (3 X 175) for D-33	1 "	116796-0-01						
F-16	Vinyl tube 7 X 5 for E-13, 15	1 "	117258-0-01						
F-17	Oil plug for D-33	1 "	110872-0-00						
F-18	Wick stopper (upper) for F-20, 21	1 "	109172-0-01						
F-19	Set screw for F-18	2 pcs.	100242-0-04						
F-20	Wick 4 X 4 for D-47	1 pce.	108802-0-01						
F-21	Wick 4 X 4 for D-13	1 "	108801-0-01						
F-22	Wick stopper for D-2	1 "	109171-0-01						
F-23	Set screw for F-22	2 pcs.	105295-0-03						
F-24	Vinyl tube for F-21	1 pce.	104566-0-01						
F-25	Nail for F-26	8 pcs.	109714-0-00						
F-26	Head seat on oil pan	4 "	143958-0-01						
F-28	Oil pan	1 pce.	140440-0-00						
F-29	Packing for oil pan (cork)	2 pcs.	114747-0-01						
F-30	Cap screw for F-28	1 pce.	140518-0-01						
F-31	Rubber packing for F-30	1 "	081007-0-70						
F-32	Oil cock	1 "	140480-0-01						
F-33	Oil hole bolt for oil gauge	1 "	143196-0-01						
F-34	Rubber packing for F-35	1 "	081014-6-70						
F-35	Oil gauge window	1 "	104547-0-01						
F-36	Oil gauge flange	1 "	104546-0-01						
F-37	Set screw for F-36	4 pcs.	102538-0-02						
F-38	Oil pump body	1 pce.	116927-0-00						
F-39	Taper pin for F-38	2 pcs.	102456-0-00						
F-40	Set screw for F-38	3 "	100086-0-03						
F-41	Oil propeller	1 pce.	109859-0-00						
F-42	Set screw for F-41	1 "	106754-0-04						
F-43	Oil pump cover	1 "	109860-0-00						
F-44	Oil filter	1 "	117093-0-00						
F-45	Oil filter flange	1 "	104864-0-00						
F-46	Set screw for F-45	4 pcs.	100137-0-01						