


PARTS LIST OF MODEL

DDL-127

HIGH SPEED SINGLE NEEDLE, LOCK STITCH INDUSTRIAL SEWING MACHINE

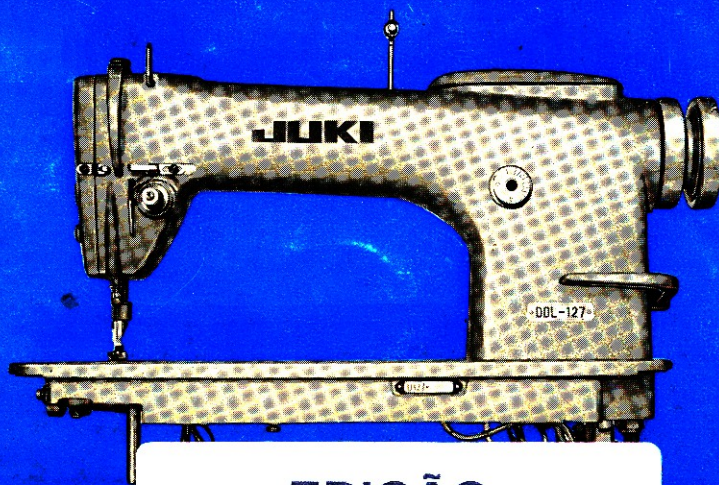


EDIÇÃO
01

TOKYO JUKI INDUSTRIAL CO., LTD.

HOW TO MAKE USE OF THIS PARTS LIST

1. This is a consolidated PARTS LIST of Model DDL-127
2. This list is divided, as a principle, into various sections according to the functions of parts and also contains illustration to assist you visually.


For example, if you want some parts for the Main Shaft Components, just refer to the section on "Main Shaft Components" etc.
3. The figures on the illustrations indicate the corresponding numbers on the LIST.
4. On bits and pieces parts such as screws, etc. the illustration shows only a representative one and so for the required quantity of these parts, refer to the LIST.
5. At the back of the list will be found a numerical index of all the parts shown in this list. This will facilitate locating the illustration and description when only the part number is known.

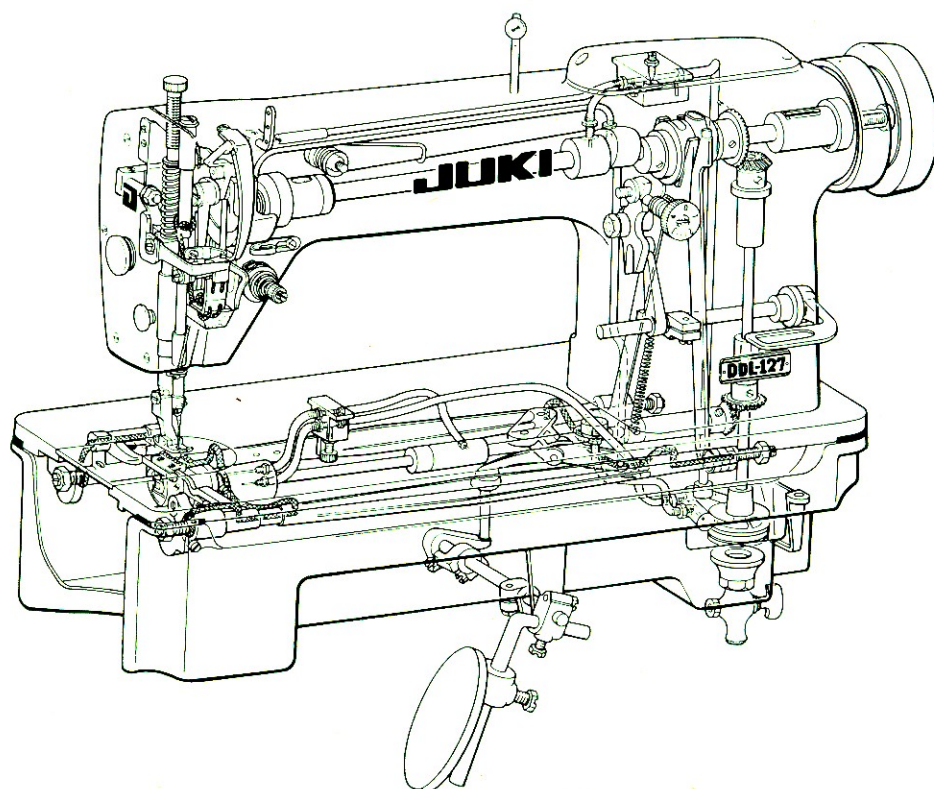

CONTENTS


1. MAIN FRAME & NEEDLE TENSION COMPONENTS	1
2. MAIN SHAFT COMPONENTS	2
3. FEED ROCKER, HOOK, FEED DRIVING & UPRIGHT SHAFTS MECHANISM COMPONENTS.....	3
4. STITCH REGULATING MECHANISM COMPONENTS	4
5. NEEDLE BAR & TAKE-UP LEVER COMPONENTS.....	5
6. PRESSER BAR & FOOT LIFTER MECHANISM COMPONENTS	6
7. OIL LUBRICATION MECHANISM COMPONENTS	7
8. OIL RESERVOIR & KNEE LIFTER COMPONENTS	8
9. NUMERICAL INDEX OF PARTS	9

1. MAIN FRAME & NEEDLE TENSION COMPONENTS

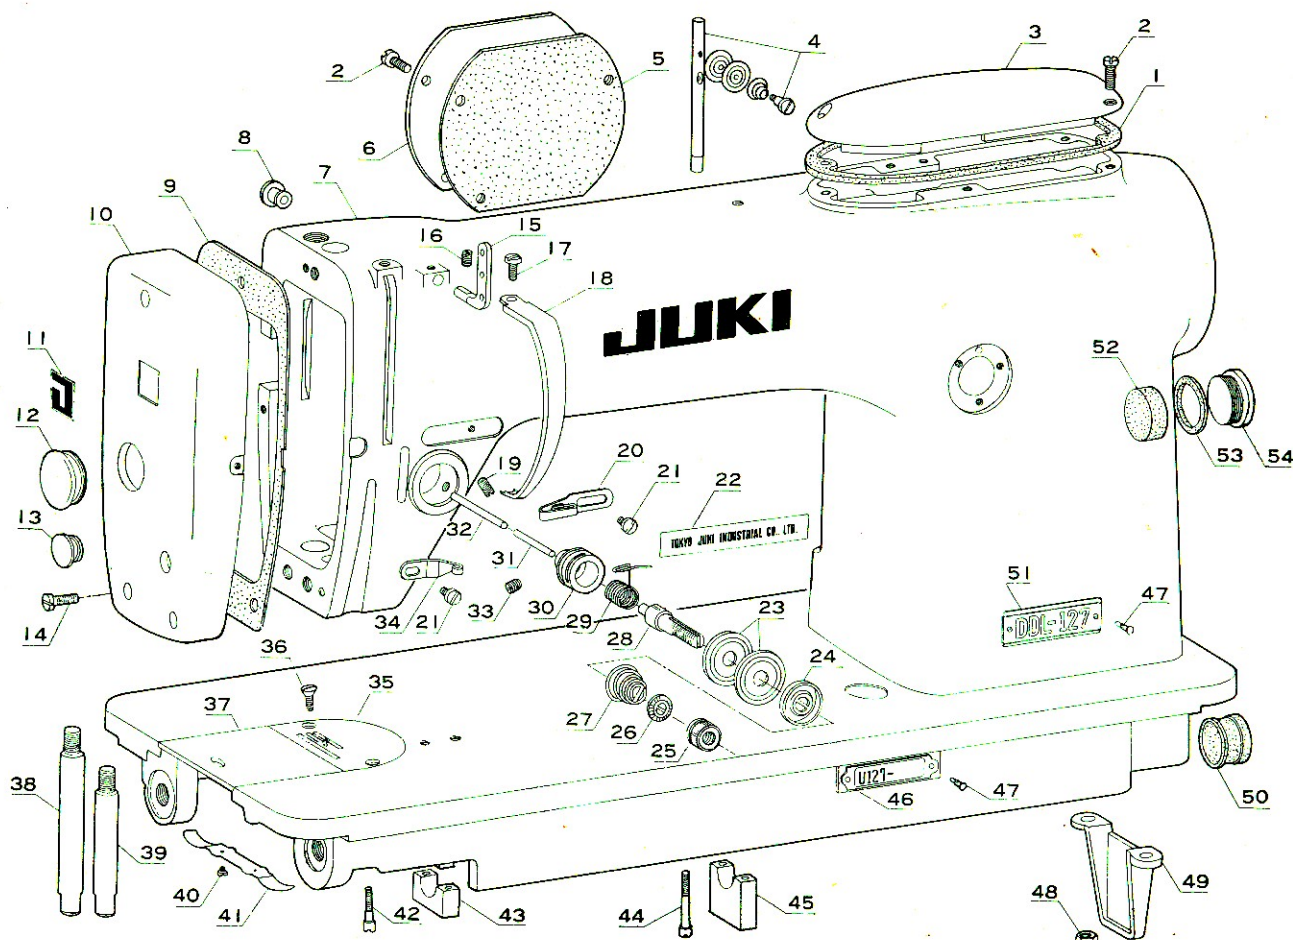


Ref. No.	Part No.	Description	Amt. Req.	Ref. No.	Part No.	Description	Amt. Req.
1	B-1116-125-000	Top cover gasket	1	92	B-3128-012-000	Take-up spring	1
2	SS-7111120-SP	Screw, for top cover & side cover	7	30	B-3111-126-000	Tension post socket	1
3	B-1113-125-000	Top cover	1	31	B-3118-125-000	Tension release pin	1
4	B-1113-155-0A0	Needle thread guide pin assembly	1	32	B-3127-127-000	Tension release auxiliary pin	1
5	B-1119-125-000	Side cover gasket	1	33	SS-8090670-SP	Screw, for tension post	1
6	B-1118-125-000	Side cover	1	34	B-1116-127-000	Frame thread guide (B)	1
7	B-1101-127-000	Main frame	1	35	B-1109-012-A00	Throat plate (A)	1
8	B-1164-012-000	Plug	1	36	SS-2110092-SP	Screw, for throat plate	2
9	B-1122-127-000	Head cover gasket	1	37	B-1110-012-000	Bed slide	1
10	B-1121-127-000	Head cover	1	38	B-1104-122-000	Bed screw stud (A)	1
11	B-1178-092-000	JUKI mark	1	39	B-1105-122-000	Bed screw stud (B)	1
12	B-1179-541-000	Plug (A), for head cover	1	40	SS-6060210-SP	Screw, for bed slide spring	2
13	B-1180-541-000	Plug (B), for head cover	1	41	B-1111-012-000	Bed slide spring	1
14	SS-7091110-SP	Screw, for head cover	3	42	SS-6091510-SP	Screw, for feed rocker shaft support block	2
15	B-1128-541-000	Three-hole thread eyelet	1	43	B-1107-122-000	Feed rocker shaft support block	1
16	SS-8110510-SP	Screw, for three-hole thread eyelet	1	44	SS-6092420-SP	Screw, for feed driving shaft support block	2
17	SS-7110710-SP	Screw, for take-up shield	1	45	B-1108-122-000	Feed driving shaft support block	1
18	B-1123-127-000	Take-up shield	1	46	B-1199-127-000	Number plate	1
19	SS-8150750-SP	Screw, for tension post socket	1	47	B-1161-012-000	Rivet, for number plate & model plate	4
20	B-1118-127-000	Frame thread guide (A)	1	48	NS-6150310-SP	Lock nut, for bed leg	2
21	SS-7090510-SP	Screw, for frame thread guide	2	49	B-1106-122-000	Bed leg	1
22	B-1159-041-000	Medallion	1	50	B-1166-122-000	Plug (large)	1
23	B-3126-012-000	Tension disc	2	51	B-1160-127-000	Model plate	1
24	B-3132-012-000	Tension release washer	1	52	B-1171-122-000	Oil splasher	1
25	B-3116-125-000	Tension nut	1	53	B-1170-122-000	Oil splasher gasket	1
26	B-3120-125-000	Tension disc grummet	1	54	B-1169-122-000	Plug screw, for oil splasher	1
27	B-3129-012-000	Tension spring	1				
28	B-3115-155-000	Tension post	1				

2. MAIN SHAFT COMPONENTS

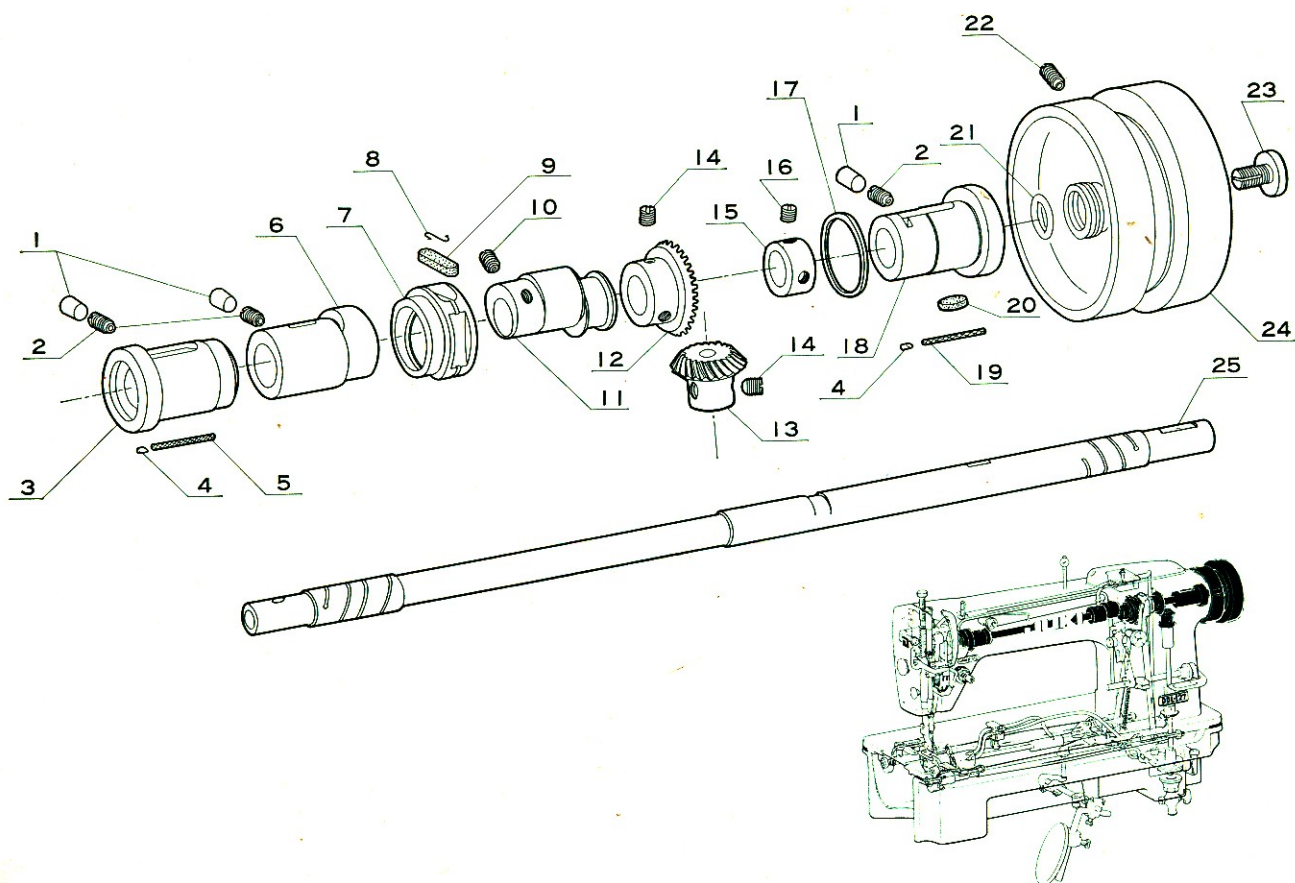


Ref. No.	Part No.	Description	Amt. Req.
1	TA-0691001-RO	Plug, for bushing set screw	3
2	SS-8151150-SP	Screw, for main shaft bushing	3
3	B-1204-155-000	Main shaft front bushing	1
4	TA-0300503-RO	Plug, for front/rear bushing oil wick	2
5	B-3542-155-A00	Oil wick, for front bushing	1
6	B-1203-125-000	Main shaft center bushing	1
7	B-1211-012-000	Feed drive eccentric retainer housing	1
8	B-1213-012-000	Oil felt retainer, for eccentric retainer housing	1
9	B-1212-012-000	Oil felt, for eccentric retainer housing	2
10	SS-8150410-SP	Screw, for feed drive eccentric	2
11	B-1210-127-000	Feed drive eccentric	1
12	B-1305-012-000	Gear	1
13	B-1306-155-000	Pinion	1
14	SS-8660810-SP	Screw, for gear & pinion	4
15	CS-1471012-SH	Main shaft thrust collar	1
16	SS-8150410-SP	Screw, for thrust collar	2
17	B-1235-122-000	Gasket, for rear bushing	1
18	B-1204-122-000	Main shaft rear bushing	1
19	B-3542-155-B00	Oil wick, for rear bushing	1
20	B-1218-012-000	Oil felt, for rear bushing	1
21	RO-1331701-00	Rubber ring, for hand wheel	1
22	SS-8151150-SP	Screw, for hand wheel	2
23	B-1233-012-000	Adjusting screw, for hand wheel	1
24	B-1213-125-000	Hand wheel	1
25	B-1201-127-000	Main shaft	1

3. FEED ROCKER, HOOK, FEED DRIVING & UPRIGHT SHAFTS MECHANISM COMPONENTS

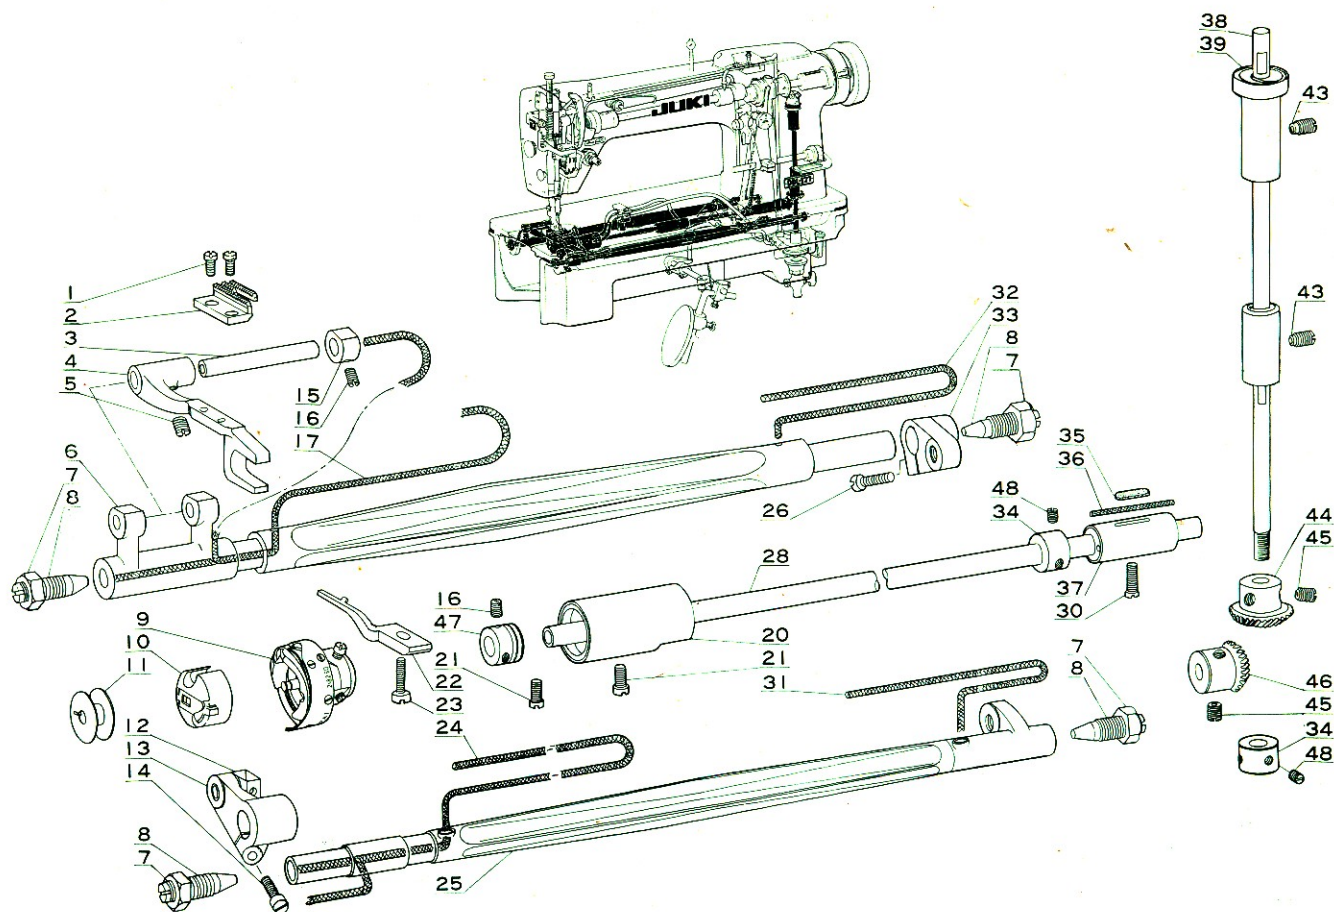


Ref. No.	Part No.	Description	Amt. Req.	Ref. No.	Part No.	Description	Amt. Req.
1	SS-4080620-TP	Screw, for feed dog	2	26	SS-7111410-TP	Clamp screw, for feed rocker shaft crank	1
2	B-1613-012-A00	Feed dog (A)	1	28	B-1801-412-000	Hook shaft	1
3	B-1604-012-000	Feed bar shaft	1	31	B-1641-122-D00	Oil wick (rear), for feed driving shaft	1
4	B-1602-012-000	Feed bar	1	32	B-1641-122-B00	Oil wick (rear), for feed rocker shaft	1
5	SS-8620610-TP	Clamp screw, for feed bar shaft	1	33	B-1607-122-000	Feed rocker shaft crank	1
6	B-1601-122-000	Feed rocker shaft	1	34	CS-0791016-SH	Hook shaft thrust collar (B)	2
7	NS-6740610-SP	Plug screw nut, for feed rocker shaft & feed driving shaft	4	35	B-1806-038-000	Oil felt, for hook shaft rear bushing	1
8	B-1113-012-000	Plug screw, for feed rocker shaft & feed driving shaft	4	36	B-3542-155-D00	Oil wick, for hook shaft rear bushing	1
9	B-1830-127-0A0	Rotary hook (assembly)	1	37	B-1804-155-000	Hook shaft rear bushing	1
10	B-1837-155-0A0	Bobbin case (assembly)	1	38	B-1301-155-000	Upright shaft	1
11	B-9117-155-000	Bobbin	1	39	B-1302-155-000	Upright shaft upper bushing	1
12	B-1633-122-0A0	Stitch regulating lever block & stud (assembly)	1	41	B-1303-161-000	Upright shaft lower bushing	1
13	B-1706-012-000	Feed driving shaft crank	1	43	SS-8151150-SP	Screw, for upright shaft bushing	2
14	SS-7111410-SP	Clamp screw, for feed driving shaft crank	1	44	B-1307-155-A00	Mitre gear (large)	1
15	CS-0640863-SH	Feed bar shaft thrust collar	1	45	SS-8660810-SP	Screw, for mitre gear	4
16	SS-8110510-TP	Screw, for feed bar shaft & hook shaft thrust collar	4	46	B-1308-155-B00	Mitre gear (small)	1
17	B-1641-122-A00	Oil wick (front), for feed rocker shaft	1	47	CS-0791066-SH	Hook shaft thrust collar	1
20	B-1802-412-000	Hook shaft front bushing (assembly)	1	48	SS-8110520-TP	Screw, for thrust collar	4
21	SS-7110810-SP	Screw, for hook shaft front bushing	1				
22	B-1835-012-000	Bobbin case holder positioning finger	1				
23	SS-6111620-SP	Screw, for bobbin case holder positioning finger	1				
24	B-1641-122-C00	Oil wick (front), for feed driving shaft	1				
25	B-1703-125-000	Feed driving shaft	1				

4. STITCH REGULATING MECHANISM COMPONENTS

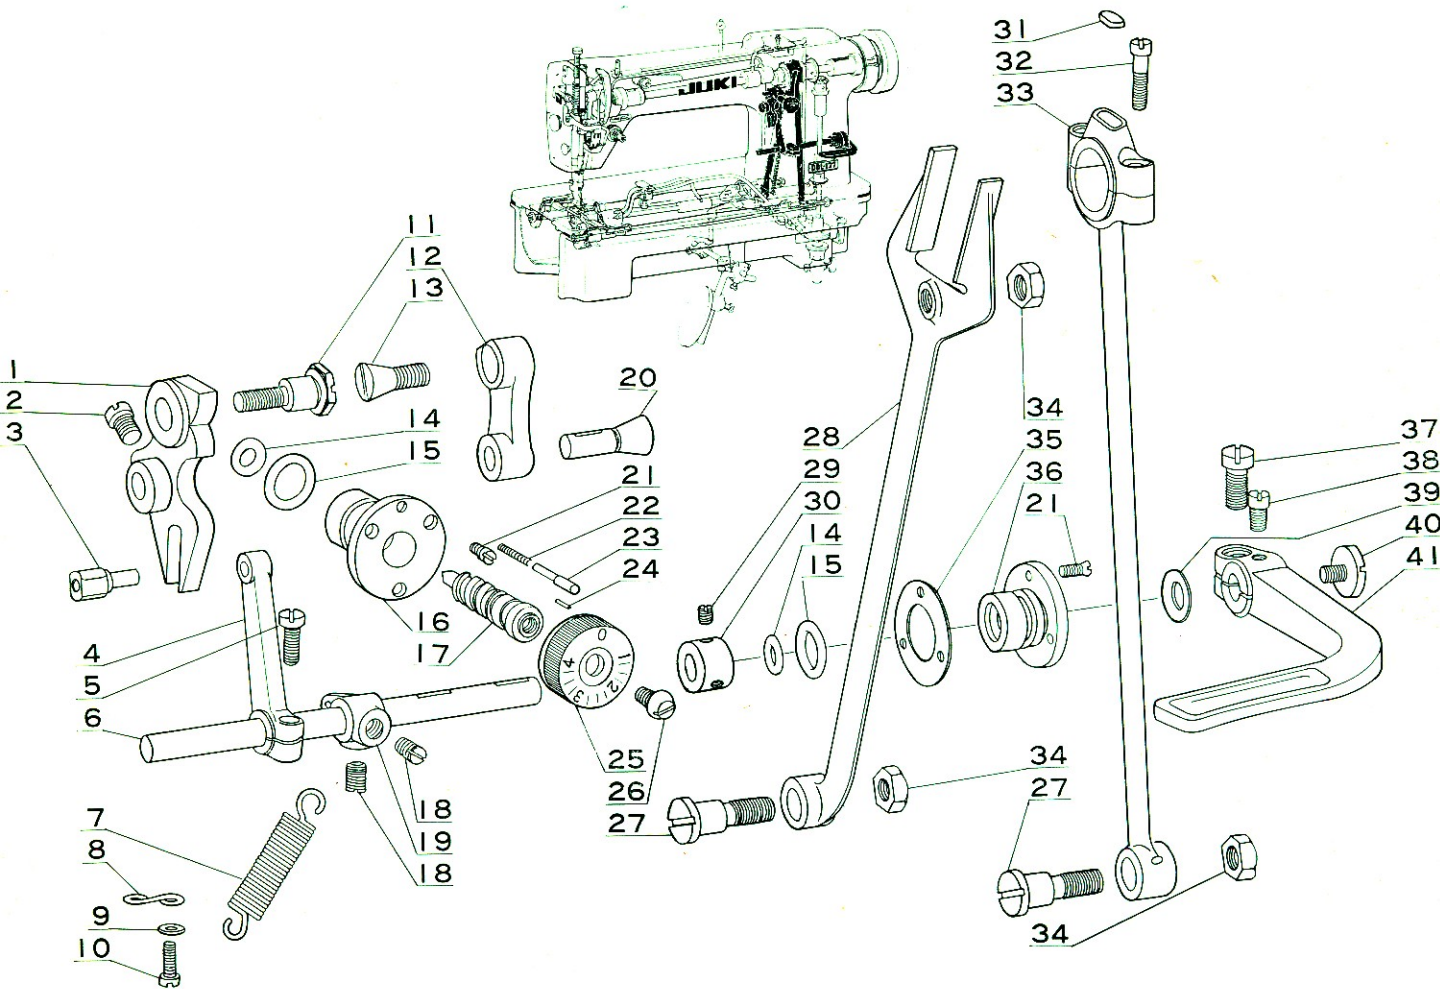


Ref. No.	Part No.	Description	Amt. Req.	Ref. No.	Part No.	Description	Amt. Req.
1	B-1622-122-000	Stitch regulator	1	26	SS-6121050-SP	Screw, for indicating dial	1
2	SS-6661110-SP	Screw, for connecting link taper stud	1	27	SD-1020961-SP	Stud screw, for forked rod & feed driving rod	2
3	B-1633-122-OA0	Stitch regulating lever block & stud (assembly)	1	28	B-1613-125-000	Forked rod	1
4	B-1627-122-000	Stitch regulating lever shaft crank	1	29	SS-8110520-TP	Screw, for stitch regulating lever shaft thrust collar	2
5	SS-6121210-SP	Clamp screw, for lever shaft crank	1	30	CS-0791016-SH	Stitch regulating lever shaft thrust collar	1
6	B-1623-122-000	Stitch regulating lever shaft	1	31	B-1702-012-000	Felt, for feed driving rod	1
7	B-1646-122-000	Stitch regulating lever spring	1	32	SS-6121610-SP	Clamp screw, for feed driving rod	2
8	B-1648-122-000	Spring hook (B)	1	33	B-1701-125-000	Feed driving rod	1
9	WP-0371016-SD	Washer, for spring hook (B) set screw	1	34	NS-6680410-SP	Lock nut, for stud screw	3
10	SS-4091010-SP	Screw, for spring hook (B)	1	35	B-1642-122-000	Gasket, for lever shaft bushing	1
11	SD-1020851-SP	Stud screw, for stitch regulator	1	36	B-1631-122-000	Stitch regulating lever shaft bushing	1
12	B-1619-012-000	Forked rod connecting link	1	37	SS-7151210-SP	Clamp screw, for stitch regulating lever	1
13	B-1621-012-B00	Taper screw, for connecting link	1	38	SS-6620730-SP	Screw, for stitch regulating lever	1
14	RO-0742401-00	Rubber ring (small), for screw bushing	2	39	A-1626-001-000	Washer, for stitch regulating lever	1
15	RO-1342401-00	Rubber ring (large), for screw bushing & lever shaft bushing	2	40	SS-7620750-SP	Adjusting screw, for stitch regulating lever	1
16	B-1636-122-000	Stitch regulating screw bushing	1	41	B-1621-125-000	Stitch regulating lever	1
17	B-1634-122-000	Stitch regulating screw	1				
18	SS-9150711-SP	Screw, for spring hook (A)	2				
19	B-1647-122-000	Spring hook (A)	1				
20	B-1621-012-000	Taper pin, for connecting link	1				
21	SS-2090710-SP	Screw, for screw bushing & lever shaft bushing	6				
22	B-1148-012-000	Stitch regulating pin spring	1				
23	B-1147-012-000	Stitch regulating pin	1				
24	B-1648-012-000	Notch pin, for stitch length indicating dial	1				
25	B-1623-125-000	Stitch length indicating dial	1				

5. NEEDLE BAR & TAKE-UP LEVER COMPONENTS

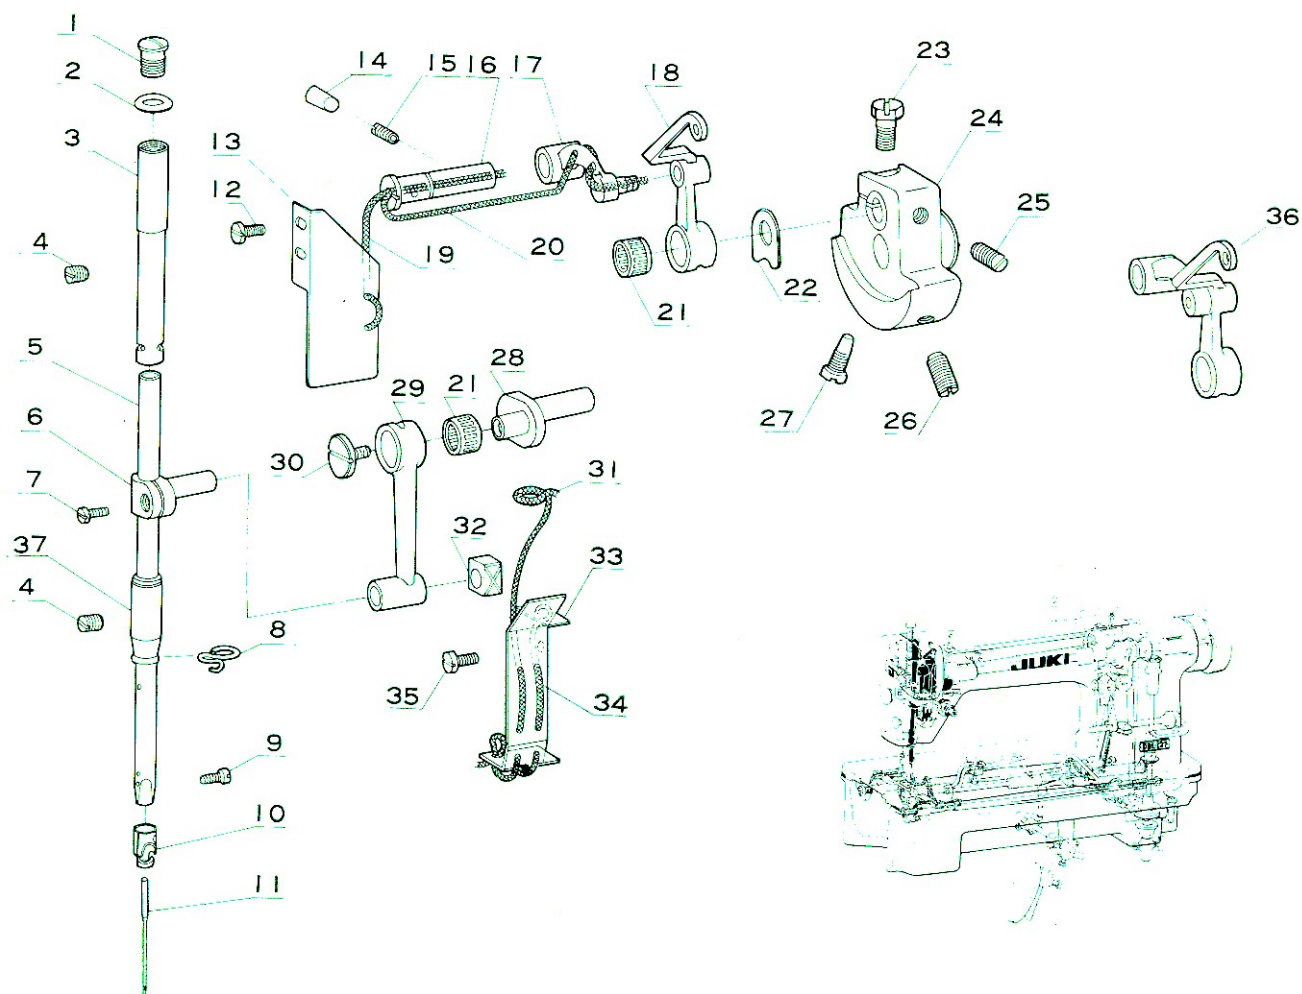

Ref. No.	Part No.	Description	Amt. Req.	Ref. No.	Part No.	Description	Amt. Req.
1	B-1414-125-000	Cap screw, for needle bar upper bushing	1	27	SS-7681750-TP	Screw (A), for counterweight	1
2	RO-0681901-00	Rubber ring, for needle bar upper bushing	1	28	B-1209-542-000	Needle bar crank pin	1
3	B-1402-541-000	Needle bar upper bushing	1	29	B-1408-127-000	Needle bar link	1
4	SS-8150310-SP	Screw, for needle bar bushing	2	30	B-1903-541-000	Left hand screw, for crank pin	1
5	B-1401-127-000	Needle bar	1	31	B-1423-127-000	Oil wick, for needle bar upper bushing	1
6	B-1411-127-000	Needle bar connection	1	32	B-1414-232-000	Needle bar connection sliding block	1
7	SS-7110710-SP	Clamp screw, for needle bar connection	1	33	B-1124-127-000	Frame thread guide oil splasher	1
8	B-1419-012-000	Needle bar thread guide	1	34	B-1172-127-000	Oil wick, for frame thread guide oil splasher	1
9	SS-7080510-SP	Screw, for needle	1	35	SS-7110710-SP	Screw, for frame thread guide oil splasher	2
10	B-1418-541-000	Needle thread guide	1	36	B-1901-127-0A0	Take-up lever assembly	1
11	B-9108-012-000	Needle #14 DB×1, (16×231)	1	37	B-1403-155-000	Needle bar lower bushing	1
12	SS-7110710-SP	Screw, for take-up lever link oil splasher	2				
13	B-1420-127-000	Take-up lever link oil splasher	1				
14	TA-0691001-RO	Plug, for take-up lever pin set screw	1				
15	SS-8151150-SP	Screw, for take-up lever pin	1				
16	B-1904-541-000	Take-up lever pin	1				
17	B-1902-127-000	Take-up lever link	1				
18	B-1901-127-000	Take-up lever	1				
19	B-1172-127-000	Oil wick, for take-up lever oil splasher	1				
20	B-1909-127-000	Oil wick, for take-up lever link	1				
21	B-1905-541-000	Needle bearing, for needle bar crank pin	2				
22	B-1212-127-000	Counterweight wearing plate	1				
23	SS-9661120-SP	Clamp screw, for needle bar crank	1				
24	B-1206-127-000	Counterweight	1				
25	SS-8660610-SP	Screw, for needle bar crank	1				
26	SS-8581950-SK	Screw (B), for counterweight	1				


6. PRESSER BAR & FOOT LIFTER MECHANISM COMPONENTS

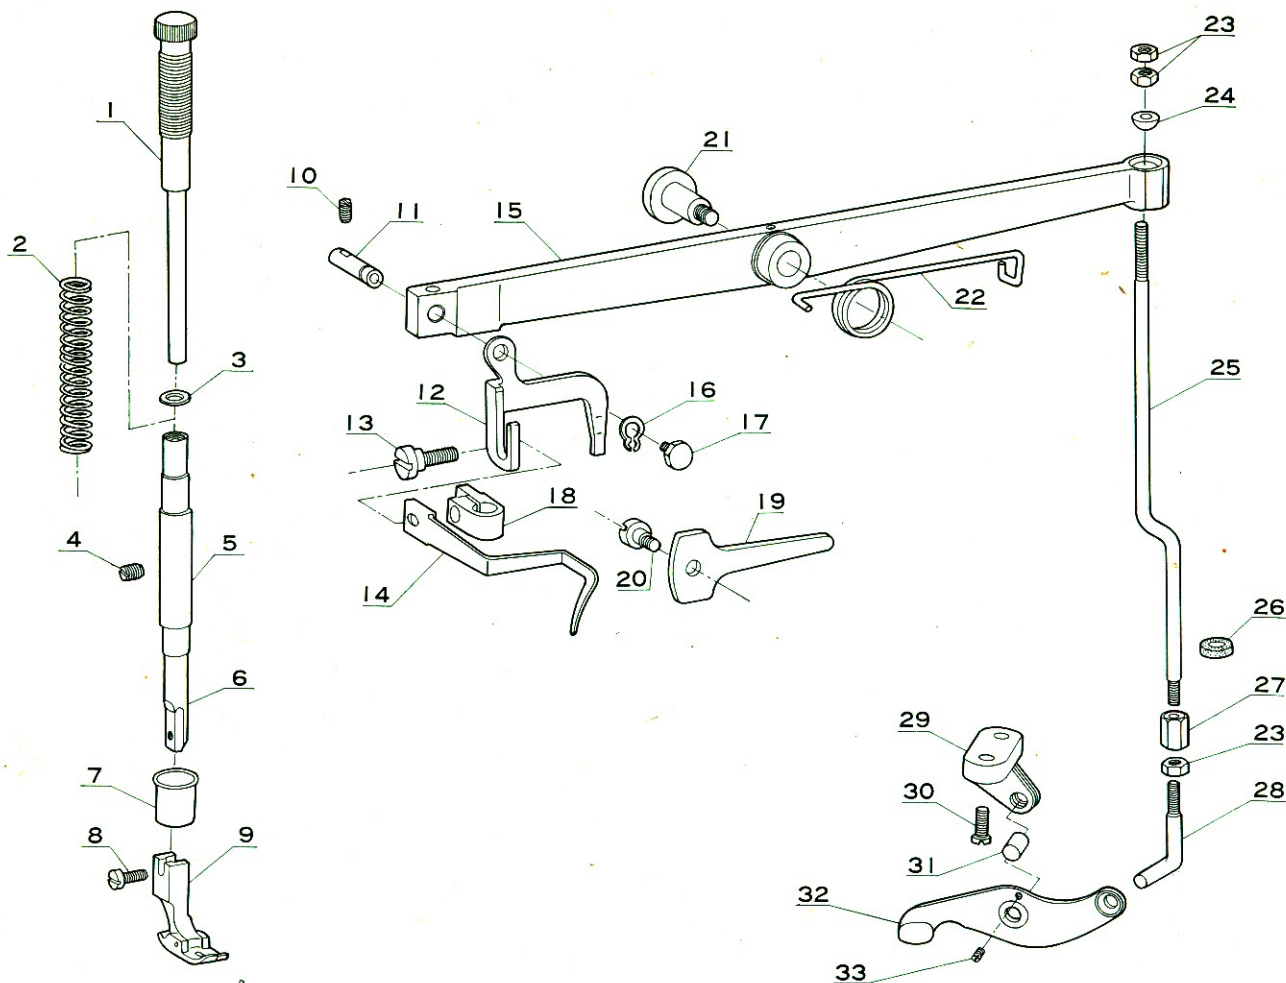

Ref. No.	Part No.	Description	Amt. Req.
1	B-1509-126-WA0	Presser spring regulator assembly	1
2	B-1505-126-W00	Presser spring	1
3	WP-0700816-SH	Washer, for presser spring	1
4	SS-8150310-SP	Screw, for presser bar lower bushing	1
5	B-1502-541-000	Presser bar lower bushing	1
6	B-1501-127-000	Presser bar	1
7	B-1512-155-000	Presser bar rubber cap	1
8	SS-8091110-SP	Screw, for presser foot	1
9	B-1524-012-0A0	Presser foot assembly	1
10	SS-8150710-SP	Screw, for lifter lever pin	1
11	B-1512-127-000	Lifter lever pin	1
12	B-1513-127-000	Lifter lever link	1
13	SD-0800431-SP	Screw, for presser bar connection	1
14	B-1521-127-000	Presser bar thread guide	1
15	B-3404-127-000	Lifter lever	1
16	B-1514-127-000	Thrust ring, for lifter lever pin	1
17	SS-9110543-SP	Screw, for lifter lever link	1
18	B-1507-127-000	Presser bar connection	1
19	B-1516-541-000	Hand lifter	1
20	SD-0640471-SP	Screw, for hand lifter	1
21	B-3405-541-000	Stud screw, for lifter lever	1
22	B-3406-541-000	Lifter lever spring	1
23	NS-6620310-SP	Lock nut, for lifter lever rod	3
24	B-3409-541-000	Thrust washer, for lifter lever rod	1
25	B-3407227-000	Lifter lever rod	1
26	B-3410-541-000	Lifter lever rod felt	1
27	B-3410-127-000	Joint nut, for lifter lever rod	1
28	B-3408-127-000	Lifter lever bell crank rod	1
29	B-3401-122-000	Lifter lever bell crank bracket	1


Ref. No.	Part No.	Description	Amt. Req.
30	SS-7120910-SP	Screw, for bell crank bracket	2
31	B-3403-012-000	Lifter lever bell crank pin	1
32	B-3402-122-000	Lifter lever bell crank	1
33	SS-8080950-SP	Screw, for bell crank	1

7. OIL LUBRICATION MECHANISM COMPONENTS

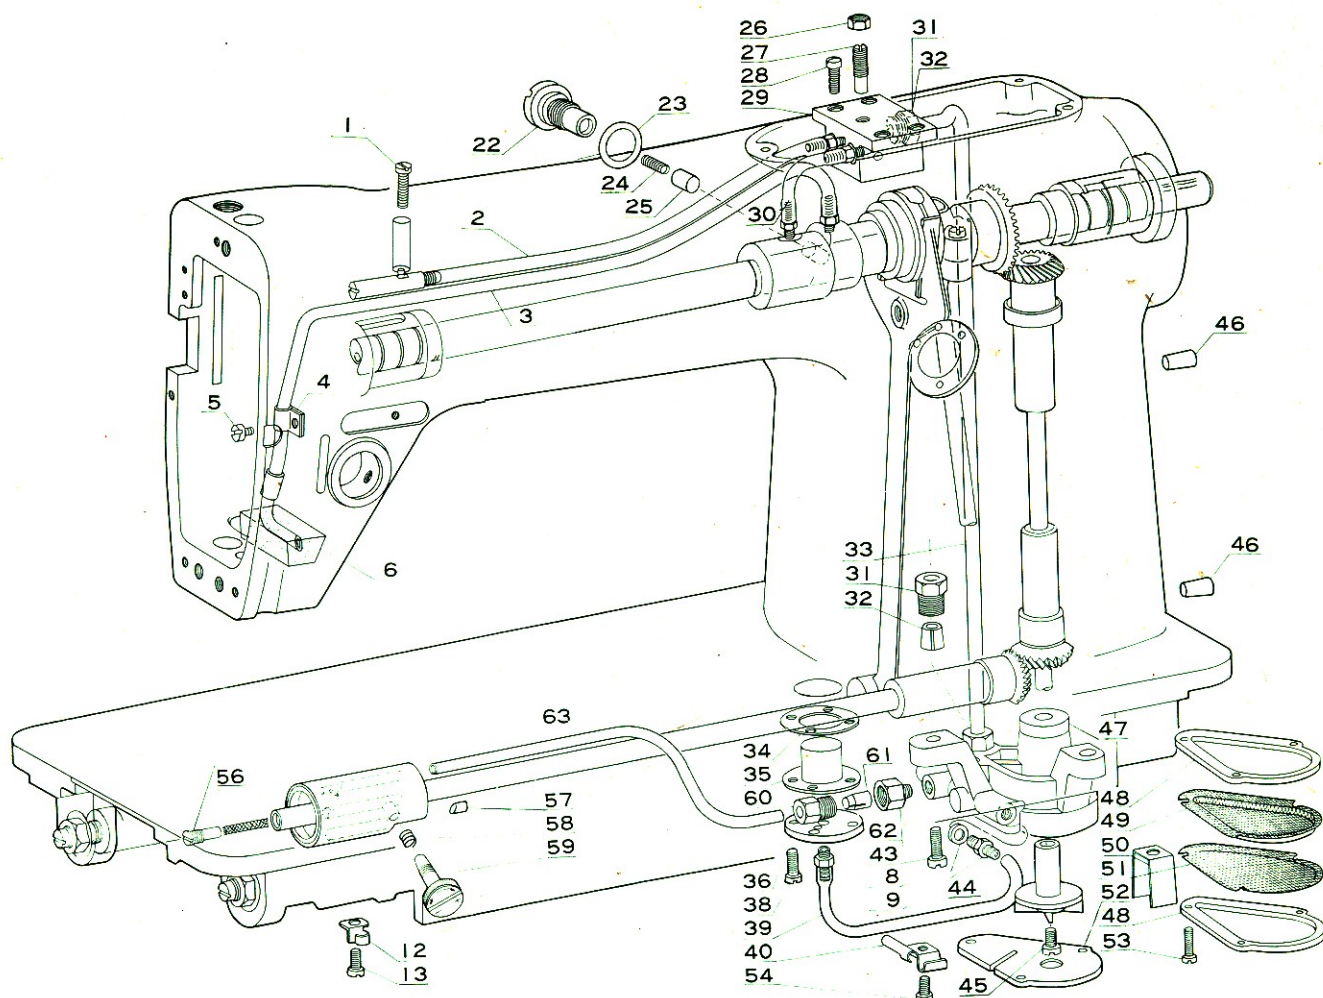

Ref. No.	Part No.	Description	Amt. Req.	Ref. No.	Part No.	Description	Amt. Req.
1	SS-7111410-SP	Screw, for main shaft bushing oil tube connecting screw	1	41	B-3501-125-000	Lubricating oil pump	1
2	B-3535-122-0A0	Oil tube assembly, for main shaft front bushing	1	43	SS-2121410-SP	Screw, for lubricating oil pump	3
3	B-3550-127-000	Oil tube, for oil drainage	1	44	B-3507-155-000	Lubricating oil pump impeller	1
4	B-3536-122-000	Oil tube, holder	1	45	SS-6080610-TP	Screw, for rotary shaft	1
5	SS-6090510-SP	Screw, for oil tube holder	1	46	TA-0691001-RO	Plug, for machine frame	2
6	B-1170-581-000	Oil sponge	1	47	B-3505-155-000	Lubricating oil pump bushing	1
8	B-3534-012-000	Oil tube connecting screw gasket	6	48	B-3503-122-000	Lubricating oil pump frame	2
9	SQ-1110402-MZ	Oil tube connecting screw	6	49	B-3504-155-000	Filter screen	1
12	B-3537-122-000	Oil wick connection	1	50	B-3545-122-000	Lubricating oil pump oil splasher	1
13	SS-7090510-SP	Screw, for oil wick connection	1	51	B-3506-125-000	Filter net	1
22	B-3536-127-000	Plug screw, for lubricating oil pump	1	52	B-3502-122-000	Lubricating oil pump cover	1
23	RO-1542401-00	Rubber ring, for plug screw	1	53	SS-6081280-SP	Screw, for cover	3
24	B-1214-038-000	Lubricating pump plunger spring	1	54	SS-7090710-SP	Screw, for oil tube holder	2
25	B-3534-155-000	Lubricating pump plunger	1	55	B-1808-412-000	Screw, for hook shaft, front	1
26	NS-6150320-SP	Lock nut, for adjusting screw	1	56	B-1811-541-000	Oil quantity adjusting wick, for hook shaft	1
27	B-3521-122-000	Oil quantity adjusting screw	1	57	TA-0290301-MO	Oil seal plug, for hook shaft front bushing	2
28	SS-7111120-SP	Screw, for oil lubricator	3	58	B-2616-372-000	Oil quantity adjusting spring	1
29	B-3515-122-000	Main shaft oil lubricator	1	59	B-3514-412-000	Oil quantity adjusting screw, for hook shaft	1
30	B-3535-122-B00	Oil tube (B), for main shaft center bushing	1	60	B-3517-155-000	Locking screw, for oil tube	1
31	B-3512-122-000	Oil pipe clamping sleeve nut	2	61	B-3518-155-000	Oil tube bushing	1
32	B-3511-122-000	Oil pipe clamping sleeve	2	62	B-3516-412-000	Sewing hook oil supply tube	1
33	B-3513-122-000	Main shaft oil pipe	1				
34	B-3532-122-000	Oil sight window gasket	1				
35	B-3531-122-000	Oil sight window	1				
36	B-3533-122-000	Oil sight window frame	1				
38	SS-4090710-SP	Screw, for oil sight window frame	4				
39	B-3535-122-D00	Oil tube, for oil sight window	1				
40	B-3530-122-000	Oil tube holder, for oil sight window oil tube	1				

8. OIL RESERVOIR & KNEE LIFTER COMPONENTS

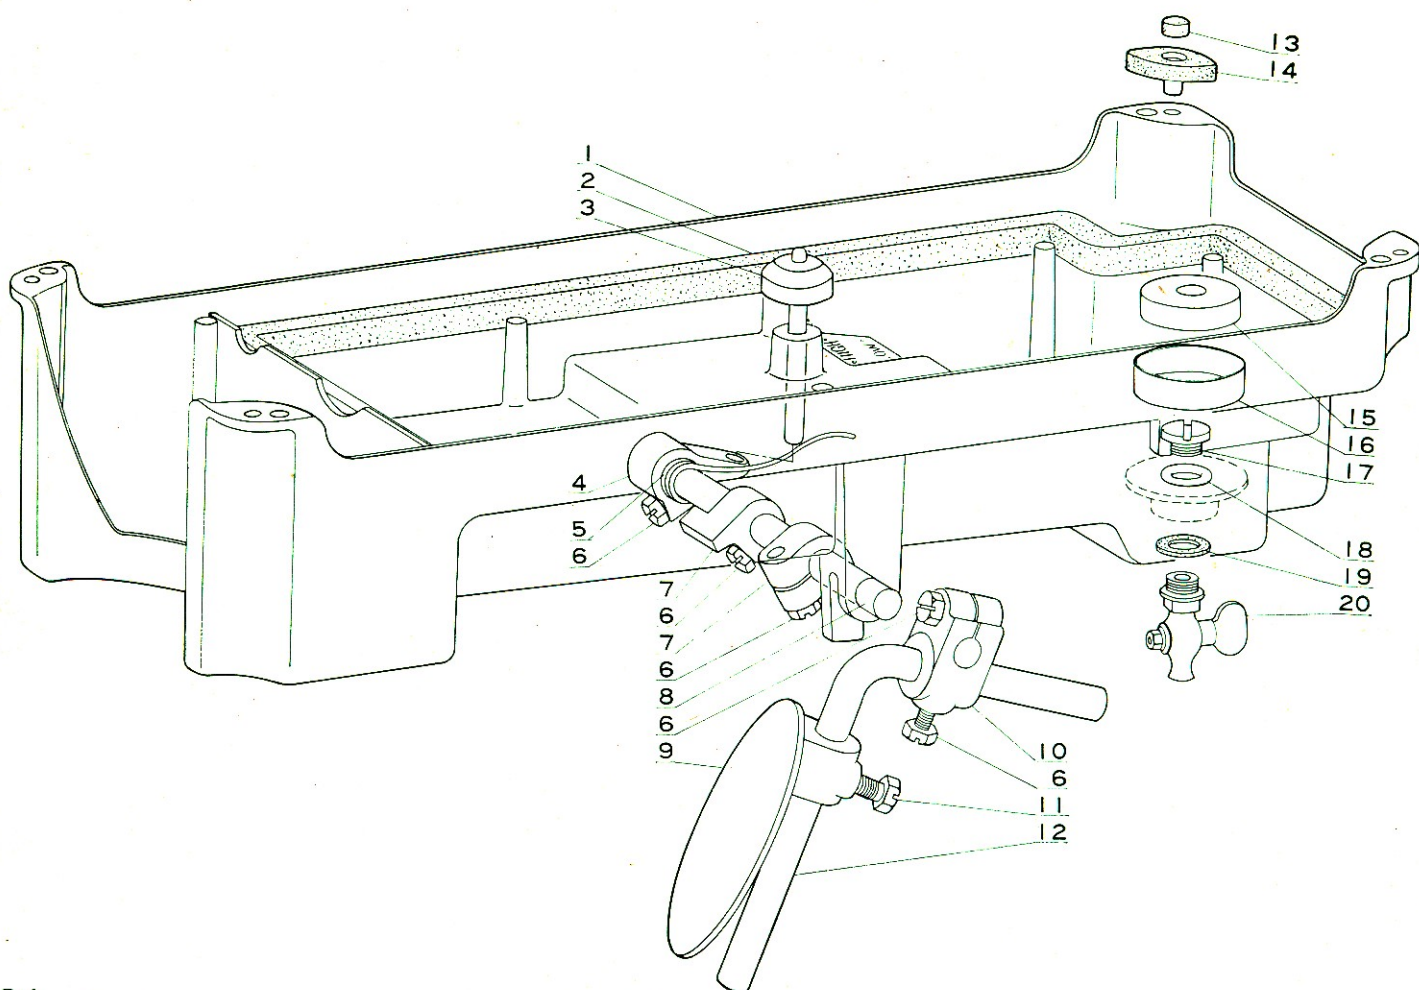

Ref. No.	Part No.	Description	Amt. Req.
1	B-8217-125-000	Oil reservoir	1
2	B-8218-125-000	Oil reservoir gasket	1
3	B-3416-125-0A0	Knee press lifter hook (set)	1
4	B-3425-122-000	Knee press lifter lever	1
5	B-3429-122-000	Knee press spring	1
6	SS-9182010-SN	Screw, for rod thrust block, rod mounting bracket & lifter lever	5
7	B-3426-122-000	Knee press rod thrust block	2
8	B-3420-122-000	Knee press rod	1
9	B-3418-012-000	Knee press plate	1
10	B-3427-122-000	Knee press rod mounting bracket	1
11	SS-9201810-SN	Screw, for knee press plate	1
12	B-3419-122-000	Knee lifter plate rod	1
13	B-8227-125-000	Isolator pad (felt), for frame	4
14	B-8226-125-000	Isolator pad (rubber), for oil reservoir	4
15	B-8228-125-000	Oil reservoir magnet	1
16	B-8229-129-000	Magnet cover	1
17	B-8223-122-000	Oil drain cock cap screw	1
18	RO-1242401-00	Rubber ring, for oil drain cock	1
19	B-8222-012-000	Oil drain cock gasket	1
20	B-8221-012-000	Oil drain cock	1

9. NUMERICAL INDEX OF PARTS

Part No.	Page	Ref. No.	Part No.	Page	Ref. No.	Part No.	Page	Ref. No.	Part No.	Page	Ref. No.	Part No.	Page	Ref. No.
EXCLUSIVE PARTS														
A-1626-001-000	4-39		B-1402-541-000	5-3		B-1901-127-0A0	5-36		B-3542-155-A00	2-5		SS-6661110-SP	4-2	
B-1101-127-0A0	1-7		B-1403-155-000	5-37		B-1902-127-000	5-17		B-3542-155-B00	2-19		SS-7080510-SP	5-9	
B-1104-122-000	1-38		B-1408-127-000	5-29		B-1903-541-000	5-30		B-3542-155-D00	3-36		SS-7090510-SP	1-21	
B-1105-122-000	1-39		B-1411-127-000	5-6		B-1904-541-000	5-16		B-3545-122-000	7-50		SS-7090510-SP	7-13	
B-1106-122-000	1-49		B-1414-125-000	5-1		B-1905-541-000	5-21		B-3550-127-000	7-3		SS-7090710-SP	7-54	
B-1107-122-000	1-43		B-1414-232-000	5-32		B-1909-127-000	5-20		B-8217-125-000	8-1		SS-7091110-SP	1-14	
B-1108-122-000	1-45		B-1418-541-000	5-10		B-2616-372-000	7-58		B-8218-125-000	8-2		SS-7091110-SP	6-8	
B-1109-012-A00	1-35		B-1419-012-000	5-8		B-3111-126-000	1-30		B-8221-012-000	8-20		SS-7110710-SP	1-17	
B-1110-012-000	1-37		B-1420-127-000	5-13		B-3115-155-000	1-28		B-8222-012-000	8-19		SS-7110710-SP	5-7	
B-1111-012-000	1-41		B-1423-127-000	5-31		B-3116-125-000	1-25		B-8223-122-000	8-17		SS-7110710-SP	5-12	
B-1113-012-000	3-8		B-1501-127-000	6-6		B-3118-125-000	1-31		B-8226-125-000	8-14		SS-7110710-SP	5-35	
B-1113-125-000	1-3		B-1502-541-000	6-5		B-3120-125-000	1-26		B-8227-125-000	8-13		SS-7110810-SP	3-21	
B-1113-155-0A0	1-4		B-1505-126-W00	6-2		B-3126-012-000	1-23		B-8228-125-000	8-15		SS-7111120-SP	1-2	
B-1116-125-000	1-1		B-1507-127-000	6-18		B-3127-127-000	1-32		B-8229-125-000	8-16		SS-7111120-SP	7-28	
B-1118-125-000	1-6		B-1509-126-WA0	6-1		B-3128-012-000	1-29		B-9108-012-000	5-11		SS-7111410-SP	3-14	
B-1118-127-000	1-20		B-1512-127-000	6-11		B-3129-012-000	1-27		B-9117-155-000	3-11		SS-7111410-SP	7-1	
B-1119-125-000	1-5		B-1512-155-000	6-7		B-3132-012-000	1-24		THRUST COLLAR			SS-7111410-SP	3-26	
B-1119-127-000	1-34		B-1513-127-000	6-12		B-3401-192-000	6-29		CS-0640863-SH	3-15		SS-7111410-TP	3-14	
B-1121-127-000	1-10		B-1514-127-000	6-16		B-3402-122-0A0	6-32		CS-0791016-SH	3-34		SS-7120910-SP	6-30	
B-1122-127-000	1-9		B-1516-541-000	6-19		B-3403-012-000	6-31		CS-0791016-SH	4-30		SS-7121410-SP	7-43	
B-1123-127-000	1-18		B-1521-127-000	6-14		B-3404-127-000	6-15		CS-0791066-SH	3-47		SS-7151210-SP	4-37	
B-1124-127-000	5-33		B-1613-125-000	4-28		B-3405-541-000	6-21		CS-1471012-SH	2-15		SS-7620750-SL	4-40	
B-1128-541-000	1-15		B-1524-012-0A0	6-9		B-3406-541-000	6-22		NUT			SS-7681750-TP	5-27	
B-1147-012-000	4-23		B-1601-122-B00	3-6		B-3407-127-000	6-25		NS-6150310-SP	1-48		SS-8080950-SP	6-33	
B-1148-012-000	4-22		B-1602-012-000	3-4		B-3408-127-000	6-28		NS-6150320-SP	7-26		SS-8110510-SP	1-33	
B-1159-041-000	1-22		B-1604-012-000	3-3		B-3409-541-000	6-24		NS-6620310-SP	6-23		SS-8110510-TP	3-16	
B-1160-127-000	1-51		B-1607-122-000	3-33		B-3410-127-000	6-27		NS-6680410-SP	4-34		SS-8110520-TP	3-48	
B-1161-012-000	1-47		B-1613-012-A00	3-2		B-3410-541-000	6-26		NS-6740510-SP	3-7		SS-8110520-TP	4-29	
B-1164-012-000	1-8		B-1613-125-000	4-28		B-3416-125-0A0	8-3		RUBBER RING			SS-8150310-SP	5-4	
B-1166-122-000	1-50		B-1619-012-000	4-12		B-3418-012-000	8-9		RO-0681901-00	5-2		SS-8150410-SP	2-10	
B-1169-122-000	1-54		B-1621-012-000	4-20		B-3419-122-000	8-12		RO-0742401-00	4-14		SS-8150410-SP	2-16	
B-1170-122-000	1-53		B-1621-012-B00	4-13		B-3420-122-000	8-8		RO-1242401-00	8-18		SS-8150710-SP	4-18	
B-1170-581-000	7-6		B-1621-125-000	4-41		B-3425-122-000	8-4		RO-1331701-00	2-21		SS-8150710-SP	6-10	
B-1171-122-000	1-52		B-1622-122-000	4-1		B-3426-122-000	8-7		RO-1342401-00	4-15		SS-8150750-SP	1-19	
B-1172-127-000	5-19		B-1623-122-000	4-6		B-3427-122-000	8-10		RO-1542401-00	7-23		SS-8151150-SP	2-2	
B-1172-127-000	5-34		B-1623-125-000	4-25		B-3429-122-000	8-5		SCREW STUD			SS-8151150-SP	2-22	
B-1178-092-000	1-11		B-1627-122-000	4-4		B-3501-125-000	7-41		SD-0640471-SP	6-20		SS-8151510-SP	3-43	
B-1179-541-000	1-12		B-1631-122-000	3-36		B-3502-122-000	7-52		SD-0800431-SP	6-13		SS-815150-SP	5-15	
B-1180-541-000	1-13		B-1633-122-0A0	4-103		B-3503-122-000	7-48		SD-1020851-SP	4-11		SS-8620610-TP	3-5	
B-1199-127-000	1-46		B-1633-122-0A0	4-3		B-3504-155-000	7-49		SD-1020961-SP	4-27		SS-8660810-SP	2-14	
B-1201-127-000	2-25		B-1634-122-000	4-17		B-3505-155-000	7-47		CONNECTING SCREW			SS-8660810-SP	3-45	
B-1203-125-000	2-6		B-1636-122-000	4-16		B-3506-125-000	7-51		SQ-1110402-MZ	7-9		SS-8681950-SK	5-26	
B-1204-122-000	2-18		B-1641-122-A00	3-17		B-3507-155-000	7-44		SCREW			SS-9110543-SP	6-17	
B-1204-155-000	2-3		B-1641-122-B00	3-32		B-3511-122-000	7-32		SS-2090710-SP	4-21		SS-9182010-SN	8-6	
B-1206-127-000	5-24		B-1641-122-C00	3-24		B-3512-122-000	7-31		SS-2110092-SP	1-36		SS-9201810-SN	8-11	
B-1209-542-000	5-28		B-1641-122-D00	3-31		B-3513-122-000	7-33		SS-4080620-TP	3-1		SS-9661120-SP	5-23	
B-1210-127-000	2-11		B-1642-122-000	4-35		B-3514-412-000	7-59		SS-4090710-SP	7-38		TA-0290301-MO	7-57	
B-1211-012-000	2-7		B-1646-122-000	4-7		B-3515-122-000	7-29		SS-4091010-SP	4-10		TA-0300503-RO	2-4	
B-1212-012-000	2-9		B-1647-122-000	4-19		B-3516-412-000	7-62		SS-6060210-SP	1-40		TA-0691001-RO	2-1	
B-1212-127-000	5-22		B-1648-012-000	4-24		B-3517-155-000	7-60		SS-6080610-TP	7-45		TA-0691001-RO	5-14	
B-1213-012-000	2-8		B-1648-122-000	4-8		B-3518-155-000	7-61		SS-6081280-SP	7-53		TA-0691001-RO	7-46	
B-1213-125-000	2-24		B-1701-125-000	4-33		B-3521-122-000	7-27		SS-6090510-SP	7-5		WASHER		
B-1214-038-000	7-24		B-1702-012-000	4-31		B-3525-122-000	7-7		SS-6092420-SP	1-44		WP-0371016-SD	4-9	
B-1218-012-000	2-20		B-1703-125-000	3-25		B-3530-122-000	7-40		SS-6111620-SP	3-23		WP-0700816-SH	6-3	
B-1233-012-000	2-23		B-1706-012-000	3-13		B-3531-122-000	7-35		SS-6121050-SP	4-26				
B-1235-122-040	2-17		B-1801-412-000	3-28		B-3532-122-000	7-34		SS-6121210-SP	4-5				
B-1301-155-000	3-38		B-1802-412-0A0	3-20		B-3533-122-000	7-36		SS-6121610-SP	4-32				
B-1302-122-000	3-39		B-1804-155-000	3-37		B-3534-012-000	7-8		SS-6620730-SP	4-38				
B-1303-161-000	3-41		B-1806-038-000	3-35		B-3534-155-000	7-25							
B-1305-012-000	2-12		B-1808-412-000	7-55		B-3535-122-A00	7-2							
B-1306-155-000	2-13		B-1811-541-000	7-56		B-3535-122-B00	7-30							
B-1307-012-A00	3-44		B-1830-127-0A0	3-9		B-3535-122-D00	7-39							
B-1308-155-B00	3-46		B-1835-012-000	3-22		B-3536-122-000	7-4							
B-1401-127-000	5-5		B-1837-155-0A0	3-10		B-3536-127-000	7-22							
			B-1901-127-000	5-18		B-3537-122-000	7-12							



SECOND
EDITION