

SINGER Zig-Zag 3 Pmt.
INDUSTRIAL
FY457A 135A-L

高速曲折縫縫紉機
HIGH-SPEED ZIGZAG SEWING MACHINE

零件圖冊
Parts Checker

 **中国飞跃**
CHINA FEIYUE

 - ORIGINAL

Singer Sewing Machine
Industrial
FY457A 135A-L


高曲式縫紉機
SINGER SEWING MACHINE

零件圖冊
Parts Checker

中國區
CHINA REGION


ORIGINAL - [M]

1. 挑线盘罩、面板部件

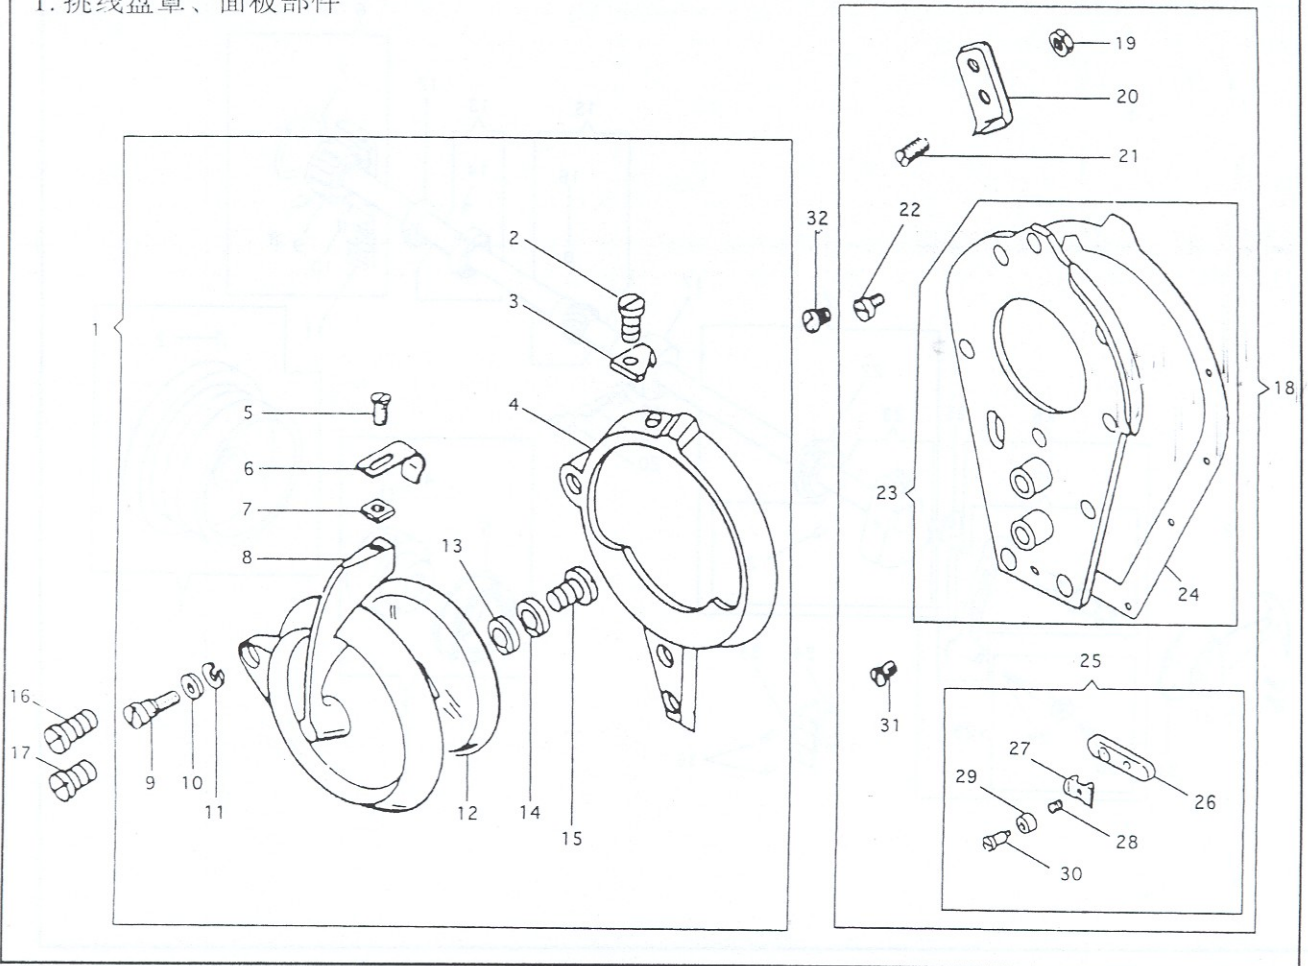


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	1-1	*	*	*	*	*	*	*	*	*	1	旋转挑线盘护盖组件	ROTARY TAKE-UP GUARD (CPL.)
2	1-2	*	*	*	*	*	*	*	*	*	1	螺钉	THREAD CUTTER (ON ROTARY TAKE-UP GUARD) SCREW
3	1-3	*	*	*	*	*	*	*	*	*	1	剪线器	THREAD CUTTER (ON ROTARY TAKE-UP GUARD)
4	1-4	*	*	*	*	*	*	*	*	*	1	旋转挑线盘护盖	ROTARY TAKE-UP GUARD
5	1-5	*	*	*	*	*	*	*	*	*	1	螺钉	ROTARY TAKE-UP GUARD SPRING CATCH SCREW
6	1-6	*	*	*	*	*	*	*	*	*	1	旋转挑线盘护盖簧	ROTARY TAKE-UP GUARD SPRING CATCH
7	1-7	*	*	*	*	*	*	*	*	*	1	螺母	ROTARY TAKE-UP GUARD SPRING CATCH SCREW NUT
8	1-8	*	*	*	*	*	*	*	*	*	1	旋转挑线盘护盖罩	ROTARY TAKE-UP GUARD COVER
9	1-9	*	*	*	*	*	*	*	*	*	1	螺钉	ROTARY TAKE-UP GUARD HINGE SCREW
10	1-10	*	*	*	*	*	*	*	*	*	1	垫圈	ROTARY TAKE-UP GUARD HINGE SCREW WASHER
11	1-11	*	*	*	*	*	*	*	*	*	1	弹簧垫圈	ROTARY TAKE-UP GUARD HINGE SCREW SPRING WASHER
12	1-12	*	*	*	*	*	*	*	*	*	1	护盖罩窗	ROTARY TAKE-UP GUARD COVER WINDOW WINDOW
13	1-13	*	*	*	*	*	*	*	*	*	1	垫圈	ROTARY TAKE-UP GUARD COVER WINDOW SCREW WASHER
14	1-14	*	*	*	*	*	*	*	*	*	1	弹簧垫圈	ROTARY TAKE-UP GUARD COVER WINDOW SCREW SPRING WASHER
15	1-15	*	*	*	*	*	*	*	*	*	1	螺钉	ROTARY TAKE-UP GUARD COVER WINDOW SCREW
16	1-16	*	*	*	*	*	*	*	*	*	1	螺钉 (长)	ROTARY TAKE-UP GUARD SCREW (LONG)
17	1-17	*	*	*	*	*	*	*	*	*	1	螺钉 (短)	ROTARY TAKE-UP GUARD SCREW (SHORT)
18	1-18	*	*	*	*	*	*	*	*	*	1	面板组件	FACE PLATE (CPL.)
19	1-19	*	*	*	*	*	*	*	*	*	1	割线器调节螺母	THREAD CUTTER (ON FACE PLATE) ADJUSTING SCREW NUT
20	1-20	*	*	*	*	*	*	*	*	*	1	割线器 (在面板上)	THREAD CUTTER (ON FACE PLATE)
21	1-21	*	*	*	*	*	*	*	*	*	1	调节螺钉	THREAD CUTTER (ON FACE PLATE) ADJUSTING SCREW
22	1-22	*	*	*	*	*	*	*	*	*	1	螺钉	THREAD CUTTER (ON FACE PLATE) SCREW
23	1-23	*	*	*	*	*	*	*	*	*	1	面板组件	FACE PLATE, GASKET (CPL.)
24	1-24	*	*	*	*	*	*	*	*	*	1	面板密封垫	FACE PLATE GASKET
25	1-25	*	*	*	*	*	*	*	*	*	1	针线过线板组件	NEEDLE THREAD NIPPER (CPL.)
26	1-26	*	*	*	*	*	*	*	*	*	1	针线过线板垫板	NEEDLE THREAD NIPPER PLATE
27	1-27	*	*	*	*	*	*	*	*	*	1	针线过线板	NEEDLE THREAD NIPPER THREAD GUIDE
28	1-28	*	*	*	*	*	*	*	*	*	1	针线夹弹簧	NEEDLE THREAD NIPPER SPRING
29	1-29	*	*	*	*	*	*	*	*	*	1	针线夹弹簧帽	NEEDLE THREAD NIPPER SPRING CAP
30	1-30	*	*	*	*	*	*	*	*	*	1	过线勾垫板螺钉	NEEDLE THREAD NIPPER HINGE SCREW
31	1-31	*	*	*	*	*	*	*	*	*	1	过线勾螺钉	THREAD GUIDE (ON FACE PLATE) SCREW
32	1-32	*	*	*	*	*	*	*	*	*	8	面板螺钉	FACE PLATE SCREW

2. 上轴、挑线部件

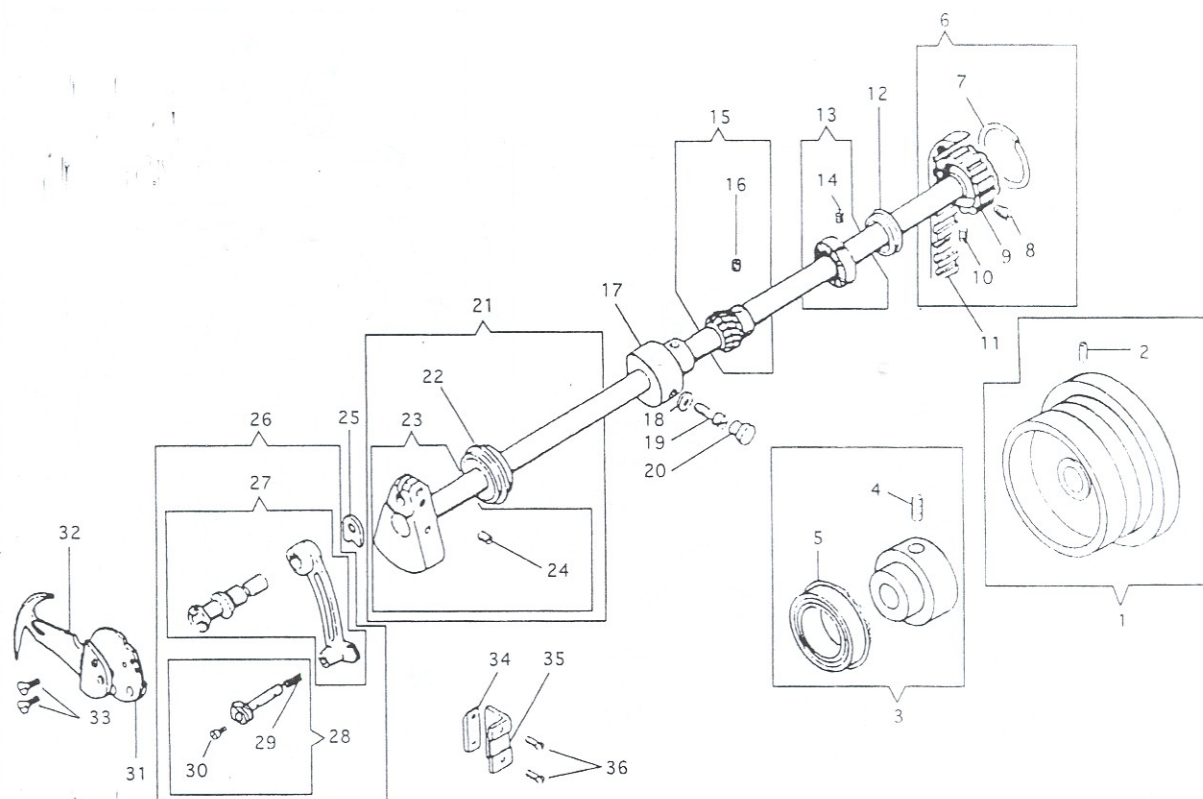


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	2-1	*	*	*	*	*	*	*	*	*	1	上轮组件	MACHINE PULLEY (CPL.)
2	2-2	*	*	*	*	*	*	*	*	*	2	上轮固定螺钉	MACHINE PULLEY SET SCREW
3	2-3	*	*	*	*	*	*	*	*	*	1	上轴轴承止推圈组件	ARM SHAFT BEARING, THRUST CALLAR(CPL.)
4	2-4	*	*	*	*	*	*	*	*	*	2	止推圈固定螺钉	ARM SHAFT THRUST CALLAR SET SCREW
5	2-5	*	*	*	*	*	*	*	*	*	1	上轴轴承 (后)	ARM SHAFT BEARING
6	2-6	*	*	*	*	*	*	*	*	*	1	上轴同步带轮组件	ARM SHAFT CONNECTION BELT PULLEY (CPL.)
7	2-7	*	*	*	*	*	*	*	*	*	1	同步带轮挡圈	ARM SHAFT CONNECTION BELT PULLEY RING
8	2-8	*	*	*	*	*	*	*	*	*	1	定位螺钉	ARM SHAFT CONNECTION PULLEY SET SCREW
9	2-9	*	*	*	*	*	*	*	*	*	1	上轴同步带轮	ARM SHAFT CONNECTION PULLEY
10	2-10	*	*	*	*	*	*	*	*	*	1	同步带轮定位螺钉	ARM SHAFT CONNECTION BELT PULLEY POSITION SCREW
11	2-11	*	*	*	*	*	*	*	*	*	1	同步带	ARM SHAFT CONNECTION BELT
12	2-12	*	*	*	*	*	*	*	*	*	1	上轴防油罩	ARM SHAFT OIL SHIELD
13	2-13	*	*	*	*	*	*	*	*	*	1	绕线器传动轮组件	BOBBIN WINDER DRIVING WHEEL(CPL.)
14	2-14	*	*	*	*	*	*	*	*	*	1	绕线器传动轮固定螺钉	BOBBIN WINDER DRIVING WHEEL SET SCREW
15	2-15	*	*	*	*	*	*	*	*	*	2	蜗杆组件	NEEDLE VIBRATING PINION(CPL.)
		*	*	*	*	*	*	*	*	*	1	蜗杆组件	NEEDLE VIBRATING WORM GEAR(CPL.)
		*	*	*	*	*	*	*	*	*	1	蜗杆组件	NEEDLE VIBRATING WORM GEAR(CPL.)
16	2-16	*	*	*	*	*	*	*	*	*	1	蜗杆固定螺钉	NEEDLE VIBRATING PINION SET SCREW
		*	*	*	*	*	*	*	*	*	2	蜗杆固定螺钉	NEEDLE VIBRATING WORM GEAR SET SCREW
17	2-17	*	*	*	*	*	*	*	*	*	4	上轴 (中) 轴套	ARM SHAFT BUSHING(CENTER)
18	2-18	*	*	*	*	*	*	*	*	*	1	上轴轴套螺钉垫圈	ARM SHAFT BUSHING(CENTER)WASHER
19	2-19	*	*	*	*	*	*	*	*	*	1	上轴轴套螺钉	ARM SHAFT BUSHING(CENTER)SCREW
20	2-20	*	*	*	*	*	*	*	*	*	1	上轴轴套中塞	ARM SHAFT BUSHING(CENTER)PLUG
21	2-21	*	*	*	*	*	*	*	*	*	1	上轴前端组件	ARM SHAFT(ASSY)
22	2-22	*	*	*	*	*	*	*	*	*	1	上轴前轴承	ARM SHAFT BALL BEARING
23	2-23	*	*	*	*	*	*	*	*	*	1	针杆曲柄组件	ARM SHAFT WITH NEEDLE BAR CRANK
24	2-24	*	*	*	*	*	*	*	*	*	1	定位螺钉	NEEDLE BAR CRANK STUD POSITION SCREW
25	2-25	*	*	*	*	*	*	*	*	*	1	针杆曲柄止推垫圈	NEEDLE BAR CRANK THRUST WASHER
26	2-26	*	*	*	*	*	*	*	*	*	1	针杆连杆组件	NEEDLE BAR CONNECTING STUD,CONNECTING LINK(CPL.)
27	2-27	*	*	*	*	*	*	*	*	*	1	针杆连杆销组件	NEEDLE BAR CONNECTING LINK,CRANK STUD(CPL.)
28	2-28	*	*	*	*	*	*	*	*	*	1	针杆连接柱组件	NEEDLE BAR CONNECTING STUD(CPL.)
29	2-29	*	*	*	*	*	*	*	*	*	1	油芯	NEEDLE BAR CONNECTING STUD OIL WICK
30	2-30	*	*	*	*	*	*	*	*	*	1	螺钉	NEEDLE BAR CONNECTING STUD SCREW
31	2-31	*	*	*	*	*	*	*	*	*	1	旋转挑线盘安装板	ROTARY TAKE-UP MOUNTING DISK
32	2-32	*	*	*	*	*	*	*	*	*	1	旋转挑线盘	ROTARY TAKE-UP
33	2-33	*	*	*	*	*	*	*	*	*	2	螺钉	ROTARY TAKE-UP SCREW
34	2-34	*	*	*	*	*	*	*	*	*	1	针杆连杆导向块夹紧板	NEEDLE BAR CONNECTING LINK CLAMPING PLATE
35	2-35	*	*	*	*	*	*	*	*	*	1	针杆连杆导向块	NEEDLE BAR CONNECTING LINK GUIDE BLOCK
36	2-36	*	*	*	*	*	*	*	*	*	2	针杆连杆导向块螺钉	NEEDLE BAR CONNECTING GUIDE BLOCK SCREW

3. 松线、抬压脚部件

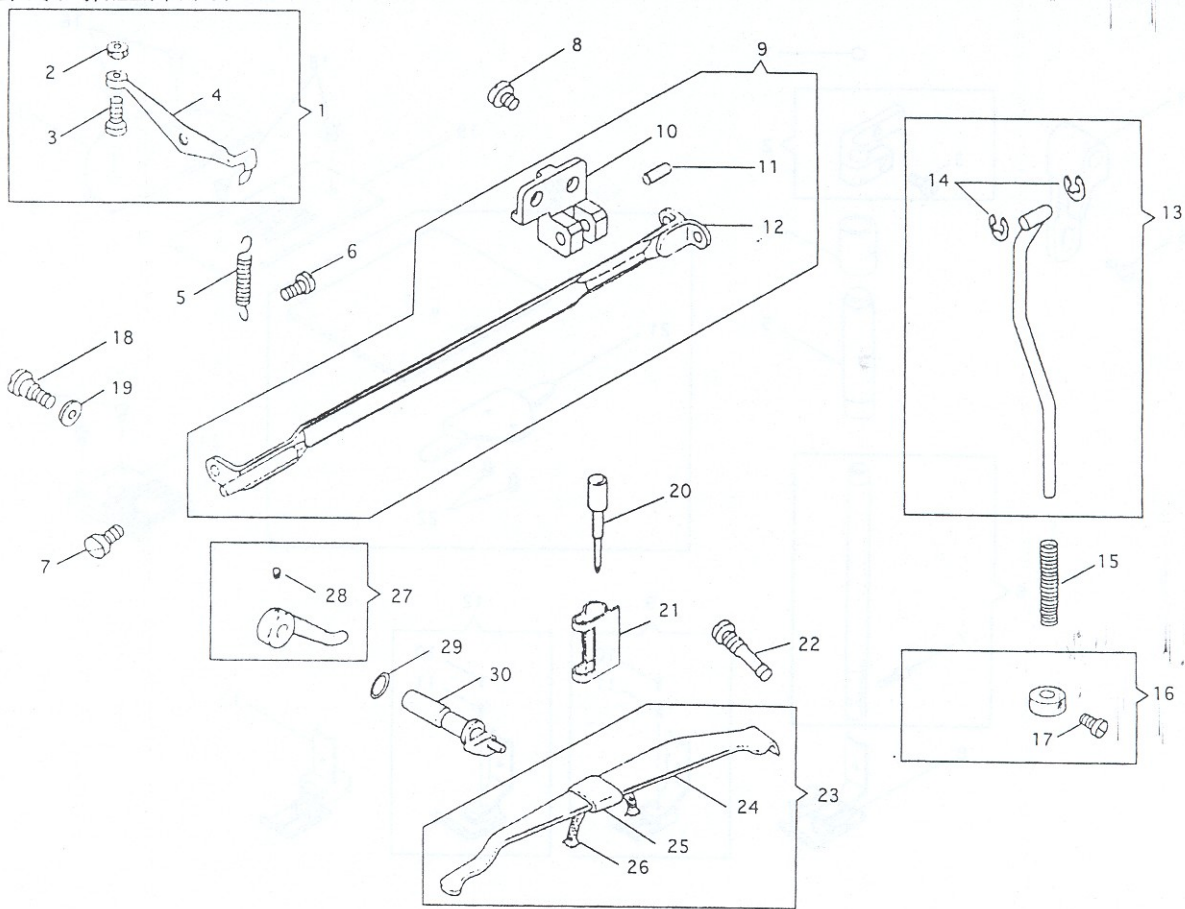


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	3-1	*	*	*	*	*	*	*	*	*	1	松线器组件	TENSION RELEASER (CPL.)
2	3-2	*	*	*	*	*	*	*	*	*	1	松线器调节螺母	TENSION RELEASER ADJUSTING SCREW NUT
3	3-3	*	*	*	*	*	*	*	*	*	1	松线器调节螺钉	TENSION RELEASER ADJUSTING SCREW
4	3-4	*	*	*	*	*	*	*	*	*	1	松线杆	TENSION RELEASER
5	3-5	*	*	*	*	*	*	*	*	*	1	松线器弹簧	TENSION RELEASER SPRING
6	3-6	*	*	*	*	*	*	*	*	*	1	松线器轴位螺钉	TENSION RELEASER HINGE SCREW
7	3-7	*	*	*	*	*	*	*	*	*	1	抬压脚摇杆螺钉	KNEE LIFTER ROCK FRAME HINGE SCREW
8	3-8	*	*	*	*	*	*	*	*	*	1	摇杆座螺钉	KNEE LIFTER ROCK FRAME HINGE LOCK SCREW
9	3-9	-	-	-	-	-	-	-	*	*	1	抬压脚摇杆组件	KNEE LIFTER ROCK FRAME(CPL.)
		*	*	*	*	*	*	*	*	*	1	摇杆组件	KNEE LIFTER ROCK FRAME(CPL.)
10	3-10	*	*	*	*	*	*	*	*	*	1	摇杆座	KNEE LIFTER ROCK FRAME HINGE
11	3-11	*	*	*	*	*	*	*	*	*	1	销	KNEE LIFTER ROCK FRAME HINGE STUD PIN
		-	-	-	-	-	-	-	*	*	1	销	KNEE LIFTER ROCK FRAME HINGE STUD PIN
12	3-12	*	*	*	*	*	*	*	*	*	1	抬压脚摇杆	KNEE LIFTER ROCK FRAME
		-	-	-	-	-	-	-	*	*	1	抬压脚摇杆	KNEE LIFTER ROCK FRAME
13	3-13	*	*	*	*	*	*	*	*	*	1	抬压脚顶杆	KNEE LIFTER LIFTING ROD(ASS'Y)
14	3-14	*	*	*	*	*	*	*	*	*	2	抬压脚顶杆挡圈	KNEE LIFTER LIFTING ROD RING
15	3-15	*	*	*	*	*	*	*	*	*	1	抬压脚顶杆弹簧	KNEE LIFTER LIFTING ROD SPRING
16	3-16	*	*	*	*	*	*	*	*	*	1	抬压脚顶杆紧圈	KNEE LIFTER LIFTING ROD SPRING COLLAR(CPL.)
17	3-17	*	*	*	*	*	*	*	*	*	1	螺钉	KNEE LIFTER LIFTING ROD SPRING COLLAR SCREW
18	3-18	*	*	*	*	*	*	*	*	*	1	螺钉	LIGHT STUD HOLE PLUG SCREW
19	3-19	*	*	*	*	*	*	*	*	*	1	垫圈	LIGHT STUD HOLE PLUG SCREW WASHER
20	3-20	*	*	*	*	*	*	*	*	*	1	调压螺钉	PRESSER BAR SPRING ADJUSTING SCREW
21	3-21	*	*	*	*	*	*	*	*	*	1	调压螺钉增阻器	PRESSER BAR SPRING ADJUSTING SCREW FRICTION
22	3-22	*	*	*	*	*	*	*	*	*	1	压杆簧支撑螺钉	PRESSER BAR SPRING SUPPORT SCREW
23	3-23	*	*	*	*	*	*	*	*	*	1	压杆簧组件	PRESSER BAR SPRING(CPL.)
24	3-24	*	*	*	*	*	*	*	*	*	1	压杆簧	PRESSER BAR SPRING
25	3-25	*	*	*	*	*	*	*	*	*	1	压杆簧油芯套	PRESSER BAR SPRING TUBE
26	3-26	*	*	*	*	*	*	*	*	*	1	压杆簧油芯	PRESSER BAR SPRING WICK
27	3-27	*	*	*	*	*	*	*	*	*	1	压脚扳手组件	PRESSER BAR LIFTER(CPL.)
28	3-28	*	*	*	*	*	*	*	*	*	1	压脚扳手螺钉	PRESSER BAR LIFTER SET SCREW
29	3-29	*	*	*	*	*	*	*	*	*	1	O型密封圈	PRESSER BAR LIFTING CAM,STUD O-RING
30	3-30	*	*	*	*	*	*	*	*	*	1	压脚扳手轴组件	PRESSER BAR LIFTING CAM,STUD(CPL.)

4. 压脚、针板送料牙部件

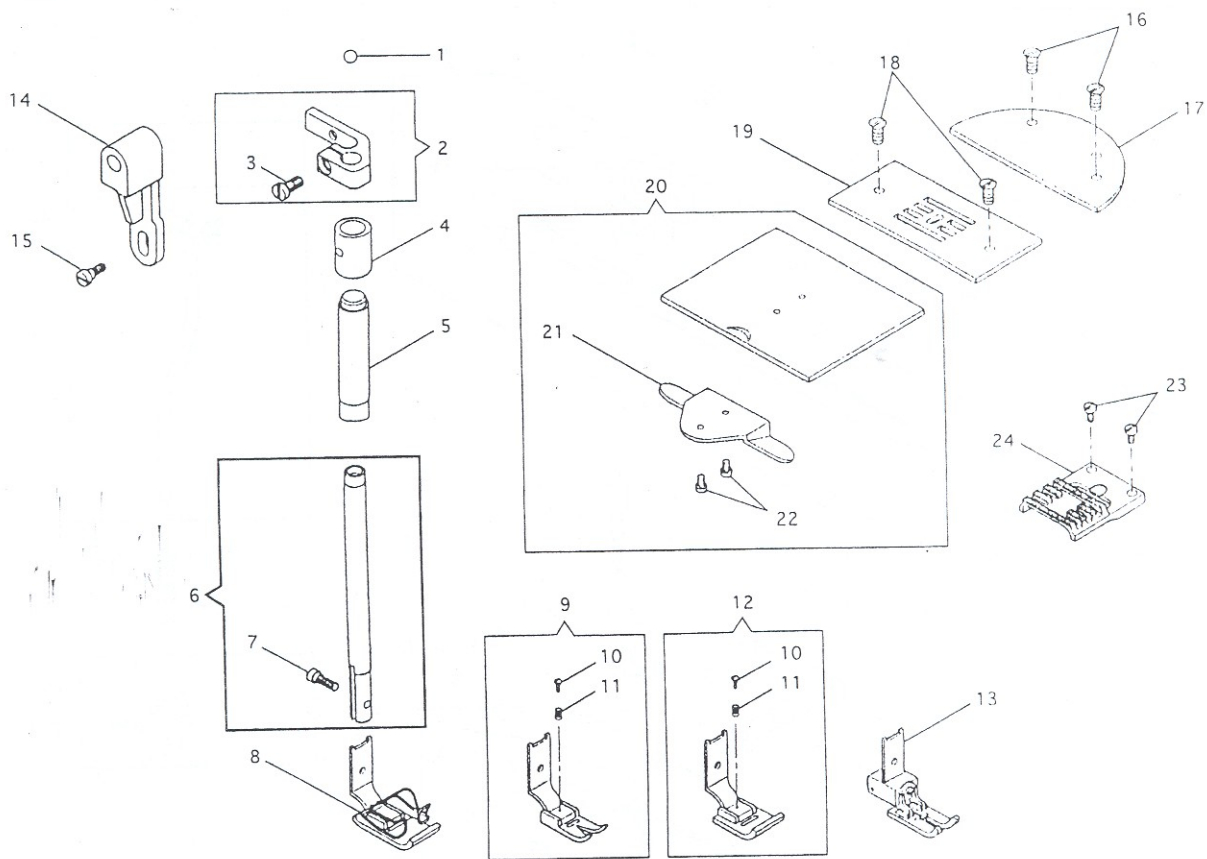


序号 NO.	图 号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名 称	DESCRIPTION
1	4-1	*	*	*	*	*	*	*	*	*	1	压杆小球	PRESSER BAR BALL
2	4-2	*	*	*	*	*	*	*	*	*	1	压杆导架组件	PRESSER BAR POSITION GUIDE (CPL.)
3	4-3	*	*	*	*	*	*	*	*	*	1	螺钉	PRESSER BAR POSITION GUIDE SCREW
4	4-4	*	*	*	*	*	*	*	*	*	1	压杆护套	PRESSER BAR BUSHING COVER
5	4-5	*	*	*	*	*	*	*	*	*	1	压杆套	PRESSER BAR BUSHING
6	4-6	*	*	*	*	*	*	*	*	*	1	压杆组件	PRESSER BAR(CPL.)
7	4-7	*	*	*	*	*	*	*	*	*	1	压脚螺钉	PRESSER FOOT SCREW
8	4-8	*	*	-	-	*	-	-	-	-	1	压脚组件	PRESSER FOOT(HINGED)(CPL.)
9	4-9	-	-	*	*	-	*	-	-	-	1	压脚组件	PRESSER FOOT(HINGED)(CPL.)
10	4-10	-	-	*	*	-	*	-	-	*	1	压脚底板螺钉	PRESSER FOOT PLATE STOP SCREW
11	4-11	-	-	*	*	-	*	-	*	*	1	压脚底板弹簧	PRESSER FOOT PLATE STOP SCREW SPRING
12	4-12	-	-	-	-	-	-	-	*	*	1	压脚组件	PRESSER FOOT(HINGED)(CPL.)
13	4-13	-	-	-	-	-	-	*	-	-	1	压脚组件	PRESSER FOOT(HINGED)(COMPENSATING)(CPL.)
14	4-14	*	*	*	*	*	*	*	*	*	1	压脚提升曲柄	PRESSER BAR LIFTING CAM CATCH
15	4-15	*	*	*	*	*	*	*	*	*	1	螺钉	PRESSER BAR LIFTING LINK SCREW
16	4-16	*	*	*	*	*	*	*	*	*	2	小底板螺钉	BED PLATE SCREW
17	4-17	*	*	*	*	*	*	*	*	*	1	小底板	BED PLATE
18	4-18	*	*	*	*	*	*	*	*	*	2	针板螺钉	THROAT PLATE SCREW
19	4-19	*	-	-	-	*	-	-	*	-	1	针板	THROAT PLATE
		-	*	-	-	-	*	-	-	*	1	针板	THROAT PLATE
		-	-	*	-	-	-	-	-	-	1	针板	THROAT PLATE
		-	-	-	*	-	-	-	-	-	1	针板	THROAT PLATE
		-	-	-	-	-	-	*	-	-	1	针板	THROAT PLATE
20	4-20	*	*	*	*	*	*	*	*	*	1	推板	BED SLIDE(CPL.)
21	4-21	*	*	*	*	*	*	*	*	*	1	推板簧	BED SLIDE SPRING SCREW
22	4-22	*	*	*	*	*	*	*	*	*	2	推板簧螺钉	BED SLIDE SPRING
23	4-23	*	*	*	*	*	*	*	*	*	2	送料牙螺钉	FEED DOG SCREW
24	4-24	*	-	-	-	*	-	-	*	-	1	送料牙	FEED DOG
		-	*	-	-	-	-	-	-	-	1	送料牙	FEED DOG
		-	-	*	-	-	-	-	-	-	1	送料牙	FEED DOG
		-	-	-	*	-	-	-	-	-	1	送料牙	FEED DOG
		-	-	-	-	-	*	-	-	-	1	送料牙	FEED DOG
		-	-	-	-	-	-	-	-	*	1	送料牙	FEED DOG
		-	-	-	-	-	-	-	-	*	1	送料牙	FEED DOG

3. 松线、抬压脚部件

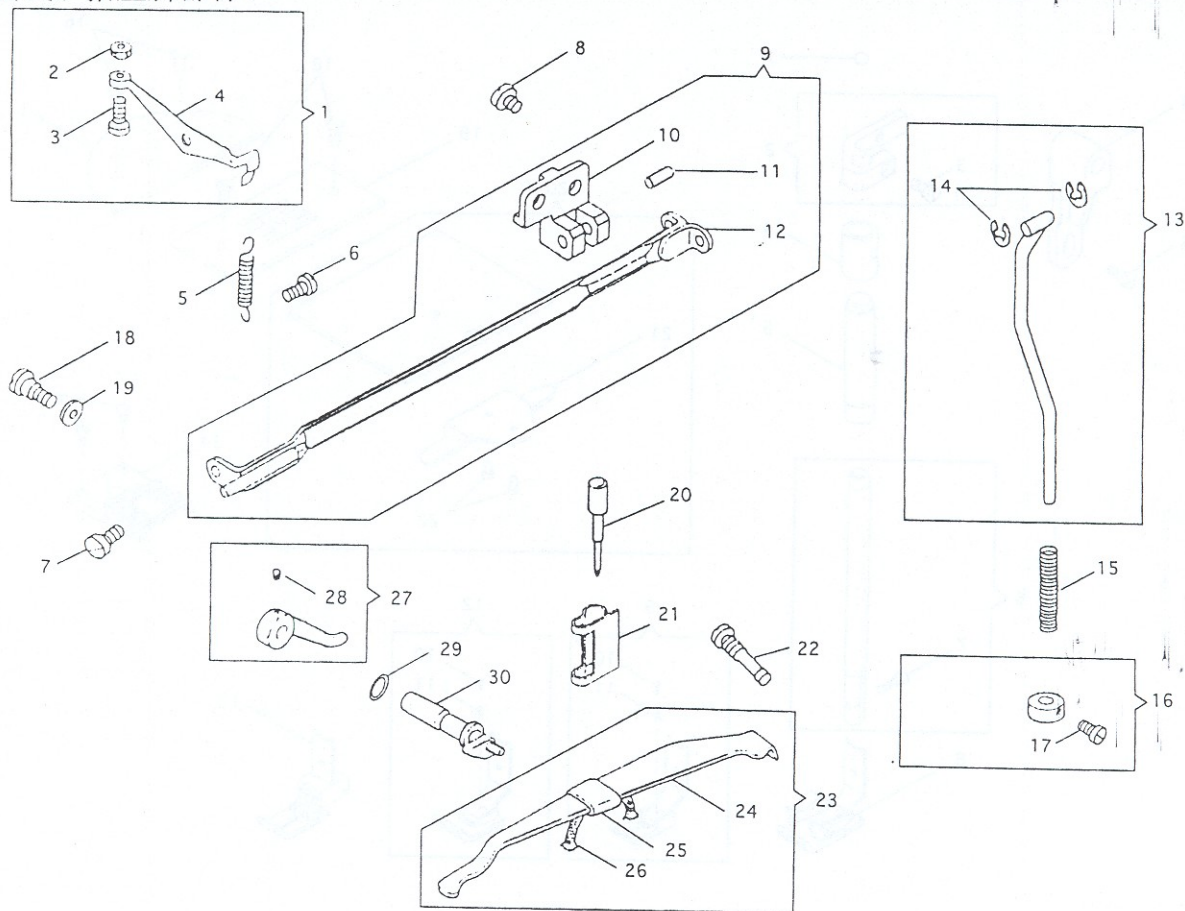


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	3-1	*	*	*	*	*	*	*	*	*	1	松线器组件	TENSION RELEASER (CPL.)
2	3-2	*	*	*	*	*	*	*	*	*	1	松线器调节螺母	TENSION RELEASER ADJUSTING SCREW NUT
3	3-3	*	*	*	*	*	*	*	*	*	1	松线器调节螺钉	TENSION RELEASER ADJUSTING SCREW
4	3-4	*	*	*	*	*	*	*	*	*	1	松线杆	TENSION RELEASER
5	3-5	*	*	*	*	*	*	*	*	*	1	松线器弹簧	TENSION RELEASER SPRING
6	3-6	*	*	*	*	*	*	*	*	*	1	松线器轴位螺钉	TENSION RELEASER HINGE SCREW
7	3-7	*	*	*	*	*	*	*	*	*	1	抬压脚摇杆螺钉	KNEE LIFTER ROCK FRAME HINGE SCREW
8	3-8	*	*	*	*	*	*	*	*	*	1	摇杆座螺钉	KNEE LIFTER ROCK FRAME HINGE LOCK SCREW
9	3-9	-	-	-	-	-	-	-	-	-	1	抬压脚摇杆组件	KNEE LIFTER ROCK FRAME(CPL.)
		*	*	*	*	*	*	*	*	*	1	摇杆组件	KNEE LIFTER ROCK FRAME(CPL.)
10	3-10	*	*	*	*	*	*	*	*	*	1	摇杆座	KNEE LIFTER ROCK FRAME HINGE
11	3-11	*	*	*	*	*	*	*	*	*	1	销	KNEE LIFTER ROCK FRAME HINGE STUD PIN
		-	-	-	-	-	-	-	-	-	1	销	KNEE LIFTER ROCK FRAME HINGE STUD PIN
12	3-12	*	*	*	*	*	*	*	*	*	1	抬压脚摇杆	KNEE LIFTER ROCK FRAME
		-	-	-	-	-	-	-	-	-	1	抬压脚摇杆	KNEE LIFTER ROCK FRAME
13	3-13	*	*	*	*	*	*	*	*	*	1	抬压脚顶杆	KNEE LIFTER LIFTING ROD(ASS'Y)
14	3-14	*	*	*	*	*	*	*	*	*	2	抬压脚顶杆挡圈	KNEE LIFTER LIFTING ROD RING
15	3-15	*	*	*	*	*	*	*	*	*	1	抬压脚顶杆弹簧	KNEE LIFTER LIFTING ROD SPRING
16	3-16	*	*	*	*	*	*	*	*	*	1	抬压脚顶杆紧圈	KNEE LIFTER LIFTING ROD SPRING COLLAR(CPL.)
17	3-17	*	*	*	*	*	*	*	*	*	1	螺钉	KNEE LIFTER LIFTING ROD SPRING COLLAR SCREW
18	3-18	*	*	*	*	*	*	*	*	*	1	螺钉	LIGHT STUD HOLE PLUG SCREW
19	3-19	*	*	*	*	*	*	*	*	*	1	垫圈	LIGHT STUD HOLE PLUG SCREW WASHER
20	3-20	*	*	*	*	*	*	*	*	*	1	调压螺钉	PRESSER BAR SPRING ADJUSTING SCREW
21	3-21	*	*	*	*	*	*	*	*	*	1	调压螺钉增阻器	PRESSER BAR SPRING ADJUSTING SCREW FRICTION
22	3-22	*	*	*	*	*	*	*	*	*	1	压杆簧支撑螺钉	PRESSER BAR SPRING SUPPORT SCREW
23	3-23	*	*	*	*	*	*	*	*	*	1	压杆簧组件	PRESSER BAR SPRING(CPL.)
24	3-24	*	*	*	*	*	*	*	*	*	1	压杆簧	PRESSER BAR SPRING
25	3-25	*	*	*	*	*	*	*	*	*	1	压杆簧油芯套	PRESSER BAR SPRING TUBE
26	3-26	*	*	*	*	*	*	*	*	*	1	压杆簧油芯	PRESSER BAR SPRING WICK
27	3-27	*	*	*	*	*	*	*	*	*	1	压脚扳手组件	PRESSER BAR LIFTER(CPL.)
28	3-28	*	*	*	*	*	*	*	*	*	1	压脚扳手螺钉	PRESSER BAR LIFTER SET SCREW
29	3-29	*	*	*	*	*	*	*	*	*	1	O型密封圈	PRESSER BAR LIFTING CAM,STUD O-RING
30	3-30	*	*	*	*	*	*	*	*	*	1	压脚扳手轴组件	PRESSER BAR LIFTING CAM,STUD(CPL.)

5. 针杆部件

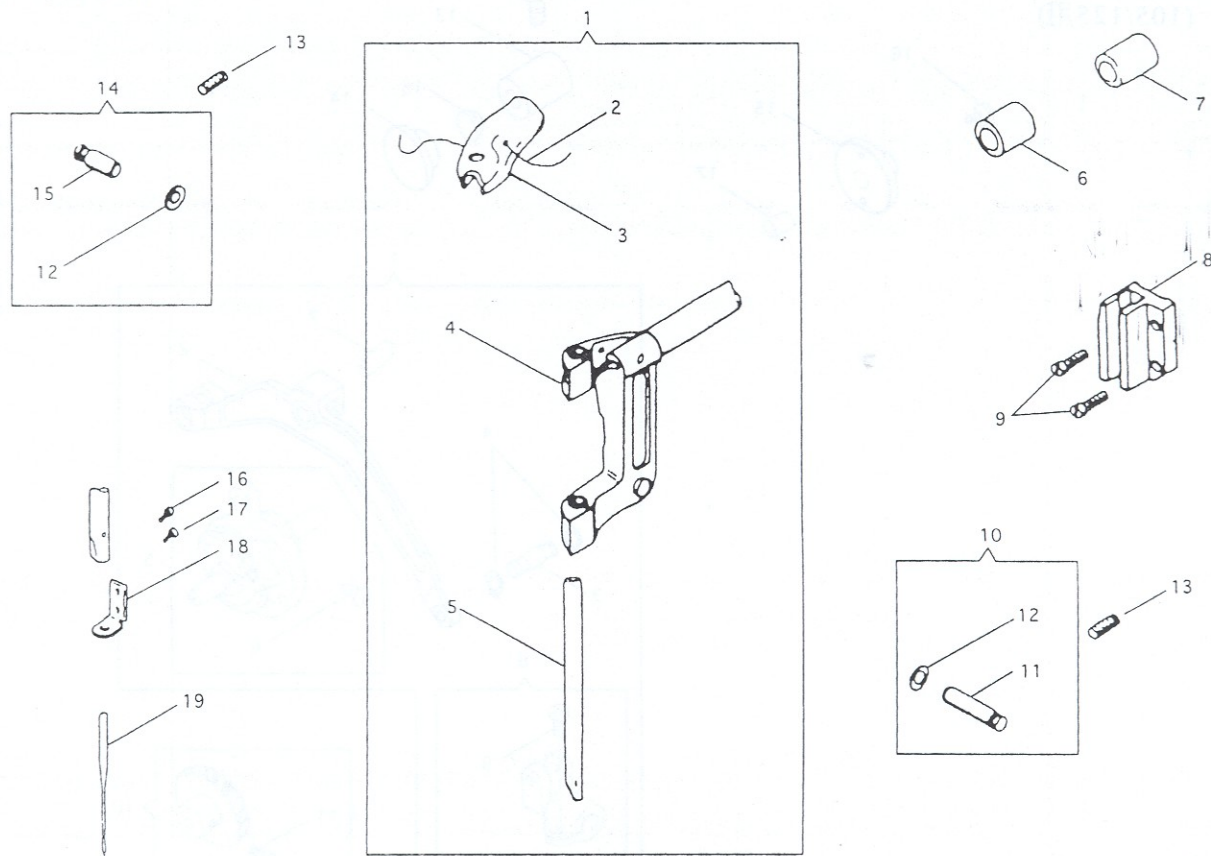


序号 NO.	图 号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名 称	DESCRIPTION
1	5-1	*	*	*	*	*	*	*	*	*	1	针杆摆动架组件	NEEDLE BAR YOKE (ASS'Y)
2	5-2	*	*	*	*	*	*	*	*	*	1	针杆油毛毡线	NEEDLE BAR OIL FELT CORD
3	5-3	*	*	*	*	*	*	*	*	*	1	针杆油毛毡	NEEDLE BAR OIL FELT
4	5-4	*	*	*	*	*	*	*	*	*	1	针杆摆动架组件	NEEDLE BAR YOKE(CPL.)
5	5-5	*	*	*	*	*	*	*	*	*	1	针杆	NEEDLE BAR
6	5-6	*	*	*	*	*	*	*	*	*	1	针杆上轴套	NEEDLE BAR YOKE SHAFT BUSHING(FRONT)
7	5-7	*	*	*	*	*	*	*	*	*	1	针杆下轴套	NEEDLE BAR YOKE SHAFT BUSHING(BACK)
8	5-8	*	*	*	*	*	*	*	*	*	1	针杆连接柱导块	NEEDLE BAR CONNECTING STUD GUIDE BLOCK
9	5-9	*	*	*	*	*	*	*	*	*	2	螺钉	NEEDLE BAR CONNECTING STUD GUIDE BLOCK SCREW
10	5-10	*	*	*	*	*	*	*	*	*	1	针杆摆动架前导向销组件	NEEDLE BAR YOKE GUIDE(FRONT)(CPL.)
11	5-11	*	*	*	*	*	*	*	*	*	1	针杆摆动架前导向销	NEEDLE BAR YOKE GUIDE(FRONT)
12	5-12	*	*	*	*	*	*	*	*	*	2	针杆油封	NEEDLE BAR YOKE GUIDE SEAL
13	5-13	*	*	*	*	*	*	*	*	*	2	螺钉	NEEDLE BAR YOKE GUIDE SET SCREW
14	5-14	*	*	*	*	*	*	*	*	*	1	针杆摆动架后导向销组件	NEEDLE BAR YOKE GUIDE(REAR)(CPL.)
15	5-15	*	*	*	*	*	*	*	*	*	1	针杆摆动架后导向销	NEEDLE BAR YOKE GUIDE(REAR)
16	5-16	*	*	*	*	*	*	*	*	*	1	螺钉	NEEDLE BAR THREAD GUIDE SCREW
17	5-17	*	*	*	*	*	*	*	*	*	1	机针固定螺钉	NEEDKE SET SCREW
18	5-18	*	*	*	*	*	*	*	*	*	1	针杆过线勾	NEEDLE BAR THREAD GUIDE
19	5-19	*	*	*	*	*	*	*	*	*	1	机针	NEEDLE(1906-07-10)(DOM.)
		*	*	*	*	*	*	*	*	*	1	机针	NEEDLE(1906-07-10)(EXP.)
		*	*	*	*	*	*	*	*	*	1	机针	NEEDLE(1906-01-12)(EXP.)

6. 针杆摆动架连杆部件 (105/125用)

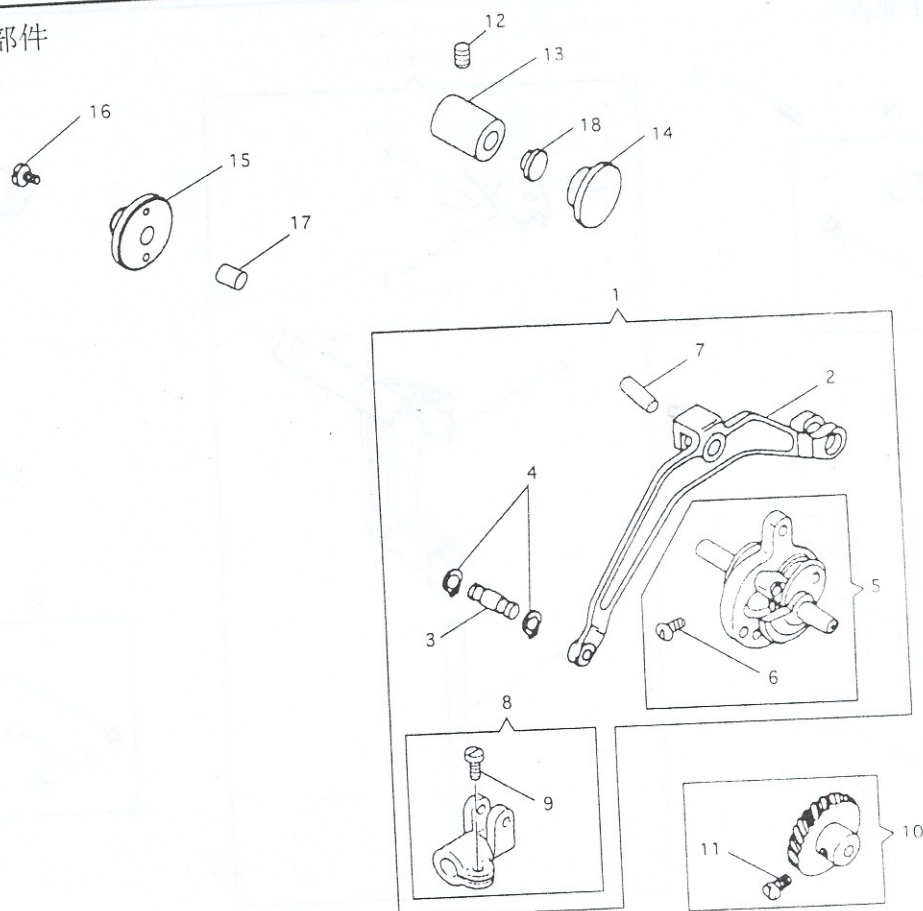


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	6-1	*	*	*	*	-	-	-	-	-	1	针杆摆动架连杆组件	NEEDLE BAR CONN.LINK(CPL.)
2	6-2	*	*	*	*	-	-	-	-	-	1	摆动架连杆	NEEDLE BAR CONN.LINK
3	6-3	*	*	*	*	-	-	-	-	-	1	摆动架连杆销	NEEDLE BAR CONN.LINK HINGE STUD
4	6-4	*	*	*	*	-	-	-	-	-	2	挡圈	NEEDLE BAR CONN.LINK HINGE STUD SNAP RING
5	6-5	*	*	*	*	-	-	-	-	-	1	摆针偏心轴组件	NEEDLE VIBRATING ECC.SHAFT(CPL.)
6	6-6	*	*	*	*	-	-	-	-	-	1	螺钉	NEEDLE BAR CONN.LINK STUD SCREW
7	6-7	*	*	*	*	-	-	-	-	-	1	滚柱销	NEEDLE BAR CONN.LINK STUD
8	6-8	*	*	*	*	-	-	-	-	-	1	摆动架滑杆连接座组件	NEEDLE BAR CONN.LINK HINGE BEARING(CPL.)
9	6-9	*	*	*	*	-	-	-	-	-	1	螺钉	NEEDLE BAR CONN.LINK HINGE BEARING SCREW
10	6-10	*	*	*	*	-	-	-	-	-	2	摆针偏心轴齿轮组件	NEEDLE VIBRATING ECC. SHAFT GEAR(CPL.)
11	6-11	*	*	*	*	-	-	-	-	-	1	螺钉	NEEDLE VIBRATING EC.SHAFT GEAR SET SCREW
12	6-12	*	*	*	*	-	-	-	-	-	1	摆针凸轮前轴套	NEEDLE VIBRATING CAM SHAFT BUSHING(FRONT)SCREW
13	6-13	*	*	*	*	-	-	-	-	-	1	摆针凸轮前轴套盖	NEEDLE VIBRATING CAM SHAFT BUSHING(FRONT)CAP
14	6-14	*	*	*	*	-	-	-	-	-	1	摆针凸轮后轴套	NEEDLE VIBRATING CAM SHAFT BUSHING(BACK)
15	6-15	*	*	*	*	-	-	-	-	-	2	螺钉	NEEDLE VIBRATING CAM SHAFT BUSHING(BACK)SCREW
16	6-16	*	*	*	*	-	-	-	-	-	1	油孔塞	NEEDLE VIBRATING CAM SHAFT OIL HOLE PLUG
17	6-17	*	*	*	*	-	-	-	-	-	1	油塞	NEEDLE VIBRATING CAM SHAFT BUSHING(FRONT)PLUG
18	6-18	*	*	*	*	-	-	-	-	-	1		

7. 针杆摆动架部件 (135/140用)

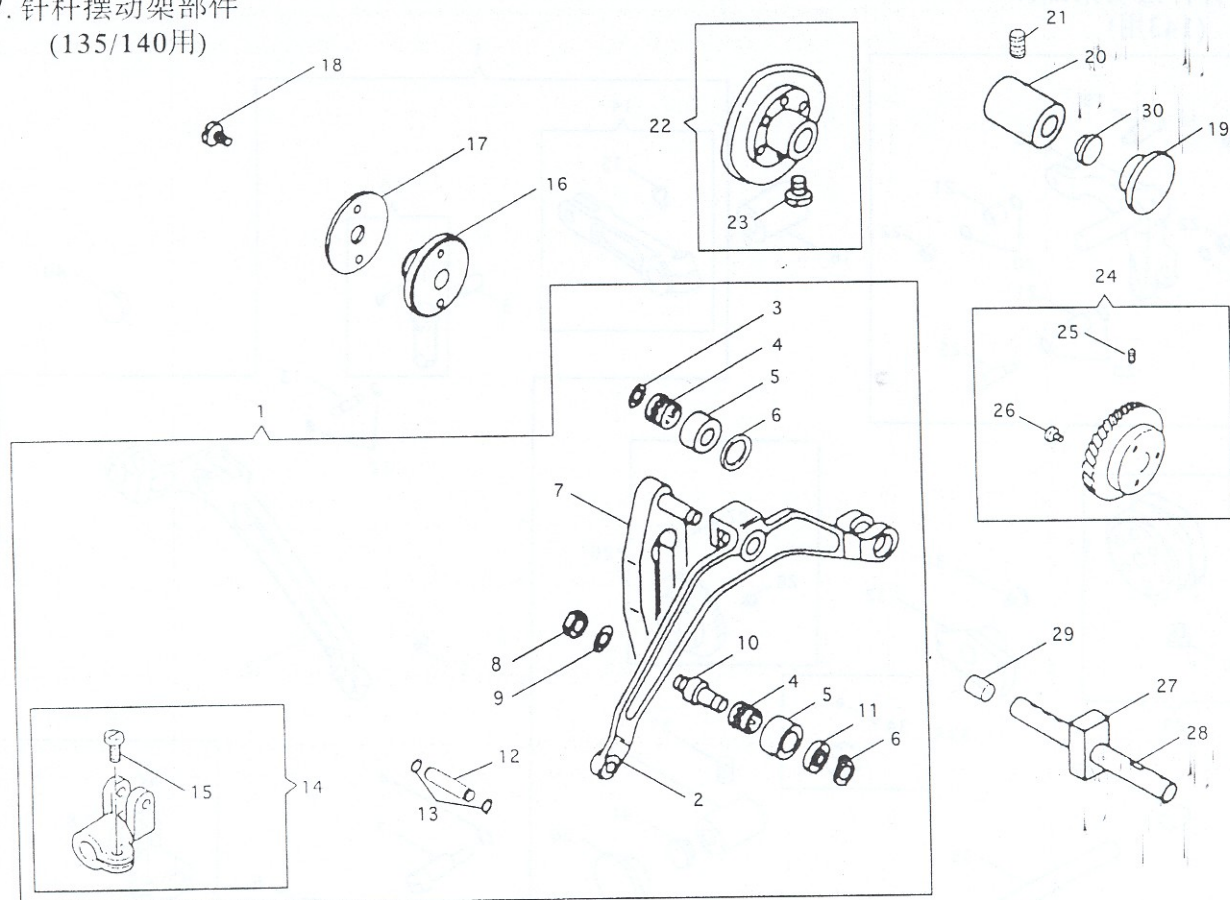


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	7-1	-	-	-	*	*	*	-	-	-	1	针杆摆动架连杆组件	NEEDLE BAR CONN.LINK(CPL.)
2	7-2	-	-	-	*	*	*	-	-	-	1	针杆摆动架连杆	NEEDLE BAR CONN.LINK
3	7-3	-	-	-	*	*	*	-	-	-	1	垫圈	NEEDLE VIBRATING CAM ROLLER STUD SPRING WASHER
4	7-4	-	-	-	*	*	*	-	-	-	2	滚针轴承	NEEDLE VIBRATING CAM ROLLER NEEDLE BEARING CAGE
5	7-5	-	-	-	*	*	*	-	-	-	2	摆针凸轮滚柱	NEEDLE VIBRATING CAM ROLLER
6	7-6	-	-	-	*	*	*	-	-	-	2	挡圈	NEEDLE VIBRATING CAM ROLLER GUIDE(CPL.)
7	7-7	-	-	-	*	*	*	-	-	-	1	摆针凸轮滚柱架组件	NEEDLE VIBRATING CAM ROLLER STUD(ECC.)NUT
8	7-8	-	-	-	*	*	*	-	-	-	1	螺母	NEEDLE VIBRATING CAM ROLLER STUD(ECC.)SPRING WASHER
9	7-9	-	-	-	*	*	*	-	-	-	1	弹簧垫圈	NEEDLE VIBRATING CAM ROLLER STUD(ECC.)
10	7-10	-	-	-	*	*	*	-	-	-	1	摆针凸轮滚柱偏心销	NEEDLE VIBRATING CAM ROLLER STUD(ECC.)WASHER
11	7-11	-	-	-	*	*	*	-	-	-	1	垫圈	NEEDLE BAR CONN.LINK HINGE STUD
12	7-12	-	-	-	*	*	*	-	-	-	1	针杆摆动架连杆销	NEEDLE BAR CONN.LINK HINGE STUD SNAP RING
13	7-13	-	-	-	*	*	*	-	-	-	2	挡圈	NEEDLE BAR CONN.LINK HINGE BEARING(CPL.)
14	7-14	-	-	-	*	*	*	-	-	-	1	针杆摆动架滑杆连接座组件	NEEDLE BAR CONN.LINK HINGE BEARING SCREW
15	7-15	-	-	-	*	*	*	-	-	-	1	螺钉	NEEDLE VIBRATING CAM SHAFT BUSHING(BACK)
16	7-16	-	-	-	*	*	*	-	-	-	1	摆针凸轮后轴套	NEEDLE VIBRATING CAM SHAFT BUSHING(BACK)SPACER
17	7-17	-	-	-	*	*	*	-	-	-	1	摆针凸轮后轴套隔板	NEEDLE VIBRATING CAM SHAFT BUSHING(BACK)SCREW
18	7-18	-	-	-	*	*	*	-	-	-	2	螺钉	NEEDLE VIBRATING CAM SHAFT BUSHING(FRONT)CAP
19	7-19	-	-	-	*	*	*	-	-	-	1	摆针凸轮前轴套盖	NEEDLE VIBRATING CAM SHAFT BUSHING(FRONT)
20	7-20	-	-	-	*	*	*	-	-	-	1	摆针凸轮前轴套	NEEDLE VIBRATING CAM SHAFT BUSHING (FRONT)SCREW
21	7-21	-	-	-	*	*	*	-	-	-	1	螺钉	NEEDLE VIBRATING CAM (CPL.)
22	7-22	-	-	-	*	*	*	-	-	-	1	摆针凸轮组件	NEEDLE VIBRATING CAM SET SCREW
23	7-23	-	-	-	*	*	*	-	-	-	2	摆针凸轮固定螺钉	NEEDLE VIBRATING WORM WHEEL(CPL.)
24	7-24	-	-	-	*	*	*	-	-	-	1	摆针蜗轮组件	NEEDLE VIBRATING WORM WHEEL SCREW
25	7-25	-	-	-	*	*	*	-	-	-	2	螺钉	NEEDLE VIBRATING WORM WHEEL DISC SCREW
26	7-26	-	-	-	*	*	*	-	-	-	3	螺钉	NEEDLE VIBRATING CAM SHAFT SLIDE BLOCK
27	7-27	-	-	-	*	*	*	-	-	-	1	摆针凸轮轴滑块	NEEDLE VIBRATING CAM SHAFT
28	7-28	-	-	-	*	*	*	-	-	-	1	摆针凸轮轴	NEEDLE VIBRATING CAM SHAFT OIL HOLE PLUG
29	7-29	-	-	-	*	*	*	-	-	-	1	油孔塞	NEEDLE VIBRATING CAM SHAFT BUSHIN(FRONT)PLUG
30	7-30	-	-	-	*	*	*	-	-	-	1	油塞	

9. 横针幅度调节部件 (105/125/135/140用)

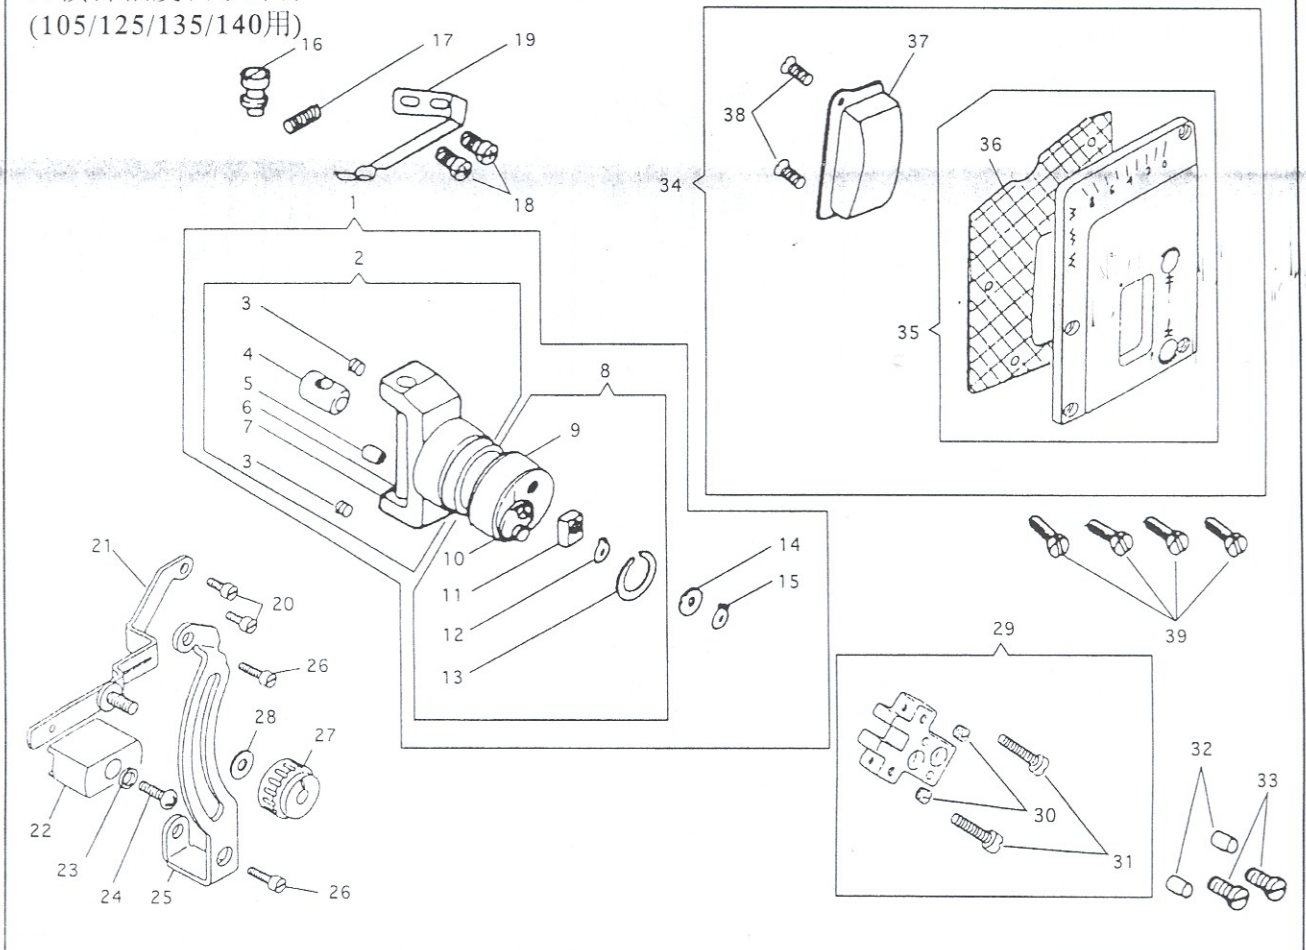


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	9-1	*	*	*	*	*	*	*	*	*	1	摆幅调节轴套组件	NEEDLE VIBRATING YOKE CONN.CARRIER FRAME.ADJ.BUSHING(CPL.)
2	9-2	*	*	*	*	*	*	*	*	*	1	机针摆幅调节器组件	NEEDLE VIBRATING YOKE CONN.LINK CARRIER FRAME(CPL.)
3	9-3	*	*	*	*	*	*	*	*	*	2	螺钉	NEEDLE VIBRATING YOKE CONN.LINK CARRIER FRAME SLIDE STUD SET SCREW
4	9-4	*	*	*	*	*	*	*	*	*	1	滑动柱	NEEDLE VIBRATING YOKE CONN.LINK SLIDE BEARING
5	9-5	*	*	*	*	*	*	*	*	*	1	螺钉	NEEDLE VIBRATING YOKE CONN.LINK CARRIER FRAME STUD
6	9-6	*	*	*	*	*	*	*	*	*	1	滑动销	NEEDLE VIBRATING YOKE CONN.LINK SLIDE STUD
7	9-7	*	*	*	*	*	*	*	*	*	1	机针摆幅调节座	NEEDLE VIBRATING YOKE CONN.LINK CARRIER FRAME
8	9-8	*	*	*	*	*	*	*	*	*	1	针位调节偏心组件	NEEDLE POSITION ADJ.ECC.(CPL.)
9	9-9	*	*	*	*	*	*	*	*	*	1	针位调节偏心轴套组件	NEEDLE POSITION ADJ.ECC.BUSHING(LARGE).(SMALL)(CPL)
10	9-10	*	*	*	*	*	*	*	*	*	1	针位调节偏心轴套滑块销	NEEDLE POSITION ADJ.ECC.BUSHING(SMALL)SLIDE BLOCK STUD
11	9-11	*	*	*	*	*	*	*	*	*	1	针位调节偏心轴套滑块	NEEDLE POSITION ADJ.ECC.BUSHING(SMALL)SLIDE BLOCK
12	9-12	*	*	*	*	*	*	*	*	*	1	滑块挡圈	NEEDLE POSITION ADJ.ECC.BUSHING(SMALL)BLOCK STUD RING
13	9-13	*	*	*	*	*	*	*	*	*	2	挡圈	NEEDLE POSITION ADJ.ECC.BUSHING(SMALL)SNAP RING
14	9-14	*	*	*	*	*	*	*	*	*	1	弹簧垫圈	NEEDLE VIBRATING YOKE CONN.LINK CARRIER FRAME CUP SPRING
15	9-15	*	*	*	*	*	*	*	*	*	1	挡圈	NEEDLE VIBRATING YOKE CONN.LINK CARRIER FRAME SNAP RING
16	9-16	*	*	*	*	*	*	*	*	*	1	偏心调节销	NEEDLE POSITION ADJ.CAM REGULATING STUD
17	9-17	*	*	*	*	*	*	*	*	*	1	螺钉	NEEDLE POSITION ADJ.CAM REGULATING STUD SET SCREW
18	9-18	*	*	*	*	*	*	*	*	*	2	螺钉	NEEDLE POSITION ADJ.ECC.POSITION SPRING SCREW
19	9-19	*	*	*	*	*	*	*	*	*	1	定位簧	NEEDLE POSITION ADJ.ECC.POSITION SPRING
20	9-20	*	*	*	*	*	*	*	*	*	2	螺钉	NEEDLE POSITION ADJ.ECC.STOP SCREW
21	9-21	*	*	*	*	*	*	*	*	*	1	针位调节杆组件	NEEDLE POSITION (FINE POSITION ADJ.LEVER(CPL.)
22	9-22	*	*	*	*	*	*	*	*	*	1	针位调节杆扳手	NEEDLE POSITION (FINE POSITION ADJ.LEVER KNOB.
23	9-23	*	*	*	*	*	*	*	*	*	1	垫圈	NEEDLE POSITION (FINE POSITION ADJ.LEVER KNOB.SCREW WASHER
24	9-24	*	*	*	*	*	*	*	*	*	1	螺钉	NEEDLE POSITION (FINE POSITION ADJ.LEVER KNOB.SCREW
25	9-25	*	*	*	*	*	*	*	*	*	1	针位调节杆锁紧架	NEEDLE POSITION (FINE POSITION ADJ.LEVER LOCKING BRACKET
26	9-26	*	*	*	*	*	*	*	*	*	2	螺钉	NEEDLE POSITION (FINE POSITION ADJ.LEVER LOCKING BRACKET SCREW)
27	9-27	*	*	*	*	*	*	*	*	*	1	针位调节杆锁紧旋扭	NEEDLE POSITION (FINE POSITION ADJ.LEVER LOCKING KNOB.
28	9-28	*	*	*	*	*	*	*	*	*	1	垫圈	NEEDLE POSITION (FINE POSITION ADJ.LEVER LOCKING KNOB.WASHER
29	9-29	*	*	*	*	*	*	*	*	*	1	针位调节偏心滑块架组件	NEEDLE POSITION ADJ.ECC.SLIDE BLOCK BRACKET(CPL.)
30	9-30	*	*	*	*	*	*	*	*	*	2	螺钉	NEEDLE POSITION ADJ.CAM STOP SCREW SET SCREW
31	9-31	*	*	*	*	*	*	*	*	*	2	螺钉	NEEDLE POSITION CAM STOP SCREW
32	9-32	*	*	*	*	*	*	*	*	*	2	定位销	NEEDLE POSITION ADJ.ECC.SLIDE BLOCK BRACKET POSITION PIN
33	9-33	*	*	*	*	*	*	*	*	*	2	螺钉	NEEDLE POSITION ADJ.ECC.SLIDE BLOCK BRACKET SCREW
34	9-34	*	*	*	*	*	*	*	*	*	1	机壳前罩组件	ARM COVER(FRONT)(CPL.)
35	9-35	*	*	*	*	*	*	*	*	*	1	机壳前罩衬垫组件	ARM COVER(FRONT)(CPL.)
36	9-36	*	*	*	*	*	*	*	*	*	1	机壳前罩衬垫	ARM COVER(FRONT).GASKET(CPL.)
37	9-37	*	*	*	*	*	*	*	*	*	1	机壳前罩衬垫	ARM COVER(FRONT).GASKET(CPL.)
38	9-38	*	*	*	*	*	*	*	*	*	1	针距指示板窗	STICH LENGTH INDICATOR PLATE WINDOW
39	9-39	*	*	*	*	*	*	*	*	*	2	螺钉	STICH LENGTH INDICATOR PLATE WINDOW SCREW
		*	*	*	*	*	*	*	*	*	4	螺钉	ARM COVER(FRONT)SCREW

10. 横针幅度调节部件 (143用)

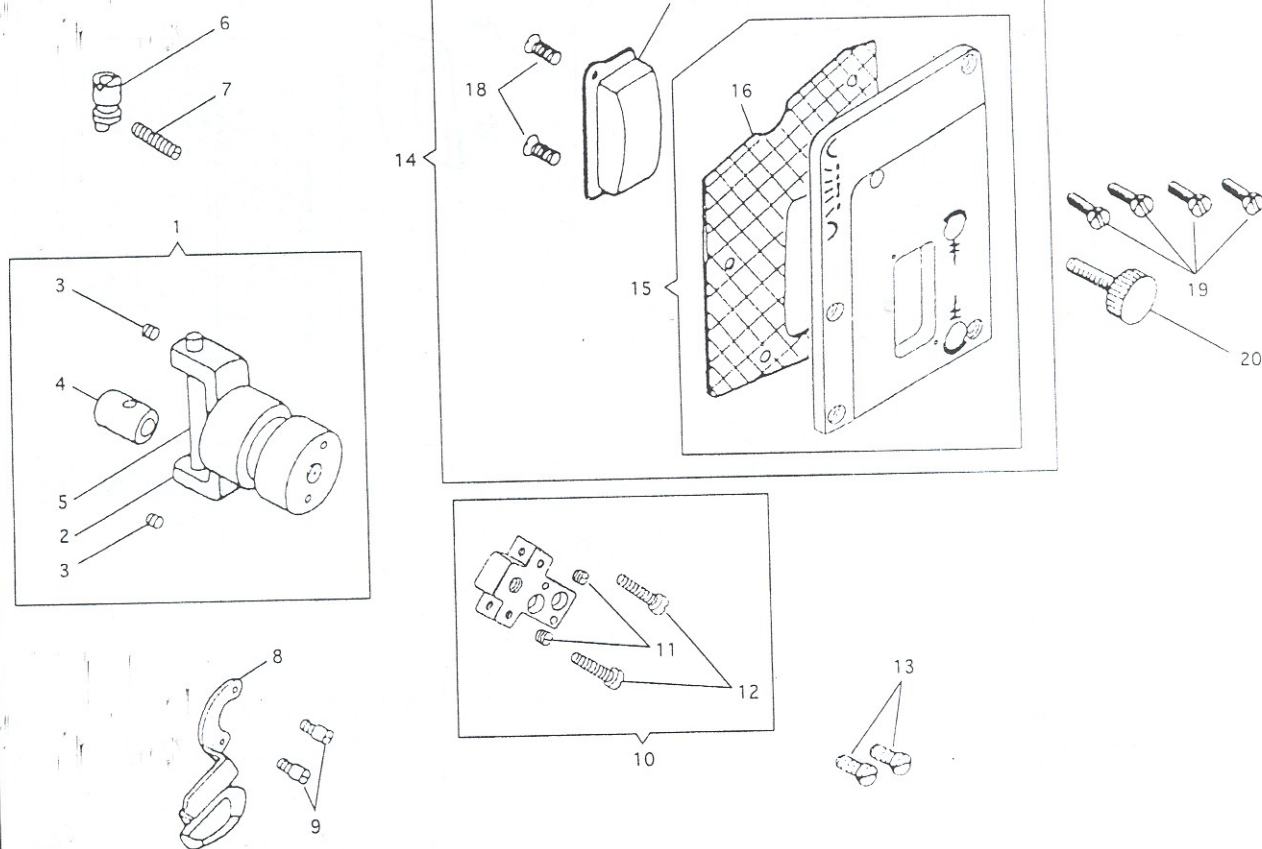


序号 NO.	图 号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名 称	DESCRIPTION
1	10-1	-	-	-	-	-	-	-	*	*	1	针摆调节器组件	NEEDLE VIBRATING YOKE CONN.LINK CARRIER FRAME,BLOCK(CPL.)
2	10-2	-	-	-	-	-	-	-	*	*	1	针摆调节器组件	NEEDLE VIBRATING YOKE CONN.LINK CARRIER FRAME(CPL.)
3	10-3	-	-	-	-	-	-	-	*	*	2	螺钉	NEEDLE VIBRATING YOKE CONN.LINK CARRIER FRAME STUD SET SCREW
4	10-4	-	-	-	-	-	-	-	*	*	1	滑动柱	NEEDLE VIBRATING YOKE CONN.LINK SLIDE BEARING
5	10-5	-	-	-	-	-	-	-	*	*	1	滑销	NEEDLE VIBRATING YOKE CONN.LINK SLIDE STUD
6	10-6	-	-	-	-	-	-	-	*	*	1	偏心调节销	NEEDLE POSITION ADJ.CAM REGULATING STUD
7	10-7	-	-	-	-	-	-	-	*	*	1	螺钉	NEEDLE POSITION ADJ.CAM REGULATING STUD SET SCREW
8	10-8	-	-	-	-	-	-	-	*	*	1	针摆调节杆	NEEDLE VIBRATING ADJ.LEVER
9	10-9	-	-	-	-	-	-	-	*	*	2	螺钉	NEEDLE POSITION ADJ.ECC.STOP SCREW
10	10-10	-	-	-	-	-	-	-	*	*	1	针位调节偏心滑块架组件	NEEDLE POSITION ADJ.ECC.SLIDE BLOCK BRACKET(CPL.)
11	10-11	-	-	-	-	-	-	-	*	*	2	螺钉	NEEDLE POSITION ADJ.CAM STOP SCREW SET SCREW
12	10-12	-	-	-	-	-	-	-	*	*	2	螺钉	NEEDLE POSITION ADJ.CAM STOP SCREW
13	10-13	-	-	-	-	-	-	-	*	*	2	螺钉	NEEDLE POSITION ADJ.ECC.SLIDE BLOCK BRACKET SCREW
14	10-14	-	-	-	-	-	-	-	*	*	1	机壳前罩组件	ARM COVER(FRONT)(CPL.)
15	10-15	-	-	-	-	-	-	-	*	*	1	机壳前罩衬垫组件	ARM COVER(FRONT).GASKET(CPL.)
16	10-16	-	-	-	-	-	-	-	*	*	1	机壳前罩衬垫	ARM COVER(FRONT)GASKET
17	10-17	-	-	-	-	-	-	-	*	*	1	针距指示板窗	STITCH LENGTH INDICATOR PLATE WINDOW
18	10-18	-	-	-	-	-	-	-	*	*	2	螺钉	STITCH LENGTH INDICATOR PLATE WINDOW SCREW
19	10-19	-	-	-	-	-	-	-	*	*	4	螺钉	ARM COVER(FRONT)SCREW
20	10-20	-	-	-	-	-	-	-	*	*	1	螺钉	NEEDLE POSITION ADJUSTING CAM SET SCREW

11. 针距调节部件

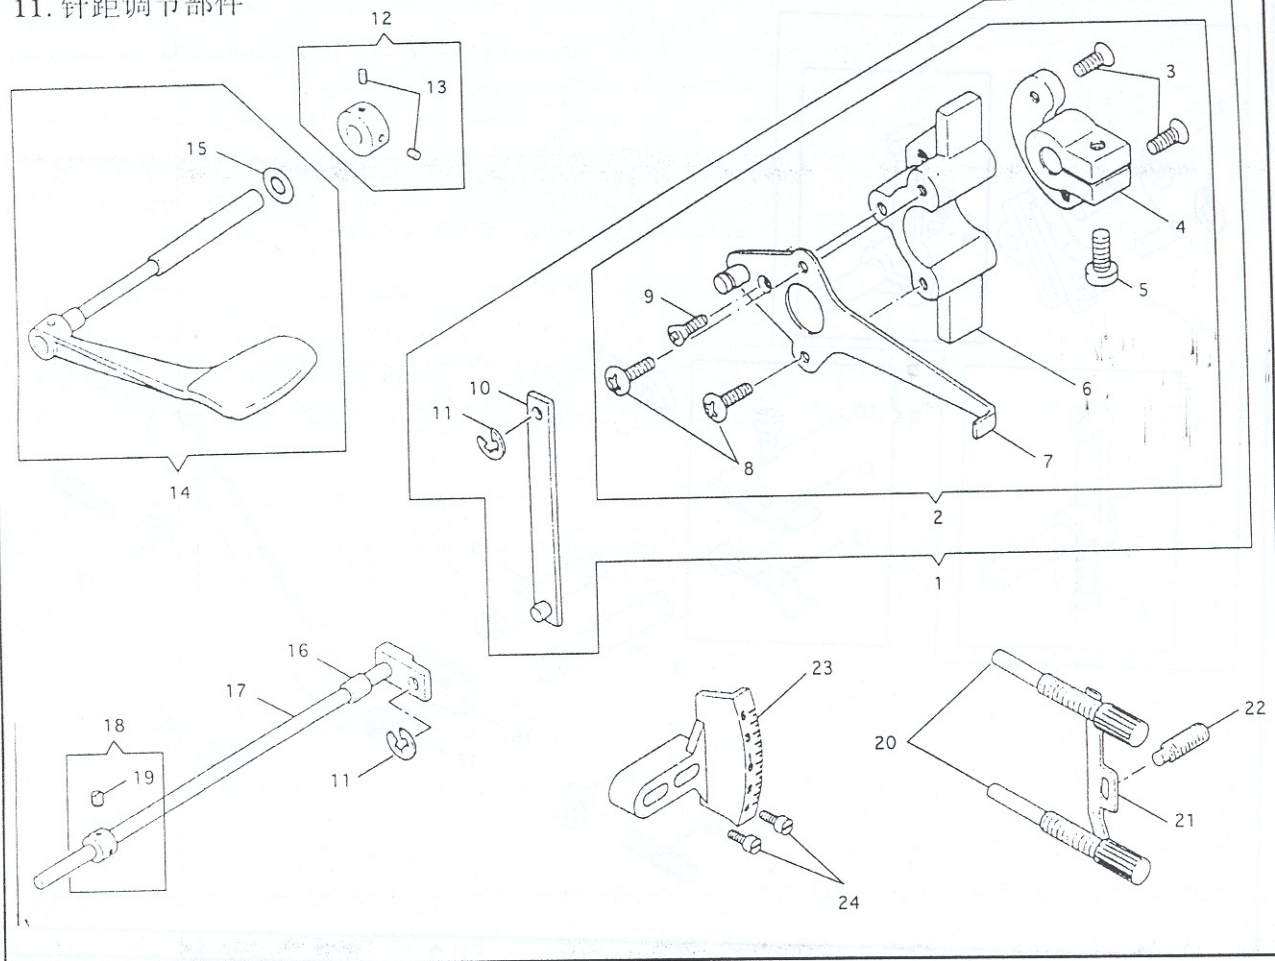


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	11-1	*	*	*	*	*	*	*	*	*	1	送料调节指示器、连杆组件	FEED REGULATING INDICATOR, LINK (CPL.)
2	11-2	*	*	*	*	*	*	*	*	*	1	送料调节指示器组件	FEED REGULATING INDICATOR (CPL.)
3	11-3	*	*	*	*	*	*	*	*	*	2	螺钉	FEED REGULATING INDICATOR (BODY) SCREW
4	11-4	*	*	*	*	*	*	*	*	*	1	送料调节曲柄	FEED REGULATING INDICATOR HUB
5	11-5	*	*	*	*	*	*	*	*	*	1	螺钉	FEED REGULATING INDICATOR HUB SCREW
6	11-6	*	*	*	*	*	*	*	*	*	1	送料调节限位器	FEED REGULATING INDICATOR (BODY)
7	11-7	*	*	*	*	*	*	*	*	*	1	送料调节指示杆组件	FEED REGULATING INDICATOR PLATE (CPL.)
8	11-8	*	*	*	*	*	*	*	*	*	2	螺钉 (大)	FEED REGULATING INDICATOR SCREW (LARGE)
9	11-9	*	*	*	*	*	*	*	*	*	1	螺钉 (小)	FEED REGULATING INDICATOR SCREW (SMALL)
10	11-10	*	*	*	*	*	*	*	*	*	1	送料调节连杆	FEED REGULATING INDICATOR LEVER CONNECTING LINK
11	11-11	*	*	*	*	*	*	*	*	*	2	挡圈	FEED REGULATING INDICATOR PLATE PIN RETAINER
12	11-12	*	*	*	*	*	*	*	*	*	1	倒送料轴紧固组件	FEED REGULATING LEVER SHAFT COLLAR (CPL.)
13	11-13	*	*	*	*	*	*	*	*	*	2	螺钉	FEED REGULATING LEVER SHAFT COLLAR SET SCREW
14	11-14	*	*	*	*	*	*	*	*	*	1	倒送料手组件	FEED REGULATING LEVER SHAFT (ASS'Y)
15	11-15	*	*	*	*	*	*	*	*	*	1	O 型挡圈	FEED REGULATING LEVER SHAFT O-RING
16	11-16	*	*	*	*	*	*	*	*	*	1	送料调节连接轴套	FEED REGULATING CONN. SHAFT BUSHING
17	11-17	*	*	*	*	*	*	*	*	*	1	送料调节轴	FEED REGULATING CONN. SHAFT
18	11-18	*	*	*	*	*	*	*	*	*	1	送料调节轴紧固组件	FEED REGULATING CONN. SHAFT COLLAR (CPL.)
19	11-19	*	*	*	*	*	*	*	*	*	2	螺钉	FEED REGULATING CONN. SHAFT COLLAR SET SCREW
20	11-20	*	*	*	*	*	*	*	*	*	2	螺钉	FEED REGULATING SHAFT INDICATOR STOP SCREW
21	11-21	*	*	*	*	*	*	*	*	*	1	止动簧	FEED REGULATING SHAFT INDICATOR STOP SCREW RETAINING SPRING
22	11-22	*	*	*	*	*	*	*	*	*	1	螺钉	FEED REGULATING RETAINING SPRING SCREW
23	11-23	*	*	*	*	*	*	*	*	*	1	针距指示板	STITCH LENGTH INDICATOR PLATE
24	11-24	*	*	*	*	*	*	*	*	*	2	螺钉	STITCH LENGTH INDICATOR PLATE SCREW

12.横针幅度调节部件

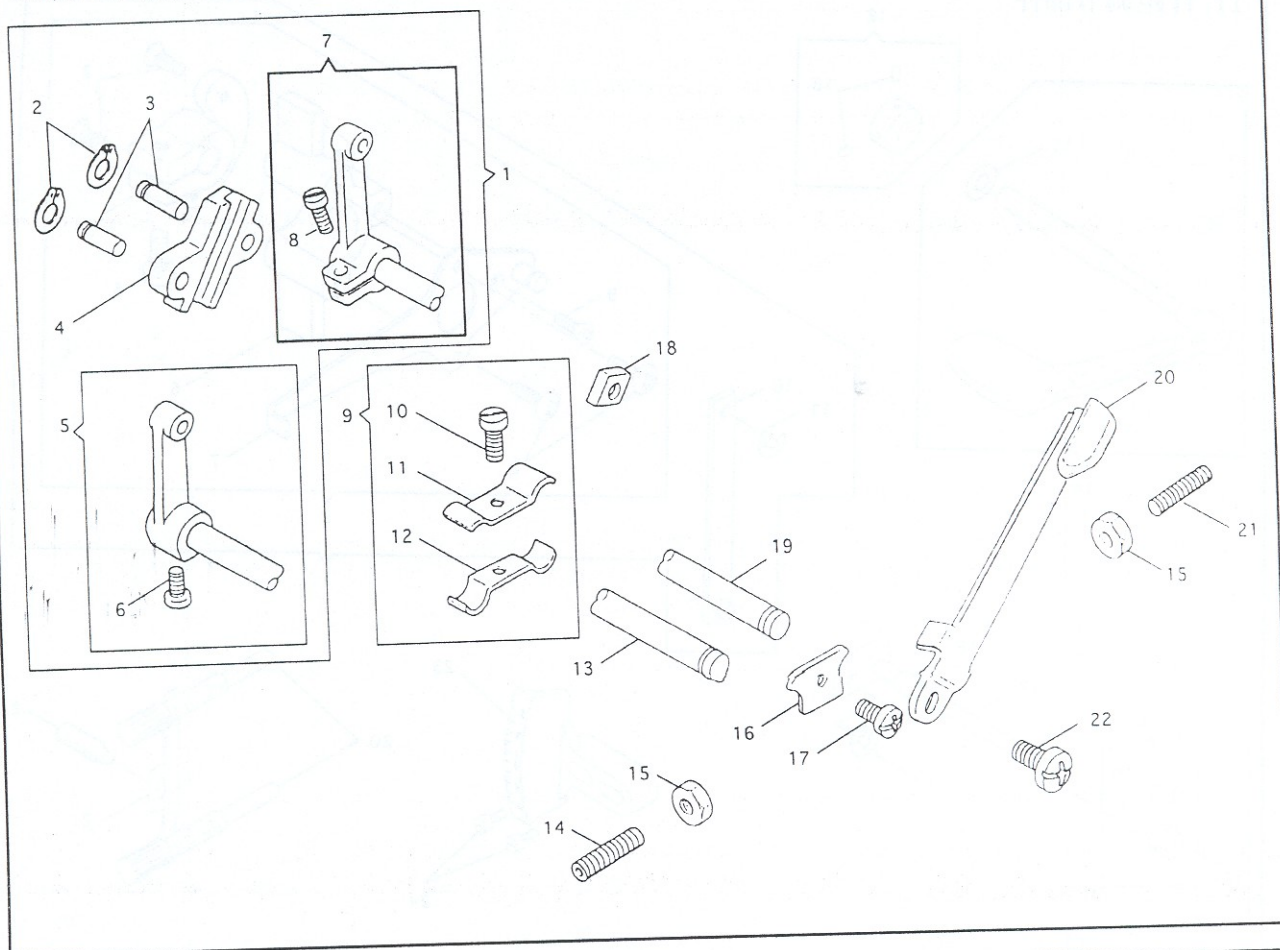


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	12-1	*	*	*	*	*	*	*	*	*	1	针摆调节架组件	NEEDLE VIBRATING ADJ.BRACKET(CPL.)
2	12-2	*	*	*	*	*	*	*	*	*	2	挡圈	NEEDLE BAR YOKE CONN.LINK STUD SNAP RING
3	12-3	*	*	*	*	*	*	*	*	*	2	滑块销	NEEDLE POSITION ADJ.ECC.BUSHING(SMALL)SLIDE BLOCK STUD
4	12-4	*	*	*	*	*	*	*	*	*	1	针摆调节架	NEEDLE VIBRATING ADJ.BRACKET
5	12-5	*	*	*	*	*	*	*	*	*	1	针摆调节曲柄组件	NEEDLE VIBRATING ADJ.GUIDE CRANK(CPL.)
6	12-6	*	*	*	*	*	*	*	*	*	1	螺钉	NEEDLE VIBRATING ADJ.GUIDE CRANK SET SCREW
7	12-7	*	*	*	*	*	*	*	*	*	1	针摆调节连杆组件	NEEDLE VIBRATING ADJ.GUIDE(CPL.)
8	12-8	*	*	*	*	*	*	*	*	*	1	螺钉	NEEDLE VIBRATING CRANK PINCH SCREW
9	12-9	*	*	*	*	*	*	*	*	*	1	针摆调节轴夹紧板组件	NEEDLE VIBRATING ADJ.SHAFT CLAMPING BRACKET(CPL.)
10	12-10	*	*	*	*	*	*	*	*	*	1	螺钉	NEEDLE VIBRATING ADJ.SHAFT CLAMPING BRACKET SCREW
11	12-11	*	*	*	*	*	*	*	*	*	1	针摆调节轴夹紧板(上)	NEEDLE VIBRATING ADJ.SHAFT CLAMPING BRACKET(UPPER)
12	12-12	*	*	*	*	*	*	*	*	*	1	针摆调节轴夹紧板(下)	NEEDLE VIBRATING ADJ.SHAFT CLAMPING BRACKET(LOWER)
13	12-13	*	*	*	*	*	*	*	*	*	1	针摆调节曲柄轴	NEEDLE VIBRATING ADJ.GUIDE CRANK SHAFT
14	12-14	*	*	*	*	*	*	*	*	*	1	限位螺钉(左)	NEEDLE VIBRATING ADJ.LEVER STOP SCREW(LEFT)
15	12-15	*	*	*	*	*	*	*	*	*	1	限位螺钉(右)	NEEDLE VIBRATING ADJ.LEVER STOP SCREW(RIGHT)
16	12-16	*	*	*	*	*	*	*	*	*	2	限位螺钉螺母	NEEDLE VIBRATING ADJ.LEVER STOP SCREW NUT
17	12-17	*	*	*	*	*	*	*	*	*	1	针摆调节轴定位块	NEEDLE VIBRATING ADJ.SHAFT RETAINER
18	12-18	*	*	*	*	*	*	*	*	*	1	螺钉	NEEDLE VIBRATING ADJ.SHAFT RETAINER SCREW
19	12-19	*	*	*	*	*	*	*	*	*	1	滑块	NEEDLE VIBRATING ADJ.BRACKET SLIDE BLOCK
20	12-20	*	*	*	*	*	*	*	*	*	1	针摆调节连杆轴	NEEDLE VIBRATING ADJ.CRANK SHAFT
21	12-21	*	*	*	*	*	*	*	*	*	1	针摆调节杆组件	NEEDLE VIBRATING ADJ.LEVER(CPL.)
22	12-22	*	*	*	*	*	*	*	*	*	1	针摆调节杆限位螺钉(右)	NEEDLE VIBRATING ADJ.LEVER STOP SCREW(RIGHT)
		*	*	*	*	*	*	*	*	*	1	螺钉	NEEDLE VIBRATING ADJ.LEVER SCREW

13.顶盖、绕线器部件

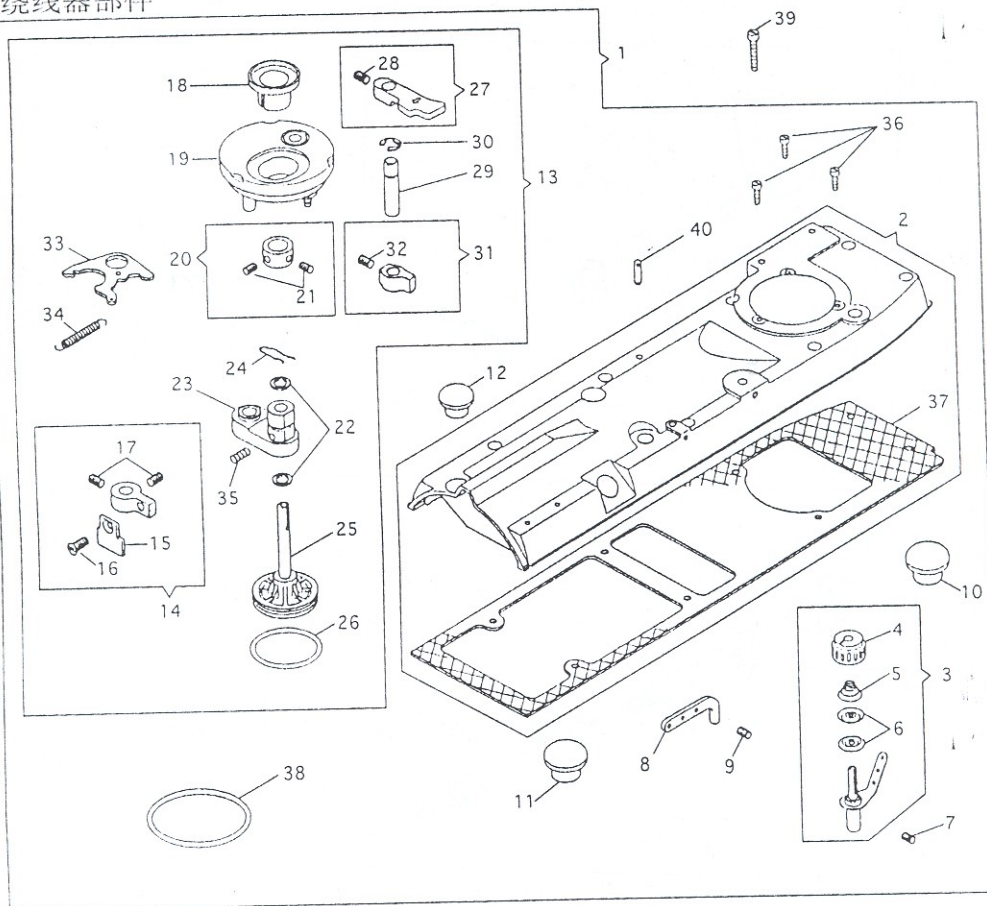


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	13-1	*	*	*	*	*	*	*	*	*	1	机壳顶盖组件	ARM COVER(TOP)(ASS'Y)
2	13-2	*	*	*	*	*	*	*	*	*	1	机壳顶盖衬垫组件	ARM COVER(TOP)GASKET(CPL.)
3	13-3	*	*	*	*	*	*	*	*	*	1	绕线器夹线器组件	BOBBIN WINDER TENSION(CPL.)
4	13-4	*	*	*	*	*	*	*	*	*	1	夹线调节螺母	BOBBIN WINDER TENSION REGUALTING THUMB NUT
5	13-5	*	*	*	*	*	*	*	*	*	1	绕线器夹线簧	BOBBIN WINDER TENSION SPRING
6	13-6	*	*	*	*	*	*	*	*	*	2	夹线板	BOBBIN WINDER TENSION DISC
7	13-7	*	*	*	*	*	*	*	*	*	1	夹线器固定螺母	BOBBIN WINDER TENSION SCREW
8	13-8	*	*	*	*	*	*	*	*	*	1	三眼线钩	THREAD RETAINER(3-HOLES)
9	13-9	*	*	*	*	*	*	*	*	*	1	螺钉	THREAD RETAINER(3-HOLES)SCREW
10	13-10	*	*	*	*	*	*	*	*	*	1	顶盖后塞	ARM COVER(TOP)PLUG(BACK)
11	13-11	*	*	*	*	*	*	*	*	*	1	顶盖中塞	ARM COVER(TOP)PLUG(CENTER)
12	13-12	*	*	*	*	*	*	*	*	*	1	压脚调压孔塞	PRESSER FOOT PRESSURE ADJ.HOLE PLUG
13	13-13	*	*	*	*	*	*	*	*	*	1	绕线器组件	BOBBIN WINDER(CPL.)
14	13-14	*	*	*	*	*	*	*	*	*	1	绕线器限位器组件	BOBBIN WINDER STOPPER(CPL.)
15	13-15	*	*	*	*	*	*	*	*	*	1	绕线器限位板	BOBBIN WINDER STOPPER BOARD
16	13-16	*	*	*	*	*	*	*	*	*	1	螺钉	BOBBIN WINDER STOPPER BOARD SCREW
17	13-17	*	*	*	*	*	*	*	*	*	2	螺钉	BOBBIN WINDER STOPPER SCREW
18	13-18	*	*	*	*	*	*	*	*	*	1	绕线器座	BOBBIN WINDER SPINDLE THREAD GUARD
19	13-19	*	*	*	*	*	*	*	*	*	1	绕线器壳	BOBBIN WINDER(BODY)
20	13-20	*	*	*	*	*	*	*	*	*	2	绕线器轴套组件	BOBBIN WINDER SHAFT COLLAR(CPL.)
21	13-21	*	*	*	*	*	*	*	*	*	2	螺钉	BOBBIN WINDER SHAFT COLLAR SCREW
22	13-22	*	*	*	*	*	*	*	*	*	1	垫圈	BOBBIN WINDER SHAFT FRICTION WHEEL WASHER
23	13-23	*	*	*	*	*	*	*	*	*	1	绕线器轴套	BOBBIN WINDER SHAFT BUSHING
24	13-24	*	*	*	*	*	*	*	*	*	1	弹簧	BOBBIN WINDER SHAFT FRICTION WHEEL SPRING
25	13-25	*	*	*	*	*	*	*	*	*	1	绕线器轮	BOBBIN WINDER SHAFT FRICTION WHEEL(BODY)
26	13-26	*	*	*	*	*	*	*	*	*	1	绕线器轴摩擦轮圈	BOBBIN WINDER SHAFT FRICTION WHEEL RING
27	13-27	*	*	*	*	*	*	*	*	*	1	绕线器杆组件	BOBBIN WINDER LEVER(CPL.)
28	13-28	*	*	*	*	*	*	*	*	*	1	螺钉	BOBBIN WINDER LEVER SCREW
29	13-29	*	*	*	*	*	*	*	*	*	1	绕线器杆销	BOBBIN WINDER LEVER STUD
30	13-30	*	*	*	*	*	*	*	*	*	1	挡圈	BOBBIN WINDER REGULATOR STUD LINK LOCK WASHER
31	13-31	*	*	*	*	*	*	*	*	*	1	绕线器调节器组件	BOBBIN WINDER REGULATOR(CPL.)
32	13-32	*	*	*	*	*	*	*	*	*	1	绕线器调节螺钉	BOBBIN WINDER REGULATOR SCREW
33	13-33	*	*	*	*	*	*	*	*	*	1	绕线器满线板	BOBBIN WINDER BRACKET ACTUATING PLATE
34	13-34	*	*	*	*	*	*	*	*	*	1	弹簧	BOBBIN WINDER SPRING
35	13-35	*	*	*	*	*	*	*	*	*	1	绕线器满线板弹簧	BOBBIN WINDER SHAFT BUSHING SPRING
36	13-36	*	*	*	*	*	*	*	*	*	3	螺钉	BOBBIN WINDER SCREW
37	13-37	*	*	*	*	*	*	*	*	*	1	顶盖衬垫	ARM COVER(TOP)GASKET
38	13-38	*	*	*	*	*	*	*	*	*	1	绕线器衬垫	BOBBIN WINDER GASKET
39	13-39	*	*	*	*	*	*	*	*	*	8	顶盖螺钉	ARM COVER(TOP)SCREW
40	13-40	*	*	*	*	*	*	*	*	*	1	过线销	ARM COVER(TOP)THREAD GUIDE STUD

14.夹线器部件

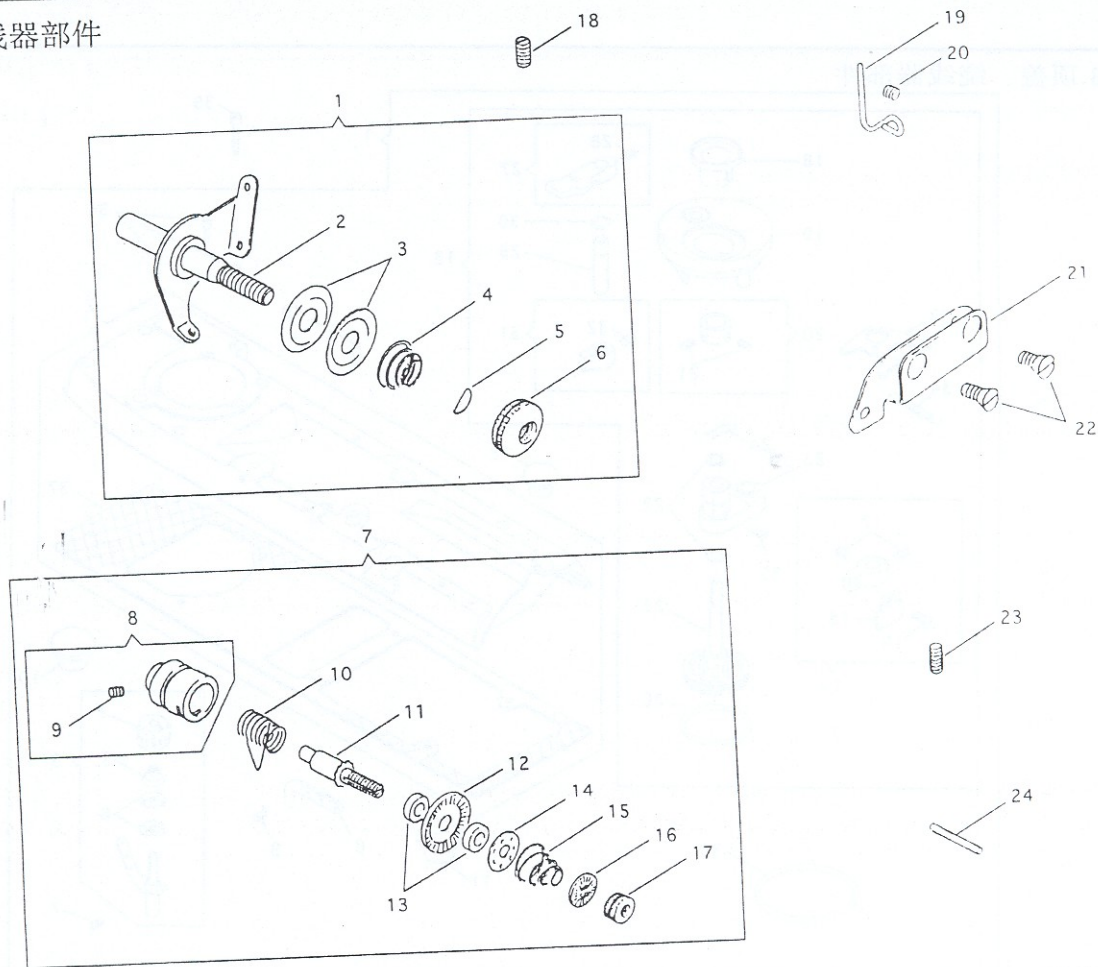


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M		数量 QTY	名 称	DESCRIPTION
1	14-1	*	*	*	*	*	*	*	*	*		1	预夹线组件	PRETENSION(CPL.)
2	14-2	*	*	*	*	*	*	*	*	*		1	预夹线支架	PRETENSION BRACKET
3	14-3	*	*	*	*	*	*	*	*	*		2	预夹线板	PRETENSION DISC
4	14-4	*	*	*	*	*	*	*	*	*		1	预夹线弹簧	PRETENSION SPRING
5	14-5	*	*	*	*	*	*	*	*	*		1	锁紧簧	PRETENSION ADJUSTING NUT SPRING
6	14-6	*	*	*	*	*	*	*	*	*		1	预夹线调节螺母	PRETENSION ADJUSTING NUT
7	14-7	*	*	*	*	*	*	*	*	*		1	夹线器组件	TENSION(CPL.)
8	14-8	*	*	*	*	*	*	*	*	*		1	挑线簧 调节器组件	THREAD TAKE-UP SPRING REGULATOR(CPL.)
9	14-9	*	*	*	*	*	*	*	*	*		1	螺钉	TENSION STUD SET SCREW
10	14-10	*	*	*	*	*	*	*	*	*		1	挑线簧	THREAD TAKE-UP SPRING
11	14-11	*	*	*	*	*	*	*	*	*		1	夹线螺钉	TENSION STUD
12	14-12	*	*	*	*	*	*	*	*	*		2	夹线毛毡垫圈	TENSION FELT WASHER
13	14-13	*	*	*	*	*	*	*	*	*		1	夹线轮	TENSION WHEEL
14	14-14	*	*	*	*	*	*	*	*	*		1	松线板	TENSION RELEASING DISC
15	14-15	*	*	*	*	*	*	*	*	*		1	夹线簧	TENSION THUMB NUT LOCK WASHER
16	14-16	*	*	*	*	*	*	*	*	*		1	锁紧垫圈	TENSION THUMB NUT
17	14-17	*	*	*	*	*	*	*	*	*		1	夹线螺母	PRETENSION BRACKET SET SCREW
18	14-18	*	*	*	*	*	*	*	*	*		1	螺钉	THREAD PULL OFF
19	14-19	*	*	*	*	*	*	*	*	*		1	过线勾	TNREAD PULL OFF SET SCREW
20	14-20	*	*	*	*	*	*	*	*	*		1	过线勾螺钉	THREAD GUIDE
21	14-21	*	*	*	*	*	*	*	*	*		2	过线板	THREAD GUIDE SCREW
22	14-22	*	*	*	*	*	*	*	*	*		1	过线板螺钉	THREAD REGULATOR SET SCREW
23	14-23	*	*	*	*	*	*	*	*	*		1	螺钉	TENSION RELEASING PIN
24	14-24	*	*	*	*	*	*	*	*	*		1	松线销	

15. 旋梭部件

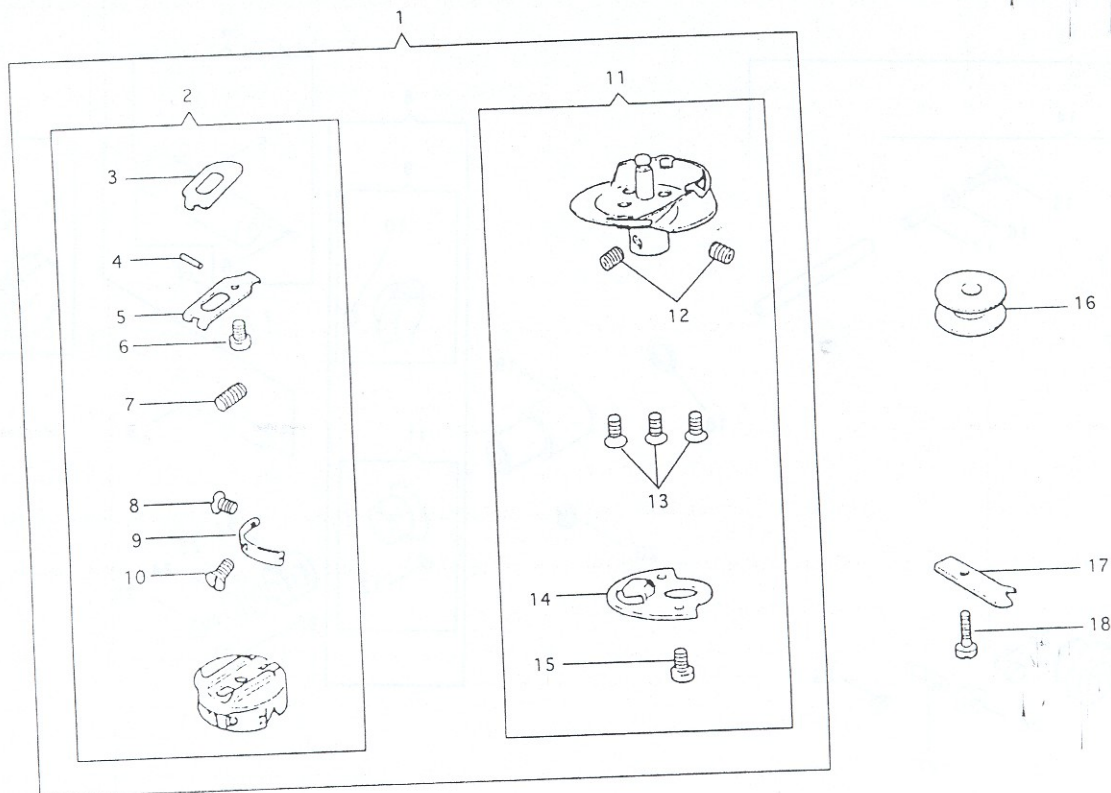


序号 NO.	图 号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名 称	DESCRIPTION
1	15-1	*	*	*	*	*	*	*	*	*	1	旋梭和梭心套组件	HOOK AND BOBBIN CASE(CPL.)
2	15-2	*	*	*	*	*	*	*	*	*	1	梭心套组件	BOBBIN CASE CAP(CPL.)
3	15-3	*	*	*	*	*	*	*	*	*	1	梭门盖	BOBBIN CASE LATCH LEVER
4	15-4	*	*	*	*	*	*	*	*	*	1	梭盖销	BOBBIN CASE LATCH PIN
5	15-5	*	*	*	*	*	*	*	*	*	1	梭门底	BOBBIN CASE LATCH
6	15-6	*	*	*	*	*	*	*	*	*	1	梭门螺钉	BOBBIN CASE LATCH STOP SCREW
7	15-7	*	*	*	*	*	*	*	*	*	1	梭门簧	BOBBIN CASE LATCH SPRING
8	15-8	*	*	*	*	*	*	*	*	*	1	橡皮固定螺钉	BOBBIN CASE CAP TENSION SPRING SCREW
9	15-9	*	*	*	*	*	*	*	*	*	1	橡皮	BOBBIN CASE CAP TENSION SPRING
10	15-10	*	*	*	*	*	*	*	*	*	1	调节螺钉	BOBBIN CASE CAP TENSION SPRING REG. SCREW
11	15-11	*	*	*	*	*	*	*	*	*	1	旋梭组件	HOOK(CPL.)
12	15-12	*	*	*	*	*	*	*	*	*	2	旋梭固定螺钉	HOOK SET SCREW
13	15-13	*	*	*	*	*	*	*	*	*	3	月圈螺钉	HOOK GIB SCREW
14	15-14	*	*	*	*	*	*	*	*	*	1	护针板	HOOK NEEDLE GUARD AND COUNTERBALANCE
15	15-15	*	*	*	*	*	*	*	*	*	1	护针板螺钉	HOOK NEEDLE GUARD AND COUNTERBALANCE SCREW
16	15-16	*	*	*	*	*	*	*	*	*	1	梭心	BOBBIN
17	15-17	*	*	*	*	*	*	*	*	*	1	旋梭定位勾	BOBBIN CASE STOP
18	15-18	*	*	*	*	*	*	*	*	*	1	旋梭定位勾螺钉	BOBBIN CASE STOP SCREW

16.旋梭轴传动部件

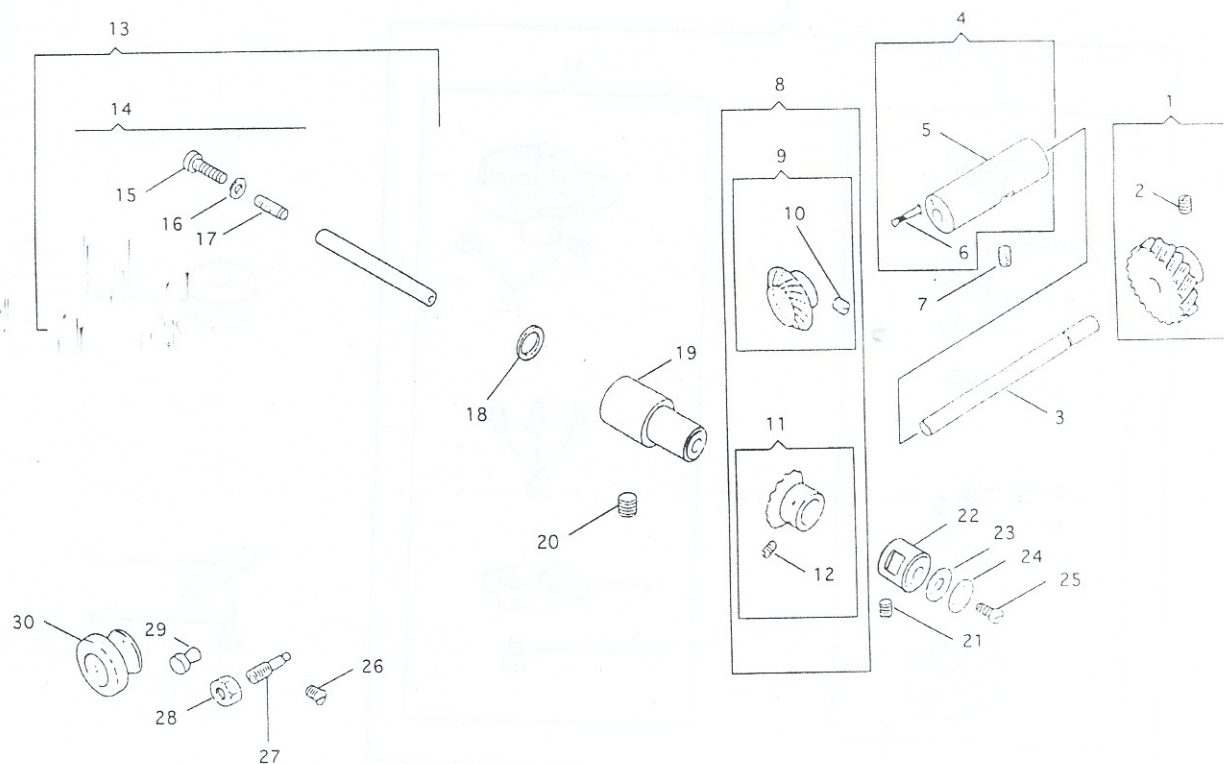


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	16-1	*	*	*	*	*	*	*	*	*	1	旋梭驱动齿轮组件	HOOK DRIVING SHAFT HELICAL GEAR(CPL.)
2	16-2	*	*	*	*	*	*	*	*	*	2	螺钉	HOOK DRIVING SHAFT HELICAL GEAR SET SCREW
3	16-3	*	*	*	*	*	*	*	*	*	1	旋梭传动齿轮轴	HOOK DRIVING SHAFT
4	16-4	*	*	*	*	*	*	*	*	*	1	轴套组件	HOOK DRIVING SHAFT BUSHING(CPL.)
5	16-5	*	*	*	*	*	*	*	*	*	1	轴套	HOOK DRIVING SHAFT BUSHING
6	16-6	*	*	*	*	*	*	*	*	*	1	轴套油芯	HOOK DRIVING SHAFT BUSHING WICK
7	16-7	*	*	*	*	*	*	*	*	*	1	螺钉	BED SHAFT BUSHING SET SCREW
8	16-8	*	*	*	*	*	*	*	*	*	1	伞齿轮组件	A PAIR OF BEVEL GEARS
9	16-9	*	*	*	*	*	*	*	*	*	1	驱动轴伞齿轮组件	HOOK DRIVING SHAFT BEVEL GEAR (CPL.)
10	16-10	*	*	*	*	*	*	*	*	*	2	螺钉	HOOK DRIVING SHAFT BEVEL GEAR SET SCREW
11	16-11	*	*	*	*	*	*	*	*	*	1	旋梭伞齿轮组件	HOOK SHAFT BEVEL GEAR(CPL.)
12	16-12	*	*	*	*	*	*	*	*	*	2	伞齿轮固定螺钉	HOOK SHAFT BEVEL GEAR SET SCREW
13	16-13	*	*	*	*	*	*	*	*	*	1	旋梭轴组件	HOOK SHAFT BEVEL (CPL.)
14	16-14	*	*	*	*	*	*	*	*	*	1	旋梭轴油芯密封器组件	HOOK SHAFT OIL FILTER WICK HOLDER(CPL.)
15	16-15	*	*	*	*	*	*	*	*	*	1	螺钉	HOOK SHAFT OIL FILTER WICK HOLDER
16	16-16	*	*	*	*	*	*	*	*	*	1	油封	HOOK SHAFT OIL FILTER WICK HOLDER SEAL
17	16-17	*	*	*	*	*	*	*	*	*	1	旋梭轴油线	HOOK SHAFT OIL FILTER WICK FELT
18	16-18	*	*	*	*	*	*	*	*	*	1	旋梭轴后轴套油封	HOOK SHAFT BUSHING(BACK)OIL SEAL
19	16-19	*	*	*	*	*	*	*	*	*	1	旋梭轴后轴套	HOOK SHAFT BUSHING(BACK)
20	16-20	*	*	*	*	*	*	*	*	*	1	螺钉	HOOK SHAFT BUSHING (BACK) SCREW
21	16-21	*	*	*	*	*	*	*	*	*	1	螺钉	HOOK SHAFT BUSHING(BACK)SET SCREW
22	16-22	*	*	*	*	*	*	*	*	*	1	旋梭轴前轴套	HOOK SHAFT BUSHING(FRONT)
23	16-23	*	*	*	*	*	*	*	*	*	1	旋梭轴套盖衬垫	HOOK SHAFT BUSHING CAP GASKET
24	16-24	*	*	*	*	*	*	*	*	*	1	旋梭轴套盖	HOOK SHAFT BUSHING CAP
25	16-25	*	*	*	*	*	*	*	*	*	3	螺钉	HOOK SHAFT BUSHING(FRONT)CAP SCREW
26	16-26	*	*	*	*	*	*	*	*	*	1	螺钉	HOOK OIL BYPASS SCREW.
27	16-27	*	*	*	*	*	*	*	*	*	1	油量调节螺钉	HOOK OIL REGULATING SCREW
28	16-28	*	*	*	*	*	*	*	*	*	1	锁紧螺母	HOOK OIL REGULATING SCREW LOCK NUT
29	16-29	*	*	*	*	*	*	*	*	*	1	油塞	HOOK SHAFT GEAR BOX PLUG
30	16-30	*	*	*	*	*	*	*	*	*	1	油盖	HOOK GEAR BOX VENT CAP

16.旋梭轴传动部件

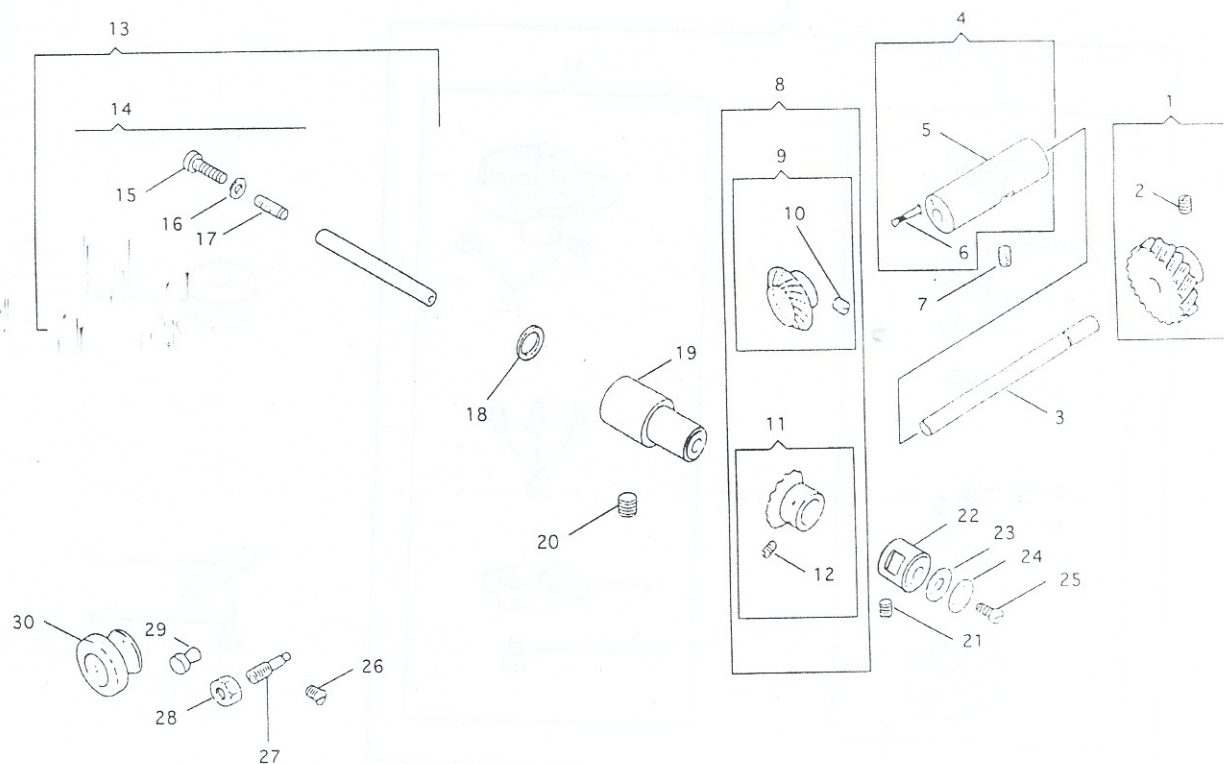


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	16-1	*	*	*	*	*	*	*	*	*	1	旋梭驱动齿轮组件	HOOK DRIVING SHAFT HELICAL GEAR(CPL.)
2	16-2	*	*	*	*	*	*	*	*	*	2	螺钉	HOOK DRIVING SHAFT HELICAL GEAR SET SCREW
3	16-3	*	*	*	*	*	*	*	*	*	1	旋梭传动齿轮轴	HOOK DRIVING SHAFT
4	16-4	*	*	*	*	*	*	*	*	*	1	轴套组件	HOOK DRIVING SHAFT BUSHING(CPL.)
5	16-5	*	*	*	*	*	*	*	*	*	1	轴套	HOOK DRIVING SHAFT BUSHING
6	16-6	*	*	*	*	*	*	*	*	*	1	轴套油芯	HOOK DRIVING SHAFT BUSHING WICK
7	16-7	*	*	*	*	*	*	*	*	*	1	螺钉	BED SHAFT BUSHING SET SCREW
8	16-8	*	*	*	*	*	*	*	*	*	1	伞齿轮组件	A PAIR OF BEVEL GEARS
9	16-9	*	*	*	*	*	*	*	*	*	1	驱动轴伞齿轮组件	HOOK DRIVING SHAFT BEVEL GEAR (CPL.)
10	16-10	*	*	*	*	*	*	*	*	*	2	螺钉	HOOK DRIVING SHAFT BEVEL GEAR SET SCREW
11	16-11	*	*	*	*	*	*	*	*	*	1	旋梭伞齿轮组件	HOOK SHAFT BEVEL GEAR(CPL.)
12	16-12	*	*	*	*	*	*	*	*	*	2	伞齿轮固定螺钉	HOOK SHAFT BEVEL GEAR SET SCREW
13	16-13	*	*	*	*	*	*	*	*	*	1	旋梭轴组件	HOOK SHAFT BEVEL (CPL.)
14	16-14	*	*	*	*	*	*	*	*	*	1	旋梭轴油芯密封器组件	HOOK SHAFT OIL FILTER WICK HOLDER(CPL.)
15	16-15	*	*	*	*	*	*	*	*	*	1	螺钉	HOOK SHAFT OIL FILTER WICK HOLDER
16	16-16	*	*	*	*	*	*	*	*	*	1	油封	HOOK SHAFT OIL FILTER WICK HOLDER SEAL
17	16-17	*	*	*	*	*	*	*	*	*	1	旋梭轴油线	HOOK SHAFT OIL FILTER WICK FELT
18	16-18	*	*	*	*	*	*	*	*	*	1	旋梭轴后轴套油封	HOOK SHAFT BUSHING(BACK)OIL SEAL
19	16-19	*	*	*	*	*	*	*	*	*	1	旋梭轴后轴套	HOOK SHAFT BUSHING(BACK)
20	16-20	*	*	*	*	*	*	*	*	*	1	螺钉	HOOK SHAFT BUSHING (BACK) SCREW
21	16-21	*	*	*	*	*	*	*	*	*	1	螺钉	HOOK SHAFT BUSHING(BACK)SET SCREW
22	16-22	*	*	*	*	*	*	*	*	*	1	旋梭轴前轴套	HOOK SHAFT BUSHING(FRONT)
23	16-23	*	*	*	*	*	*	*	*	*	1	旋梭轴套盖衬垫	HOOK SHAFT BUSHING CAP GASKET
24	16-24	*	*	*	*	*	*	*	*	*	1	旋梭轴套盖	HOOK SHAFT BUSHING CAP
25	16-25	*	*	*	*	*	*	*	*	*	3	螺钉	HOOK SHAFT BUSHING(FRONT)CAP SCREW
26	16-26	*	*	*	*	*	*	*	*	*	1	螺钉	HOOK OIL BYPASS SCREW.
27	16-27	*	*	*	*	*	*	*	*	*	1	油量调节螺钉	HOOK OIL REGULATING SCREW
28	16-28	*	*	*	*	*	*	*	*	*	1	锁紧螺母	HOOK OIL REGULATING SCREW LOCK NUT
29	16-29	*	*	*	*	*	*	*	*	*	1	油塞	HOOK SHAFT GEAR BOX PLUG
30	16-30	*	*	*	*	*	*	*	*	*	1	油盖	HOOK GEAR BOX VENT CAP

15.旋梭部件

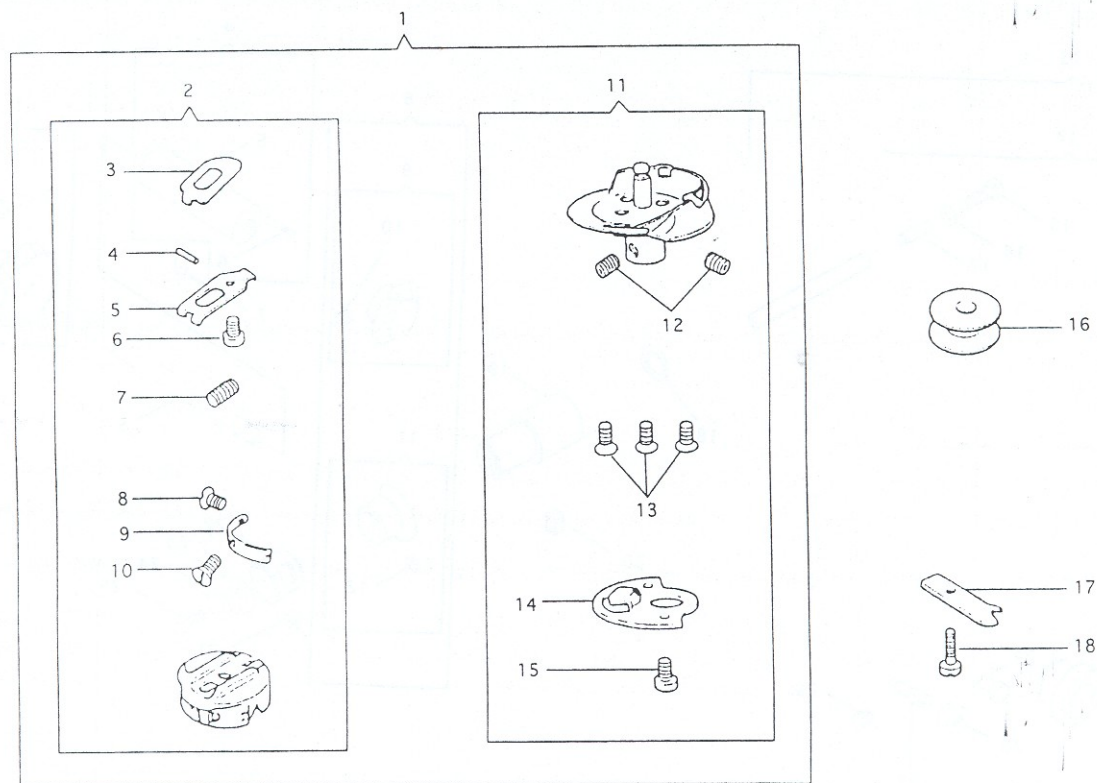


序号 NO.	图 号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名 称	DESCRIPTION
1	15-1	A*	*	*	*	*	*	*	*	*	1	旋梭和梭心套组件	HOOK AND BOBBIN CASE(CPL.)
2	15-2	*	*	*	*	*	*	*	*	*	1	梭心套组件	BOBBIN CASE CAP(CPL.)
3	15-3	*	*	*	*	*	*	*	*	*	1	梭门盖	BOBBIN CASE LATCH LEVER
4	15-4	*	*	*	*	*	*	*	*	*	1	梭盖销	BOBBIN CASE LATCH PIN
5	15-5	*	*	*	*	*	*	*	*	*	1	梭门底	BOBBIN CASE LATCH
6	15-6	*	*	*	*	*	*	*	*	*	1	梭门螺钉	BOBBIN CASE LATCH STOP SCREW
7	15-7	*	*	*	*	*	*	*	*	*	1	梭门簧	BOBBIN CASE LATCH SPRING
8	15-8	*	*	*	*	*	*	*	*	*	1	橡皮固定螺钉	BOBBIN CASE CAP TENSION SPRING SCREW
9	15-9	*	*	*	*	*	*	*	*	*	1	橡皮	BOBBIN CASE CAP TENSION SPRING
10	15-10	*	*	*	*	*	*	*	*	*	1	调节螺钉	BOBBIN CASE CAP TENSION SPRING REG. SCREW
11	15-11	*	*	*	*	*	*	*	*	*	1	旋梭组件	HOOK(CPL.)
12	15-12	*	*	*	*	*	*	*	*	*	2	旋梭固定螺钉	HOOK SET SCREW
13	15-13	*	*	*	*	*	*	*	*	*	3	月圈螺钉	HOOK GIB SCREW
14	15-14	*	*	*	*	*	*	*	*	*	1	护针板	HOOK NEEDLE GUARD AND COUNTERBALANCE
15	15-15	*	*	*	*	*	*	*	*	*	1	护针板螺钉	HOOK NEEDLE GUARD AND COUNTERBALANCE SCREW
16	15-16	*	*	*	*	*	*	*	*	*	1	梭心	BOBBIN
17	15-17	*	*	*	*	*	*	*	*	*	1	旋梭定位勾	BOBBIN CASE STOP
18	15-18	*	*	*	*	*	*	*	*	*	1	旋梭定位勾螺钉	BOBBIN CASE STOP SCREW

17.送料传动部件

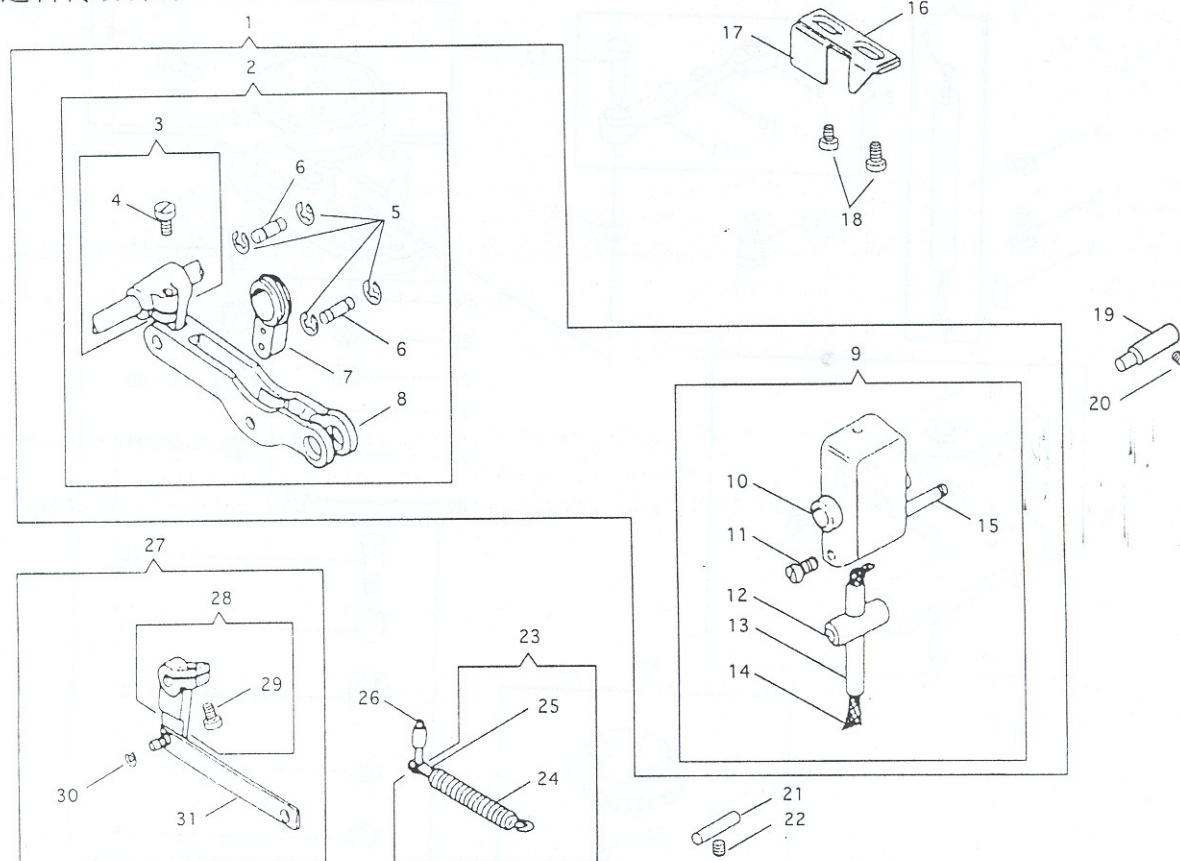


序号 NO.	图 号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名 称	DESCRIPTION
1	17-1	*	*	*	*	*	*	*	*	*	1	送料传动连杆摇架组件	FEED DRIVING CONN. CARRIER FRAME(CPL.)
2	17-2	*	*	*	*	*	*	*	*	*	1	送料驱动连杆组件	FEED DRIVING CONN.(CPL.)
3	17-3	*	*	*	*	*	*	*	*	*	1	送料曲柄组件	FEED DRIVING CONN. CRANK(CPL.)
4	17-4	*	*	*	*	*	*	*	*	*	1	螺钉	FEED DRIVING CONN. CRANK PINCH SCREW
5	17-5	*	*	*	*	*	*	*	*	*	6	送料连杆销挡圈	FEED DRIVING CONN. LEVER HINGE PIN RETAINER
6	17-6	*	*	*	*	*	*	*	*	*	2	送料连杆销	FEED DRIVING CONN. LEVER HINGE PIN
7	17-7	*	*	*	*	*	*	*	*	*	1	送料连杆	FEED DRIVING CONN. LINK
8	17-8	*	*	*	*	*	*	*	*	*	1	送料摆动架	FEED DRIVING CONN. LEVER
9	17-9	*	*	*	*	*	*	*	*	*	1	送料摇架组件	FEED DRIVING CONN. CARRIER FRAME(CPL.)
10	17-10	*	*	*	*	*	*	*	*	*	1	送料摇架	FEED DRIVING CONN. CARRIER FRAME
11	17-11	*	*	*	*	*	*	*	*	*	1	螺钉	NEEDLE POSITION ADJ. ECC. POSITION SPRING SCREW
12	17-12	*	*	*	*	*	*	*	*	*	1	送料连杆滑动柱	FEED DRIVING CONN. LEVER SLIDE BEARING
13	17-13	*	*	*	*	*	*	*	*	*	1	摇架滑销	FEED DRIVING CONN. CARRIER FRAME SLIDE STUD
14	17-17	*	*	*	*	*	*	*	*	*	1	油芯	FEED DRIVING CONN. CARRIER FRAME SLIDE STUD OIL WICK
15	17-15	*	*	*	*	*	*	*	*	*	1	销	FEED DRIVING CONN. CARRIER FRAME SPRING STUD
16	17-16	*	*	*	*	*	*	*	*	*	1	摇架后限位挡板	FEED DRIVING CONN. CARRIER FRAME STOP(BACK)
14	17-17	*	*	*	*	*	*	*	*	*	1	摇架前限位挡板	FEED DRIVING CONN. CARRIER FRAME STOP(FRONT)
18	17-18	*	*	*	*	*	*	*	*	*	1	螺钉	FEED DRIVING CONN. CARRIER FRAME STOP SCREW
19	17-19	*	*	*	*	*	*	*	*	*	2	摇架轴(右)	FEED DRIVING CONN. CARRIER FRAME BEARING STUD (RIGHT)
20	17-20	*	*	*	*	*	*	*	*	*	1	固定螺钉(右)	FEED DRIVING CONN. CARRIER FRAME STUD SET SCREW(RIGHT)
21	17-21	*	*	*	*	*	*	*	*	*	1	摇架轴(左)	FEED DRIVING CONN. CARRIER FRAME BEARING STUD (LEFT)
22	17-22	*	*	*	*	*	*	*	*	*	1	螺钉(左)	FEED DRIVING CONN. CARRIER FRAME STUD SET SCREW(LEFT)
23	17-23	*	*	*	*	*	*	*	*	*	1	摇架弹簧组件	FEED DRIVING CONN. CARRIER FRAME SPRING(CPL.)
24	17-24	*	*	*	*	*	*	*	*	*	1	摇架弹簧	FEED DRIVING CONN. CARRIER FRME SPRING
25	17-25	*	*	*	*	*	*	*	*	*	1	摇架弹簧连接板	FEED DRIVING CONN. CARRIER FRAME SPRING RETAINER
26	17-26	*	*	*	*	*	*	*	*	*	1	摇架弹簧销	FEED DRIVING CONN. CARRIER FRAME SPRING STUD
27	17-27	*	*	*	*	*	*	*	*	*	1	送料调节连杆与曲柄组件	FEED REGULATING CONN. SHAFT CRANK & LINK(ASSY)
28	17-28	*	*	*	*	*	*	*	*	*	1	送料调节连接轴曲柄组件	FEED REGULATING CONN. SHAFT CRANK(CPL.)
29	17-29	*	*	*	*	*	*	*	*	*	1	螺钉	FEED REGULATING CONN. SHAFT CRANK PINCH SCREW
30	17-30	*	*	*	*	*	*	*	*	*	1	挡圈	FEED REGULATING CONN. SHAFT CRANK LINK RETAINING RING
31	17-31	*	*	*	*	*	*	*	*	*	1	送料调节曲柄连杆	FEED REGULATING CONN. SHAFT CRANK LINK

18.送料控制凸轮部件

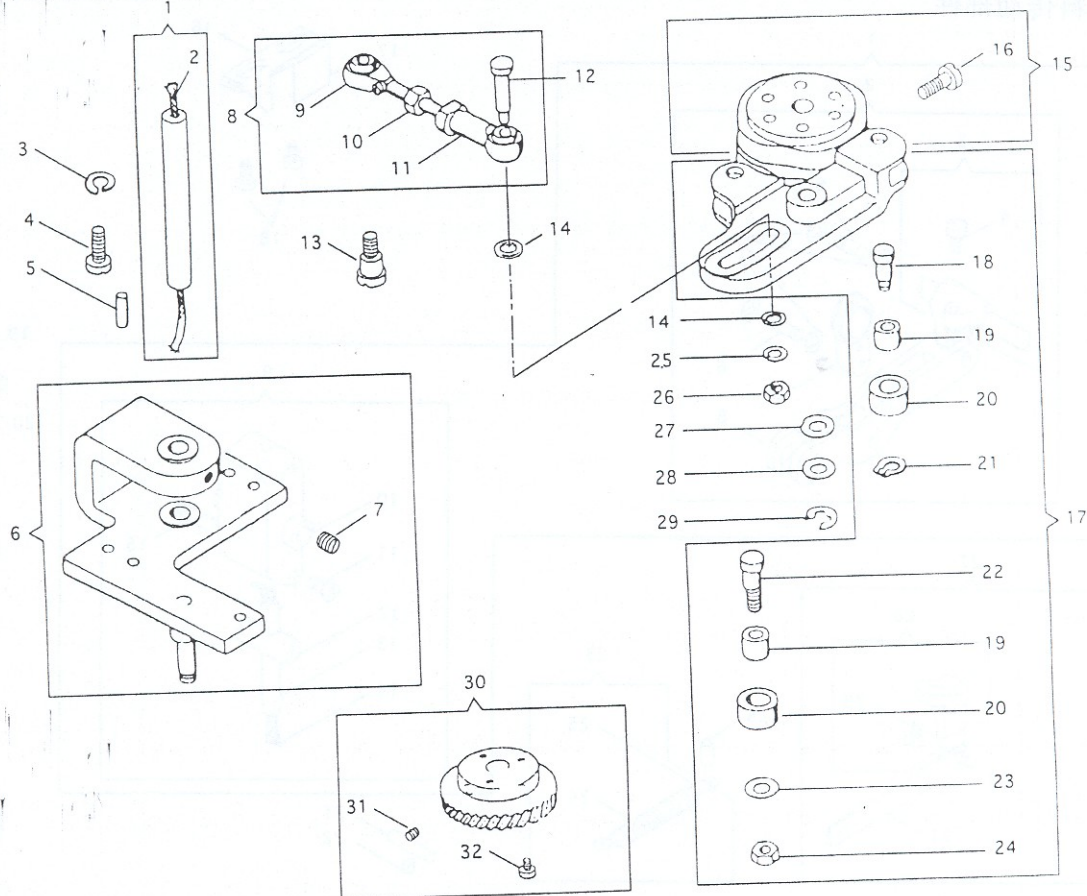


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	18-1	-	-	-	-	-	-	*	-	-	1	送料凸轮轴组件	FEED CONTROL CAM SHAFT(CPL.)
2	18-2	-	-	-	-	-	-	*	-	-	1	油芯	FEED CONTROL CAM SHAFT OIL WICK
3	18-3	-	-	-	-	-	-	*	-	-	3	挡圈	FEED CONTROL CAM MTG.BRACKET SCREW LOCK WASHER
4	18-4	-	-	-	-	-	-	*	-	-	3	螺钉	FEED CONTROL CAM MOUNTING BRACKET SCREW
5	18-5	-	-	-	-	-	-	*	-	-	2	销	FEED CONTROL CAM MTG.BRACKET LOWER PIN
6	18-6	-	-	-	-	-	-	*	-	-	1	送料凸轮安装架组件	FEED CONTROL CAM MTG.BRACKET(CPL.)
7	18-7	-	-	-	-	-	-	*	-	-	1	螺钉	FEED CONTROL CAM MTG.BRACKET BUSHING SET SCREW
8	18-8	-	-	-	-	-	-	*	-	-	1	送料连杆组件	FEED CONTROL CONN.(CPL.)
9	18-9	-	-	-	-	-	-	*	-	-	1	送料连杆球关节	FEED CONTROL CONN.BALL JOINT(MALE)
10	18-10	-	-	-	-	-	-	*	-	-	1	调节螺母	FEED CONTROL CONN.LOCK NUT
11	18-11	-	-	-	-	-	-	*	-	-	1	送料连杆球关节	FEED CONTROL CONN.BALL JOINT(FEMALE)
12	18-12	-	-	-	-	-	-	*	-	-	1	调节螺钉	FEED CONTROL CONN.BALL JOINT(FEMALE)
13	18-13	-	-	-	-	-	-	*	-	-	1	螺钉	FEED CONTROL CONN.ADJ.SCREW
14	18-14	-	-	-	-	-	-	*	-	-	2	垫圈	FEED CONTROL CONN.ADJ.SCREW WASHER
15	18-15	-	-	-	-	-	-	*	-	-	1	送料凸轮组件	FEED CONTROL CAM(CPL.)
16	18-16	-	-	-	-	-	-	*	-	-	2	螺钉	FEED CONTROL CAM SET SCREW
17	18-17	-	-	-	-	-	-	*	-	-	1	送料凸轮滚柱组件	FEED CONTROL CAM FOLLOWER(CPL.)
18	18-18	-	-	-	-	-	-	*	-	-	1	销	FEED CONTROL CAM FOLLOWER ARM HINGE PIN
19	18-19	-	-	-	-	-	-	*	-	-	2	滚针轴承	FEED CONTROL CAM FOLLOWER ROLLER NEEDLE BEARING
20	18-20	-	-	-	-	-	-	*	-	-	2	送料凸轮滚柱	FEED CONTROL CAM FOLLOWER ROLLER
21	18-21	-	-	-	-	-	-	*	-	-	1	挡圈	FEED CONTROL CAM FOLLOWER ARM HINGE PIN RETAINING RING
22	18-22	-	-	-	-	-	-	*	-	-	1	滚柱销(偏心)	FEED CONTROL CAM FOLLOWER ARM HINGE SCREW(ECC.)
23	18-23	-	-	-	-	-	-	*	-	-	1	垫圈	FEED CONTROL CAM FOLLOWER ARM SPRING WASHER
24	18-24	-	-	-	-	-	-	*	-	-	1	螺母	FEED CONTROL CAM FOLLOWER ARM RETAINING NUT
25	18-25	-	-	-	-	-	-	*	-	-	1	垫圈	FEED CONTROL CONN.ADJ.SCREW SPRING WASHER
26	18-26	-	-	-	-	-	-	*	-	-	1	螺母	FEED CONTROL CONN.ADJ.SCREW NUT
27	18-27	-	-	-	-	-	-	*	-	-	1	垫圈	FEED CONTROL CAM FOLLOWER ARM WASHER
28	18-28	-	-	-	-	-	-	*	-	-	1	弹性垫圈	FEED CONTROL CAM FOLLOWER ARM SPRING WASHER
29	18-29	-	-	-	-	-	-	*	-	-	1	挡圈	FEED CONTROL CAM FOLLOWER ARM RETAINING RING
30	18-30	-	-	-	-	-	-	*	-	-	1	送料凸轮轴蜗轮组件	FEED CONTROL CAM SHAFT WHEEL SET SCREW
31	18-31	-	-	-	-	-	-	*	-	-	1	螺钉	FEED CONTROL CAM SHAFT LOWER ARM RETAINING RING
32	18-32	-	-	-	-	-	-	*	-	-	3	螺钉	FEED CONTROL CAM SHAFT WORM WHEEL DISC SCREW

19. 牙架部件

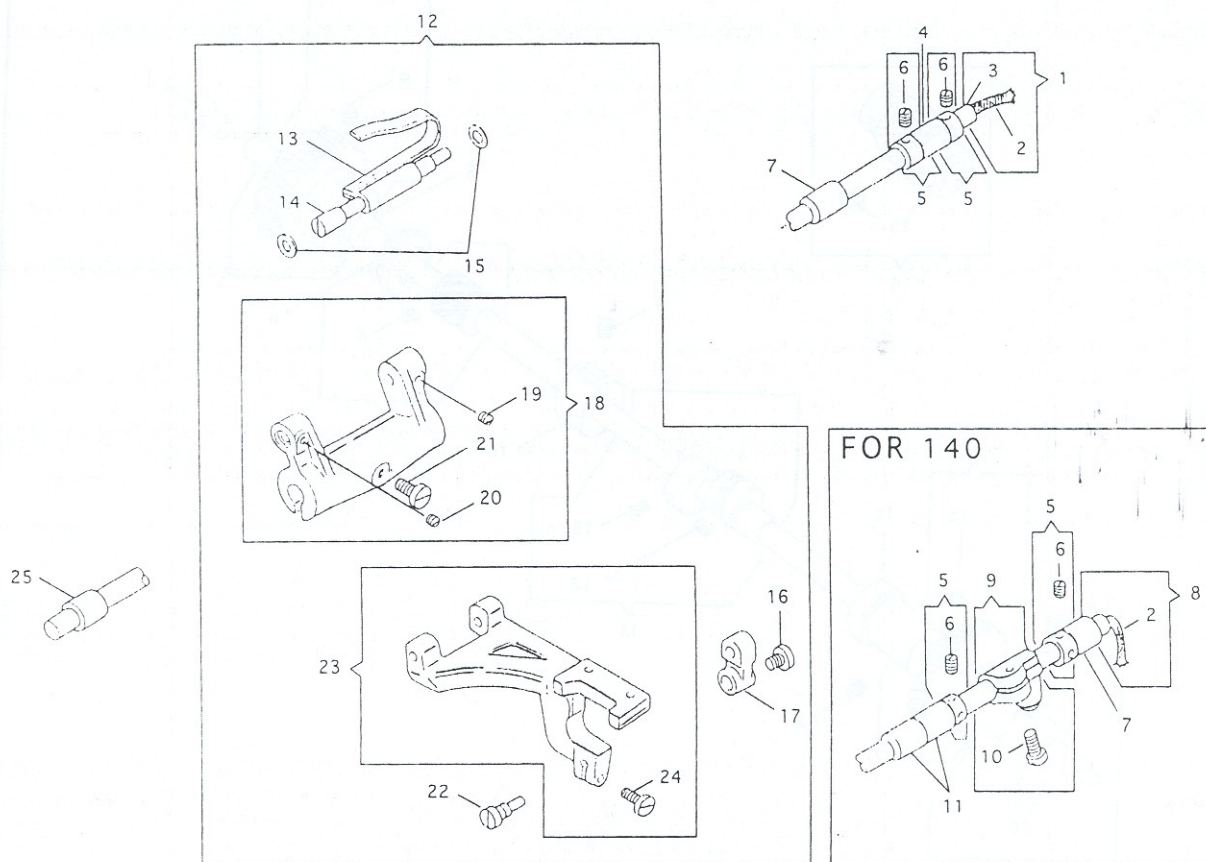


序号 NO.	图 号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名 称	DESCRIPTION
1	19-1	*	*	*	*	*	*	-	*	*	1	送料轴组件	FEED DRIVING ROCK SHAFT(CPL.)
2	19-2	*	*	*	*	*	*	*	*	*	1	油芯	FEED DRIVING ROCK SHAFT OIL WICK
3	19-3	*	*	*	*	*	*	-	*	*	1	送料轴	FEED DRIVING ROCK SHAFT
4	19-4	*	*	*	*	*	*	*	*	*	1	送料轴后轴套	FEED DRIVING ROCK SHAFT BUSHING(BACK)
5	19-5	*	*	*	*	*	*	*	*	*	2	送料轴套圈组件	FEED DRIVING ROCK SHAFT COLLAR(CPL.)
6	19-6	*	*	*	*	*	*	*	*	*	4	螺钉	FEED DRIVING ROCK SHAFT COLLAR SET SCREW
7	19-7	*	*	*	*	*	*	*	*	*	1	送料轴中轴套	FEED DRIVING ROCK SHAFT BUSHING (CENTER)
8	19-8	-	-	-	-	-	-	-	-	-	1	送料轴组件	FEED DRIVING ROCK SHAFT(CPL.)
9	19-9	-	-	-	-	-	-	*	-	-	1	送料曲柄组件	FEED CONTROL CONNECTION CRANK(CPL.)
10	19-10	-	-	-	-	-	-	*	-	-	1	螺钉	FEED CONTROL CONNECTION CRANK PINCH SCREW
11	19-11	-	-	-	-	-	-	*	-	-	2	送料轴中轴套	FEED DRIVING ROCK SHAFT BUSHING(CENTER)
12	19-12	*	*	*	*	*	*	*	*	*	1	送料轴曲柄组件	FEED DRIVING ROCK SHAFT CRANK(ASSY)
13	19-13	*	*	*	*	*	*	*	*	*	1	牙架销毛毡组件	FEED BAR HINGE PIN FELT(CPL.)
14	19-14	*	*	*	*	*	*	*	*	*	1	牙架销	FEED BAR HINGE PIN
15	19-15	*	*	*	*	*	*	*	*	*	2	垫圈	FEED BAR HINGE PIN WASHER
16	19-16	*	*	*	*	*	*	*	*	*	1	螺钉	FEED BAR LIFTING LINK HINGE PIN CAP SCREW
17	19-17	*	*	*	*	*	*	*	*	*	1	抬牙连杆	FEED BAR LIFTING LINK
18	19-18	*	*	*	*	*	*	*	*	*	1	牙架座组件	FEED DRIVING ROCK SHAFT CRANK(CPL.)
19	19-19	*	*	*	*	*	*	*	*	*	1	螺钉 (长)	FEED BAR HINGE PIN SET SCREW(LONG)
20	19-20	*	*	*	*	*	*	*	*	*	1	螺钉 (短)	FEED BAR HINGE PIN SET SCREW(SHORT)
21	19-21	*	*	*	*	*	*	*	*	*	1	牙架座螺钉	FEED DRIVING ROCK SHAFT CRANK SCREW
22	19-22	*	*	*	*	*	*	*	*	*	1	抬牙连杆销	FEED BAR LIFTING LINK HINGE PIN
23	19-23	*	*	*	*	*	*	*	*	*	1	牙架组件	FEED BAR(CPL.)
24	19-24	*	*	*	*	*	*	*	*	*	1	螺钉	FEED BAR LIFTING LINK HINGE PIN SCREW
25	19-25	*	*	*	*	*	*	*	*	*	1	送料轴前轴套	FEED DRIVING ROCK SHAFT BUSHING(FRONT)

20.下轴部件

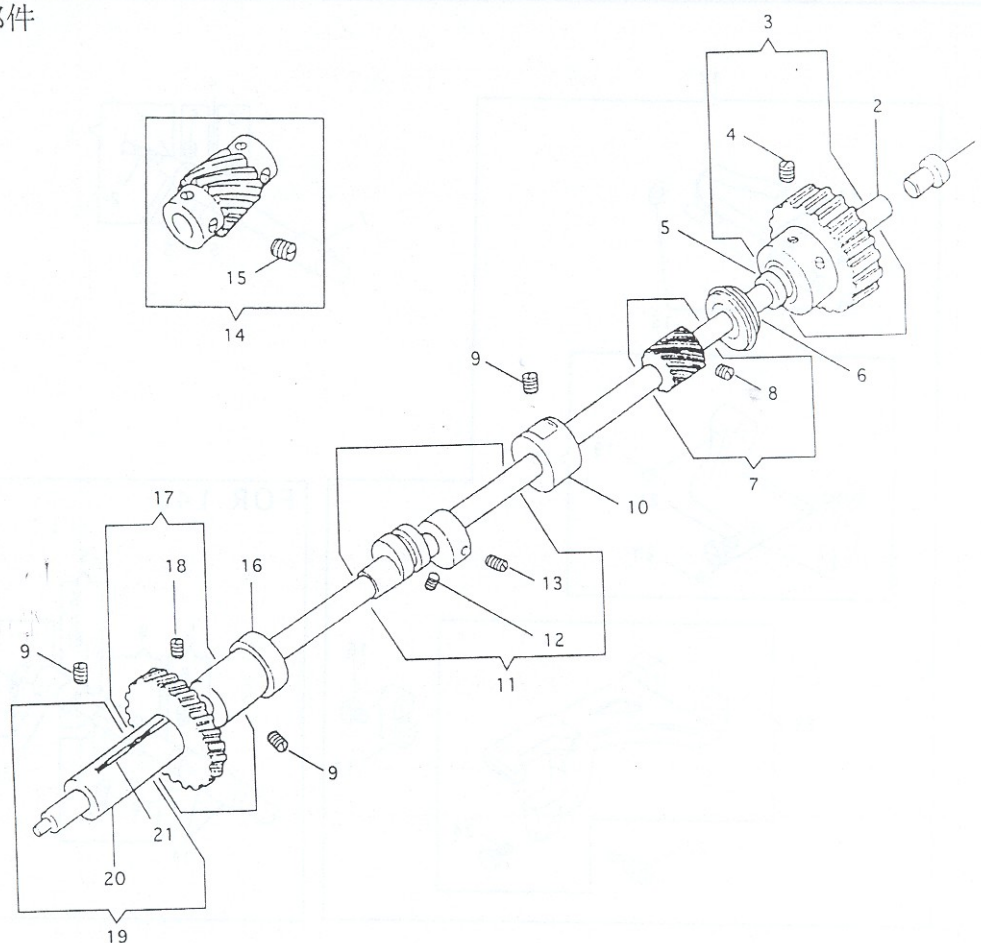


序号 NO.	图 号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名 称	DESCRIPTION
1	20-1	*	*	*	*	*	*	*	*	*	1	下轴油塞	BED SHAFT PLUG
2	20-2	*	*	*	*	*	*	*	*	*	1	下轴	BED SHAFT
3	20-3	-	-	-	-	-	-	-	-	-	1	下轴同步带轮组件	BED SHAFT CONN.BELT PULLEY(CPL.)
4	20-4	*	*	*	*	*	*	*	*	*	2	螺钉	BED SHAFT CONN.BELT PULLEY SET SCREW
5	20-5	*	*	*	*	*	*	*	*	*	1	同步带轮垫圈	BED SHAFT CONN.BELT PULLEY SPACER
6	20-6	*	*	*	*	*	*	*	*	*	1	下轴滚动轴承	BED SHAFT BALL BEARING
7	20-7	*	*	*	*	*	*	*	*	*	1	油泵驱动齿轮组件	OIL PUMP DRIVING GEAR(CPL.)
8	20-8	*	*	*	*	*	*	*	*	*	2	螺钉	OIL PUMP DRIVING GEAR SET SCREW
9	20-9	*	*	*	*	*	*	*	*	*	3	螺钉	BED SHAFT BUSHING SET SCREW
10	20-10	*	*	*	*	*	*	*	*	*	1	下轴后轴套	BED SHAFT BUSHING(BACK)
11	20-11	*	*	*	*	*	*	*	*	*	1	送料凸轮组件	FEED DRIVING ECC.(CPL.)
12	20-12	*	*	*	*	*	*	*	*	*	1	螺钉	FEED DRIVING ECC.SET SCREW
13	20-13	*	*	*	*	*	*	*	*	*	1	螺钉	FEED DRIVING ECC.POSITION SCREW
14	20-14	-	-	-	-	-	-	-	-	-	1	下轴蜗杆组件	BED SHAFT WORM(CPL.)
15	20-15	-	-	-	-	-	-	-	-	-	4	螺钉	BED SHAFT WORM SET SCREW
16	20-16	*	*	*	*	*	*	*	*	*	1	下轴中轴套	BED SHAFT BUSHING(CENTER)
17	20-17	*	*	*	*	*	*	*	*	*	1	下轴齿轮	BED SHAFT GEAR
18	20-18	*	*	*	*	*	*	*	*	*	2	下轴齿轮固定螺钉	BED SHAFT GEAR SET SCREW
19	20-19	*	*	*	*	*	*	*	*	*	1	下轴前轴套组件	BED SHAFT BUSHING(FRONT)(CPL.)
20	20-20	*	*	*	*	*	*	*	*	*	1	下轴前轴套	BED SHAFT BUSHING(FRONT)
21	20-21	*	*	*	*	*	*	*	*	*	1	下轴前轴套油芯	BED SHAFT BUSHING(FRONT)WICK

20.下轴部件

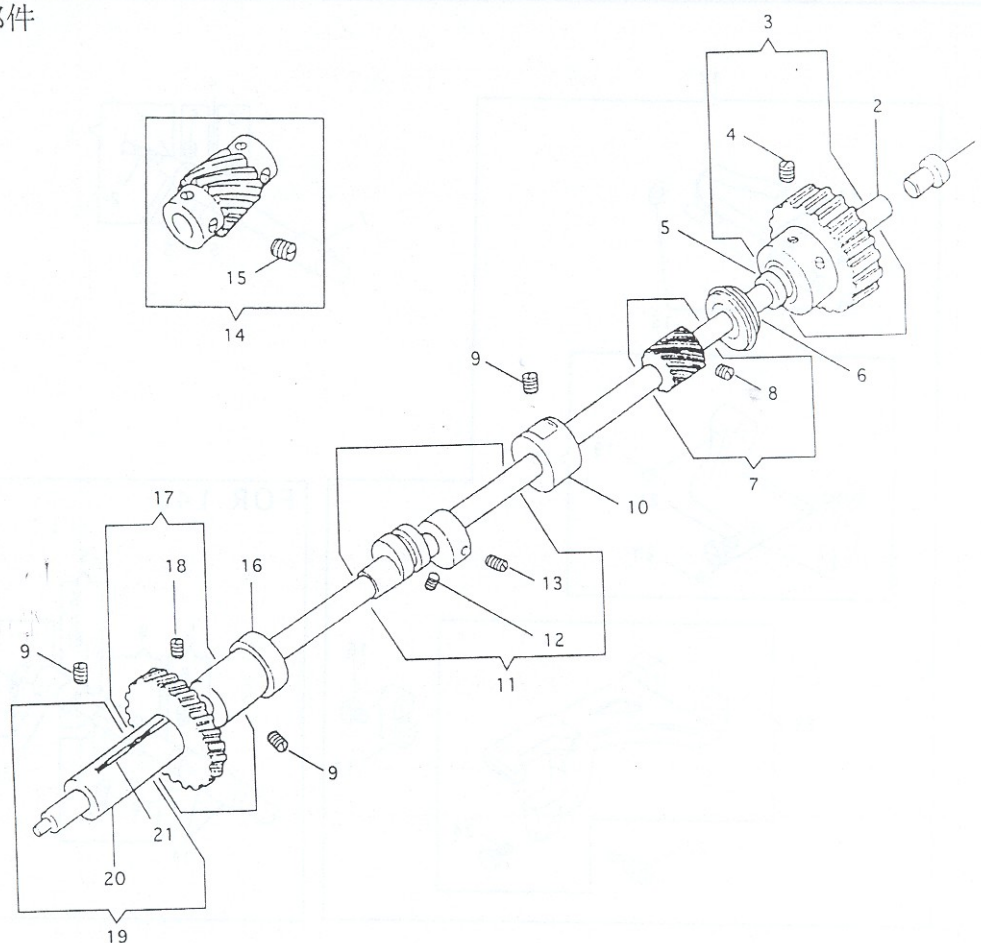


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	20-1	*	*	*	*	*	*	*	*	*	1	下轴油塞	BED SHAFT PLUG
2	20-2	*	*	*	*	*	*	*	*	*	1	下轴	BED SHAFT
3	20-3	-	-	-	-	-	-	-	-	-	1	下轴同步带轮组件	BED SHAFT CONN.BELT PULLEY(CPL.)
4	20-4	*	*	*	*	*	*	*	*	*	2	螺钉	BED SHAFT CONN.BELT PULLEY SET SCREW
5	20-5	*	*	*	*	*	*	*	*	*	1	同步带轮垫圈	BED SHAFT CONN.BELT PULLEY SPACER
6	20-6	*	*	*	*	*	*	*	*	*	1	下轴滚动轴承	BED SHAFT BALL BEARING
7	20-7	*	*	*	*	*	*	*	*	*	1	油泵驱动齿轮组件	OIL PUMP DRIVING GEAR(CPL.)
8	20-8	*	*	*	*	*	*	*	*	*	2	螺钉	OIL PUMP DRIVING GEAR SET SCREW
9	20-9	*	*	*	*	*	*	*	*	*	3	螺钉	BED SHAFT BUSHING SET SCREW
10	20-10	*	*	*	*	*	*	*	*	*	1	下轴后轴套	BED SHAFT BUSHING(BACK)
11	20-11	*	*	*	*	*	*	*	*	*	1	送料凸轮组件	FEED DRIVING ECC.(CPL.)
12	20-12	*	*	*	*	*	*	*	*	*	1	螺钉	FEED DRIVING ECC.SET SCREW
13	20-13	*	*	*	*	*	*	*	*	*	1	螺钉	FEED DRIVING ECC.POSITION SCREW
14	20-14	-	-	-	-	-	-	-	-	-	1	下轴蜗杆组件	BED SHAFT WORM(CPL.)
15	20-15	-	-	-	-	-	-	-	-	-	4	螺钉	BED SHAFT WORM SET SCREW
16	20-16	*	*	*	*	*	*	*	*	*	1	下轴中轴套	BED SHAFT BUSHING(CENTER)
17	20-17	*	*	*	*	*	*	*	*	*	1	下轴齿轮	BED SHAFT GEAR
18	20-18	*	*	*	*	*	*	*	*	*	2	下轴齿轮固定螺钉	BED SHAFT GEAR SET SCREW
19	20-19	*	*	*	*	*	*	*	*	*	1	下轴前轴套组件	BED SHAFT BUSHING(FRONT)(CPL.)
20	20-20	*	*	*	*	*	*	*	*	*	1	下轴前轴套	BED SHAFT BUSHING(FRONT)
21	20-21	*	*	*	*	*	*	*	*	*	1	下轴前轴套油芯	BED SHAFT BUSHING(FRONT)WICK

23.附件部件

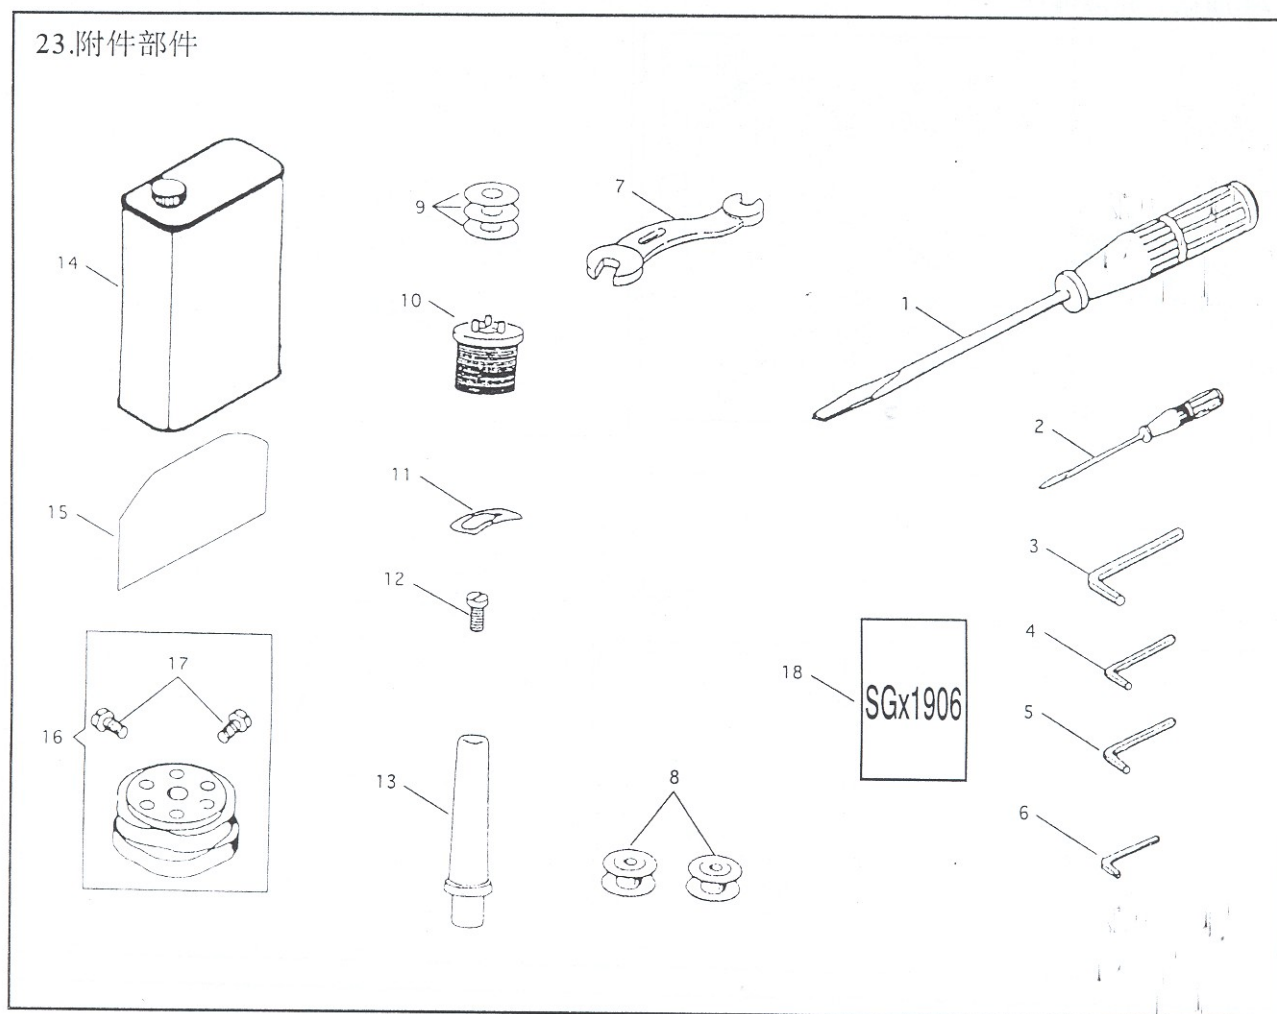


序号 NO.	图 号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名 称	DESCRIPTION
1	23-1	*	*	*	*	*	*	*	*	*	1	螺丝刀(大)	SCREW DRIVER(LARGE)
2	23-2	*	*	*	*	*	*	*	*	*	1	螺丝刀(小)	SCREW DRIVER(SMALL)
3	23-3	-	-	-	-	-	-	-	*	*	1	扳手(4mm)	HEXAGON WRENCH(4mm)
4	23-4	*	*	*	*	*	*	*	*	*	1	扳手(1/8 英寸)	HEXAGON WRENCH(1/8INCH)
5	23-5	*	*	*	*	*	*	*	*	*	1	扳手(3mm)	HEXAGON WRENCH(3mm)
6	23-6	*	*	*	*	*	*	*	*	*	1	扳手(2mm)	HEXAGON WRENCH(2mm)
7	23-7	-	-	-	-	-	-	-	*	*	1	扳手(8mm/10mm)	WRENCH(8mm/10mm)
8	23-8	*	*	*	*	*	*	*	*	*	2	梭心	BOBBIN
9	23-9	*	*	*	*	*	*	*	*	*	3	垫片	ANTISPILAGE SPACER
10	23-10	*	*	*	*	*	*	*	*	*	1	滤油器(带安装支架)	OIL FILTER WITH OIL FILTER MOUNTING SUPPORT
11	23-11	*	*	*	*	*	*	*	*	*	1	梭心套防尘簧	BOBBIN CASE ANTISPILAGE SPRING
12	23-12	*	*	*	*	*	*	*	*	*	1	螺钉	ATTACHMENT SCREW
13	23-13	*	*	*	*	*	*	*	*	*	1	机头支撑	REST PIN
		-	-	-	-	-	-	-	*	*	1		REST PIN
14	23-14	*	*	*	*	*	*	*	*	*	1	油罐	OIL CAN W/OIL (SINGE TYPE"C "OIL)
15	23-15	*	*	*	*	*	*	*	*	*	1	机罩	MACHINE COVER(EXP)
16	23-16	-	-	-	-	-	-	-	*	*	1	送料凸轮组件	FEED CONTROL CAM(CPL.)
17	23-17	*	*	*	*	*	*	*	*	*	2	螺钉	FEED CONTROL CAM SET SCREW
18	23-18	*	*	*	*	*	*	*	*	*	1	机针	NEEDLE BAG(1906-07-10 5PCS.)(DOM.)
		*	*	*	*	*	*	*	*	*	1	机针	NEEDLE BAG(1906-07-10 5PCS.)(EXP)
		-	-	-	-	-	-	-	*	*	1	机针	NEEDLE BAG(1906-01-12 5PCS.)(EXP)
		-	-	-	-	-	-	-	*	*	1	机针	NDDELE BAG(8752-64-10 5PCS.)(DOM.)
		-	-	-	-	-	-	-	*	*	1	机针	NEEDLE BAG(8752-64-12 5PCS.)(EXP)

24.油盘、膝提部件

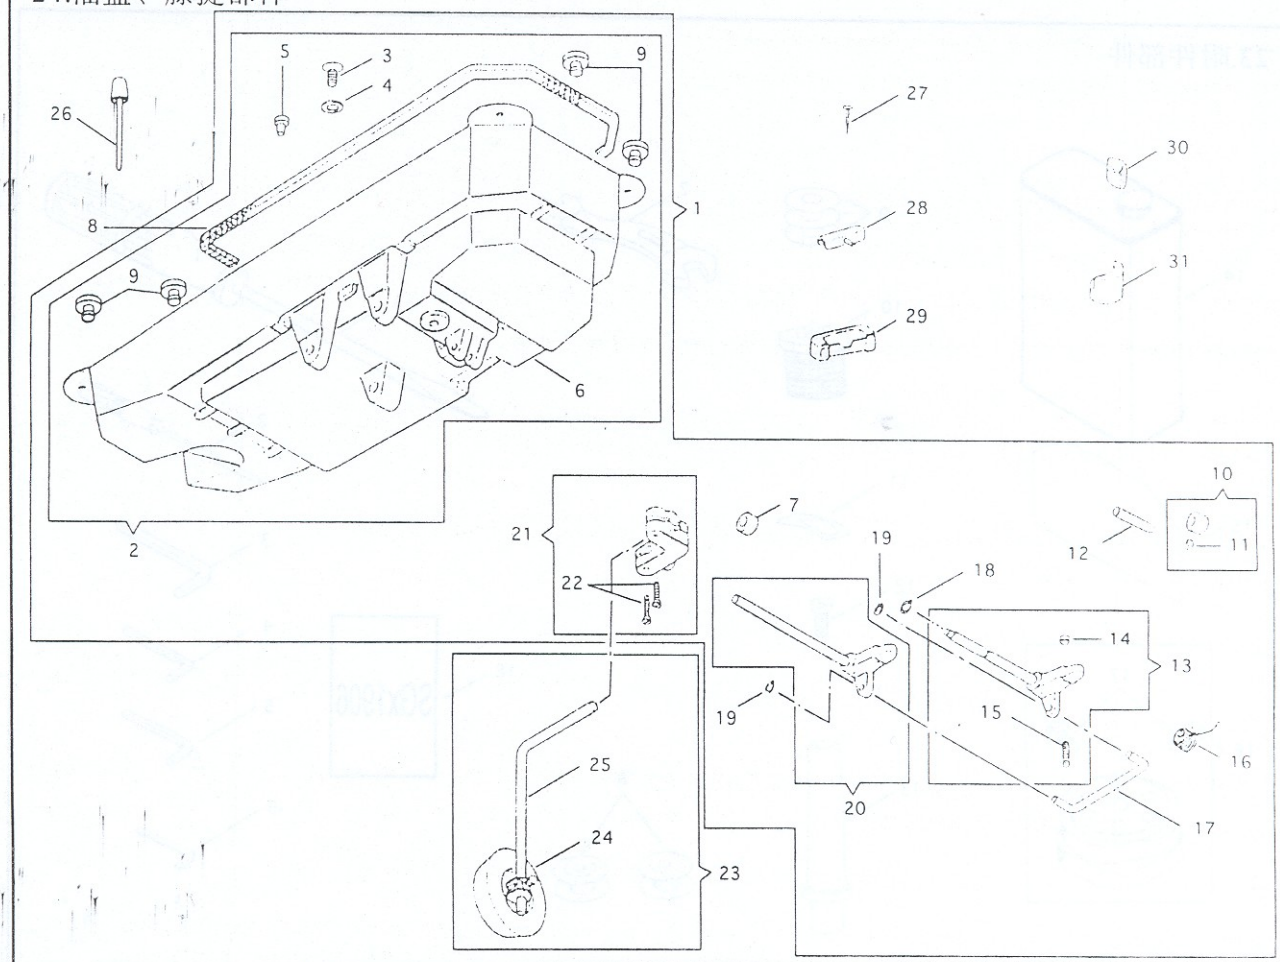


序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	24-1	*	*	*	*	*	*	*	*	*	1	油盘和膝提器组件	OIL RESERVOIR AND KNEE LIFTER(ASSY)
2	24-2	*	*	*	*	*	*	*	*	*	1	油盘组件	OIL RESERVOIR(CPL.)
3	24-3	*	*	*	*	*	*	*	*	*	1	螺钉	OIL RESERVOIR DRAIN PLUG SCREW
4	24-4	*	*	*	*	*	*	*	*	*	1	O形圈	OIL RESERVOIR DRAIN SCREW GASKET
5	24-5	*	*	*	*	*	*	*	*	*	1	油塞	FEED REVERSING PLUNGER HOLE PLUG
6	24-6	*	*	*	*	*	*	*	*	*	1	油盘	OIL RESERVOIR
7	24-7	*	*	*	*	*	*	*	*	*	1	抬压脚顶杆轴衬套	KNEE LIFTER ROCK SHAFT
8	24-8	*	*	*	*	*	*	*	*	*	1	油盘衬垫	OIL RESERVOIR CUSHION
9	24-9	*	*	*	*	*	*	*	*	*	4	垫块	MACHINE BASE CUSHION
10	24-10	*	*	*	*	*	*	*	*	*	1	膝提限位销套组件	FOOT CONTROL REVERSE FEED PIN COLLAR(CPL.)
11	24-11	*	*	*	*	*	*	*	*	*	1	螺钉	FOOT CONTROL REVERSE FEED PIN COLLAR SET SCREW
12	24-12	*	*	*	*	*	*	*	*	*	1	膝提限位销	FOOT CONTROL REVERSE FEED LEVER PIN
13	24-13	*	*	*	*	*	*	*	*	*	1	膝提控制轴组件	KNEE LIFTER CONTROL SHAFT(CPL.)
14	24-14	*	*	*	*	*	*	*	*	*	1	螺母	KNEE LIFTER CONTROL SHAFT CRANK STOP SCREW NUT
15	24-15	*	*	*	*	*	*	*	*	*	1	螺钉	KNEE LIFTER CONTROL SHAFT CRANK STOP SCREW
16	24-16	*	*	*	*	*	*	*	*	*	1	弹簧	KNEE LIFTER RETURNING SPRING
17	24-17	*	*	*	*	*	*	*	*	*	1	膝提摇杆轴连杆	KNEE LIFTER ROCK SHAFT CONNECTION
18	24-18	*	*	*	*	*	*	*	*	*	1	挡圈	KNEE LIFTER CONTROL SHAFT CRIP RING
19	24-19	*	*	*	*	*	*	*	*	*	2	挡圈	KNEE LIFTER ROCK SHAFT CONNECTION CRIP RING
20	24-20	*	*	*	*	*	*	*	*	*	1	膝提摇杆轴组件	KNEE LIFTER ROCK SHAFT(CPL.)
21	24-21	*	*	*	*	*	*	*	*	*	1	膝提操纵杆接头组件	KNEE LIFTER ROCK SHAFT HUB(CPL.)
22	24-22	*	*	*	*	*	*	*	*	*	2	螺钉	KNEE LIFTER ROCK SHAFT GUR PINCH SCREW
23	24-23	*	*	*	*	*	*	*	*	*	1	膝提板与操纵杆组件	KNEE LIFTER KNEE PLATE, ARM(CPL.)
24	24-24	*	*	*	*	*	*	*	*	*	1	膝提板组件	KNEE LIFTER KNEE PLATE(CPL.)
25	24-25	*	*	*	*	*	*	*	*	*	1	膝提操纵杆	KNEE LIFTER KNEE PLATE ARM
26	24-26	*	*	*	*	*	*	*	*	*	1	膝控抬压脚顶杆	KNEE LIFTER PLUNGER
27	24-27	*	*	*	*	*	*	*	*	*	6	钉	MACHINE HINGE CONN.CUSHION WIRE NAIL
28	24-28	*	*	*	*	*	*	*	*	*	2	机头连接铰链	MACHINE HINGE CONN.
29	24-29	*	*	*	*	*	*	*	*	*	2	机头连接铰链垫	MACHINE HINGE CONN.CUSHION
30	24-30	*	*	*	*	*	*	*	*	*	2	底板油盘垫(后)	MACHINE BASE & OIL RESSERVOIR CUSHION(BACK)
31	24-31	*	*	*	*	*	*	*	*	*	2	底板油盘垫(前)	MACHINE BASE & OIL RESSERVOIR CUSHION(FRONT)

25.皮带罩、线架部件

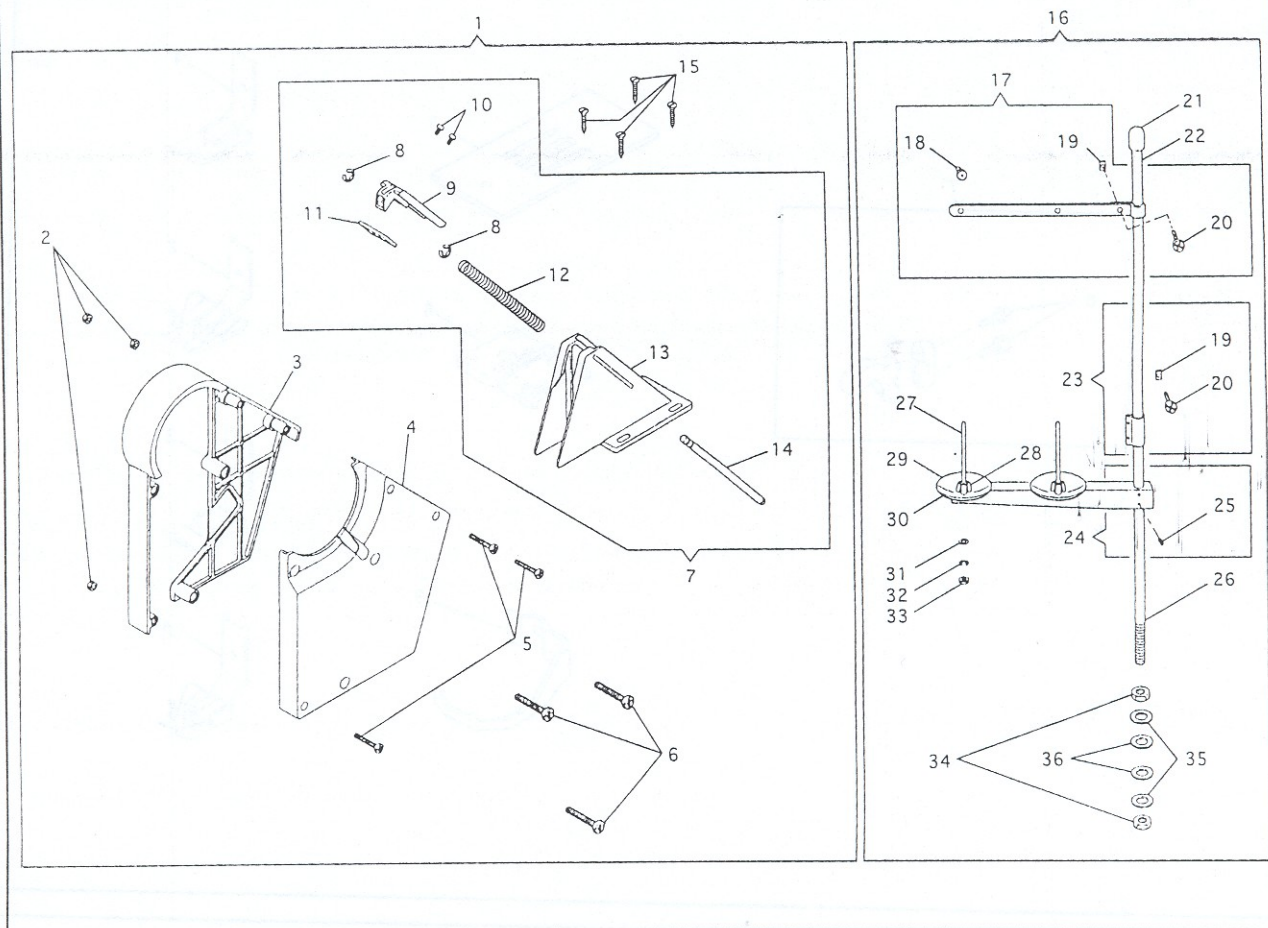

序号 NO.	图号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名称	DESCRIPTION
1	25-1	*	*	*	*	*	*	*	*	*	1	皮带罩组件	BELT GUARD(CPL.)
2	25-2	*	*	*	*	*	*	*	*	*	3	螺母(M4)	BELT GUARD SCREW NUT(M4)
3	25-3	*	*	*	*	*	*	*	*	*	1	皮带罩(左)	BELT GUARD(LEFT)
4	25-4	*	*	*	*	*	*	*	*	*	1	皮带罩(右)	BELT GUARD(RIGHT)
5	25-5	*	*	*	*	*	*	*	*	*	3	皮带罩螺钉(M4)	BELT GUARD SCREW(M4)
6	25-6	*	*	*	*	*	*	*	*	*	3	皮带罩螺钉(M5)	BELT GUARD SCREW(M5)
7	25-7	*	*	*	*	*	*	*	*	*	1	皮带罩(后)组件	BELT GUARD(BACK)(CPL.)
8	25-8	*	*	*	*	*	*	*	*	*	2	挡圈	BELT GUARD SLIDE SHAFT SNAP RING
9	25-9	*	*	*	*	*	*	*	*	*	1	皮带罩滑板	BELT GUARD SLIDE
10	25-10	*	*	*	*	*	*	*	*	*	2	螺钉	BELT GUARD SLIDE SCREW
11	25-11	*	*	*	*	*	*	*	*	*	1	滑动限位板	BELT GUARD SLIDE STOPPER PLATE
12	25-12	*	*	*	*	*	*	*	*	*	1	皮带罩滑板弹簧	BELT GUARD SLIDE SPRING
13	25-13	*	*	*	*	*	*	*	*	*	1	皮带罩(后)	BELT GUARD(BACK)
14	25-14	*	*	*	*	*	*	*	*	*	1	皮带罩滑动销	BELT GUARD SLIDE SHAFT
15	25-15	*	*	*	*	*	*	*	*	*	4	螺钉	BELT GUARD(BACK)WOOD SCREW
16	25-16	*	*	*	*	*	*	*	*	*	1	线架(双轴)组件	THREAD UNWINDER(2-SPOOL)(CPL.)
17	25-17	*	*	*	*	*	*	*	*	*	1	线架过线杆组件	THREAD UNWINDER THREAD GUIDE(CPL.)
18	25-18	*	*	*	*	*	*	*	*	*	2	线架过线套	THREAD UNWINDER THREAD GUIDE EYELET
19	25-19	*	*	*	*	*	*	*	*	*	3	螺母	THREAD UNWINDER ROD CONNECTION SCREW NUT
20	25-20	*	*	*	*	*	*	*	*	*	3	螺钉	THREAD UNWINDER ROD CONNECTION SCREW
21	25-21	*	*	*	*	*	*	*	*	*	1	线架管帽	THREAD UNWINDER ROD CAP
22	25-22	*	*	*	*	*	*	*	*	*	1	上线架管	THREAD UNWINDER ROD
23	25-23	*	*	*	*	*	*	*	*	*	1	线架管接头组件	THREAD UNWINDER ROD CONNECTION(CPL.)
24	25-25	*	*	*	*	*	*	*	*	*	1	线团摇臂组件	THREAD UNWINDER SPOOL CARRIER ARM(CPL.)
25	25-25	*	*	*	*	*	*	*	*	*	2	螺钉	THREAD UNWINDER SPOOL CARRIER ARM SCREW
26	25-26	*	*	*	*	*	*	*	*	*	1	下线架管	THREAD UNWINDER
27	25-27	*	*	*	*	*	*	*	*	*	2	插线轴	THREAD UNWINDER SPOOL
28	25-28	*	*	*	*	*	*	*	*	*	2	线团座	THREAD UNWINDER SPOOL HOLDER
29	25-29	*	*	*	*	*	*	*	*	*	2	线团托盘垫	THREAD UNWINDER SPOOL CARRIER ARM PLATE CUSHION
30	25-30	*	*	*	*	*	*	*	*	*	2	线团托盘	THREAD UNWINDER SPOOL CARRIER ARM PLATE
31	25-31	*	*	*	*	*	*	*	*	*	2	垫圈	THREAD UNWINDER SPOOL LOCK NUT WASHER
32	25-32	*	*	*	*	*	*	*	*	*	2	弹簧垫圈	THREAD UNWINDER SPOOL LOCK NUT SPRING WASHER
33	25-33	*	*	*	*	*	*	*	*	*	2	螺母	THREAD UNWINDER SPOOL LOCK NUT
34	25-34	*	*	*	*	*	*	*	*	*	2	螺母	THREAD UNWINDER ROD LOCK NUT
35	25-35	*	*	*	*	*	*	*	*	*	2	垫圈	THREAD UNWINDER ROD WASHER
36	25-36	*	*	*	*	*	*	*	*	*	2	橡皮垫圈	THREAD UNWINDER ROD RUBBER CUSHION





26.选择零件(1)

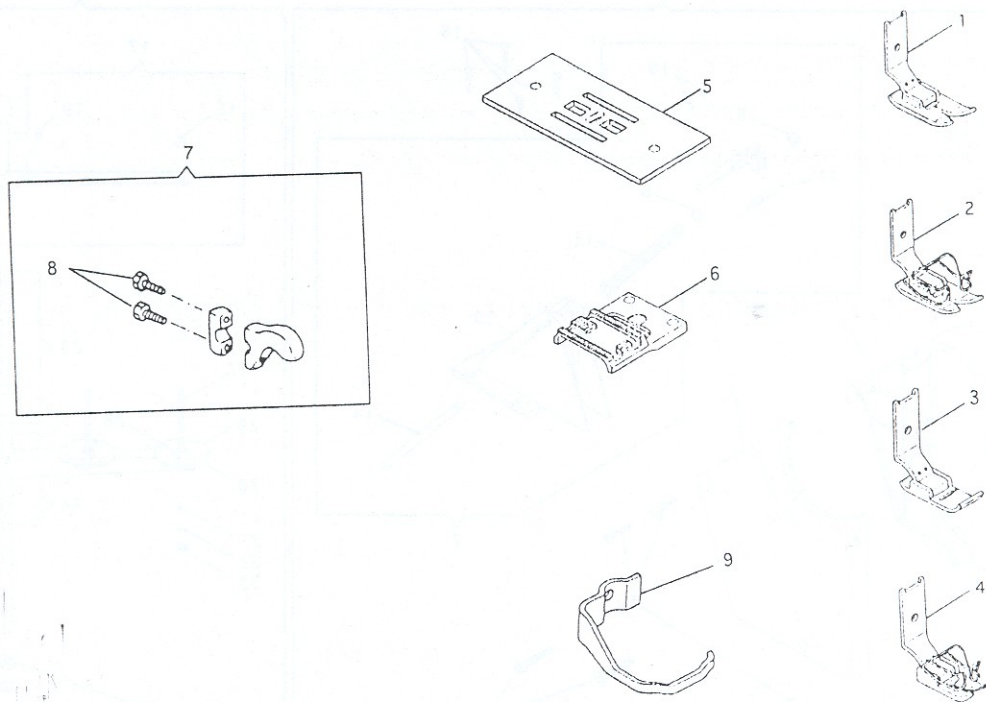

序号 NO.	图 号 PART NO.	A105-L	A105-M	A125-L	A125-M	A135-L	A135-M	A140-M	A143-L	A143-M	数量 QTY	名 称	DESCRIPTION
1	26-1	*	*	*	*	*	*	*	*	*	1	压脚	PRESSER FOOT
2	26-2	*	*	*	*	*	*	*	*	*	1	压脚	PRESSER FOOT
3	26-3	*	*	*	*	*	*	*	*	*	1	压脚	PRESSER FOOT
4	26-4	*	*	*	*	*	*	*	*	*	1	压脚	PRESSER FOOT
5	26-5	*	*	*	*	*	*	*	*	*	1	针板	THROAT PLATE
6	26-6	*	*	*	*	*	*	*	*	*	1	送料牙	FEED DOG
													FOOT CONTROL REVERSE FEED BLOCK(CPL.)
													FOOT CONTROL REVERSE FEED BLOCK SCREW
7	26-7	*	*	*	*	*	*	*	*	*	1	螺钉	
8	26-8	*	*	*	*	*	*	*	*	*	2		
9	26-9	*	*	*	*	*	*	*	*	*	1	护指器	FINGER GUARD

27.选择零件(2)

457A143 花模凸轮一览表

图 号	名 称	线 迹 形 式	最大线迹宽度A	最大横针幅度B
27-1	粗月牙凸轮(12针迹)		8.0mm	2.4mm
27-2	细月牙凸轮(24针迹)		8.0mm	3.6mm
27-3	三步曲折缝凸轮		8.0mm	—
27-4	暗缝凸轮(6针迹)		5.0mm	—
27-5	曲折缝凸轮		5.0mm	—
27-6	暗缝凸轮(4针迹)		5.0mm	—
27-7	两步曲折缝凸轮		8.0mm	—
27-8	均宽月牙缝凸轮(24针迹)		8.0mm	3.4mm
27-9	暗缝凸轮(8针迹)		5.0mm	—
27-10	暗缝凸轮(12针迹)		5.0mm	—

* 以上备选凸轮可与机器上的24针迹均宽月牙缝标准凸轮 8-29 互换。

中国飞跃				
产品名称	规格	单位	数量	备注
1	1000mm	mm	1000	
2	1000mm	mm	1000	
3	1000mm	mm	1000	
4	1000mm	mm	1000	
5	1000mm	mm	1000	
6	1000mm	mm	1000	
7	1000mm	mm	1000	
8	1000mm	mm	1000	
9	1000mm	mm	1000	
10	1000mm	mm	1000	
11	1000mm	mm	1000	
12	1000mm	mm	1000	
13	1000mm	mm	1000	
14	1000mm	mm	1000	
15	1000mm	mm	1000	
16	1000mm	mm	1000	
17	1000mm	mm	1000	
18	1000mm	mm	1000	
19	1000mm	mm	1000	
20	1000mm	mm	1000	
21	1000mm	mm	1000	
22	1000mm	mm	1000	
23	1000mm	mm	1000	
24	1000mm	mm	1000	
25	1000mm	mm	1000	
26	1000mm	mm	1000	
27	1000mm	mm	1000	
28	1000mm	mm	1000	
29	1000mm	mm	1000	
30	1000mm	mm	1000	
31	1000mm	mm	1000	
32	1000mm	mm	1000	
33	1000mm	mm	1000	
34	1000mm	mm	1000	
35	1000mm	mm	1000	
36	1000mm	mm	1000	
37	1000mm	mm	1000	
38	1000mm	mm	1000	
39	1000mm	mm	1000	
40	1000mm	mm	1000	
41	1000mm	mm	1000	
42	1000mm	mm	1000	
43	1000mm	mm	1000	
44	1000mm	mm	1000	
45	1000mm	mm	1000	
46	1000mm	mm	1000	
47	1000mm	mm	1000	
48	1000mm	mm	1000	
49	1000mm	mm	1000	
50	1000mm	mm	1000	
51	1000mm	mm	1000	
52	1000mm	mm	1000	
53	1000mm	mm	1000	
54	1000mm	mm	1000	
55	1000mm	mm	1000	
56	1000mm	mm	1000	
57	1000mm	mm	1000	
58	1000mm	mm	1000	
59	1000mm	mm	1000	
60	1000mm	mm	1000	
61	1000mm	mm	1000	
62	1000mm	mm	1000	
63	1000mm	mm	1000	
64	1000mm	mm	1000	
65	1000mm	mm	1000	
66	1000mm	mm	1000	
67	1000mm	mm	1000	
68	1000mm	mm	1000	
69	1000mm	mm	1000	
70	1000mm	mm	1000	
71	1000mm	mm	1000	
72	1000mm	mm	1000	
73	1000mm	mm	1000	
74	1000mm	mm	1000	
75	1000mm	mm	1000	
76	1000mm	mm	1000	
77	1000mm	mm	1000	
78	1000mm	mm	1000	
79	1000mm	mm	1000	
80	1000mm	mm	1000	
81	1000mm	mm	1000	
82	1000mm	mm	1000	
83	1000mm	mm	1000	
84	1000mm	mm	1000	
85	1000mm	mm	1000	
86	1000mm	mm	1000	
87	1000mm	mm	1000	
88	1000mm	mm	1000	
89	1000mm	mm	1000	
90	1000mm	mm	1000	
91	1000mm	mm	1000	
92	1000mm	mm	1000	
93	1000mm	mm	1000	
94	1000mm	mm	1000	
95	1000mm	mm	1000	
96	1000mm	mm	1000	
97	1000mm	mm	1000	
98	1000mm	mm	1000	
99	1000mm	mm	1000	
100	1000mm	mm	1000	

地址: 中国浙江省台州市椒江机场中路109号
 Add: Middle Airport Rd. Taizhou City Zhejiang China
 电话: Tel: 0086-576-8155801/8155811/8155809
 传真: Fax: 0086-576-8155800/8155815
 邮政编码 Post Code: 318010

本资料所列之产品可能会因改良而所变动, 以随机说明书为准,
 故不另行通知。中国飞跃保留对此资料的解释权。

经销商:
 VENDOR: