


LT2-B831

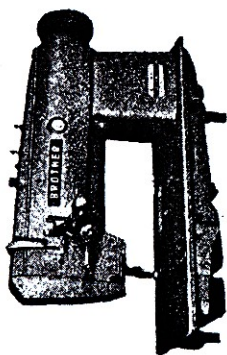

Please clarify Ref. No. and
Parts No. as well as parts name
When you place an order.


Cavemac

Controle do A	de Catálogos
Identificação	124
Edição	ÚNICA
Conteúdo	BROTHER LT2-B831

00000124




A

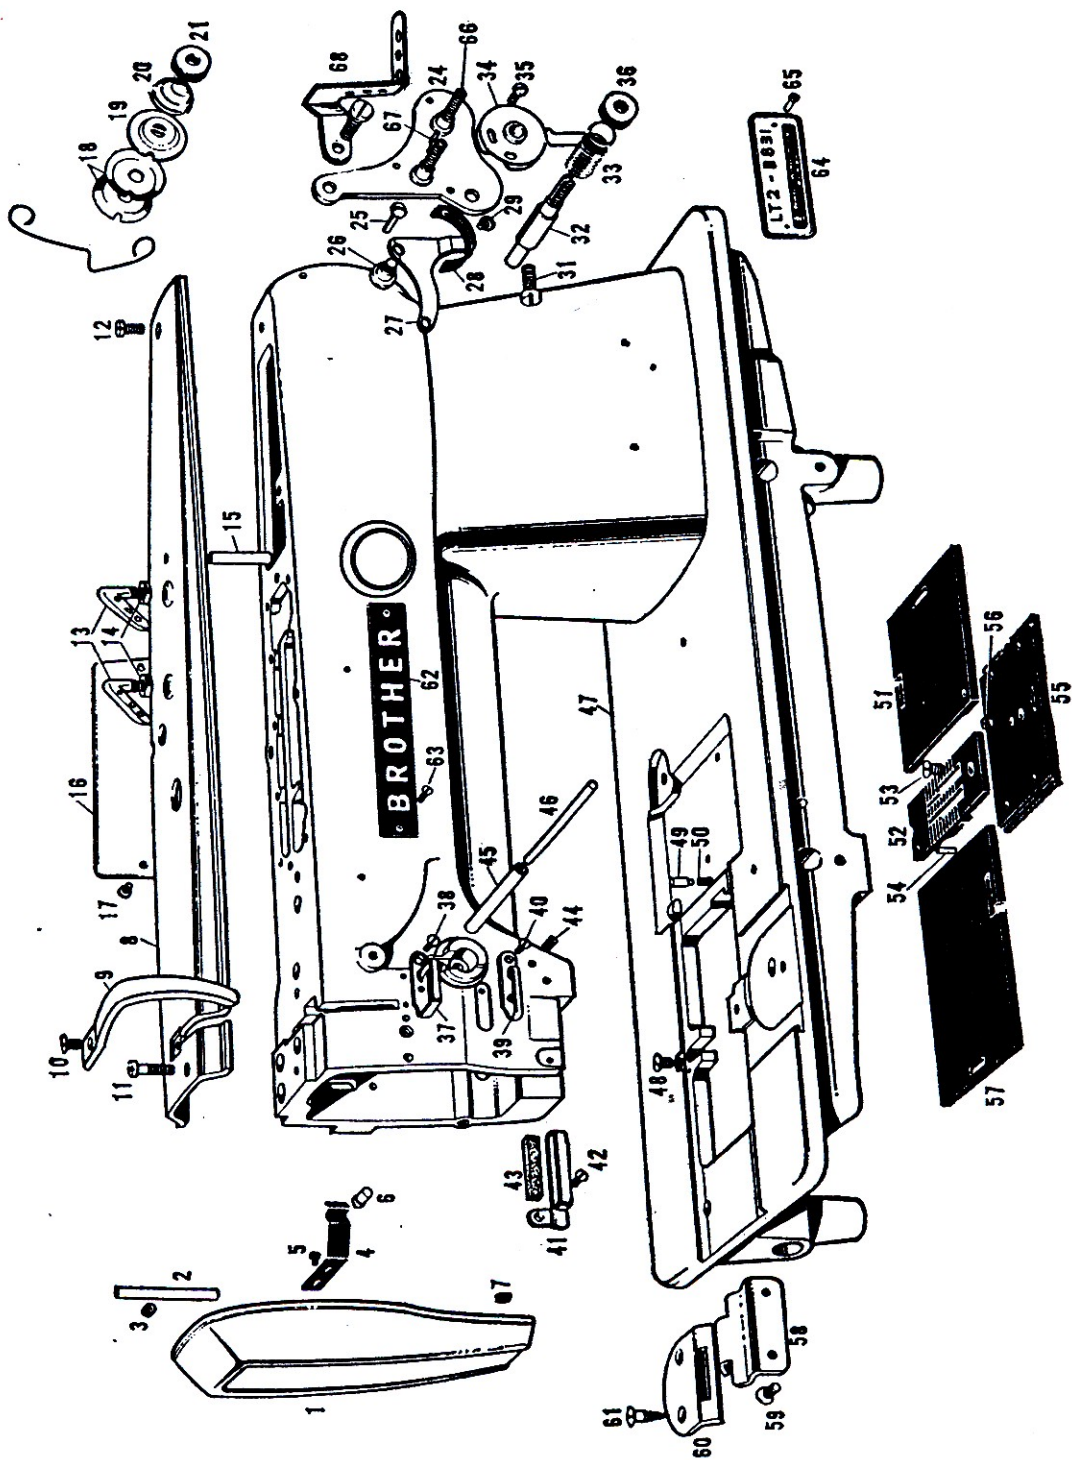


Ref. No.	Name of Parts	Qty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Qty	Parts No.	Assembly N. o
A-1	Face Plate	1 pce.	112562-0-01		A-46	Tension Release Shaft	1 pce.	112713-0-01	
A-2	Face Plate Hinge Pin	1 "	112563-0-01		A-47	Arm Bed	1 set.	112566-0-01	
A-3	Set Screw for A-2	1 "	104651-0-01		A-48	Needle Plate Guide Screw	1 pce.	112751-0-01	
A-4	Face Plate Spring	1 "	114924-0-01		A-49	Stopper for A-51	1 "	112608-0-01	
A-5	Set Screw for A-4	2 pcs.	100242-0-04		A-50	Spring for A-49	1 "	112609-0-01	
A-6	Stop Pin for A-1	1 pce.	114923-0-00		A-51	Slide Plate, Right	1 pce.	112607-0-01	
A-7	Cushion for A-1	1 "	114925-0-01		A-52	Needle Plate 3/16	1 "	112603-0-01	
A-8	Arm Top Cover	1 "	112560-0-01		A-53	Set Screw for A-52	1 "	100032-0-01	
A-9	Thread Take-up Cover	1 "	112561-0-01		A-54	Set Pin for A-52	1 "	113386-0-00	
A-10	Set Screw for A-9	1 "	107231-0-01		A-55	Slide Plate Front Assembly	1 set.	112610-0-01	
A-11	Set Screw for A-8, Left	1 "	106127-0-01		A-56	Stop Screw for A-55	1 pce.	116010-0-01	
A-12	Set Screw for A-8, Right	1 "	100368-0-03		A-57	Slide Plate, Left	1 "	112606-0-01	
A-13	Top Cover Thread Guide	2 pcs.	140527-0-01		A-58	Bed Hinge Joint	2 pcs.	112568-0-01	
A-14	Nut for A-13	2 "	107114-0-01		A-59	Set Screw for A-58	4 "	112569-0-01	
A-15	Oil Pipe for B-21	1 pce.	112662-0-00		A-60	Bed Hinge	2 "	112570-0-01	
A-16	Rear Cover	1 "	112566-0-01		A-61	Wood Screw 55x25 for A-60	4 "	112571-0-01	
A-17	Set Screw, for A-16	2 pcs.	100185-0-04		A-62	Name Plate "BROTHER"	1 pce.	112548-0-01	
A-18	Tension Disc	4 "	108263-0-01		A-63	Set Screw for A-62	2 pcs.	100191-0-03	
A-19	Tension Disc Washer	2 "	108264-0-01		A-64	Model Plate for B831-1	1 pce.	143239-0-01	
A-20	Tension Spring for B831-1,3	2 "	118317-0-01		A-64	Model Plate for B831-3	1 "	143240-0-01	
A-20	Tension Spring for B831-5	2 "	104525-0-01		A-64	Model Plate for B831-5	1 "	143241-0-01	
A-21	Tension Control Nut	2 "	108265-0-01		A-65	Model Plate Pin	2 pcs.	116231-0-01	
A-22	Thread Retainer	1 pce.	108056-0-01		A-66	Tension Stud	2 pcs.	112706-0-01	
A-23	Set Screw for A-22	1 set.	112705-0-01		A-67	Pin	2 pcs.	118318-0-01	
A-24	Upper Thread Tension Plate	2 pcs.	112710-0-01		A-68	Tension Release Spring	1 pce.	118320-0-01	
A-25	Tension Release Pin	2 "	112712-0-01						
A-26	Stud Screw for A-27	1 pce.	112711-0-01						
A-27	Tension Release Lever	1 "	112709-0-01						
A-28	Stopper for A-33	1 "	100257-0-06						
A-29	Set Screw for A-23	1 "	10064-0-04						
A-31	Set Screw for A-32	1 "	108260-0-01						
A-32	Tension Stud	1 "	108262-0-01						
A-33	Thread Take-up Spring	1 "	108254-0-01						
A-34	Thread Take-up Spring Guide	1 "	118319-0-01						
A-35	Set Screw for A-34	1 "	108265-0-01						
A-36	Tension Control Nut	1 "	108266-0-01						
A-37	Arm Thread Guide, Upper	1 "	108960-0-03						
A-38	Set Screw for A-37	1 "	112638-0-01						
A-39	Arm Thread Guide, Center	1 "	108960-0-03						
A-40	Set Screw for A-39	1 "	112715-0-01						
A-41	Arm Thread Guide, Lower	1 "	108960-0-03						
A-42	Set Screw for A-41	1 "	114941-0-01						
A-43	Felt for A-41	2 pcs.	100388-0-04						
A-44	Oil Stopper Screw	1 pce.	112714-0-00						
A-45	Pipe for A-46								

B

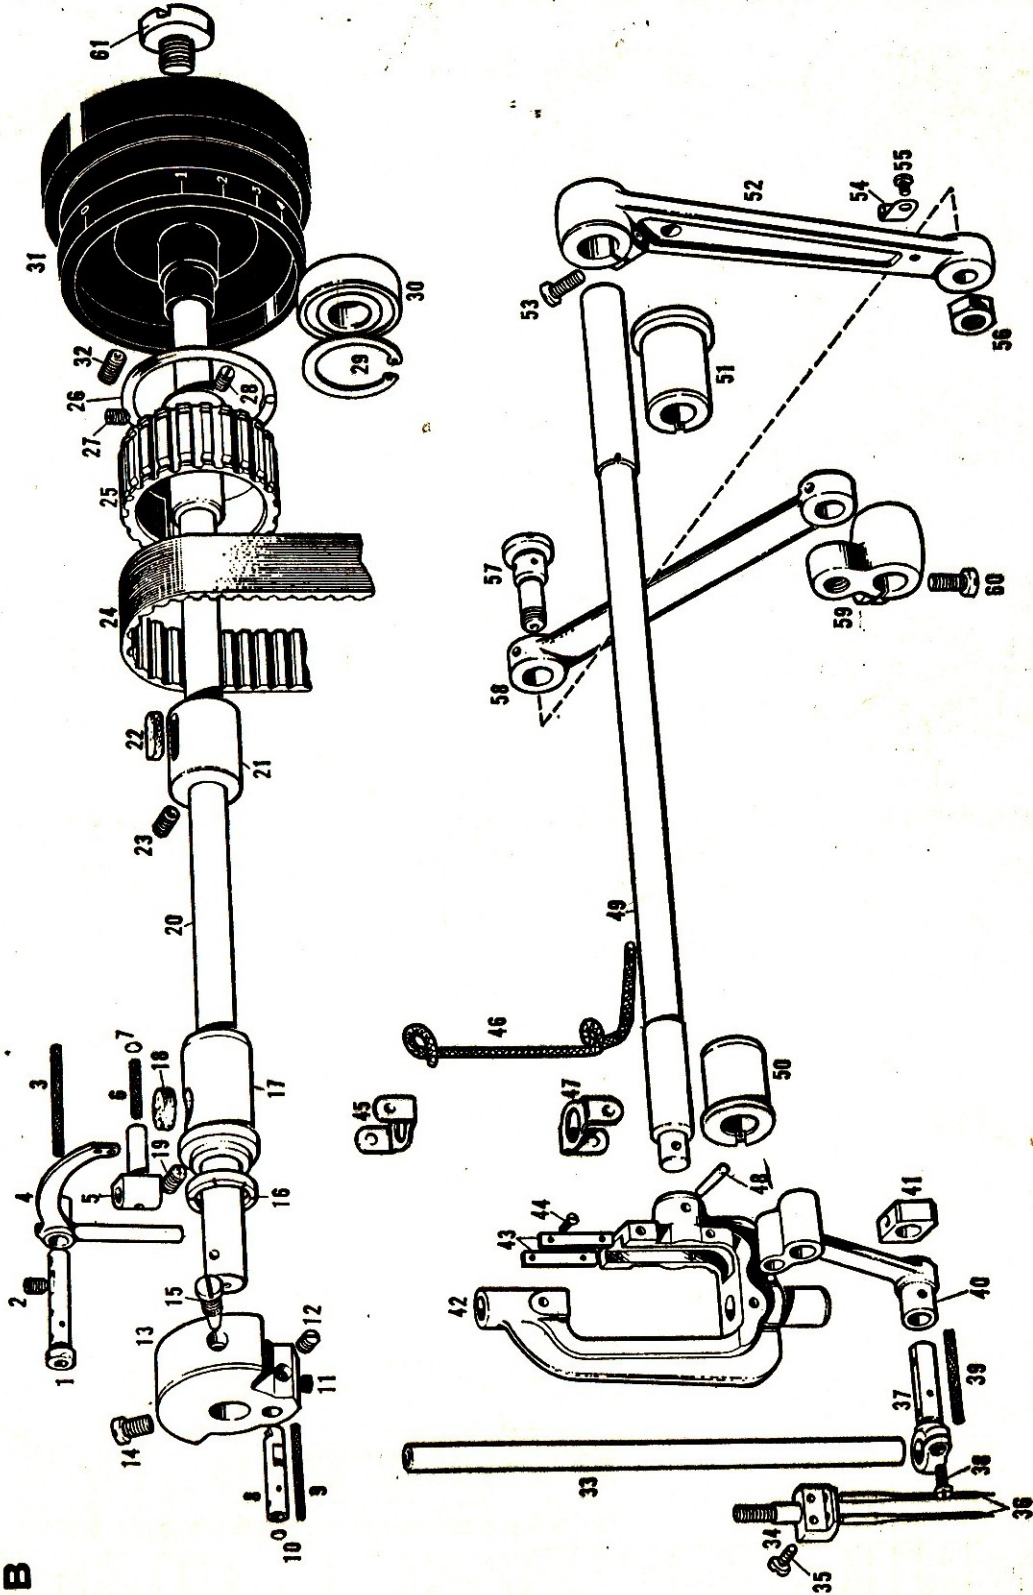

Ref. No.	Name of Parts	Qty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Qty	Parts No.	Assembly No.
B-1	Stud for Thread Take-up Lever	1 pce.	112579-0-01		B-39	Wick 4×4 for B-37	1 pce.	112728-0-01	
B-2	Set Screw for B-1	1 "	100062-0-04		B-41	Needle Bar Guide Slide Block	1 "	112721-0-01	
B-3	Wick 6×6 for B-1	1 "	112735-0-00		B-45	Presser for B-46, Upper	1 "	112719-0-01	
B-4	Thread Take-up Lever for B831-1,3	1 "	112578-0-01		B-46	Wick for B-2	1 "	116699-0-00	
B-5	Thread Take-up Lever for B831-5	1 "	140525-0-01		B-47	Presser B-46, Lower	1 "	112720-0-01	
B-6	Wick 4×4 for B-5	1 "	118171-0-01		B-50	Needle Bar Rock Shaft Bushing, Left	1 "	112594-0-01	
B-7	Pusher for B-5	1 "	114693-0-01						
B-8	Needle Bar Crank	1 "	113024-0-00		B-51	Needle Bar Rock Shaft Bushing, Right	1 "	112764-0-01	
B-9	Wick 6×6 for B-8	1 "	112577-0-01		B-52	Needle Bar Connection	1 "	112595-0-01	
B-10	Pusher for B-8	1 "	112735-0-00		B-53	Set Screw for B-52	1 "	105351-0-02	
B-11	Set Screw for B-8	1 "	113014-0-00		B-54	Wick Supporter for B-52	1 "	112739-0-01	
B-12	Set Screw for B-8	1 "	101706-0-01		B-55	Set Screw for B-54	1 "	100242-0-04	
B-13	Counter Weight	1 "	100251-0-01		B-56	Nut for B-57	2 pcs.	101268-0-03	
B-14	Set Screw for B-13	1 "	112574-0-00		B-57	Set Screw for B-57	2 "	112597-0-01	
B-15	Counter Weight Position Screw	1 "	107753-0-01		B-58	Needle Bar Rock Link	1 pce.	112596-0-01	
B-16	Thrust Ring for B-13	1 "	100250-0-01		B-59	Needle Bar Rock Crank	1 "	112598-0-01	180168-0-01
B-17	Upper Shaft Bushing, Left	1 "	112576-0-01		B-60	Set Screw for B-59	1 "	106764-0-01	
B-18	Felt for B-17	1 "	112573-0-01		B-61	Cap Screw for Pulley	1 "	104478-0-01	
B-19	Set Screw for B-17	1 "	112734-0-01						
B-20	Upper Shaft	1 "	100016-0-03						
B-21	Upper Shaft Bushing, Center	1 "	112572-0-01						
B-22	Felt for B-21	1 "	114680-0-01						
B-23	Set Screw for B-21	1 "	100248-0-01						
B-24	Timing Belt	1 "	100016-0-03						
B-25	Timing Belt Wheel Upper	1 "	112586-0-01						
B-26	Side Ring for B-25	2 pcs.	112583-0-01	180157-0-01					
B-27	Set Screw for B-25	1 pce.	112585-0-01						
B-28	Set Screw for B-25	1 "	115264-0-01						
B-29	Stop Ring for B-30	1 "	115995-0-01						
B-30	Ball Bearing for B-20	1 "	112760-0-01						
B-31	Pulley	1 "	072620-4-60						
B-32	Set Screw for B-31	1 "	142112-0-01						
B-33	Needle Bar	2 pcs.	100016-0-03						
B-37	Needle Bar Bracket	1 pce.	112591-0-01						
B-38	Set Screw for B-37	1 "	112592-0-01						
B-40	Needle Bar Crank Rod	1 "	100064-0-04						
B-42	Needle Bar Support	1 "	112593-0-01						
B-43	Guide Plate for B-41	2 pcs.	112589-0-00	112587-0-01					
B-44	Set Screw for B-43	4 "	112590-0-01						
B-48	Taper Pin for B-42	1 pce.	102731-0-01						
B-49	Needle Bar Rock Shaft	1 "	107030-0-01						
B-34	Needle Holder 3/16	1 "	112588-0-01						
B-35	Set Screw for B-36	2 pcs.	112599-0-01						
B-36	Needle (DP×5)	2 "	116323-0-01						
			107415-0-04						

C

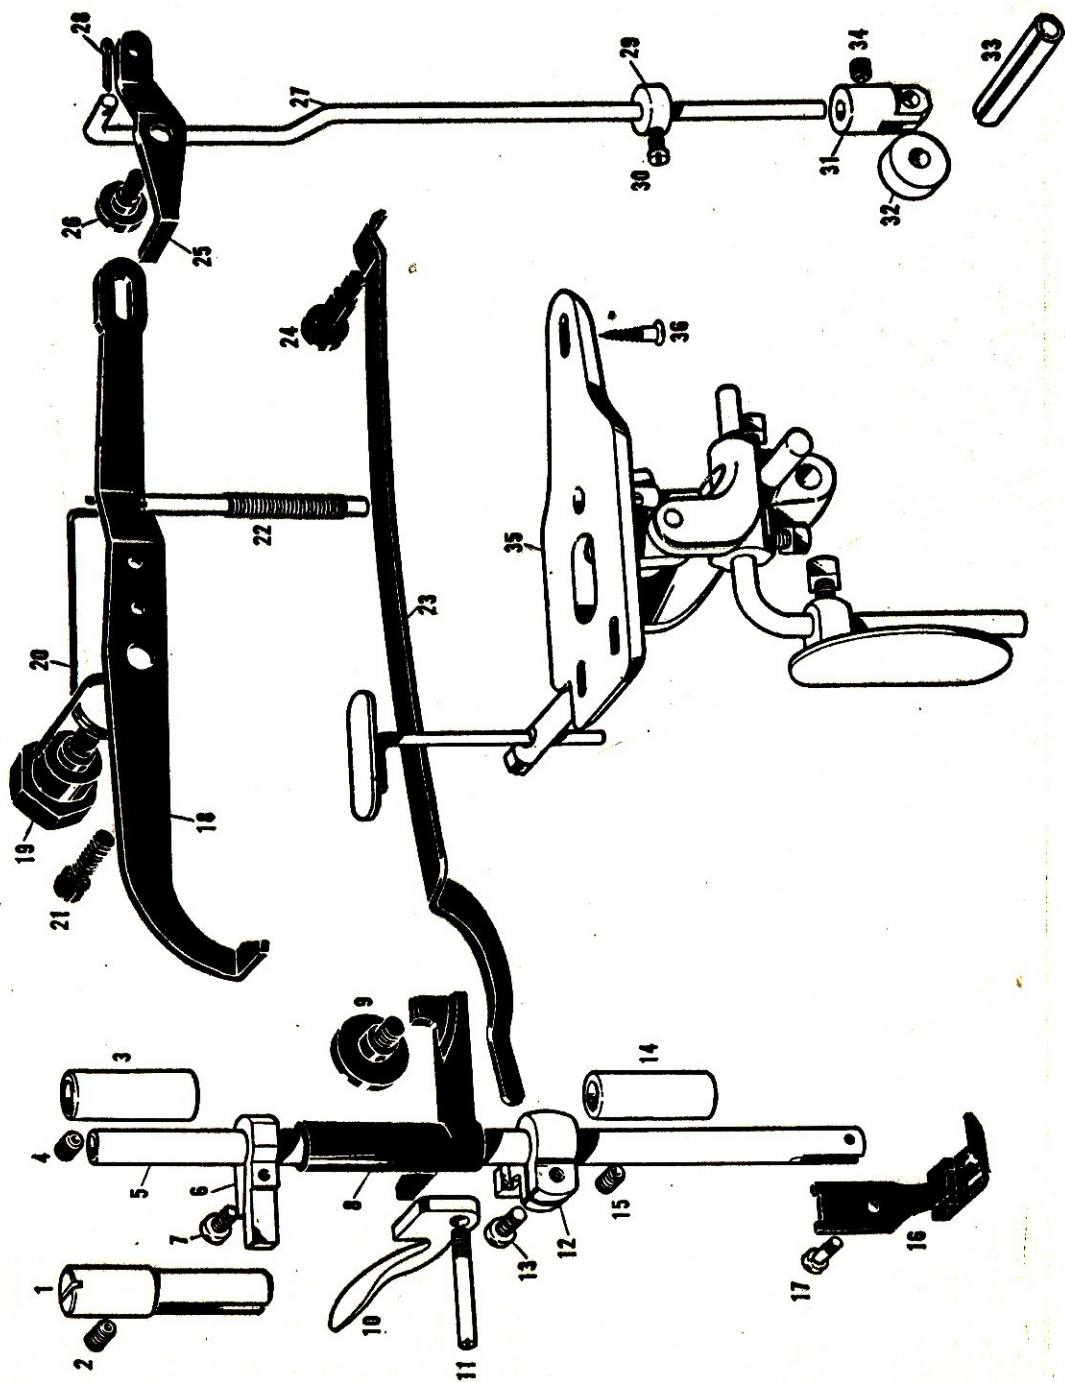

[illegible]




Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
D-1	Feed Dog 3/16	1 pce.	112659-0-01		D-37	Set Screw for D-36	2 pcs.	10016-0-03	
D-2	Set Screw for D-1	2 pcs.	112683-0-01		D-47	Feed Control Bottom	1 pce.	112677-0-01	
D-3	Feed Bar	1 pce.	112653-0-01		D-48	Spring for D-47	1 #	103607-0-00	
D-4	Stopper Screw for C-1	1 #	107278-0-02		D-49	Stop Ring for D-47	1 #	048040-3-42	
D-5	Nut for D-4	1 #	021660-1-03						
D-6	Feed Bar Fork	1 #	112656-0-01						
D-7	Felt for D-6	1 #	112759-0-01						
D-8	Set Screw for D-7	1 #	100242-0-04						
D-9	Set Screw for D-6	1 #	112657-0-01						
D-10	Washer for D-6	1 #	103794-0-02						
D-11	Feed Bar Shaft	1 #	113076-0-01						
D-12	Set Screw for D-11	1 #	104908-0-01						
D-13	Feed Rock Shaft	1 #	112651-0-01						
D-14	Feed Rock Shaft Bushing, Left	1 #	112650-0-01						
D-15	Set Screw D-14	1 #	100016-0-03						
D-16	Pusher for D-17	1 #	107793-0-00						
D-17	Set Screw for D-15	1 #	100016-0-03						
D-18	Feed Rock Shaft Collar	2 pcs.	113074-0-01						
D-19	Set Screw for D-18	4 #	101706-0-01						
D-20	Feed Rock Shaft Bushing, Right	1 pce.	112649-0-01						
D-21	Set Screw for D-20	1 #	100016-0-03						
D-22	Pusher for D-23	1 #	107793-0-00						
D-23	Set Screw for D-21	1 #	100013-0-03						
D-24	Feed Rock Shaft Arm	1 #	112680-0-01						
D-25	Set Screw for D-24	1 #	107171-0-01						
D-26	Set Screw for D-24	1 #	100154-0-03						
D-27	Lower Shaft Collar	1 #	112672-0-01						
D-28	Set Screw for D-27	2 pcs.	100013-0-03						
D-29	Feed Connecting Rod	1 pce.	112678-0-01						
D-30	Bearing for D-29	1 #	118954-0-00						
D-31	Stud Shaft for D-24	1 #	112681-0-01						
D-32	Eccentric Wheel	1 #	112674-0-01						
D-33	Eccentric Wheel Control Pin	1 #	101476-0-01						
D-34	Clack for D-33	1 #	101477-0-01						
D-35	Gib	1 #	103595-0-00						
D-36	Eccentric Wheel Clamp	1 #	112675-0-01						
D-38	Presser Pin for D-35	2 pcs.	104765-0-01						
D-39	Gib Stopper	1 pce.	104766-0-01						
D-40	Set Screw for D-33	1 #	120049-0-03						
D-41	Cam Ditch Washer	2 pcs.	103601-0-01						
D-42	Set Screw for D-41	2 #	101479-0-01						
D-43	Eccentric Feed Control Cam	1 pce.	112676-0-01						
D-44	Ripple Type Spring	1 #	103602-0-01						
D-45	Spring Presser	1 #	142120-0-01						
D-46	Stop Ring	1 #	142369-0-01						



Ref. No.	Name of Parts	Qty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Qty	Parts No.	Assembly No.
E-1	Lower Shaft	1 pce.	112663-0-01		E-47	Nut for E-50	2 pcs.	105234-0-01	
E-2	Rotary Hook Base Bushing, Left	1 "	112664-0-00		E-48	Spring Washer for E-50	2 "	028680-2-43	
E-3	Felt for E-2	1 "	115249-0-01		E-49	Washer for E-50	2 "	100645-0-01	
E-4	Felt for E-2	1 "	113361-0-01		E-50	Oil Adjusting Screw for E-35	2 "	112756-0-01	
E-5	Set Serew for E-2	1 "	100013-0-03		E-51	Rotary Hook Base, Left	1 pce.	112685-0-01	
E-6	Eccentric Feed Lifting	1 "	112682-0-01		E-52	Paking for E-51	2 pcs.	112755-0-01	
E-7	Set Serew for E-6	1 "	112684-0-01		E-53	Oil Reseriovrr, Left	1 pce.	112686-0-01	
E-8	Rotary Hook Base Bushng, Right	1 "	112665-0-00		E-54	Rotary Hook Base, Right	1 "	112701-0-01	
E-9	Felt for B-8	1 "	113362-0-01		E-55	Oil Reservoir, Right	1 "	112702-0-02	
E-10	Set Serew for E-9	1 "	100013-0-03		E-56	Set Screw for E-55, E-53	8 pcs.	100320-0-02	
E-11	Bushing for E-13	2 pcs.	112667-0-01		E-57	Washer for E-58	2 "	100197-0-02	
E-12	Set Serew for E-11	1 pce.	107306-0-01		E-58	Set Screw for E-51, E-54	2 "	105351-0-02	
E-13	Ball Bearing Receiver for E-11	1 "	112666-0-01		E-59	Felt for E-31	1 "	107155-0-01	
E-14	Presser for E-13	3 pcs.	112668-0-01						
E-15	Set Serew for E-14	1 pce.	106128-0-01						
E-16	Timing Belt Wheel Lower	1 "	112670-0-01						
E-17	Side Ring for E-16	1 "	112585-0-01	180164-0-01					
E-18	Set Screw for E-16	1 "	115264-0-01						
E-19	Set Screw for E-16	2 pcs.	115995-0-01						
E-20	Spiral Gear	2 "	112683-0-01						
E-21	Set Screw for E-20	4 "	112684-0-01						
E-22	Set Screw for E-20	2 "	100251-0-01						
E-23	Bobbin Case Opener	2 "	112697-0-01						
E-24	Set Screw for E-23	2 "	105649-0-01						
E-25	Washer for E-23	2 "	105161-0-02						
E-26	Opener Crank	2 "	112694-0-01						
E-27	Stud for E-28	2 "	112693-0-01						
E-28	Link for E-26	2 "	112692-0-01						
E-29	Washer for E-31	2 "	100579-0-02						
E-30	Nut for E-31	2 "	105367-0-01						
E-31	Stud Shaft for E-26	2 "	112695-0-01						
E-32	Set Serewfor E-31	2 "	106069-0-01						
E-33	Pipe 4x28 for E-31	1 pce.	112696-0-00						
E-34	Bobbin	2 pcs.	112781-0-01						
E-35	Rotary Hook Assembly	2 "	112691-0-01						
E-36	Rotary Hook shaft Bushing Upper	2 "	112690-0-01						
E-37	Set Serew for E-36	2 "	107790-0-01						
E-38	Pinion	2 "	112689-0-01						
E-39	Set Serew for E-38	6 "	101706-0-01						
E-41	Rotary Hook Shaft Bushing, Lower	2 "	112687-0-01						
E-42	Set Serew for E-41	2 "	107794-0-01						
E-43	Pinch Sleeve	2 "	112699-0-01						
E-44	Set Serew for E-43	2 "	112700-0-01						
E-45	Oil Gauge	2 "	112757-0-01						
E-46	Pipe 6x13	2 "	115287-0-00						

F

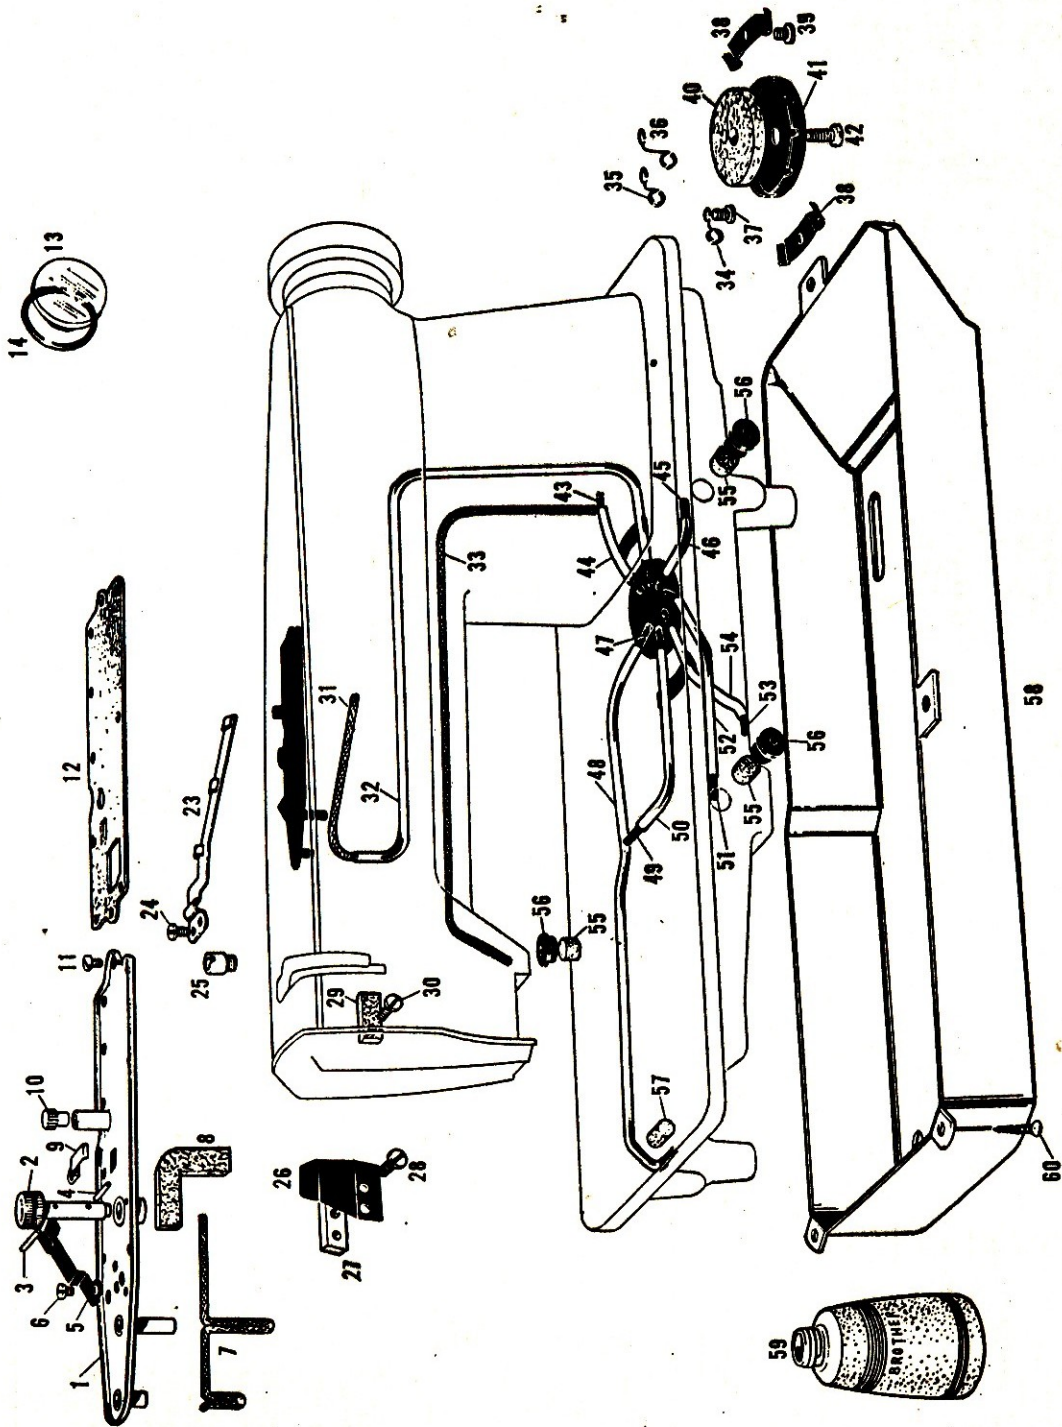

Ref. No.	Name of Parts	Qty	arts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
F-1	Oil Receiver Plate for B831-3,5	1 pce.	112722-0-01	112762-0-01	F-53	Wick 4x4 (110)	1 pce.	112750-0-00	
F-1	Oil Receiver Plate for B831-1	1 "	112721-0-01	for B831-3,5	F-54	Oil Tube (3x90)	1 "	112752-0-01	
F-2	Oil Adjusting Knob	1 "	112726-0-01		F-55	Felt for F-56	3 pcs.	112753-0-01	
F-3	Pin 2x14 for F-2	1 "	112708-0-01	117200-0-01	F-56	Oil Cap on Bed for Oil Hole	3 "	112753-0-01	
F-4	Pin 2x9 for F-2	1 "	112727-0-01	for B831-1	F-57	Felt for E-1	1 pce.	112754-0-01	
F-5	Wick Supporter	1 "	112730-0-01		F-58	Oil Pan	1 "	116700-0-01	
F-6	Set Screw for F-5	1 "	105295-0-03		F-59	Oil Pan	1 "	114486-0-01	
F-7	Wick 4x4 for F-1	1 "	112725-0-01		F-60	Nail 4.1x20 for F-58	4 pcs.	100415-0-02	
F-8	Felt for F-1	1 "	112724-0-01						
F-9	Presser for F-3	1 "	114297-0-01						
F-10	Cap for Oil Inlet	10 pcs.	113526-0-01						
F-11	Set Screw for F-1	1 pce.	100257-0-06						
F-12	Packing for F-1	1 "	112723-0-01						
F-13	Oil Gauge Window	1 "	116558-0-01						
F-14	Packing for F-13	1 "	108106-0-00						
F-23	Wick Support	2 pcs.	112729-0-01						
F-24	Set Screw for F-23	1 pce.	106640-0-01						
F-25	Oil Tube Guide	1 "	113524-0-01						
F-26	Oil Stopper Plate	1 "	112716-0-01						
F-27	Presser for E-26	1 "	112717-0-01						
F-28	Set Screw for F-26	1 "	106396-0-02						
F-29	Felt for B-4	1 "	112761-0-01						
F-30	Set Screw for F-29	1 "	112751-0-01						
F-31	Wick 4x4 (400)	1 "	112738-0-00						
F-32	Oil Tube 3x380	1 "	112737-0-01						
F-33	Wick 4x4 (440)	6 pcs.	112736-0-00						
F-34	Wick Holder (3.5)	2 "	112743-0-01						
F-35	Wick Holder (7)	2 "	112744-0-01						
F-36	Wick Holder (17)	2 "	112745-0-01						
F-37	Set Screw for F-34	2 "	100242-0-04						
F-38	Presser for Vinyl Tube	2 "	112742-0-01						
F-39	Set Screw for F-38	1 pce.	100242-0-04						
F-40	Oil Felt	1 "	112741-0-01						
F-41	Bed Oil Tube Clamp	1 "	112740-0-01						
F-42	Set Screw for F-41	1 "	100320-0-03						
F-43	Wick 4x4 (110)	1 "	112750-0-00						
F-44	Oil Tube (3x45)	1 "	112669-0-01						
F-45	Wick 4x4 (110)	1 "	112750-0-00						
F-46	Oil Tube (3x90)	1 "	112752-0-01						
F-47	Wick 4x4 (405)	1 "	112746-0-00						
F-48	Oil Tube (3x375)	1 "	112747-0-01						
F-49	Wick 4x4 (180)	1 "	112725-0-01						
F-50	Oil Tube (3x150)	1 "	112749-0-01						
F-51	Wick 4x4 (180)	1 "	112725-0-01						
F-52	Oil Tube (3x150)	1 "	112749-0-01						

GAUGE PARTS

B831-15

Ref. No.	Name of Parts	Qty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
A-52	Needle Plate 1/8	1 pce.	114950-0-01						
"	" 3/16	1 "	112603-0-01						
"	" 1/4	1 "	112604-0-01						
"	" 5/16	1 "	112605-0-01						
"	" 5/32	1 "	116503-0-01						
"	" 3/8	1 "	116506-0-01						
"	" 1/2	1 "	116505-0-01						
"	" 5/8	1 "	116507-0-01						
"	" 1 1/4	1 "	116504-0-01						
"	" 1 1/2	1 "	118945-0-01						
B-34	Needle Holder 1/8	1 "	114947-0-01						
"	" 3/16	1 "	112599-0-01						
"	" 1/4	1 "	112600-0-01						
"	" 5/16	1 "	112601-0-01						
"	" 5/32	1 "	116489-0-01						
"	" 3/8	1 "	116491-0-01						
"	" 1/2	1 "	116490-0-01						
"	" 5/8	1 "	116488-0-01						
"	" 1 1/4	1 "	116492-0-01						
"	" 1 1/2	1 "	118844-0-01						
C-16	Presser Foot Complete 1/8	1 Set.	114948-0-01						
"	" 3/16	1 "	112638-0-01						
"	" 1/4	1 "	112642-0-01						
"	" 5/16	1 "	112645-0-01						
"	" 5/32	1 "	116502-0-01						
"	" 3/8	1 "	116498-0-01						
"	" 1/2	1 "	116499-0-01						
"	" 5/8	1 "	116450-0-01						
"	" 1 1/4	1 "	116501-0-01						
"	" 1 1/2	1 "	118946-0-01						
D-1	Feed Dog 1/8	1 pce.	114951-0-01						
"	" 3/16	1 "	112659-0-01						
"	" 1/4	1 "	112660-0-11						
"	" 5/16	1 "	112661-0-01						
"	" 5/32	1 "	116509-0-01						
"	" 3/8	1 "	116510-0-01						
"	" 1/2	1 "	116511-0-01						
"	" 5/8	1 "	116512-0-01						
"	" 1 1/4	1 "	116508-0-11						
"	" 1 1/2	1 "	118947-0-01						

Parts. No.	Ref. No.	Remark	Parts. No.	Ref. No.	Remark	Parts. No.	Ref. No.	Remark	Parts. No.	Ref. No.	Remark
021660-1-03	D-5		100415-0-02	F-60		107459-0-01	C-30		112590-0-01	B-43	
028680-2-43	E-48		100541-0-01	C-7		107753-0-01	B-14		112591-0-01	B-33	
047501-2-40	C-33		100579-0-02	E-29		107790-0-01	E-37		112592-0-01	B-37	
048040-3-42	D-49		100645-0-01	E-49		107793-0-00	B-16		112593-0-01	B-40	
072620-4-60	B-30		101268-0-03	B-56		"	D-22		112594-0-01	B-50	
100013-0-03	C-15		101476-0-01	D-33		107794-0-01	E-42		112595-0-01	B-52	
"	D-23		101477-0-01	D-34		108056-0-01	A-22		112596-0-01	B-58	
"	D-28		101479-0-01	D-42		108106-0-00	F-14		112597-0-01	B-57	
"	E-5		101706-0-01	B-11		108254-0-01	A-34		112598-0-01	B-59	
"	E-10		"	D-19		108260-0-01	A-32		112599-0-01	B-34	
100016-0-03	B-19		"	E-39		108262-0-01	A-33		112600-0-01	B-34	
"	B-23		102731-0-01	B-44		108263-0-01	A-18		112601-0-01	B-34	
"	B-32		103595-0-00	D-35		108264-0-01	A-19		112603-0-01	A-52	
"	D-15		103601-0-01	D-41		"	A-21		112604-0-01	A-52	
"	D-17		103602-0-01	D-44		"	A-36		112605-0-01	A-52	
"	D-21		103607-0-00	D-48		108266-0-01	A-27		112606-0-01	A-57	
"	D-37		103794-0-02	D-10		108960-0-03	A-38		112607-0-01	A-51	
100032-0-01	A-53		104478-0-01	B-61		"	A-40		112608-0-01	A-49	
100062-0-04	B-2		104525-0-01	A-20		"	A-42		112609-0-01	A-50	
"	C-2		104651-0-01	A-3		112548-0-01	A-62		112610-0-01	A-55	
"	C-4		104765-0-01	D-38		112556-0-01	A-47		112614-0-01	C-5	
100064-0-04	A-31		104766-0-01	D-39		112560-0-01	A-8		112615-0-01	C-3	
"	B-38		104908-0-01	D-12		112561-0-01	A-9		112616-0-01	C-12	
"	C-13		105161-0-02	E-25		112562-0-01	A-1		112617-0-01	C-8	
100154-0-03	D-26		105234-0-01	E-47		112563-0-01	A-2		112618-0-01	C-10	
100185-0-04	A-17		105295-0-03	F-6		112566-0-01	A-16		112619-0-01	C-11	
100191-0-03	A-63		105351-0-02	B-53		112568-0-01	A-58		112620-0-01	C-6	
100197-0-02	E-57		"	E-58		112569-0-01	A-59		112621-0-01	C-1	
100218-0-02	C-34		105367-0-01	E-30		112570-0-01	A-60		112623-0-01	C-24	
100242-0-04	A-5		105649-0-01	E-24		112571-0-01	A-61		112624-0-01	C-22	
"	B-55		106030-0-01	C-36		112572-0-01	B-20		112625-0-01	C-18	
"	D-8		106069-0-01	E-32		112573-0-01	B-17		112626-0-01	C-19	
"	F-37		106127-0-01	A-11		112574-0-00	B-13		112627-0-01	C-25	
"	F-39		106128-0-01	E-15		112576-0-01	B-16		112628-0-01	C-26	
100248-0-01	B-22		106396-0-02	F-28		112577-0-01	B-8		112629-0-01	C-20	
100250-0-01	B-15		106640-0-01	F-24		112578-0-01	B-4		112630-0-01	C-21	
100251-0-01	B-12		106764-0-01	B-60		112579-0-01	B-1		112631-0-01	C-9	
"	E-22		107030-0-01	B-48		112583-0-01	B-25		112632-0-01	C-27	
100257-0-06	A-29		107114-0-01	A-14		112585-0-01	B-26		112634-0-01	C-29	
"	F-11		107155-0-01	E-59		"	E-17		112635-0-01	C-31	
100320-0-02	E-56		107171-0-01	D-25		112586-0-01	B-24		112636-0-01	C-32	
100320-0-03	F-42		107231-0-01	A-10		112587-0-01	B-33,37,38,40 42~44,48,49		112638-0-01	C-16	
100368-0-03	A-12		107278-0-02	D-4		"			112642-0-01	C-16	
"	A-23		107306-0-01	E-12		112588-0-01	B-49		112645-0-01	C-16	
100388-0-04	A-44		107415-0-04	B-36		112589-0-00	B-42		112649-0-01	D-20	

I N D E X

Parts. No.	Ref. No.	Remark	Parts. No.	Ref. No.	Remark	Parts. No.	Ref. No.	Remark	Parts. No.	Ref. No.	Remark
112650-0-01	D-14		112700-0-01	E-44		112749-0-01	F-52		115249-0-01	E-3	
112651-0-01	D-13		112701-0-01	E-54		112750-0-00	F-43		115262-0-01	D-31-32	
112653-0-01	D-3		112702-0-02	E-55		"	F-45		115264-0-01	B-27	
112656-0-01	D-6		112705-0-01	A-24		"	F-53		"	E-18	
112657-0-01	D-9		112706-0-01	A-66		112751-0-01	A-48		115287-0-00	E-46	
112658-0-01	A-39		112708-0-01	F-3		"	F-30		115995-0-01	B-28	
112659-0-01	D-1		112709-0-01	A-28		112752-0-01	F-46		"	E-19	
112660-0-01	D-1		112710-0-01	A-25		"	F-54		116010-0-01	A-56	
112661-0-01	D-1		112711-0-01	A-27		112753-0-01	F-55		116231-0-01	A-65	
112662-0-00	A-15		112712-0-01	A-26		112754-0-01	F-57		116276-0-01	C-31~34	
112663-0-01	E-1		112713-0-01	A-46		112755-0-01	E-52		116283-0-01	D-2	
112664-0-00	E-2		112714-0-00	A-45		112756-0-01	E-50		116323-0-01	B-35	
112665-0-00	E-8		112715-0-01	A-41		112757-0-01	E-45		116458-0-01	C-16	
112666-0-01	E-13		112716-0-01	F-26		112758-0-01	F-56		116489-0-01	B-34	
112667-0-01	E-11		112717-0-01	F-27		112759-0-01	D-7		116490-0-01	B-34	
112668-0-01	E-14		112719-0-01	B-45		112760-0-01	B-29		116491-0-01	B-34	
112669-0-01	F-44		112720-0-01	B-47		112761-0-01	F-29		116492-0-01	B-34	
112670-0-01	E-16		112721-0-01	B-41		112762-0-01	F-1~4		116498-0-01	C-16	
112672-0-01	D-27		112722-0-01	F-1		112763-0-01	C-14		116501-0-01	C-16	
112673-0-01	D-32~36 38~46		112723-0-01	F-12		112764-0-01	E-34		116502-0-01	C-16	
112674-0-01	D-32		112724-0-01	F-8		113014-0-00	B-10		116503-0-01	A-52	
112675-0-01	D-36		112725-0-01	F-7		113024-0-00	B-7		116504-0-01	A-52	
112676-0-01	D-43		"	F-49		113050-0-01	C-17		116505-0-01	A-52	
112677-0-01	D-47		"	F-51		113074-0-01	D-18		116506-0-01	A-52	
112678-0-01	D-29		112726-0-01	F-2		113076-0-01	D-11		116507-0-01	A-52	
112680-0-01	D-24		112727-0-01	F-4		113361-0-01	E-4		116508-0-01	D-1	
112681-0-01	D-31		112728-0-01	B-39		113362-0-01	E-9		116509-0-01	D-1	
112682-0-01	E-6		112729-0-01	F-23		113380-0-01	C-35		116510-0-01	D-1	
112683-0-01	E-20		112730-0-01	F-5		113386-0-00	A-54		116511-0-01	D-1	
112684-0-01	E-7		112734-0-01	B-18		113524-0-01	F-25		116512-0-01	D-1	
"	E-21		112735-0-00	B-3		113526-0-01	F-10		116558-0-01	F-13	
112685-0-01	E-51		"	B-9		114297-0-01	F-9		116699-0-00	B-46	
112686-0-01	E-53		112736-0-00	F-33		114486-0-01	F-59		116700-0-01	F-58	
112687-0-01	E-41		112737-0-01	F-32		114680-0-01	B-21		117200-0-01	F-1~4	
112689-0-01	E-38		112738-0-00	F-31		114693-0-01	B-6		117201-0-01	F-1	
112690-0-01	E-36		112739-0-01	B-54		114909-0-01	C-28		118170-0-01	C-23	
112691-0-01	E-35		112740-0-01	F-41		114923-0-00	A-6		118171-0-01	B-5	
112692-0-01	E-28		112741-0-01	F-40		114925-0-01	A-4		118317-0-01	A-20	
112693-0-01	E-27		112742-0-01	F-38		114941-0-01	A-43		118318-0-01	A-67	
112694-0-01	E-26		112743-0-01	F-34		114947-0-01	B-34		118319-0-01	A-35	
112695-0-01	E-31		112744-0-01	F-35		114948-0-01	C-16		118320-0-01	A-68	
112696-0-00	E-33		112745-0-01	F-36		114950-0-01	A-52		118844-0-01	B-34	
112697-0-01	E-23		112746-0-00	F-47		114951-0-01	D-1		118945-0-01	A-52	
112699-0-01	E-43		112747-0-01	F-48							
			112749-0-01	F-50							

INDEX

[illegible]