

List of parts Sewing Machine

2802/2852 2808/2858

2809/2859

2810/2860 2818/2868



® A registered trademark of the "THE SINGER COMPANY LIMITED"



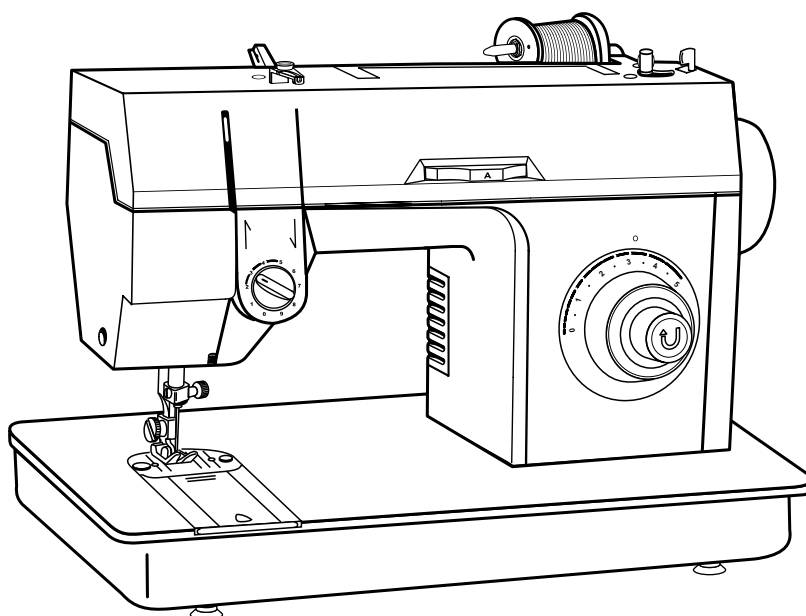


TABLE OF CONTENTS

[illegible]

ATTACHMENT SET

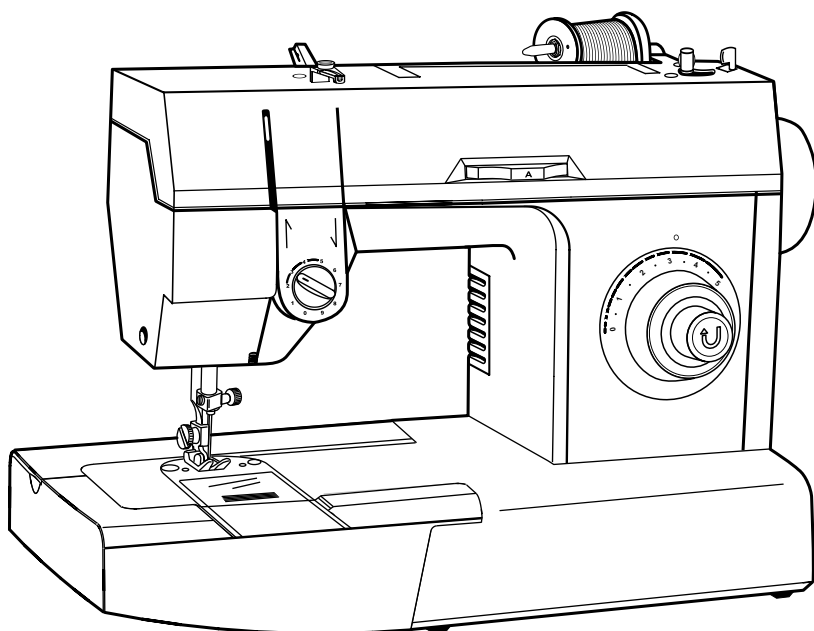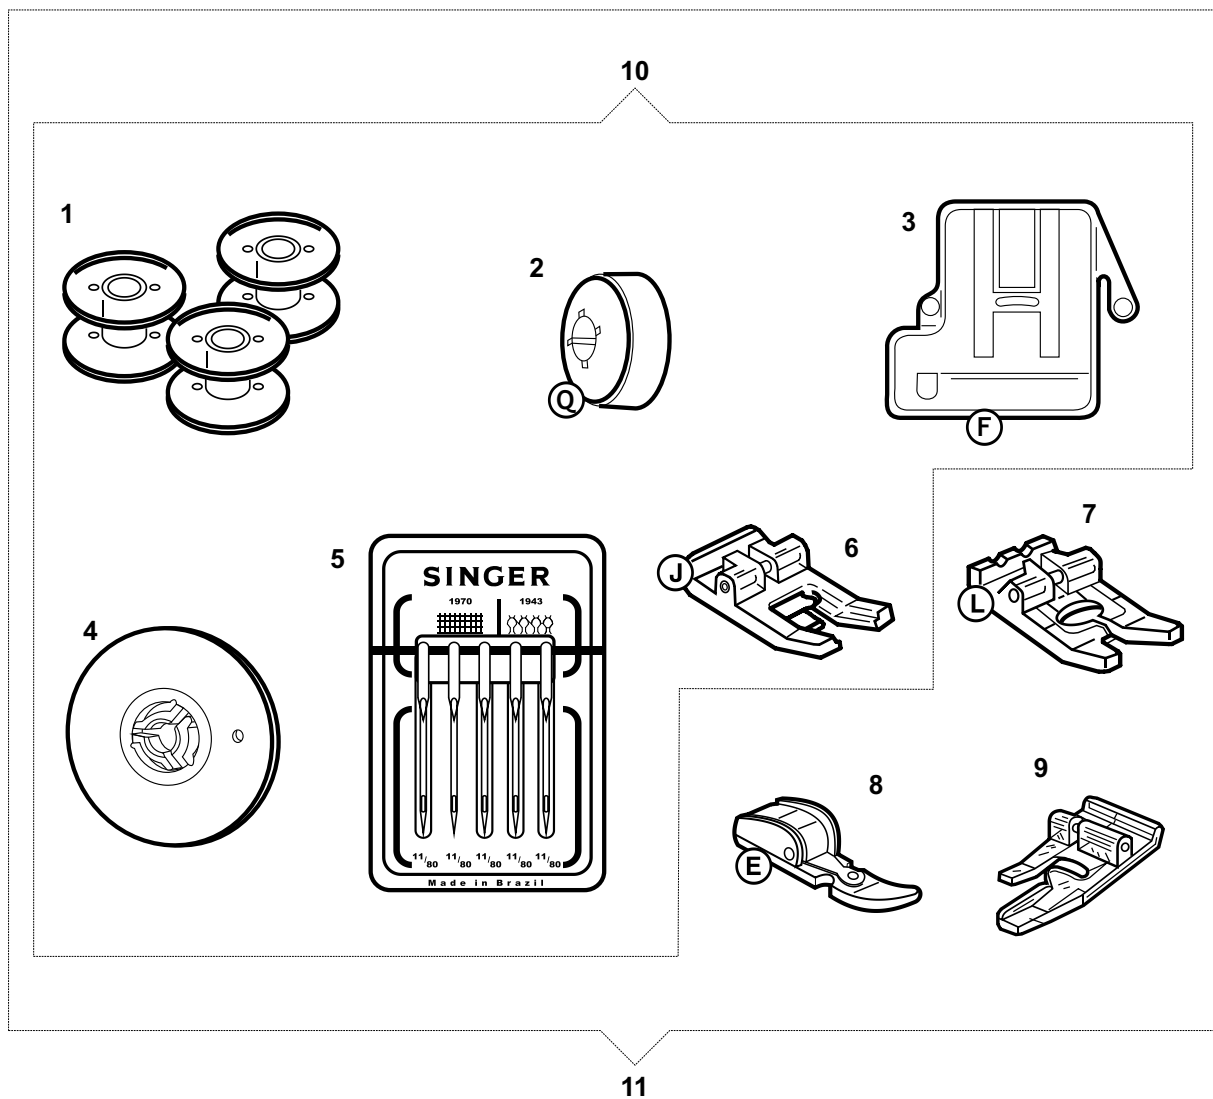


ATTACHMENT SET

[illegible]

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

ARM AND BED, THROAT PLATE AND BED SLIDE (FREE ARM)

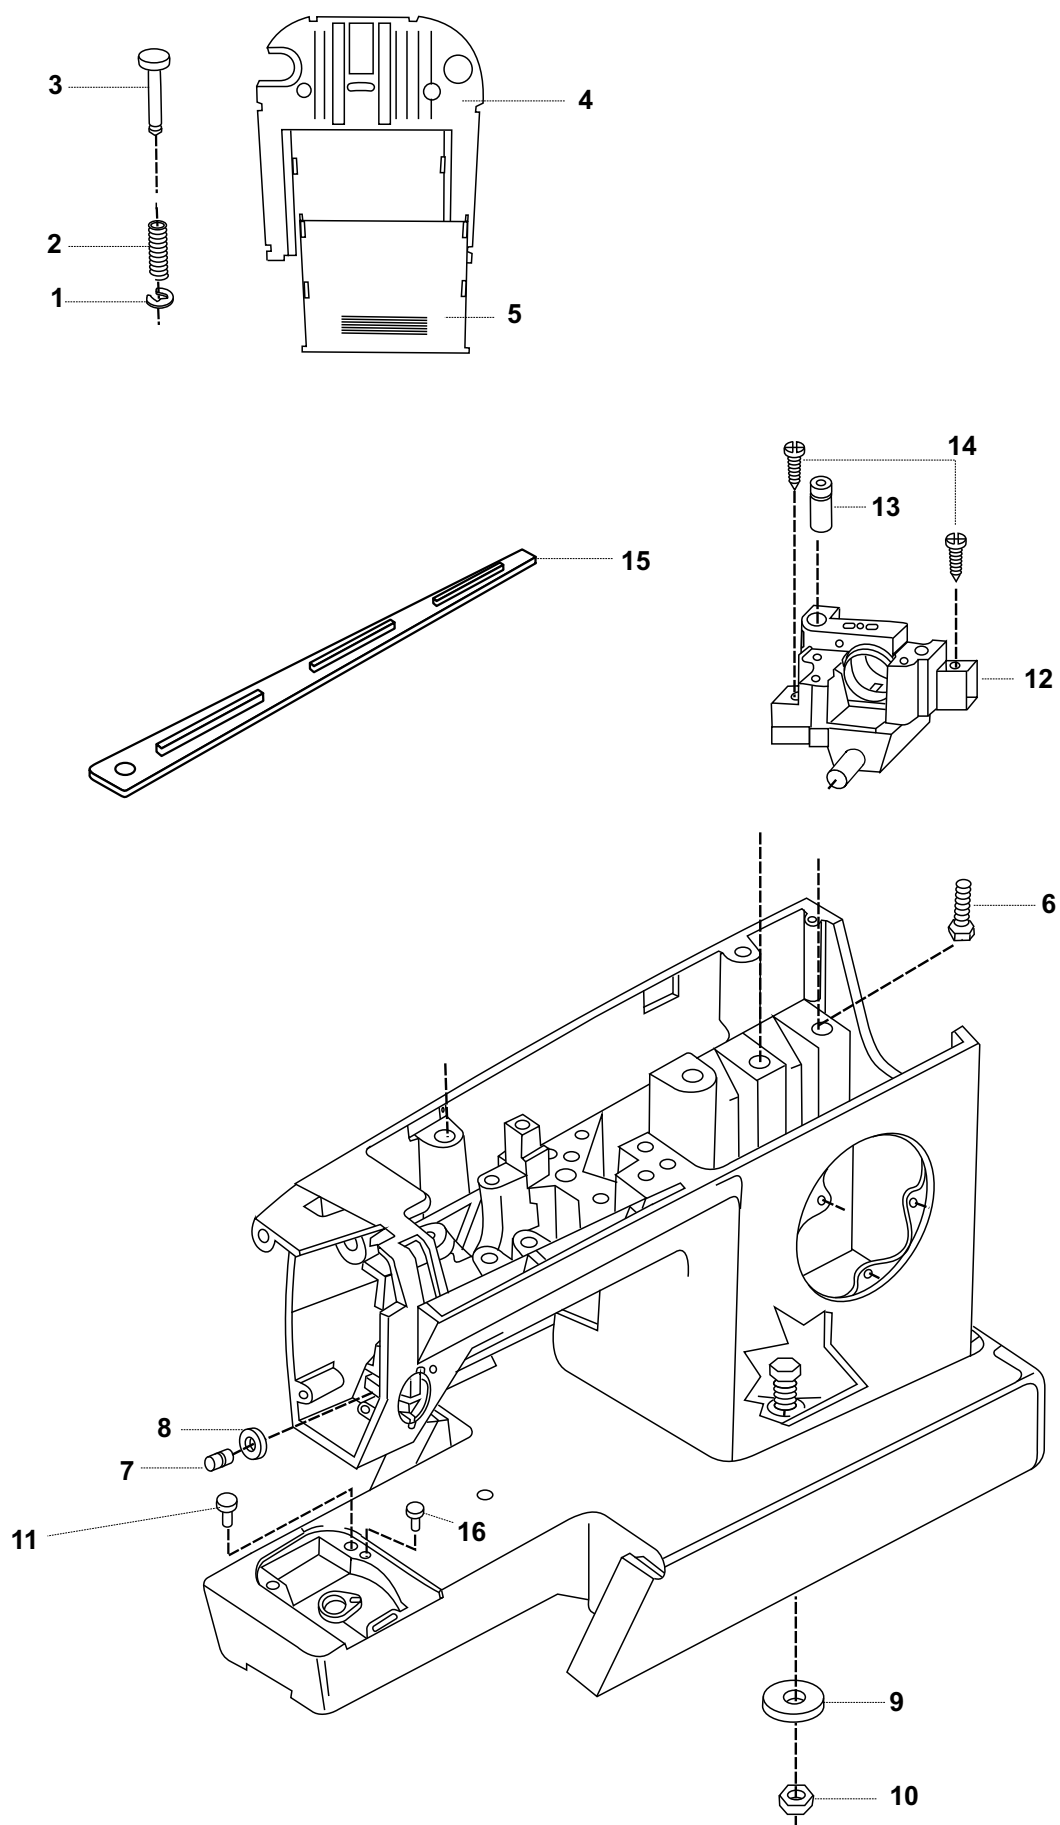


ARM AND BED, THROAT PLATE AND BED SLIDE (FREE ARM)

[illegible]

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

ARM AND BED, THROAT PLATE AND BED SLIDE (FLAT BED)

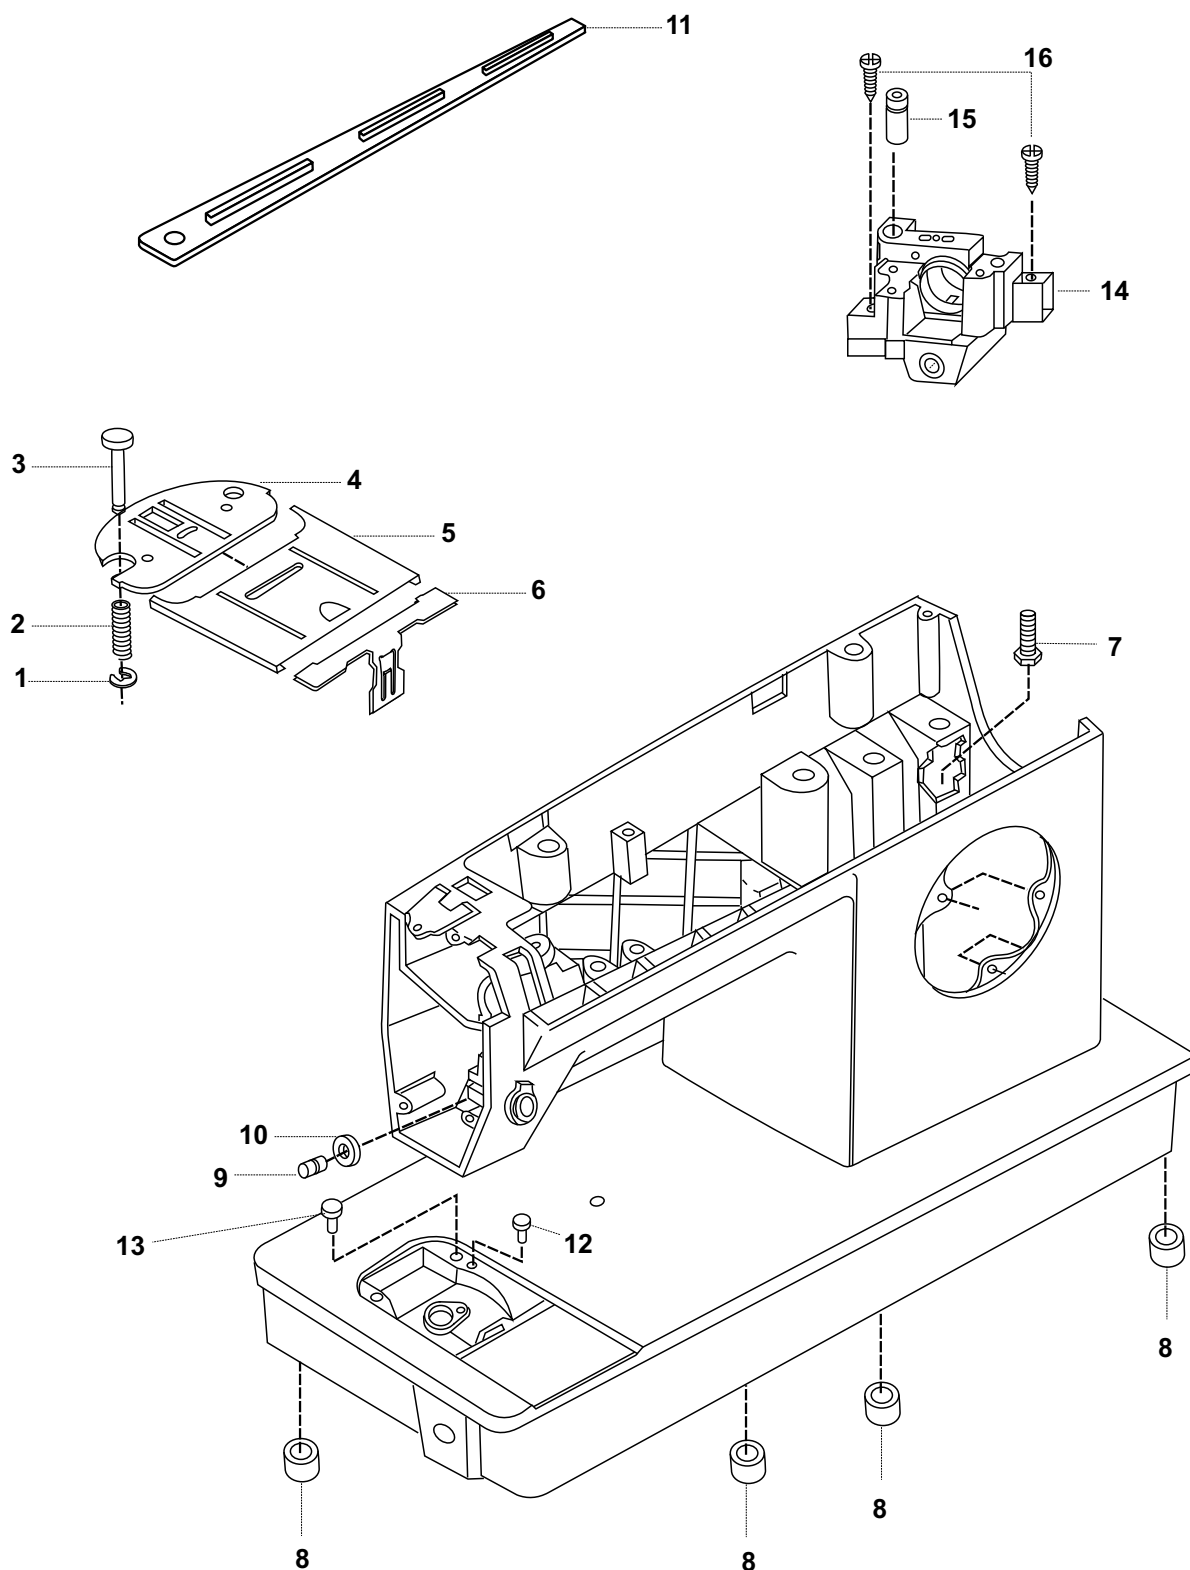


ARM AND BED, THROAT PLATE AND BED SLIDE (FLAT BED)

[illegible]

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.


ARM TOP COVER AND SHROUDER

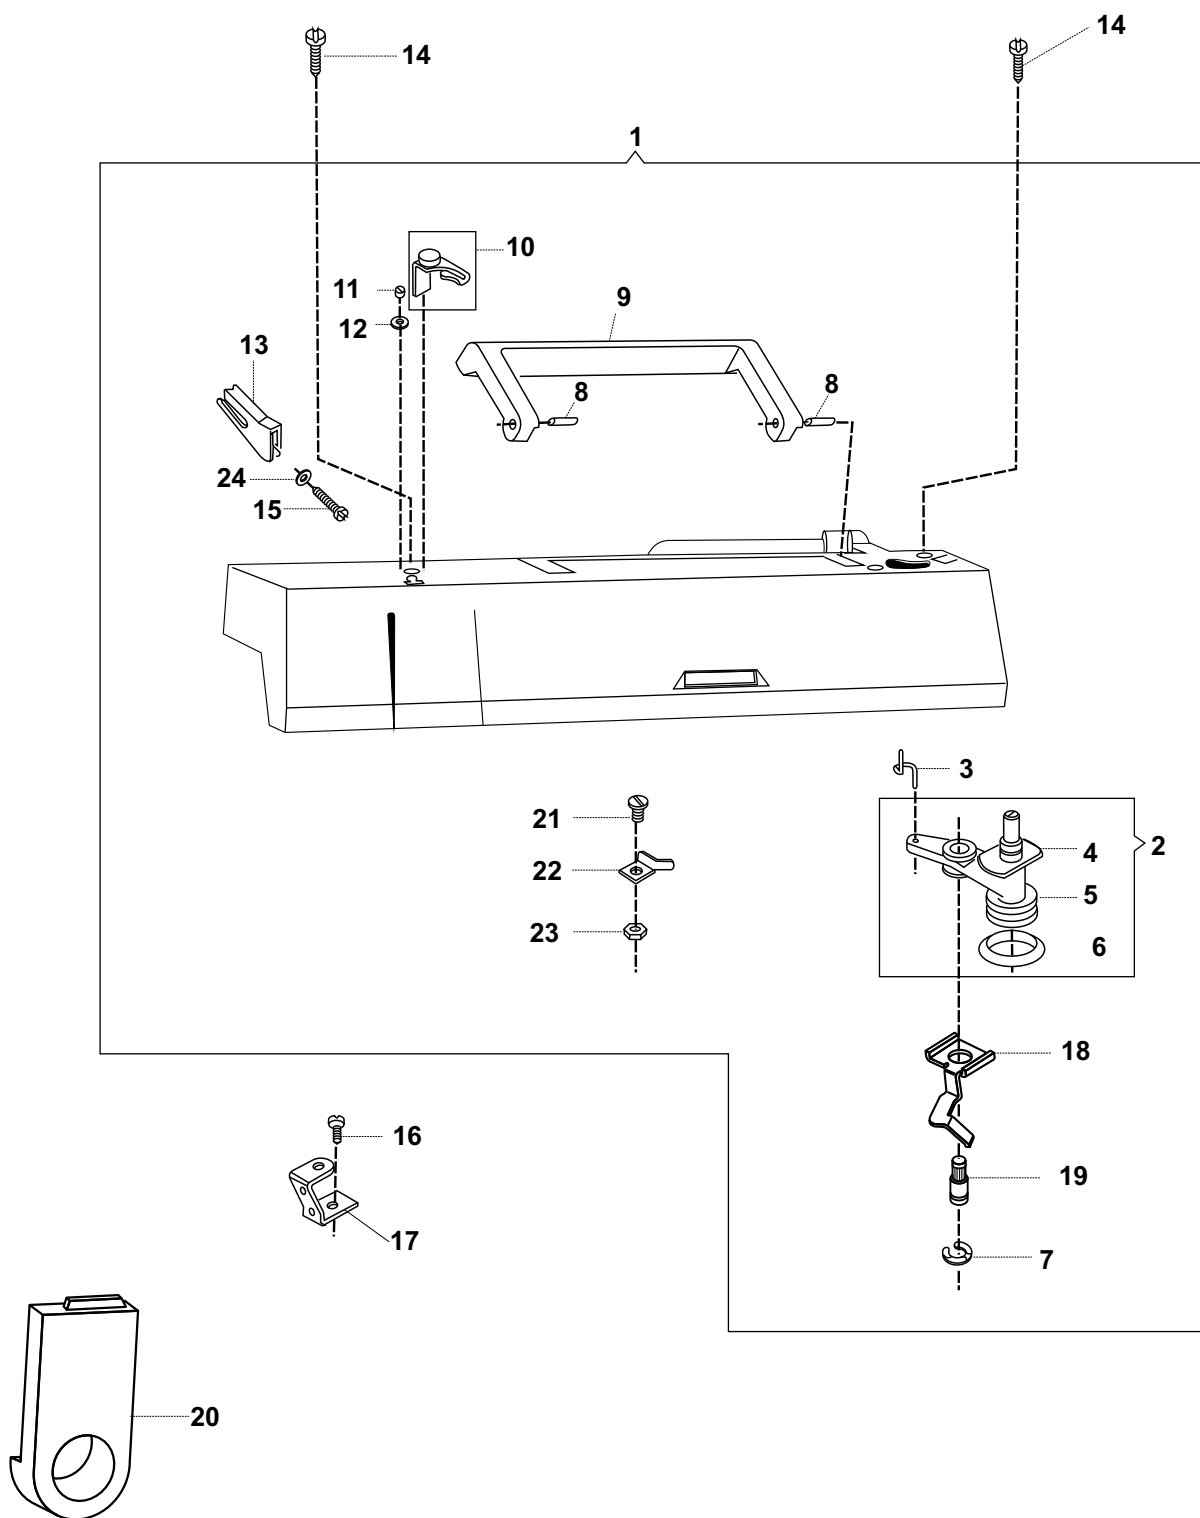

ARM TOP COVER AND SHROUDER

[illegible]

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

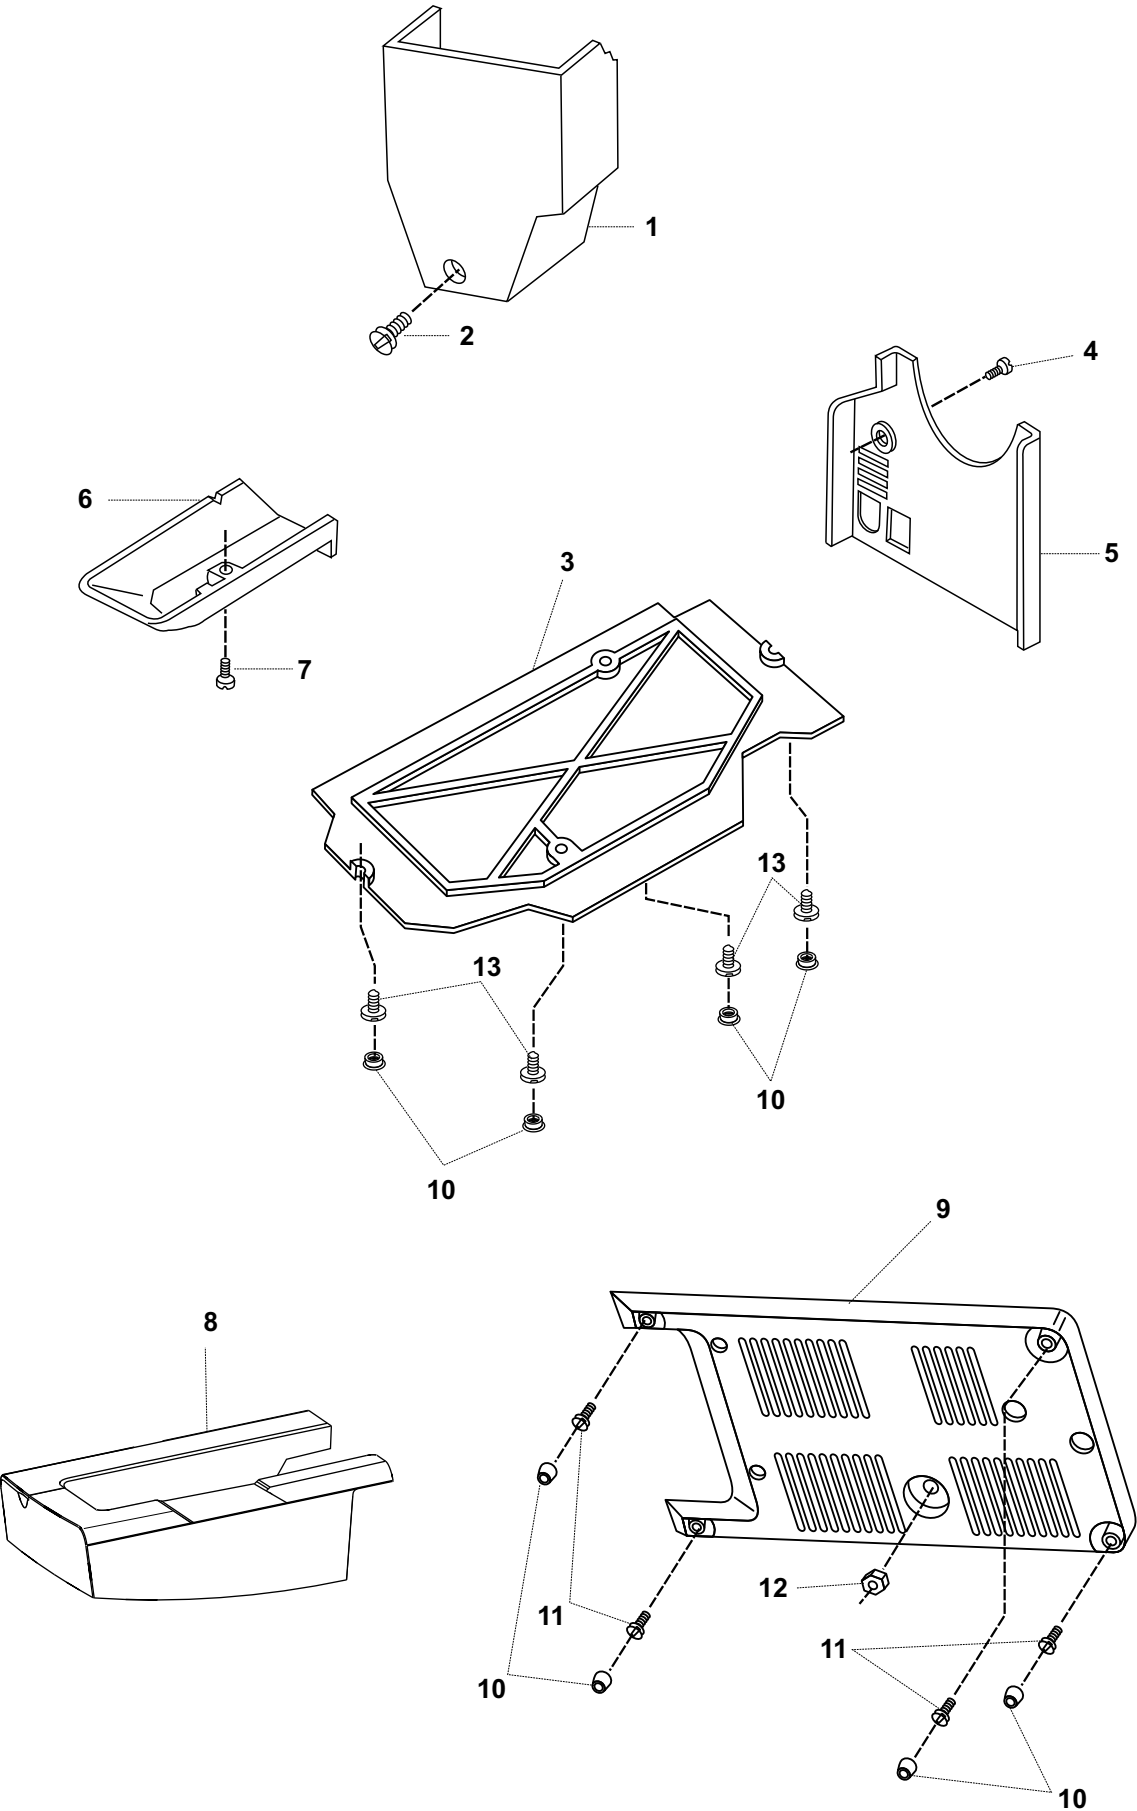


COVERS

ARM AND BED, THROAT PLATE AND BED SLIDE (FLAT BED)

[illegible]


When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

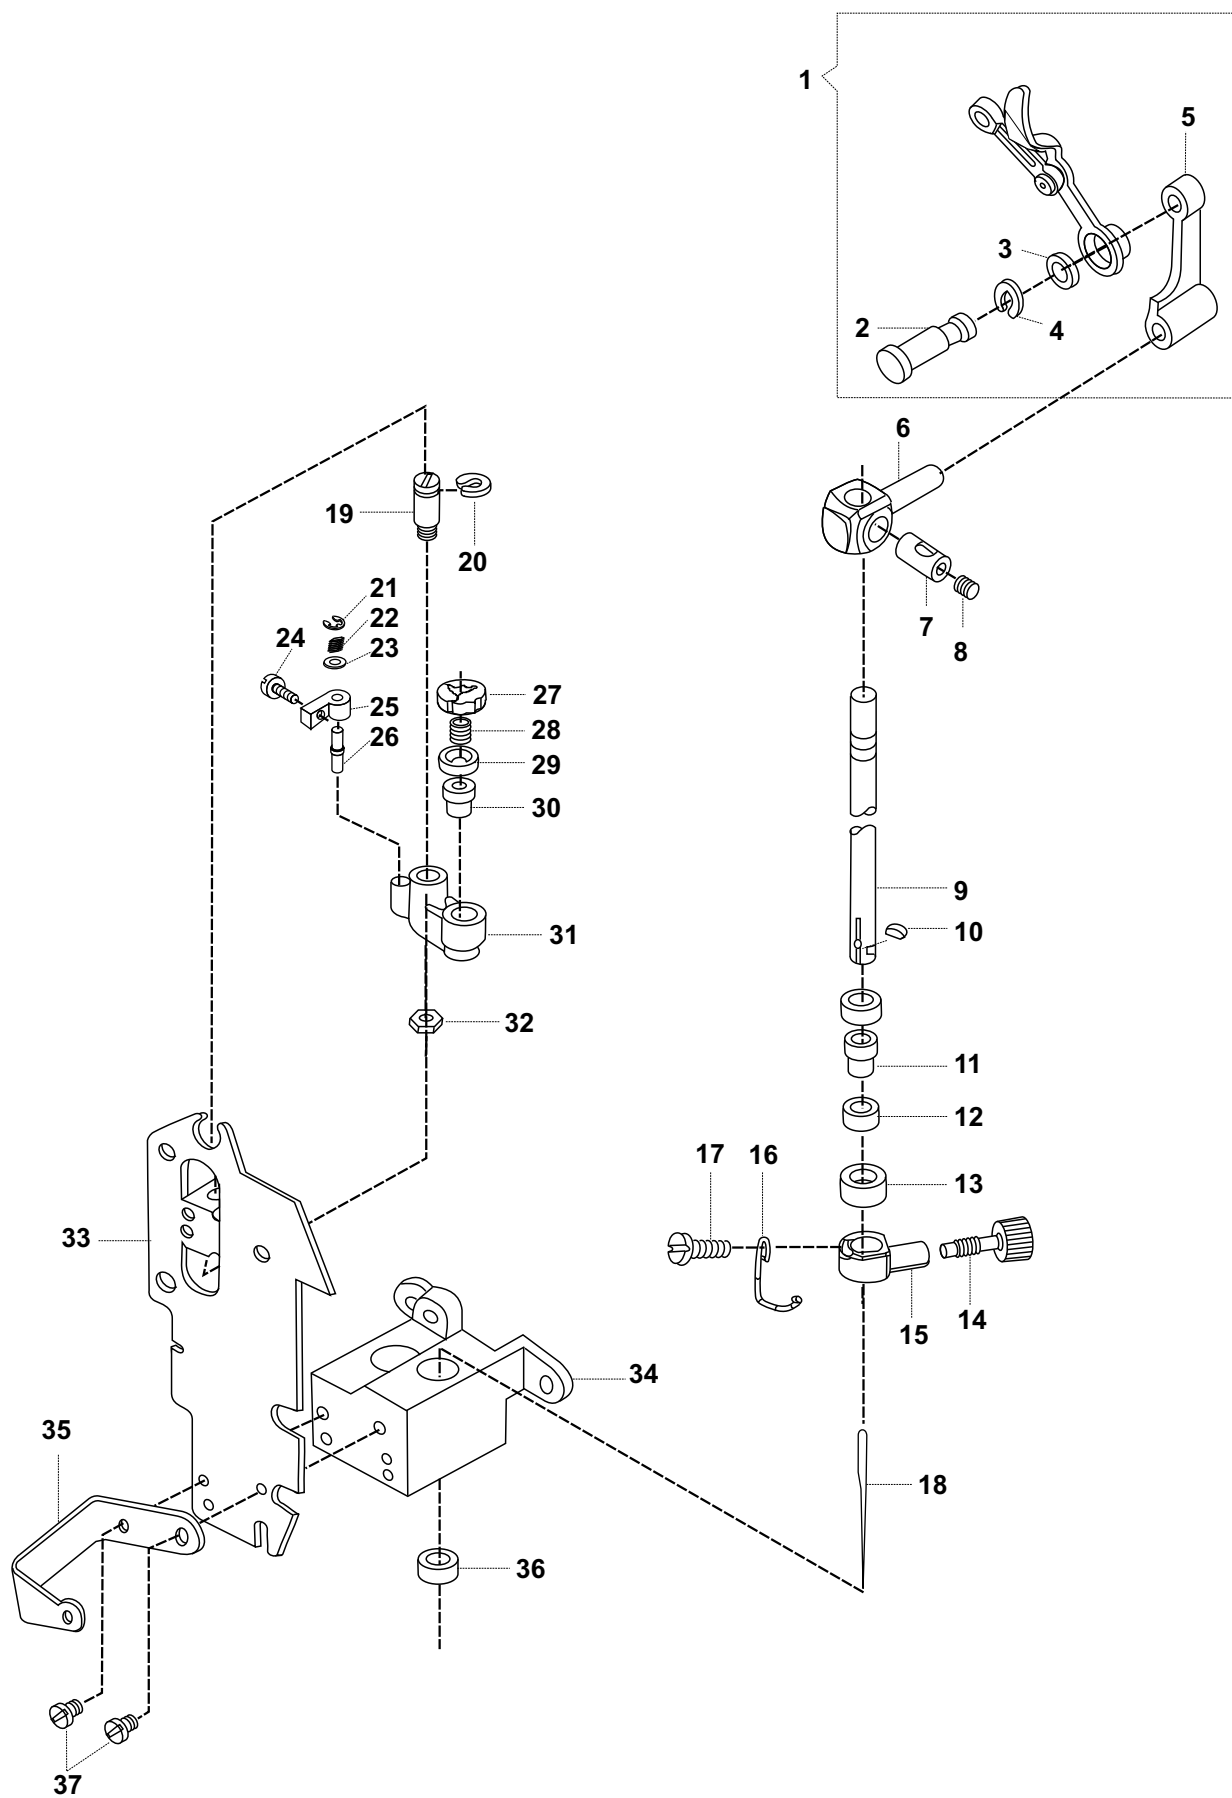

REF.	PARTS NUMBER	DESCRIPTION	2802	2808	2809	2810	2818	2852	2858	2859	2860	2868
1	445672-940	Thread take-up lever complete	●	●	●	●	●	●	●	●	●	●
2	358275-000	Thread take-up stud with retaining ring	●	●	●	●	●	●	●	●	●	●
3	358251-900	Thread take-up stud trust washer	●	●	●	●	●	●	●	●	●	●
4	445486-000	Thread take-up stud retaining ring	●	●	●	●	●	●	●	●	●	●
5	357431-000	Thread take-up lever link	●	●	●	●	●	●	●	●	●	●
6	353549-000	Needle bar connecting stud	●	●	●	●	●	●	●	●	●	●
7	37931-000	Needle bar connecting stud hinge pin	●	●	●	●	●	●	●	●	●	●
8	141916-833	Needle bar clamping screw	●	●	●	●	●	●	●	●	●	●
9	445793-000	Needle bar	●	●	●	●	●	●	●	●	●	●
10	37943-000	Needle bar gib	●	●	●	●	●	●	●	●	●	●
11	446355-001	Needle bar ball bushing (lower)	●	●	●	●	●	●	●	●	●	●
12	353379-000BUY	Needle bar ball bushing (lower) socket	●	●	●	●	●	●	●	●	●	●
13	446361-001	Needle bar ball bushing (lower) adjusting collar	●	●	●	●	●	●	●	●	●	●
14	355248-451	Needle thumb screw	●	●	●	●	●	●	●	●	●	●
15	357429-001	Needle clamp body	●	●	●	●	●	●	●	●	●	●
16	357421-001	Needle clamp thread guide	●	●	●	●	●	●	●	●	●	●
17	141920-455	Needle cl. body, nee. cl. thr. guide & nee. stop screw	●	●	●	●	●	●	●	●	●	●
18	204514-100	Needle 2045 size NBR 14	●	●	●	●	●	●	●	●	●	●
19	446359-000	Needle bar vibrating bracket hinge pin	●	●	●	●	●	●	●	●	●	●
20	445721-000	Needle bar vibrating bracket hinge pin retaining ring	●	●	●	●	●	●	●	●	●	●
21	179926-000	Needle bar driving arm hinge bra. hinge spr. ret. ring	●	●	●	●	●	●	●	●	●	●
22	357504-000	Needle bar driving arm hinge bra. hinge pin spring	●	●	●	●	●	●	●	●	●	●
23	446138-000	Needle bar driving arm hinge bra. hinge spr. washer	●	●	●	●	●	●	●	●	●	●
24	354826-451	Needle bar driving arm hinge bracket screw	●	●	●	●	●	●	●	●	●	●
25	357503-000	Needle bar driving arm hinge bracket	●	●	●	●	●	●	●	●	●	●
26	357502-000	Needle bar driving arm hinge bracket hinge pin	●	●	●	●	●	●	●	●	●	●
27	353522-001BUY	Needle bar ball bushing (upper) retaining ring	●	●	●	●	●	●	●	●	●	●
28	357616-000	Needle bar ball bushing (upper) socket spring	●	●	●	●	●	●	●	●	●	●
29	357615-000BUY	Needle bar ball bushing (upper) socket (lower)	●	●	●	●	●	●	●	●	●	●
30	446355-001	Needle bar ball bushing (upper)	●	●	●	●	●	●	●	●	●	●
31	353521-000	Needle bar vibrating bracket	●	●	●	●	●	●	●	●	●	●
32	357093-451	Needle bar vibrating bracket hinge pin nut	●	●	●	●	●	●	●	●	●	●
33	357358-000	Needle bar, presser bar & vibr. bracket housing plate	●	●	●	●	●	●	●	●	●	●
34	446350-901	Needle bar, presser bar & vibrating bracket housing	●	●	●	●	●	●	●	●	●	●
35	446360-900	Needle bar, presser bar & vibr. bra. housing support	●	●	●	●	●	●	●	●	●	●
36	44450-000	Needle bar ball bushing (lower) socket (upper)	●	●	●	●	●	●	●	●	●	●
37	113480-451	Needle bar, presser bar & vibr. bra. housing screw	●	●	●	●	●	●	●	●	●	●

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

PRESSER BAR

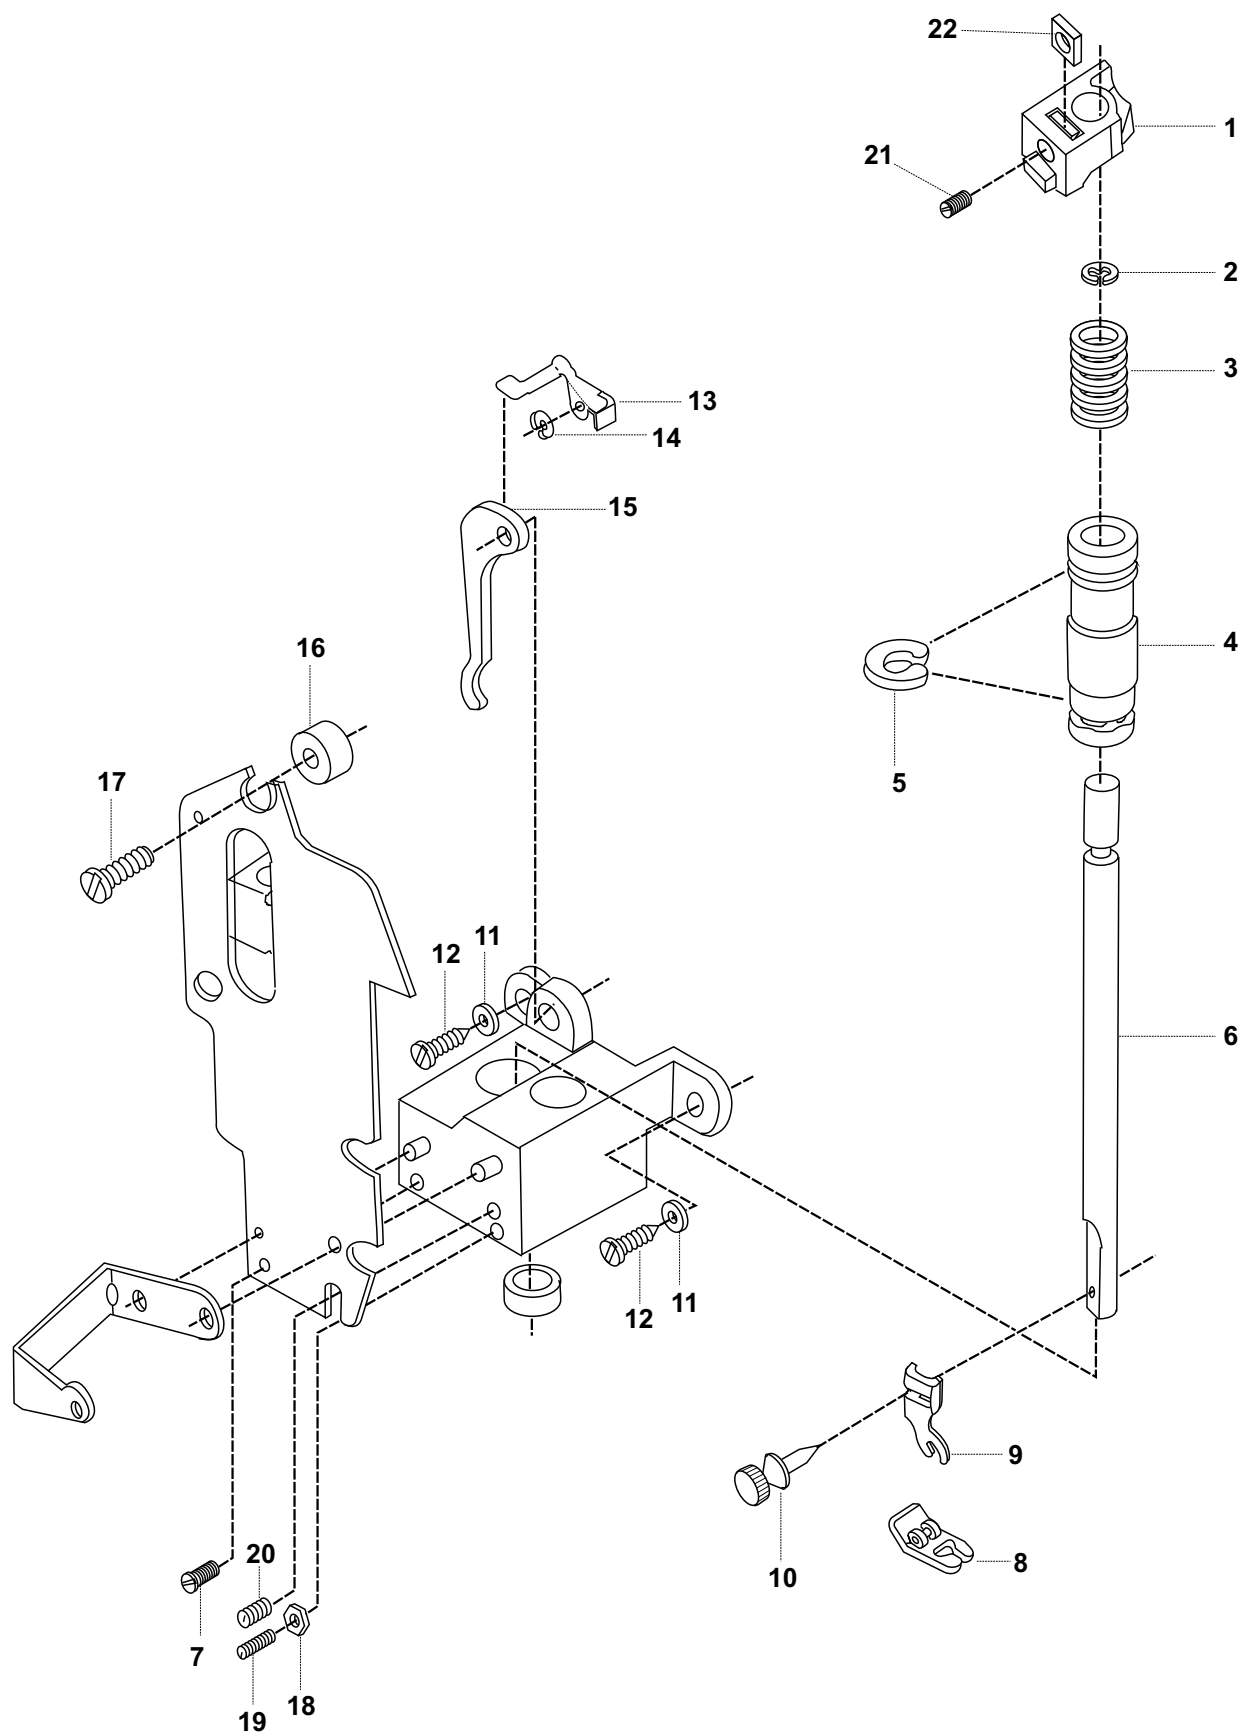


PRESSER BAR

[illegible]

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

ARM SHAFT DRIVE

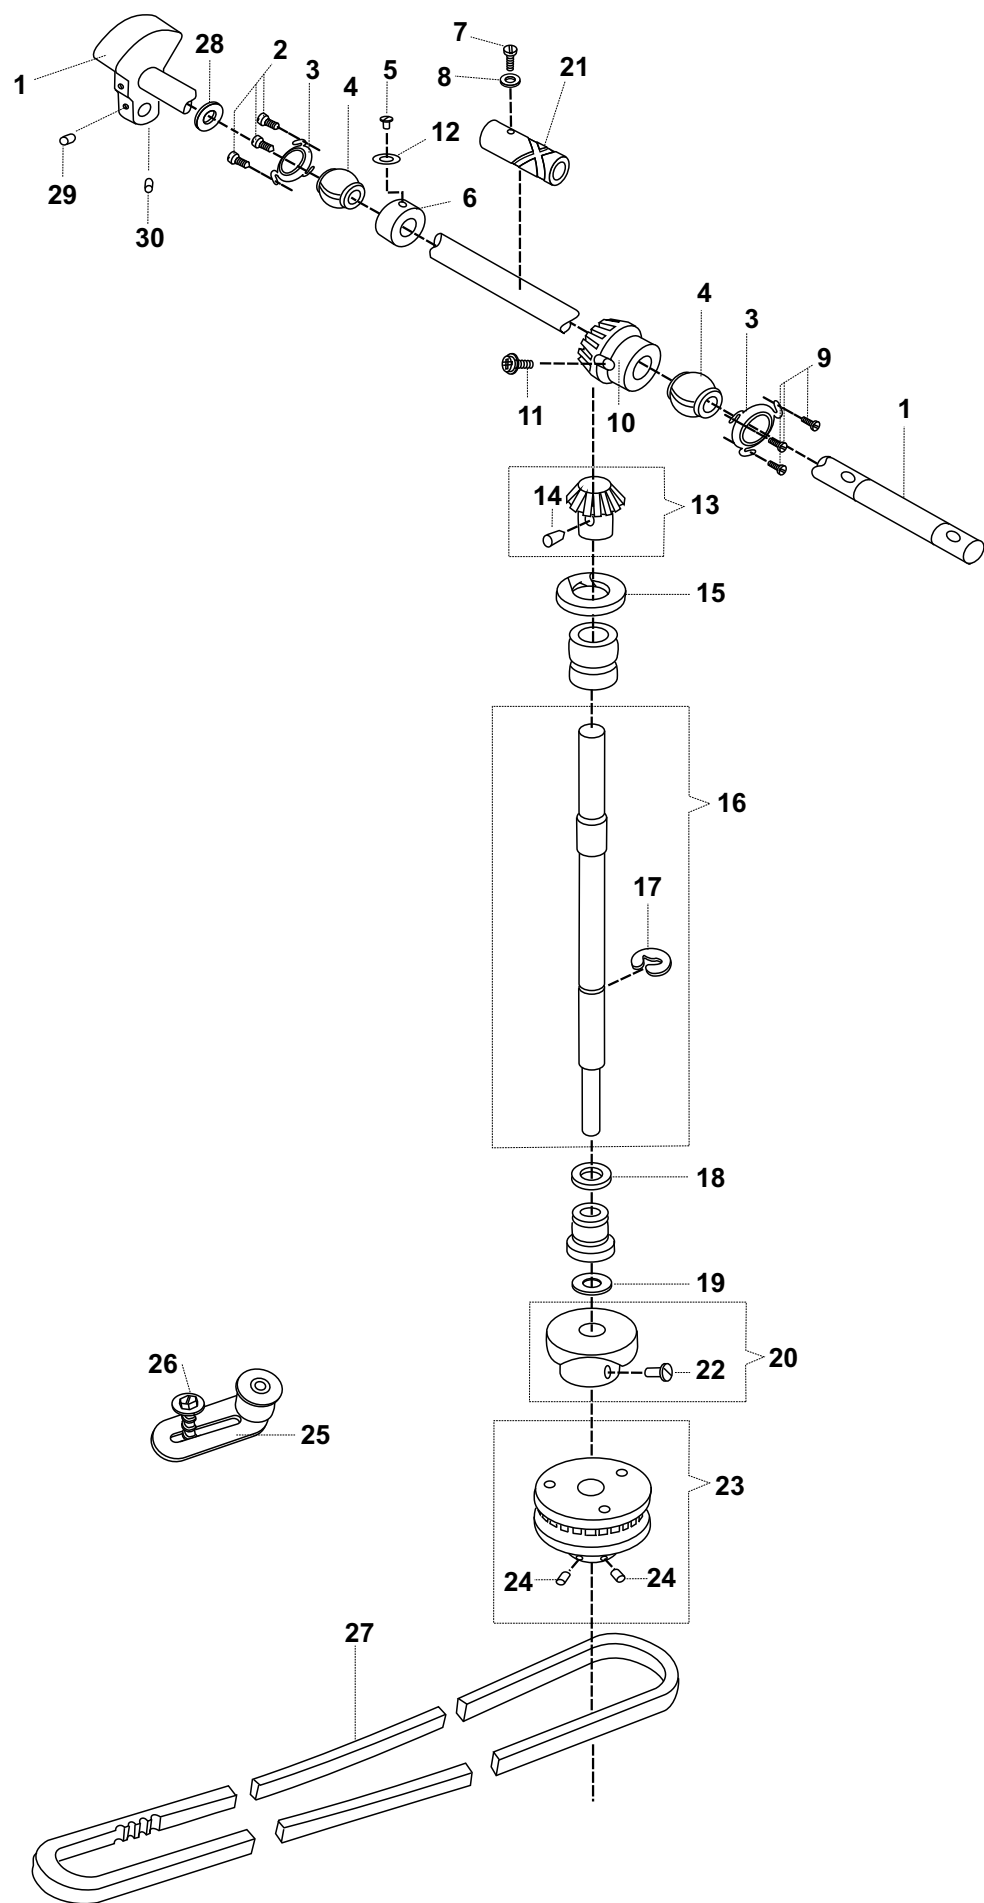


ARM SHAFT DRIVE

REF.	PARTS NUMBER	DESCRIPTION	2802	2808	2809	2810	2818	2852	2858	2859	2860	2868
1	358444-000	Arm shaft complete	●					●				
2	113455-001	Arm shaft bushing (front) retaining bracket screw	●					●				
3	446385-000	Arm shaft bushing (front) retaining bracket	●					●				
4	446384-001	Arm shaft bushing (front)	●					●				
5	360106-900	Arm shaft (horizontal) retaining collar screw	●					●				
6	358439-900	Arm shaft (horizontal) retaining collar	●					●				
7	358343-452	Arm shaft zigzag cam screw	●					●				
8	358372-451	Arm shaft zigzag cam washer	●					●				
9	358499-451	Arm shaft bushing (rear) retaining bracket screw	●					●				
10	358371-900	Arm shaft (hor.) bevel gear & feed lifting eccentric	●					●				
11	358484-451	Arm shaft (hor.) bevel gear & feed lifting ecc. screw	●					●				
12	445808-000	Arm shaft (horizontal) collar washer	●					●				
13	358429-000	Arm shaft (upright) bevel gear	●					●				
14	354105-833	Arm shaft (upright) bevel gear set screw	●					●				
15	356819-000	Arm shaft (upright) felt washer	●					●				
16	179952-002	Arm shaft (upright) assembly	●					●				
17	353215-000	Arm shaft (upright) retaining ring	●					●				
18	353394-000BUY	Arm shaft (upright) retaining ring washer	●					●				
19	319826-000BUY	Arm shaft (upright) belt drive pulley washer	●					●				
20	446228-000	Feed lifting cam complete	●					●				
21	358432-900	Arm shaft zigzag cam	●					●				
22	544118-000	Feed lifting cam set screw	●					●				
23	353438-001	Arm shaft (upright) belt drive pulley assy. complete	●					●				
24	354906-451	Arm shaft (upright) belt drive pulley set screw	●					●				
25	358224-001	Rotating hook drive belt tension adjuster	●					●				
26	358287-451	Rotating hook drive belt tensioner screw	●					●				
27	446237-000	Belt (rotating hook drive)	●					●				
28	319764-001	Arm shaft bushing (front) retaining bracket washer	●					●				
29	354105-833	Needle Bar Crank Position Set Screw	●					●				
30	141916-833	Needle Bar Crank Stud Mounting Screw	●					●				

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

ARM SHAFT DRIVE

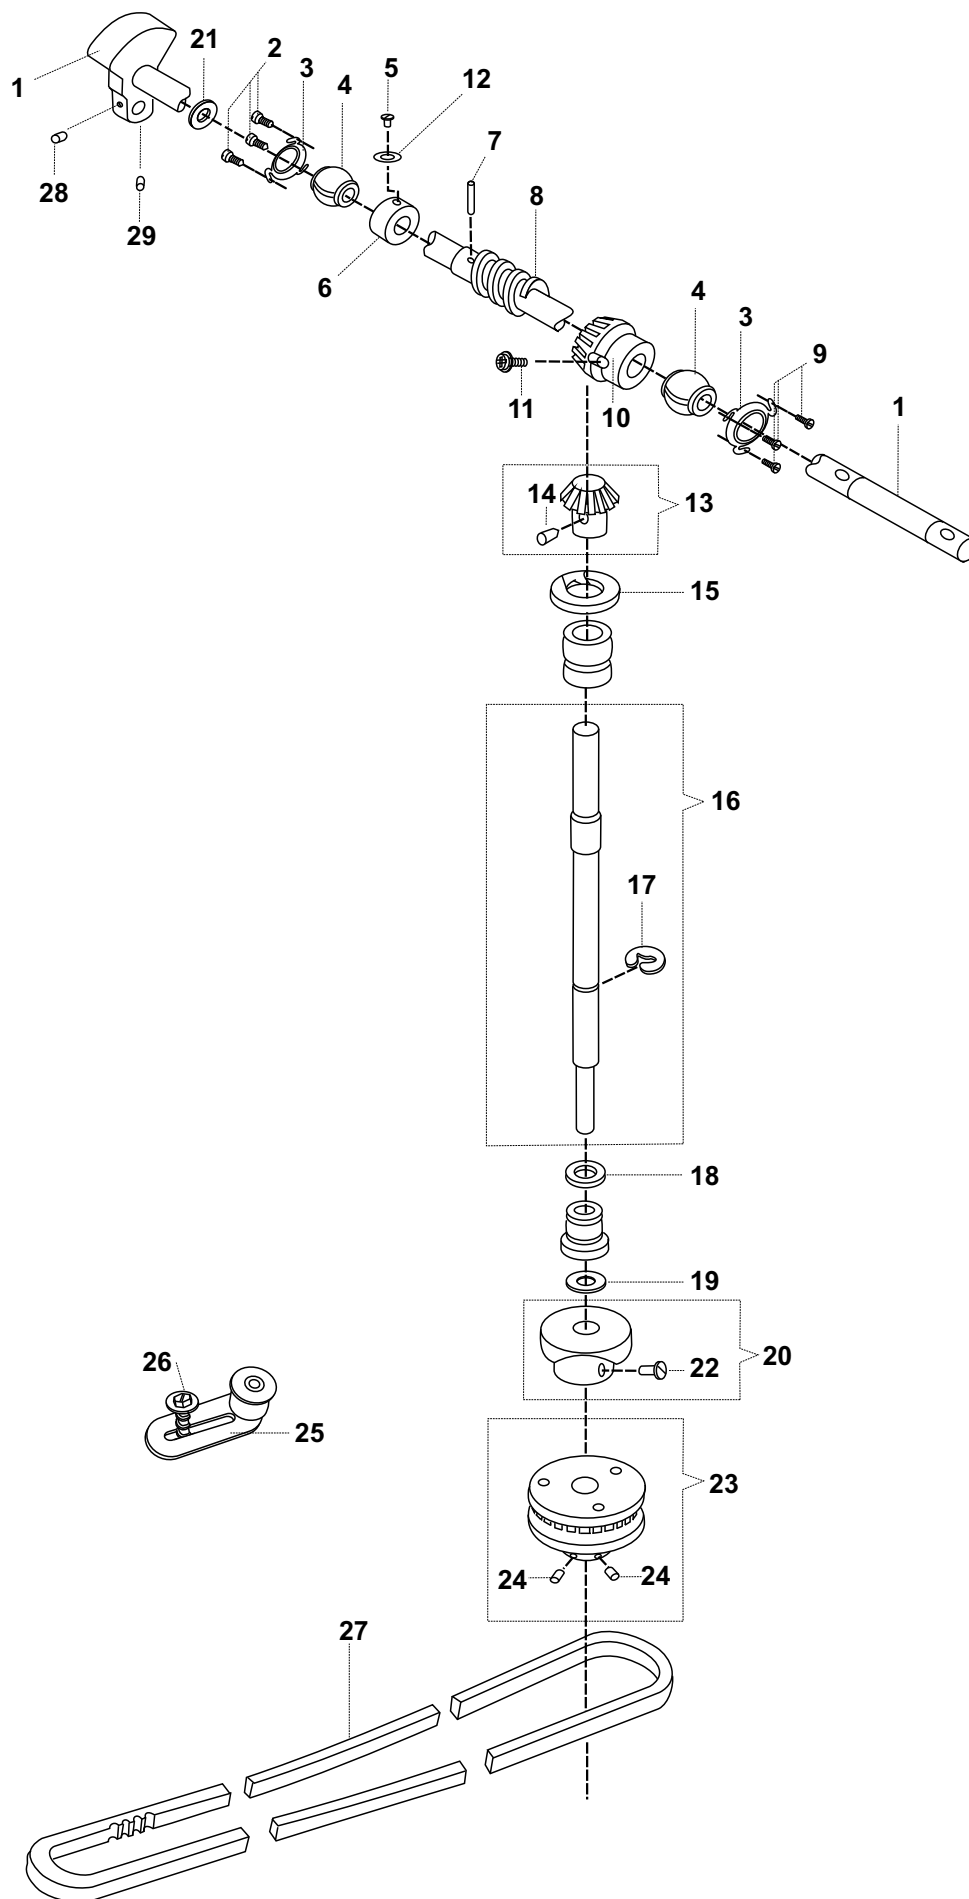


ARM SHAFT DRIVE

REF.	PARTS NUMBER	DESCRIPTION	2802	2808	2809	2810	2818	2852	2858	2859	2860	2868
1	358330-901	Arm shaft complete		●	●	●	●		●	●	●	●
2	113455-001	Arm shaft bushing (front) retaining bracket screw		●	●	●	●		●	●	●	●
3	446385-000	Arm shaft bushing (front) retaining bracket		●	●	●	●		●	●	●	●
4	446384-001	Arm shaft bushing (front)		●	●	●	●		●	●	●	●
5	360106-900	Arm shaft (horizontal) retaining collar screw		●	●	●	●		●	●	●	●
6	358439-900	Arm shaft (horizontal) retaining collar		●	●	●	●		●	●	●	●
7	358341-004	Arm shaft zigzag cam conic pin		●	●	●	●		●	●	●	●
8	358337-900	Arm shaft (horizontal) drive gear		●	●	●	●		●	●	●	●
9	358499-451	Arm shaft bushing (rear) retaining bracket screw		●	●	●	●		●	●	●	●
10	358371-900	Arm shaft (hor.) bevel gear & feed lifting eccentric		●	●	●	●		●	●	●	●
11	358484-451	Arm shaft (hor.) bevel gear & feed lifting ecc. screw		●	●	●	●		●	●	●	●
12	445808-000	Arm shaft (horizontal) collar washer		●	●	●	●		●	●	●	●
13	358429-000	Arm shaft (upright) bevel gear		●	●	●	●		●	●	●	●
14	354105-833	Arm shaft (upright) bevel gear set screw		●	●	●	●		●	●	●	●
15	356819-000	Arm shaft (upright) felt washer		●	●	●	●		●	●	●	●
16	179952-002BUY	Arm shaft (upright) assembly		●	●	●	●		●	●	●	●
17	353215-000	Arm shaft (upright) retaining ring		●	●	●	●		●	●	●	●
18	353394-000BUY	Arm shaft (upright) retaining ring washer		●	●	●	●		●	●	●	●
19	319826-000BUY	Arm shaft (upright) belt drive pulley washer		●	●	●	●		●	●	●	●
20	446228-000	Feed lifting cam complete		●	●	●	●		●	●	●	●
21	319764-001	Arm shaft bushing (front) retaining bracket washer		●	●	●	●		●	●	●	●
22	544118-000	Feed lifting cam set screw		●	●	●	●		●	●	●	●
23	353438-001	Arm shaft (upright) belt drive pulley assy. complete		●	●	●	●		●	●	●	●
24	354906-451	Arm shaft (upright) belt drive pulley set screw		●	●	●	●		●	●	●	●
25	358224-001	Rotating hook drive belt tension adjuster		●	●	●	●		●	●	●	●
26	358287-451	Rotating hook drive belt tensioner screw		●	●	●	●		●	●	●	●
27	446237-000	Belt (rotating hook drive)		●	●	●	●		●	●	●	●
28	354105-833	Needle Bar Crank Position Set Screw		●	●	●	●		●	●	●	●
29	141916-833	Needle Bar Crank Stud Mounting Screw		●	●	●	●		●	●	●	●

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

HAND WHEEL

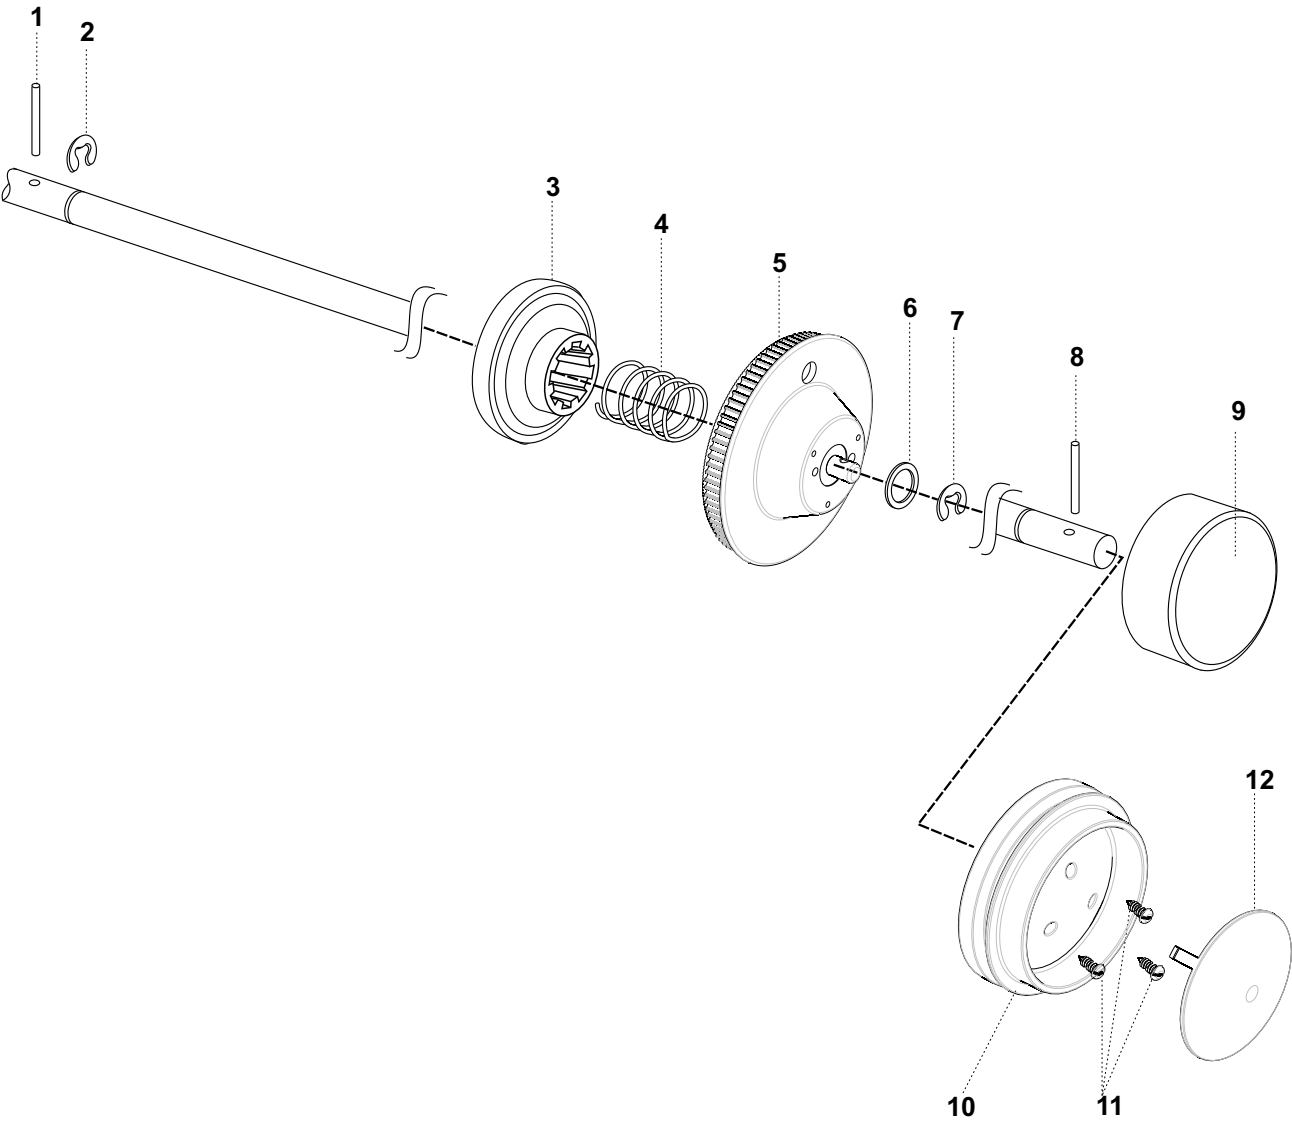


HAND WHEEL

[illegible]

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

TENSION MECHANISM

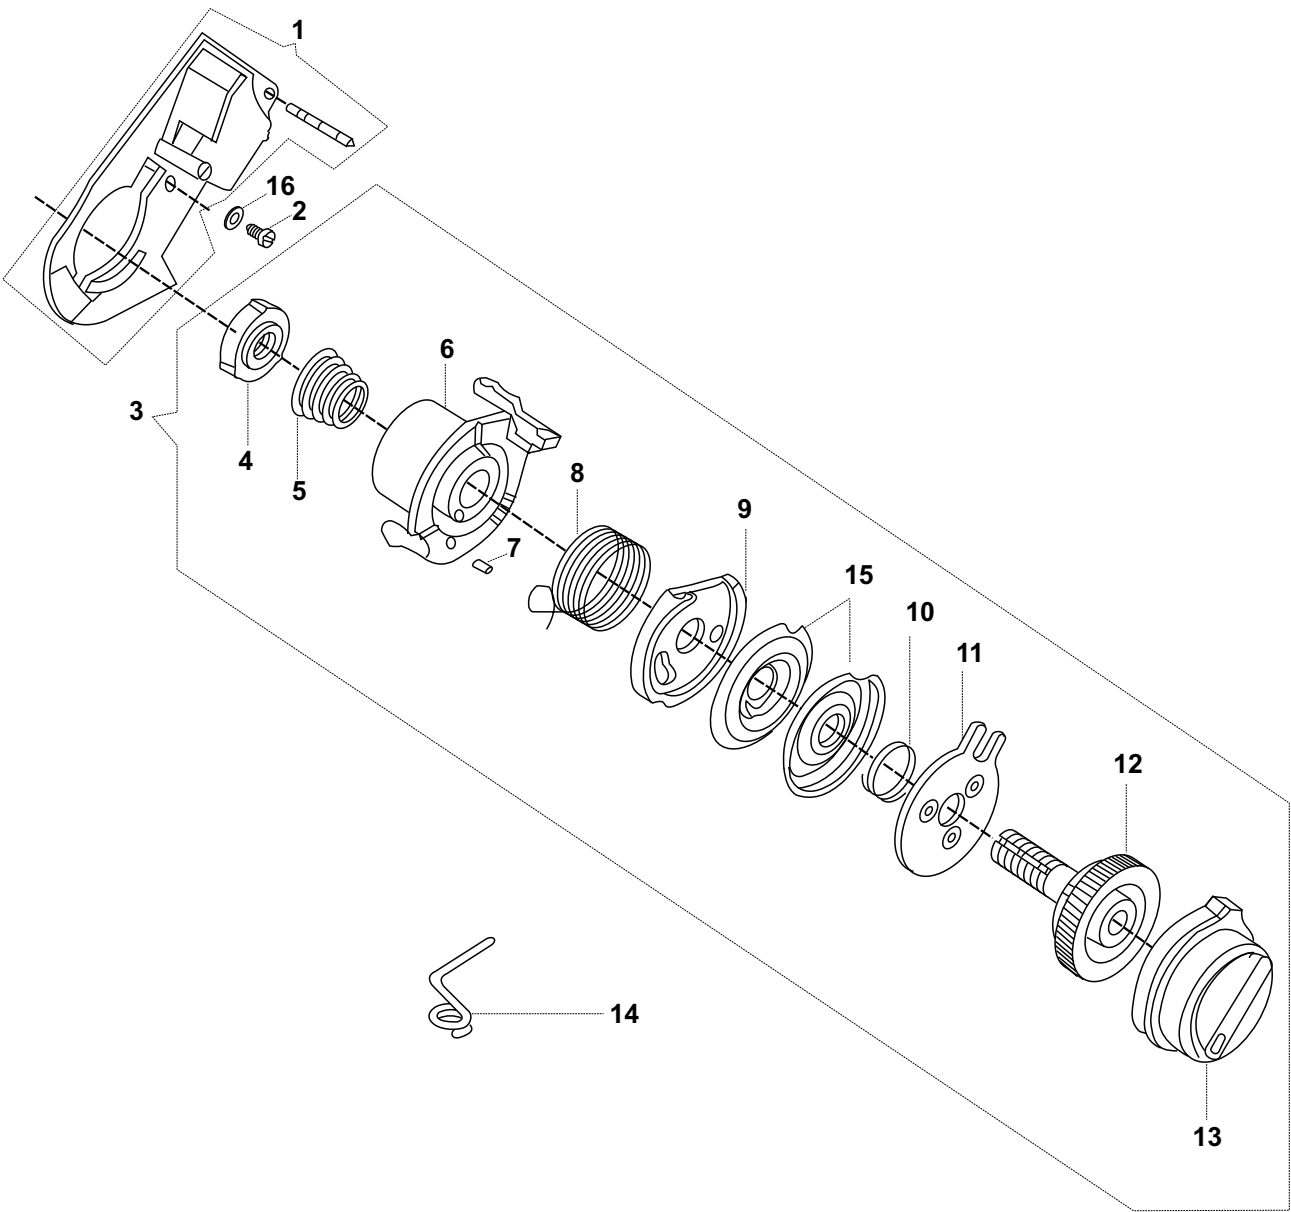


TENSION MECHANISM

[illegible]

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.




HOOK SYSTEM

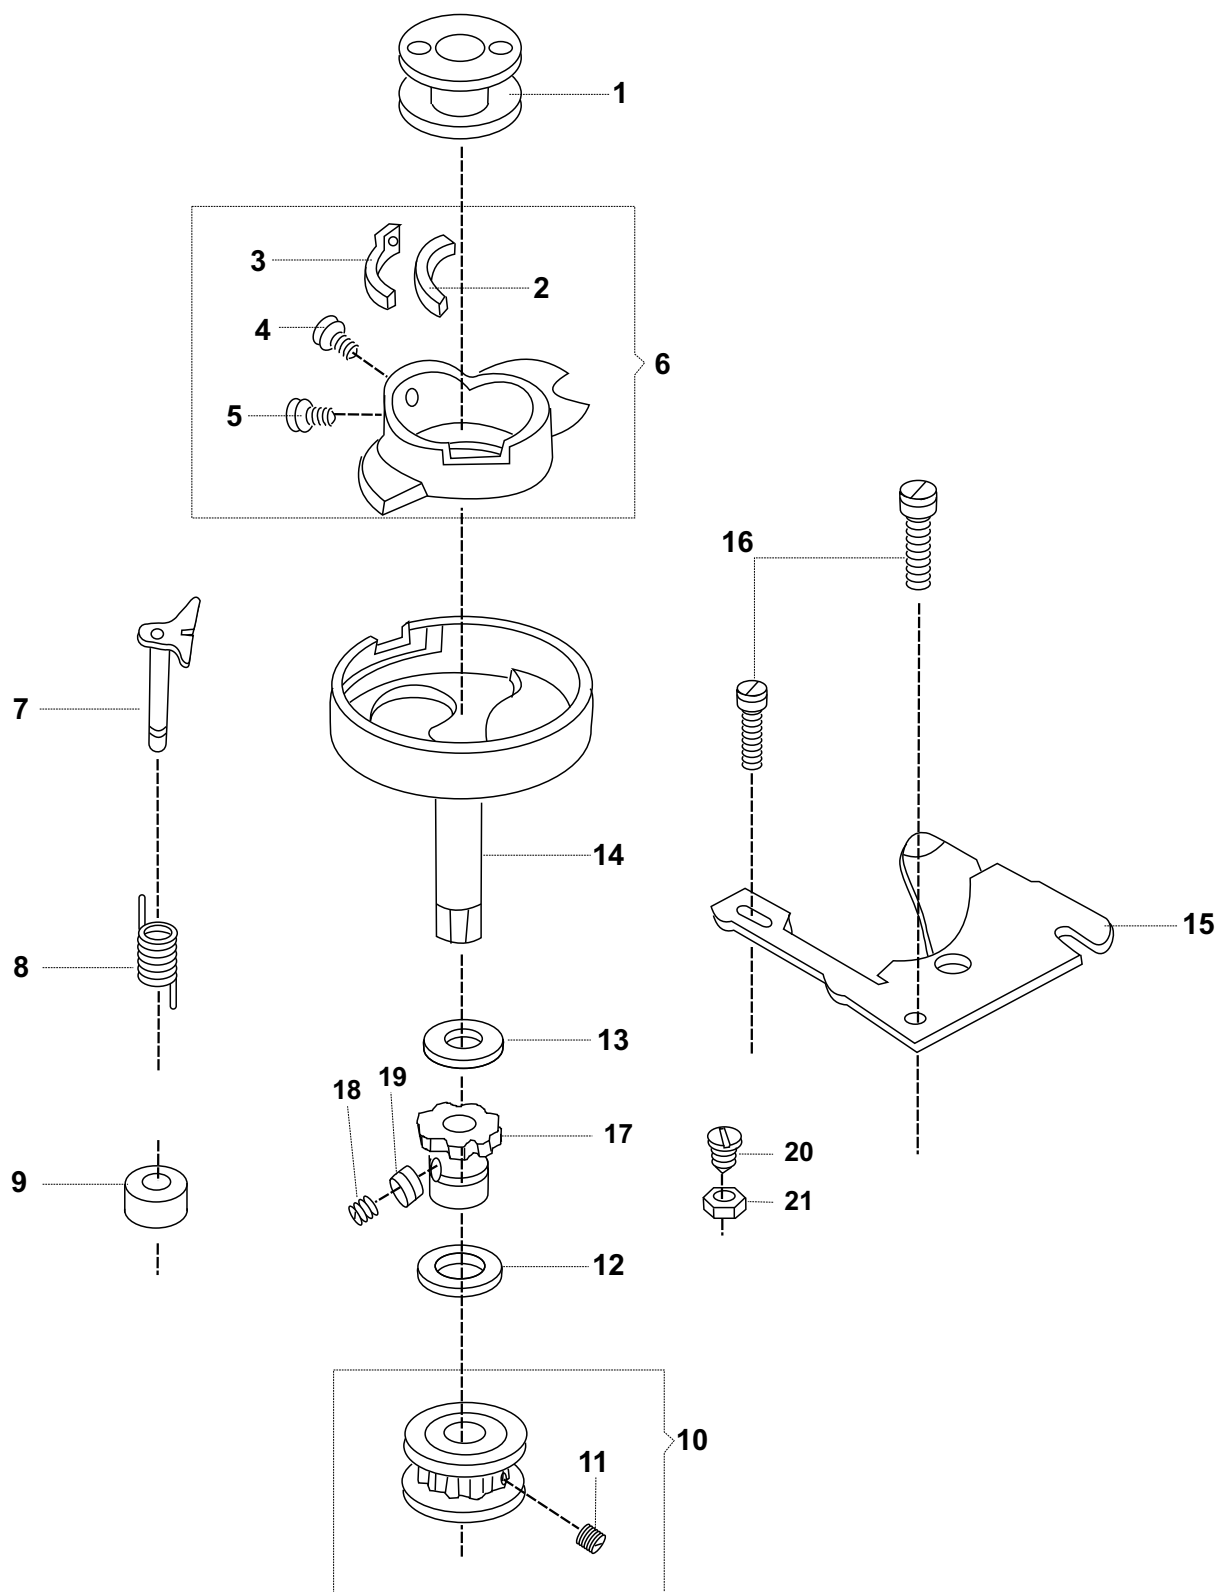




HOOK SYSTEM

[illegible]

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

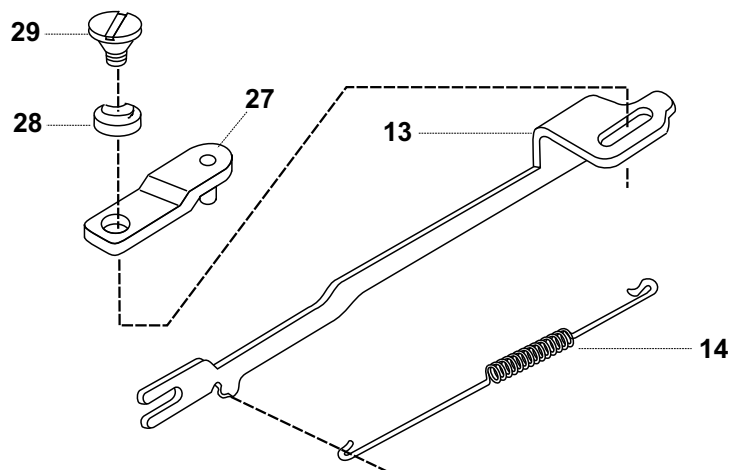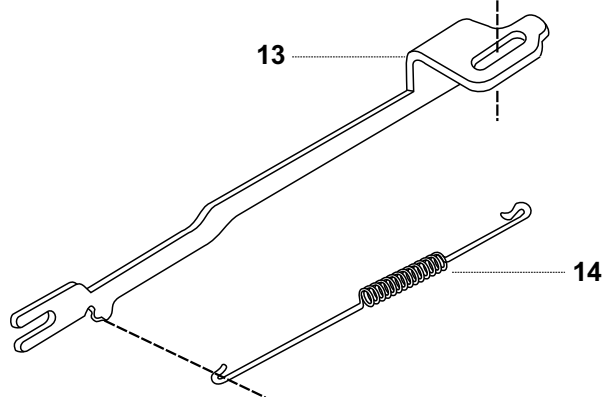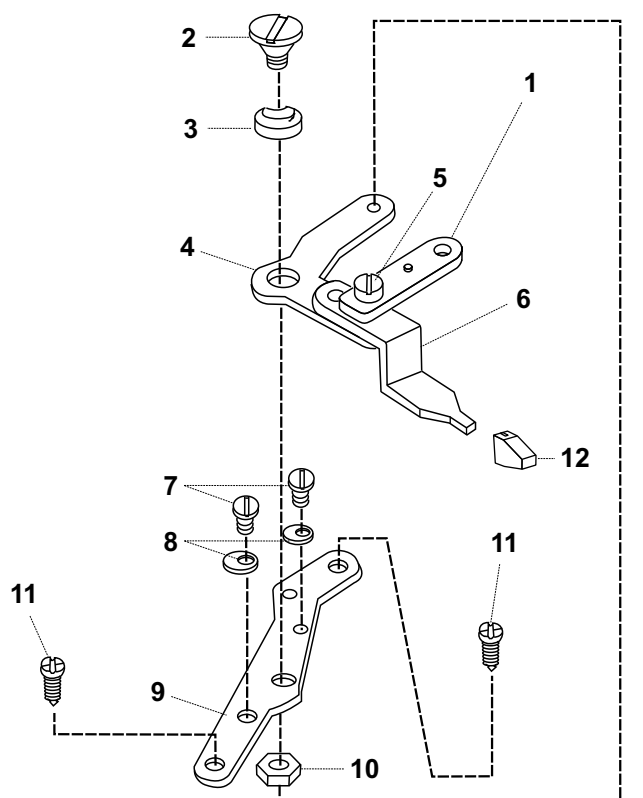

ONLY 2802/2852

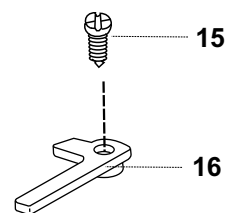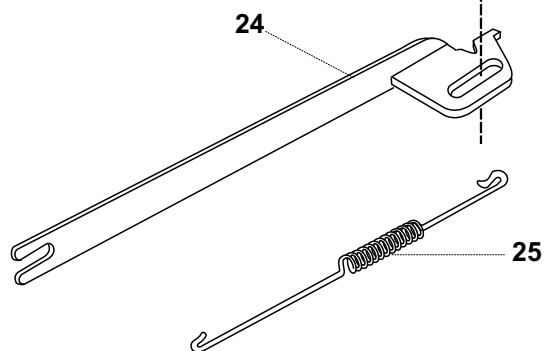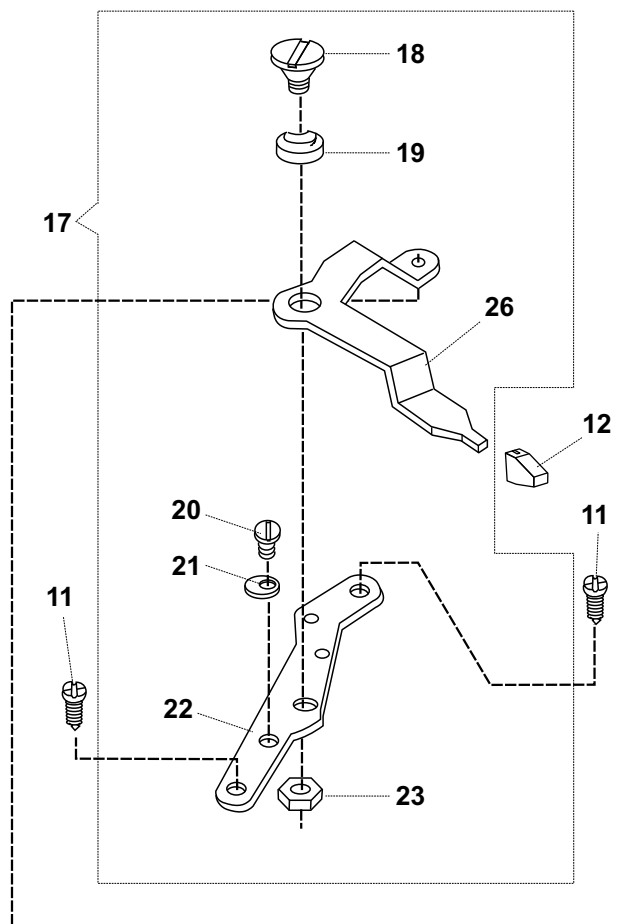


BIGHT AMPLITUDE

REF.	PARTS NUMBER	DESCRIPTION	2802	2808	2809	2810	2818	2852	2858	2859	2860	2868
1	44556-000	Bight amplitude control extension lever				●	●				●	●
2	354825-451	Bight amplitude control lever screw			●	●	●			●	●	●
3	49204-000	Bight amplitude control lever locker washer			●	●	●			●	●	●
4	37246-000	Bight amplitude control lever control lever			●	●	●			●	●	●
5	139866-451	Bight amplitude control lever control lever set screw				●	●				●	●
5	141913-451	Bight amplitude control lever control lever set screw			●					●		
6	356061-000	Bight amplitude control lever sub-assembly			●	●	●			●	●	●
7	141913-451	Bight amplitude control lever link stop screw			●	●	●			●	●	●
8	446904-000	Bight amplitude control lever link stop			●	●	●			●	●	●
9	531793-000	Bight amplitude control lever support			●	●	●			●	●	●
10	54591-451	Bight amplitude control lever nut			●	●	●			●	●	●
11	113455-001	Bight amplitude control lever mounting bracket screw	●		●	●	●	●		●	●	●
12	356204-453	Bight amplitude control lever knob	●		●	●	●	●		●	●	●
13	37933-002	Needle bar driving arm		●	●	●	●		●	●	●	●
14	357976-900	Needle bar driving arm tension spring			●	●	●			●	●	●
15	358499-451	Light lead shield & n. b. dr. arm t. spr. m. plate screw	●	●	●	●	●	●	●	●	●	●
16	445780-000	Light lead shield & n. b. dr. arm ten. spr. mount. plate	●	●	●	●	●	●	●	●	●	●
17	358445-000	Bight amplitude control lever mounting bra. complete	●					●				
18	354825-451	Bight amplitude control lever mounting bracket screw	●					●				
19	49204-000	Bight amp. control lever mount. bra. locker washer	●					●				
20	141913-451	Bight amplitude control lever link stop screw	●					●				
21	446904-000	Bight amplitude control lever link stop	●					●				
22	531793-000	Bight amplitude control lever support	●					●				
23	54591-451	Bight amplitude control lever nut	●					●				
24	358434-900	Needle bar driving arm	●					●				
25	358239-900	Needle bar driving arm tension spring	●	●				●	●			
26	358431-000	Bight amplitude control lever mounting bracket	●					●				
27	358281-000	Needle bar driving arm guide bracket		●								
28	353375-451	Needle bar driving arm guide bracket screw washer		●								
29	113455-001	Needle bar driving arm guide bracket set screw		●								

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.


DRIVING ARM SLIDE AND PATTERN SELECTOR DIAL PIN

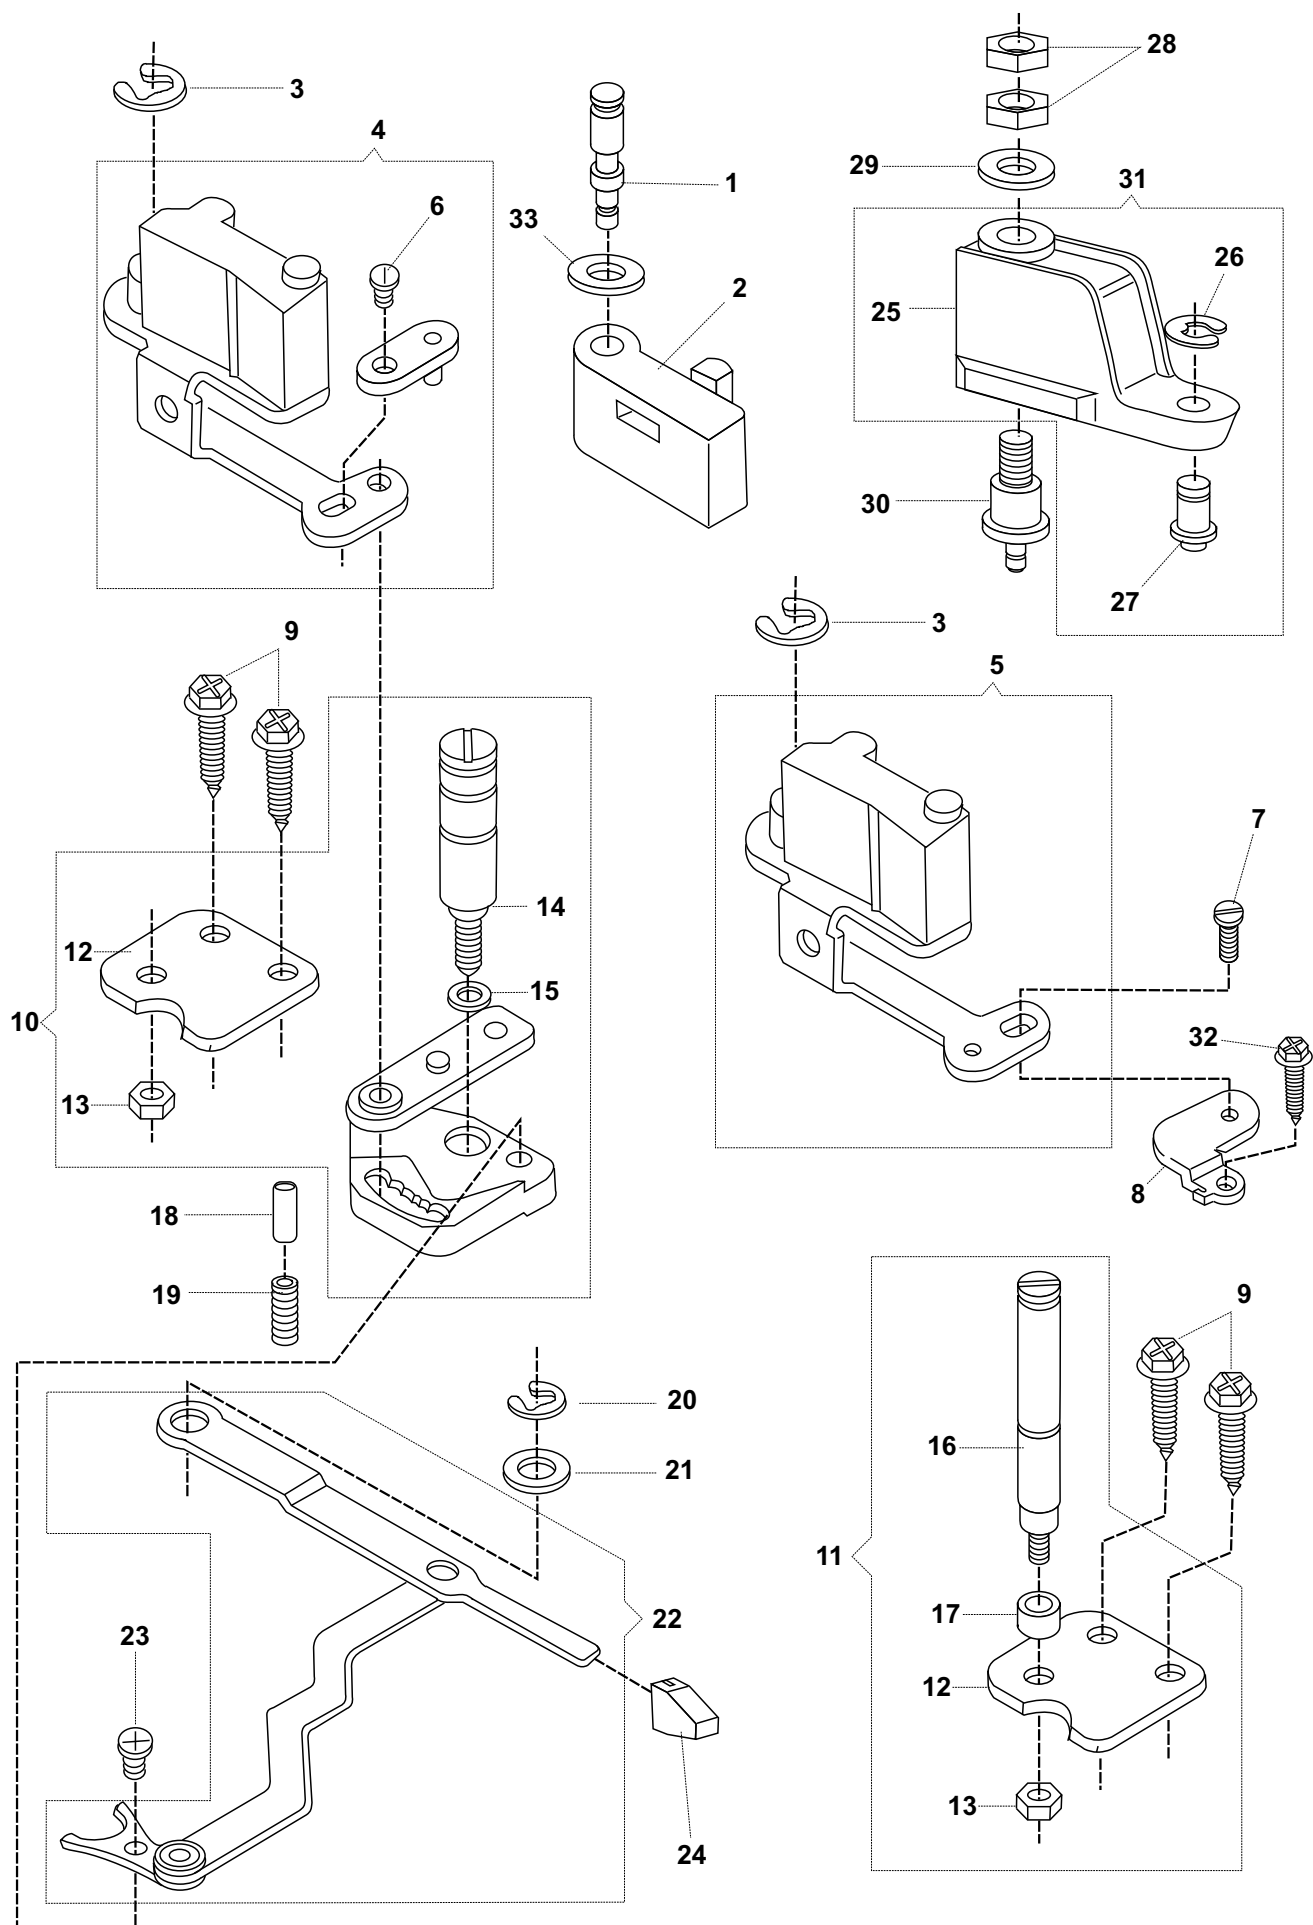

DRIVING ARM SLIDE AND PATTERN SELECTOR DIAL PIN

REF.	PARTS NUMBER	DESCRIPTION	2802	2808	2809	2810	2818	2852	2858	2859	2860	2868
1	357326-900	Needle bar driving arm slide bracket articulating pin		●	●	●	●		●	●	●	●
2	358236-900	Needle bar driving arm slide bracket complete		●					●			
3	445721-000	Needle bar driving arm slide bracket retaining ring		●	●	●	●		●	●	●	●
4	356735-001	Needle bar driving arm slide bracket complete				●	●				●	●
5	358469-000	Needle bar driving arm slide bracket complete			●					●		
6	141913-451	Needle position sel. lever bracket stud arm set screw				●	●				●	●
7	141913-451	Needle bar driving arm slide bracket set screw			●					●		
8	358447-900	Needle bar driving arm slide bracket support			●					●		
9	113455-001	Needle bar driving arm slide bracket sup. set screw		●	●	●	●		●	●	●	●
10	356838-000	Needle position selector lever bracket complete				●	●				●	●
11	358436-000	Needle position selector lever bracket complete		●	●				●	●		
12	446401-000	Needle position selector lever adjusting plate		●	●	●	●		●	●	●	●
13	54591-451	Disc follower stud nut		●	●	●	●		●	●	●	●
14	357089-000	Disc follower stud				●	●				●	●
15	353585-000	Disc follower stud collar				●	●				●	●
16	357089-000	Disc follower stud		●	●				●	●		
17	358252-900	Disc follower stud collar		●	●				●	●		
18	356228-000	Needle position selector lever bracket positioning pin				●	●				●	●
19	444800-000	Needle position selector lever bracket spring				●	●				●	●
20	445486-000	Needle position selector lever retaining ring				●	●				●	●
21	49204-000	Needle position selector lever hinge stud washer				●	●				●	●
22	356812-000	Needle position selector lever complete				●	●				●	●
23	141913-451	Needle position selector lever screw				●	●				●	●
24	356204-453	Needle position selector control lever knob				●	●				●	●
25	358430-900	Slide bracket	●					●				
26	353215-000	Slide bracket retaining ring	●					●				
27	358435-900	Zigzag cam follower	●					●				
28	53648-451BUY	Slide bracket nut	●					●				
29	358449-451	Slide bracket washer	●					●				
30	358492-900	Slide bracket screw	●					●				
31	358446-000	Slide bracket assembly	●					●				
32	113455-001	Needle position selector lever bracket screw			●					●		
33	357327-900	Needle bar driving arm slide bracket pin washer		●	●	●	●		●	●	●	●


When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

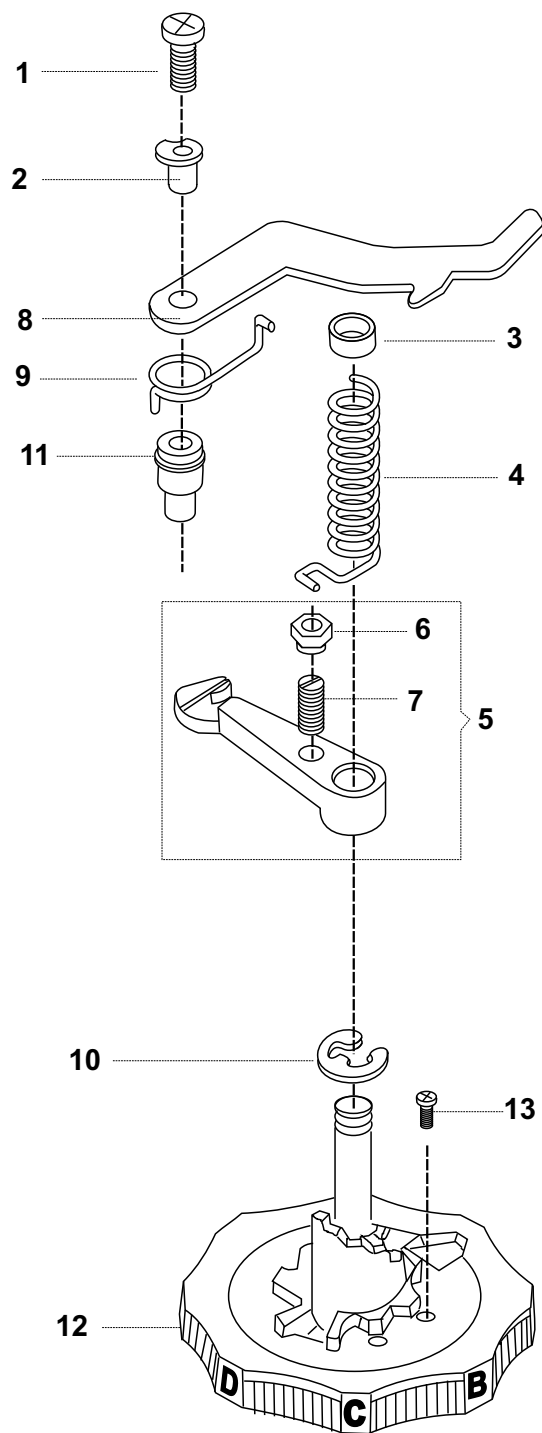

PATTERN SELECTOR

[illegible]


When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

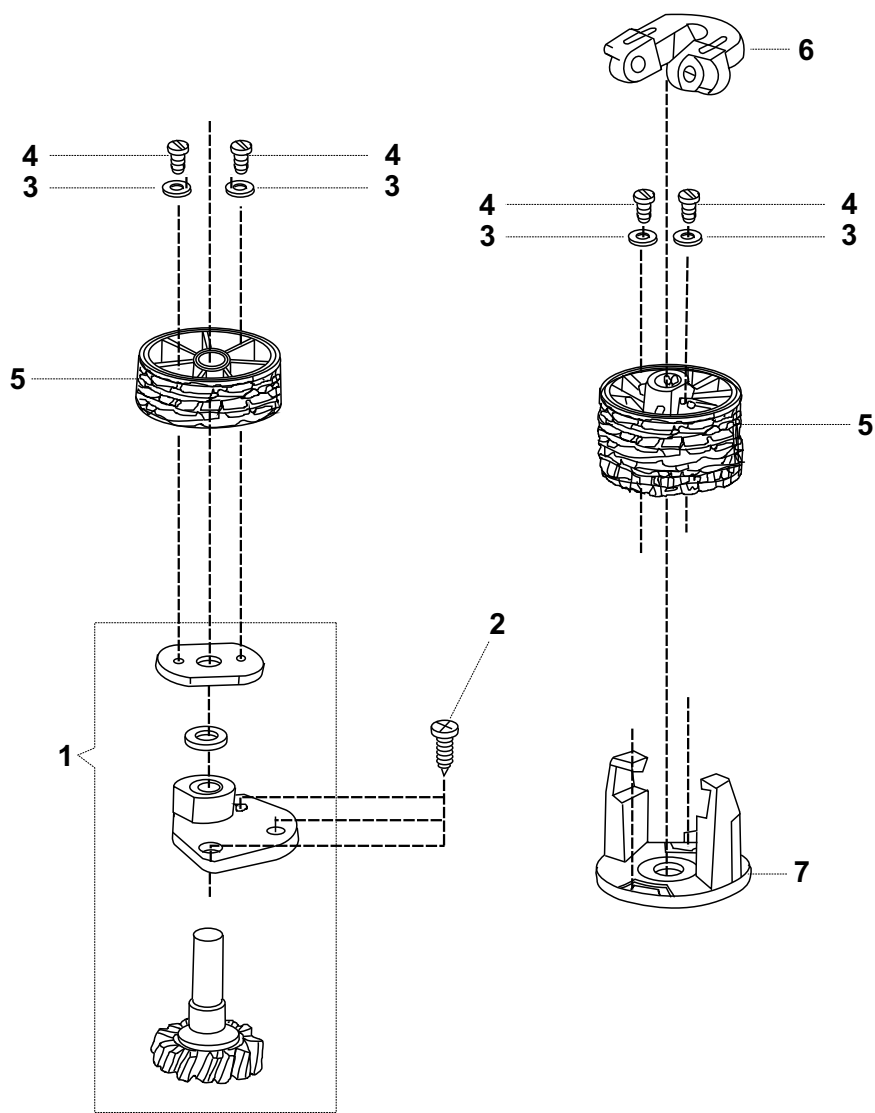

[illegible]

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

FEED REGULATOR CAM

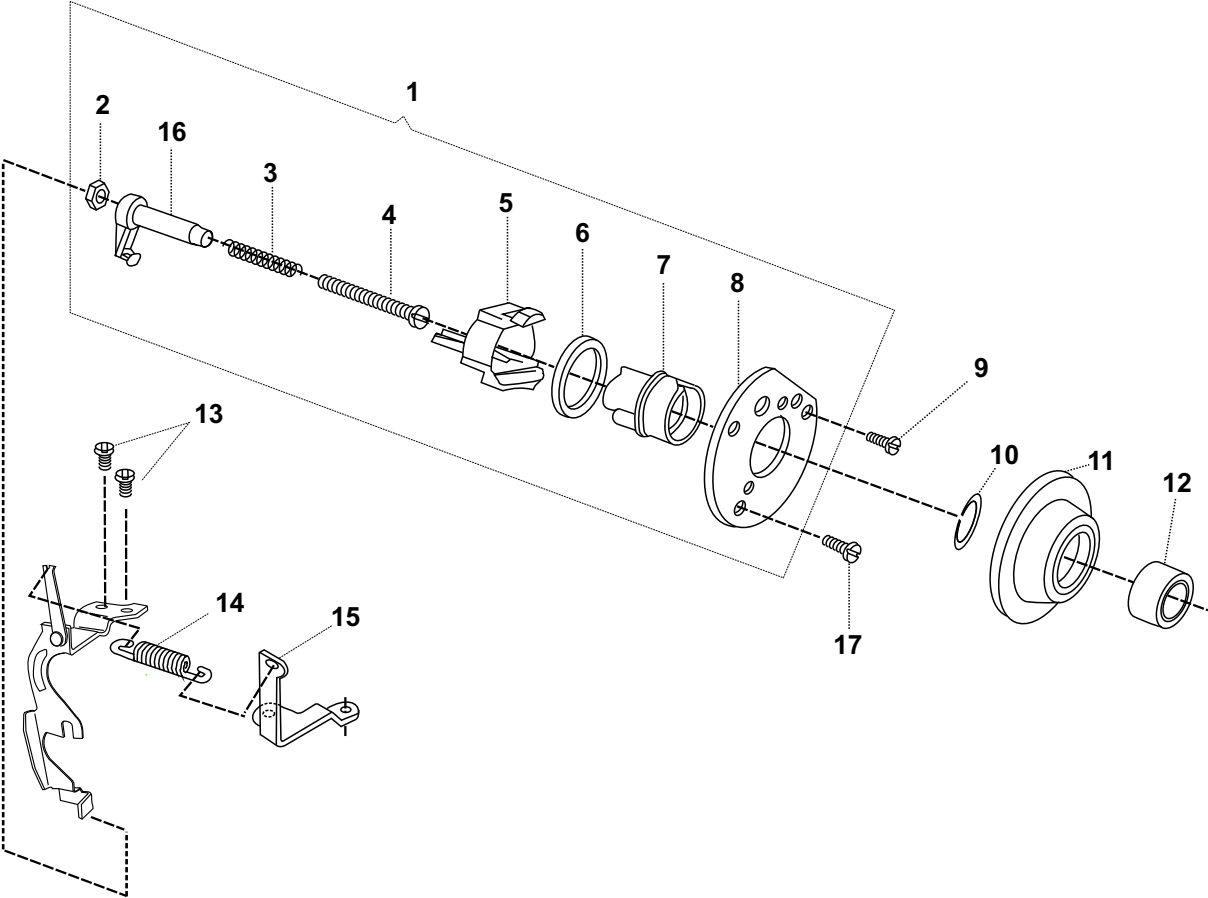


FEED REGULATOR CAM

[illegible]

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.


FEED REGULATOR CAM

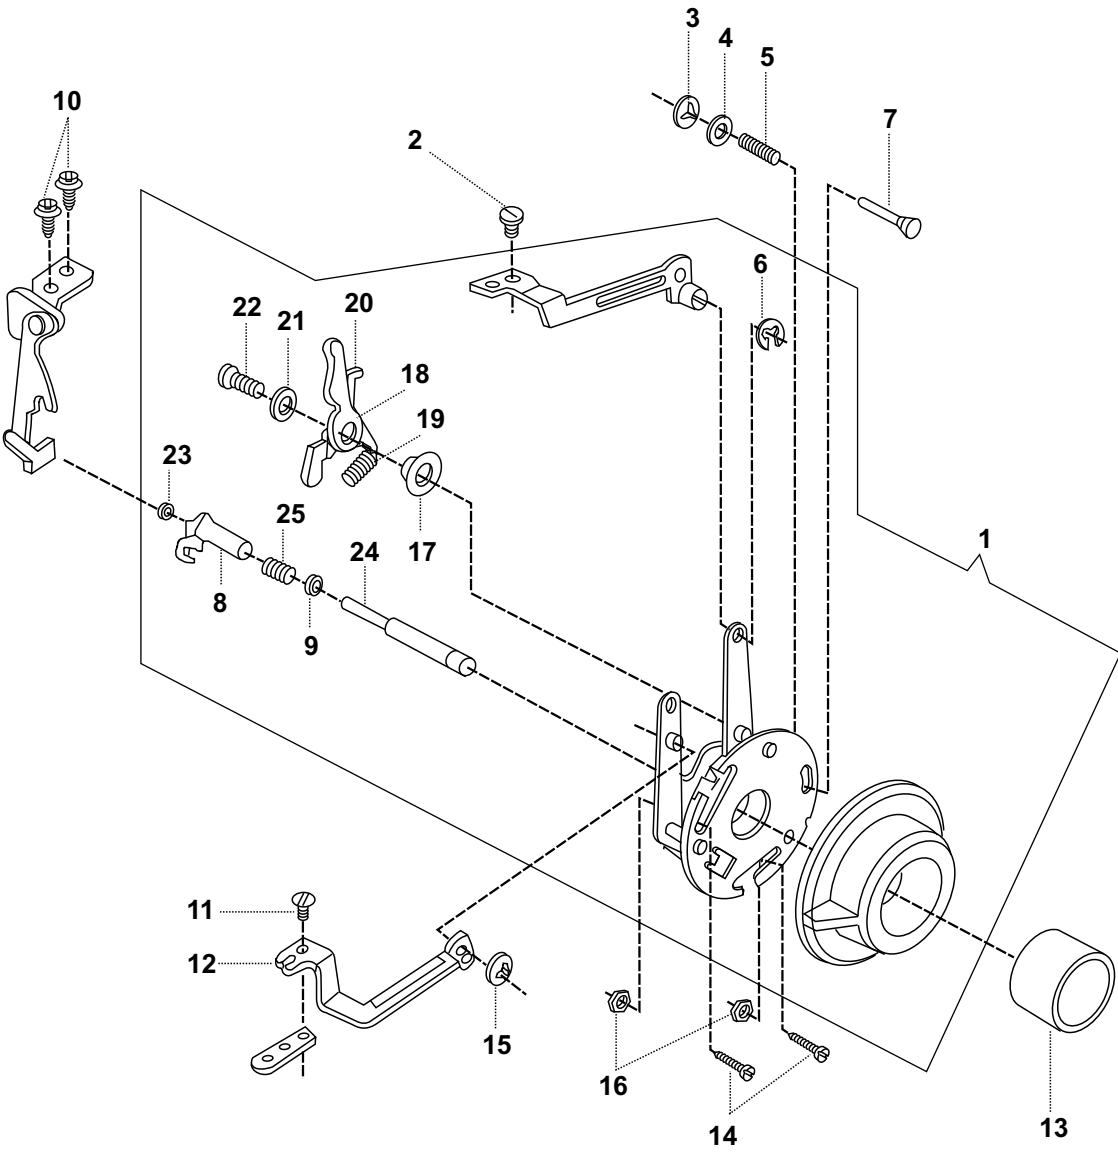

FEED REGULATOR CAM

REF.	PARTS NUMBER	DESCRIPTION	2802	2808	2809	2810	2818	2852	2858	2859	2860	2868
1	357010-XXX	Buttonholer & feed regulator cam complete				●	●				●	●
2	141913-451	Bh. nd. pos. cam fol. lever link (left & right) screw				●	●				●	●
3	408030-000	Bh. & feed reg. mechanism mtg. plate stud ret. ring				●	●				●	●
4	445808-000	Bh. & feed reg. mech. mtg. plate stud spring washer				●	●				●	●
5	179949-000	Buttonholer & feed reg. mech. mtg. plate stud spring				●	●				●	●
6	445486-000	Bh. bight control cam fol. lever link (right) ret. ring				●	●				●	●
7	357119-000	Buttonholer & feed regulator mech. mtg. plate stud				●	●				●	●
8	357094-000BUY	Feed regulator positioning pin carrier				●	●				●	●
9	356830-001	Feed regulator positioning pin washer				●	●				●	●
10	358499-451	Feed regulator control arm screw				●	●				●	●
11	141913-451	Bh. bight cont. cam fol. lever link (left & right) screw				●	●				●	●
12	356748-000	Buttonholer bight control cam fol. lever link (right)				●	●				●	●
13	356653-XXX	Feed regulator positioning pin knob				●	●				●	●
14	113513-451	Buttonholer & feed regulator mech. mtg. plate screw				●	●				●	●
15	445486-000	Bh. right control cam fol. lever link (right) ret. ring				●	●				●	●
16	53640-819	Buttonholer & feed reg. mech. mtg. plate screw nut				●	●				●	●
17	353319-000	Cam control feed eng. cam follower & lever bushing				●	●				●	●
18	353321-000	Cam control feed engaging cam follower lever				●	●				●	●
19	358102-000	Cam control feed eng. cam follower & lever spring				●	●				●	●
20	353320-000	Cam control feed engaging cam follower				●	●				●	●
21	445539-000	Cam control feed eng. cam follower & lever washer				●	●				●	●
22	113372-451	Cam control fd. eng. cam follower & lever mtg. screw				●	●				●	●
23	618638-005	Feed regulator positioning pin carrier insert nut				●	●				●	●
24	356650-000	Feed regulator positioning pin				●	●				●	●
25	44892-000	Feed regulator positioning pin friction spring				●	●				●	●


When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

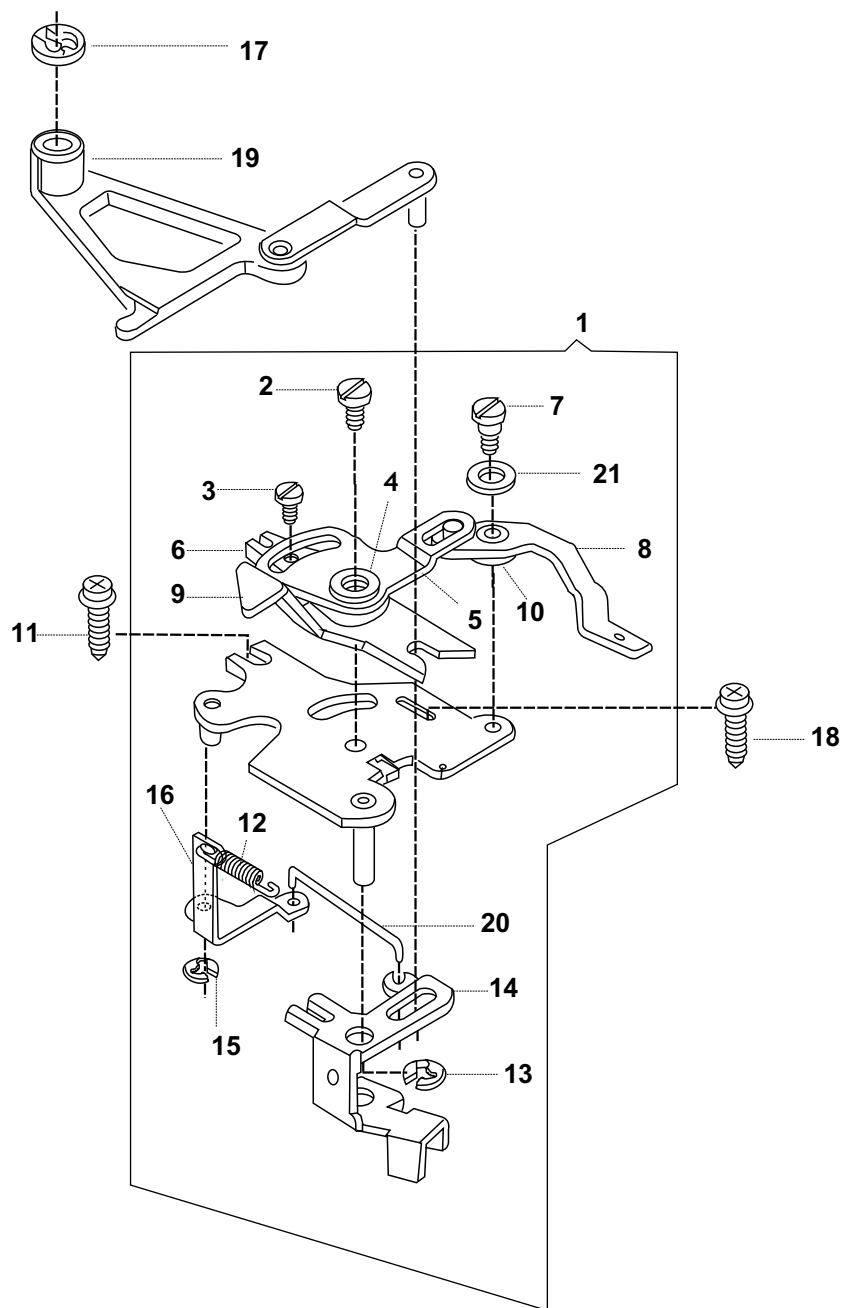

CAM CONTROLLED FEED

[illegible]





When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

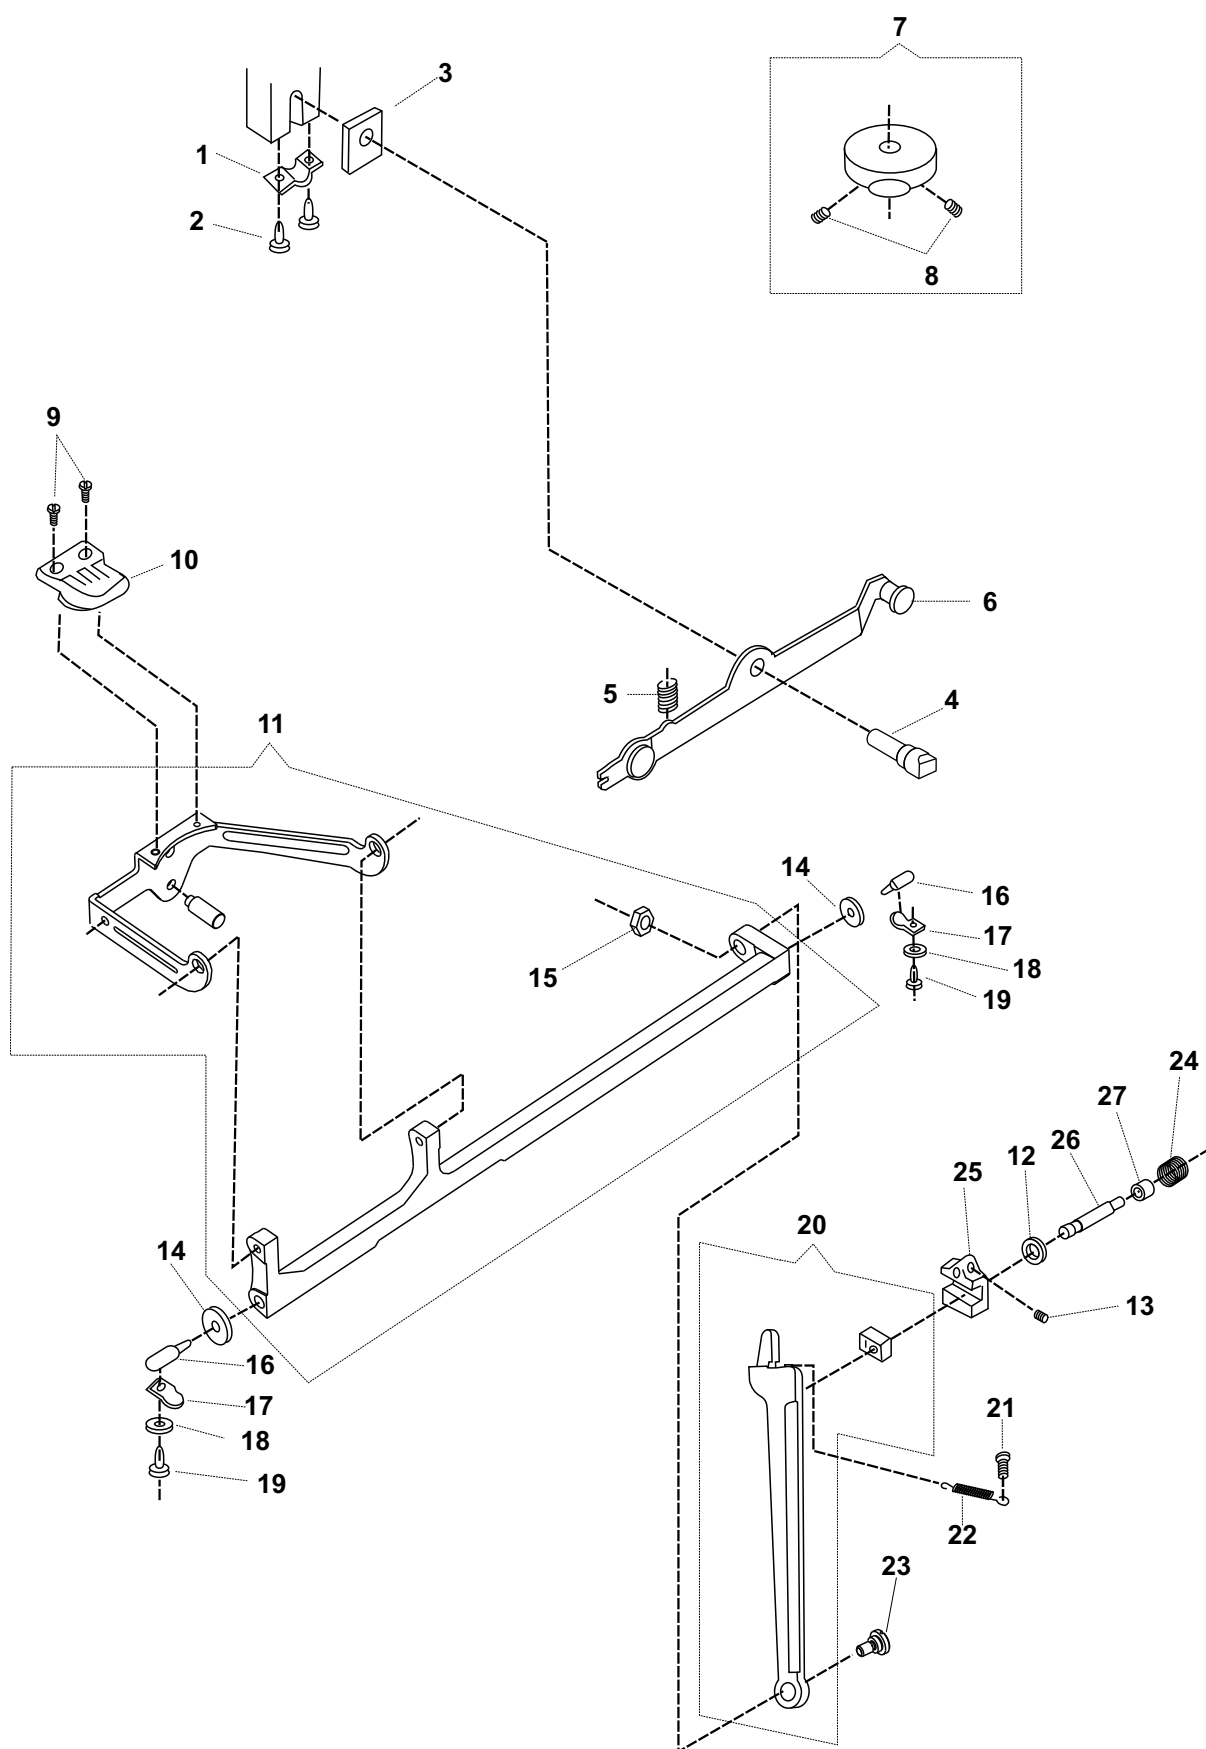

FEED SYSTEM

REF.	PARTS NUMBER	DESCRIPTION	2802	2808	2809	2810	2818	2852	2858	2859	2860	2868
1	446485-000	Feed lifting lever hinge stud (eccentric) clamp	●	●	●	●	●	●	●	●	●	●
2	113455-001	Feed lifting lever hinge stud (eccentric) clamp screw	●	●	●	●	●	●	●	●	●	●
3	179955-000BUY	Feed lifting lever hinge stud (eccentric) spacer	●	●	●	●	●	●	●	●	●	●
4	357122-000BUY	Feed lifting lever (eccentric) pin	●	●	●	●	●	●	●	●	●	●
5	446249-000	Feed lifting lever spring	●	●	●	●	●	●	●	●	●	●
6	356222-931	Feed lifting lever	●	●	●	●	●	●	●	●	●	●
7	446228-000	Feed lifting cam	●	●	●	●	●	●	●	●	●	●
8	544118-000	Feed lifting cam screw	●	●	●	●	●	●	●	●	●	●
9	355235-451	Feed dog screw	●	●	●	●	●	●	●	●	●	●
10	179891-000SdB	Feed dog	●	●	●	●	●	●	●	●	●	●
11	357651-000	Feed rock shaft complete	●	●	●	●	●	●	●	●	●	●
12	353394-000BUY	Feed regulator washer	●	●	●			●	●	●		
13	141925-833	Feed regulator screw				●	●				●	●
14	353397-000BUY	Feed rock shaft center (left) noise damp. washer	●	●	●	●	●	●	●	●	●	●
15	53648-451	Feed forked connection hinge screw nut	●	●	●	●	●	●	●	●	●	●
16	446487-001BUY	Feed rock shaft center	●	●	●	●	●	●	●	●	●	●
17	446484-000	Feed rock shaft center clamp (left & right)	●	●	●	●	●	●	●	●	●	●
18	353375-451	Feed rock shaft center sup. bracket screw washer	●	●	●	●	●	●	●	●	●	●
19	113455-001	Feed lifting lever hinge stud (eccentric) clamp	●	●	●	●	●	●	●	●	●	●
20	358369-000	Feed forked connexion with slide block	●	●	●	●	●	●	●	●	●	●
21	358455-900	Feed forked spring stud	●	●	●	●	●	●	●	●	●	●
22	358370-000	Feed forked spring	●	●	●	●	●	●	●	●	●	●
23	531623-451	Feed forked connexion hinge screw (eccentric)	●	●	●	●	●	●	●	●	●	●
24	179890-000	Feed regulator return spring				●	●				●	●
25	358399-900	Feed regulator	●	●	●			●	●	●		
25	446486-000E	Feed regulator assembly				●	●				●	●
26	446483-000	Feed regulator hinge stud				●	●				●	●
27	445768-000	Feed regulator return spring bushing (plastic)				●	●				●	●



When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

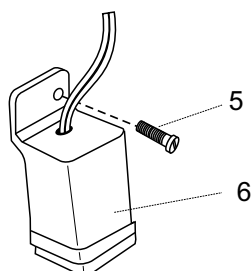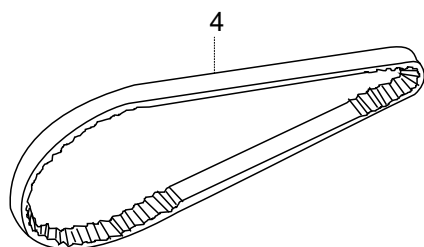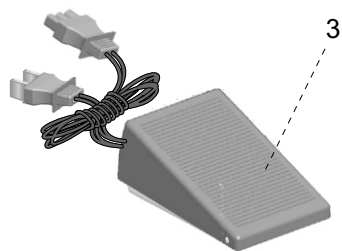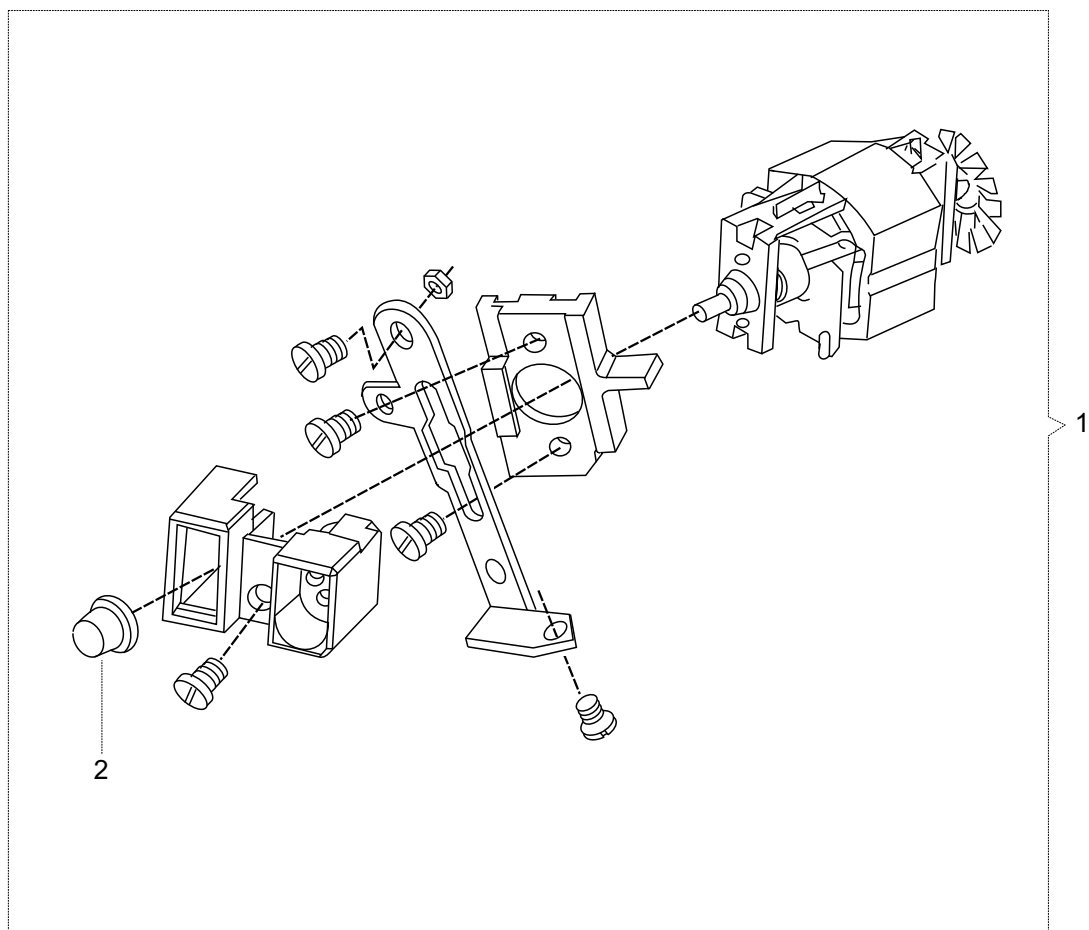

ELECTRICAL EQUIPMENT

[illegible]

When you need a part number with the suffix (XXX), please indicate the machine and voltage model where will be used.

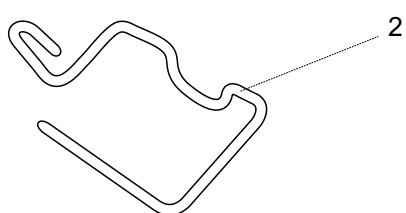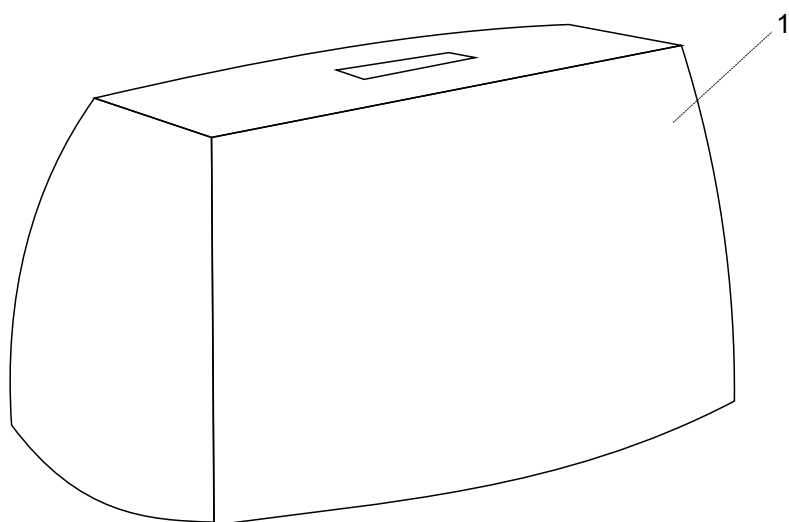

OPTIONALS

[illegible]

When you need a part number with the suffix (XXX), please indicate the machine model where will be used.

