



A stylized logo featuring a large 'U' and 'Q' shape. Inside the 'U' is a silhouette of a person in a dynamic pose, possibly a dancer or athlete. Inside the 'Q' is a stylized building or structure. The logo is set against a dark, textured background.

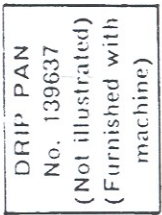

†Not Supplied to Agencies

Parts for 331K2/K102 M/cs which differ from 331K1/K101 M/cs

Parts for 331K3/K103 M/cs which differ from 331K1/K101 M/cs

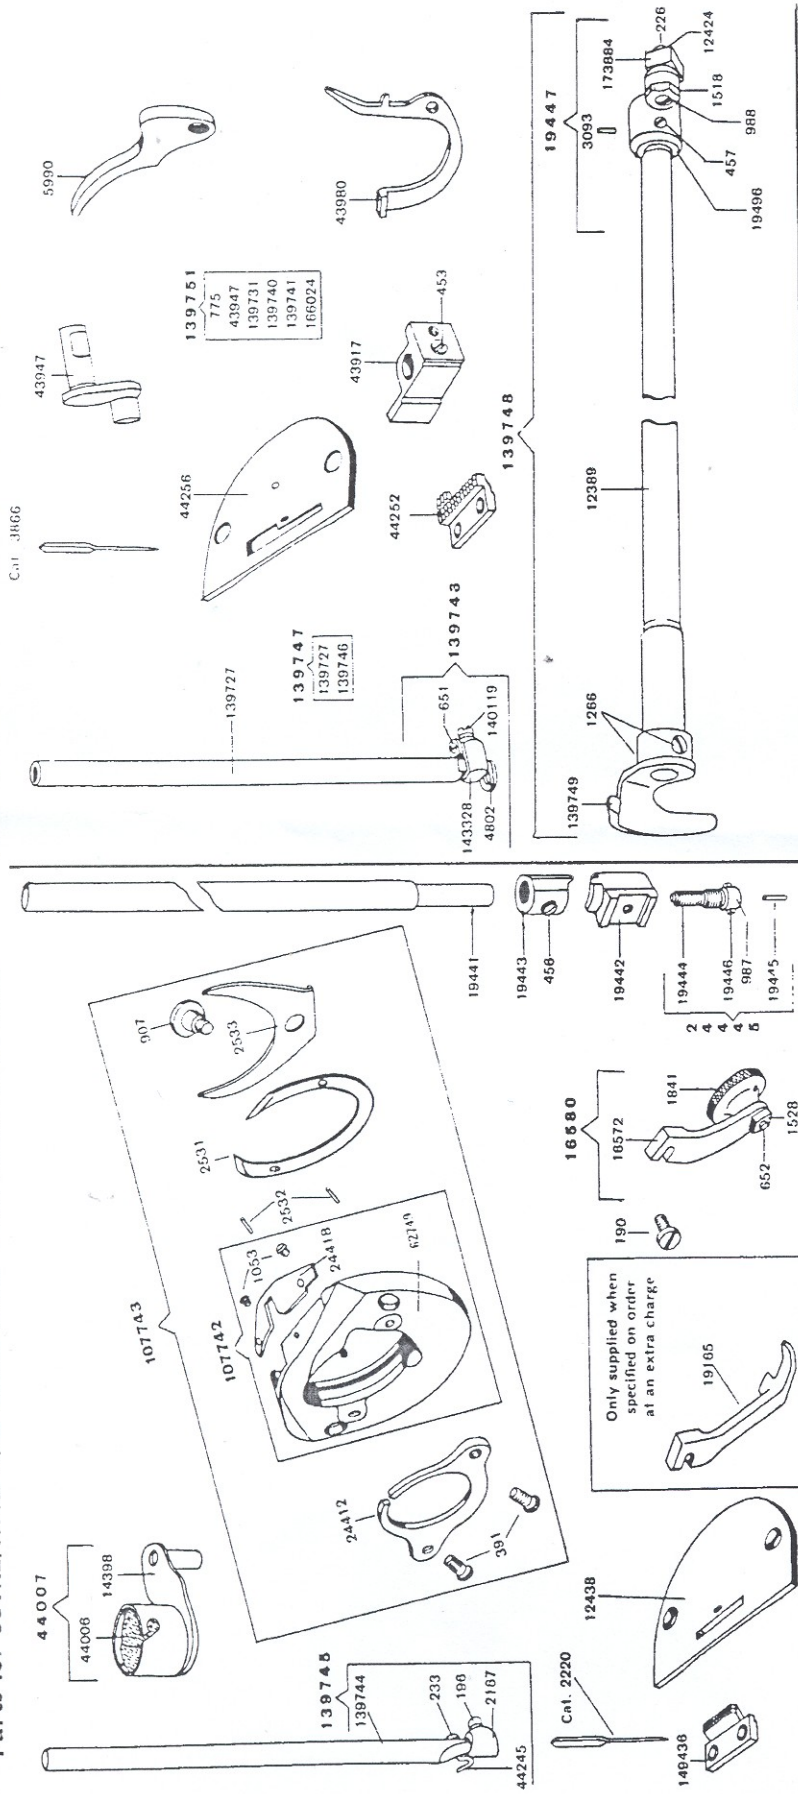


Accessories for 331K1, 331K2 and 331K3 Machines

AVAILABLE AT NO EXTRA CHARGE IF SPECIFIED ON ORDER

FOOT LIFTER No. 93847 AVAILABLE IN PLACE OF KNEE LIFTER No. 93817 IF SPECIFIED ON ORDER

SUPPLIED WITH MACHINE

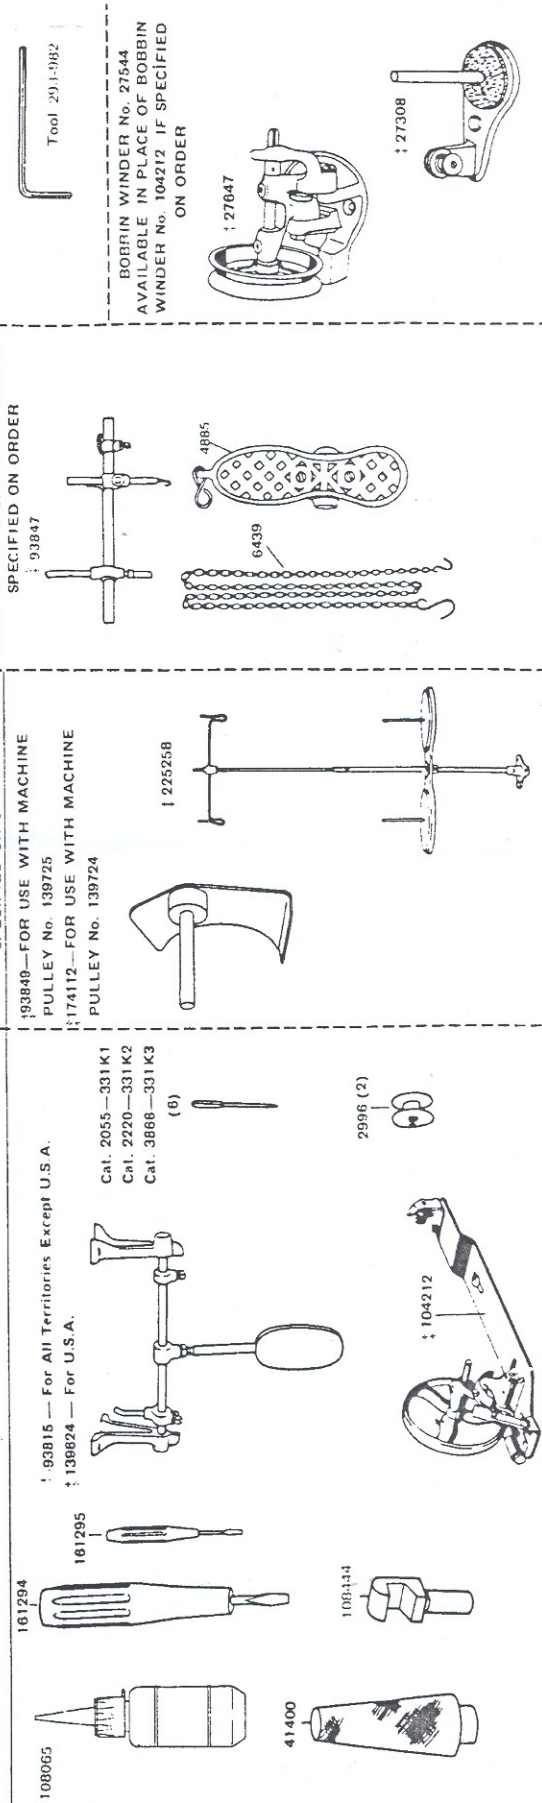

For replacement parts marked † for 331K101/K102/K103 machines add suffix '451' after part number.

NUMERICAL LIST OF PARTS FOR 331K1/K101 MACHINES

Part No.	Description
76(819)	Knee or Foot Lifter Lifting Lever Connecting Rod Joint Hinge Screw
144(833)	Arm Shaft Screw
145(805)	Shuttle Race Screw
157(813)	Feed Lifting Rock Shaft Crank Clamping Screw
157(813)	Feed Rock Shaft Crank Clamping Screw
178(805)	Knee or Foot Lifter Bell Crank Bracket Screw
190(809)	Presser Foot Screw
207(805)	Needle Bar Connecting Stud Clamping Screw
208(830)	Feed Dog Screw
219(809)	Arm Side Cap Screw
225(806)	Slack Thread Regulator Adjusting Screw
226(804)	Oscillating Shaft Crank Slide Block Cap Screw
233(805)	Arm Shaft Flanged Bushing (back) Oil Drip Screw
307(873)	Feed Lifting Rock Shaft Screw Centre
307(803)	Feed Rock Shaft Screw Centre
313(803)	Feed Bar Screw Centre
335(813)	Thread Take-up Lever Guard Screw
375(803)	Feed Connecting Link Hinge Screw
375(803)	Feed Forked Connection Hinge Screw
375(803)	Feed Lifting Rock Shaft Crank Connecting Rod Hinge Screw
391(813)	Shuttle Bobbin Case Position Plate Screw
435(830)	Thread Take-up Lever Link Hinge Pin Set Screw
443(830)	Arm Shaft Bushing (front) Set Screw
443(830)	Arm Shaft Bushing (intermediate) Set Screw
446(830)	Feed and Feed Lifting Eccentric Set Screw
448(830)	Arm Shaft Flanged Bushing (back) Set Screw
448(830)	Knee or Foot Lifter Lifting Lever Pin Set Screw
448(830)	Oscillating Rock Shaft Hinge Pin Set Screw
448(830)	Thread Take-up Spring Regulator Set Screw
457(830)	Presser Bar Guide Bracket Set Screw
457(830)	Oscillating Shaft Crank Set Screw
591(806)	Shuttle Tension Regulating Screw
592(805)	Shuttle Bobbin Case Latch Stop Screw
624(830)	Thread Retainer Set Screw
665(809)	Needle Bar Thread Guard Screw
688(809)	Pressure Regulating Thumb Screw
689(803)	Presser Bar Lifter Screw
690(805)	Thread Take-up Crank Wedge Screw
691(830)	Throat Plate Screw
746(804)	Knee or Foot Lifter Lifting Lever Link Hinge Screw
775(805)	Thread Take-up Lever Cap Screw
794(805)	Needle Bar Connecting Link Adjusting Screw
802(813)	Knee or Foot Lifter Lifting Lever Hinge Screw
896(805)	Crank Connecting Rod Cap Screw
907(804)	Shuttle Race Back Spring Screw
908(803)	Crank Connecting Rod Hinge Screw
966(805)	Feed Lifting Rock Shaft Crank Connecting Rod Cap Screw
968(801)	Oscillating Shaft Crank Slide Block Screw Stud
1053(804)	Shuttle Race Cap Screw
1064(830)	Needle Bar Crank Position Screw
1133(830)	Needle Bar Bushing (lower) Set Screw
1133(830)	Needle Bar Bushing (upper) Set Screw
1513(809)	Feed Lifting Rock Shaft Screw Centre Nut
1513(809)	Feed Rock Shaft Screw Centre Nut
1518(805)	Feed Connecting Link Hinge Screw Nut
1518(809)	Feed Forked Connection Hinge Screw Nut
1518(809)	Feed Lifting Rock Shaft Crank Connecting Rod Hinge Screw Nut
1518(809)	Oscillating Shaft Crank Slide Block Screw Stud Nut
1518(809)	Feed Bar Screw Centre Nut
1521(805)	Knee or Foot Lifter Lifting Lever Connecting Rod Lock Nut
1560(803)	Tension Regulating Thumb Nut
NOTE:-	Part No. 1560 cannot be supplied individually. Orders must specify No. 4411.
1619(805)	Crank Connecting Rod Hinge Screw Nut
1810	Feed Lifting Rock Shaft Crank Roller and Stud
1904	Needle Bar Connecting Stud Roller (Roller only)
2102	Tension Disc
2531	Shuttle Race Back
2532	Shuttle Race Back Position Pin
2533	Shuttle Race Back Spring
2673	Shuttle Bobbin Case Latch Lever
2674	Shuttle Bobbin Case Latch Lever Fulcrum Pin
2675	Shuttle Bobbin Case Latch Spring
2676	Shuttle Bobbin
2694	Oscillating Shaft Crank Pin
3093	Thread Take-up Crank Wedge
3094	Shuttle Race Slide Spring
3207	Oscillating Rock Shaft Oil Pad
3791	Knee or Foot Lifter Bell Crank
3792	Knee or Foot Lifter Bell Crank 1594 with 1590, 1591, and 3735
3793	Knee or Foot Lifter Bell Crank Bracket
3794	Knee or Foot Lifter Bell Crank Hinge Pin
3795	Knee or Foot Lifter Bell Crank Spring
3796	Thread Take-up Spring Regulator
3879	Arm Spool Pin Washer (felt)
3977	Presser Bar Spring (light)
3978	Presser Bar Spring Washer
41237	Knee or Foot Lifter Lifting Lever with 448(830)
41238	Knee or Foot Lifter Lifting Lever Pin
41239	Knee or Foot Lifter Lifting Lever Link
41240	Presser Bar Lifting and Releasing Lever Bracket
41241	Tension Releasing Lever Spring
41242	Feed Bar
41243	Feed Lifting Rock Shaft Crank with 157(813) and 1813
41244	Feed Rock Shaft
41245	Needle Bar Connecting Link with 794(805)
41246	Oscillating Rock Shaft Hinge Pin
41247	Oscillating Shaft
41248	Presser Bar (shallow)
41249	Shuttle Body
41250	Tension Releasing Lever Hinge Pin
41251	Thread Take-up Crank
41252	Knee or Foot Lifter Lifting Lever Connecting Rod
41253	Knee or Foot Lifter Lifting Lever Connecting Rod Joint
41254	Oscillating Shaft Crank Slide Block Cap Screw Washer
41255	Arm Shaft
41256	Shuttle Race Slide
41257	Arm Oil Tube with 132590
41258	Arm Side Cap
41259	Shuttle Bobbin Case Latch
41260	Shuttle Bobbin Case Hinge Nos. 1973, 1974 and 15140
41261	Shuttle Tension Spring
41262	Shuttle, 1-11/16" Dia., complete, Nos. 2996, 12391 and 62740

Part No.	Description
19496	Oscillating Shaft Crank
20039	Presser Bar Guide Bracket with 453(810)
20060	Slack Thread Regulator
NOTE:-	Part No. 20198 cannot be supplied individually. Orders must specify No. 20197.
24131	Arm Oil Tube with 12045
24412	Shuttle Bobbin Case Position Plate
24413	Shuttle Race Cap
24414	24412, 24962 and two 371(813)
24810	Shuttle Race Slide complete, nos. 4307, 12431(819) and two 51282 (809)
26003	Feed Jog
26004(850)	Throat Plate (small needle hole)
26005	Feed Rock Shaft Crank with 157(813)
32574	Tension Releasing Pin
43944	Tension Releasing Lever
43946	Thread Take-up Spring
43976	Feed Lifting Rock Shaft Crank Connecting Rod with 13977, 123044 and two 356(805)
43977	Feed Lifting Rock Shaft Crank Connecting Rod Cap
NOTE:-	Part No. 43977 cannot be supplied individually. Orders must specify No. 43976
44010	Oscillating Shaft 12389 with 12444 and 19447
44125	Feed Lifting Rock Shaft
44126	Feed Lifting Rock Shaft complete, Nos. 12376 and 44125
44141	Tension Screw Stud 50327(803) with 1560(803) (for agents only)
50027(819)	Stitch Indicator Plate Screw
50028(819)	Feed Connecting Link Hinge Stud Set Screw
50327(803)	Tension Screw Stud
NOTE:-	Part No. 50327 cannot be supplied individually. Orders must specify No. 44141
51221(819)	Face Plate Thumb Screw
51222(819)	Arm Side Cover Thumb Screw
51223(819)	Shuttle Race Slide Spring Screw
51283(830)	Machine Pulley Set Screw
51284(830)	Face Plate Screw
52316	Presser Bar Lifter
52345	Arm Oil Tube Packing (braided cotton)
52370	Feed Connecting Link Hinge Stud
52371	Thread Take-up Lever Thread Flange Bushing
52372	Feed Connecting Link
52373	Arm Oil Tube Packing (cotton)
52374	Arm Spool Pin and Thread Washer
52375	Thread Regulator
56213-001	Feed Bar Screw Centre 313(803) with 1519(809)
56214	Feed Lifting Rock Shaft Screw Centre 107(803) with 1513(809)
56215	Feed Rock Shaft Screw Centre 107(803) with 1513(809)
56216	Shuttle Bobbin Case with 291(806), 302(805), 2975, 18141 and 12378
60749	Throat Plate Body
90378	Shuttle Driver with two 109520(803) (for Agents only)
90477	Arm Oil Tube with 12045
90718	Machine Pulley (100% belt groove (diam. of belt groove 2.9") with two 51283(830)
107194	Crank Connecting Rod Oil Pad (felt)
107195	Crank Connecting Rod with 107194 and two 356(805)
107196	Shuttle Race Slide with 107194 and two 356(805)
107197	Shuttle Race complete nos. 107194, 107195, 107196, 107197, 107198 and 107199
109520(803)	Shuttle Driver Set Screw
123044	Feed Lifting Rock Shaft Crank Connecting Rod Oil Pad (felt)
12390	Arm Oil Tube Packing (braided cotton)
12391	Face Plate Thread Guard (rubber) complete, (for Agents only)
139702	Arm Oil Tube
139703	Arm Oil Tube 139702 with 52184
139704	Arm Oil Tube
139705	Arm Shaft Bushing (front)
139706	Arm Shaft Bushing (intermediate)
139707	Arm Shaft Flanged Bushing (back)
139708	Arm Shaft Flanged Bushing (back) with 139705, 139706 and 139707
139709	Arm Shaft Flanged Bushing (back) Oil Drip
139710	Arm Shaft Flanged Bushing (back) Oil Pad
139711	Arm Side Cover
139712	Face Plate
139713	Face Plate complete, Nos. 139711, 139712 and 139713
139714	Feed and Feed Lifting Eccentric with 448(830)
139715	Feed Forked Connection
139716	Feed Regulator with 50027(819)
139717	Feed Regulator Hinge Screw Friction Washer
139718	Machine Pulley (100% heavy rim) "V" belt groove (diam. of belt groove 2.9") with two 51283(830)
139719	Needle Bar (lower)
139720	Needle Bar Bushing (lower)
139721	Needle Bar Bushing (upper)
139722	Needle Bar Crank with 1061(830)
139723	Oscillating Rock Shaft
139724	Oscillating Rock Shaft complete, Nos. 474, 12389 and 12378
139725	Stitch Indicator Plate
139726	Tension, complete, Nos. 3234, 12374, 13944, 12140, 147151, 147152, and 41201
139727	Thread Take-up Lever with 139702
139728	Thread Take-up Lever Link
139729	Needle Bar Connection Stud with 107(803)
139730	Thread Take-up Lever Guard
139731	Face Plate Thread Guard (rubber) complete (for Agents only)
140115(830)	Needle Clamp Screw
140116(830)	Feed Regulator Thumb Screw
140117	Needle Bar Thread Guard
140118	Needle Clamp with 140115(830)
140119	Tension Releasing Disc
140120	Tension Spring
140121	Presser Foot (spring ribbon), complete
140122	Stitch Indicator
140123	Thread Take-up Lever Link Hinge Pin
140124	Feed and Feed Lifting Eccentric with 448(830)
140125	Feed Regulator Hinge Screw
140126	Oscillating Shaft Crank Slide Block
NOTE:-	Not supplied to Agencies.

For replacement parts marked † for 331K101/K102/K103 machines add suffix '-451' after part number

<u>PART NO.</u>	<u>DESCRIPTION</u>
201566	Throat Plate Screw Stud Thumb Nut.
* 86260	Cord Covering Attachment, complete Nos. 217(806), 86251 to 86254, 86258, 86259 and 201566.

* In ordering state size of Cord.

<u>FELLING FEET</u>
85896
85897-008 1/4" Felling Foot 3/16" fell.
85897-012 3/16" Felling Foot (steel).
85897-018 9/32"

<u>GATHERING FEET</u>
85955
86193
Gathering Foot.
Gathering Foot (slotted).

<u>HEMMERS</u>
* 86005
* 86008
* 86010
85447
109054(805)
113040(804)
85448
85446
Hemmer.
Hemmer.
Hemmer.
Base with 109054(805).
Base Stud Screw.
Base Stud Screw Thumb Nut.
Base Stud Screw Thumb Nut Washer.
Hemmer Base, complete, Nos. 85447, 85448 and 113040(804) for use with 86005, 86008 and 86010.

* Refer illustrated side of Chart for gauges available.

<u>HEMMER FEET</u>
* 86025
* 86466
* 86469
86537
86538
* 86539
86540
86541
86542
86543
86544
* 86545
86546
* 86547
86548
86549
86550
Hemmer Foot.
Hemmer Foot for Silk.
Hemmer Foot for Umbrellas.
Hemmer Foot 1/16" flat sole.
Hemmer Foot 3/32" flat sole.
Hemmer Foot flat sole.
Hemmer Foot 5/32" flat sole.
Hemmer Foot 3/16" flat sole.
Hemmer Foot 7/32" flat sole.
Hemmer Foot 1/4" flat sole.
Hemmer Foot 1/16" flat sole with groove.
Hemmer Foot flat sole with groove.
Hemmer Foot 1/4" flat sole with groove.
Hemmer Foot flat sole with groove.
Hemmer Foot 3/16" flat sole with groove.
Hemmer Foot 7/32" flat sole with groove.
Hemmer Foot 1/4" flat sole with groove.

* Refer illustrated side of Chart for gauges available.

<u>PRESSER FOOT</u>
86188
86475
Presser Foot (narrow) for Narrow Tucking.
Presser Foot for General Work.

<u>QUILTER</u>
86041
207(804)
86042
86043
Clamp with 207(804).
Clamp Screw.
Rod.
Quilter, complete, Nos. 86041 and 86042.

<u>TUCK FOLDING ATTACHMENT (Adjustable)</u>
86097
86099
175(802)
86098
233(802)
86100
240(802)
109178(802)
152(802)
1576(802)
207(802)
109050(802)
86101
86102
162(802)
6312
671(802)
86174
240(802)
86104
109180(802)
113057(802)
86105
86106
86107
104(802)
86108
86109
175(802)
86100
240(802)
109179(802)
86111
85864
86119
85866
86120
Base (bottom).
Base (top).
Base Adjusting Screw.
Base Bracket.
Base Bracket Screw.
Base Indicator.
Base Indicator Screw.
Base Regulating Screw.
Base Regulating Screw Bracket Screw.
Base Regulating Thumb Nut.
Base Screw (to fasten to machine).
Base Screw.
Tuck Folding Plate.
Tuck Folding Plate Holder Bar.
Tuck Folding Plate Holder Bar Binding Screw.
Tuck Folding Plate Holder Bar Binding Screw Washer.
Tuck Folding Plate Holder Bar Set Thumb Screw.
Tuck Folding Plate Tension Spring.
Tuck Folding Plate Tension Spring Screw.
Tuck Spacing Guide.
Tuck Spacing Guide Hinge Screw.
Tuck Spacing Guide Hinge Screw Nut.
Tuck Spacing Guide Spring.
Tuck Spacing Guide Lifter.
Tuck Spacing Guide Lifter Bracket.
Tuck Spacing Guide Lifter Screw.
Tuck Spacing Slide.
Tuck Spacing Slide Base.
Tuck Spacing Slide Base Binding Screw.
Tuck Spacing Slide Indicator.
Tuck Spacing Slide Indicator Screw.
Tuck Spacing Slide Regulating Thumb Screw.
Tuck Folding Attachment only, Complete, Nos. 104(802), 152(802), 671(802), 1576(802), 86097 to 86099, 86101, 86102, 86104 to 86109, 86174, 109050(802), 109178(802), 109179(802), 109180(802), two each 162(802), 233(802), 6312, 86100, 113057(802), three 240(802), and four 175(802).
Feed Dog.
Presser Foot.
Throat Plate.
Tuck Folding Attachment, complete, Nos. 85864, 85866, 86111, and 86119.

**PARTS CHART
FOR
SINGER®
331K1/K101
331K2/K102
331K3/K103
MACHINES**

Numerical List of Parts for 33IK2/K102 Machines
which differ from 33IK1/K101 Machines

NUMERICAL LIST OF ACCESSORIES

PART NO.	DESCRIPTION
190(809)	Roller Presser Screw.
196(806)	Needle Clamp Screw.
233(809)	Needle Bar Thread Guard Screw.
386(804)	Roller Screw for 1911 and 1912 (not illustrated).
388(804)	Roller Screw for 51801 and 51802 (not illustrated).
456(830)	Roller Arm Bracket Position Collar Set Screw.
652(804)	Roller Screw for 1841 and 1868.
987(805)	Roller Arm Bracket Screw Stud.
1528(809)	Roller Screw Nut for 1841, 1868, 1911 and 1912.
1550(809)	Roller Screw Nut for 51801 and 51802 (not illustrated).
1841	Roller, $\frac{1}{2}$ " diam. (fine) with 652 (804) and 1528(809) for 16580.
1868	Roller, $\frac{1}{2}$ " diam. (coarse), with 652(804) and 1528(809) for 16579 (not illustrated).
1911	Roller, $\frac{1}{2}$ " diam. (coarse), with 386(804) and 1528(809) for 16581 (not illustrated).
1912	Roller, $\frac{1}{2}$ " diam. (fine), with 386(804) and 1528(809) for 16582 (not illustrated).
2167	Needle Clamp with 196(806).
12438	Throat Plate (large oblong needle hole).
14398	Oil Cup.
16572	Roller Arm for 16579 and 16580.
16573	Roller Arm for 16581 and 16582 (not illustrated).
* 16579	Roller Presser, $\frac{1}{2}$ " coarse roller, complete Nos. 1868 and 16572 (not illustrated).
16580	Roller Presser, $\frac{1}{2}$ " fine roller, complete Nos. 1841 and 16572 supplied with machine unless otherwise specified on order.
* 16581	Roller Presser, $\frac{1}{2}$ " coarse roller, complete, Nos. 1911 and 16573 (not illustrated).
* 16582	Roller Presser, $\frac{1}{2}$ " fine roller, complete, Nos. 1912 and 16573 (not illustrated).
19165	Presser Foot (only supplied with this machine when specified on order and at an extra charge).
19441	Presser Bar (hollow).
19442	Roller Arm Bracket.
19443	Roller Arm Bracket Position Collar with 456(830).
19444	Roller Arm Bracket Spring.
19445	Roller Arm Bracket Spring Pin.
19446	Roller Arm Bracket Spring Stud.
19464	Presser Bar, complete, Nos. 190(809), 19441 to 19443 and 24445.
24418	Shuttle Race Cap.
24445	Roller Arm Bracket Spring Stud, complete, Nos. 987(805), 19444 and 19446.
24903	Roller Arm for 24904 and 24905 (not illustrated).
* 24904	Roller Presser, 9/16" coarse roller, complete, Nos. 24903 and 51801 (not illustrated).
* 24905	Roller Presser, 9/16" fine roller, complete, Nos. 24903 and 51802 (not illustrated).
44006	Oil Cup Packing (felt).
44007	Oil Cup, complete, Nos. 14398 and 44006.
44245	Needle Bar Thread Guard.
* 51801	Roller, 9/16" diam. (coarse), with 388(804) and 1550(809) (not illustrated).
* 51802	Roller, 9/16" diam. (fine), with 388(804) and 1550(809) (not illustrated).
107742	Shuttle Race Body 62749 with 24418 and two 1053(804).
107743	Shuttle Race, complete, nos. 907(804) 2531, 2533, 24412, 107742, two each 391(813) and 2532
139744	Needle Bar (hollow).
139745	Needle Bar 139744 with 203(809), 2167 and 44245.
149436	Feed Dog, 11 teeth (18 teeth to the inch).
*	Only supplied in place of Roller Presser No. 16580 if specified on order.

Numerical List of Parts for 33IK3/K103 Machines
which differ from 33IK1/K101 Machines

651(804)	Needle Bar Thread Guide Screw.
4802	Needle Bar Thread Guide.
5990	Presser Bar Lifter.
43917	Presser Bar Guide Bracket with 453(830).
43947	Thread Take-up Crank.
43960	Tension Releasing Lever.
44252	Feed Dog, for Cloth, 12 teeth (12 teeth to the inch).
44256	Throat Plate (large needle hole).
139746	Needle Bar 139727 with 139747.
139747	Needle Clamp, complete, Nos. 651(804), 4802 and 143328.
139748	Oscillating Shaft 12389 with 19447 and 139749.
139749	Shuttle Driver with two 1265(803).
139751	Thread Take-up, complete, Nos. 775(805), 43947, 139731, 139740, 139741 and 166024.

PART NO.	DESCRIPTION
Pool 293	Belt Guard Screw Key (only supplied if specified on order and at an extra charge).
2996	Shuttle Bobbin.
* 4885	Foot Lifter Treadle complete.
* 6439	Foot Lifter Chain.
* 27544	Bobbin Winder (swinging automatic, right hand) complete (not illustrated).
41400	Machine Rest Pin (wood).
86720	Oil.
* 93815	Knee Lifter Rock Shaft complete, for all territories except U.S.A.
* 93846	Foot Lifter Rock Shaft complete.
* 93849	Belt Guard complete, for use with Machine Pulley No. 139725 (only supplied if specified on order at no extra charge).
* 104212	Bobbin Winder (universal) complete.
108444	Machine Hinge Connection
* 139624	Knee Lifter Rock Shaft complete, for U.S.A.
161294	Screw Driver (machine).
161295	Screw Driver (shuttle tension).
* 174112	Belt Guard complete, for use with Machine Pulley No. 139724 (only supplied if specified on order at no extra charge).
*	Supplied in place of Knee Lifter if specified on order.
**	Supplied in place of Bobbin Winder No. 104212 if specified on order.
<u>BINDER - FOR GENERAL WORK</u>	
85686	Feed Dog.
85320	Folder.
109050(804)	Folder Screw.
85325	Folder Screw Washer.
85687	Presser Foot Bracket.
85688	Presser Foot Bracket Hinge Pin.
85689	Presser Foot Sole.
85690	Presser Foot (hinged), Complete, Nos. 85687 to 85689.
85324	Tape Tension Pin (bent).
85323	Tape Tension Pin (straight).
85322	Tape Tension Plate.
85321	Tape Tension, Complete, Nos. 85322, 85324 and eight 85323.
109050(804)	Tape Tension Screw.
85325	Tape Tension Screw Washer.
85691	Throat Plate.
* 85692	Binder Complete, Nos. 85320, 85321, 85686, 85690, 85691, two each 85325 and 109050(804).
*	Refer illustrated side of Chart for Gauges available.
<u>CORDER GUIDE</u> (Adjustable)	
85382	Extension Guide.
228(804)	Extension Guide Screw.
85876	Presser Foot.
85877	Corder Guide, complete, Nos. 228(804), 85382 and 85876.
85881	Cording and Hemming Foot.
86182-008	$\frac{1}{2}$ " Cording Foot (grooved on right side).
86182-012	3/16"

CORD COVERING ATTACHMENT

* 86251	Cord Guide and Strip Folder.
237(806)	Cord Guide and Strip Folder Screw.
86252	Cord Wire.
* 86253	Feed Dog.
86254	Presser Foot.
86256	Tension Base Plate.
86257	Tension Base Plate Pin.
86255	Tension Guide (adjustable).
759(802)	Tension Guide Thumb Screw.
86258	Tension Complete, Nos. 759(802), 86255, 86256 and four 86257.
86259	Throat Plate with 109338(804).
109338(804)	Throat Plate Screw Stud.

For replacement parts marked * for 33IK101/K102/K103 machines add suffix "-451" after part number

ATTACHMENTS FOR 33IK1/K101 MACHINES


AVAILABLE FOR SEPARATE PURCHASE

HEMMERS AND HEMMER BASE

(See Tabulation Below for Gauges Available)

CORD COVERING ATTACHMENT

86260

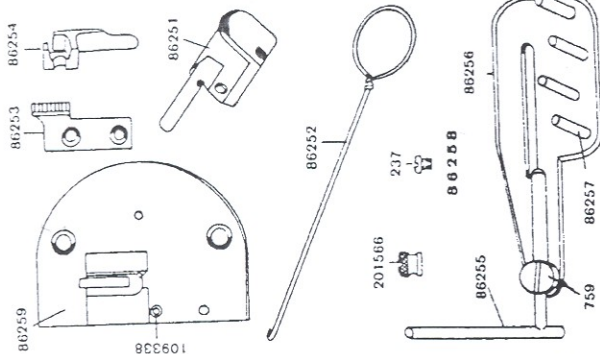

WHEN ORDERING STATE SIZE OF CORD

86258

86257

86256

86255

86254

86253

86252

86251

86250

86249

86248

86247

86246

86245

86244

86243

86242

86241

86240

86239

86238

86237

86236

86235

86234

86233

86232

86231

86230

86229

86228

86227

86226

86225

86224

86223

86222

86221

86220

86219

86218

86217

86216

86215

86214

86213

86212

86211

86210

86209

86208

86207

86206

86205

86204

86203

86202

86201

86200

86199

86198

86197

86196

86195

86194

86193

86192

86191

86190

86189

86188

86187

86186

86185

86184

86183

86182

86181

86180

86179

86178

86177

86176

86175

86174

86173

86172

86171

86170

86169

86168

86167

86166

86165

86164

86163

86162

86161

86160

86159

86158

86157

86156

86155

86154

86153

86152

86151

86150

86149

86148

86147

86146

86145

86144

86143

86142

86141

86140

86139

86138

86137

86136

86135

86134

86133

86132

86131

86130

86129

86128

86127

86126

86125

86124

86123

86122

86121

86120

86119

86118

86117

86116

86115

86114

86113

86112

86111

86110

86109

86108

86107

86106

86105

86104

86103

86102

86101

86100

86099

86098

86097

86096

86095

86094

86093

86092

86091

86090

86089

86088

86087

86086

86085

86084

86083

86082

86081

86080

86079

86078

86077

86076

86075

86074

86073

86072

86071

86070

86069

86068

86067

86066

86065

86064

86063

86062

86061

86060

86059

86058

86057

86056

86055

86054

86053

86052

86051

86050

86049

86048

86047

86046

86045

86044

86043

86042

86041

86040

86039

86038

86037

86036

86035

86034

86033

86032

86031

86030

86029

86028

86027

86026

86025

86024

86023

86022

86021

86020

86019

86018

86017

86016

86015

86014

86013

86012

86011

86010

86009

86008

86007

86006

86005

86004

86003

86002

86001

86000

85999

85998

85997

85996

85995

85994

85993

85992

85991

85990

85989

85988

85987

85986

85985

85984

85983

85982

85981

85980

85979

85978

85977

85976

85975

85974

85973

85972

85971