



PEGASUS

INDUSTRIAL

SEWING MACHINE

PARTS LIST

MODEL

DPS-2

DPS-3


DPS-4

HIGH SPEED

ZIGZAG

LOCKSTITCH

SEWING MACHINES

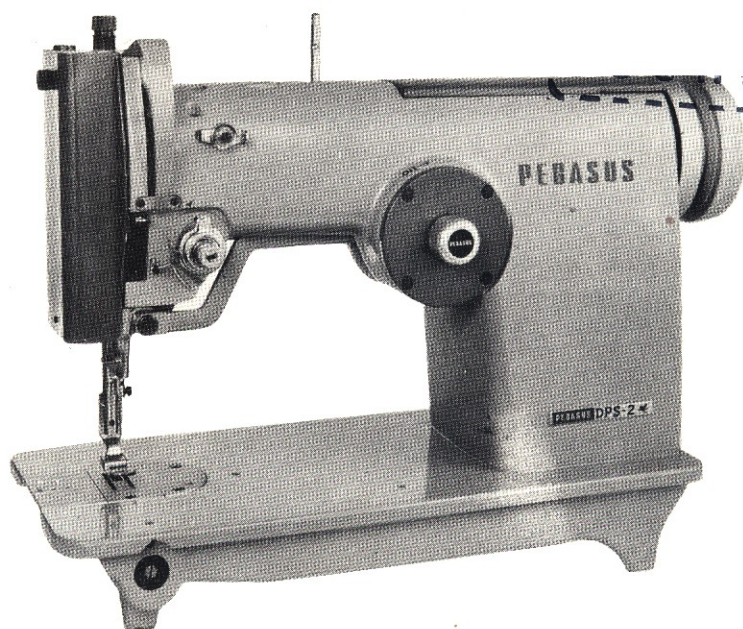

MODEL DPS-2

Cavemac

Controle do Acervo de Catálogos

Identificação	577
Edição	ÚNICA
Conteúdo	PEGASUS DPS-2

00000577



NG MACHINE CO., LTD.
NG MACHINE MFG. CO., LTD.

— JAPAN — TOKYO

IN ORDERING PARTS

This list has been arranged to simplify ordering repair parts for DPS series machines on the basis of model DPS-2.

Various sections of the mechanisms are shown on each page. On the page opposite the illustration will be found a listing of the parts with their reference numbers, parts numbers, name and the number of pieces required.

A part whose number is marked with an asterisk, e.g.*200819, Page 5, is not recommended for the individual replacement, so complete assembly or sub-assembly should be ordered.

If the parts are used exclusively for certain models only, each machine models are specified in the column "Name" listed on Page 3 to 13.

And the exclusive parts for model DPS-2, and DPS-4 and for marginal stitching operation of model DPS-2 are shown on Page 15.

At the back of this list will be found a numerical index of all the parts shown in this list. This will facilitate locating the illustration and descriptions when only the parts number is known.

In ordering parts from this list, USE ONLY THE PARTS NUMBER in the second column. Reference number should never be used in ordering parts.

This Parts List applies to the machines manufactured in October, 1971.

部品表御利用に際して

本パーツ・リストは、DPS-2形ミシンを基に、DPSシリーズ・ミシンの修理用部品を容易にご利用戴けるよう編集されています。

機構別に各頁に収録され、部品図解頁の反対頁には参照番号、部品番号、名称、使用数量の順で記載されています。

部品番号の左に*印の付された部品は、複数の部品が組合された部品の一部品で個々に販売はしていません。ご購入の際はこれらの部品が組合された部品をご注文下さい。(列：5頁、*200819、送り調節ツマミモールディング用ナット、と送り調節ツマミが組合されて、参照番号13、200820、送り調節ツマミ(組)、となっています。)

本パーツ・リストの3頁～13頁にわたって、名称欄に使用機種名を指定しています部品は、指定された機種のみを使用される部品であります。したがって使用機種名を指定していない部品は、全機種に共用できます。DPS-2(縁縫用)、3、4形ミシンの専用部品は15頁に記載していますので参照して下さい。


本パーツ・リストの18頁には部品番号索引表を付し、部品番号のみでその図解、名称などが容易に引き出せます。

本パーツ・リストに基き部品ご注文の際、参照番号は絶対に使用されず、部品番号のみを明示して下さい。

本パーツ・リストは1971年10月現在製造中のミシンを基に作成されています。

CONTENTS


目次	PAGE
	頁
MACHINE ARM-BED, FRAME COVERS & NEEDLE THREAD PARTS.....アーム・ベッド・カバー・針糸調子機構.....	2 ~ 3
ARM SHAFT MECHANISM.....上シャフト機構.....	4 ~ 5
TAKE-UP LEVER AND NEEDLE DRIVE MECHANISM.....マネキ・針棒機構.....	6 ~ 7
PRESSER FOOT AND LIFT MECHANISM.....押エ機構.....	8 ~ 9
FEED MECHANISM.....送り機構.....	10 ~ 11
HOOK DRIVE MECHANISM.....釜機構.....	12 ~ 13
PARTS FOR MARGINAL STITCH OPERATION.....縁縫用専用部品 (DPS-2用).....	14 ~ 15
PARTS FOR MODEL DPS-3 & DPS-4.....DPS-3専用部品 DPS-4専用部品 (絨毯用).....	14 ~ 15
ACCESSORIES.....付属品.....	16 ~ 17
NUMERICAL INDEX OF PARTS.....部品番号索引表.....	18

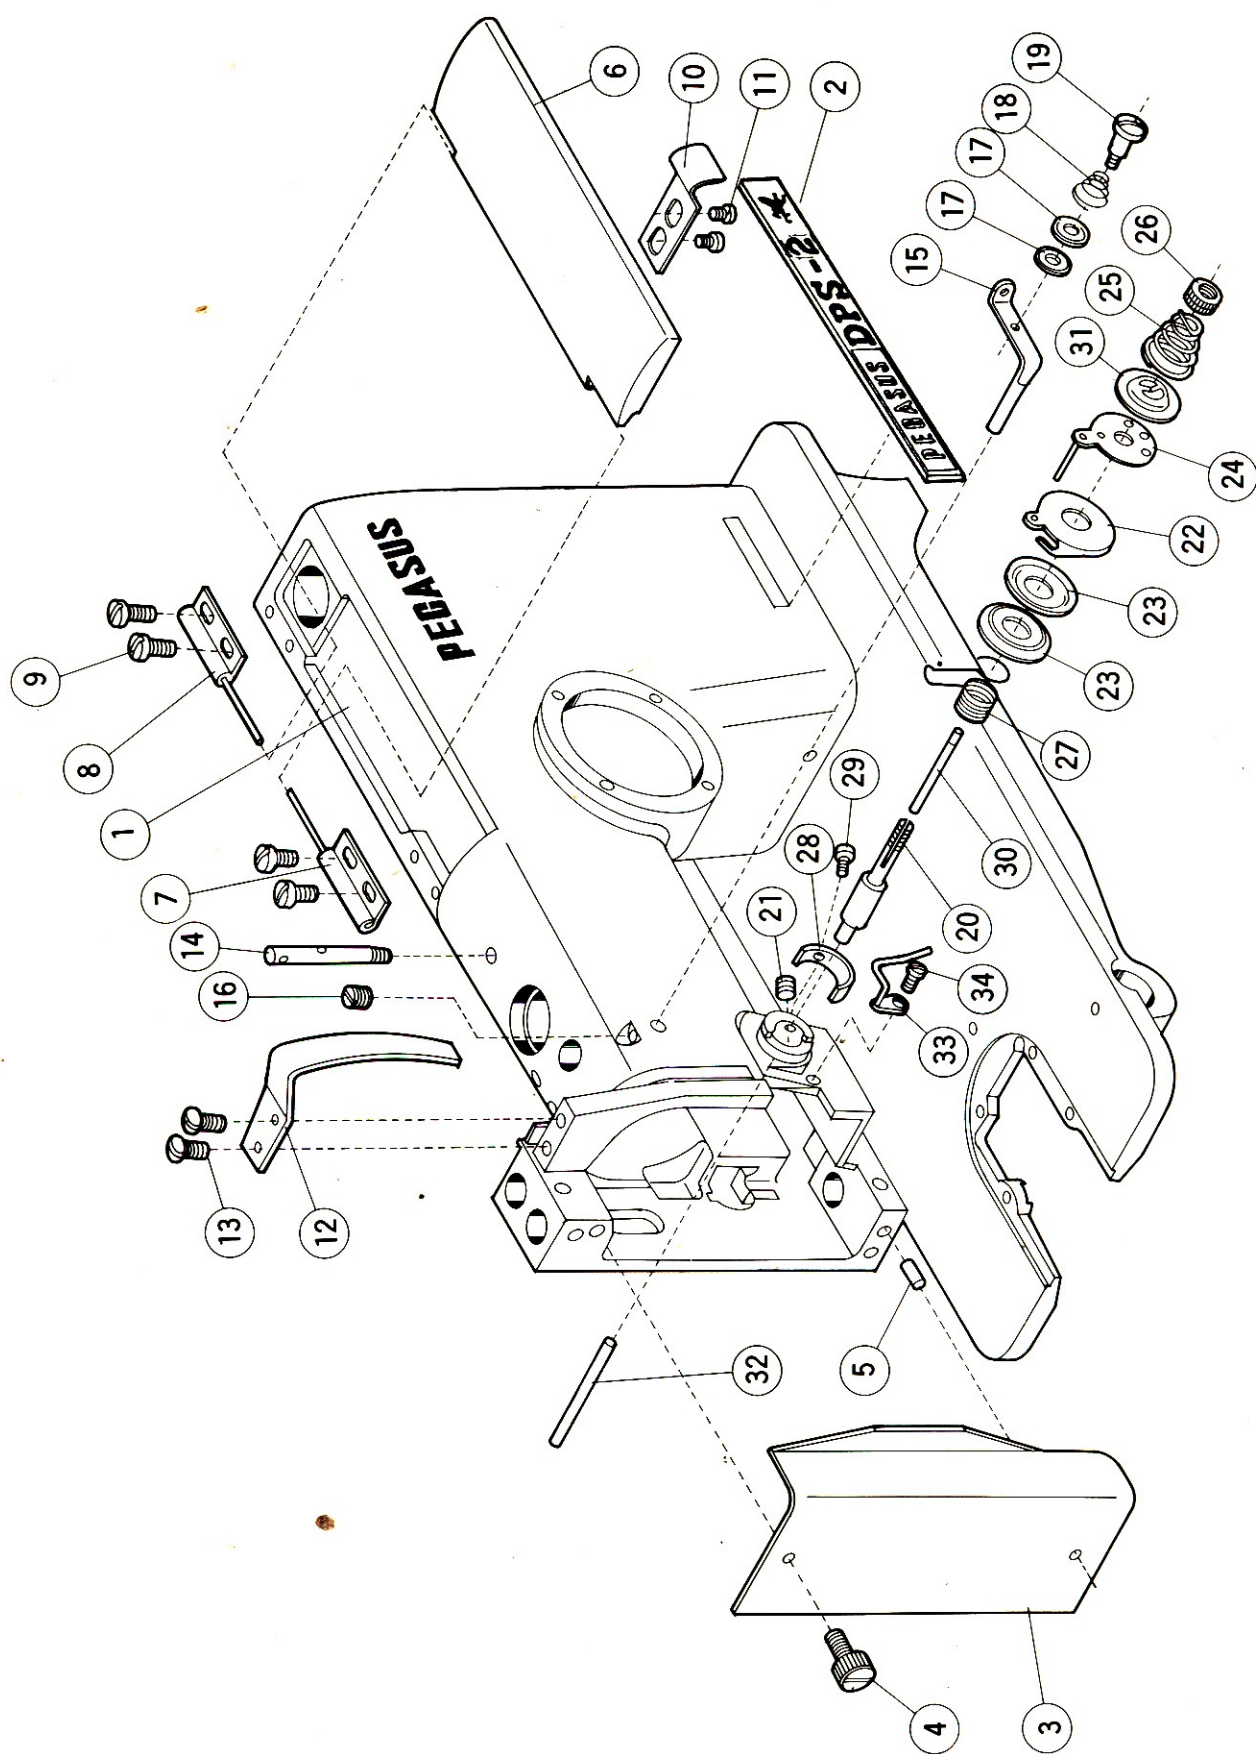

MACHINE ARM-BED, FRAME COVERS & NEEDLE THREAD PARTS

アーム・ベッド・カバー・針糸調子機構


Ref. No. 参照番号	Parts No. 部品番号	Name	名 称	Qt. 数量
1	200956	Arm-bed, complete with 200800A, 200801A, 178107×4, 178108×4 & 178109A	アーム・ベッド(組)200800A・200801A, 178107×4, 178108×4, 178109Aノ組	1
	* 200800A	Arm	アーム	1
	* 200801A	Bed	ベッド	1
	178107	Arm-bed screw	アーム・ベッド締ネジ	4
	178108	〃 〃 washer	〃 〃 ワッシャー	4
	178109A	〃 〃 taper pin	〃 〃 取付テーパーピン	2
2	200802	Model plate	形式板(DPS-2用)	1
3	200805	Face plate	面板カバー	1
4	5071	〃 〃 thumb screw	〃 止ネジ	1
5	178098-2A	〃 〃 position pin	〃 ピン	1
6	200806	Arm cap cover	角カバー	1
7	201709	〃 〃 〃 hinge (left), complete with 200807	〃 ヒンヂ(左)(組)200807トノ組	1
8	201707	〃 〃 〃 〃 (right), complete with 200807	〃 〃 (右)(組)200807トノ組	1
	200807	〃 〃 〃 〃 pin	〃 〃 ピン	2
9	5091	〃 〃 〃 〃 screw	〃 〃 (左)(右)止ネジ	4
10	200810	〃 〃 〃 lock spring	〃 止バネ	1
11	1234	〃 〃 〃 〃 screw	〃 〃 止ネジ	2
12	200853A	Take-up lever cover	マネキ保護板	1
13	96-1	〃 〃 〃 screw	〃 止ネジ	2
14	178102	Thread guide post	糸道棒	1
15	200878	〃 〃 〃 retainer bracket	針糸道	1
16	1458	〃 〃 〃 screw	〃 止ネジ	1
17	137108	〃 〃 〃 disc	小調子皿	2
18	137109	〃 〃 〃 spring	〃 バネ	1
19	1092	〃 〃 〃 screw	〃 皿止ネジ	1
	200911	〃 〃 〃 tension, complete with 200917, 83-1, 200912, 200913×2, 200914, 200915, 200916, 200918, 178091, 31-1, 200921, & 200920	針糸調子(組)200917,83-1,200912,200913×2, 1 200914, 200915, 200916, 200918, 178091, 31-1, 200921, 200920ノ組	1
20	200917	〃 〃 〃 post	針糸調子棒	1
21	83-1	〃 〃 〃 screw	〃 〃 止ネジ	1
22	200912	〃 〃 〃 spring cup	〃 皿受	1
23	200913	〃 〃 〃 disc	〃 皿	2
24	200914	〃 〃 〃 release washer	〃 〃 押え	1
25	200915	〃 〃 〃 spring	〃 バネ	1
26	200916	〃 〃 〃 thumb nut	〃 ナット	1
27	200918	〃 〃 〃 controller spring	〃 糸取バネ	1
28	178091	〃 〃 〃 stop	〃 調節器	1
29	31-1	〃 〃 〃 〃 screw	〃 〃 止ネジ	1
30	200921	〃 〃 〃 〃 tension release pin	糸ユルメピン	1
31	200920	〃 〃 〃 disc washer	〃 〃 突皿	1
32	200868	〃 〃 〃 release plunger	〃 押シ棒	1
33	178096	〃 〃 〃 eyelet	糸道A	1
34	96-1	〃 〃 〃 screw	〃 〃 止ネジ	1

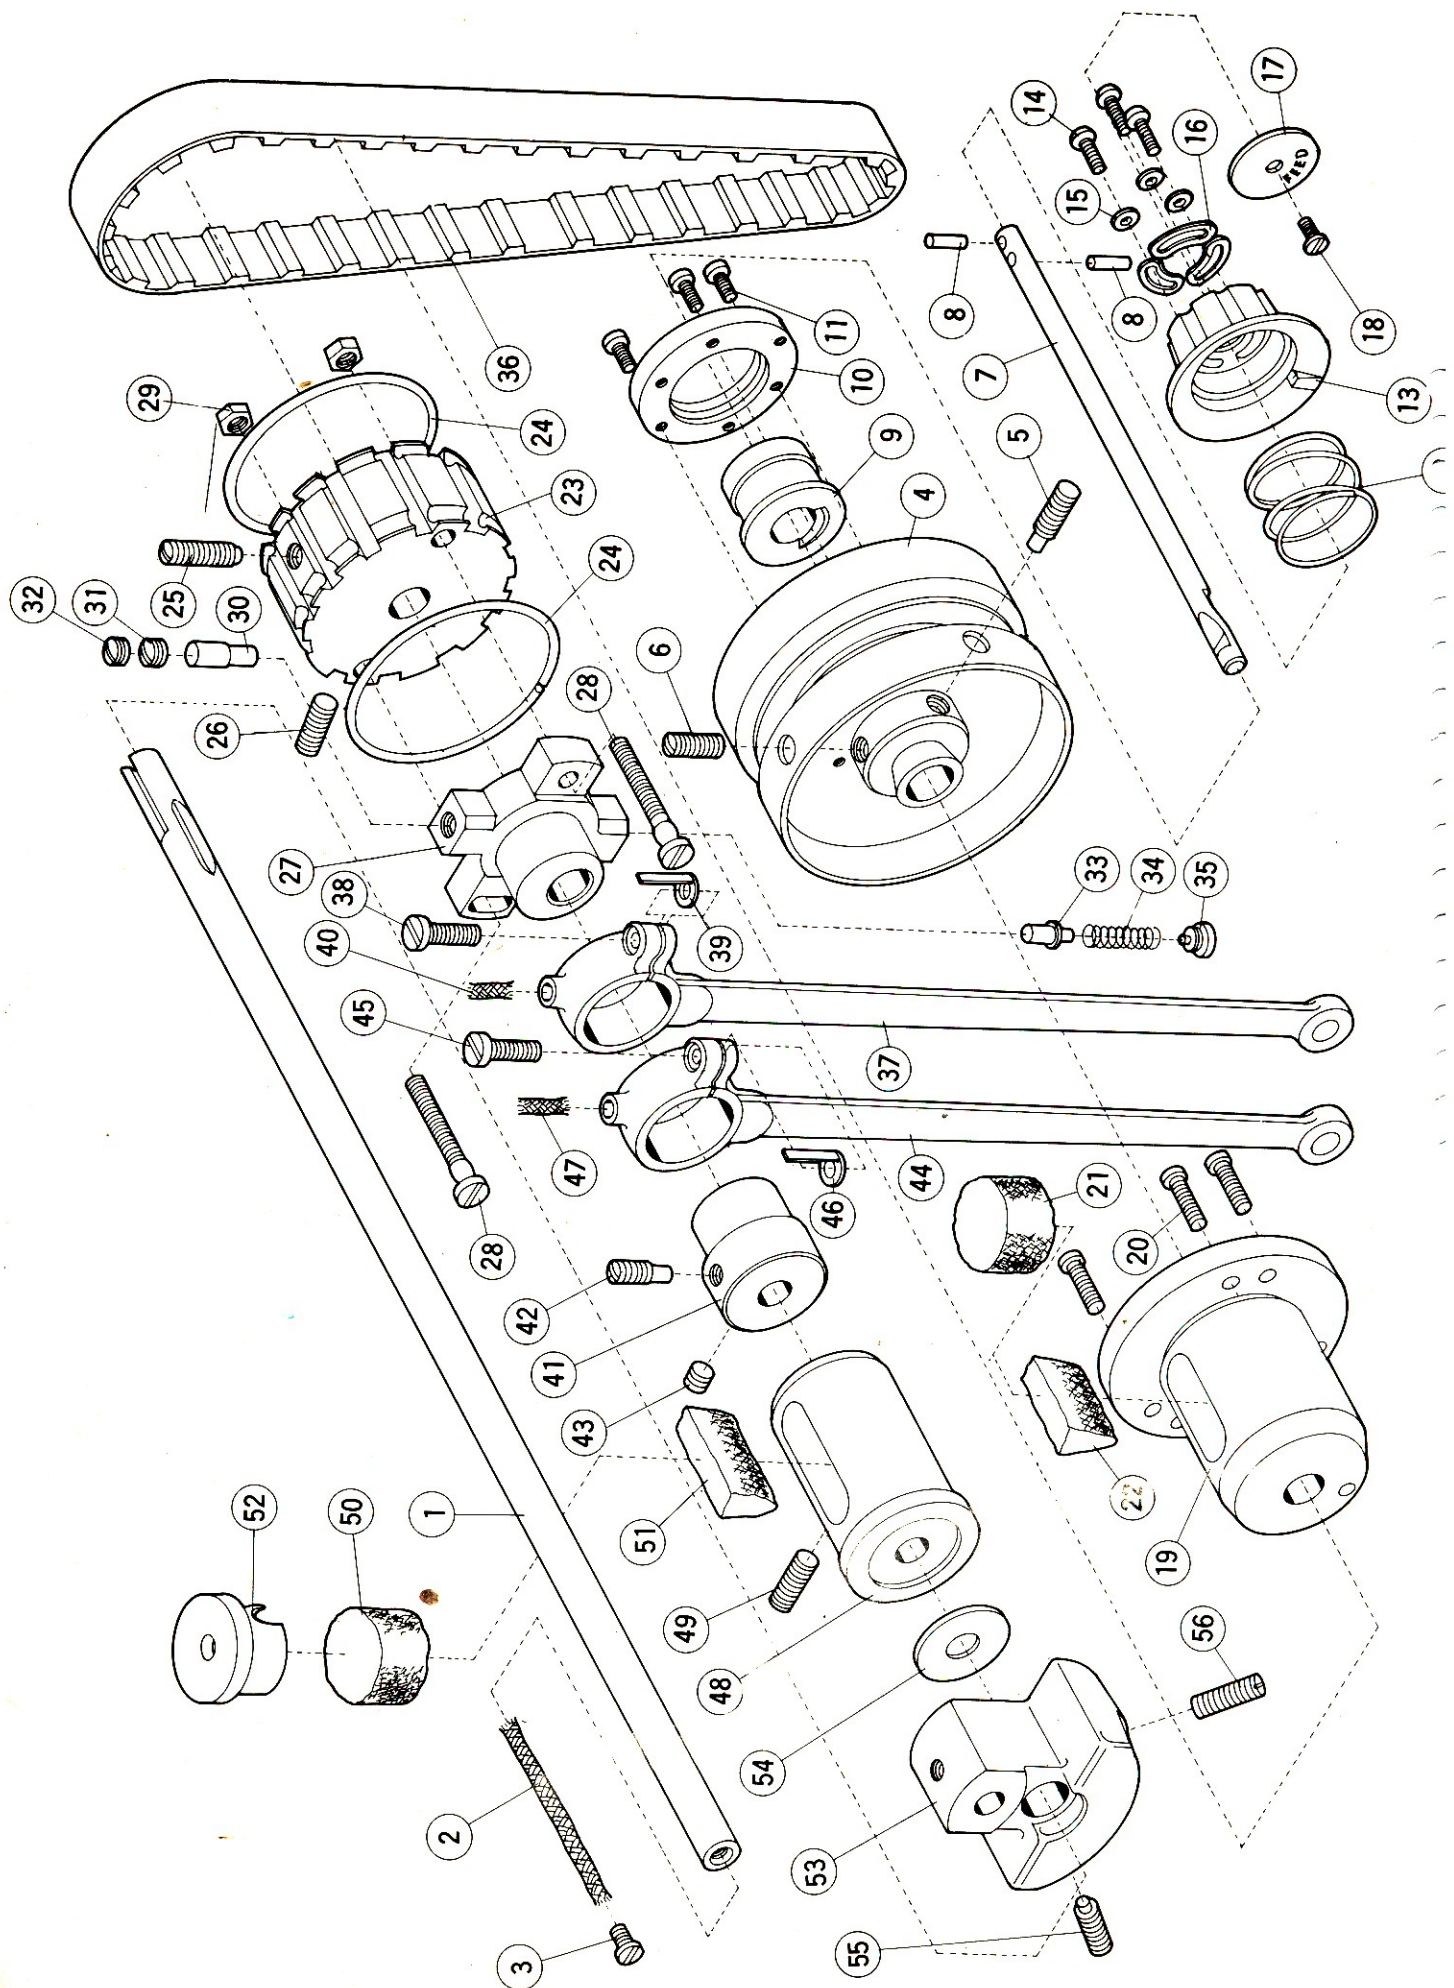

ARM SHAFT MECHANISM

上シャフト機構


Ref. No. 参照番号	Parts No. 部品番号	Name	名 称	Qt. 数量
1	200818	Arm shaft	上シャフト	1
2	202179	〃 〃 oil wick	〃 給油紐	1
3	3-1	〃 〃 〃 plug screw	〃 油蓋ネジ	1
4	200812A	Pulley	プーリー	1
5	5-1	〃 position screw	〃 止ネジ(先有)	1
6	5-2	〃 screw	〃 〃 (先無)	1
	200815	Feed regulating spindle, complete with 200813 & 200814×2	送り調節スライダ(組)200813, 200814×2トノ組	1
7	200813	〃 〃 spindle	〃 〃 本体	1
8	200814	〃 〃 〃 pin	〃 〃 打込ミピン	2
9	200816	〃 〃 〃 guide	送り調節ナット	1
10	200817	〃 〃 〃 〃 〃 plate	〃 〃 押板	1
11	2918	〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	3
12	200818	〃 〃 〃 〃 〃 spring	〃 〃 押バネ	1
13	200820	〃 〃 knob, complete with 200819	送り調節ツマミ(組)200819トノ組	1
	*200819	〃 〃 〃 molding nut	〃 〃 モールディング用ナット	1
14	2918	〃 〃 〃 screw	〃 〃 止ネジ	3
15	200821	〃 〃 〃 〃 washer	〃 〃 〃 座金	3
16	200884	〃 〃 〃 〃 〃	〃 〃 〃 〃 当板	3
17	200823	〃 〃 〃 cover plate	〃 〃 プレート	1
18	96-1	〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	1
19	200824	Arm shaft bushing(back)	後大ブッシュ	1
20	83-1	〃 〃 〃 〃 screw	〃 止ネジ	3
21	200870	〃 〃 〃 〃 oil wick(upper)	〃 給油フェルト(上)	1
22	200869	〃 〃 〃 〃 〃 (lower)	〃 〃 (下)	1
23	178007	〃 〃 connection belt pulley	ベルト歯車(大)	1
24	178008	〃 〃 〃 〃 〃 spring flange	〃 輪バネ(大)	2
25	5-2	〃 〃 〃 〃 〃 position screw	〃 (大)止ネジ(先有)	1
26	7-2	〃 〃 〃 〃 〃 screw	〃 〃 (先無)	1
27	200826	Feed drive eccentric regulating bracket	前後送りクランク球	1
28	7-3	〃 〃 〃 〃 〃 screw	〃 〃 段ネジ	2
29	7-4	〃 〃 〃 〃 〃 nut	〃 〃 〃 ナット	2
30	200827	〃 〃 〃 〃 〃 plunger	送り調節小ピン	1
31	15-1	〃 〃 〃 〃 〃 screw	〃 〃 押ネジ(下)	1
32	15-1	〃 〃 〃 〃 〃 screw	〃 〃 〃 (上)	1
33	200828	〃 〃 〃 〃 pin	前後送りクランク球押ピン	1
34	200829	〃 〃 〃 〃 〃 spring	〃 〃 〃 押バネ	1
35	16-6	〃 〃 〃 〃 〃 screw	〃 〃 〃 蓋ネジ	1
36	178009	Arm shaft connection belt	タイミングベルト	1
37	178010	Feed drive connection	前後送り立ロット	1
38	10-1	〃 〃 〃 screw	〃 〃 止ネジ	1
39	200885	〃 〃 〃 liner	〃 〃 ライナー	1
40	202179	〃 〃 〃 oil wick	〃 〃 給油紐	1
41	178022	〃 lift connection eccentric	上下送りクランク球	1
42	22-1	〃 〃 〃 〃 position screw	〃 〃 ピンネジ	1
43	26-3	〃 〃 〃 〃 screw	〃 〃 止ネジ	1
44	178023	〃 〃 connection	上下送り立ロット	1
45	10-1	〃 〃 〃 screw	〃 〃 止ネジ	1
46	200885	〃 〃 〃 liner	〃 〃 ライナー	1
47	202179	〃 〃 〃 oil wick	〃 〃 給油紐	1
48	178024	Arm shaft bushing(front)	前大ブッシュ	1
49	24-1	〃 〃 〃 〃 screw	〃 止ネジ	1
50	200870	〃 〃 〃 〃 oil wick(upper)	〃 給油フェルト(上)	1
51	200871	〃 〃 〃 〃 〃 (lower)	〃 〃 (下)	1
52	200841	〃 〃 〃 〃 〃 plug	〃 油栓	1
53	178026	Needle bar crank	上シャフトモーション(DPS-2.3用)	1
54	178025	Arm shaft washer	〃 ワッシャー	1
55	7-2	Needle bar crank position screw	〃 モーションピンネジ	1
56	5-2	〃 〃 〃 screw	〃 〃 止ネジ	1

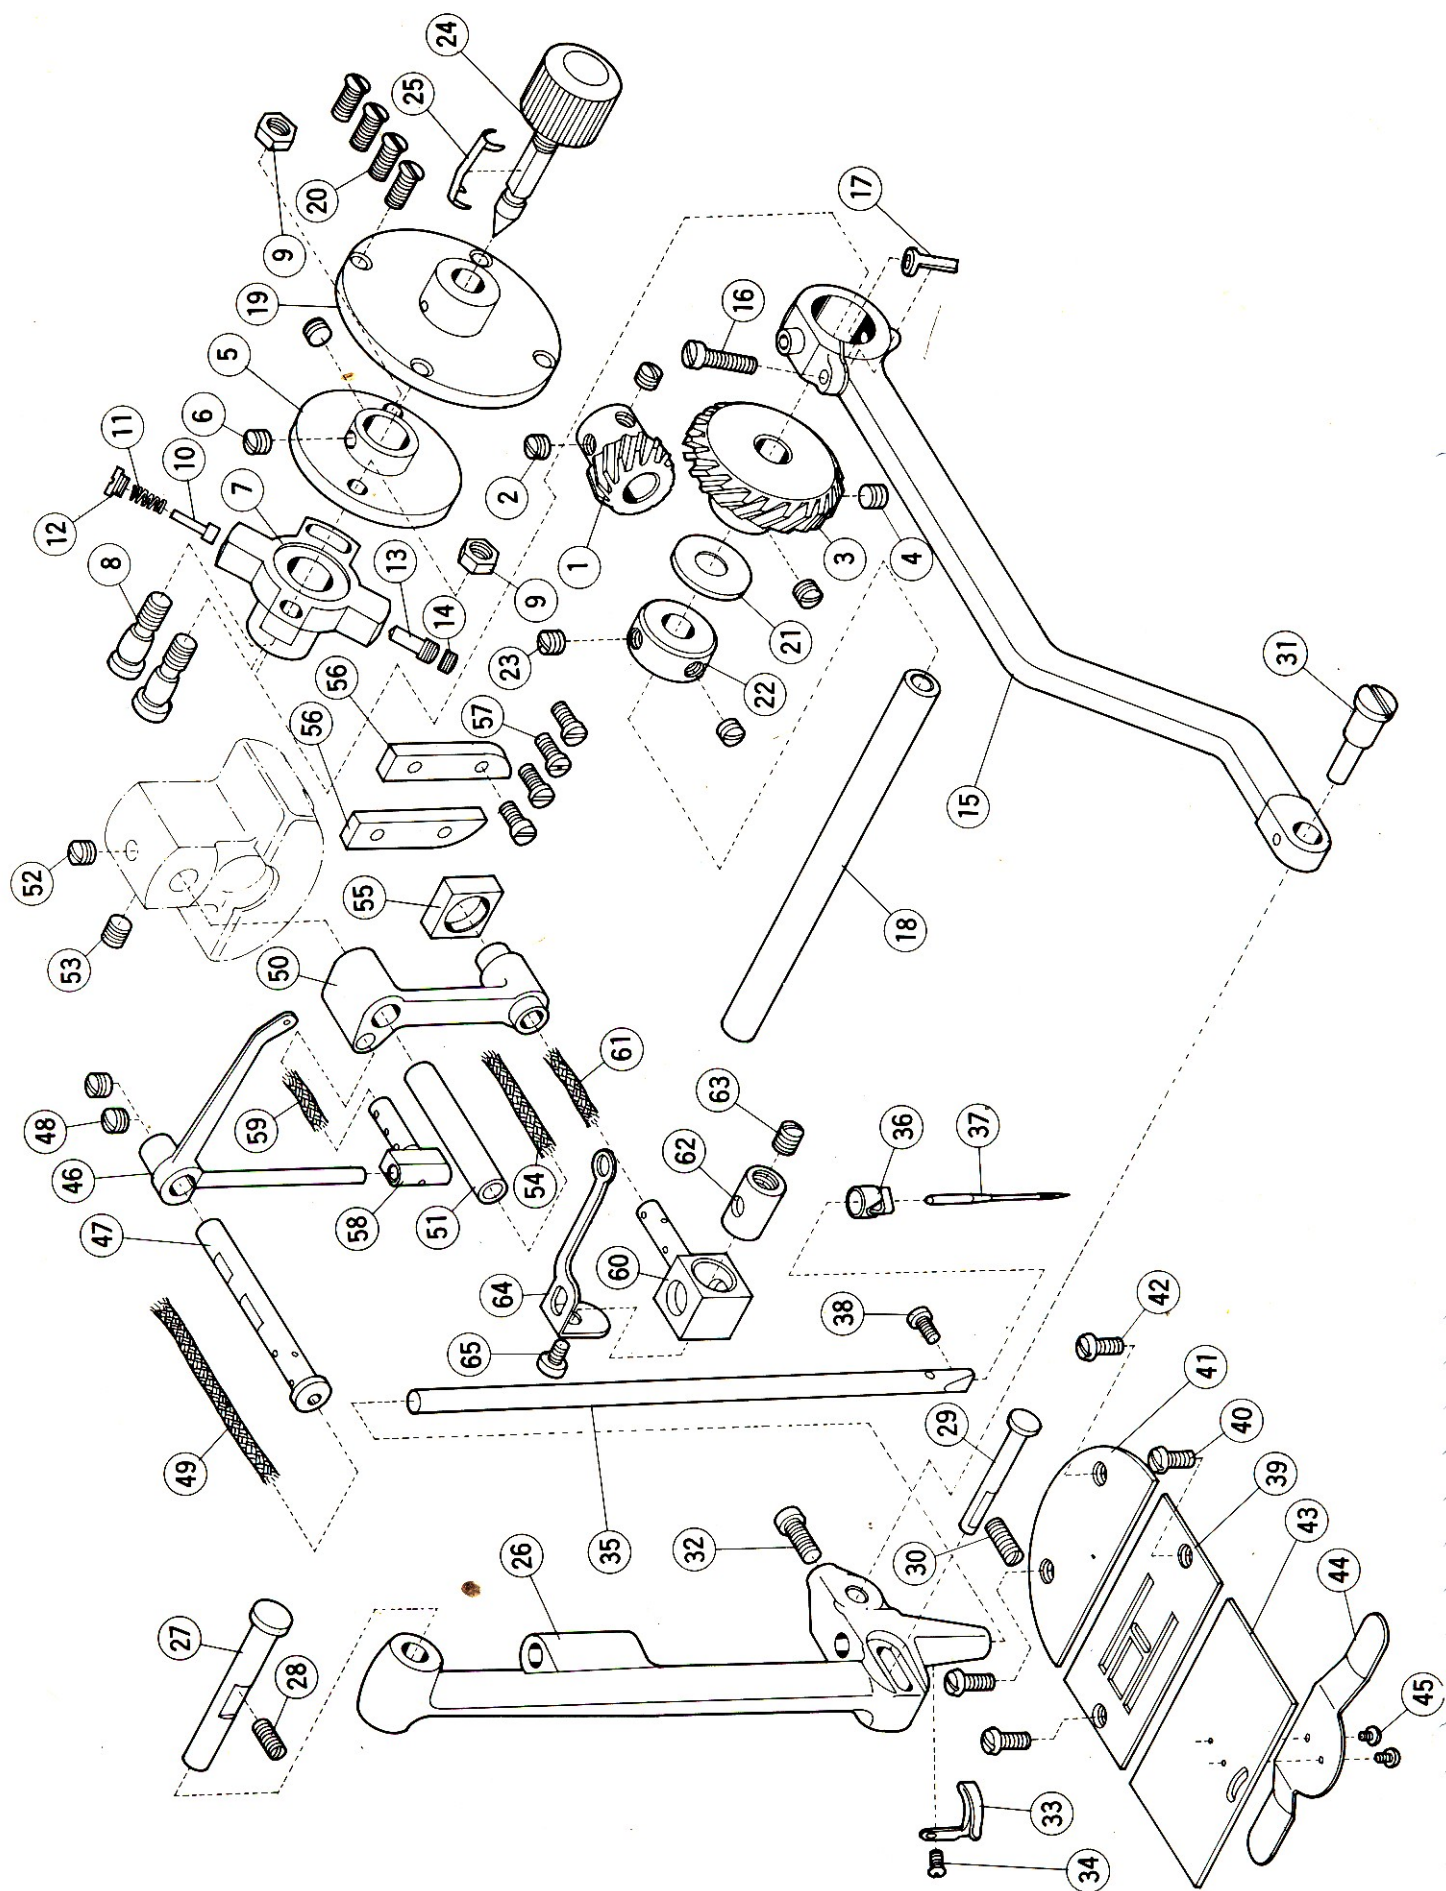

TAKE-UP LEVER AND NEEDLE DRIVE MECHANISM

マ ネ キ ・ 針 棒 機 構


Ref. No. 参照番号	Parts No. 部品番号	Name	名 称	Qt. 数量
1	178011	Needle vibrator pinion	針振り歯車(小)	1
2	11-1	〃 〃 〃 screw	〃 〃 〃 止ネジ	2
3	178018	〃 〃 gear	〃 〃 (大)	1
4	11-1	〃 〃 〃 screw	〃 〃 〃 止ネジ	2
5	178015	〃 〃 eccentric regulating bracket flange	針振りクランク球台	1
6	15-1	〃 〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	2
7	200826	〃 〃 〃 〃 〃 bracket	〃 〃 〃	1
8	16-1	〃 〃 〃 〃 〃 screw	〃 〃 〃 段ネジ	2
9	7-4	〃 〃 〃 〃 〃 nut	〃 〃 〃 ナット	2
10	200883	〃 〃 〃 〃 〃 plunger	〃 〃 〃 押シピン	1
11	200829	〃 〃 〃 〃 〃 〃 spring	〃 〃 〃 〃 押バネ	1
12	5280	〃 〃 〃 〃 〃 〃 stop screw	針振りクランク球押シピン蓋ネジ	1
13	5268	〃 〃 〃 〃 〃 〃 regulating screw	針振りクランク球ピンネジ	1
14	15-1	〃 〃 〃 〃 〃 〃 check screw	〃 〃 〃 止ネジ	1
15	200830	〃 bar frame pitman	針振りロッド	1
16	10-1	〃 〃 〃 〃 〃 pinch screw	〃 〃 〃 止ネジ	1
17	200885	〃 〃 〃 〃 〃 liner	〃 〃 〃 ライナー	1
18	200880	〃 vibrator gear shaft	〃 〃 〃 調節シャフト	1
19	178014	〃 〃 〃 〃 〃 〃 eccentric regulating bracket cover plate	針振り部蓋	1
20	14-1	〃 〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	4
21	178019	〃 〃 〃 〃 〃 〃 gear shaft washer	針振り調節シャフトワッシャー	1
22	178020	〃 〃 〃 〃 〃 〃 collar	〃 〃 〃 振れ止ブッシュ	1
23	20-1	〃 〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	2
24	200881	〃 〃 〃 〃 〃 〃 regulating spindle	針振り調節器	1
25	200882	〃 〃 〃 〃 〃 〃 spring	〃 〃 〃 板バネ	1
26	200824	〃 bar frame	針棒振り子	1
27	178028	〃 〃 〃 〃 〃 hinge stud	〃 〃 〃 上ピン	1
28	28-1	〃 〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	1
29	178029	〃 〃 〃 〃 〃 〃 guide stud	〃 〃 〃 下ピン	1
30	28-1	〃 〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	1
31	178030	〃 〃 〃 〃 〃 〃 pitman eccentric stud	〃 〃 〃 エキセンピン	1
32	30-1	〃 〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	1
33	178032A	〃 〃 〃 〃 〃 〃 thread guide	針棒糸掛	1
34	1186	〃 〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	1
35	178031	〃 bar	針棒(DPS-2.3用)	1
36	178110	〃 〃 〃 〃 〃 〃 thread eyelet	針棒糸道	1
37	DP×5	Needle	針	1
38	31-1	〃 clamp screw	〃 止ネジ	1
39	200844	〃 plate	両針板(DPS-2用)	1
40	31-1	〃 〃 screw	〃 止ネジ	2
41	200332	Bed plate	半月板	1
42	31-1	〃 〃 〃 screw	〃 止ネジ	2
43	178036	〃 slide	差し板(DPS-2.3用)	1
44	178037	〃 〃 lock spring	〃 裏バネ	2
45	37-1	〃 〃 〃 〃 screw	〃 〃 止ネジ	2
46	200852	Take-up lever	マネキ	1
47	200854	〃 〃 〃 hinge stud	〃 元ピン	1
48	5185	〃 〃 〃 〃 screw	〃 〃 止ネジ	2
49	202179	〃 〃 〃 oil wick	〃 〃 給油紐	1
50	200855	Needle bar connecting link	針棒上下クランク	1
51	178053	〃 〃 〃 〃 〃 hinge stud	〃 〃 元ピン	1
52	15-1	〃 〃 〃 〃 〃 〃 screw(short)	〃 〃 止ネジ(短)	1
53	26-3	〃 〃 〃 〃 〃 〃 (long)	〃 〃 〃 (長)	1
54	202179	〃 〃 〃 〃 〃 〃 oil wick	〃 〃 〃 給油紐	1
55	200856	〃 〃 〃 〃 〃 〃 block	〃 〃 〃 角玉	1
56	200857A	〃 〃 〃 〃 〃 〃 guide	〃 〃 〃 案内(A)	2
57	83-1	〃 〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	4
58	178054	Take-up lever drive stud	マネキ上下抱キ	1
59	202179	〃 〃 〃 〃 〃 〃 oil wick	〃 〃 〃 給油紐	1
60	200859	Needle bar connecting stud	針棒上下抱キ箱	1
61	202179	〃 〃 〃 〃 〃 〃 oil wick	〃 〃 〃 給油紐	1
62	178056	〃 〃 〃 〃 〃 〃 swivel	針棒抱キ	1
63	56-1	〃 〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	1
64	200860	Take-up auxiliary	針棒糸押シ	1
65	31-1	〃 〃 〃 screw	〃 〃 〃 止ネジ	1

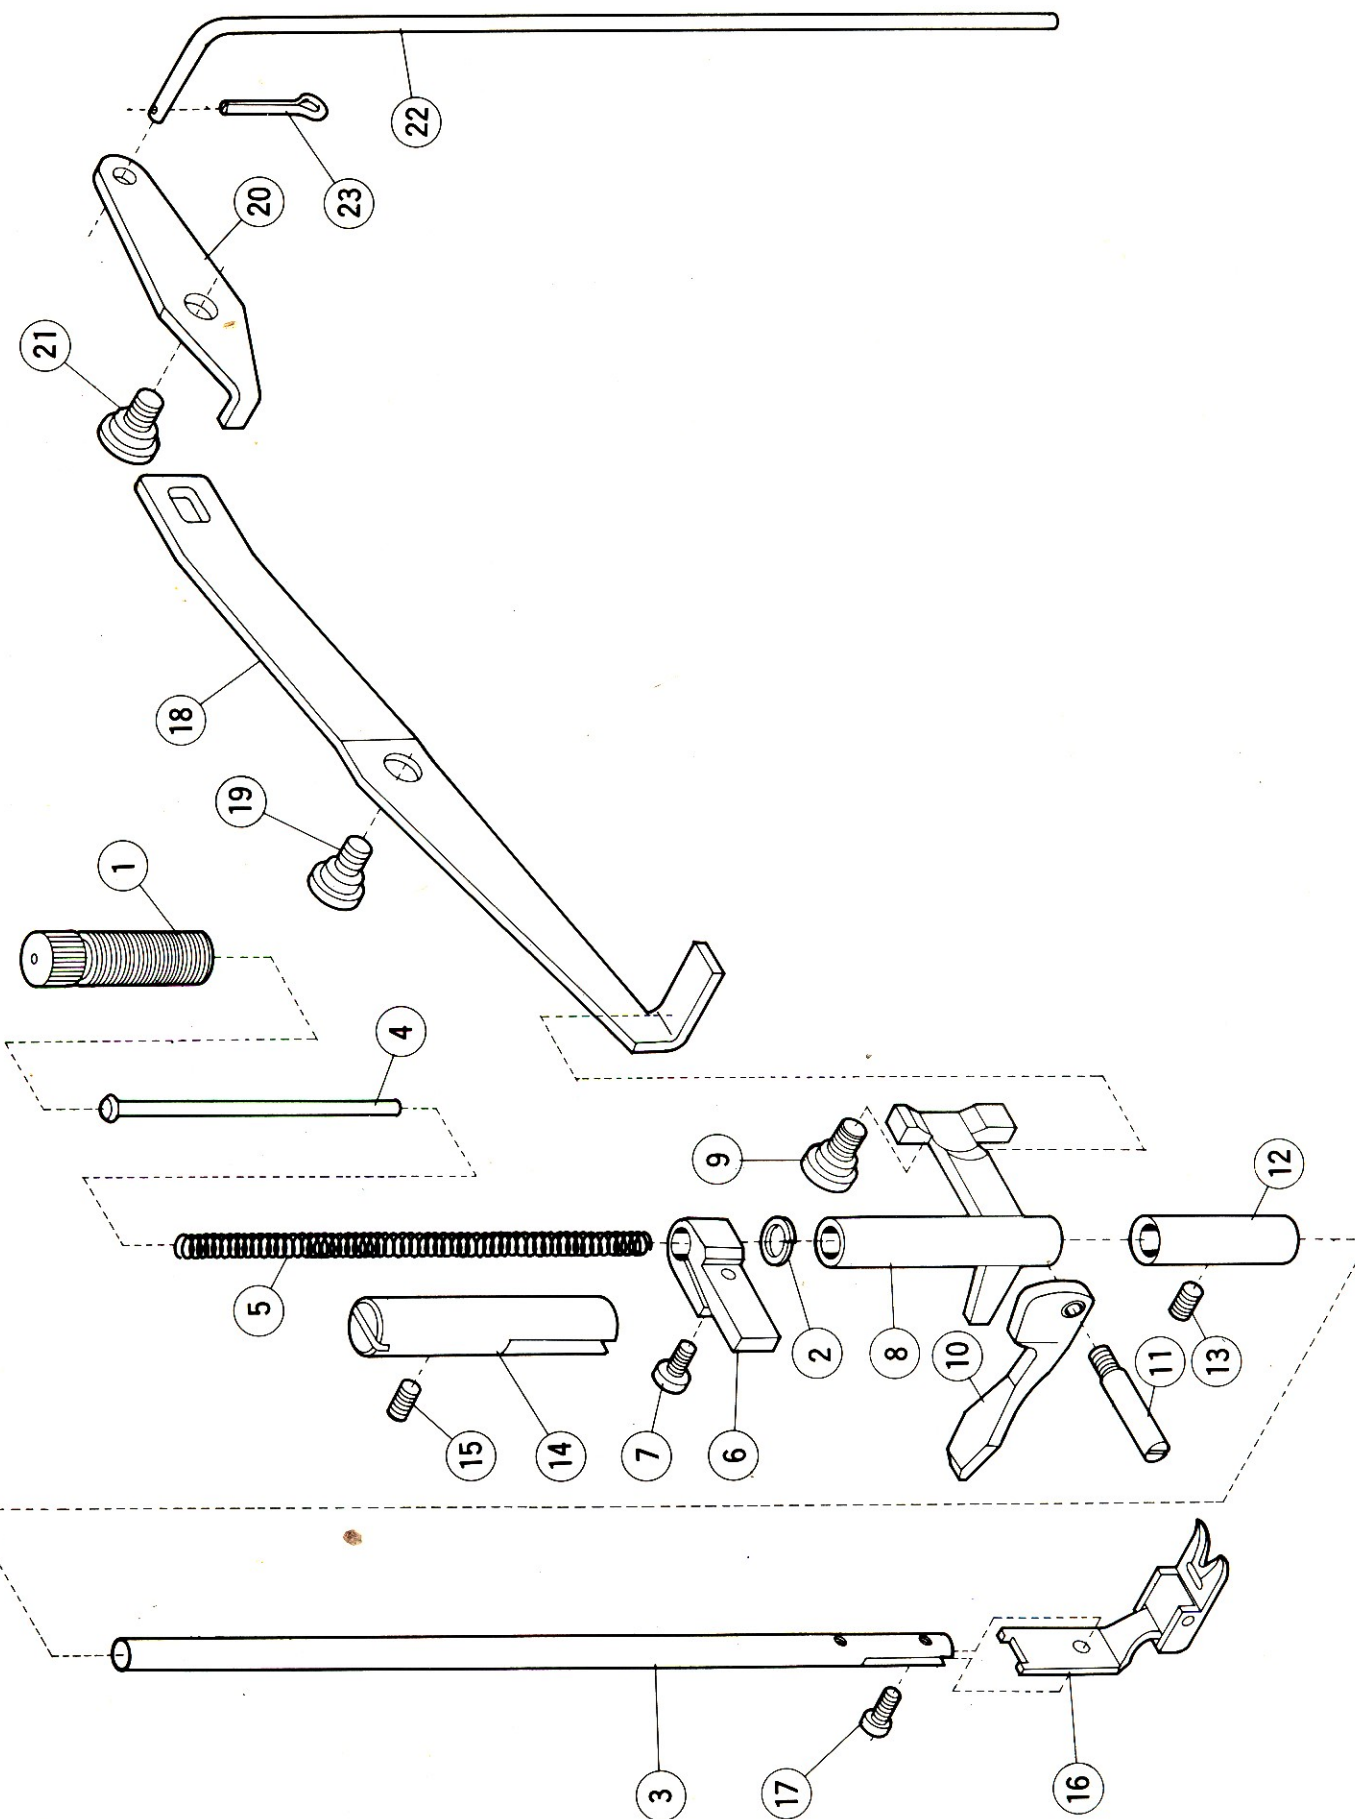

PRESSER FOOT AND LIFT MECHANISM

押 工 機 構


Ref. No.	Parts No.	Name	名 称	Q 数
参照番号	部品番号			
1	200846	Presser bar thumb screw	押工棒帽子ネジ	
2	178039	〃 〃 spring washer	〃 スプリングワッシャー	
3	178040A	〃 bar	〃	
4	178041A	〃 〃 spring stop rod	押工バネ押シピン	
5	178042	〃 〃 spring	押工バネ(DPS-2,3用)	
6	178043	〃 〃 position guide lever	押工振レ止メ	
7	43-1	〃 〃 〃 〃 〃 screw	〃 〃 止ネジ	
8	200847	〃 〃 lift lever bracket	押工揚ゲ	
9	44-1	〃 〃 〃 〃 〃 guide screw	〃 振り止ネジ	
10	200848	〃 〃 lifter	押工手揚	
11	45-1	〃 〃 〃 hinge screw	〃 ビンネジ	
12	178046	〃 〃 bushing	押工棒パイプ	
13	26-3	〃 〃 〃 screw	〃 〃 止ネジ	
14	178047	〃 〃 position guide	押工振レ止メレールピン	
15	26-3	〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	
16	178048	〃 foot	両押工(DPS-2用)	
17	40-1	〃 〃 screw	〃 止ネジ	
18	200849	Knee lifter lifting lever	押工足揚板(A)	
19	103-1	〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	
20	200850	〃 〃 connection lever	〃 〃 (B)	
21	103-1	〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	
22	200851	〃 〃 〃 〃 〃 lifting rod	押工足揚棒	
23	178106	〃 〃 〃 〃 〃 〃 cotter pin	〃 〃 割ピン	

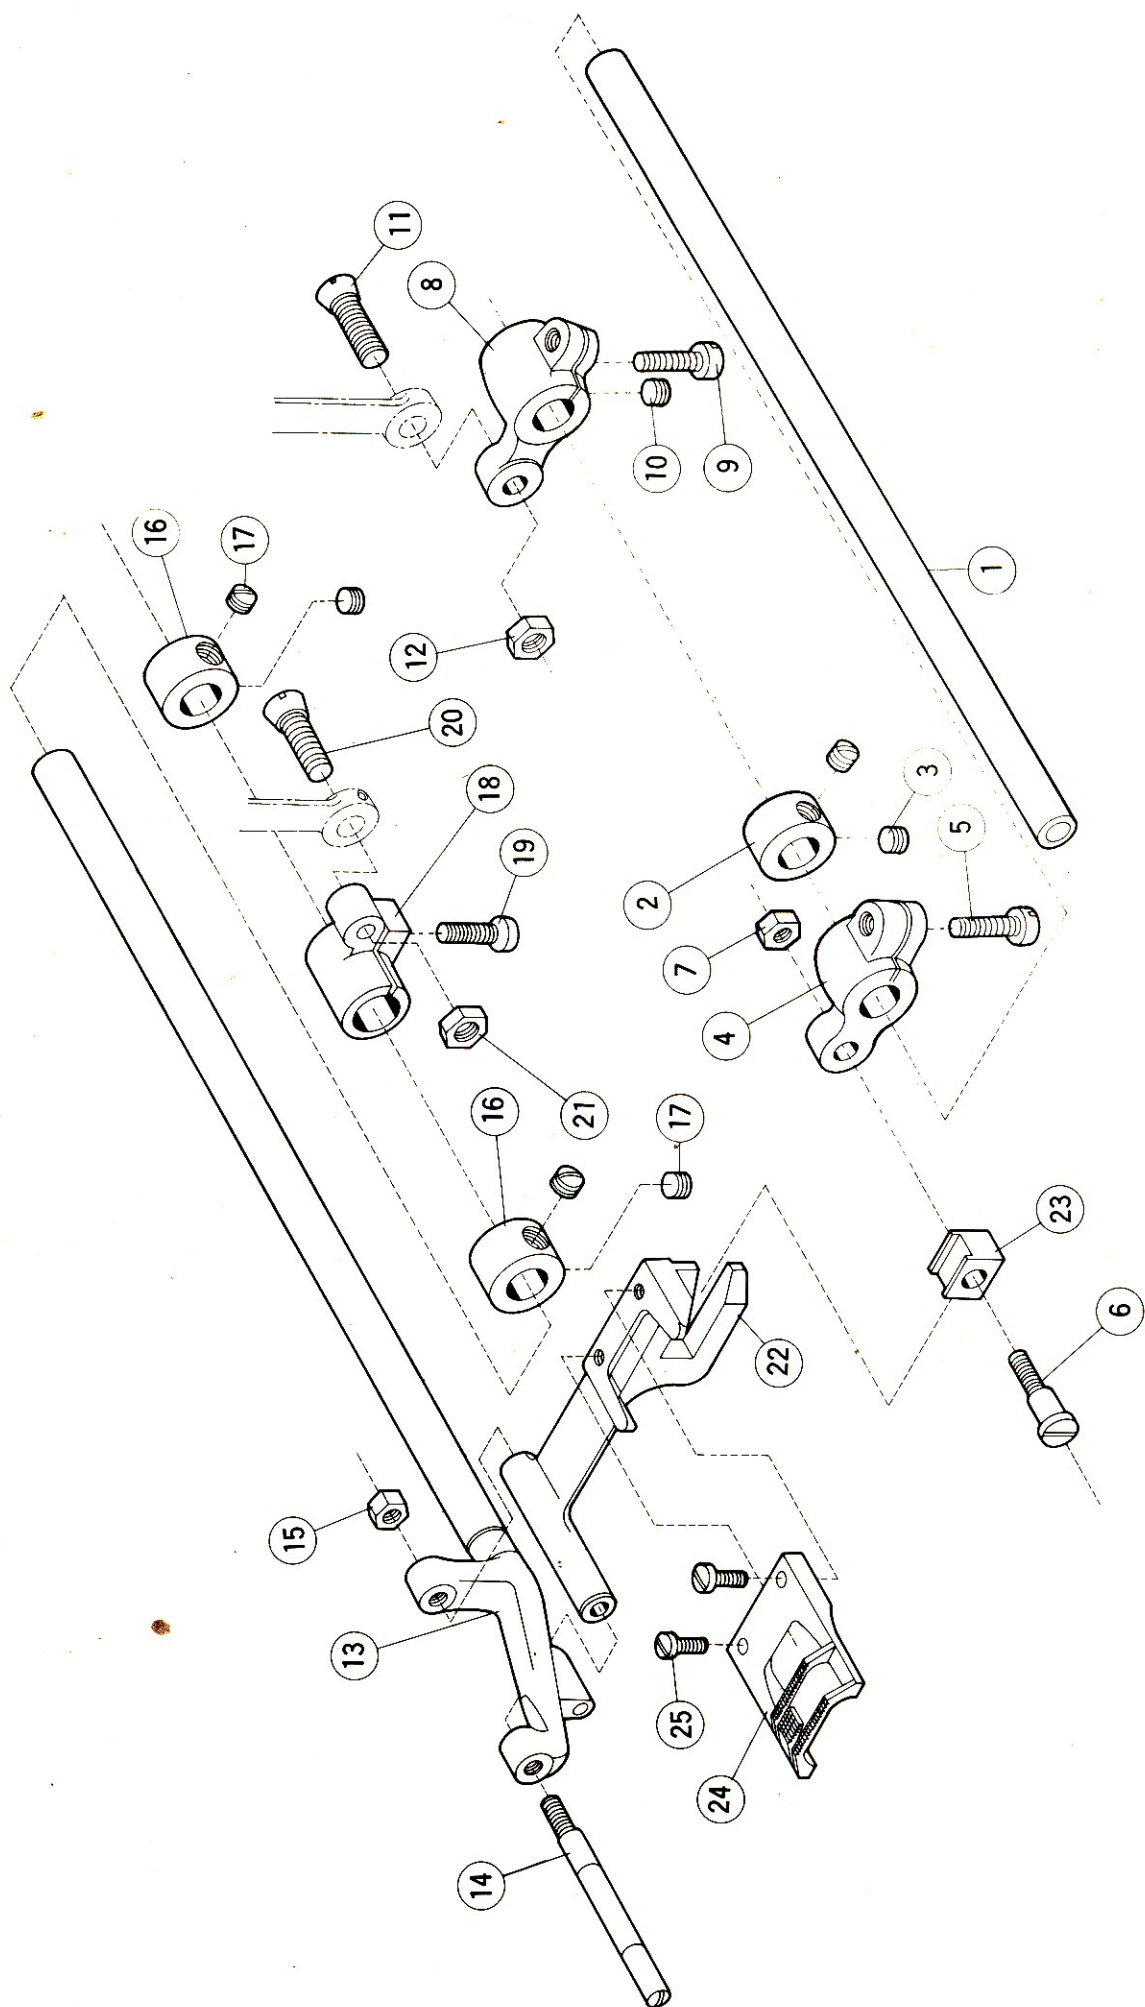

FEED MECHANISM

送り機構




Ref. No. 参照番号	Parts No. 部品番号	Name	名 称	Qt. 数量
1	178058	Feed lift rockshaft	送り上下シャフトパイプ	1
2	178059	〃 〃 〃 collar	〃 〃 〃 カラー	1
3	15-1	〃 〃 〃 〃 screw	〃 〃 〃 〃 止ネジ	2
4	178060	〃 bar slide block crank	前送り上下ダルマ	1
5	60-3	〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	1
6	60-1	〃 〃 〃 〃 hinge screw	送り台角玉段ネジ	1
7	60-2	〃 〃 〃 〃 〃 nut	〃 〃 〃 ナット	1
8	178061	〃 lift connection crank	後送り上下ダルマ	1
9	61-3	〃 〃 〃 〃 pinch screw	〃 〃 抱キネジ	1
10	11-1	〃 〃 〃 〃 set screw	〃 〃 止ネジ	1
11	61-1	〃 〃 〃 hinge screw	立ロット皿ネジ	1
12	61-2	〃 〃 〃 〃 nut	〃 〃 ナット	1
13	178066	〃 drive rockshaft	送り前後シャフト	1
14	178067	〃 bar hinge screw	送り台元ピンネジ	1
15	61-2	〃 〃 〃 〃 nut	〃 〃 ナット	1
16	178068	〃 drive rockshaft collar	送り前後シャフトカラー	2
17	15-1	〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	4
18	178069	〃 〃 connection crank	送り前後ダルマ	1
19	61-3	〃 〃 〃 〃 pinch screw	〃 〃 抱キネジ	1
20	61-1	〃 〃 〃 hinge screw	送り前後ロット皿ネジ	1
21	61-2	〃 〃 〃 〃 〃 nut	〃 〃 〃 ナット	1
22	178070	〃 bar	送り台	1
23	178071	〃 〃 slide block	送り上下角玉	1
24	178072	〃 dog	両送り歯 (DPS-2用)	1
25	70-1	〃 〃 screw	送り歯止ネジ	2

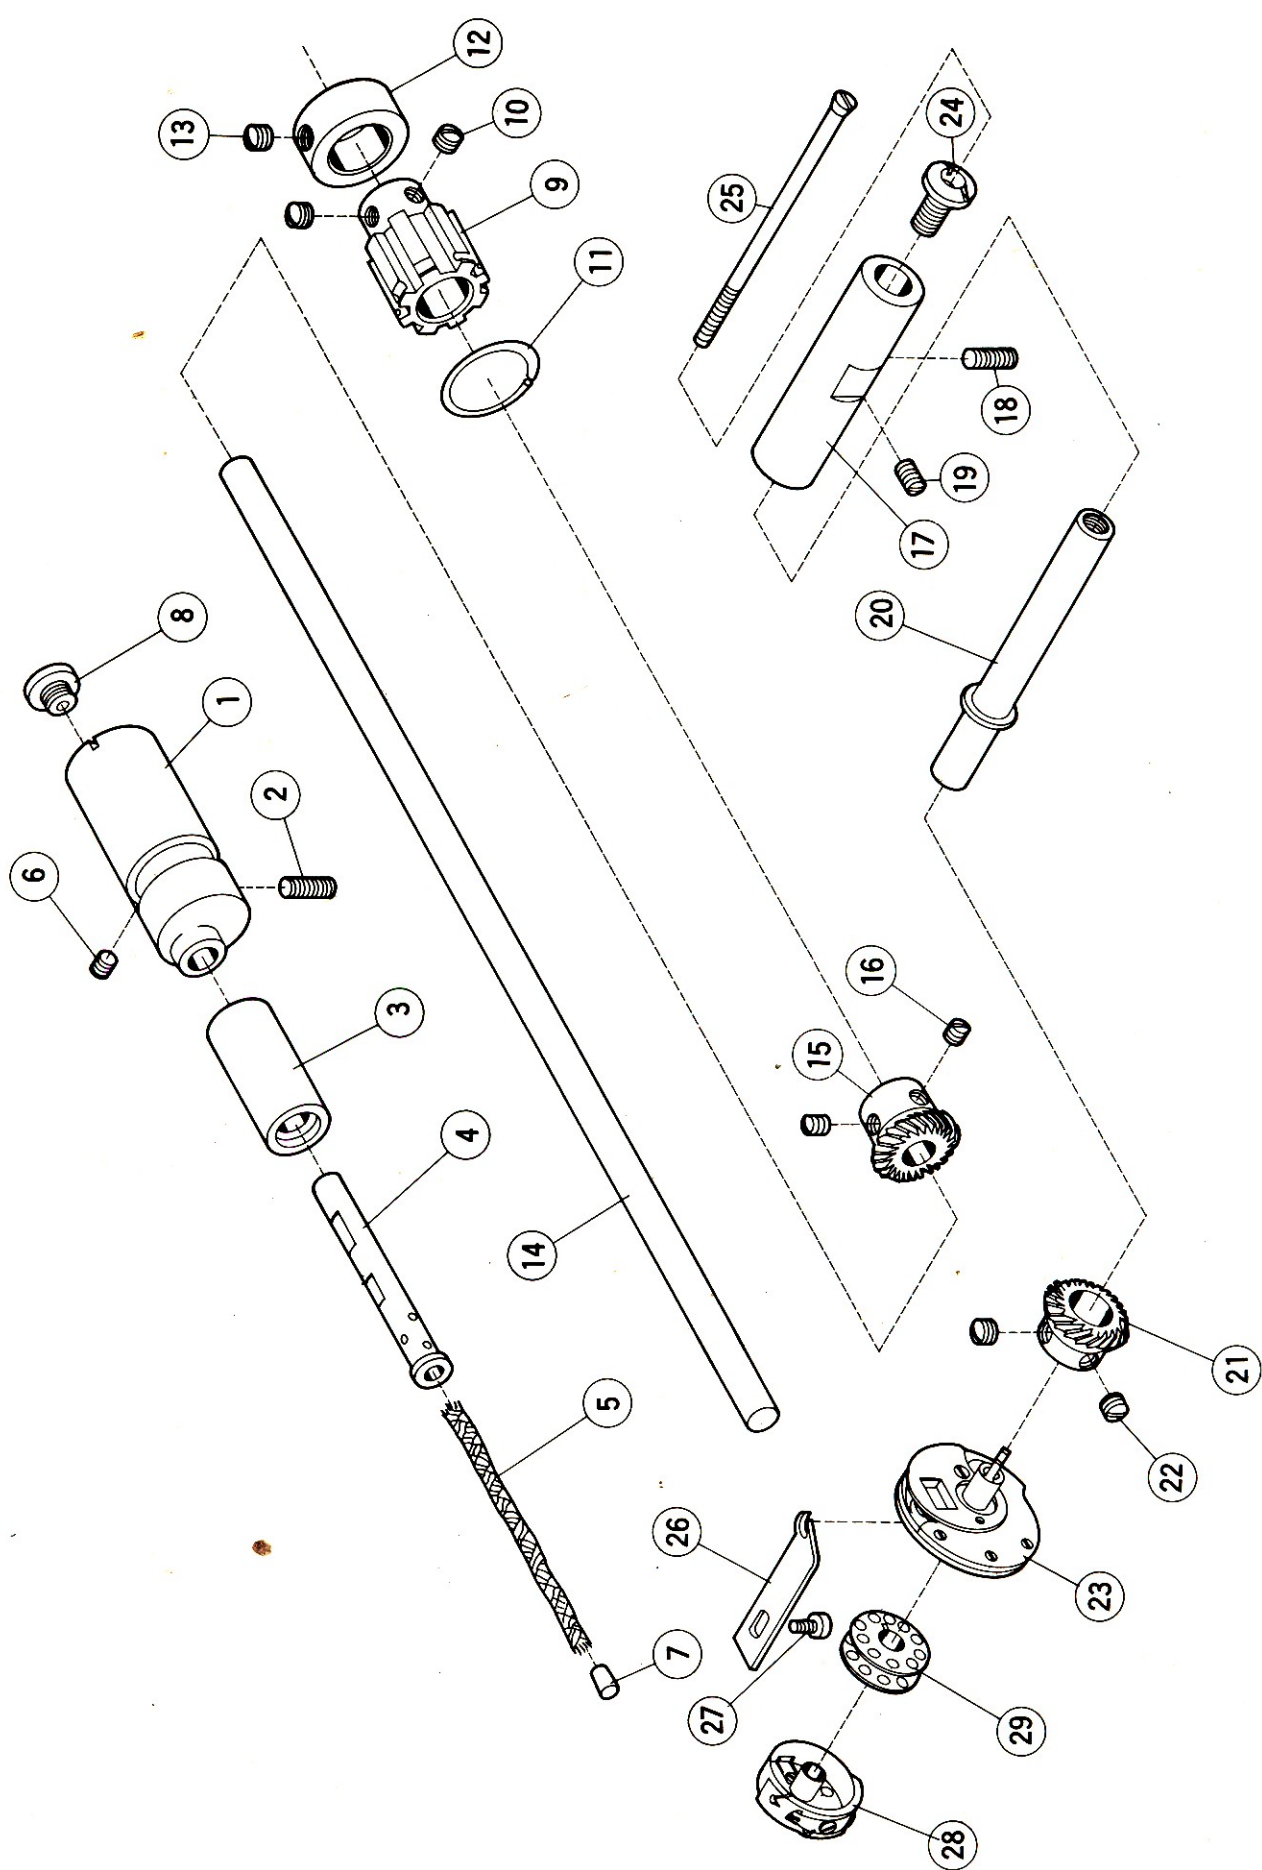

HOOK DRIVE MECHANISM

釜 機 構

Ref. No.	Parts No.	Name	名 称	Qty.
参照番号	部品番号			数量
1	200847	Belt tightener bracket	ベルト張り土台	1
2	5-2	〃 〃 〃 screw	〃 〃 止ネジ	1
3	200875	〃 tightener, complete with 201083	〃 ローラー 201083トノ組	1
4	200845	〃 〃 pin	〃 〃 ピン	1
5	202179	〃 〃 〃 oil wick	〃 〃 〃 給油紐	1
6	56-1	〃 〃 〃 screw	〃 〃 〃 止ネジ	1
7	202903	〃 〃 〃 plug	〃 〃 〃 栓	1
8	200876	Oil plug	油栓	1
9	178063	Hook drive bevel pinion shaft belt pulley	ベルト歯車(小)	1
10	20-1	〃 〃 〃 〃 〃 〃 〃 screw	〃 〃 止ネジ	2
11	178064	〃 〃 〃 〃 〃 〃 〃 spring flange	〃 輪バネ(小)	1
12	200879	〃 〃 〃 〃 〃 〃 〃 collar	〃 (小)用カラー	1
13	20-1	〃 〃 〃 〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	1
14	178062	〃 〃 〃 〃 shaft	釜歯車シャフト	1
15	178065	〃 〃 〃 pinion	釜シャフト歯車(1)	1
16	11-1	〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	2
17	178074	〃 shaft bushing	釜シャフトパイプ	1
18	5-2	〃 〃 〃 〃 screw(long)	〃 〃 止ネジ(長)	1
19	26-3	〃 〃 〃 〃 (short)	〃 〃 〃 (短)	1
20	178075	〃 shaft	釜シャフト	1
21	178076	〃 〃 bevel pinion	〃 歯車(2)	1
22	11-1	〃 〃 〃 〃 screw	〃 〃 〃 止ネジ	2
23	179077	Hook, complete	釜(組)(DPS-2.3用)	1
	* 179077-1	Bobbin case base	中釜	1
	* 179077-2	Hook gib	三日月	1
	* 179077-3	〃 〃 screw	〃 止ネジ	3
	* 179077-4	〃 washer needle guard	釜下板バネ	1
	* 179077-5	〃 〃 〃 〃 pin	〃 〃 止ピン	1
	* 179077-6	〃 〃 〃 〃 screw	〃 〃 止ネジ	1
24	178078	〃 shaft	釜シャフト止ネジ	1
25	178079	〃 position screw	釜引ネジ	1
26	178080	Bobbin case stop	中釜止メ	1
27	80-1	〃 〃 〃 screw	〃 止ネジ	1
28	178081	〃 case, complete with 178081-1,-2,-3,-4,-5,-6,-7 & -8,	ボビンケース(組)178081-1~178081-8トノ組	1
	* 178081-1	〃 〃 latch	〃 ツマミ (下)	1
	* 178081-2	〃 〃 〃 lever	〃 〃 (上)	1
	* 178081-5	〃 〃 〃 〃 pin	〃 〃 〃 ピン	1
	* 178081-4	〃 〃 〃 spring	ツマミ押エバネ	1
	* 178081-6	〃 〃 〃 stop screw	〃 止ネジ	1
	* 178081-3	〃 〃 〃 tension spring	舟バネ	1
	* 178081-7	〃 〃 〃 〃 screw	〃 止ネジ	1
	* 178081-8	〃 〃 〃 〃 regulating screw	〃 調節ネジ	1
29	178082	Bobbin	ボビン	

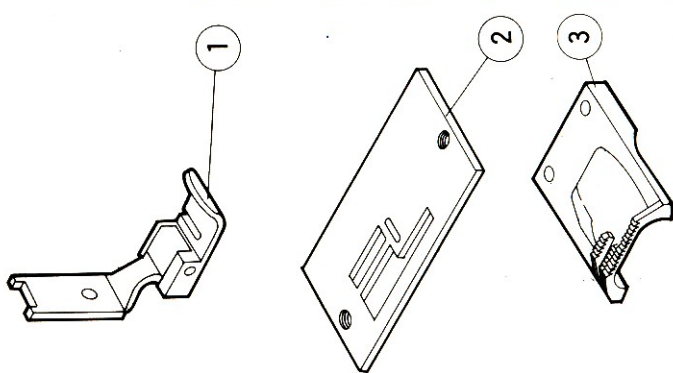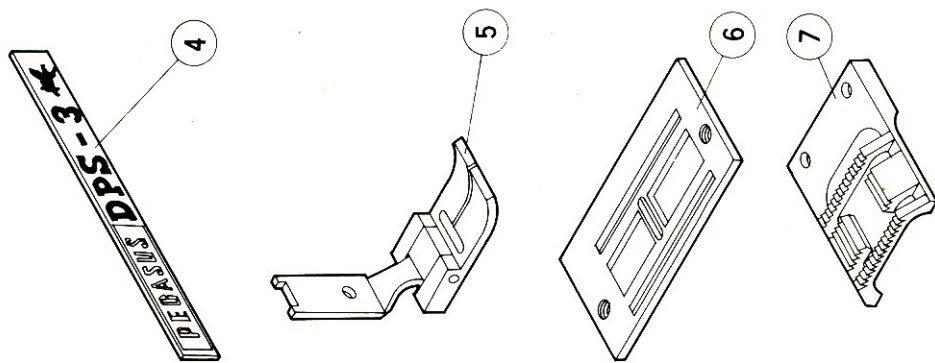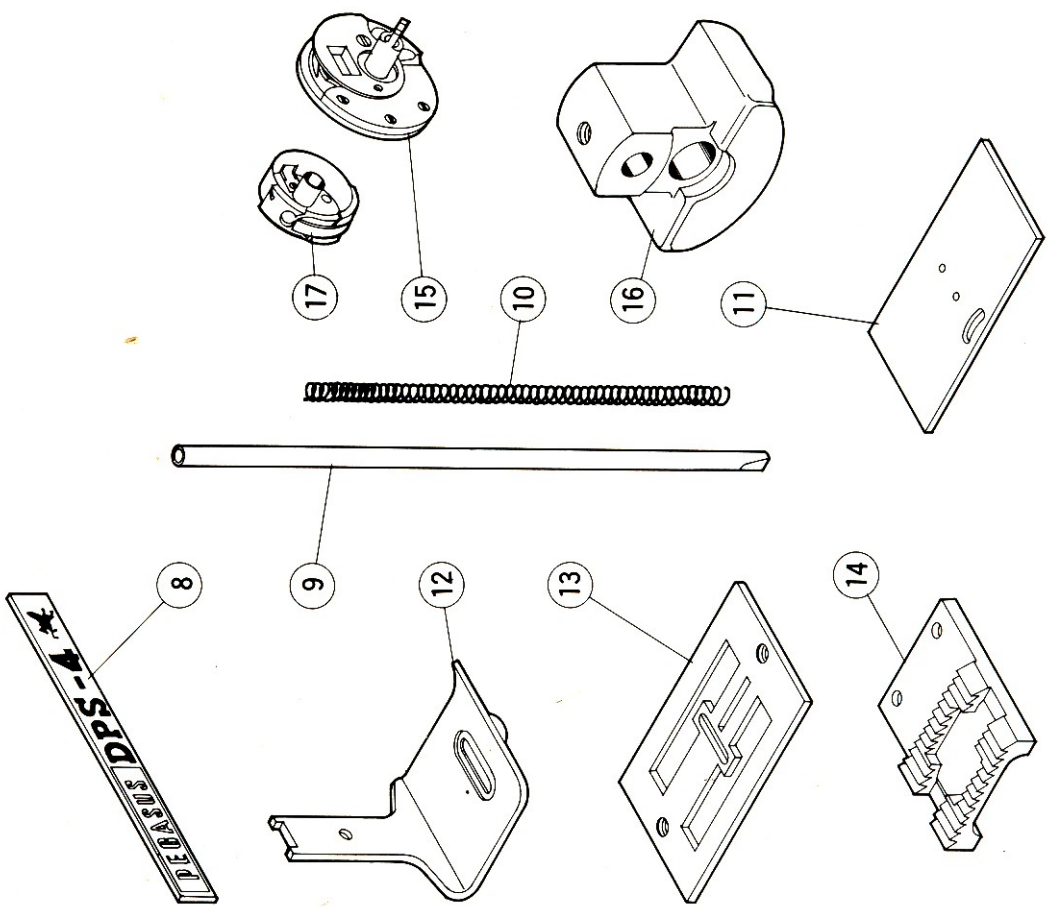

(Available for model DPS-2 only)

縁縫用専用部品 (DPS-2用)

Ref. No.	Parts No.	Name	名 称	Qt.
参照番号	部品番号			数量
1	200845	Presser foot	片押エ	1
2	178049	Needle plate	片針板	1
3	178073	Feed dog	片送り歯	1

PARTS FOR MODEL DPS-3 ONLY


DPS-3 専用部品

4	200890	Model plate	形式板	1
5	179048	Presser foot	両押エ	1
6	200333	Needle plate	両針板	1
7	179072	Feed dog	送り歯	1

PARTS FOR MODEL DPS-4 ONLY

DPS-4 専用部品 (絨毯用)

8	200895	Model plate	形式板	1
9	200897	Needle bar	針棒	1
10	200898	Presser bar spring	押エバネ	1
11	200899	Bed slide	差シ板	1
12	200922	Presser foot	両押エ	1
13	200903	Needle plate	針板	1
14	200905	Feed dog	送り歯	1
15	200907	Hook, complete	釜 (組)	1
16	200908	Needle bar crank	上シャフトモーション	1
17	200909	Bobbin case, complete	ボビンケース (組)	1

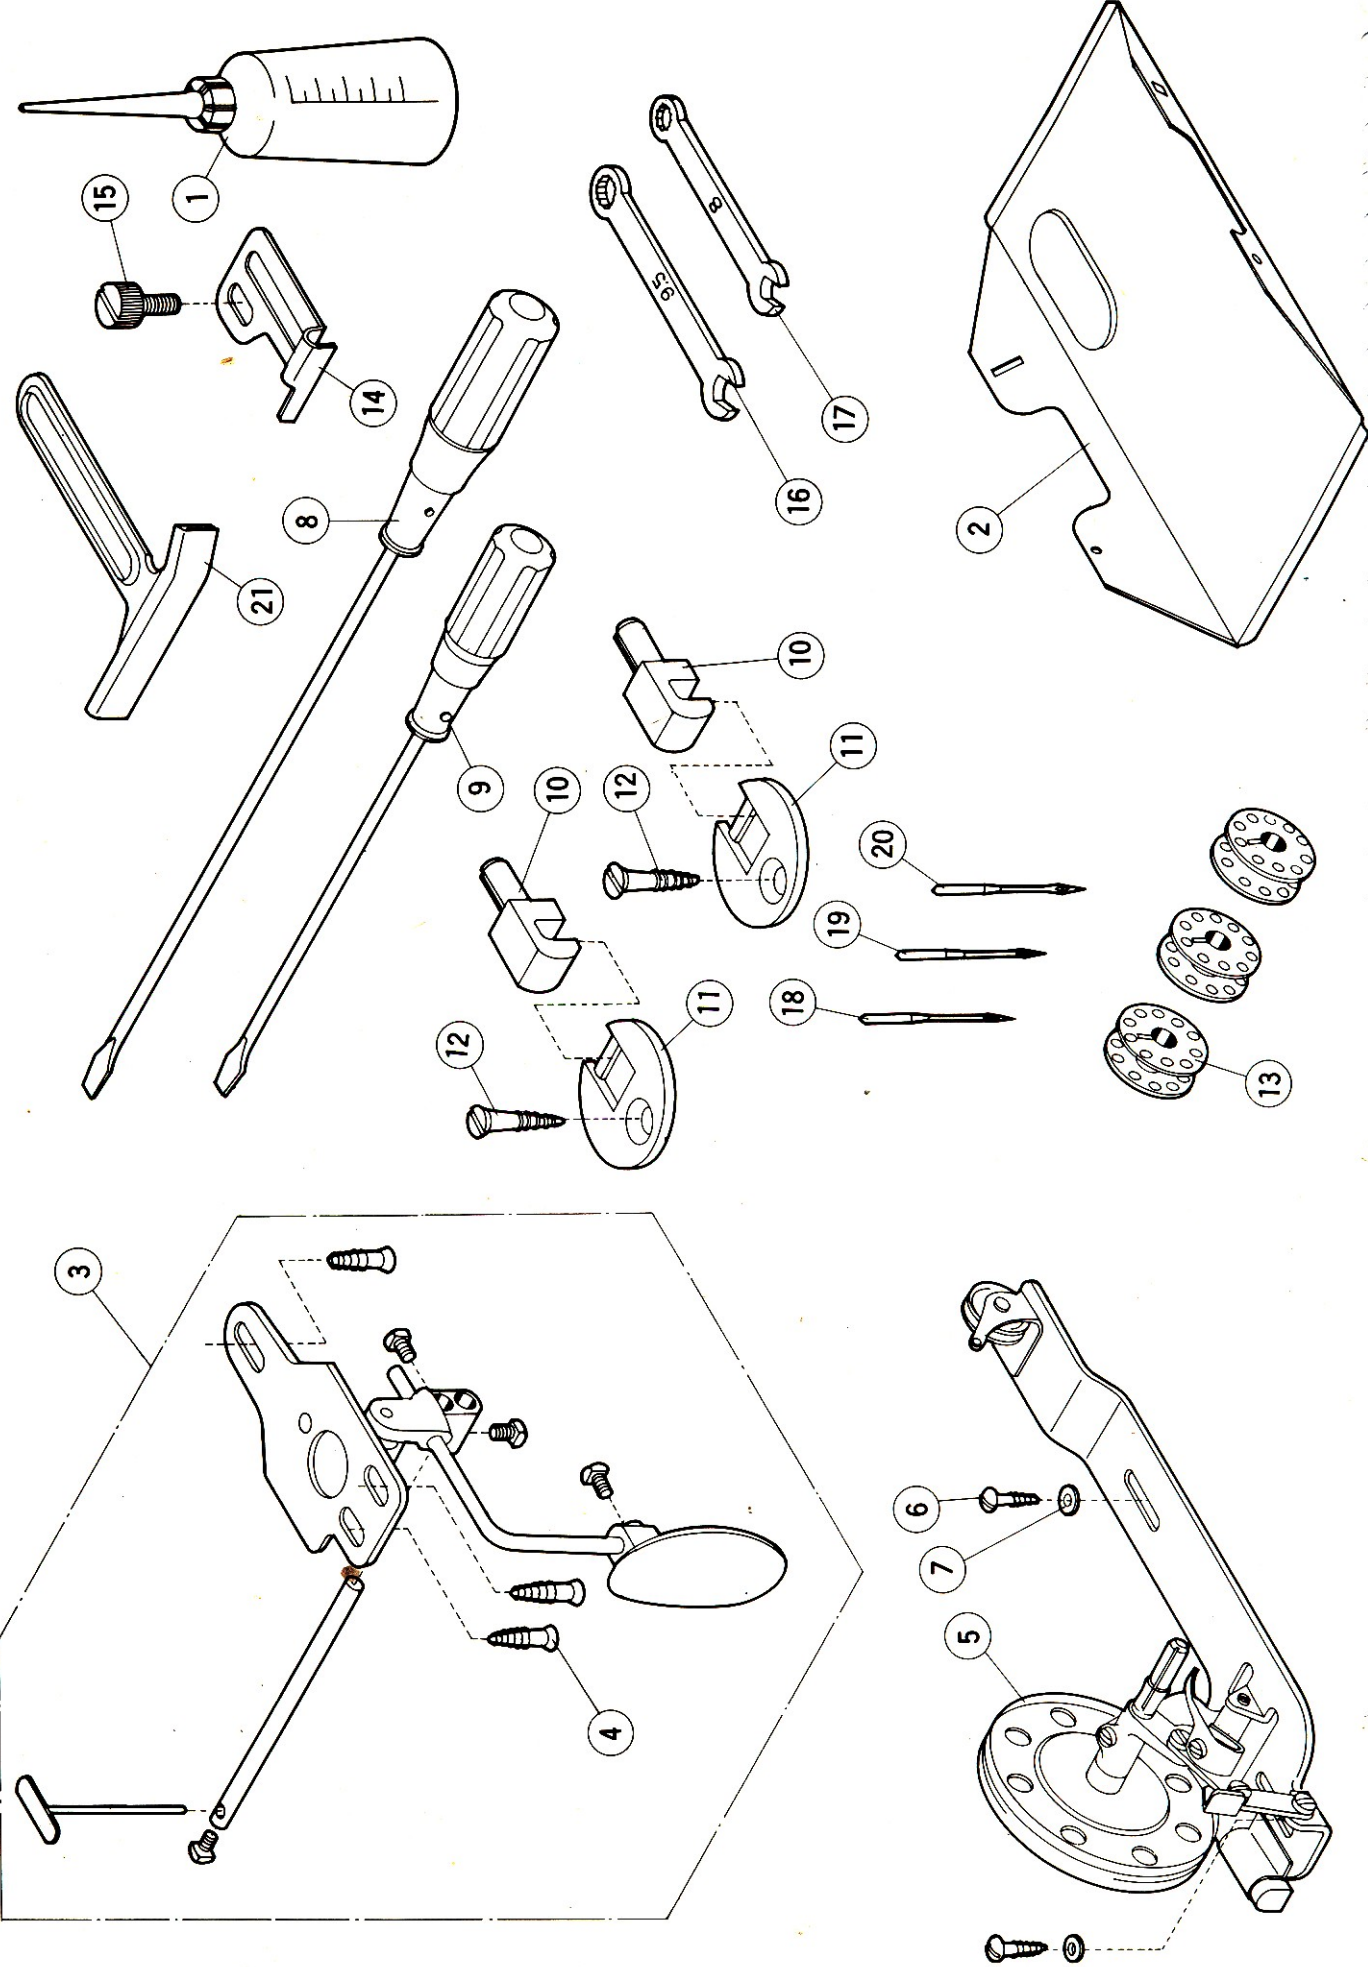

ACCESSORIES

付 属 品

Ref. No.	Parts No.	Name	名 称	Qt.
参照番号	部品番号			数量
1	132	Oiler(containing 150cc oil)	油差シ(150cc油入り)	1
2	747	Drip pan	油受	1
3	745	Knee lifter, complete	膝揚ゲ(組)	1
4	190	" " screw	" " 止ネジ	3
5	746	Universal bobbin winder, complete	糸巻(組)	1
6	188	" " " screw	" " 止ネジ	2
7	189	" " " washer	" " " 座金	2
8	127	Screw driver(large)	ドライバー(大)	1
9	128	" " (medium)	" (中)	1
10	200803	Hinge	丁番(A)	2
11	200804	" plate	" (B)	2
12	191	" " screw	" 止ネジ	2
13	178082	Bobbin	ボビン(貿易用ハ数量4ヶ)	3
14	178113	Cloth guide (for model DPS-2 and DPS-3 only)	定規(DPS-2, 3用)	1
15	5071	" " screw	" 止ネジ	1
16	130A-9.5	Wrench(9.5mm)	スパナ(9.5mm用)	1
17	130A-8	" (8.0mm)	" (8mm用)	1
18	DP×5 #11	Needle, size #11 (for model DPS-2)	針(DPS-2用)	10
19	DP×5 #14	" " #14 (" " DPS-3)	" (DPS-3用)	10
20	DP×5 #22	" " #22 (" " DPS-4)	" (DPS-4用)	10
21	200906	Cloth guide(for model DPS-4 only)	定規(DPS-4用)	1

NUMERICAL INDEX OF PARTS

部 品 番 号 索 引 表

Parts No. Page Ref. No.	Parts No. Page Ref. No.	Parts No. Page Ref. No.	Parts No. Page Ref. No.	Parts No. Page Ref. No.
部品番号 頁 参照番号	部品番号 頁 参照番号	部品番号 頁 参照番号	部品番号 頁 参照番号	部品番号 頁 参照番号
3-1 5 3	61-2 11 12	178032A 7 33	179077 13 23	200870 5 21
5-1 5 5	61-2 11 15	178036 7 43	179077-1 13	200870 5 50
5-2 5 6	61-2 11 21	178037 7 44	179077-2 13	200871 5 51
5-2 5 25	61-3 11 9	178039 9 2	179077-3 13	200875 13 3
5-2 5 56	61-3 11 19	178040A 9 3	179077-4 13	200876 13 8
5-2 13 2	70-1 11 25	178041A 9 4	179077-5 13	200878 3 15
5-2 13 18	80-1 13 27	178042 9 5	179077-6 13	200879 13 12
7-2 5 26	83-1 3 21	178043 9 6	200332 7 41	200880 7 18
7-2 5 55	83-1 5 20	178046 9 12	200333 15 6	200881 7 24
7-3 5 28	83-1 7 57	178047 9 14	200800A 3	200882 7 25
7-4 5 29	96-1 3 13	178048 9 16	200801A 3	200883 7 10
7-4 7 9	96-1 3 34	178049 15 2	200802 3 2	200884 5 16
10-1 5 38	96-1 5 18	178053 7 51	200803 17 10	200885 5 39
10-1 5 45	103-1 9 19	178054 7 58	200804 17 11	200885 5 46
10-1 7 16	103-1 9 21	178056 7 62	200805 3 3	200885 7 17
11-1 7 2	127 17 8	178058 11 1	200806 3 6	200890 15 4
11-1 7 4	128 17 9	178059 11 2	200807 3	200895 15 8
11-1 11 10	130A-8 17 17	178060 11 4	200810 3 10	200897 15 9
11-1 13 16	130A-9.5 17 16	178061 11 8	200812A 5 4	200898 15 10
11-1 13 22	132 17 1	178062 13 14	200813 5 7	200899 15 11
14-1 7 20	188 17 6	178063 13 9	200814 5 8	200903 15 13
15-1 5 31	189 17 7	178064 13 11	200815 5	200905 15 14
15-1 5 32	190 17 4	178065 13 15	200816 5 9	200906 17 21
15-1 7 6	191 17 12	178066 11 13	200817 5 10	200907 15 15
15-1 7 14	745 17 3	178067 11 14	200818 5 1	200908 15 16
15-1 7 52	746 17 5	178068 11 16	200818 5 12	200909 15 17
15-1 11 3	747 17 2	178069 11 18	200819 5	200911 3
15-1 11 17	1092 3 19	178070 11 22	200820 5 13	200912 3 22
16-1 7 8	1186 7 34	178071 11 23	200821 5 15	200913 3 23
16-6 5 35	1234 3 11	178072 11 24	200823 5 17	200914 3 24
20-1 7 23	1458 3 16	178073 15 3	200824 5 19	200915 3 25
20-1 13 10	2918 5 11	178074 13 17	200824 7 26	200916 3 26
20-1 13 13	2918 5 14	178075 13 20	200826 5 27	200917 3 20
22-1 5 42	5071 3 4	178076 13 21	200826 7 7	200918 3 27
24-1 5 49	5071 17 15	178078 13 24	200827 5 30	200920 3 31
26-3 5 43	5091 3 9	178079 13 25	200828 5 33	200921 3 30
26-3 7 53	5185 7 48	178080 13 26	200829 5 34	200922 15 12
26-3 9 13	5268 7 13	178081 13 28	200829 7 11	200956 3 1
26-3 9 15	5280 7 12	178081-1 13	200830 7 15	201707 3 8
26-3 13 19	137108 3 17	178081-2 13	200841 5 52	201709 3 7
28-1 7 28	137109 3 18	178081-3 13	200844 7 39	202179 5 2
28-1 7 30	178007 5 23	178081-4 13	200845 13 4	202179 5 40
30-1 7 32	178008 5 24	178081-5 13	200845 15 1	202179 5 47
31-1 3 29	178009 5 36	178081-6 13	200846 9 1	202179 7 49
31-1 7 38	178010 5 37	178081-7 13	200847 9 8	202179 7 54
31-1 7 40	178011 7 1	178081-8 13	200847 13 1	202179 7 59
31-1 7 42	178014 7 19	178082 13 29	200848 9 10	202179 7 61
31-1 7 65	178015 7 5	178082 17 13	200849 9 18	202179 13 5
37-1 7 45	178018 7 3	178091 3 28	200850 9 20	202903 13 7
40-1 9 17	178019 7 21	178096 3 33	200851 9 22	DPX5 7 37
43-1 9 7	178020 7 22	178098-2A 3 5	200852 7 46	DPX5 17 18
44-1 9 9	178022 5 41	178102 3 14	200853A 3 12	DPX5 17 19
45-1 9 11	178023 5 44	178106 9 23	200854 7 47	DPX5 17 20
56-1 7 63	178024 5 48	178107 3	200855 7 50	
56-1 13 6	178025 5 54	178108 3	200856 7 55	
60-1 11 6	178026 5 53	178109A 3	200857A 7 56	
60-2 11 7	178028 7 27	178110 7 36	200859 7 60	
60-3 11 5	178029 7 29	178113 17 14	200860 7 64	
61-1 11 11	178030 7 31	179048 15 5	200868 3 32	
61-1 11 20	178031 7 35	179072 15 7	200869 5 22	