




SEIKO

PARTS LIST
FOR


LSC-8BV

LSC-8B

LSC-8BH

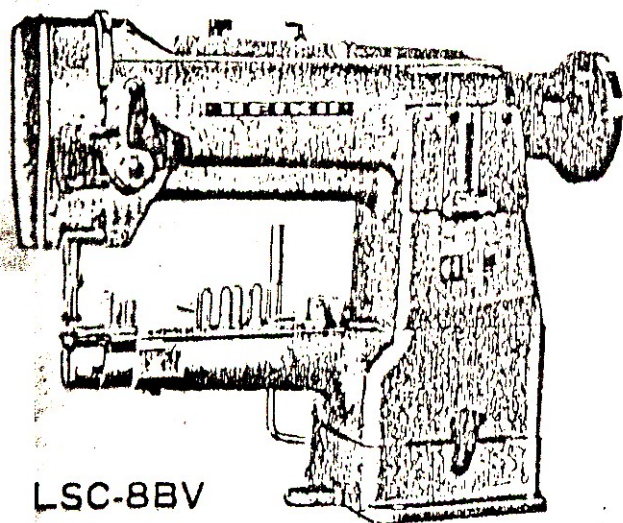

LSC-8BV

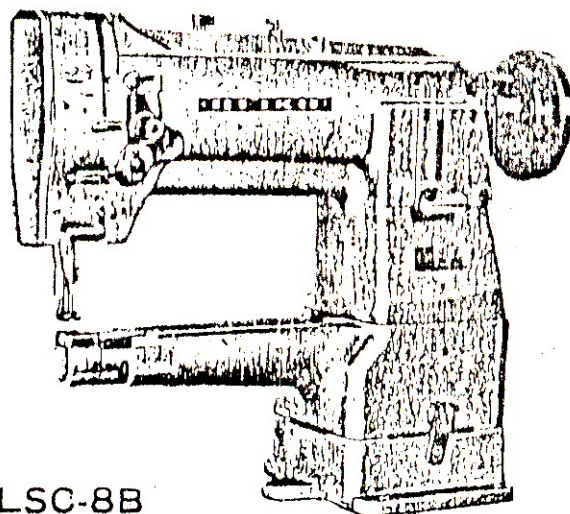

LSC-8B

SEIKO SEWING MACHINE CO., LTD.
TOKYO • JAPAN



INDEX

	Page
Needle bar, Presser bar.....	1-2
Thread take up lever, Vibrating presser bar.....	3-4
Arm shaft, Knee lifter lifting lever.....	5-6
Balance wheel, Feed regulator.....	7-8
Special parts for LSC-8BV.....	9-10
Special parts for LSC-8B.....	11-12
Special parts for LSC-8B.....	13-14
Arm top cover, Thread tension.....	15-16
Accessories.....	17-20
Hook.....	21-22

NEEDLE BAR, PRESSER BAR

Fig. No.	Parts No.	Quantity	Name	Remarks
1	10543	1	Presser bar position guide	
2	10761	1	Set screw for # 10543	
3	10538	1	Presser bar bushing (upper)	
4	10539	1	Presser bar bushing (lower)	
5	10761	2	Set screw for presser bar bushing	
6	10540	1	Presser bar	
7	*17083	1	Lifting presser foot (9mm)	
	*17084	1	Lifting presser foot (7mm)	
8	10664	1	Lifting presser foot set screw	
9	10659	1	Presser bar lifter	
10	10660	1	Pin for # 10659	
11	10541	1	Presser bar position guide bracket	
12	10662	1	Set screw for # 10541	
13	10544	1	Presser bar lifting bracket	
14	10548	1	Presser bar lifting bracket guide screw	
15	10545	1	Set screw for # 10544	
16	10559	1	Set screw for # 10558	
17	10547	1	Tension release spring	
18	10546	1	Tension release slide	
19	10549	1	Presser bar spring bracket	
20	10532	1	Set screw for # 10549	
21	11875	1	Needle bar rock frame hinged stud	
22	10525	1	Set screw for # 11875	
23	15110	1	Needle bar rock frame	
24	10560	1	Needle bar rock frame position bracket	
25	10561	1	Set screw for # 10560	
26	15031	1	Oil wick for # 15110	
27	15032	1	Needle bar	
28	6332	1	Needle DPx17	
29	15089	1	Needle bar thread guide	
30	10535	1	Needle set screw	
31	4221	1	Oil wick catcher	
32	10514	2	Lifting rock shaft bushing	
33	10515	1	Lifting rock shaft	
34	15053	1	Lifting bell crank link screw stud	
35	10728	1	Oil wick for # 15053	
36	10517	1	Lifting bell crank link screw stud nut	
37	10775	1	Hinge screw for # 10772	
38	12136	1	Washer for # 10775	
39	16505	1	Lifting eccentric connecting crank	
40	10754	1	Set screw for # 16505	
41	10774	1	Lifting eccentric connection collar	
42	10772	1	Lifting eccentric connection	
43	10773	1	Needle bearing for # 10772	
44	10776	1	Wing nut for # 10772	
45	17100	1	Lifting eccentric	
46	10566	2	Set screw for # 17100	

* mark is a parts only for Model LSC-8BV


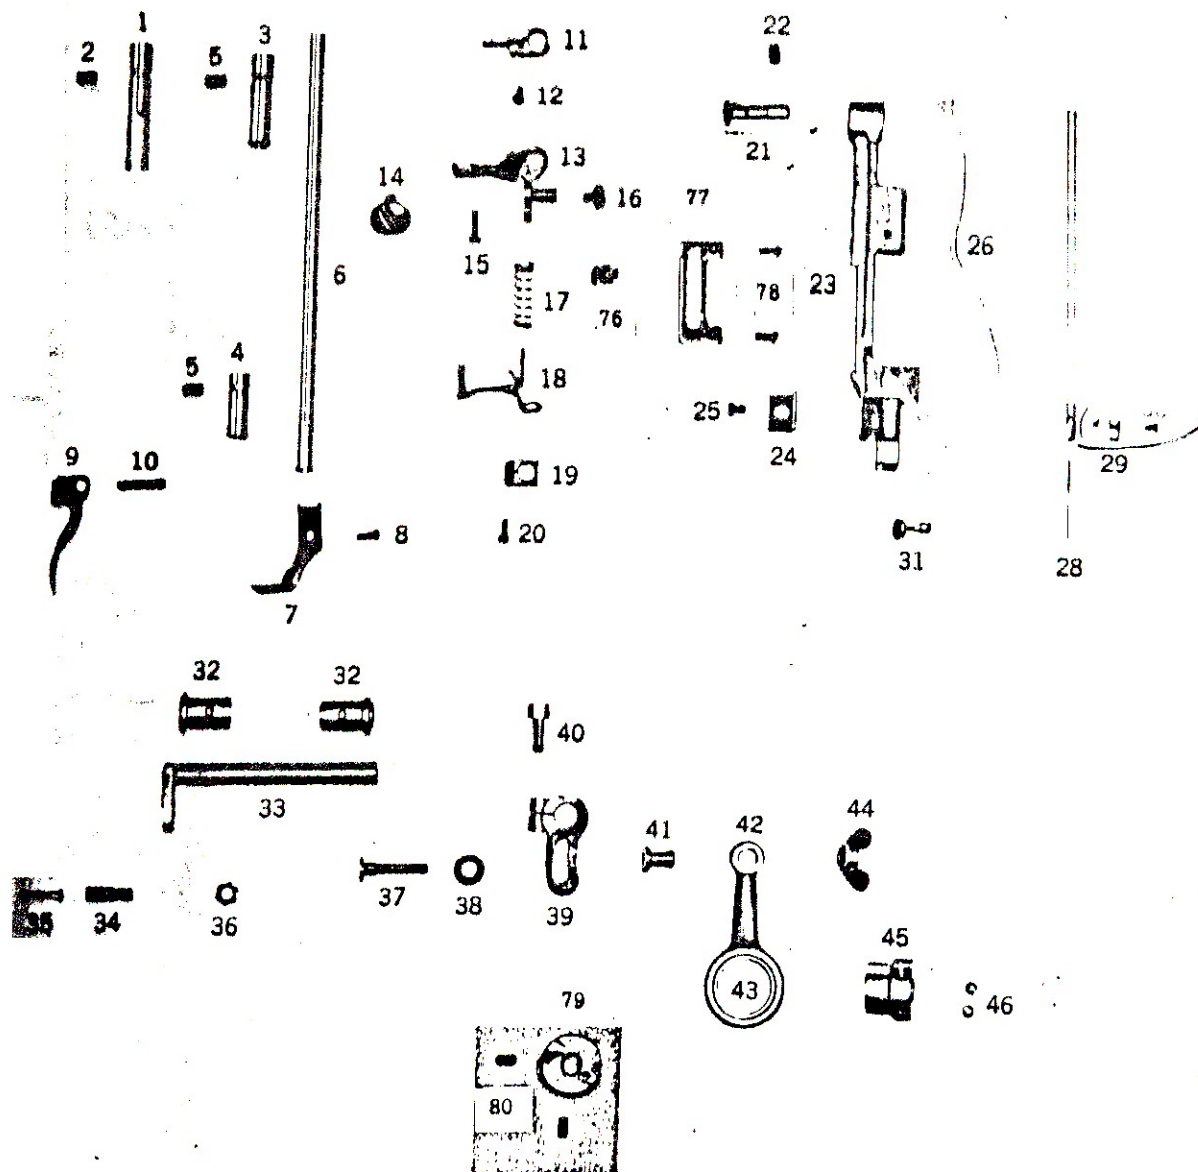
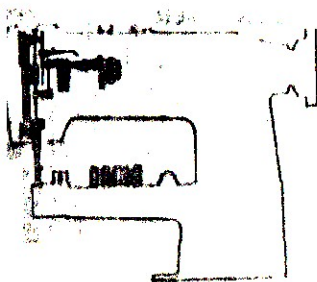


3

THREAD TAKE UP LEVER, VIBRATING PRESSER BAR


Fig. No.	Parts No.	Quantity	Name	Remarks
47	10557	1	Lifting bell crank link	
48	10558	1	Lifting bell crank	
49	10556	1	Vibrating presser bar connecting link	
50	17042	1	Vibrating presser bar spring	
51	17101-A	1	Vibrating presser bar	
52	*17086	1	Vibrating presser foot (9mm)	
	*17087	1	Vibrating presser foot (7mm)	The length is 7mm from center of stopper plate to edge of left side
53	10662	1	Set screw for vibrating presser foot	The length is 7mm from center of stopper plate to edge of left side
54	15060	1	Screw for # 10555	
55	10553	1	Vibrating presser bar extension	
56	10524	1	Set screw for #15013	
57	15013	1	Thread take up lever hinged stud	
58	11042	1	Oil wick for # 15013	
59	17010	1	Thread take up lever	
60	10529	1	Take up lever driving stud	
61	10728	1	Oil wick for # 10529	
62	10532	1	Set screw for # 10531	
63	10531	1	Needle bar connecting stud	
64	10726	1	Oil wick for # 10531	
65	10528	1	Needle bar connecting link	
66	10551	1	Needle bar connecting link oil guard	
67	10650	1	Set screw for # 10551	
68	10523	1	Needle bar connecting link stud	
69	10726	1	Oil wick for # 10523	
70	10563	1	Arm shaft bushing(front) washer	
71	10520	1	Needle bar crank	
72	10764	1	Set screw (B) for # 10523	
73	10524	1	Set screw (A) for # 10523	
74	10521	1	Set screw (A) for # 10520	
75	10522	1	Set screw (B) for # 10520	
76	15109	1	Slide block for vibration stopper	
77	15108	1	Plate for vibration stopper	
78	15007	2	Set screw for #15108	
79	11879	1	Collar for lifting eccentric	
80	10573	2	Set screw for #11879	

* mark is a parts only for Model LSC-8BV

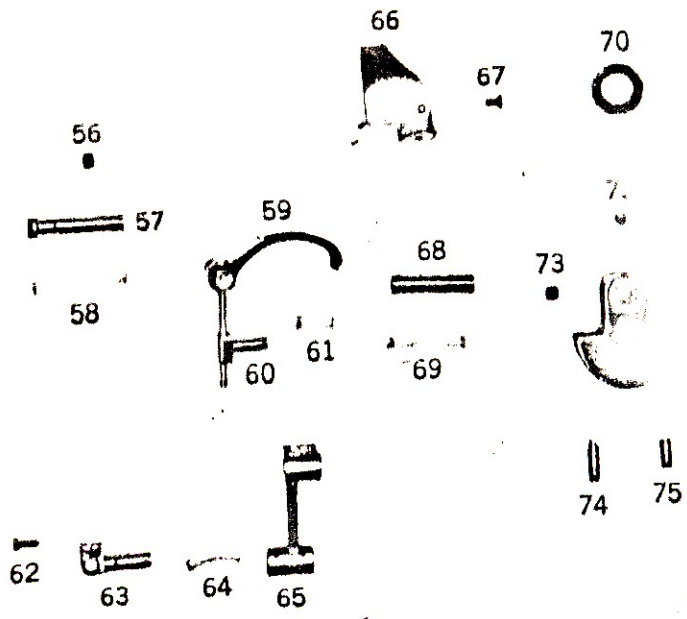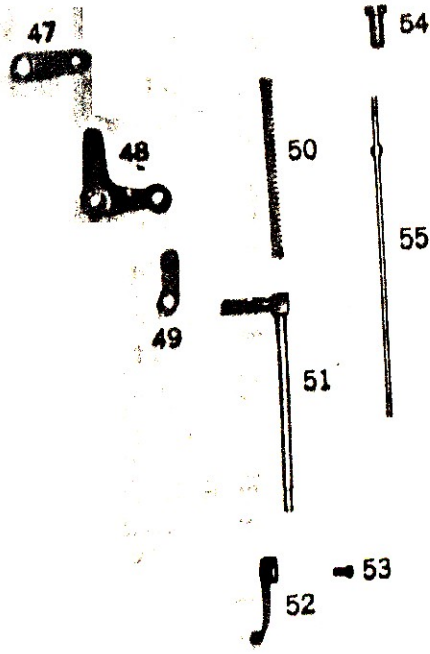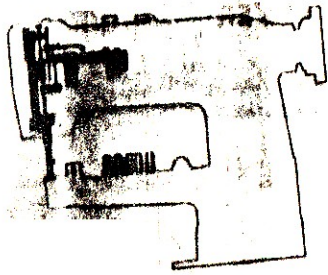






ARM SHAFT, KNEE LIFTER LIFTING LEVER

Fig. No.	Parts No.	Quantity	Name	Remarks
1	13056-A	1	Knee lifter lifting lever	
2	10712	1	Set screw for # 13056-A	
3	11387	1	Foot lifter lifting lever spring	
4	10705	1	Presser bar spring (flat)	
5	11156	1	Presser bar spring regulating screw	
6	10706	1	Presser bar spring support screw	
7	13084	2	Nut for # 13057	
8	13057	1	Foot lifter lever stop flanger	
9	13058	1	Screw for # 13057	
10	10562	1	Arm shaft bushing (front)	
11	10729	1	Oil wick for # 10562	
12	10725	3	Oiling felt for # 10562	
13	10571	1	Set screw for # 17012	
14	17012	1	Arm shaft bushing (middle)	
15	10725	2	Oiling felt for # 17012	
16	10766	2	Set screw for # 17014	
17	17014	1	Arm shaft bushing collar	
18	10766	2	Set screw for # 17102	
19	17102	1	Feed driving eccentric	*This part is not used for Model LSC-88.
20	17018	1	Set screw (A) for # 17017	
21	17019	1	Set screw (B) for # 17017	
22	17017	1	Arm shaft gear (spiral)	
23	10571	1	Set screw for # 17013	
24	17013	1	Arm shaft bushing (rear)	
25	13081	1	Oiling felt for # 17013	
26	10506	1	Arm shaft oil packing stop screw	
27	15033	1	Oil wick for # 17011	
28	17011	1	Arm shaft	
29	17048	1	Needle bar rock frame rock shaft	*This part is not used for Model LSC-88.
30	11877	1	Needle bar rock frame slide block	
31	11876	1	Needle bar rock frame slide block stud	
32	10581	1	Set screw for # 11876	
33	10519	1	Set screw for # 17049	
34	17049	1	Needle bar rock frame rock shaft crank	*This part is not used for Model LSC-88.
35	17047	1	Rock shaft crank stud screw	
36	17050	1	Connecting rod	
37	17095	1	Washer for # 17047	
38	10723	1	Oiling felt presser pin	
39	17041	1	Oiling felt for # 17040	
40	17040	1	Feed fork collar	
41	17043	1	Feed fork	
42	17207	1	Feed fork connecting link	
43	17209	1	Hinge screw (long) for # 17207	
44	8105	2	Nut for # 17209	
45	18014	1	Hinge screw (short) for # 17207	*This part is not used for Model LSC-88.

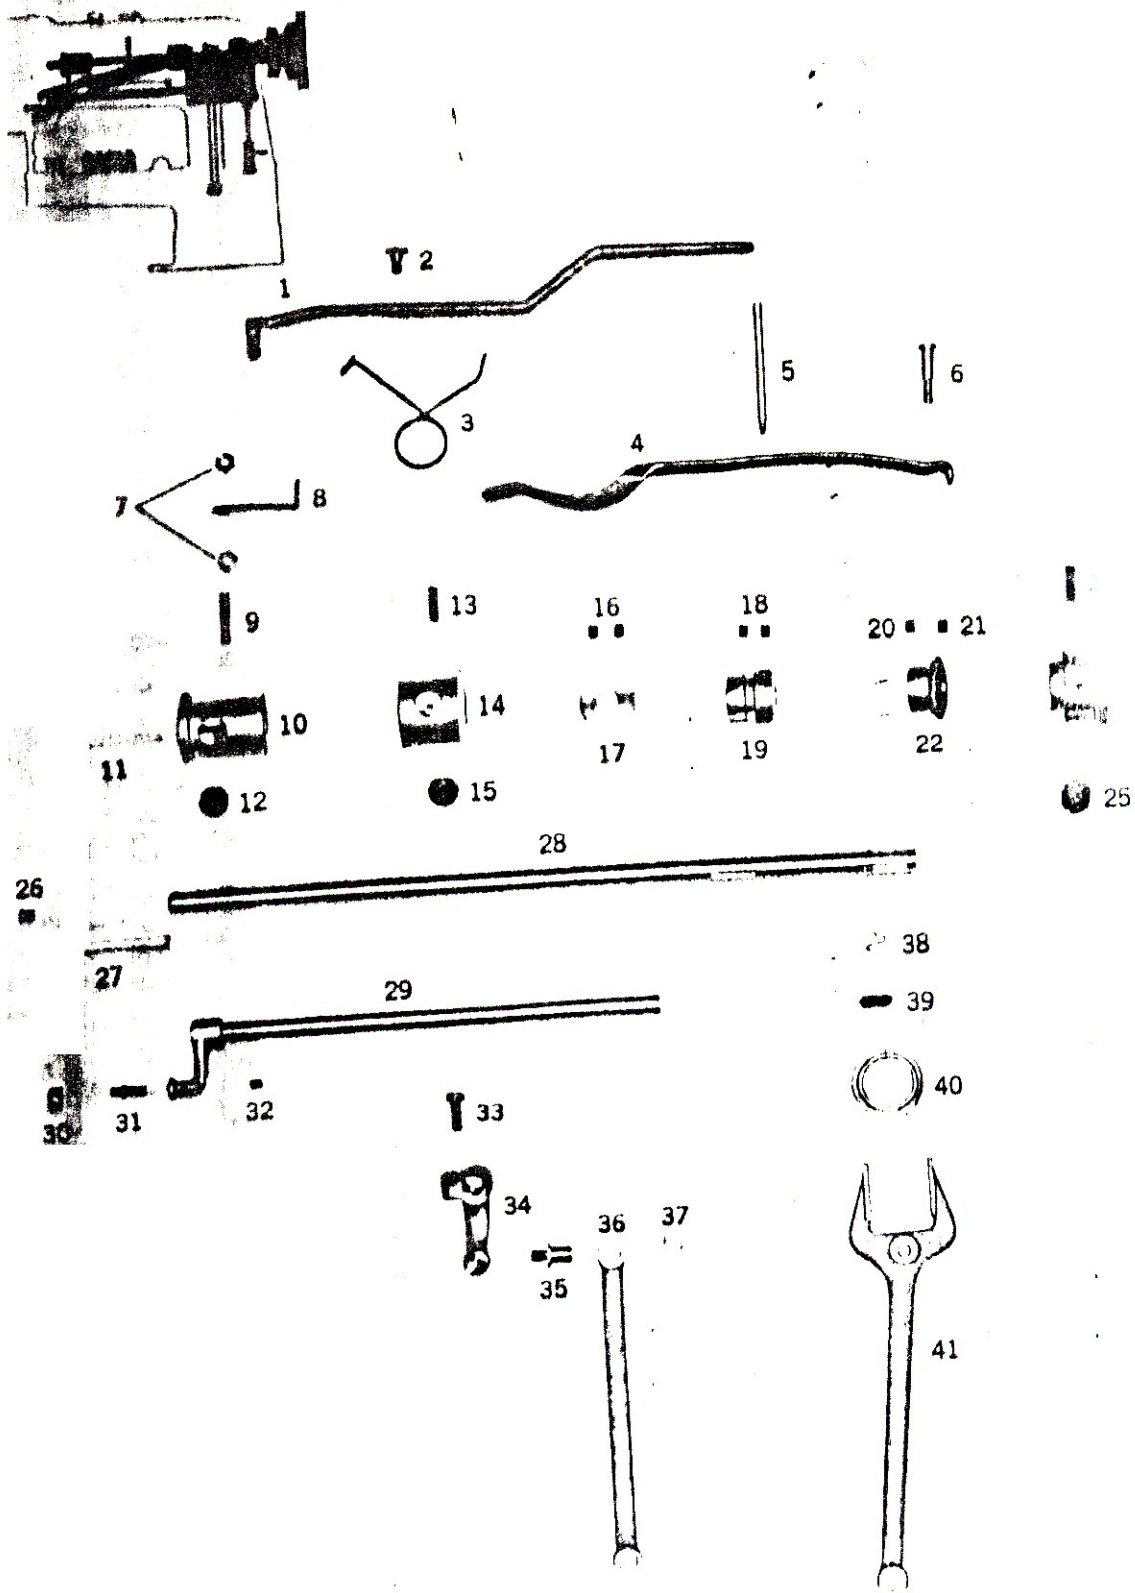

BALANCE WHEEL, FEED REGULATOR

Fig. No.	Parts No.	Quantity	Name
46	17056	1	Set screw for # 17055
47	17055	1	Feed regulating support stud
48	17057	1	Washer for # 17052
49	17053	1	Set screw for # 17052
50	17052	1	Feed regulator
51	17059	1	Set screw for # 10806
52	4135	1	Nut for # 10806
53	10806	1	Feed regulating lever spring
54	4019	1	Set screw for # 17061
55	17061	1	Feed regulating lever
56	13417	1	Feed adjusting pipe
57	13416	1	Feed adjusting knurling tool
58	13414	1	Reverse stitch lever
59	8157	1	Spring for # 8158
60	8158	1	Bearing ball 1/8"
61	8103	2	Screw (small) for # 17061
62	17054	1	Feed regulating base
63	17060	1	Supporting stud pushing screw
64	12361	4	Set screw for # 17054
65	50174	2	Pin for # 17054
66	8100	2	Set screw for # 17005
67	17005	1	Arm side cover
68	17058	1	Stitch length indicator
69	17093	2	Set screw for # 17058
70	17015	1	Gear cover (upper)
71	17016	2	Set screw for # 17015
72	17021	1	Arm shaft (upright) gear (upper)
73	17022	2	Set screw for # 17021
74	17020	1	Arm shaft (upright)
75	17023	1	Arm shaft (upright) gear (lower)
76	17022	2	Set screw for # 17023
77	17024	1	Arm shaft (upright) bushing (upper)
78	17026	1	Oiling felt for # 17024
79	10761	1	Set screw for # 17024
80	17025	1	Arm shaft (upright) bushing (lower)
81	17026	1	Oiling felt for # 17025
82	10571	1	Set screw for # 17025
83	10566	1	Set screw for # 13423A & # 13423B
84	13423A	1	Stitch length indicator ring (used with belt guard)
	13423B	1	Stitch length indicator ring (used without belt guard)
85	10504	1	Balance wheel
86	10576	1	Set screw (A) for # 10504
87	10579	1	Set screw (B) for # 10504
88	10577	1	Adjusting screw for # 10504

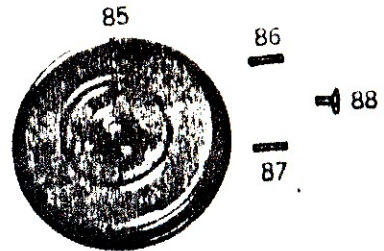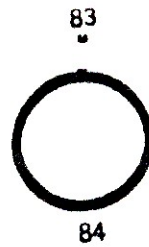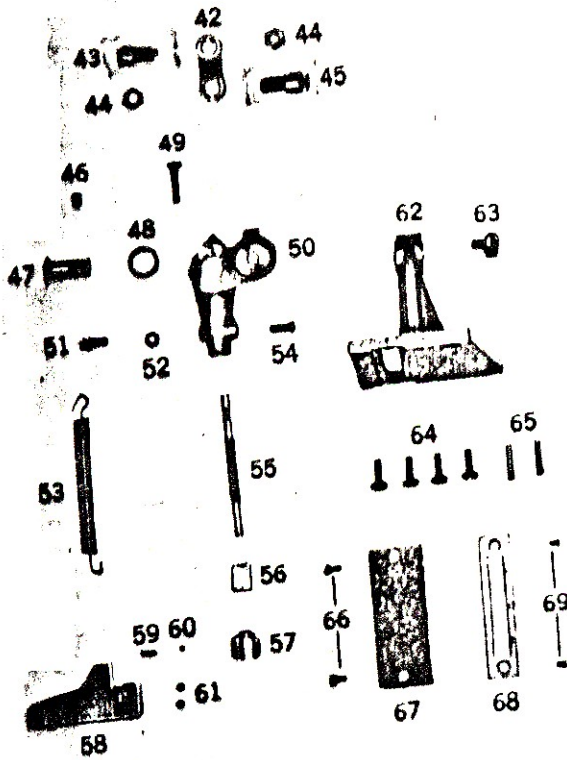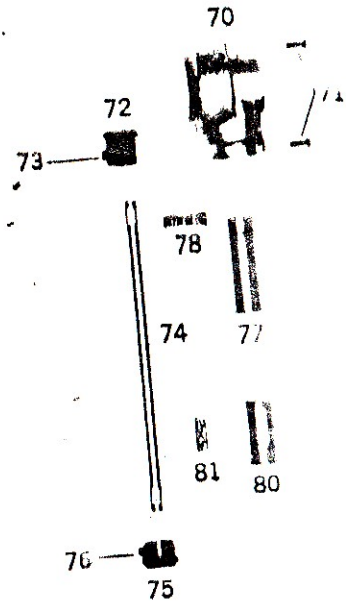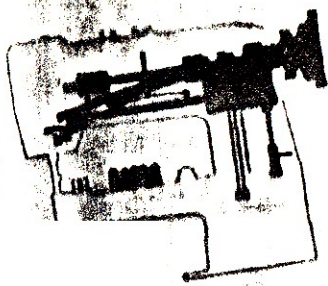


SPECIAL PARTS FOR LSC-8BV

Fig. No.	Parts No.	Quantity	Name	Remarks
				Standard
1	2A-14-6	1	Binder (Standard)	
2	13256	1	Lape guide	
3	13235	1	Washer for #21104	
4	21104	1	Set screw for #13256	
5	17080	2	Nut for #13256	
6	17078	1	Binder set plate	
7	17079	2	Binder set screw	
8	17071	1	Spring for #17078	
9	17070	1	Washer for #17064	
10	17064	1	Pushing screw for #17078	The length is 9mm from center of Needle plate to edge of left side.
11	17089	1	Needle plate	The length is 7mm from center of Needle plate to edge of left side.
	17090	1	Needle plate	
12	6031	2	Set screw for #17090	
13	17094	1	Cylinder	
14	17092-II	1	Needle plate supporting plate	
15	17093	4	Set screw for #17092-II	The length is 9mm from center of Needle plate to edge of left side.
16	17073	1	Feed dog	The length is 7mm from center of Needle plate to edge of left side.
	17074	1	Feed dog	
17	17076	2	Set screw for #17073 & #17074	
18	17068	1	Feed regulating swing arm	
19	17072	1	Hinge screw for #17068	
20	17067	1	Slide block	
21	17065	1	Feed fork	
22	17066	1	Set screw for #17065	
23	17069	1	Feed swing arm base	
24	21104	2	Set screw for #17069	
25	17064	1	Screw for #17062	
26	17062	1	Feed bar	
27	17063	1	Feed bar stop collar	
28	12421	2	Set screw for #17063	
29	17095	2	Snap ring for #17047	
30	17047	2	Feed connecting screw stud	
31	17051	1	Feed shaft bell crank	
32	4050	2	Set screw (A) for #17051 & #17045	
33	17046	2	Set screw (B) for #17051 & #17045	
34	17045	1	Feed fork connecting link	
35	17035	1	Bobbin	
36	17033	1	Rotating hook complete	
37	17034	1	Bobbin case base	
38	17036	2	Hook set screw	
39	17027	1	Hook driving shaft	
40	17030	2	Felt for #17029	
41	17032	1	Hook driving shaft bushing (front)	
42	17031	1	Hook driving shaft collar	
43	7018	2	Set screw for #17031	
44	17029	1	Hook driving shaft bushing (rear)	
45	10571	1	Set screw for #17029	
46	17028	1	Hook driving shaft gear	
47	17022	2	Set screw for #17028	



† mark is a common parts with Model LSC-8B

LSC-8BH


48	17078A	1	Binder oscillating plate
49	17112	1	Stop pin for #17078A
50	17113	1	Needle plate
51	6031-01	2	Set screw for #17113
52	17105	1	Feed dog
53	17076	2	Set screw for #17105
54	17083B-1	1	Lifting presser foot
55	17086B-1	1	Vibrating presser foot
56	17111	1	Set screw for #17086B-1

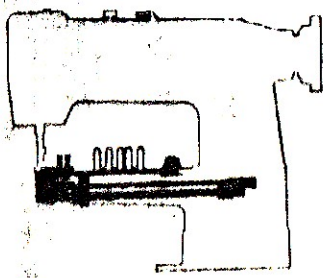

LSC-8BH

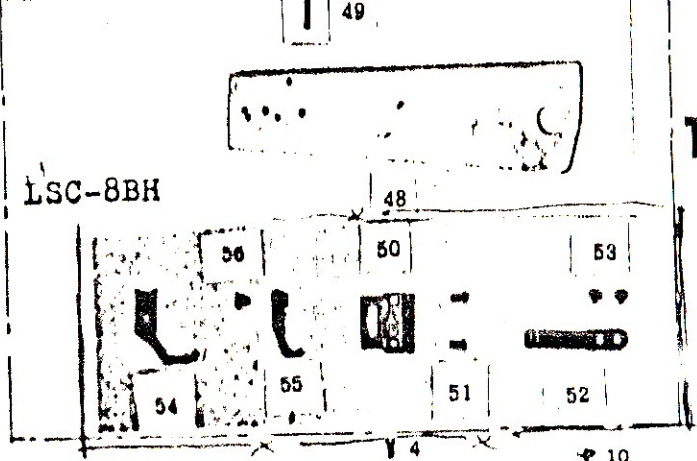



6

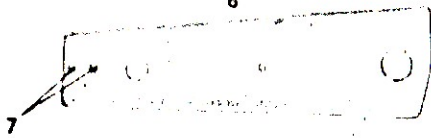

12



19



20

24



22

26



28



39



38

36



42



43





45

46

SPECIAL PARTS FOR LSC-8B

Fig. No.	Parts No.	Quantity	Name	Remarks
1	17205	1	Needle bar rock frame rock shaft	
2	17206	1	Needle bar rock frame shaft crank	
3	10519	1	Set screw for # 17206	
4	17207	1	Feed fork connecting link	
5	17209	1	Feed regulating stud screw	
6	8105	1	Nut for # 17209	
7	17208	1	Set screw for # 17043	
8	17211-A	1	Feed cam	
9	10766	2	Set screw for # 17211-A	
10	17212	1	Feed driving connection	
11	10545	2	Set screw for # 17212	
12	17229	1	Hinge screw for # 17227	
13	17228	1	Guide roller	
14	17227	1	Guide plate	
15	7047	2	Set screw for # 17227	
16	30025	2	Washer for # 7047	
17	17221	1	Needle plate	
18	6344	2	Set screw for # 17221	
19	17222-A	1	Needle plate supporting plate	
20	17223	2	Set screw for # 17222-A	
21	17224	1	Needle plate assisting plate	
22	8100	4	Set screw for # 17224	
23	17202	1	Bed plate	
24	8016	4	Set screw for # 17202	
25	10796	1	Lifting presser foot	
26	10795	1	Vibrating presser foot	
27	10662	1	Set screw for # 10795	
28	17220-A	1	Feed dog	Standard
	17231	1	Feed dog	For thick needles
29	17232	1	Set screw for # 17220-A & 17231	
30	17218	1	Feed base	
31	17226	1	Feed base gib	
32	12347	2	Set screw for # 17226	
33	17215-A	1	Feed bar	





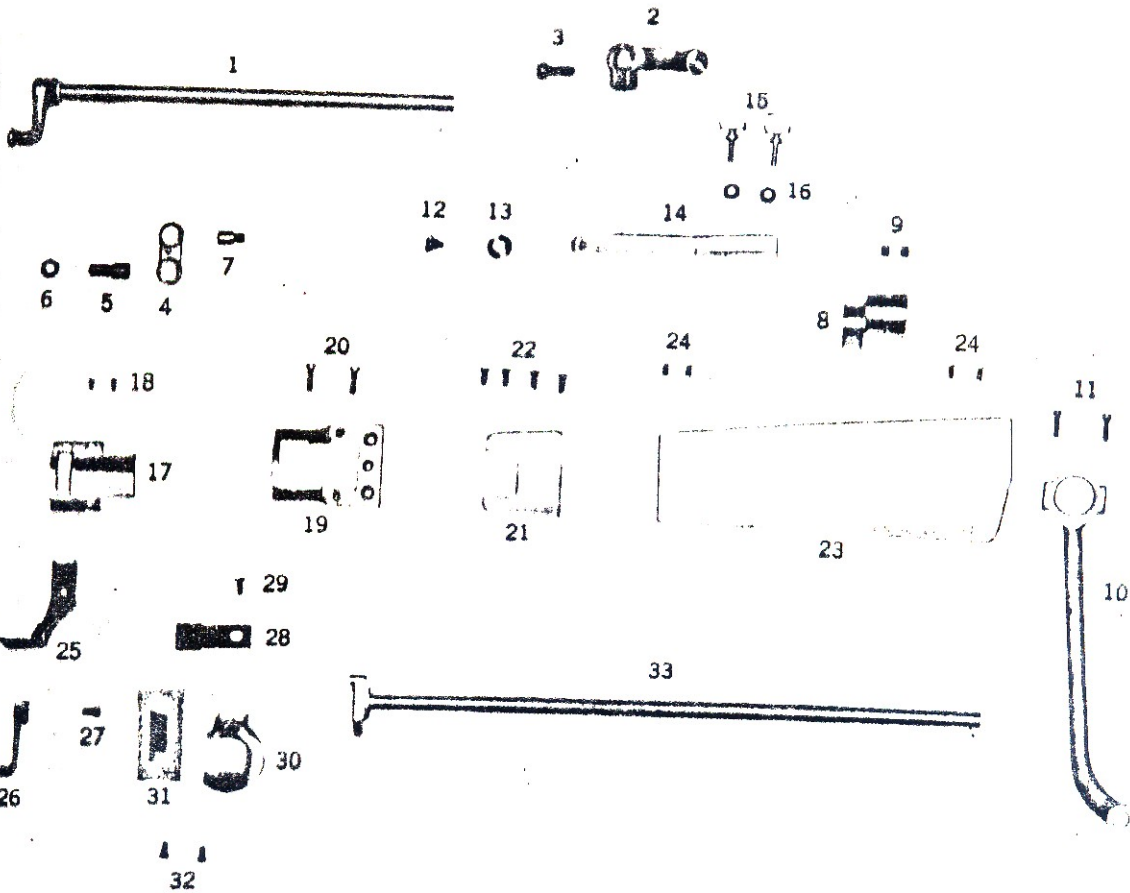
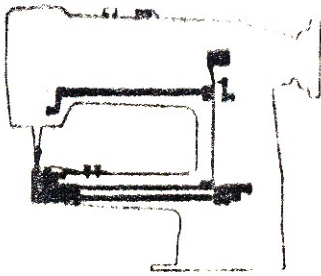


SPECIAL PARTS FOR LSC-8B

Fig. No.	Parts No.	Quantity	Name
34	† 17063	1	Feed bar stop collar
35	† 12421	2	Set screw for # 17063
36	† 17095	3	Snap ring for # 17047
37	† 17047	3	Feed connecting screw stud
38	17217	1	Feed shaft connecting link (B)
39	† 4050	1	Set screw (A) for # 17217
40	† 17046	1	Set screw (B) for # 17217
41	17216	1	Feed shaft connecting link (A)
42	1365	1	Set screw (A) for # 17216
43	† 17094	1	Cylinder
44	17203	1	Cover for # 17094
45	12113	2	Set screw for # 17203
46	17214	1	Feed driving rock shaft
47	17063	1	Feed driving rock shaft collar
48	12758	1	Set screw for # 17063
49	17213	1	Feed driving shaft connecting link
50	1365	1	Set screw for # 17213
51	† 17035	1	Bobbin
52	† 17033	1	Rotating hook complete
53	† 17034	1	Bobbin case base
54	† 17036	2	Hook set screw
55	† 17027	1	Hook driving shaft
56	17225	1	Hook driving shaft bushing (front)
57	† 17031	1	Hook driving shaft collar
58	† 7018	2	Set screw for # 17031
59	† 17030	1	Felt for # 17029
60	† 17029	1	Hook driving shaft bushing (rear)
61	† 10571	1	Set screw for # 17029
62	† 17028	1	Hook driving shaft gear
63	† 17022	2	Set screw for # 17028


Some parts as Fig 34

† mark is a common parts with Model LSC-8BV

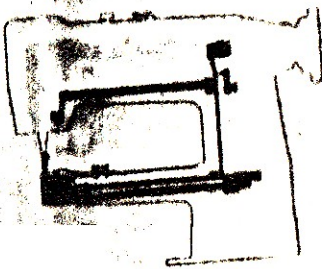







ARM TOP COVER, THREAD TENSION

Fig. No.	Parts No.	Quantity	Name
1	15035	1	Face plate
2	15036	1	Face plate hinge connection
3	15039	6	Set screw for # 15036
4	15037	1	Face plate spring
5	15039	2	Set screw for # 15037
6	15038	1	Top arm thread guide oil stop
7	15258	1	Thread take up lever cover
8	6031	1	Set screw for # 15258
9	15058	1	Oil intercept stud
10	15059	1	Spring for # 15058
11	15057	1	Dial for # 15058
12	8009	1	Set screw for # 15057
13	11006	1	Top arm thread guide
14	13076	1	Nut for # 11006
15	15038	1	Top arm thread guide oil stop
16	15007	7	Set screw for # 17003
17	17003	1	Arm top cover
18	15061	1	Oil intercept pin
19	11007	1	Oil level indicator
20	15004	1	Gasket for arm top cover
21	11012	1	Oil wick
22	15034	1	Oil regulator vinyl pipe
23	10597	1	Set screw for # 11004
24	11004	1	Oil regulator
25	15086	1	Oil regulator spring
26	8040	1	Set screw for # 15086
27	11142	1	Washer for # 8040
28	8100	2	Set screw for # 17009
29	17009	1	Bed rear cover
30	10682	1	Face plate thread guide (upper)
31	11160	1	Face plate thread guide (middle)
32	10760	1	Felt for # 10759
33	10759	1	Face plate thread guide (lower)
34	10685	3	Face plate thread guide set screw
35	10720	1	Tension release lever rod
36	15055	1	Tension bracket set screw
37	15062	1	Thread retainer
38	10679	2	Tension release lever hinge screw
39	10678	1	Tension release lever
40	10675	1	Tension bracket
41	10789	1	Tension stud
42	10791	1	Tension bracket pin
43	10793	1	Tension release plunger
44	10691	2	Tension disc
45	10692	1	Tension release washer
46	10693	1	Tension release spring
47	28206	1	Knurling nut stopper
48	10792	1	Thread controller stud
49	10689	1	Thread controller spring
50	10694	1	Thread controller disc
51	10695	1	Set screw for # 10694
52	8060	1	Set screw for # 10792
53	10690	1	Thread controller spring stop
54	37279	1	Set screw for # 10690
55	10697	1	Knurling nut
56			lin

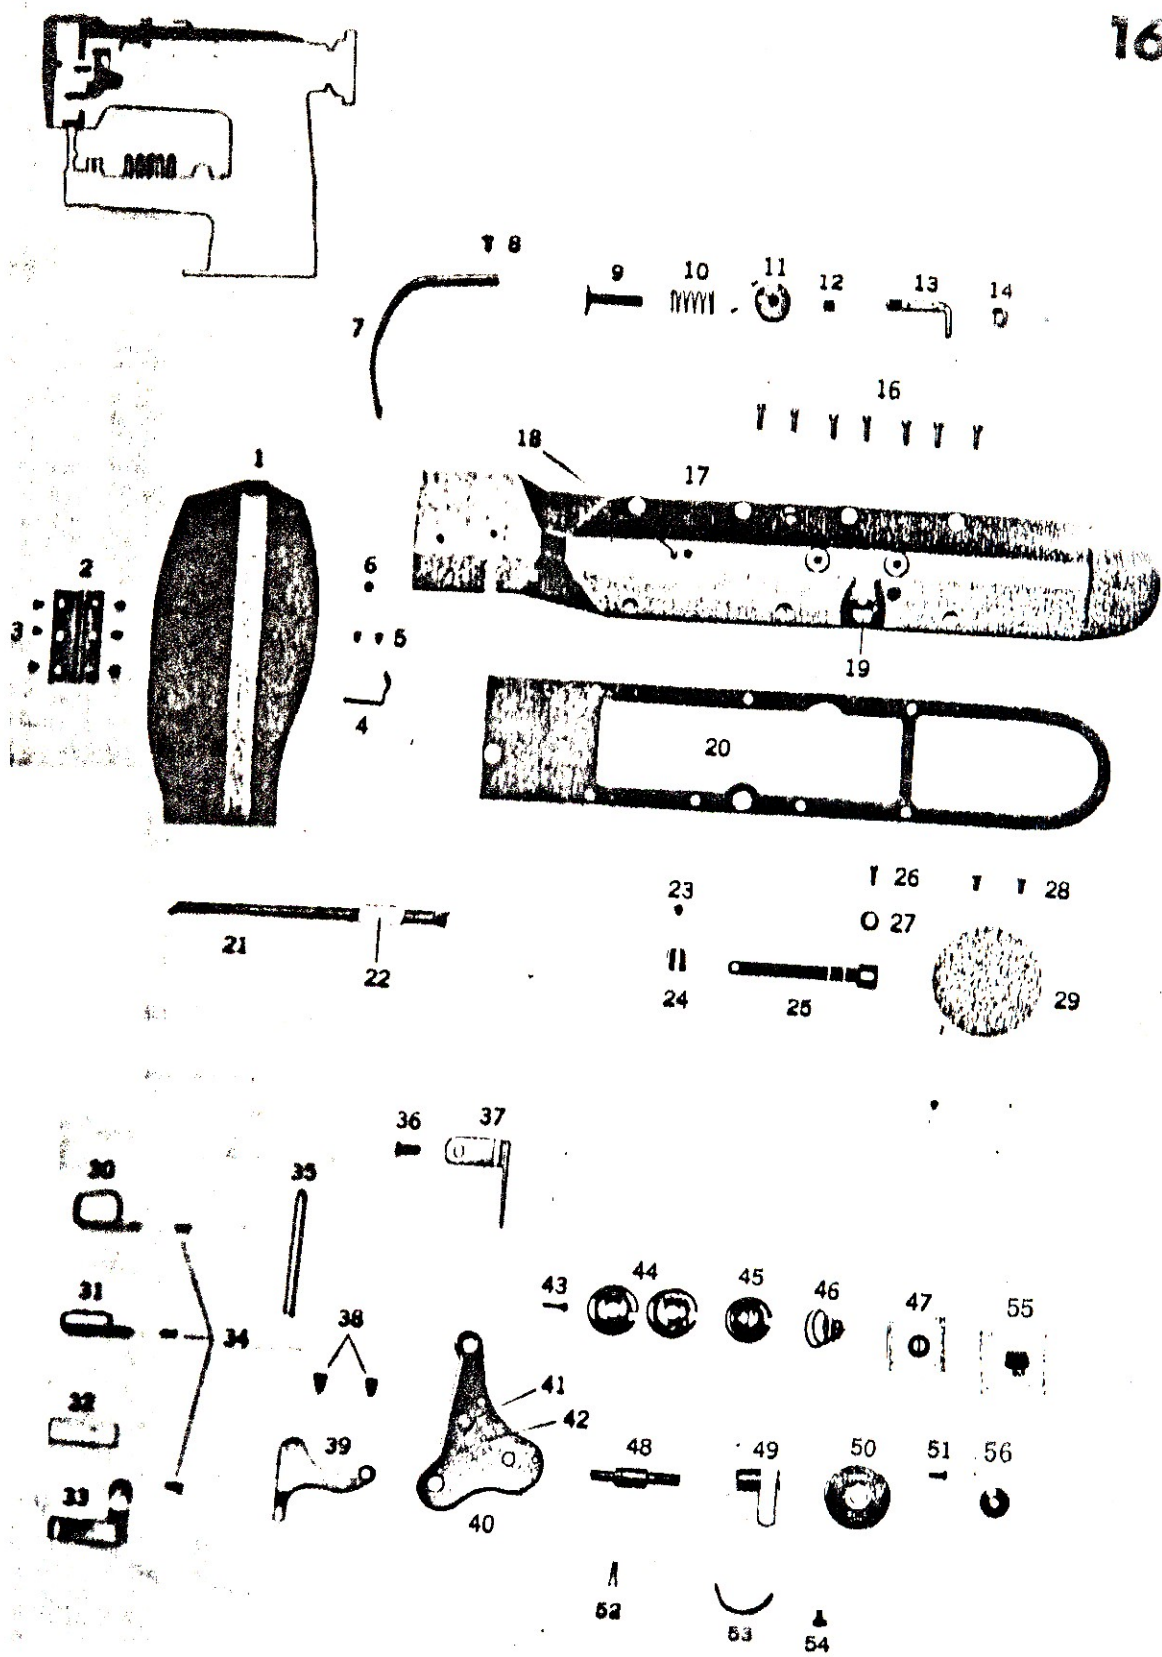


ACCESSORIES

Fig. No.	Parts No.	Quantity	Name	Remarks
1	8132	1	Accessories Box	
2	10734	1	Bobbin winder complete	
3	8118	1	Screw driver (large)	
4	8120	1	Screw driver (middle)	
5	8121	1	Screw driver (small)	
6	17035	6	Bobbin	
7	6332	3	Needle DPx17 # 16	
8	10748	1	Wrench	
9	5571(4mm) 1969(2.5)	1 & 1	Wrench (4mm) & (2.5mm)	This parts is not use for Model LSC-88
10	11193	1	Oil can	
11	35254	1	Thread stand	
12	17081	1	Knee lifter complete	
13	8125	1	Oil bottle	
14	8124	1	Vinyl cover (large)	
15	13096	4	Machine base set screw complete	

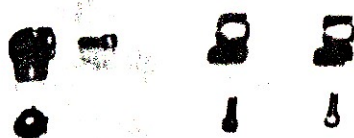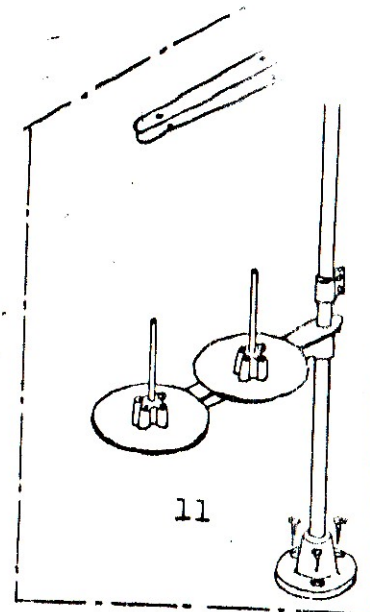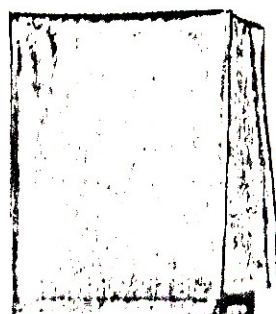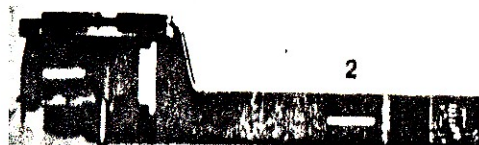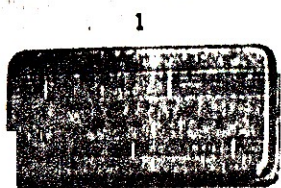


13

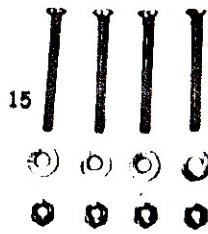


ACCESSORIES

Fig. No.	Parts No.	Quantity	Name	Remarks
16	13260	1	Tape stand	This parts is not use for Model LSC-88.
17	13261	1	Tape stand collar	This parts is not use for Model LSC-88.
18	11830	1	Set screw for #13261	This parts is not use for Model LSC-88.
19	13263	1	Tape stand bar	This parts is not use for Model LSC-88.
20	13264	1	Nut for #13263	This parts is not use for Model LSC-88.
21	13004	1	Hinge for bed	
22	13005	6	Hinge set screw	
23	17002	1	Machine base	
24	13006	1	Bed clamp	
25	10712	1	Set screw for #13006	
26	13008	1	Bed clamp thumb screw washer	
27	13007	1	Bed clamp thumb screw	
28	17082	1	Chain	
29	17037	1	Oil pan	

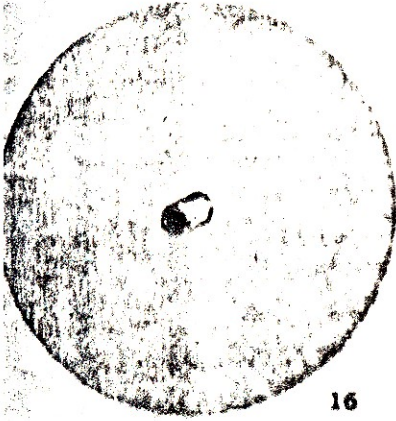


16

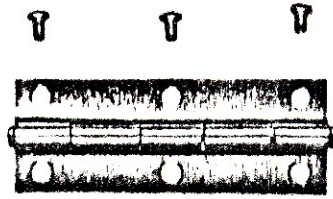

21



22

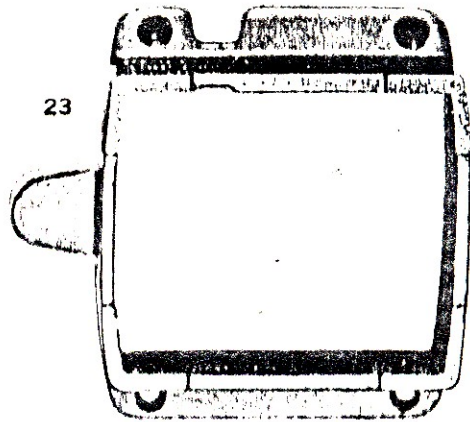


23



17



18

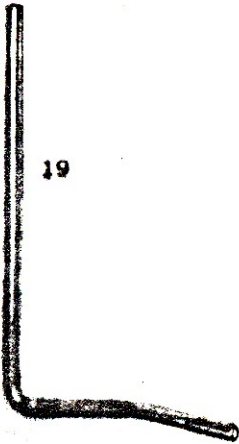

19



20



24




26



27



25

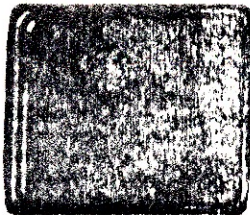

29

Fig. No.	Parts No.	Quantity	Name
1	17033-1	1	Rotating hook only
2	17033-2	1	Thread releasing protecting spring
3	17033-3	3	Set screw for # 17033-2
4	17033-4	1	Bobbin case base
5	17033-5	1	Hook gib
6	17033-3	3	Set screw for # 17033-5
7	17034-1	1	Bobbin case
8	17034-2	1	Bobbin case tension spring
9	17034-3	1	Set screw for # 17034-2
10	17034-4	1	Bobbin case pulling plate
11	17034-5	1	Bobbin set plate
12	17034-6	1	Bobbin set plate pin
13	17034-7	1	Bobbin set plate spring
14	17034-8	1	Set screw for # 17034-4
15	17036	2	Hook set screw
16	17034-9	1	Regulating screw for # 17034-2

