

SEIKO

PARTS LIST FOR MODELS

PW-6, 6B, PW-7, 7B, PW-8, 8B
PW-26, 26B, PW-27, 27B, PW-28, 28B



Cavemac

Controle do Acervo de Catálogos

Identificação	781
Edição	ÚNICA
Conteúdo	SEIKO PW-6

00000781




SEIKO SEWING MACHINE CO., LTD.

CHUO-KU, TOKYO • JAPAN


 - ORIGINAL

INDEX

	Page
Arm shaft, thread take up lever for PW-8, PW-28	1
Presser bar lifter, presser bar for PW-8	3
Needle bar, gauge parts for PW-28, PW-8	5
Tension bracket for single needle machine	7
Tension bracket for twin needle machine	7
Lower shaft, feed driving rock shaft, needle bar rock frame rock shaft for PW-7, PW-8.....	9
Hook and hook saddle for one needle machine.....	11
Hook and hook saddle for two needle machine	13
Reverse stitch mechanism for PW-6B, 7B, 8B, 26B, 27B, 28B	15
Accessories.....	17
Accessories (Pedal type)	19
Arm shaft, thread take up lever, needle bar rock frame for PW-7...21	
Gauge parts and others for PW-27, PW-7	23
Foot lifter, presser bar for PW-7	24
Arm shaft, thread take up lever for PW-6, PW-26	27
Roller presser foot, gauge parts for PW-6, PW-26	29
Flat presser foot, gauge parts for PW-6, PW-26	31
Lower Shaft, feeding rock shaft for PW-6, PW-26	33
Accessories (Knee lifter type)	35

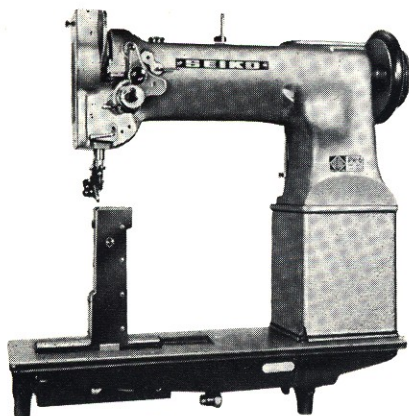


PW-6

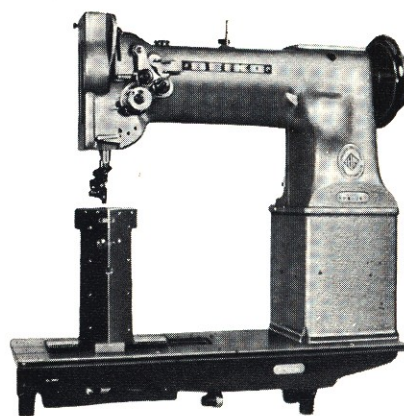

PW-26


ARM SHAFT, THREAD TAKE UP LEVER FOR PW-8, 28

Fig. No.	Parts No.	Quantity	Name
1	10701	1	Arm shaft bushing (front) oil packing thumb screw
2	10725	2	Oiling felt for arm shaft bushing
3	10724	1	Oiling wick for arm shaft
4	10702	1	Arm cap
5	10704	1	Arm cap screw
6	10703	1	Arm cap screw washer
7	10576	1	Balance wheel set pin (A)
8	10579	1	Balance wheel set pin (B)
9	10575	1	Balance wheel
10	10577	1	Balance wheel adjusting screw
11	10507	1	Arm shaft
12	10506	1	Oil packing for 10724
13	10563	1	Arm shaft bushing (front) washer
14	10562	1	Arm shaft bushing (front)
15	10522	1	Set screw for 10562
16	10729	1	Oiling wick for 10562
17	10908	1	Feed indicating disc
18	10573	1	Screw for 10908
19	10569	1	Arm shaft connecting belt pulley
20	10570	1	Position screw for 10569
21	10524	1	Screw for 10570
22	10571	1	Screw for 10569
23	10574	3	Arm shaft connecting belt spring flange
24	10522	1	Screw for 13074
25	13074	1	Arm shaft bushing (back)
26	13075	1	Arm shaft bushing collar
27	10566	2	Screw for 13075
28	10567	1	Arm shaft ball bearing
29	10568	1	Ball bearing retaining washer
30	10941	1	Safety clutch pulley
31	10611	1	Safety clutch collar
32	10612	2	Collar set screw
33	10615	1	Safety clutch locking lever spring
34	10614	1	Safety clutch locking lever spring stud
35	10581	1	Screw for 10614
36	10618	1	Safety clutch ratchet connecting link
37	10619	1	Safety clutch throw in latch spring
38	10620	1	Safety clutch throw in latch pin
39	10617	1	Safety clutch ratchet
40	10616	1	Safety clutch locking lever
41	10613	1	Hinge stud for 10616
42	10581	1	Screw for 10613
43	12133	1	Arm shaft connecting belt
44	10520	1	Needle bar crank
45	10521	1	Screw (A) for 10520
46	10522	1	Screw (B) for 10520
47	10524	1	Screw (A) for 10523
48	10764	1	Screw (B) for 10523
49	10523	1	Needle bar connecting link stud
50	10726	1	Oiling wick for 10523
51	10529	1	Take up lever driving stud
52	10728	1	Oiling wick for 10529
53	10528	1	Needle bar connecting link
54	10551	1	Needle bar connecting link oil guard
55	10650	1	Screw for 10551
56	10527	1	Take up lever hinged stud
57	10525	1	Screw for 10527
58	10726	1	Oiling wick for 10527
59	10526	1	Thread take up lever
60	10905	1	Thread take up lever (twin needle machine)
61	10525	1	Screw for 10537
62	10537	1	Needle bar rock frame hinged stud
63	10560	1	Needle bar rock frame position bracket
64	10561	1	Screw for 10560

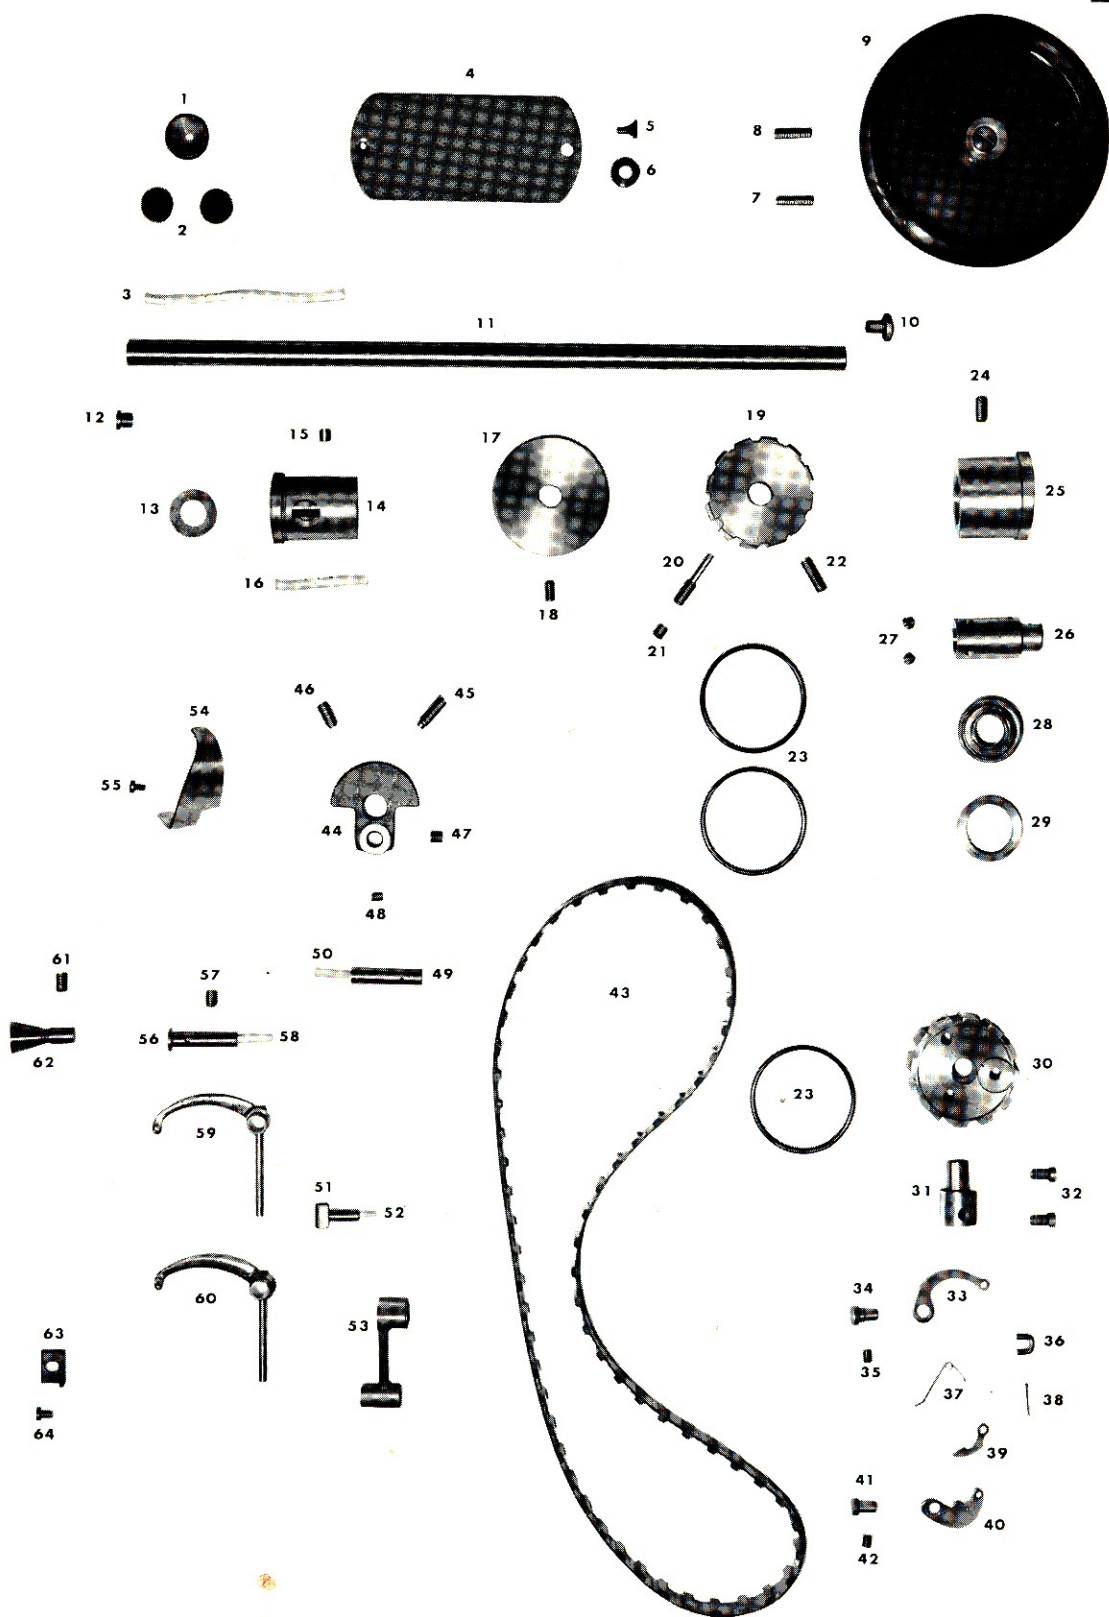


PRESSER BAR, PRESSER BAR LIFTER, FOR PW-8

Fig. No.	Parts No.	Quantity	Name
1	10699	1	Screw for 10698
2	10698	1	Face plate
3	10700	1	Face plate position pin
4	10712	1	Screw for 13056
5	13056	1	Foot lifter lever
6	13058	1	Screw for 13057
7	13084	2	Nut for 13057
8	13057	1	Foot lifting lever stop finger
9	13059	1	Foot lifter lifting lever spring
10	12149	1	Chain
11	10707	1	Presser bar spring regulator screw
12	10706	1	Presser bar spring support screw
13	10705	1	Presser bar spring (flat)
14	10515	1	Lifting rock shaft
15	10514	2	Lifting rock shaft bushing
16	10516	1	Lifting bell crank link screw stud
17	10517	1	Lifting bell crank link nut
18	10775	1	Lifting eccentric connection hinge screw
19	10703	1	Washer for 10775
20	10751	1	Lifting eccentric connecting crank
21	10754	1	Screw for 10751
22	10774	1	Lifting eccentric connection collar
23	10776	1	Wing nut for 10774
24	10772	1	Lifting eccentric connection
25	10773	1	Needle bearing for 10772
26	10771	1	Lifting eccentric
27	10566	2	Screw for 10771
28	10557	1	Lifting bell crank link
29	10558	1	Lifting bell crank
30	10728	1	Oiling felt for 10557
31	10556	1	Vibrating presser bar connecting link
32	10708	1	Vibrating presser bar thumb screw
33	10553	1	Vibrating presser bar extension
34	10554	1	Vibrating presser bar spring
35	10555	1	Vibrating presser bar
36	10728	1	Oiling wick for 10555
37	10540	1	Presser bar
38	10543	1	Presser bar position guide
39	10761	1	Screw for 10543
40	10538	1	Presser bushing (upper)
41	10761	2	Screw for 10538
42	10541	1	Presser bar position guide bracket
43	10662	1	Presser foot pinch screw
44	10544	1	Presser foot lifting bracket
45	10545	1	Presser foot lifting bracket screw
46	10559	1	Lifting bell crank set screw
47	10548	1	Presser bar lifting bracket guide screw
48	10720	1	Tension release lever rod
49	10547	1	Tension release spring
50	10546	1	Tension release slide
51	10549	1	Presser bar spring bracket
52	10532	1	Screw for 10549
53	10539	1	Presser bushing (lower)
54	10664	1	Set screw for lifting presser foot
55	13055	1	Presser bar lifter
56	10660	1	Presser bar lifter hinge screw
57	10682	1	Thread guide (upper)
58	10683	1	Thread guide (middle)
59	11160	1	Thread guide (middle) for two needle machine
60	10760	1	Felt for thread guide
61	10759	1	Thread guide (lower)
62	10685	3	Set screw for 10759, 10682, 10683, 11160

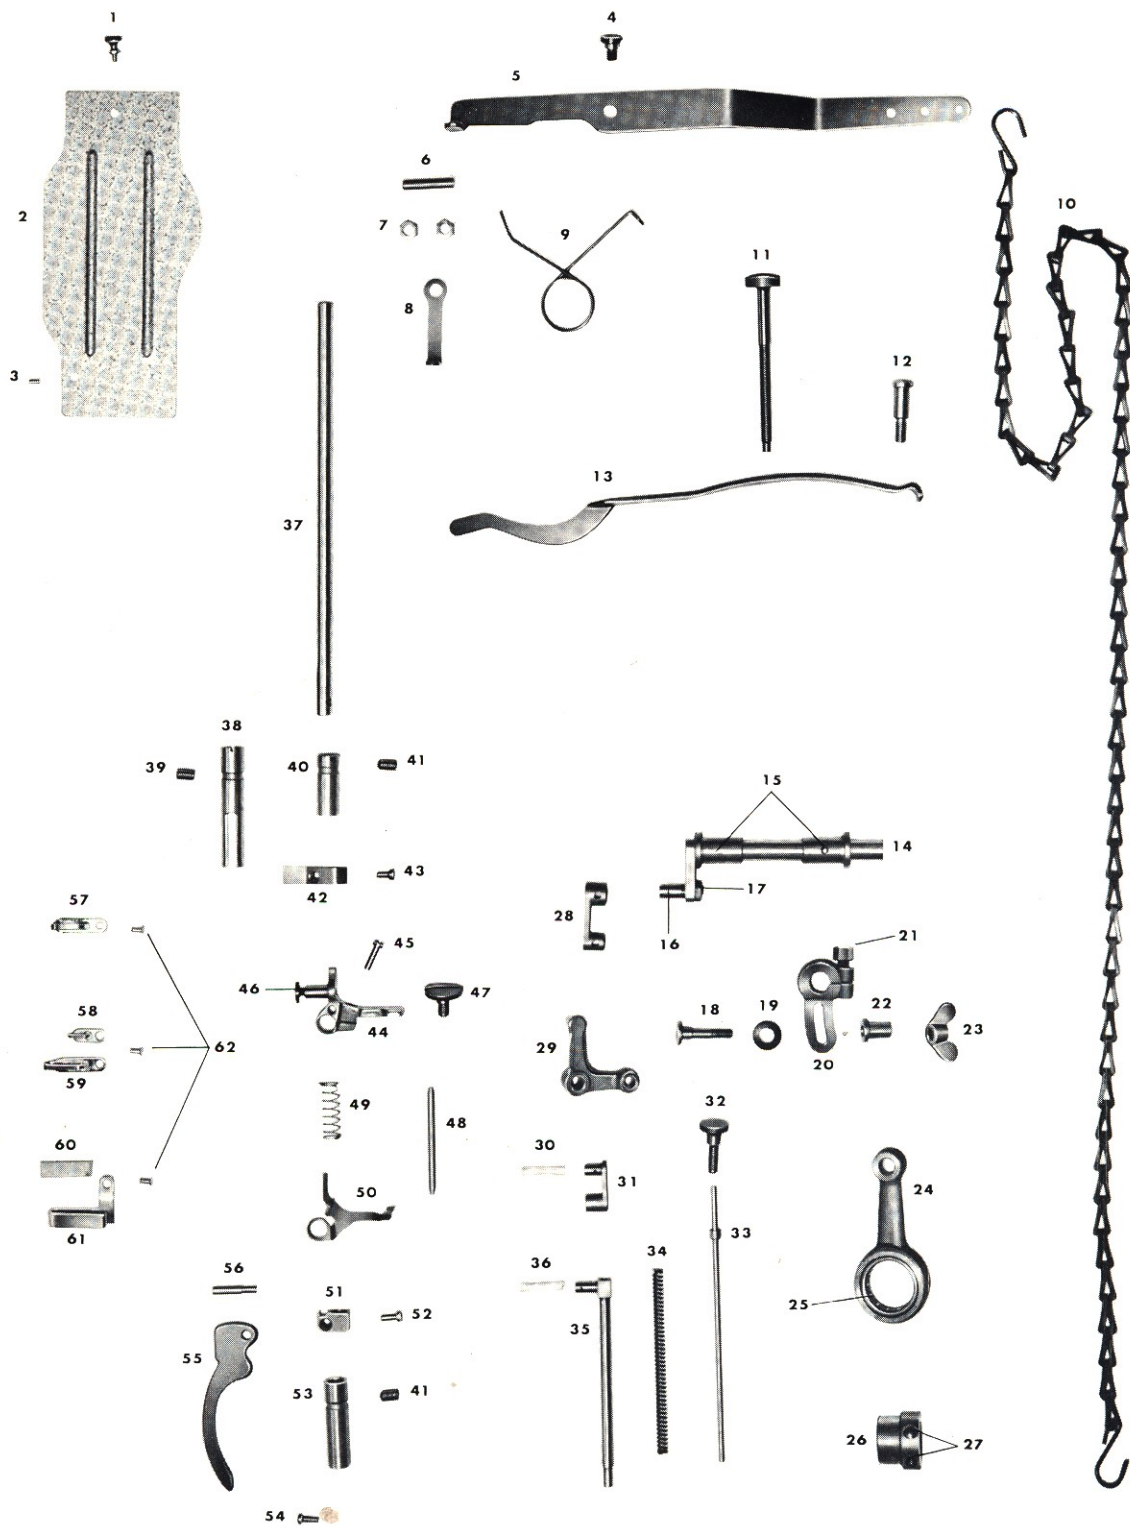

NEEDLE BAR, GAUGE PARTS FOR PW-8, PW-28

Fig. No.	Parts No.	Quantity	Name
1	10536	1	Needle bar rock frame
2	10531	1	Needle bar connecting stud
3	10532	1	Screw for 10531
4	10530	1	Needle bar
5	10533	1	Needle bar thread guide
6	10534	1	Needle bar thread guide screw
7	10535	1	Needle set screw
8	10796	1	Lifting presser foot
9	10795	1	Vibrating presser foot
10	10662	1	Screw for 10795
11	6332	4	Needle
12	12117	1	Needle plate
13	13023	2	Needle plate set screw
14	12126	1	Feed dog
15	10902	1	Needle bar rock frame (two needle machine)
16	10904	1	Needle bar connecting stud (two needle machine)
17	10532	1	Screw for 10904
18	10903	1	Needle bar (two needle machine)
19	10535	2	Needle set screw (two needle machine)
20	6332	8	Needle (two needle machine)
21	10662	1	Screw for vibrating presser foot (two needle machine)
22	13023	2	Screw for needle plate (two needle machine)
23	10282	1	Vibrating presser foot 1/8"
24	10332	1	Lifting presser foot 1/8"
25	10122	1	Needle clamp 1/8"
26	12211	1	Needle plate 1/8"
27	12221	1	Feed dog 1/8"
28	10333	1	Lifting presser foot 3/16"
29	10283	1	Vibrating presser foot 3/16"
30	10123	1	Needle clamp 3/16"
31	12213	1	Needle plate 3/16"
32	12223	1	Feed dog 3/16"
	10334	1	Lifting presser foot 7/32"
	10284	1	Vibrating presser foot 7/32"
	10124	1	Needle clamp 7/32"
	12364	1	Needle plate 7/32"
	10394	1	Feed dog 7/32"
33	10335	1	Lifting presser foot 1/4"
34	10285	1	Vibrating presser foot 1/4"
35	10125	1	Needle clamp 1/4"
36	12216	1	Needle plate 1/4"
37	12226	1	Feed dog 1/4"
38	10336	1	Lifting presser foot 5/16"
39	10286	1	Vibrating presser foot 5/16"
40	10126	1	Needle clamp 5/16"
41	10366	1	Needle plate 5/16"
42	10396	1	Feed dog 5/16"
43	10337	1	Lifting presser foot 3/8"
44	10287	1	Vibrating presser foot 3/8"
45	10127	1	Needle clamp 3/8"
46	10367	1	Needle plate 3/8"
47	10397	1	Feed dog 3/8"
	10338	1	Lifting presser foot 7/16"
	10288	1	Vibrating presser foot 7/16"
	10128	1	Needle clamp 7/16"
	10368	1	Needle plate 7/16"
	10398	1	Feed dog 7/16"
48	10339	1	Lifting presser foot 1/2"
49	10289	1	Vibrating presser foot 1/2"
50	10129	1	Needle clamp 1/2"
51	10369	1	Needle plate 1/2"
52	10399	1	Feed dog 1/22"


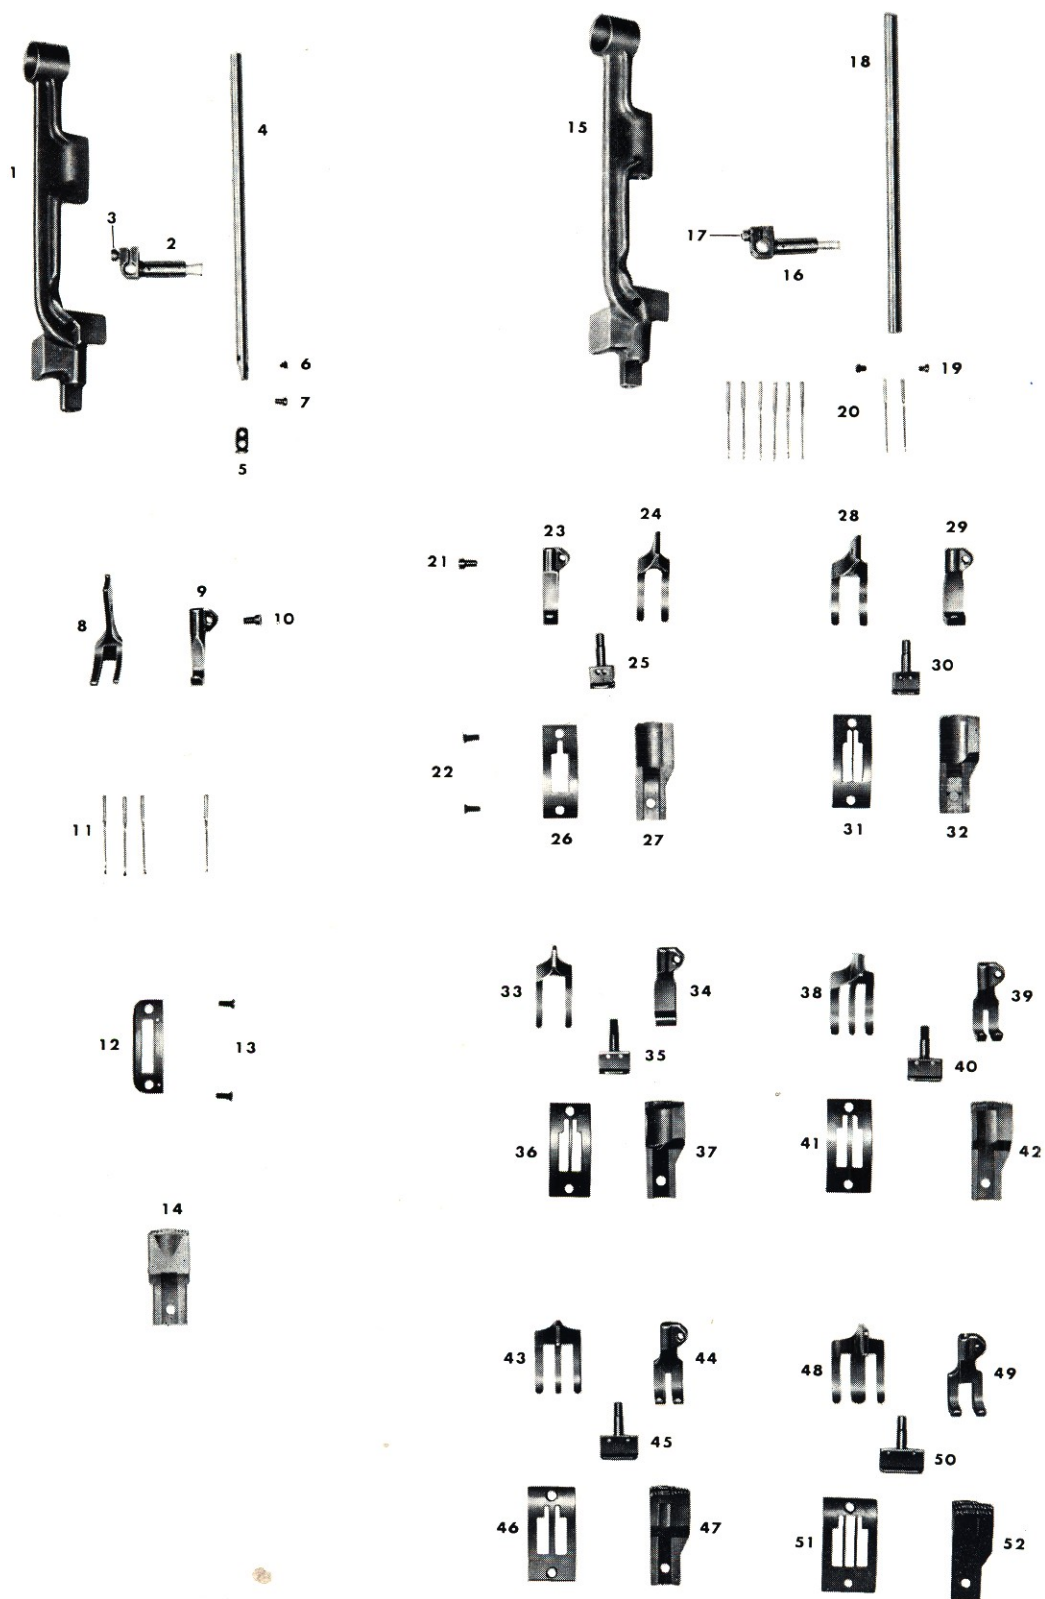


THREAD TENSION FOR ONE NEEDLE MACHINE

Fig. No.	Parts No.	Quantity	Name
1	10709	1	Spool pin
2	10680	1	Thread regulator
3	10681	1	Screw for 10680
4	10678	1	Tension release lever
5	10679	2	Tension release lever screw
6	10561	1	Set screw for 10675
7	10675	1	Tension bracket
8	10789	1	Tension stud
9	10791	1	Tension bracket pin
10	10691	2	Tension disc
11	10793	1	Tension release plunger
12	10692	1	Tension release washer
13	10693	1	Tension release spring
14	10697	3	Tension thumb nut
15	10545	1	Screw for 10792
16	10792	1	Thread controller stud
17	10689	1	Thread controller spring
18	10694	1	Thread controller disc
19	10695	1	Screw for 10694
20	10690	1	Thread controller spring stop
21	10650	1	Screw for 10690


THREAD TENSION FOR TWO NEEDLE MACHINE

1'	10942	1	Spool pin
2'	10680	2	Thread retainer
3'	10681	2	Screw for 10680
4'	10678	1	Tension release lever
5'	10679	2	Tension release lever screw
6'	10545	1	Screw for 10956
7'	10956	1	Tension bracket
8'	10789	2	Tension stud
9'	10791	1	Tension bracket pin (short)
10'	10958	1	Tension bracket pin (long)
11'	10691	4	Tension disc
12'	10957	1	Tension release plunger (short)
13'	10952	1	Tension release plunger (long)
14'	10692	2	Tension release washer
15'	10693	2	Tension release spring
16'	10697	5	Tension thumb nut
17'	8060	1	Set screw for 10951
18'	10951	1	Tension controller stud
19'	10953	1	Thread controller spring
20'	10694	1	Thread controller disc
21'	10954	1	Screw for 10694
22'	10690	1	Thread controller spring stop
23'	10650	1	Screw for 10690

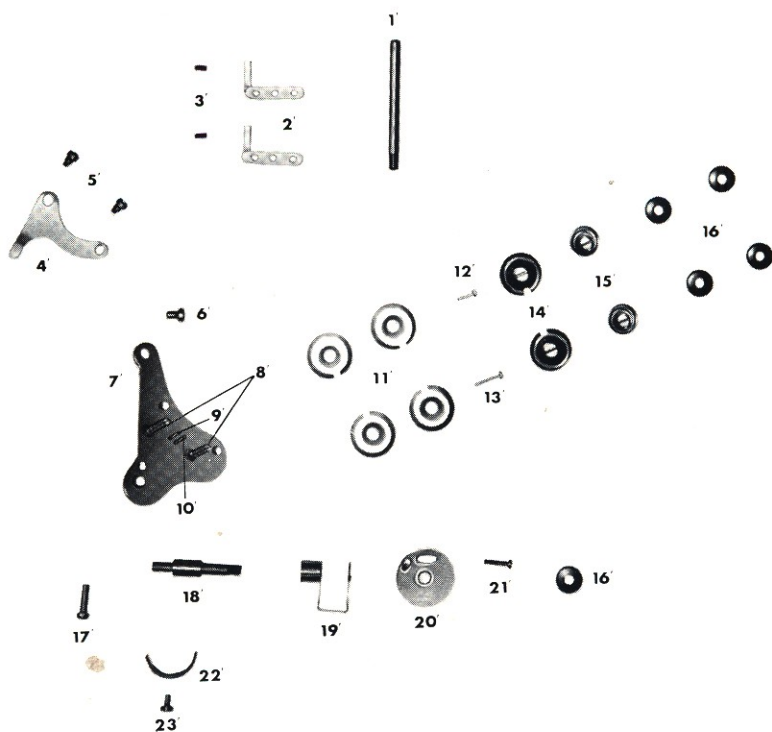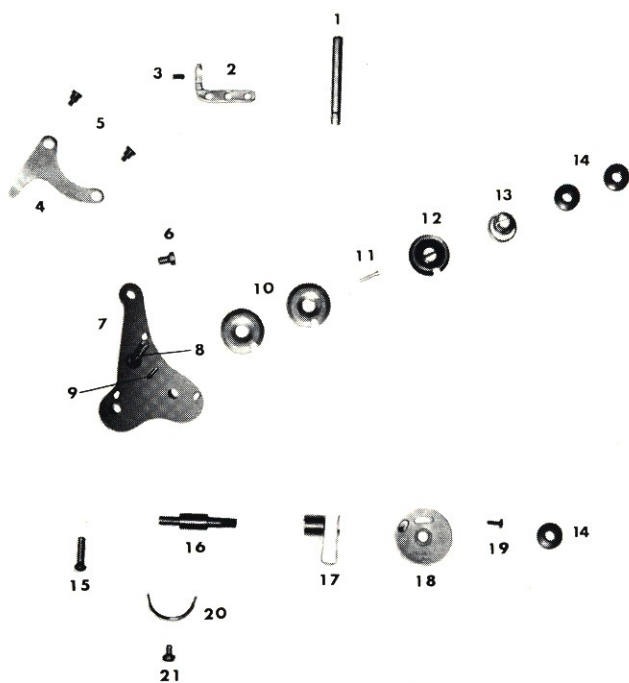


NEEDLE BAR ROCK FRAME ROCK SHAFT, FEED DRIVING ROCK SHAFT FOR PW-7, PW-8

Fig. No.	Parts No.	Quantity	Name	Fig. No.	Parts No.	Quantity	Name
1	10582	1	Needle bar rock frame slide block	40	10633	1	Feed driving connection
2	10580	1	Needle bar rock frame slide block stud	41	10722	1	Oiling felt for 10633
3	10581	1	Screw for 10580	42	10723	1	Oiling felt pin
4	10578	1	Needle bar rock frame rock shaft	43	10909	1	Feed driving eccentric adjusting disc
5	12144	1	Needle bar rock frame rock shaft crank	44	10632	1	Feed driving eccentric
6	10519	1	Set screw for 12244	45	10634	1	Pin for 10632
7	8105	1	Nut (small) for 8014	46	10630	2	Feed driving friction gib adjusting set screw
8	8014	1	Screw (small) for 12143	47	10629	2	Screw for 10631
9	12143	1	Needle bar rock frame rock shaft crank connection	48	10631	1	Feed driving friction gib
10	10522	1	Screw for 10588	49	10627	1	Feed driving flange
11	11068	1	Liner for 10588	50	10628	1	Screw (A) for 10627
12	10761	1	Screw for 10588	51	10765	1	Screw (B) for 10627
13	10588	1	Feed driving rock shaft bushing (front)	52	10625	1	Feed driving eccentric adjusting disc spring
14	10593	2	Feed driving rock shaft stop collar	53	10623	1	Collar for 10625
15	10764	4	Screw for 10593	54	10566	2	Set screw for 10623
16	10571	1	Screw for 10763	55	10671	1	Feed regulating stud (large)
17	10525	1	Screw for 10763 (one needle machine)	56	10672	1	Feed regulating stud (small)
18	10763	1	Feed driving rock shaft bushing (rear)	57	10673	2	Feed regulating stud spring
19	10587	1	Feed driving rock shaft	58	10674	2	Feed regulating stud spring clip
20	10757	1	Feed driving rock shaft crank	59	10822	1	Timing plate
21	10519	1	Screw for 10757	60	10597	2	Screw for 10822
22	10758	1	Screw (big) for 12143	61	12134	1	Lower shaft
23	3036	1	Nut (big) for 12143	62	10606	1	Lower shaft bushing (back)
24	10602	1	Feed bar hinge screw	63	10571	1	Screw for 10606
25	10636	1	Nut for 10602	64	10567	1	Lower shaft bearing
26	12130	1	Feed bar	65	10607	1	Collar for 10567
27	10598	1	Feed lifting cam fork screw	66	10658	1	Screw (A) for 10607
28	10599	1	Feed lifting cam fork washer	67	10566	1	Screw (B) for 10607
29	10595	1	Feed lifting cam fork	68	10608	1	Lower shaft ball bearing retaining washer
30	10596	1	Oiling felt for 10595	69	10609	3	Screw for 10608
31	10597	1	Screw for 10596	70	10622	1	Hook driving shaft lock ratchet
32	10637	1	Feed lifting cam	71	10639	1	Screw (A) for 10622
33	10658	1	Screw for 10637	72	10766	1	Screw (B) for 10622
34	12131	1	Screw for 12130	73	10729	1	Oiling wick for 12135
35	50103	1	Nut for 12131	74	12135	1	Lower shaft bushing (middle)
36	10590	1	Feed bar rock frame rock shaft crank (front)	75	10522	1	Screw for 12135
37	10519	1	Screw for 10590	76	10638	1	Hook driving gear (spiral)
38	10635	1	Feed driving connecting hinge screw	77	10639	1	Screw (A) for 10638
39	10636	1	Nut for 10635	78	10766	1	Screw (B) for 10638
				79	11080	1	Felt for 10782
				80	10782	1	Lower shaft bushing (front)
				81	10571	1	Set screw for 10782
				82	10794	3	Oil cup (3/8")
				83	10959	2	Rubber packing

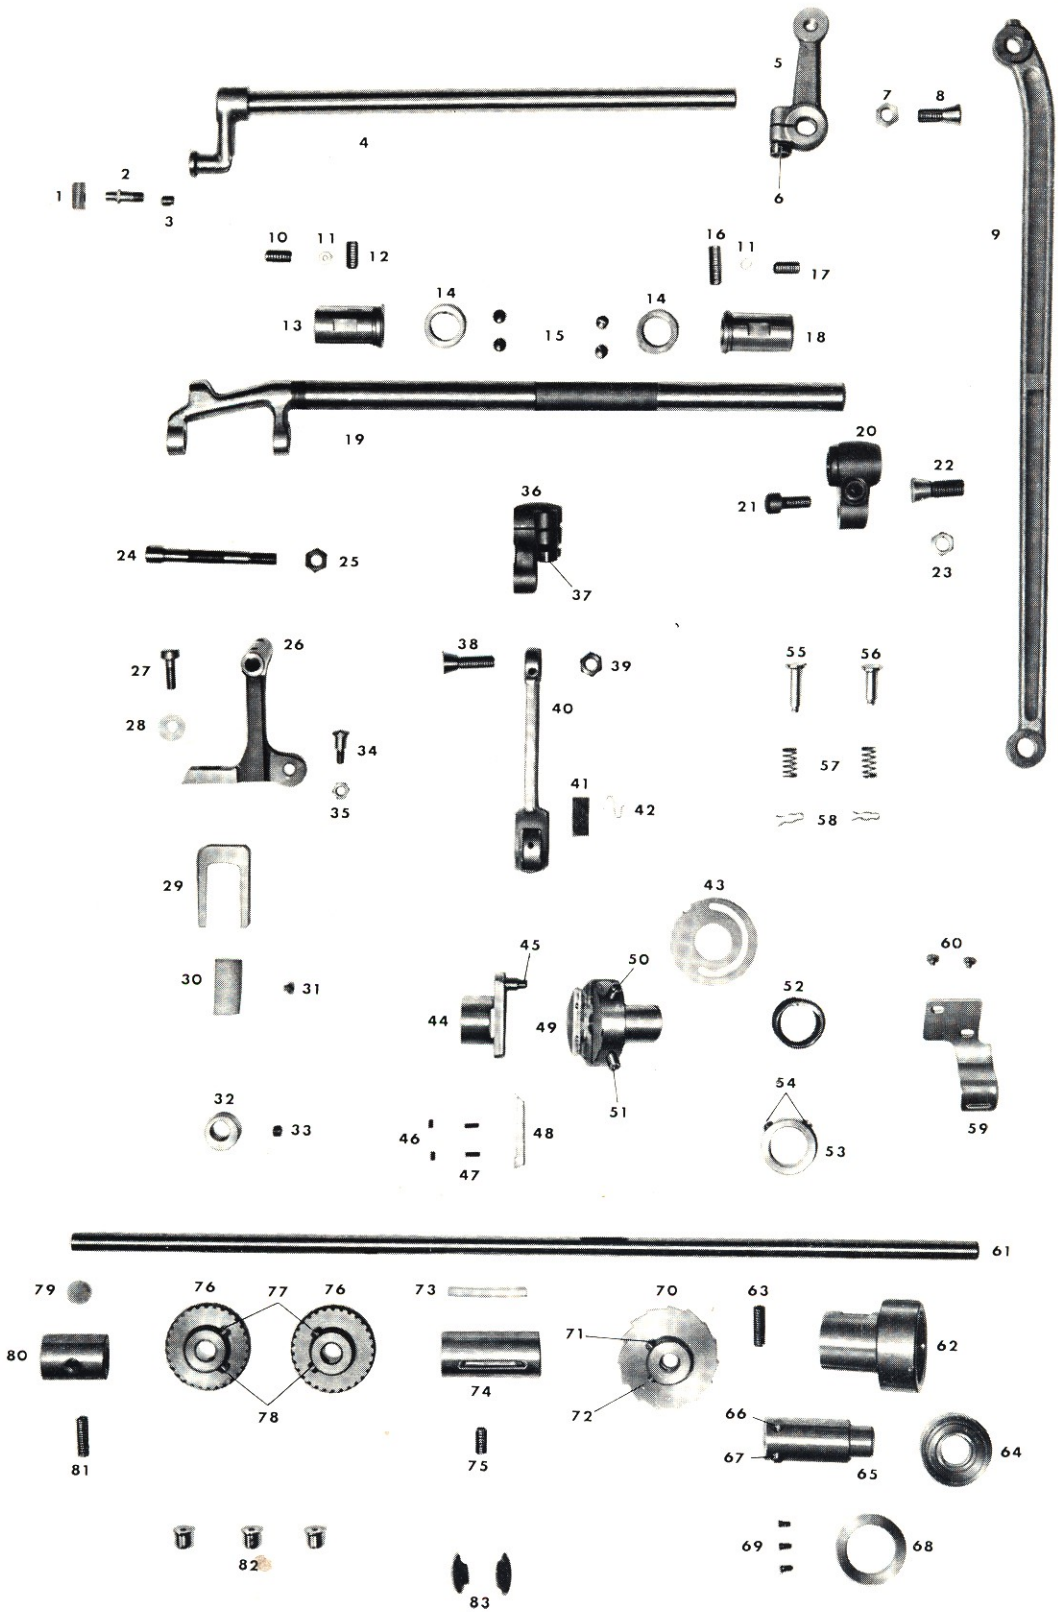


HOOK SADDLE FOR ONE NEEDLE MACHINE

Fig. No.	Parts No.	Quantity	Name
1	12124	1	Bobbin case (for hook with cap)
2	12125	1	Bobbin (for hook with cap)
3	12109	1	Hook and bobbin case complete with cap
4	12104	1	Hook washer
5	10561	2	Screw for 12056
6	12056	1	Feed dog lever retainer washer
7	6339	1	Screw for 12128
8	12128	1	Feed dog lever slide block
9	12129	1	Feed dog lever slide block hinge screw
10	10703	1	Washer for 12128
11	13076	1	Nut for 12128
12	10561	1	Feed dog set screw
13	12137	1	Oiling felt for 12127
14	12127	1	Feed dog lever
15	12119	1	Feed dog lever post
16	10517	1	Nut for 10517
17	10766	1	Feed lever adjusting screw
18	12121	1	Feed dog lever post cover (slide)
19	12122	4	Screw for 12121
20	12123	1	Feed dog lever post support
21	10545	4	Screw (small) for 12123
22	12132	1	Bed slide
23	6031	1	Screw for 12132
24	12136	2	Washer for 12110
25	12110	2	Screw (big) for 12123
26	12136	2	Washer for 12120
27	12120	2	Screw for 12119
28	10656	1	Bobbin
29	12105	1	Set screw for 12032
30	12032	1	Hook and bobbin case complete
31	12104	1	Hook washer
32	12107	1	Hook post slide
33	12114	1	Bobbin case opener
34	12115	1	Hinge screw for 12114
35	12116	1	Bobbin case opener driving block
36	10650	2	Screw for 12116
37	12139	1	Oiling wick for hook saddle
38	10650	2	Oil packing for 12139
39	12106	1	Hook socket
40	11134	1	Hook driving pinion (spiral)
41	10767	3	Screw for 11134
42	12108	1	Hook saddle
43	12111	1	Hook post cover plate (front)
44	12112	1	Hook post cover plate (back)
45	12113	8	Screw for 12111, 12112 (small)
46	12136	2	Washer for 12110
47	12110	2	Screw for 12108
48	12138	1	Bed oil guard
49	10561	2	Screw for 12138
50	12140	1	Oiling felt for 12138
51	10559	1	Screw for 12111, 12112 (big)

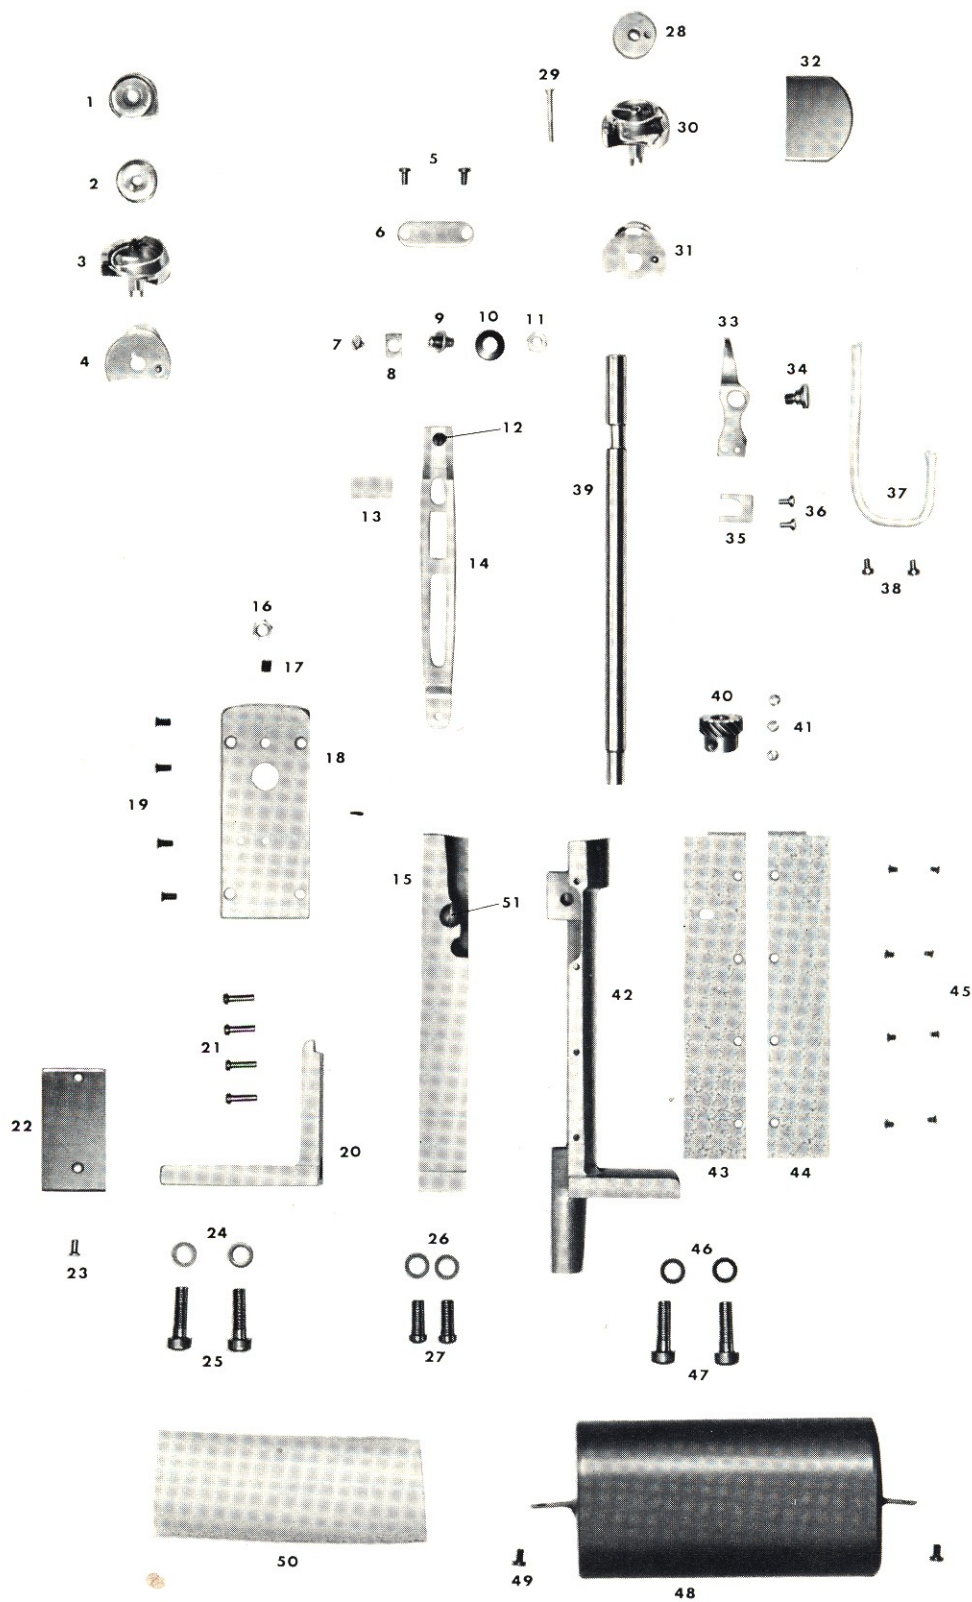


HOOK SADDLE FOR TWO NEEDLE MACHINE

Fig. No.	Parts No.	Quantity	Name
1	12124	2	Bobbin case (for hook with cap)
2	12125	2	Bobbin (for hook with cap)
3	12109	2	Rotating hook with cap
4	12104	1	Hook washer
5	12107	2	Hook post slide
6	10656	2	Bobbin
7	12032	2	Rotating hook
8	12104	2	Hook washer
9	12105	2	Screw for 12104
10	10561	2	Screw for 12056
11	12056	1	Feed dog lever retainer washer
12	6339	1	Screw for 12128
13	12128	1	Feed dog lever slide block
14	12129	1	Screw for 12128
15	10703	1	Washer for 12128
16	13076	1	Nut for 12129
17	10561	1	Feed dog screw
18	12127	1	Feed dog lever
19	12137	1	Felt for 12127
20	12106	2	Hook socket
21	12114	2	Bobbin case opener
22	12115	2	Screw for 12114
23	12116	2	Bobbin case opener driving block
24	10650	4	Screw for 12116
25	12139	2	Oiling wick for hook saddle
26	10650	4	Screw for 12139
27	11134	2	Hook driving pinion (spiral)
28	10767	6	Screw for 11134
29	12055	1	Feed dog lever post
30	10559	2	Screw (big) for hook cover plate
31	12108	2	Hook saddle
32	12051	1	Hook post cover plate (left front)
33	12052	1	Hook post cover plate (left rear)
34	12053	1	Hook post cover plate (right front)
35	12054	1	Hook post cover plate (right rear)
36	12113	16	Screw for cover plate
37	12136	4	Washer for 12110
38	12110	4	Screw for 12108
39	12136	4	Washer for 12055
40	12120	4	Screw for 12055
41	12132	1	Bed slide
42	6031	1	Screw for 12132
43	12140	1	Felt for 12138
44	12138	1	Cover for 10638
45	10561	2	Screw for 12138

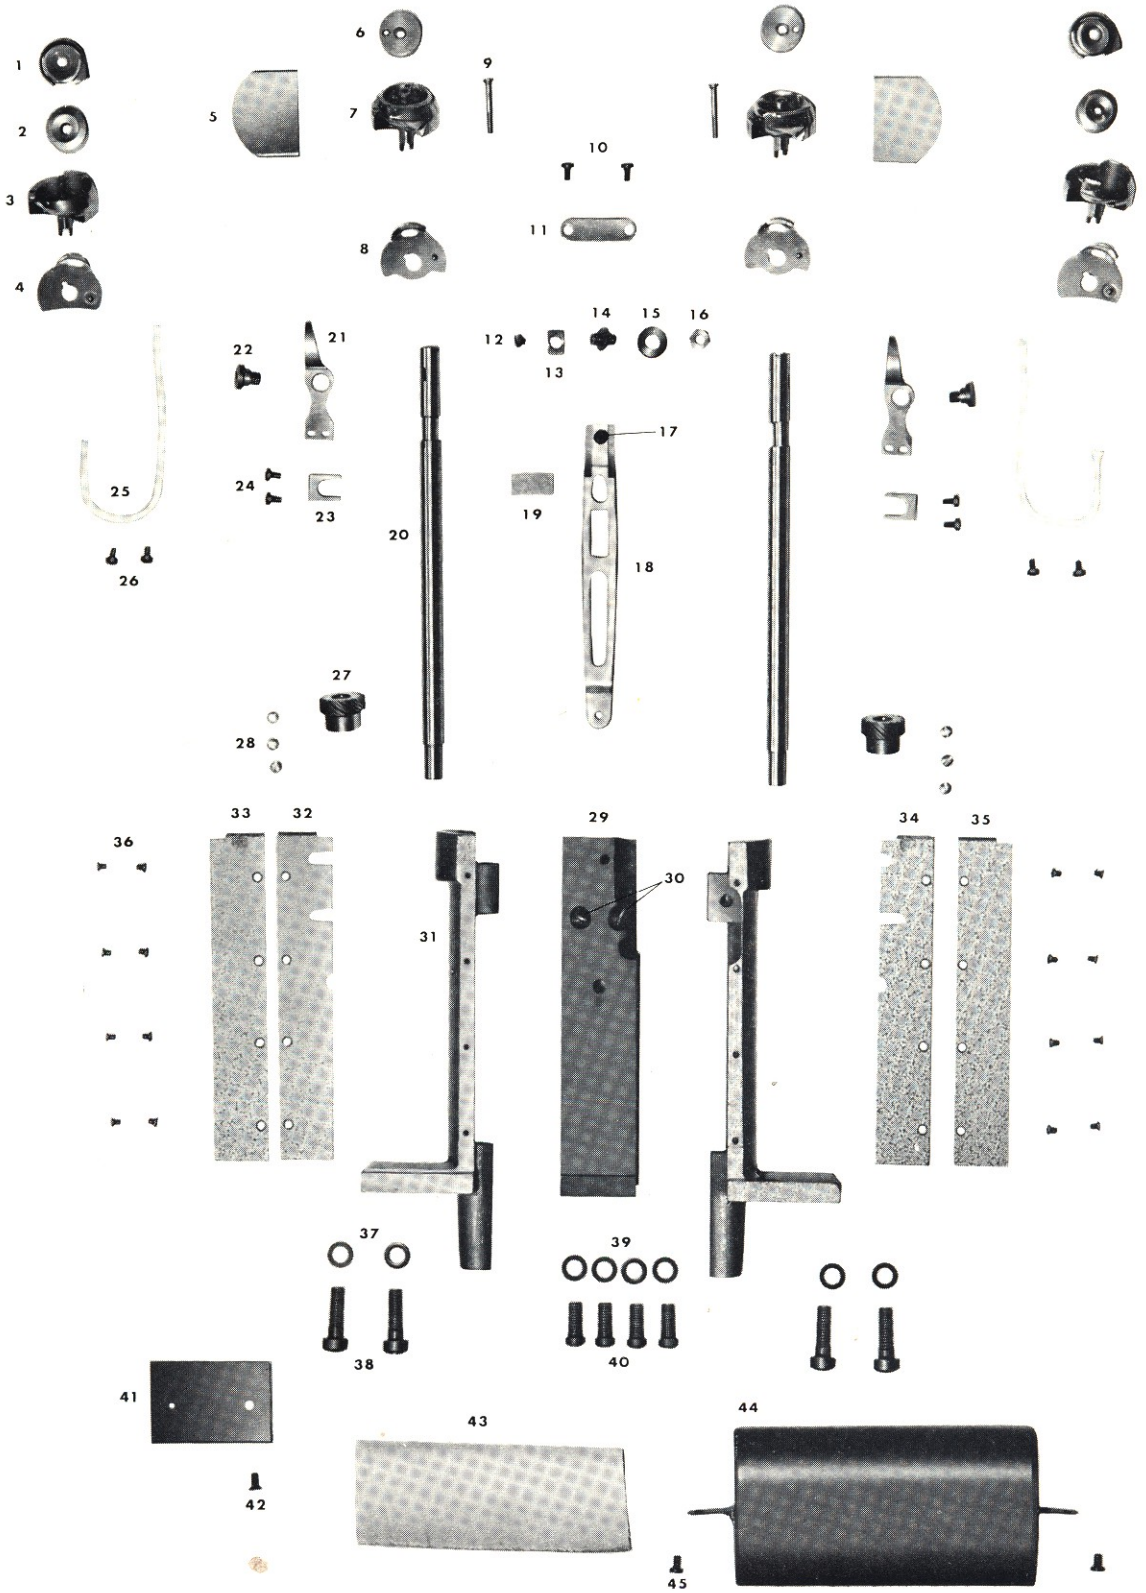

REVERSE STITCH MECHANISM

Fig. No.	Parts No.	Quantity	Name
1	10803	1	Fulcrum shaft
2	10806	1	Reverse lever return spring
3	10842	1	Fulcrum shaft bell crank
4	8007	1	Position screw for 10842
5	10812	1	Set screw for 10842
6	10802	1	Collar for 10803
7	8009	1	Screw for 10802
8	10845	1	Screw for 10844
9	10844	1	Reverse lever
10	10712	2	Screw for 12281
11	12281	1	Bell crank connecting rod
12	10343	1	Feed reverse shaft bell crank
13	10828	1	Screw (B) for 10843
14	10827	1	Screw (A) for 10843
15	10403	1	Feed reverse shaft
16	10811	1	Feed reverse shaft stop
17	10612	2	Screw for 10811
18	10813	2	Lock nut for 10812
19	10812	2	Adjusting screw for 10811
20	10838	1	Feed reverse shaft bell crank
21	10828	1	Screw (B) for 10838
22	10827	1	Screw (A) for 10838
23	10839	1	Feed reverse fork connecting link
24	10837	1	Felt for 10839
25	10755	2	Screw for 10839
26	3036	2	Nut for 10839
27	10819	1	Feed reverse fork collar
28	10909	1	Feed driving eccentric adjusting disc
29	10840	1	Feed reverse fork
30	10818	1	Felt for 10840
31	10829	1	Felt stop pin
32	10820	1	Feed rock shaft bell crank
33	10519	2	Set screw for 10820
34	10821	1	Feed reverse fork hinge pin
35	10828	2	Screw for 10821

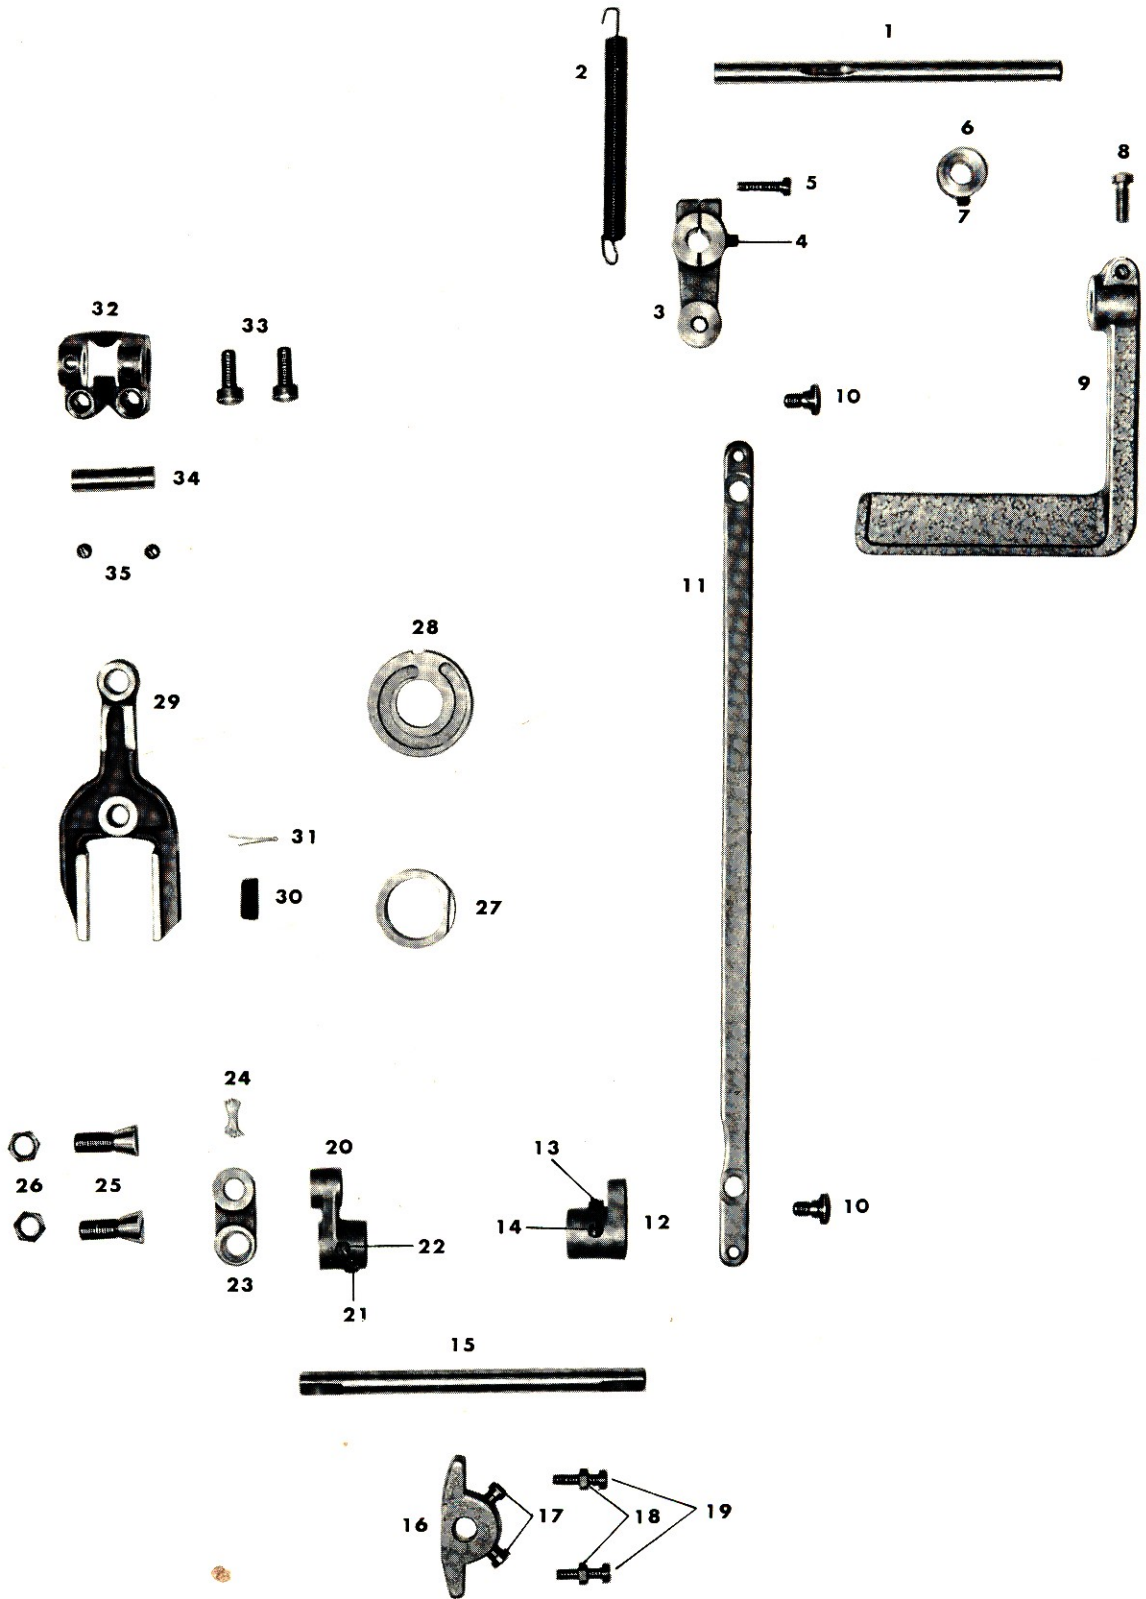


ACCESSORIES

Fig. No.	Parts No.	Quantity	Name
1	8132	1	Accessories box
2	10748	1	Double headed wrench
3	10747	1	Wrench 1/16"
4	11196	1	Tweezers
5	8121	1	Screw driver (small)
6	8120	1	Screw driver (middle)
7	8118	1	Screw driver (big)
8	8125	1	Oiler
9	8123	1	Oil
10	8124	1	Machine cover
11	10656	6	Bobbin
12	12125	6	Bobbin (for hook with cap)
13	10734	1	Bobbin winder
14	10733	1	Drip pan
15	6055	4	Nail
16	6052	4	Screw
17	11171	2	Bed hinge connection base
18	11170	4	Bed hinge connection set screw
19	11169	2	Bed hinge connection




ACCESSORIES (Pedal type)

Fig. No.	Parts No.	Quantity	Name
1	10780	1	Cotton stand (for one needle machine)
2	11197	1	Cotton stand (for two needle machine)
3	13094	1	Pedal set

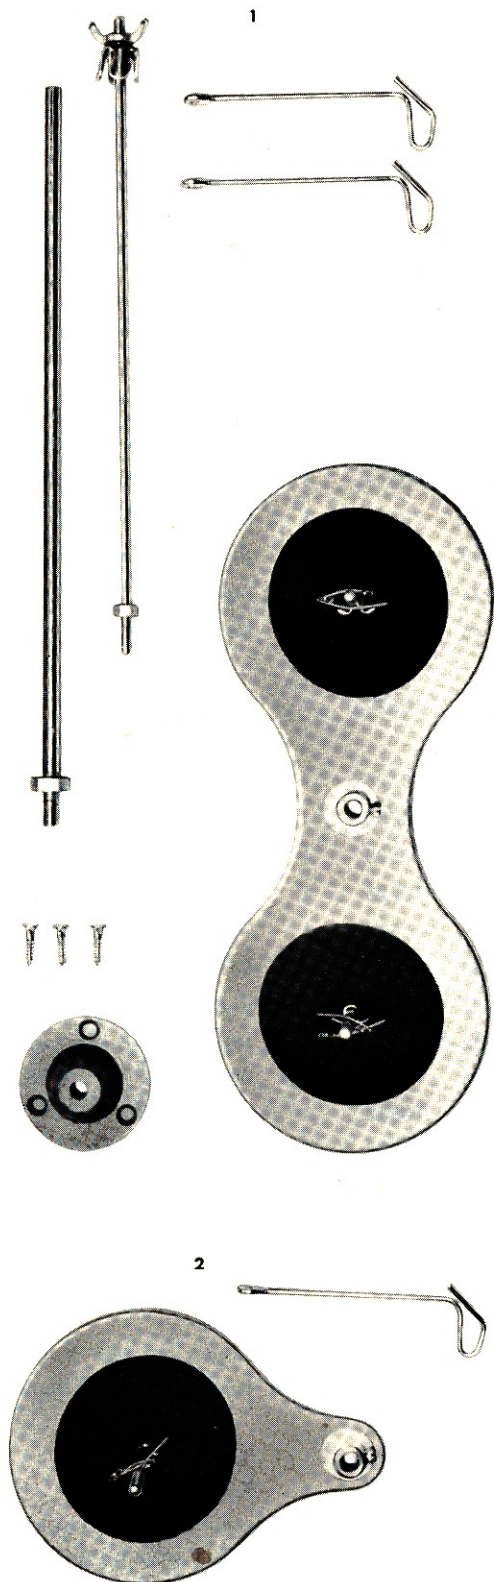








ARM SHAFT, THREAD TAKE UP LEVER, NEEDLE BAR ROCK FRAME FOR PW-7

Fig. No.	Parts No.	Quantity	Name	Fig. No.	Parts No.	Quantity	Name
1	10701	1	Arm shaft bushing (front) oil packing thumb screw	36	10618	1	Safety clutch ratchet connecting link
2	10725	2	Arm shaft bushing (front) oil wick	37	10619	1	Safety clutch throw in ratch spring
3	10724	1	Arm shaft oiling wick	38	10620	1	Safety clutch throw in ratch pin
4	10702	1	Arm cap				
5	10704	1	Arm cap screw	39	10617	1	Safety clutch ratchet
6	10703	1	Arm cap washer	40	10616	1	Safety clutch locking lever
7	10576	1	Balance wheel set screw (A)	41	10613	1	Hinge stud for 10616
8	10579	1	Balance wheel set screw (B)	42	10581	1	Screw for 10613
9	10575	1	Balance wheel	43	12133	1	Arm shaft connecting belt
10	10577	1	Balance wheel adjusting screw	44	10520	1	Needle bar crank
11	10507	1	Arm shaft	45	10521	1	Needle bar crank position screw (A)
12	10506	1	Arm shaft oil packing stop screw	46	10522	1	Needle bar crank position screw (B)
13	10563	1	Arm shaft bushing (front) washer	47	10524	1	Screw (A) for 10523
14	10562	1	Arm shaft front bushing	48	10764	1	Screw (B) for 10523
15	10522	1	Arm shaft front bushing screw	49	10523	1	Needle bar connecting link stud
16	10729	1	Oiling wick for 10562	50	10726	1	Oiling wick for 10523
17	10908	1	Feed indicating disc	51	10529	1	Take up lever driving stud
18	10573	1	Screw for 10908	52	10728	1	Oiling wick for 10529
19	10569	1	Arm shaft connecting belt pulley	53	10528	1	Needle bar connecting link
				54	10856	1	Needle bar connecting stud
20	10570	1	Position screw for 10569	55	10726	1	Oiling wick for 10856
21	10524	1	Set screw for 10570	56	10532	1	Set screw for 10856
22	10571	1	Set screw for 10569	57	10551	1	Needle bar connecting link oil guard
23	10574	3	Arm shaft connecting belt pulley spring flange	58	10650	1	Screw for 10551
24	10522	1	Screw for 13074	59	10525	1	Screw for 10537
25	13074	1	Arm shaft bushing (back)	60	10537	1	Needle bar rock frame hinged stud
26	13075	1	Arm shaft bearing collar				
27	10566	2	Screw for 13075	61	10855	1	Needle bar rock frame
28	10567	1	Arm shaft ball bearing	62	10560	1	Needle bar rock frame position bracket
29	10568	1	Ball bearing retaining washer				
30	10941	1	Safety clutch pulley	63	10561	1	Screw for 10560
31	10611	1	Safety clutch collar	64	10525	1	Screw for 10527
32	10612	2	Collar set screw	65	10527	1	Take up lever hinged stud
33	10615	1	Safety clutch locking lever spring	66	10726	1	Oiling wick for 10527
				67	10526	1	Thread take up lever
34	10614	1	Hinge pin for 10615	68	10905	1	Thread take up lever (for two needle machine)
35	10581	1	Screw for 10614				

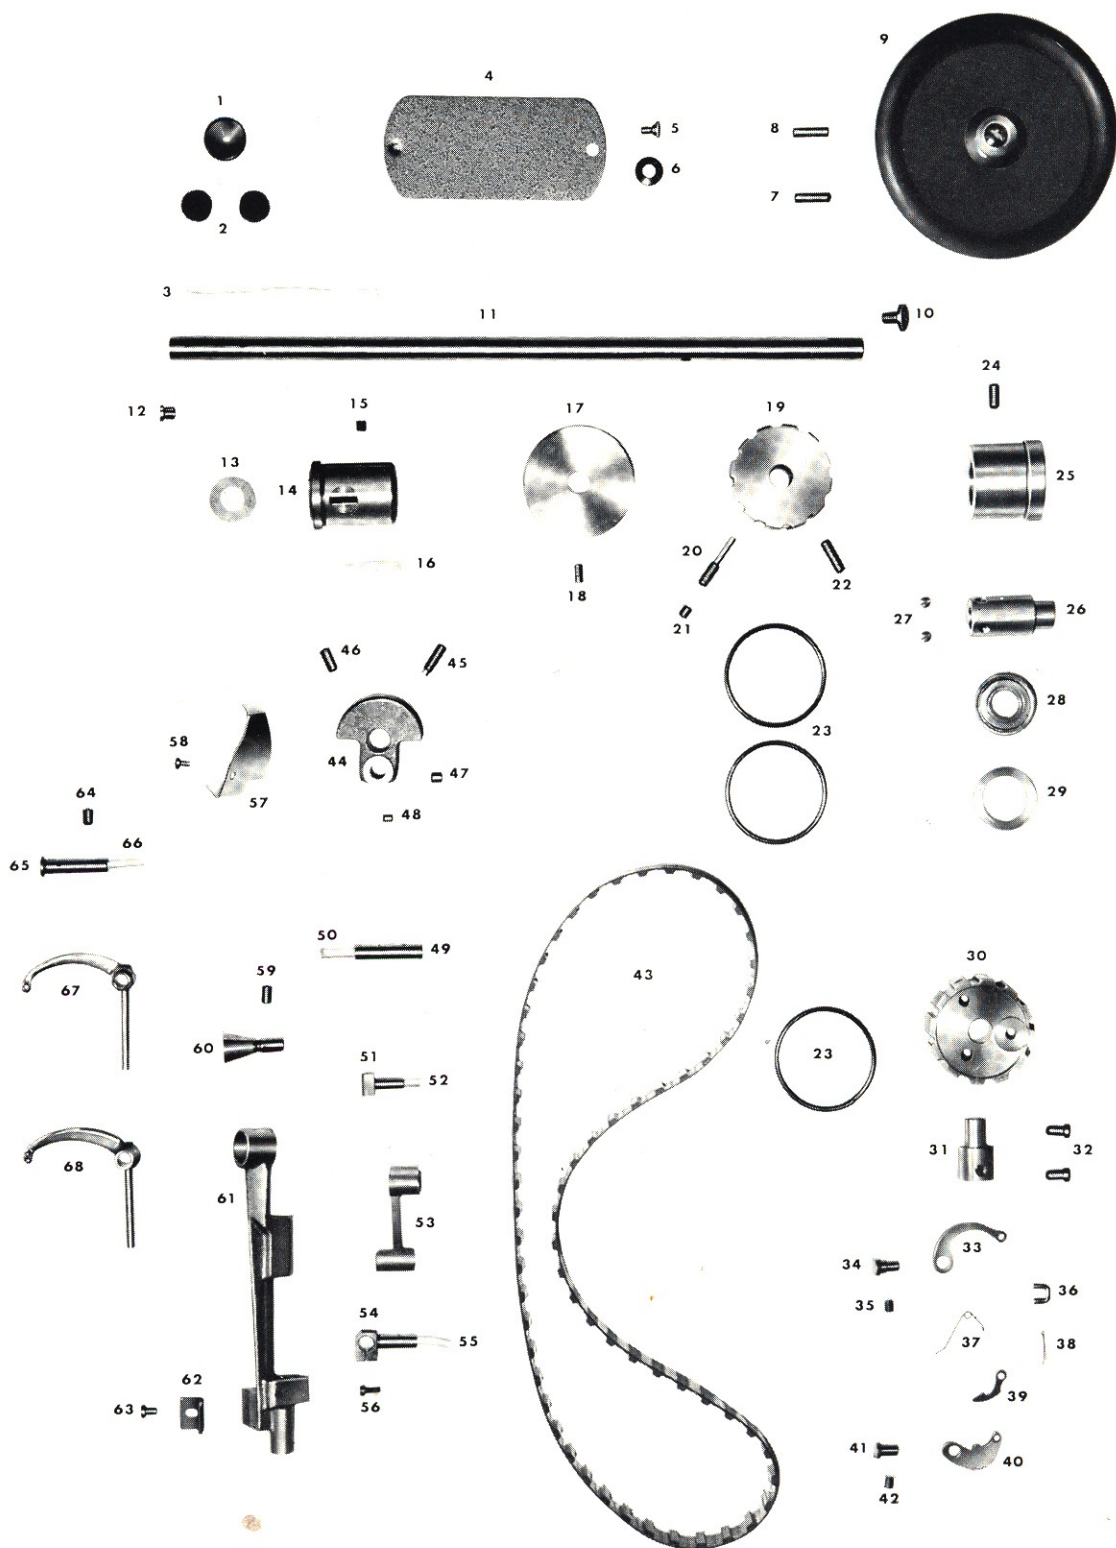


PRESSER BAR, NEEDLE BAR, GAUGE PARTS FOR PW-7, PW-27

Fig. No.	Parts No.	Quantity	Name
1	10540	1	Presser bar
2	10859	1	Needle bar
3	10860	1	Needle bar thread guard
4	10534	1	Set screw for 10860
5	10535	1	Needle set screw
6	13105	1	Presser foot
7	6332	4	Needle
8	12117	1	Needle plate
9	13023	2	Needle plate set screw
10	12126	1	Feed dog
11	10540	1	Presser bar (two needle machine)
12	10992	1	Needle bar (two needle machine)
13	10535	2	Needle set screw (two needle machine)
14	6332	8	Needle
15	13023	2	Needle plate set screw
	10320	1	Presser foot 1/16"
	12066	1	Needle clamp 1/16"
	10360	1	Needle plate 1/16"
	10390	1	Feed dog 1/16"
	10321	1	Presser foot 3/32"
	12066	1	Needle clamp 3/32"
	10361	1	Needle plate 3/32"
	10391	1	Feed dog 3/32"
16	10322	1	Presser foot 1/8"
17	10102	1	Needle clamp 1/8"
18	12211	1	Needle plate 1/8"
19	12221	1	Feed dog 1/8"
20	10323	1	Presser foot 3/16"
21	10103	1	Needle clamp 3/16"
22	12213	1	Needle plate 3/16"
23	12223	1	Feed dog 3/16"
	10324	1	Presser foot 7/32"
	10104	1	Needle clamp 7/32"
	10364	1	Needle plate 7/32"
	10394	1	Feed dog 7/32"
24	10325	1	Presser foot 1/4"
25	10105	1	Needle clamp 1/4"
26	12216	1	Needle plate 1/4"
27	12226	1	Feed dog 1/4"
28	10326	1	Presser foot 5/16"
29	10106	1	Needle clamp 5/16"
30	10366	1	Needle plate 5/16"
31	10396	1	Feed dog 5/16"
32	10327	1	Presser foot 3/8"
33	10107	1	Needle clamp 3/8"
34	10367	1	Needle plate 3/8"
35	10397	1	Feed dog 3/8"
	10328	1	Presser foot 7/16"
	10108	1	Needle clamp 7/16"
	10368	1	Needle plate 7/16"
	10398	1	Feed dog 7/16"
36	10329	1	Presser foot 1/2"
37	10109	1	Needle clamp 1/2"
38	10369	1	Needle plate 1/2"
39	10399	1	Feed dog 1/2"

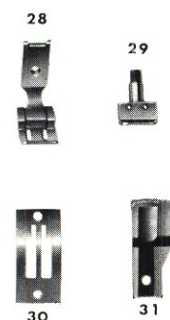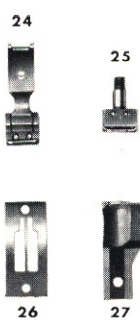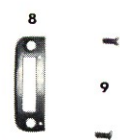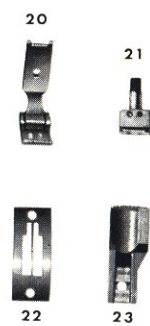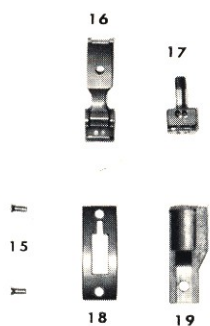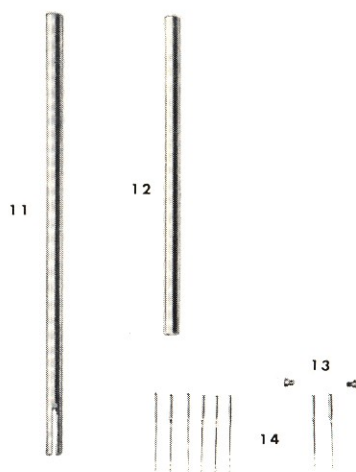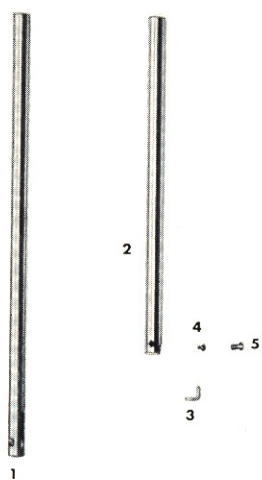


PRESSER BAR, FACE PLATE, FOOT LIFTING LEVER FOR PW-7

Fig. No.	Parts No.	Quantity	Name
1	10699	1	Face plate set screw
2	10698	1	Face plate
3	10700	1	Face plate position pin
4	10712	1	Screw for 13056
5	13056	1	Foot lifter lever
6	13058	1	Screw for 13057
7	13084	2	Nut for 13058
8	13057	1	Foot lifting lever stop finger
9	13059	1	Foot lifting lever spring
10	12149	1	Chain
11	10707	1	Presser bar spring regulator screw
12	10706	1	Presser bar spring support screw
13	10705	1	Presser bar spring (flat)
14	10543	1	Presser bar position guide
15	10761	1	Screw for 10543
16	10538	1	Presser bushing (upper)
17	10761	2	Screw for 10538
18	10541	1	Presser bar position guide
19	10662	1	Screw for 10541
20	10858	1	Washer for 10857
21	10857	1	Presser bar lifting bracket
22	10548	1	Presser bar lifting bracket guide screw
23	10720	1	Tension release lever rod
24	10549	1	Presser bar spring bracket
25	10532	1	Set screw for 10549
26	10539	1	Presser bushing (lower)
27	10540	1	Presser bar
28	10664	1	Presser foot set screw
29	10659	1	Presser bar lifter
30	10660	1	Presser bar lifter hinge screw
31	10682	1	Thread guide (upper)
32	10683	1	Thread guide (middle)
33	11160	1	Thread guide (middle) (two needle machine)
34	10760	1	Felt for 10759
35	10759	1	Thread guide (lower)
36	10685	3	Screw for 10759

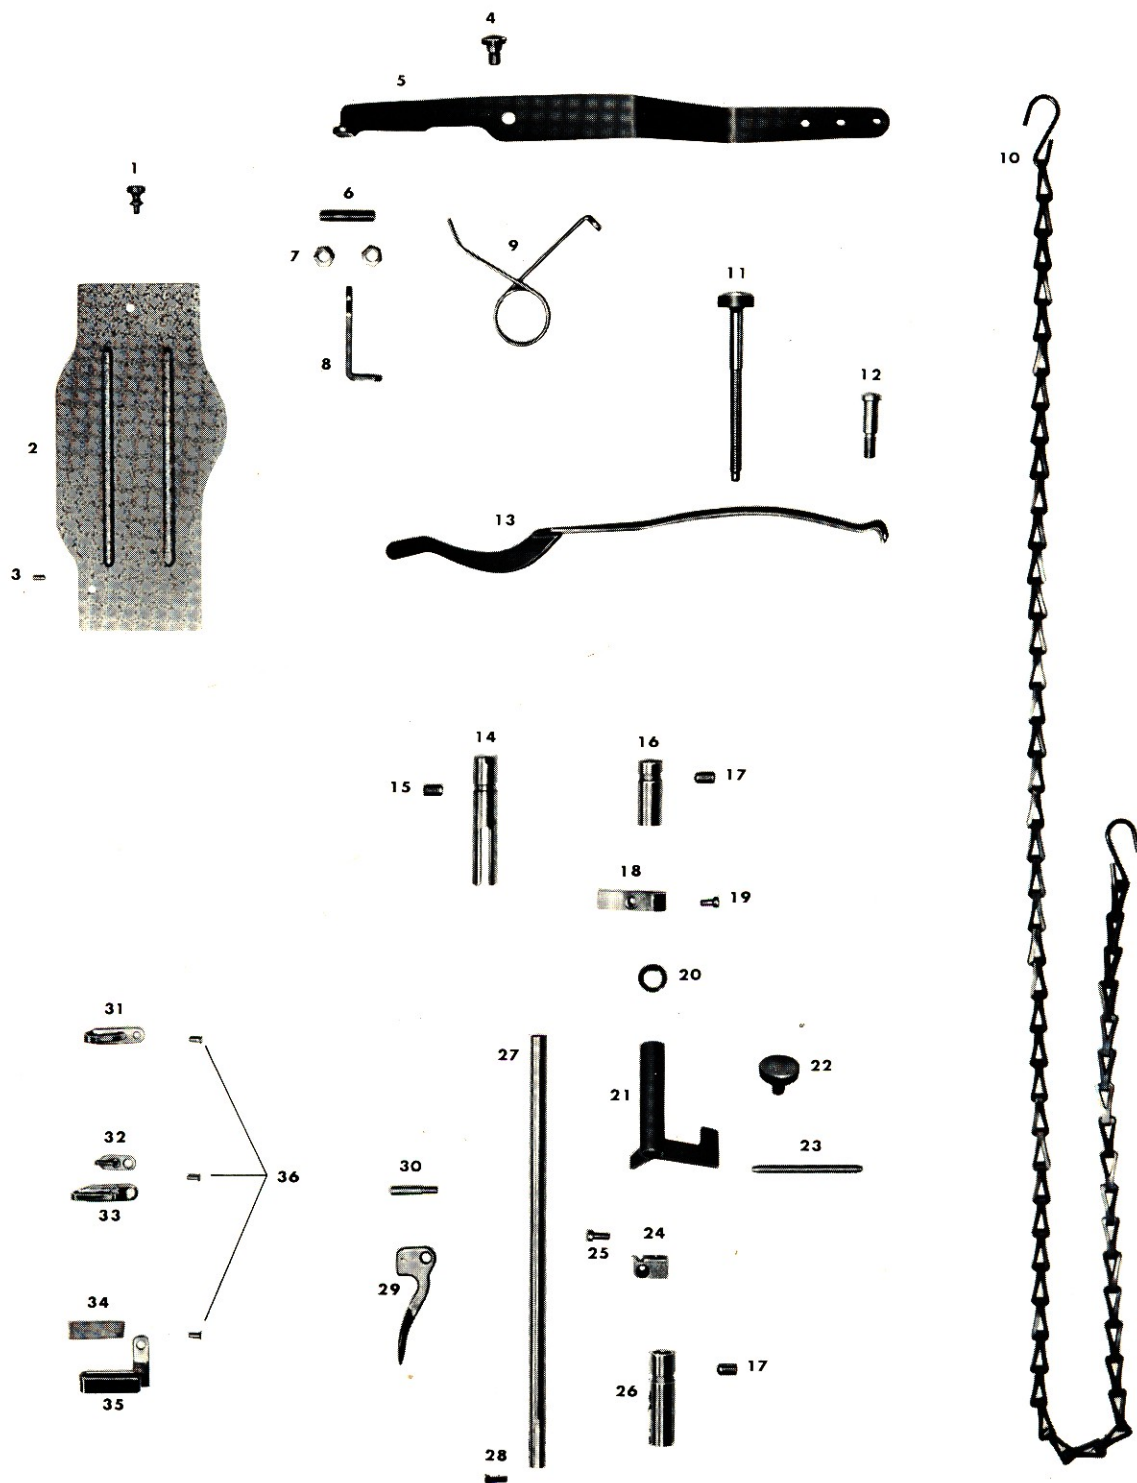


ARM SHAFT, THREAD TAKE UP LEVER FOR PW-6, PW-26

Fig. No.	Parts No.	Quantity	Name
1	10701	1	Arm shaft bushing (front) oil packing thumb screw
2	10725	2	Arm shaft front bushing oiling felt
3	10724	1	Arm shaft oiling wick
4	10702	1	Arm cap
5	10704	1	Arm cap screw
6	10703	1	Arm cap screw washer
7	10575	1	Balance wheel
8	10579	1	Balance wheel set screw (B)
9	10576	1	Balance wheel set screw (A)
10	10577	1	Balance wheel adjusting screw
11	10507	1	Arm shaft
12	10506	1	Arm shaft oil packing
13	10563	1	Arm shaft bushing (front) washer
14	10562	1	Arm shaft bushing (front)
15	10522	1	Arm shaft bushing (front) screw
16	10729	1	Oiling wick for 10562
17	10908	1	Feed indicating disc
18	10573	1	Screw for 10908
19	10569	1	Arm shaft connecting belt pulley
20	10570	1	Position screw for 10569
21	10524	1	Set screw for 10570
22	10571	1	Set screw for 10569
23	10574	3	Spring flange for 10569
24	10522	1	Screw for 13074
25	13074	1	Arm shaft bushing
26	13075	1	Arm shaft bushing collar
27	10566	2	Screw for 13075
28	10567	1	Arm shaft ball bearing
29	10568	1	Ball bearing retaining washer
30	10941	1	Lower pulley for arm shaft connecting belt
31	10612	2	Screw for 10941
32	12133	1	Arm shaft connecting belt
33	10520	1	Needle bar crank
34	10521	1	Set screw (A) for 10520
35	10522	1	Set screw (B) for 10520
36	10524	1	Screw (A) for 10523
37	10764	1	Screw (B) for 10523
38	10523	1	Needle bar connecting link stud
39	10726	1	Oiling wick for 10523
40	10529	1	Take up lever driving stud
41	10728	1	Oiling wick for 10529
42	10528	1	Needle bar connecting link
43	12005	1	Needle bar bushing
44	10571	1	Needle bar bushing set screw
45	10856	1	Needle bar connecting stud
46	10532	1	Screw for 10856
47	10538	1	Presser bar bushing (lower)
48	10572	1	Screw for 10538
49	10551	1	Needle bar connecting link oil guard
50	10650	1	Screw for 10551
51	10525	1	Screw for 10527
52	10527	1	Take up lever hinged stud
53	10726	1	Oiling wick for 10527
54	10526	1	Thread take up lever
55	10905	1	Thread take up lever (two needle machine)

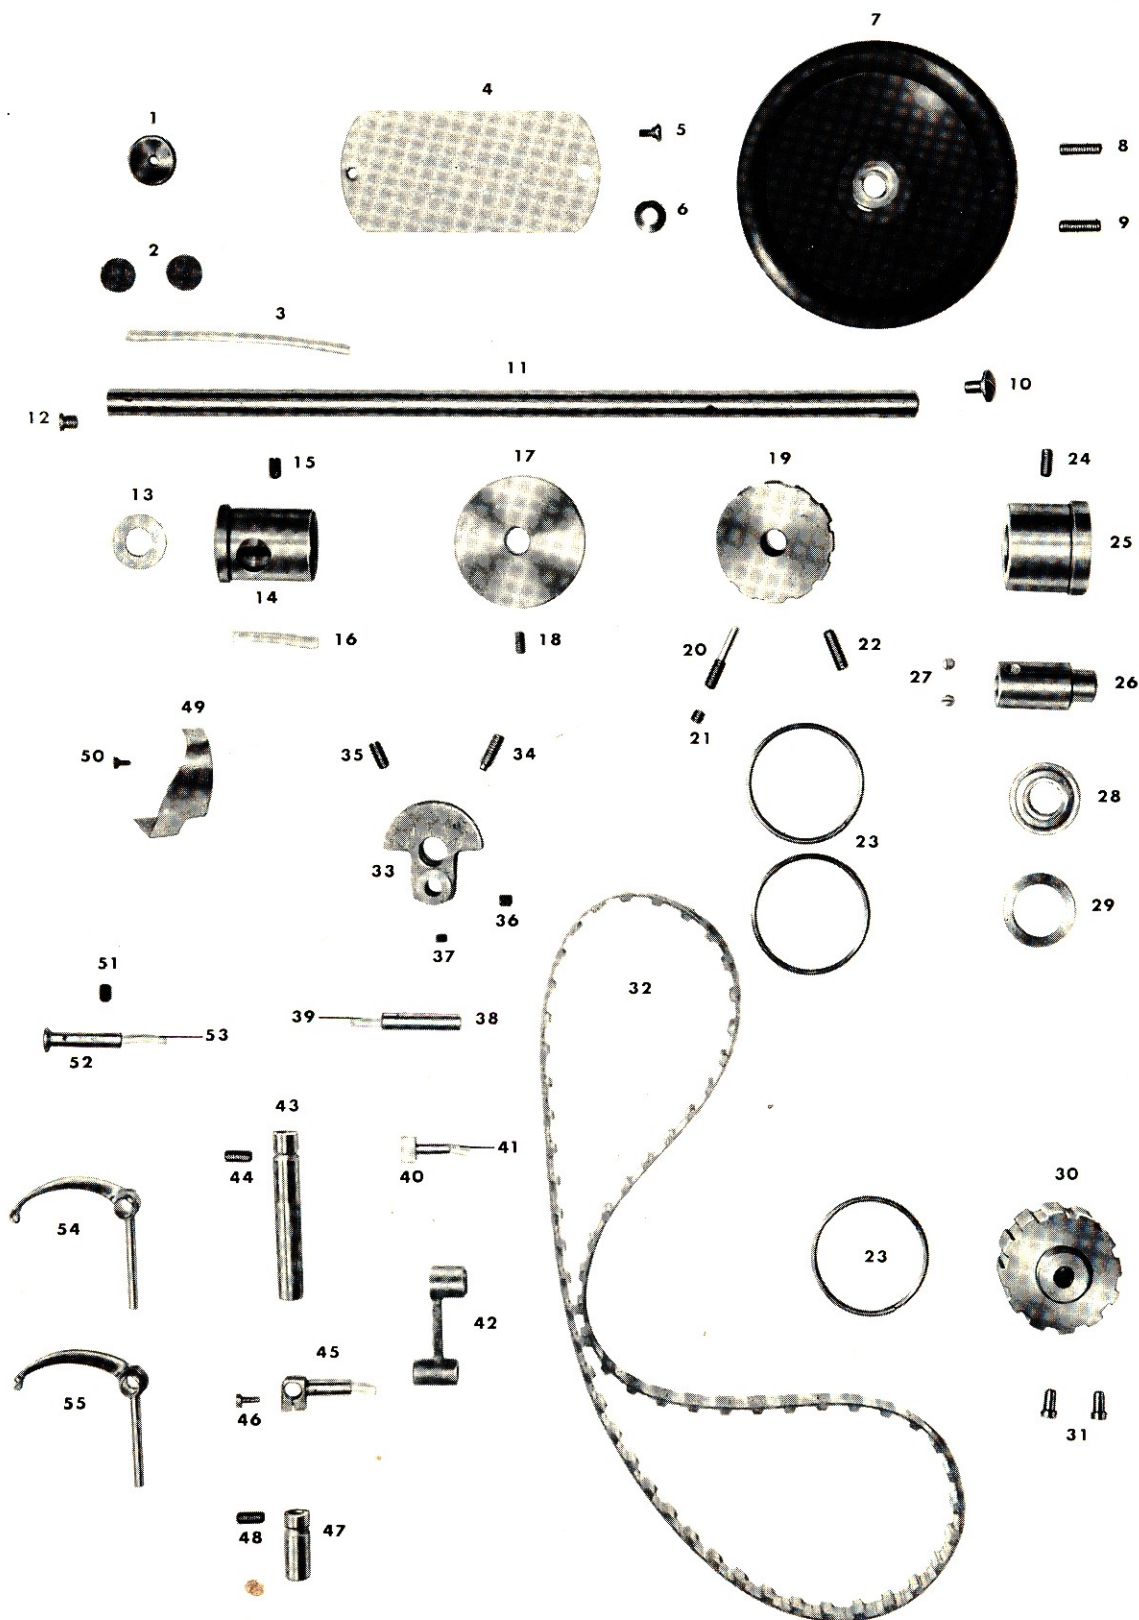





ROLLER PRESSER FOOT, GAUGE PARTS FOR PW-6, PW-26

Fig. No.	Parts No.	Quantity	Name
1	12432	1	Presser bar
2	12440	1	Hinge screw
3	10859	1	Needle bar
4	10534	1	Screw for 10860
5	10535	1	Needle set screw
6	10860	1	Needle bar thread guide
7	12433	1	Roller presser foot bracket
8	10535	2	Screw for 12441
9	12434	1	Roller holder
10	12435	1	Screw for 12434
11	12442	1	Spring for 12433
12	12441	1	Pin for 12432
13	10813	1	Nut for 12437
14	12439	1	Nut for 12438
15	12436	1	Roller
16	12438	24	Bearing ball 3/32"
17	12437	1	Set screw for 12436
18	12022	4	Needle
19	13023	2	Needle plate screw
20	12020	1	Needle plate (1 row)
21	12021	1	Feed dog (1 row)
22	12432	1	Presser bar
23	12440	1	Hinge screw
24	10992	1	Needle bar
25	12066	1	Needle clamp
26	10535	2	Needle set screw
27	12433	1	Roller presser foot bracket
28	12070	1	Roller presser needle guard (big)
29	10561	1	Set screw for 12070
30	12434	1	Roller holder
31	12435	1	Set screw for 12434
32	12068	1	Washer for 12434
33	10535	2	Screw for 12072
34	12442	1	Spring for 12433
35	12072	1	Roller presser needle guard (small)
36	3052	1	Screw for 12071
37	12073	1	Clamp screw washer for 12071
38	12071	1	Roller presser needle guard (small)
39	10813	1	Nut for 12437
40	12439	1	Nut for 12437
41	12436	1	Roller
42	12438	24	Bearing ball 3/32"
43	12437	1	Roller set screw
44	12022	8	Needle
45	13023	2	Needle plate set screw
46	12058	1	Needle plate 1/32" to 3/64"
47	12060	1	Needle plate 1/16"
	12061	1	Needle plate 5/64"
48	12062	1	Needle plate 3/32"
49	12057	1	Feed dog (1/32" to 1/16")
	12064	1	Feed dog (5/64" to 3/32")

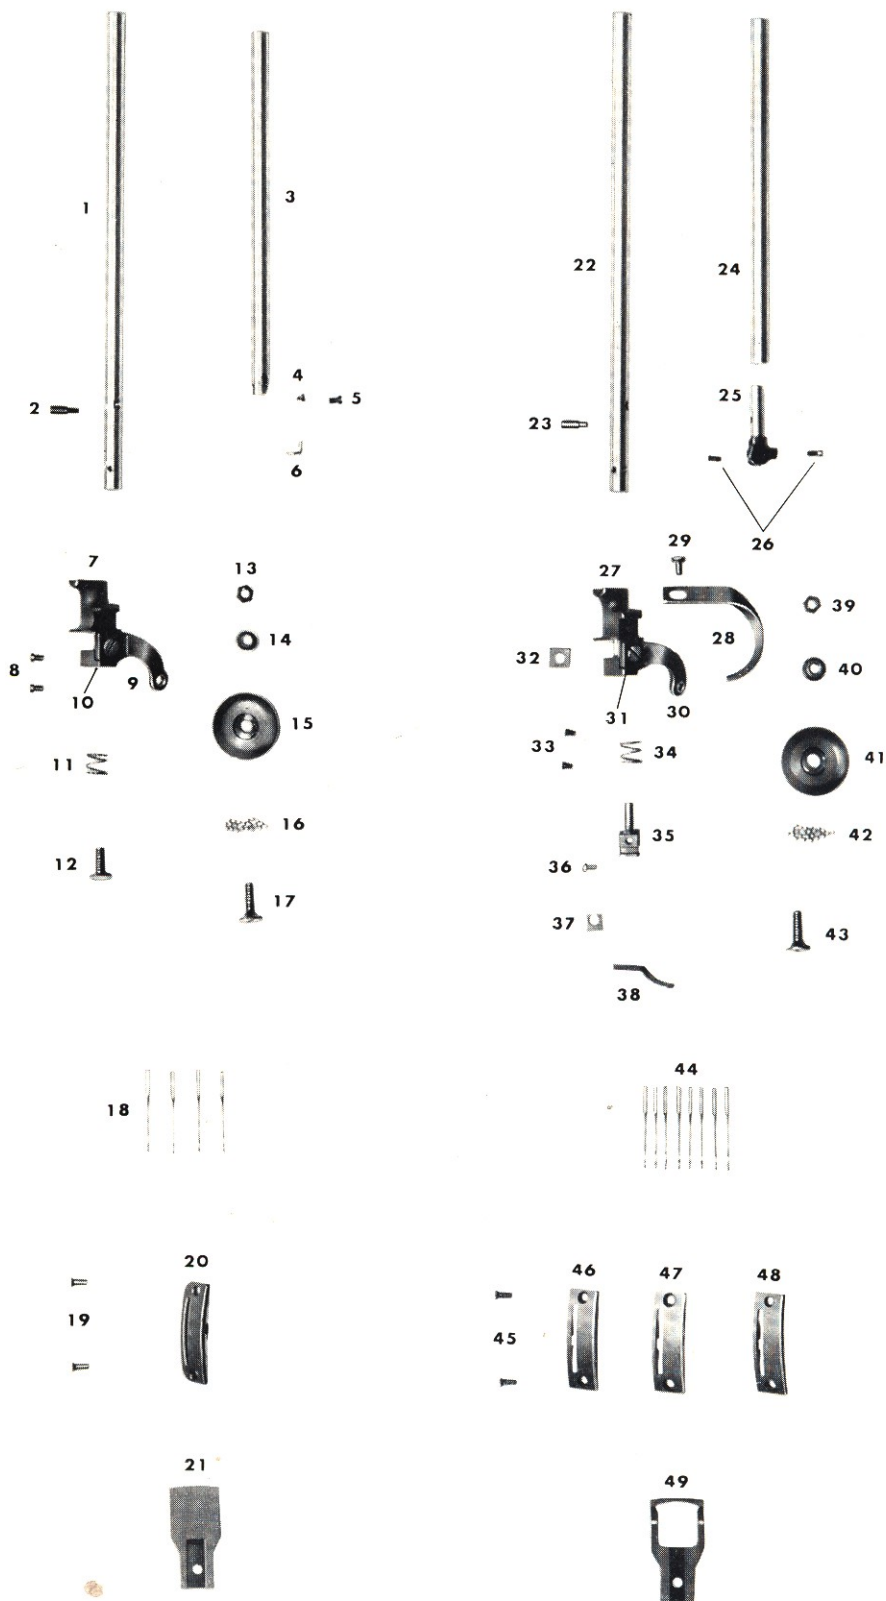

PRESSER FOOT, GAUGE PARTS FOR PW-6, PW-26

Fig. No.	Parts No.	Quantity	Name
1	10540	1	Presser bar
2	10859	1	Needle bar
3	10860	1	Needle bar thread guide
4	10534	1	Needle bar thread guide screw
5	10535	1	Needle set screw
6	12004	1	Presser foot
7	11194	4	Needle
8	12003	1	Needle plate
9	13023	2	Needle plate set screw
10	12006	1	Feed dog
11	10540	1	Presser bar
12	10992	1	Needle bar
13	10535	2	Needle set screw
14	11194		Needle
15	13023	2	Needle plate screw
	10310	1	Presser foot 1/16"
	12066	1	Needle clamp 1/16"
	10350	1	Needle plate 1/16"
	10380	1	Feed dog 1/16"
	10311	1	Presser foot 3/32"
	12066	1	Needle clamp 3/32"
	10351	1	Needle plate 3/32"
	10381	1	Feed dog 3/32"
	10312	1	Presser bar 1/8"
	10102	1	Needle clamp 1/8"
	10352	1	Needle plate 1/8"
	10382	1	Feed dog 1/8"
16	10313	1	Presser foot 3/16"
17	10103	1	Needle clamp 3/16"
18	10353	1	Needle plate 3/16"
19	10383	1	Feed dog 3/16"
	10314	1	Presser foot 7/32"
	10104	1	Needle clamp 7/32"
	10354	1	Needle plate 7/32"
	10384	1	Feed dog 7/32"
20	10315	1	Presser foot 1/4"
21	10105	1	Needle clamp 1/4"
22	10355	1	Needle plate 1/4"
23	10385	1	Feed dog 1/4"
	10316	1	Presser foot 5/16"
	10106	1	Needle clamp 5/16"
	10356	1	Needle plate 5/16"
	10386	1	Feed dog 5/16"
	10317	1	Presser foot 3/8"
	10107	1	Needle clamp 3/8"
	10357	1	Needle plate 3/8"
	10387	1	Feed dog 3/8"
	10318	1	Presser foot 7/16"
	10108	1	Needle clamp 7/16"
	10358	1	Needle plate 7/16"
	10388	1	Feed dog 7/16"
	10319	1	Presser foot 1/2"
	10109	1	Needle clamp 1/2"
	10359	1	Needle plate 1/2"
	10389	1	Feed dog 1/2"

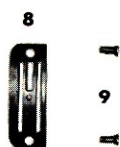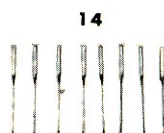


LOWER SHAFT, FEED DRIVING ROCK SHAFT FOR PW-6, PW-26

Fig. No.	Parts No.	Quantity	Name	Fig. No.	Parts No.	Quantity	Name
1	10522	1	Screw for 10588 (two needle machine)				screw
2	11068	2	Liner for 10588	34	10629	2	Set screw for 10631
3	10761	1	Screw for 10588	35	10631	1	Feed driving eccentric friction gib
4	10571	1	Screw for 10588	36	10627	1	Feed driving flange
5	10525	1	Screw for 10588 (One needle machine)	37	10628	1	Feed driving flange set screw (A)
6	10588	1	Feed driving rock shaft bushing	38	10765	1	Feed driving flange set screw (B)
7	10593	2	Feed driving rock shaft stop collar	39	10625	1	Feed driving eccentric adjusting disc spring
8	10764	4	Set screw for 10593	40	10623	1	Feed driving eccentric adjusting disc spring presser collar
9	10763	1	Feed driving rock shaft rear bushing	41	10566	2	Set screw for 10623
10	10587	1	Feed driving rock shaft	42	10671	1	Feed regulating stud (large)
11	10602	1	Feed bar hinge screw	43	10673	1	Feed regulating stud spring
12	10636	1	Feed bar hinge screw nut	44	10674	1	Feed regulating stud spring clip
13	12130	1	Feed bar	45	10822	1	Timing plate
14	10598	1	Feed lifting cam fork screw	46	10597	2	Set screw for 10822
15	10599	1	Feed lifting cam fork washer	47	12134	1	Lower shaft
16	10595	1	Feed lifting cam fork	48	10606	1	Lower shaft bushing (back)
17	10596	1	Felt for 10595	49	10571	1	Set screw for 10606
18	10597	1	Stop screw for 10596	50	10567	1	Lower shaft bearing
19	12011	1	Feed lifting cam	51	10607	1	Lower shaft bearing collar
20	10658	1	Screw for 12011	52	10658	1	Set screw for 10607 (A)
21	12131	1	Feed bar hinge screw	53	10566	1	Set screw for 10607 (B)
22	50103	1	Feed bar hinge screw washer	54	10608	1	Lower shaft ball bearing retaining washer
23	10590	1	Feed bar rock frame rock shaft crank	55	10609	3	Screw for 10608
24	10519	1	Set screw for 10590	56	10729	1	Oiling wick for 12135
25	10635	1	Feed driving connecting hinge screw	57	12135	1	Lower shaft bushing (middle)
26	10636	1	Nut for 10635	58	10522	1	Screw for 12135
27	10633	1	Feed driving connection	59	10638	1	Hook driving gear (spiral)
28	10722	1	Felt for 10633	60	10639	1	Screw for 10638 (A)
29	10723	1	Stopper for 10722	61	10766	1	Screw for 10638 (B)
30	10909	1	Feed driving eccentric adjusting disc	62	11080	1	Felt for 10782
31	10632	1	Feed driving eccentric	63	10782	1	Lower shaft bushing (front)
32	10634	1	Pin for 10632	64	10571	1	Screw for 10782
33	10630	2	Feed driving friction gib set	65	10794	1	Oil cup 3/8"
				66	10959	2	Rubber packing

ACCESSORIES (Knee lifter type)

Fig. No.	Parts No.	Quantity	Name
1	10780	1	Cotton stand (one needle machine)
2	11197	1	Cotton stand (two needle machine)
3	10735	1	Knee lifter
4	6052	3	Nail

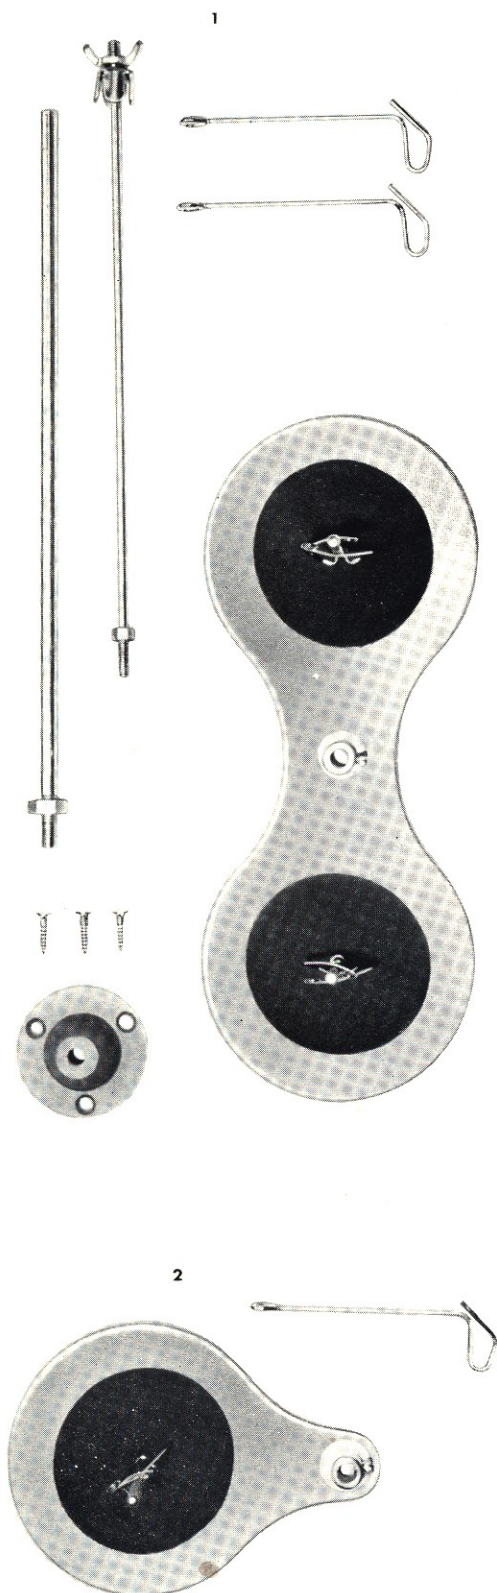

NUMERICAL LIST OF PARTS

Parts No.	Page	Fig. No.	Parts No.	Page	Fig. No.
3036	9	23	10122	5	25
3036	15	26	10123	5	30
3052	29	36	10124	5	
6031	11	23	10125	5	35
6031	13	42	10126	5	40
6052	17	16	10127	5	45
6052	35	4	10128	5	
6055	17	15	10129	5	50
6332	5	11, 20	10282	5	23
6332	23	7, 14	10283	5	29
6339	11	7	10284	5	
6339	13	12	10285	5	34
8007	15	4	10286	5	39
8009	15	7	10287	5	44
8014	9	8	10288	5	
8060	7	17	10289	5	49
8105	9	7	10310	31	
8118	17	7	10311	31	
8120	17	6	10312	31	
8121	17	5	10313	31	16
8123	17	9	10314	31	
8124	17	10	10315	31	20
8125	17	8	10316	31	
8132	17	1	10317	31	
10102	23	17	10318	31	
10102	31		10319	31	
10103	23	21	10320	23	
10103	31	17	10321	23	
10104	23		10322	23	16
10104	31		10323	23	20
10105	23	25	10324	23	
10105	31	21	10325	23	24
10106	23	29	10326	23	28
10106	31		10327	23	32
10107	23	33	10328	23	
10107	31		10329	23	36
10108	23		10332	5	24
10108	31		10333	5	28
10109	23	37	10334	5	
10109	31		10335	5	33

Parts No.	Page	Fig. No.	Parts No.	Page	Fig. No.
10336	5	38	10399	23	39
10337	5	43	10403	15	15
10338	5		10506	1	12
10339	5	48	10506	21	12
10350	31		10506	27	12
10351	31		10507	1	11
10352	31		10507	21	11
10353	31		10507	27	11
10354	31		10514	3	15
10355	31	22	10515	3	14
10356	31		10516	3	16
10357	31		10517	3	17
10358	31		10519	9	6, 21, 37
10359	31		10519	15	33
10360	23		10519	33	24
10361	23		10520	1	44
10364	23		10520	21	44
10366	5	41	10520	27	33
10366	23	30	10521	1	45
10367	5	46	10521	21	45
10367	23	34	10521	27	34
10368	5		10522	1	15, 24, 46
10368	23		10522	21	15, 24, 46
10369	5	51	10522	27	15, 24, 35
10369	23	38	10522	9	10, 75
10380	31		10522	33	1, 58
10381	31		10523	1	49
10382	31		10523	21	49
10383	31	19	10523	27	38
10384	31		10524	1	21, 47
10385	31	23	10524	21	21, 47
10386	31		10524	27	21, 36
10387	31		10525	1	57, 61
10388	31		10525	21	59, 64
10389	31		10525	27	51
10390	23		10525	33	5
10391	23		10526	1	59
10394	5		10526	21	67
10394	23		10526	27	54
10396	5	42	10527	1	56
10396	23	31	10527	21	65
10397	5	47	10527	27	52
10397	23	35	10528	1	53
10398	5		10528	21	53
10398	23		10528	27	42
10399	5	52	10529	1	51

Parts No.	Page	Fig. No.	Parts No.	Page	Fig. No.
10529	21	51	10551	27	49
10529	27	40	10553	3	33
10530	5	4	10554	3	34
10531	5	2	10555	3	35
10532	3	52	10556	3	31
10532	5	3, 17	10557	3	28
10532	21	56	10558	3	29
10532	25	25	10559	3	46
10532	27	46	10559	11	51
10533	5	5	10559	13	30
10534	5	6	10560	1	63
10534	23	4	10560	21	62
10534	29	4	10561	1	64
10534	31	4	10561	7	6
10535	5	7, 19	10561	11	5, 12, 49
10535	23	5, 13	10561	13	10, 17, 45
10535	29	5, 8, 26, 33	10561	21	63
10535	31	5, 13	10561	29	29
10536	5	1	10562	1	14
10537	1	62	10562	21	14
10537	21	60	10562	27	14
10538	3	40	10563	1	13
10538	25	16	10563	21	13
10538	27	47	10563	27	13
10539	3	53	10566	1	27
10539	25	26	10566	3	27
10540	3	37	10566	9	54, 67
10540	23	1, 11	10566	21	27
10540	25	27	10566	27	27
10540	31	1, 11	10566	33	41, 53
10541	3	42	10567	1	28
10541	25	18	10567	9	64
10543	3	38	10567	21	28
10543	25	14	10567	27	28
10544	3	44	10567	33	50
10545	3	45	10568	1	29
10545	7	6, 15	10568	21	29
10545	11	21	10568	27	29
10546	3	50	10569	1	19
10547	3	49	10569	21	19
10548	3	47	10561	27	19
10548	25	22	10570	1	20
10549	3	51	10570	21	20
10549	25	24	10570	27	20
10551	1	54	10571	1	22
10551	21	57	10571	9	16, 63, 81

Parts No.	Page	Fig. No.	Parts No.	Page	Fig. No.
10571	21	22	10602	33	11
10571	27	22, 44, 48	10606	9	62
10571	33	4, 49, 64	10606	33	48
10573	1	18	10607	9	65
10573	21	18	10607	33	51
10573	27	18	10608	9	68
10574	1	23	10608	33	54
10574	21	23	10609	9	69
10574	27	23	10609	33	55
10575	1	9	10611	1	31
10575	21	9	10611	21	31
10575	27	7	10612	1	32
10576	1	7	10612	15	17
10576	21	7	10612	21	32
10576	27	9	10612	27	31
10577	1	10	10613	1	41
10577	21	10	10613	21	41
10577	27	10	10614	1	34
10578	9	4	10614	21	34
10579	1	8	10615	1	33
10579	21	8	10615	21	33
10579	27	8	10616	1	40
10580	9	2	10616	21	40
10581	1	35, 42	10617	1	39
10581	9	3	10617	21	39
10581	21	35, 42	10618	1	36
10582	9	1	10618	21	36
10587	9	19	10619	1	37
10587	33	10	10619	21	37
10588	9	13	10620	1	38
10588	33	6	10620	21	38
10590	9	36	10622	9	70
10590	33	23	10623	9	53
10593	9	14	10623	33	40
10593	33	7	10625	9	52
10595	9	29	10625	33	39
10595	33	16	10627	9	49
10596	9	30	10627	33	36
10596	33	17	10628	9	50
10597	9	31, 60	10628	33	37
10597	33	18, 46	10629	9	47
10598	9	27	10629	33	34
10598	33	14	10630	9	46
10599	9	28	10630	33	33
10599	33	15	10631	9	48
10602	9	24	10631	33	35

Parts No.	Page	Fig. No.	Parts No.	Page	Fig. No.
10632	9	44	10682	3	57
10632	33	31	10682	25	31
10633	9	40	10683	3	58
10633	33	27	10683	25	32
10634	9	45	10685	3	62
10634	33	32	10685	25	36
10635	9	38	10689	7	17
10635	33	25	10690	7	20, 22'
10636	9	25, 39	10691	7	10, 11'
10636	35	12, 26	10692	7	12, 14'
10637	9	32	10693	7	13, 15'
10638	9	76	10694	7	18, 20'
10638	33	59	10695	7	19
10639	9	71, 77	10697	7	14, 16'
10639	33	60	10698	3	2
10650	1	55	10698	25	2
10650	7	21, 23	10699	3	1
10650	11	36, 38	10699	25	1
10650	13	24, 26	10700	3	3
10650	21	58	10700	25	3
10650	27	50	10701	1	1
10656	11	28	10701	21	1
10656	13	6	10701	27	1
10656	17	11	10702	1	4
10658	9	33, 66	10702	21	4
10658	33	20, 52	10702	27	4
10659	25	29	10703	1	6
10660	3	56	10703	3	19
10660	25	30	10703	11	10
10662	3	43	10703	13	15
10662	5	10, 21	10703	21	6
10662	25	19	10703	27	6
10664	3	54	10704	1	5
10664	25	28	10704	21	5
10671	9	55	10704	27	5
10671	33	42	10705	3	13
10672	9	56	10705	25	13
10673	9	57	10706	3	12
10673	33	43	10706	25	12
10674	9	58	10707	3	11
10674	33	44	10707	25	11
10675	7	7	10708	3	32
10678	7	4, 4'	10709	7	1
10679	7	5, 5'	10712	3	4
10680	7	2, 2'	10712	15	10
10681	7	3, 3'	10712	25	4

Parts No.	Page	Fig. No.	Parts No.	Page	Fig. No.
10720	3	48	10764	21	48
10720	25	23	10764	27	37
10722	9	41	10764	33	8
10722	33	28	10765	9	51
10723	9	42	10765	33	38
10723	33	29	10766	9	72, 78
10724	1	3	10766	11	17
10724	21	3	10766	33	61
10724	27	3	10767	11	41
10725	1	2	10767	13	28
10725	21	2	10771	3	26
10725	27	2	10772	3	24
10726	1	50, 58	10773	3	25
10726	21	50, 55, 66	10774	3	22
10726	27	39, 53	10775	3	18
10728	1	52	10776	3	23
10728	3	30, 36	10780	19	1
10728	21	52	10780	35	1
10728	27	41	10782	9	80
10729	1	16	10782	33	63
10729	9	73	10789	7	8, 8'
10729	21	16	10791	7	9, 9'
10729	27	16	10792	7	16
10729	33	56	10793	7	11
10733	17	14	10794	9	82
10734	17	13	10794	33	65
10735	35	3	10795	5	9
10747	17	3	10796	5	8
10748	17	2	10802	15	6
10751	3	20	10803	15	1
10754	3	21	10806	15	2
10755	15	25	10811	15	16
10757	9	20	10812	15	5, 19
10758	9	22	10813	15	18
10759	3	61	10813	29	13, 39
10759	25	35	10818	15	30
10760	3	60	10819	15	27
10760	25	34	10820	15	32
10761	3	39, 41	10821	15	34
10761	9	12	10822	9	59
10761	25	15, 17	10822	33	45
10761	33	3	10827	15	14, 22
10763	9	18	10828	15	13, 21, 35
10763	33	9	10829	15	31
10764	1	48	10837	15	24
10764	9	15	10838	15	20

Parts No.	Page	Fig. No.	Parts No.	Page	Fig. No.
10839	15	23	11068	33	2
10840	15	29	11080	9	79
10842	15	3	11080	33	62
10843	15	12	11134	11	40
10844	15	9	11134	13	27
10845	15	8	11160	3	59
10855	21	61	11160	25	33
10856	21	54	11169	17	19
10856	27	45	11170	17	18
10857	25	21	11171	17	17
10858	25	20	11194	31	7, 14
10859	23	2	11196	17	4
10859	29	3	11197	19	2
10859	31	2	11197	35	2
10860	23	3	12003	31	8
10860	29	6	12004	31	6
10860	31	3	12005	27	43
10902	5	15	12006	31	10
10903	5	18	12011	33	19
10904	5	16	12020	29	20
10905	1	60	12021	29	21
10905	21	68	12022	29	18, 44
10905	27	55	12032	11	30
10908	1	17	12032	13	7
10908	21	17	12051	13	32
10908	27	17	12052	13	33
10909	9	43	12053	13	34
10909	15	28	12054	13	35
10909	33	30	12055	13	29
10941	1	30	12056	11	6
10941	21	30	12056	13	11
10941	27	30	12057	29	49
10942	7	1'	12058	29	46
10951	7	18'	12060	29	47
10952	7	13'	12061	29	
10953	7	19'	12062	29	48
10954	7	21'	12064	29	
10956	7	7'	12066	23	
10957	7	12'	12066	29	25
10958	7	10'	12066	31	
10959	9	83	12068	29	32
10959	33	66	12070	29	28
10992	23	12	12071	29	38
10992	29	24	12072	29	35
10992	31	12	12073	29	37
11068	9	11	12104	11	4, 31

Parts No.	Page	Fig. No.	Parts No.	Page	Fig. No.
12104	13	4, 8	12131	9	34
12105	11	29	12131	33	21
12105	13	9	12132	11	22
12106	11	39	12132	13	41
12106	13	20	12133	1	43
12107	11	32	12133	21	43
12107	13	5	12133	27	32
12108	11	42	12134	9	61
12108	13	31	12134	33	47
12109	11	3	12135	9	74
12109	13	3	12135	33	57
12110	11	25, 47	12136	11	24, 26, 46
12110	13	38	12136	13	37, 39
12111	11	43	12137	11	13
12112	11	44	12137	13	19
12113	11	45	12138	11	48
12113	13	36	12138	13	44
12114	11	33	12139	11	37
12114	13	21	12139	13	25
12115	11	34	12140	11	50
12115	13	22	12140	13	43
12116	11	35	12143	9	9
12116	13	23	12144	9	5
12117	5	12	12149	3	10
12117	23	8	12149	25	10
12119	11	15	12211	5	26
12120	11	27	12211	23	18
12120	13	40	12213	5	31
12121	11	18	12213	23	22
12122	11	19	12216	5	36
12123	11	20	12216	23	26
12124	11	1	12221	5	27
12124	13	1	12221	23	19
12125	11	2	12223	5	32
12125	13	2	12223	23	23
12125	17	12	12226	5	37
12126	5	14	12226	23	27
12126	23	10	12281	15	11
12127	11	14	12364	5	
12127	13	18	12432	29	1, 22
12128	11	8	12433	29	7, 27
12128	13	13	12434	29	9, 30
12129	11	9	12435	29	10, 31
12129	13	14	12436	29	15, 41
12130	9	26	12437	29	17, 43
12130	33	13	12438	29	16, 42

Parts No.	Page	Fig. No.
12439	29	14, 40
12440	29	2, 23
12441	29	12
12442	29	11, 34
13023	5	13, 22
13023	23	9, 15
13023	29	19, 45
13023	31	9, 15
13055	3	55
13056	3	5
13056	25	5
13057	3	8
13057	25	8
13058	3	6
13058	25	6
13059	3	9

Parts No.	Page	Fig. No.
13059	25	9
13074	1	25
13074	21	25
13074	27	25
13075	1	26
13075	21	26
13075	27	26
13076	11	11
13076	13	16
13084	3	7
13084	25	7
13094	19	3
13105	23	6
50103	9	35
50103	33	22