



BEST QUALITY

Union Special[®]

LEWIS[®] • COLUMBIA[®]

INDUSTRIAL
SEWING
MACHINES

Cadast radu
conf. 13/82



STYLES

57700L

57700N

(K)

ESCANIADO

CLASS 57700

ADVANCED HIGH SPEED
FIFTY THOUSAND SERIES
FLAT BED MACHINES

UNION SPECIAL CORPORATION

CHICAGO



- ORIGINAL

18 folhas

Catalog No. 131 M

INSTRUCTIONS
FOR
ADJUSTING AND OPERATING
LIST OF PARTS

For Styles

57700 L

57700 N

Second Edition

Copyright 1967
by
Union Special Corporation
Rights Reserved in All Countries

UNION SPECIAL CORPORATION
INDUSTRIAL SEWING MACHINES
CHICAGO

Printed in U.S.A.

September, 1978

NEEDLES (Continued)

The type numbers of the needles recommended for each style of machine covered by this catalog are given in the machine style description. Other needles are available, but the ones indicated are those recommended to produce the most satisfactory results. The type numbers of the recommended needles together with their descriptions, and the sizes available are listed below:

<u>Type No.</u>	<u>Description and Sizes</u>
121 GBS	Round shank, round point, short, single groove, struck groove, spotted, ball point, chromium plated-sizes 065/025, 070/027, 075/029, 080/032, 090/036, 100/040.
128 GAS	Round shank, round point, short, double groove, struck groove, balleye, spotted, chromium plated-sizes 080/032, 090/036, 100/040, 110/044, 125/049, 140/054, 150/060, 170/067.

Selection of proper needle size is determined by size of thread used. Thread should pass freely through needle eye in order to produce a good stitch formation.

Success in the operation of Union Special machines can be secured only by use of needles packaged under our brand name, *Union Special®* which is backed by a reputation for producing highest quality needles in materials and workmanship for more than three-quarters of a century.

IDENTIFICATION OF MACHINES

Each UNION SPECIAL machine is identified by a Style number on a name plate on the machine. Style numbers are classified as standard and special. Standard Style numbers have one or more letters suffixed, but never contain the letter "Z". Example: "Style 57700 L". Special Style numbers contain the letter "Z". When only minor changes are made in a standard machine, a "Z" is suffixed to the Standard Style number. Example: "Style 57700 LZ".

Styles of machines similar in construction are grouped under a Class number which differs from the Style number, in that it contains no letters. Example: "Class 57700".

APPLICATION OF CATALOG

This catalog applies specifically to the Standard Styles of machines as listed herein. It can also be applied with discretion to some Special Styles of machines in this Class. Reference to direction, such as right, left, front, back, etc., are given from the operator's position while seated at the machine. Operating direction of handwheel is toward the operator.

STYLES OF MACHINES IN CLASS 57700

Advanced High Speed, Two Needle, One Looper, Plain Feed Flat Bed Machines, Medium Throw, Needle Bearing Needle Bar Drive, Light Weight Presser Bar and Needle Bar Driving Mechanism, Single Reservoir Enclosed Positive Automatic Lubricating System, Filtered Oil Return Pumps for Head and Base, Needle Bearings and Bronze Bearings for Feed Bar and Feed Rocker Shafts, Greased and Sealed. Lateral Looper Travel, Single Disc Take-up, Larger Handwheel and Improved Belt Guard. Prepared for use with Knee Press for Presser Foot Lifter, Equipped with Disc Thread Tensions, Maximum Work Space to Right of Needle Bar 8 1/4 Inches.

57700 L For hemming sides and bottoms of bathrobes, and for similar operations on medium to medium heavy weight woven fabrics. Standard gauges Nos. 12 and 16. Seam specification 406-EFa-1 inverted. Type 128 GAS needle. Maximum recommended speed 6000 R. P. M.

57700 N For attaching elastic bands in long lengths, garment lengths, or with ends joined, to rayon, silk, cotton, nylon and wool, flat, warp, and ribbed knit garments, and for similar operations on light to medium weight material. Automatic stretching device and spool holder for elastic. Standard gauges Nos. 8, 12 and 16. Seam specification 406-LSb-1 inverted. Type 121 GBS needle. Maximum recommended speed 6000 R. P. M.


NEEDLES

Each UNION SPECIAL needle has both a type and a size number. The type number denotes the kind of shank, point, length, groove, finish and other details. The size number, stamped on the needle shank, denotes largest diameter of blade, measured in thousandths of an inch, midway between shank and eye. Collectively, type and size number represent the complete symbol, which is given on the label of all needles packaged and sold by Union Special Corporation.

To have needle orders promptly and accurately filled, an empty package, a sample needle, or the type and size number should be forwarded. Use description on label. A complete order would read: "1000 needles, Type 121 GBS, Size 080/032".

THREADING AND OILING DIAGRAM

NOTE:
RIGHT HAND NEEDLE THREAD IS
THREADED CLOSEST TO CASTING

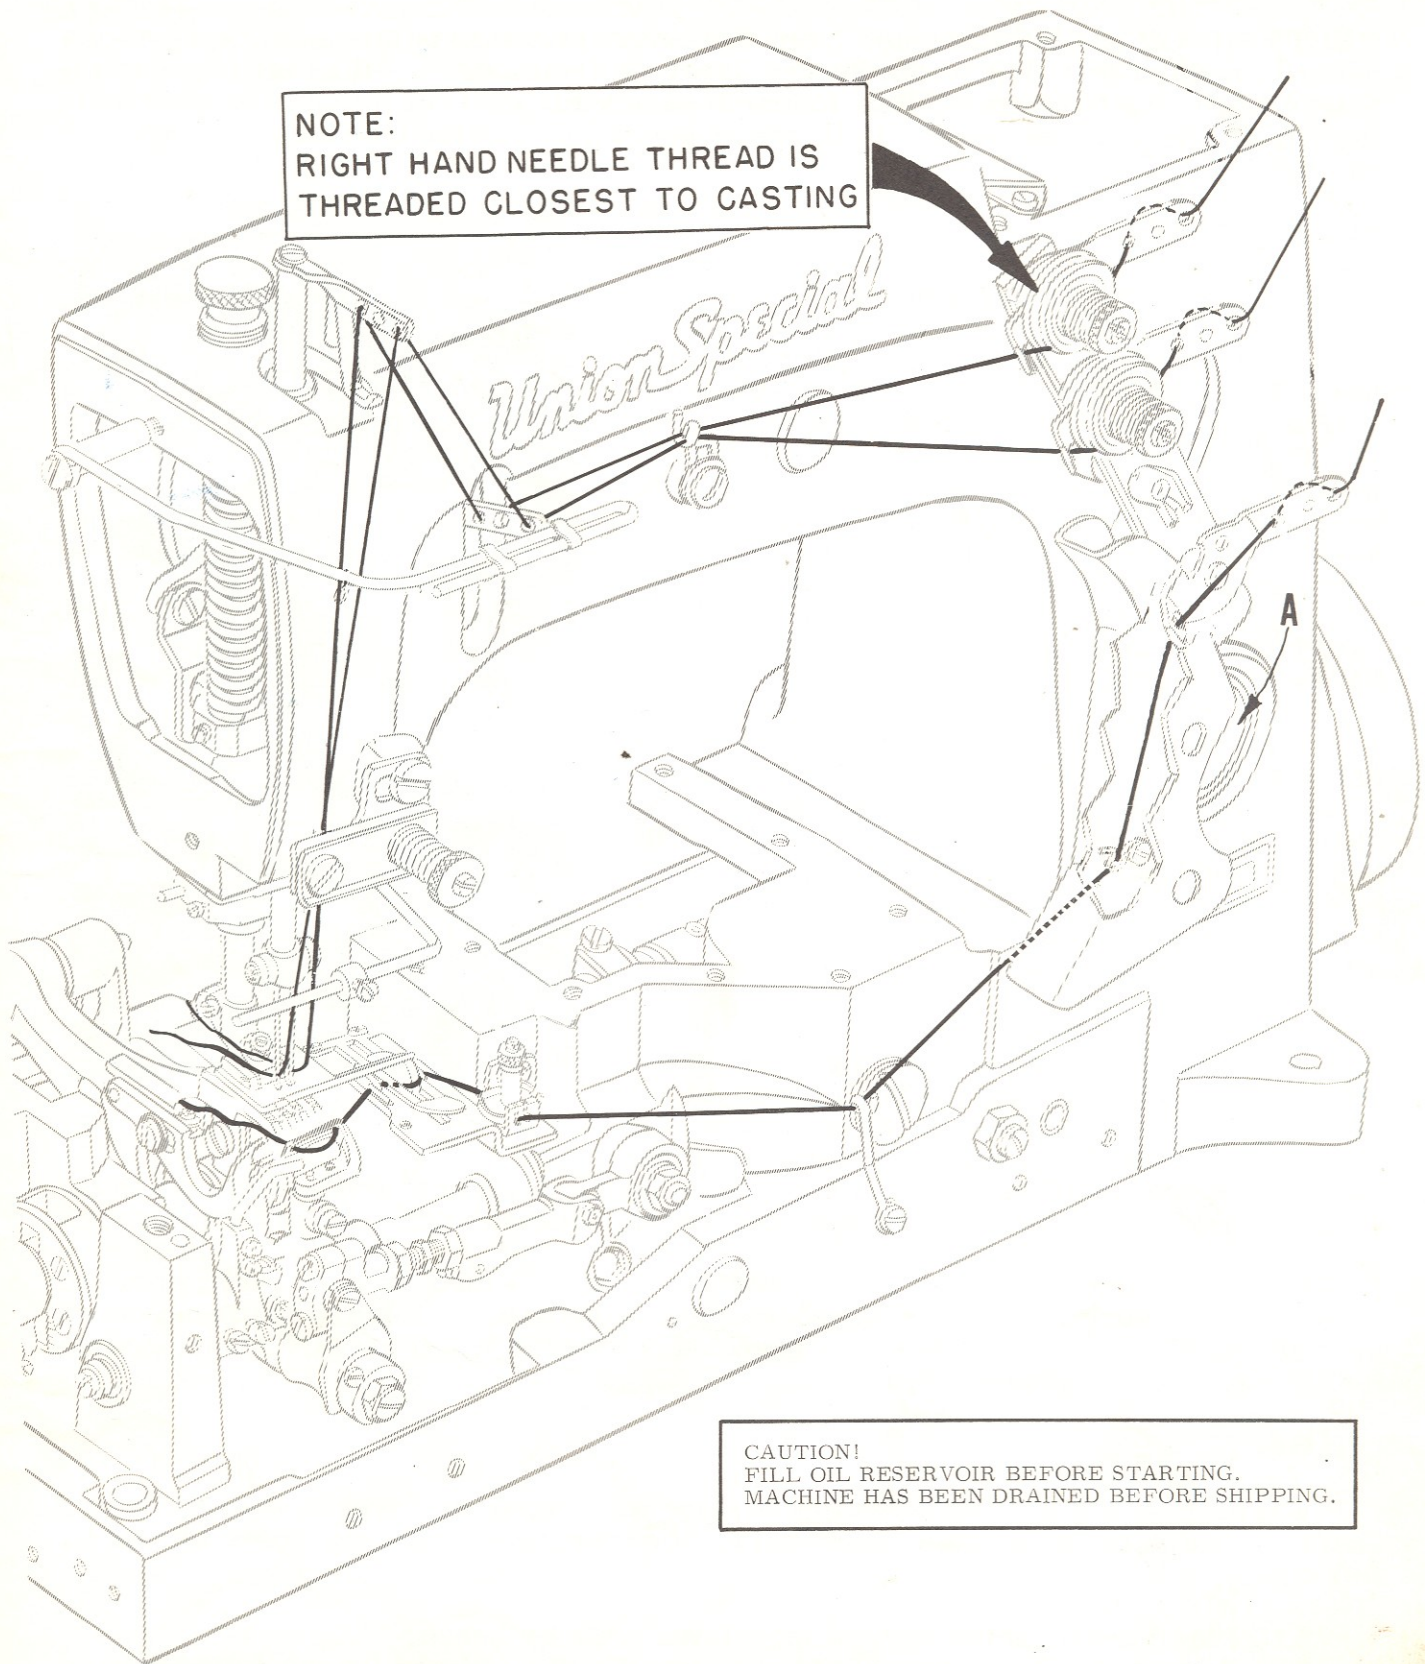

CAUTION!
FILL OIL RESERVOIR BEFORE STARTING.
MACHINE HAS BEEN DRAINED BEFORE SHIPPING.

Fig. 1

INSTRUCTIONS FOR MECHANICS

LUBRICATION

CAUTION! Oil has been drained from the main reservoir before shipment, so the reservoir must be filled to the proper level as indicated on oil gauge (A, Fig. 1) before beginning to operate. Run machine slowly for several minutes to distribute the oil to the various parts. Full speed operation can then be expected without damage.

RECOMMENDED OIL

Use a straight mineral oil of a Saybolt viscosity of 90 to 125 seconds at 100° Fahrenheit in the main reservoir. This is equivalent to Union Special specification No. 175. Fill main reservoir at plug screw in upper crank chamber cover (A, Fig. 2) and check oil level at gauge (B). Oil is at maximum level when needle is in yellow band marked "Full". Oil should be added when needle is in yellow band marked "Low". Recommended grease No. 28604 P (See Page 10).

CAUTION! It is important that these machines not be over filled.

It is recommended that a new machine, or one that has been out of service for an extended period be lubricated as follows: Remove the head cover, clean out lint and directly oil the needle bar link and the needle bar. Replace head cover as no further hand oiling will be required. Run machine slowly for several minutes to distribute oil to the various parts.

For machines in operation check the oil for dirt and lint deposits at reasonable intervals. If dirty, change the oil. An oil change is recommended every 2000 operating hours. Oil may be drained from main reservoir by removing plug screw (C, Fig. 2) located below the cloth plate at front of the machine, or by removing the lower crank chamber cover, located at the back of machine.

NOTE: Looper avoid and feed lift eccentrics receive oil thru the mainshaft, so when assembling be sure oil holes in the eccentric line up with oil holes in mainshaft when spot screw is in time spot. See paragraph on "Changing Stitch Length" for repacking feed rocker sealed greased bearings.

OIL GAUGE

The oil gauge is set at the factory to show the proper oil level in the reservoir. Should an adjustment become necessary, however, the following steps should be followed:

1. Place the machine upright on a level table or bench.
2. Remove the oil reservoir plug screw (C, Fig. 2) and tip machine forward to drain oil from the reservoir.
3. Make sure all oil is drained from main reservoir.

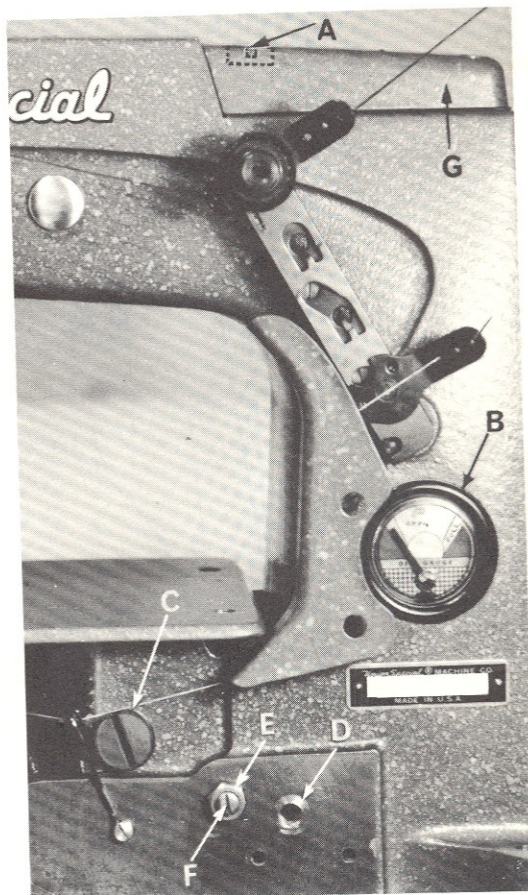


Fig. 2

OIL GAUGE (Continued)

4. Remove lower crank chamber cover, located at the back of the machine.
5. Fill main reservoir to a level even with the bottom contour of the knee press shaft bushing (D, Fig. 2).
6. Loosen lock nut (E) on calibrating screw (F), and turn the screw to the left or right until the gauge needle rests in the middle of the yellow band marked "LOW".
7. Tighten lock nut (E) and replace plug screw (C).
8. Add oil so that gauge needle rests in the middle of the yellow band marked "FULL".

NEEDLE LEVER BEARING OILER

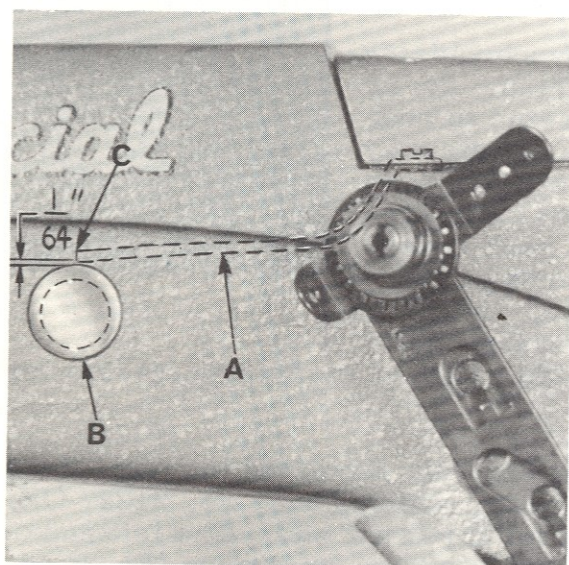


Fig. 3

Remove the head cover and upper crank chamber cover (G, Fig. 2). Check position of needle lever bearings oiler (A, Fig. 3) located inside the arm casting, below the upper crank chamber cover, which lubricates the needle lever stud (B). Make sure it is tilted downwardly and that its delivery end (C) contacts the inside wall of the bed casting at the back, just above the notch of the needle lever shaft stop collar. (Do not allow the oiler to rest on the needle lever.) Allow 1/64 inch clearance as in Figure 3.

ALIGNING THE NEEDLE BAR

Align the needle bar (A, Fig. 4) and set to height, using the proper test pins and test plate of the right gauge. See chart below:

Machine Style	Test Plate No.	Right Test Pin No.	Left Test Pin No.
57700 L-12	698 AV-12	699 R-12	699 L
57700 L-16	698 AV-16	699 D	699 L
57700 N-8	698 BB-8	699 R-8	699 L
57700 N-12	698 BB-12	699 R-12	699 L
57700 N-16	698 BB-16	699 D	699 L

Insert test pin No. 699 L in the left seat of the needle holder and the proper right hand test pin (see chart) should be inserted in the right needle seat. Now assemble test plate to machine using the throat plate attaching screws. The needle bar is located properly if the test pins align with the holes in the test plate and the height of the needle bar is correct when the shoulder of the test pins rest on the test plate, when the needle is at its lowest position.

If test plate and test pins are not available, insert a new set of needles (Type and Size as required) and align the needle bar so that the needles correspond with the vertical face of the needle guard. To turn needle bar, loosen needle bar clamp screw (B, Fig. 4) and turn bar as required. Tighten clamp screw.

SYNCHRONIZING LOOPER AND NEEDLE MOTIONS

Insert the looper in the looper rocker and turn handwheel in operating direction until the point of the looper (A, Fig. 5), moving to the left is even with the left side of right needle (B). Note the height of the eye of the needle with respect to the looper point, then turn handwheel in the reverse direction until the looper point again moves to the left, and is even with the left side of the right needle. If the motions synchronize, the height of the eye of the needle with respect to the looper point will be the same. A variation of .005 inch is allowable. If the distance from the eye of the needle to the point of the looper is greatest when the pulley is turned in the operating direction, move the looper drive shaft synchronizing stud (C) to the rear. Moving it in the opposite direction acts the reverse.

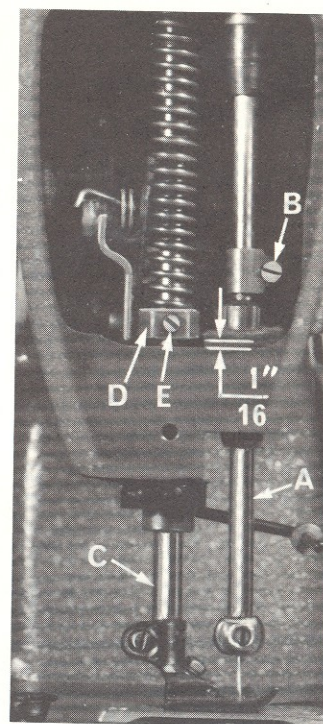


Fig. 4

Moving of the looper drive lever shaft synchronizing stud is accomplished as follows: Loosen the clamp screw (D, Fig. 5) of the looper drive lever. To move stud to rear (away from operator), a light tap with a small hammer, directly on the stud, is all that is required. To move stud forward (toward operator), remove the cloth plate, throat plate support, oil reservoir top cover and oil reservoir back cover, then, a light tap on the looper drive lever rocker shaft, toward the operator, is all that is required. Then, using the looper drive lever to take up the end play between the looper drive lever rocker shaft and its synchronizing stud, tighten the looper drive lever on the shaft, using screw (D, Fig. 5).

With the looper at the extreme right end of its travel, check the location of the center line of the right looper connecting rod bearing, using gauge No. 21227 CX. Remove nut (E, Fig. 5) and place hole in gauge over threaded stud. The left end of the gauge should locate against the right side of the looper rocker cone (F). If adjustment is necessary, loosen the clamp screw (D) and reposition the looper drive lever (G) as required. Tighten clamp screw. If gauge is not available setting can be checked with a scale. The distance between the center line of the looper rocker cone and the center line of the looper lever stud should be $4 \frac{1}{16}$ inch (Fig. 6).

SETTING THE LOOPER

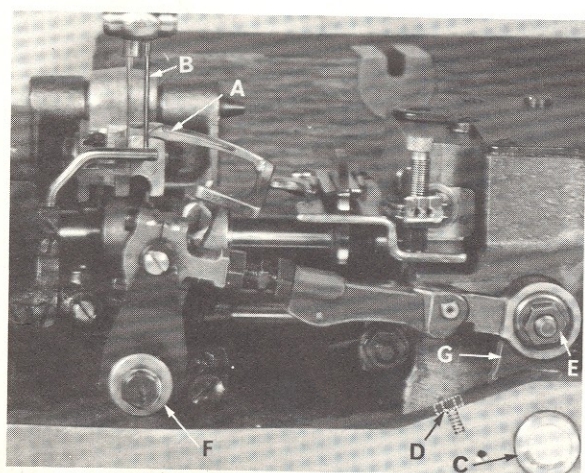


Fig. 5

Insert a new needle in the right needle seat, type and size as specified. If the looper gauge is $\frac{1}{4}$ inch, for example, set the looper (A, Fig. 6) so the distance from the center of the right needle (B) to the point of the looper is $\frac{1}{4}$ inch, when the looper is at its farthest position to the right. Looper gauge No. 21225- $\frac{1}{4}$ (C) can be used advantageously in making this adjustment. Refer to chart on the following page for needle Type, looper gauge setting and looper gauge number for the various styles of machines. If adjustment is required, loosen nut (D) (it has a left hand thread) and nut (E) on connecting rod (F), turn the connecting rod forward or backward to obtain the $\frac{1}{4}$ inch dimension. Retighten both nuts, first nut (E). Then nut (D).

Make sure the left ball joint is in vertical position and does not bind after adjustment.

SETTING THE LOOPER (Continued)

Machine Styles	Needle Type	Looper Gauge Setting	Looper Gauge Number
57700 L-12	128 GAS	7/32"	21225-7/32
57700 L-16	128 GAS	3/16"	21225-3/16
57700 N-8	121 GBS	1/4 "	21225-1/4
57700 N-12	121 GBS	7/32"	21225-7/32
57700 N-16	121 GBS	3/16"	21225-3/16

The looper is set correctly in line-of-feed, if, as it moves to the left, behind the needle, its point (A, Fig. 7) brushes, but does not pick at the rear of the needle (B).

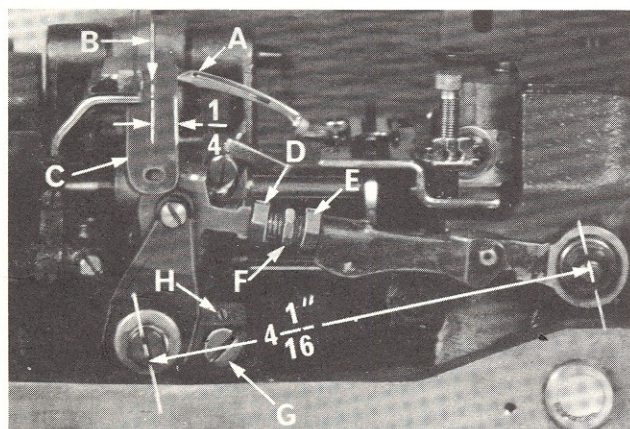


Fig. 6

with the looper point flush with the left side of the left needle. If adjustment is necessary, loosen screw (B, Fig. 4) and move needle bar (A) up or down as required and retighten screw. Care should be taken not to disturb the alignment of the needle bar when moving the needle bar either up or down.

NOTE: The height should be right if test plate and test pins were used to align needle bar.

All Needles are to have equal clearance on the right and left sides of needle slots in throat plate. The descending needles must be deflected alike on the back of the looper.

SETTING THE FEED DOG

Set the feed dog (A, Fig. 8) in the throat plate (B) so there is equal clearance on all sides. See that the tips of the teeth extend the depth of a tooth or approximately 3/64 inch above the throat plate and are parallel with the throat plate at high point of travel. Adjust the supporting screw (C), under the feed dog, to maintain this setting. Screw (D) is used to hold feed dog in position.

If feed dog teeth are not parallel with the throat plate, loosen nut (A, Fig. 9) and turn screw (B) clockwise to lower the front teeth, and counterclockwise to raise the front teeth. Retighten nut when feed dog is set properly.

CAUTION: See that there is sufficient space between underside of feed dog and top of looper.

If adjustment is necessary, loosen lock screw (G, Fig. 6) and turn stop screw (H) as required. Turning stop screw clockwise sets the looper to the rear and turning it counterclockwise acts the reverse. Holding looper to the front while making this adjustment may prove helpful. Tighten lock screw when setting is obtained and recheck the adjustment. Now insert another needle in the left needle seat.

SETTING HEIGHT OF NEEDLE BAR

The height of the needle (B, Fig. 7) is correct when the top of its eye is 3/64 inch below the underside of the looper,

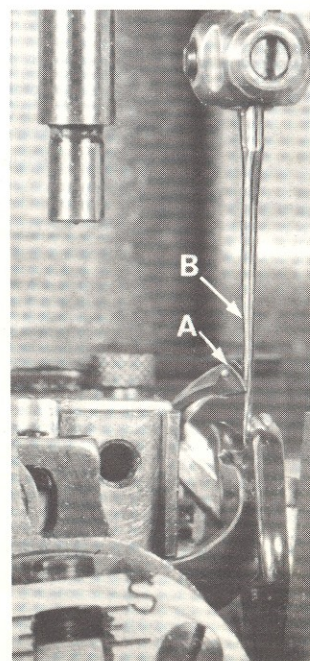


Fig. 7

SETTING THE FEED DOG (Continued)

Should it be necessary to move the feed dog to the left or right, loosen screws (A, Fig. 10) which hold the feed rocker (B) onto the feed rocker shaft (C), and move feed rocker to desired position and retighten screws. Make sure the feed rocker arm (D) does not bind after making this adjustment.

When the handwheel is turned in the operating direction the feed dog should have equal clearance on both ends of the throat plate slots with feed travel set to desired stitch length.

Should it be necessary to move the feed dog forward or backward, loosen nut (E, Fig. 10) which clamps the feed rocker arm to the feed rocker and move the feed rocker forward or backward as needed and retighten nut.

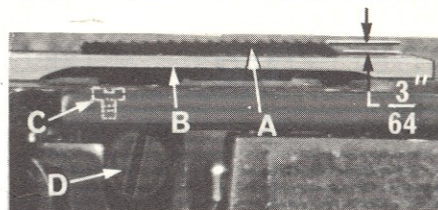


Fig. 8

CHANGING STITCH LENGTH

Set the stitch to required length. This is accomplished by loosening the locknut (F, Fig. 10) 1/2 turn (it has a left hand thread) on the end of the stitch regulating stud and turning the stitch adjusting screw (G) located under the left end of the cloth plate, in the head of the main shaft (H), which is marked with 'L' and 'S'. Turning the screw clockwise shortens the stitch (moves stitch regulating stud toward the 'S') and turning it in a counterclockwise direction lengthens the stitch (moves stitch regulating stud toward the 'L'). Retighten the locknut securely. To prevent destructive damage to the feed drive bearing, the Key screw (J) must engage the 'U' shaped key slot in the ferrule (K).

NOTE: Any change in stitch length will necessitate a corresponding change in the rear needle guard setting.

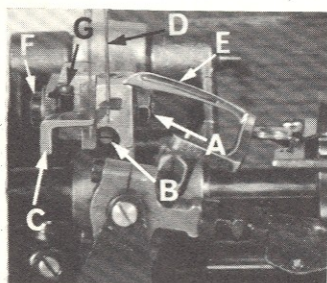


Fig. 9

The feed rocker assembly may require lubrication or repair after years of operation. This can be accomplished as follows: Loosen nuts (E, F, Fig. 10) and remove nut (F). Remove feed rocker arm (D) from machine by rocking slightly. Loosen screws (A) and remove stop collar on right end of shaft (C). The shaft can now be withdrawn. Loosen Allen screw (L) and remove shaft (M). Now, repack bearings.

When packing bearings the parts must be clean and grease should be applied directly from the tube to avoid contamination. Tube of grease can be supplied under the part number 28604 P. Greased bearings are located at (N, P, Fig. 10). If grease sealed bearings are replaced they should be pressed in flush with the casting. To assemble, reverse the procedure described in the previous paragraph. Start tapered end of shafts first, twisting slightly when entering the grease seals to prevent damage. Check for proper adjustment of feed dog as described under 'Setting the Feed Dog'. Also check to see that there is no binding at any point.

SETTING THE REAR NEEDLE GUARD

Set the rear needle guard (C, Fig. 9) horizontally so that it does not quite contact the rear of the right needle (D) when at its most forward point of travel. A clearance of .005 inch is permissible. It should be set as low as possible, yet have its vertical face approach within about 3/64 inch of the needle, until the point of the looper (E), moving to the left, is even with the needle. To move needle guard forward or backward, merely loosen screw (F), move needle guard as required, and retighten screw. To raise or lower needle guard, loosen screw (F), and turn screw (G) clockwise to lower needle guard and counterclockwise to raise it. Retighten screw (F) after guard is properly set.

NOTE: A change in stitch length will require a change in rear needle guard setting.

SETTING FRONT NEEDLE GUARD

Set the front needle guard so that it pushes the left needle back toward the path of the looper as it moves behind the needle. The looper may brush but not pick at the left needle. It should be set as low as possible, yet have its vertical face push the left needle until the point of the looper is just past the left side of the left needle. The front needle guard should not contact the rear needle guard or right needle at any time. To move guard forward or backward, merely loosen screws (A, Fig. 11), move needle guard as required and retighten screws. To raise, lower or rotate needle guard, loosen screws (B), move guard and retighten screws after guard is properly set.

NOTE: A change in stitch length will NOT require a change in front needle guard setting.

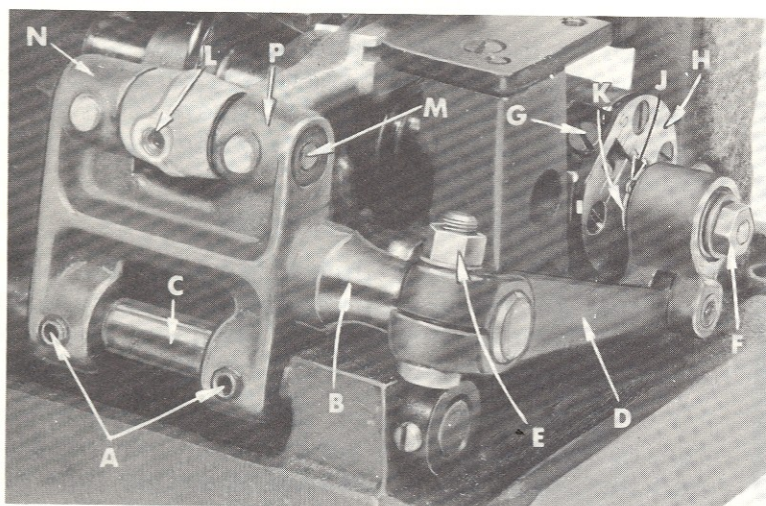


Fig. 10

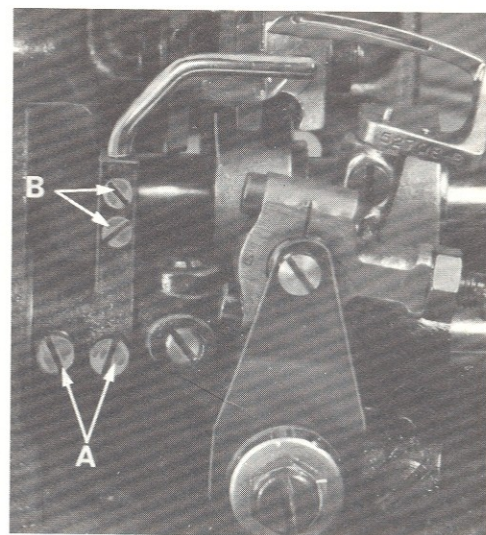


Fig. 11

THREAD TENSION RELEASE

The thread tension release is set correctly when it begins to function as the presser foot is raised to within $1/8$ inch of the end of its travel and is entirely released when the presser foot has reached its highest position.

If adjustment is needed, loosen tension release lever screw (A, Fig. 12), located at the back of the machine and move tension disc separator as required. Retighten screw. After adjustment there should be no binding at any point.

SETTING HEIGHT OF PRESSER BAR

The height of the presser bar (C, Fig. 4) is set correctly if it is possible to remove the presser foot when the foot lifter lever (B, Fig. 12) is fully depressed. Also there should be approximately $1/16$ inch clearance between lower surface of the presser bar connection and guide (D, Fig. 4) and the bottom surface of head opening in the bed when the foot lifter lever is released and the presser foot resting on the throat plate, with the feed dog down below the throat plate.

If adjustment is needed, turn handwheel in operating direction until the needle bar is in the low position. Loosen screw (E). Then, while holding presser foot down on the throat plate surface, pry up presser bar connection and guide with a screw-

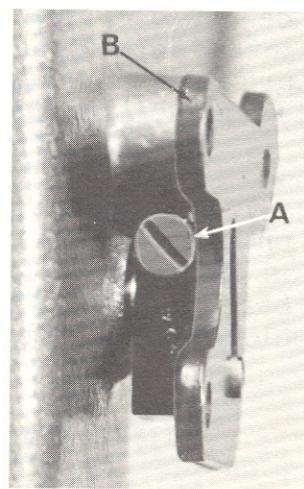


Fig. 12

SETTING HEIGHT OF PRESSER BAR (Continued)

driver to obtain the $\frac{1}{16}$ inch setting and tighten screw. Check setting by turning handwheel so that needle bar is in its high position and see if presser foot can be removed as mentioned in previous paragraph.

SETTING NEEDLE THREAD TAKE-UP WIRE AND FRAME EYELET

Set the needle thread take-up wire (A, Fig. 13), located adjacent to the needle bar thread eyelet (B), so that its upper surface is even with the top of the holes in the needle bar thread eyelet when the needle bar has completed its downward stroke. Lower this setting for a smaller needle thread loop, and raise it for a larger loop. Set the needle thread frame eyelet (C) so that the eyelet hole is $\frac{3}{4}$ inch above the attaching screw (Fig. 13).

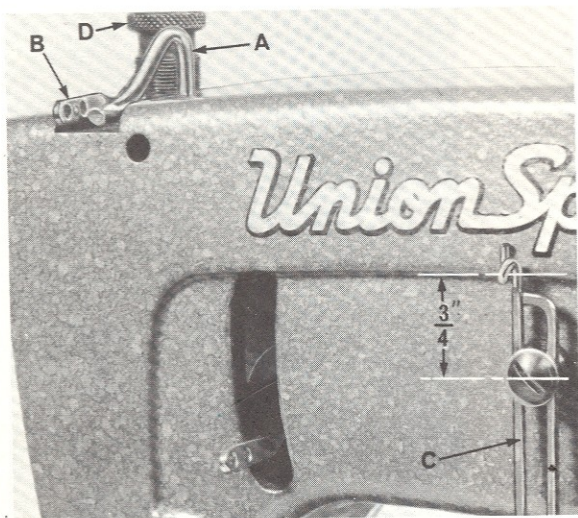


Fig. 13
to steady the thread.

THREADING

Draw the looper and needle threads into the machine and start operating on a piece of fabric. Refer to threading diagram (Fig. 1) on page 5, for manner of threading these machines.

THREAD TENSIONS

Pull the needle thread through the eyelets and set the needle tension at 3 ounces or just sufficient tension to produce uniform stitches on the under surface of the fabric.

The looper thread tension is applied at the cast-off support tension disc assembly, and the adjusting nut should be set so that the tension on the looper thread is just sufficient

SETTING LOOPER THREAD TAKE-UP

The looper thread take-up is not spotted on the main shaft and consequently can be set to compensate for varying conditions. It is set correctly when the looper thread is just cast off the highest lobe of the take-up when the points of the needles are clearly visible below the under side of the looper. This should be centered in slot of cast-off plate and cast-off plate support.

PRESSER FOOT PRESSURE


Regulate the presser spring regulating screw (D, Fig. 13) so that it exerts only enough pressure on the presser foot to feed the work uniformly when a slight tension is placed on the fabric. This is the knurled screw, located directly behind the needle bar in the head of the machine. Turning it clockwise increases the pressure, counter-clockwise acts the reverse.

TORQUE REQUIREMENTS

Torque (measured in inch-pounds) is a rotating force (in pounds) applied through a distance by a lever (in inches or feet). This is accomplished by a wrench, screw driver, etc., Many of these devices are available, which when set at the proper amount of torque will tighten the part to the correct amount and no tighter.


All straps and eccentrics should be tightened to 19-21 inch-pounds, unless otherwise noted. All other nuts, bolts, screws, etc., should be tightened by hand as tightly as possible, unless otherwise noted.

The screws requiring a specific torque, will be indicated on the picture plates.

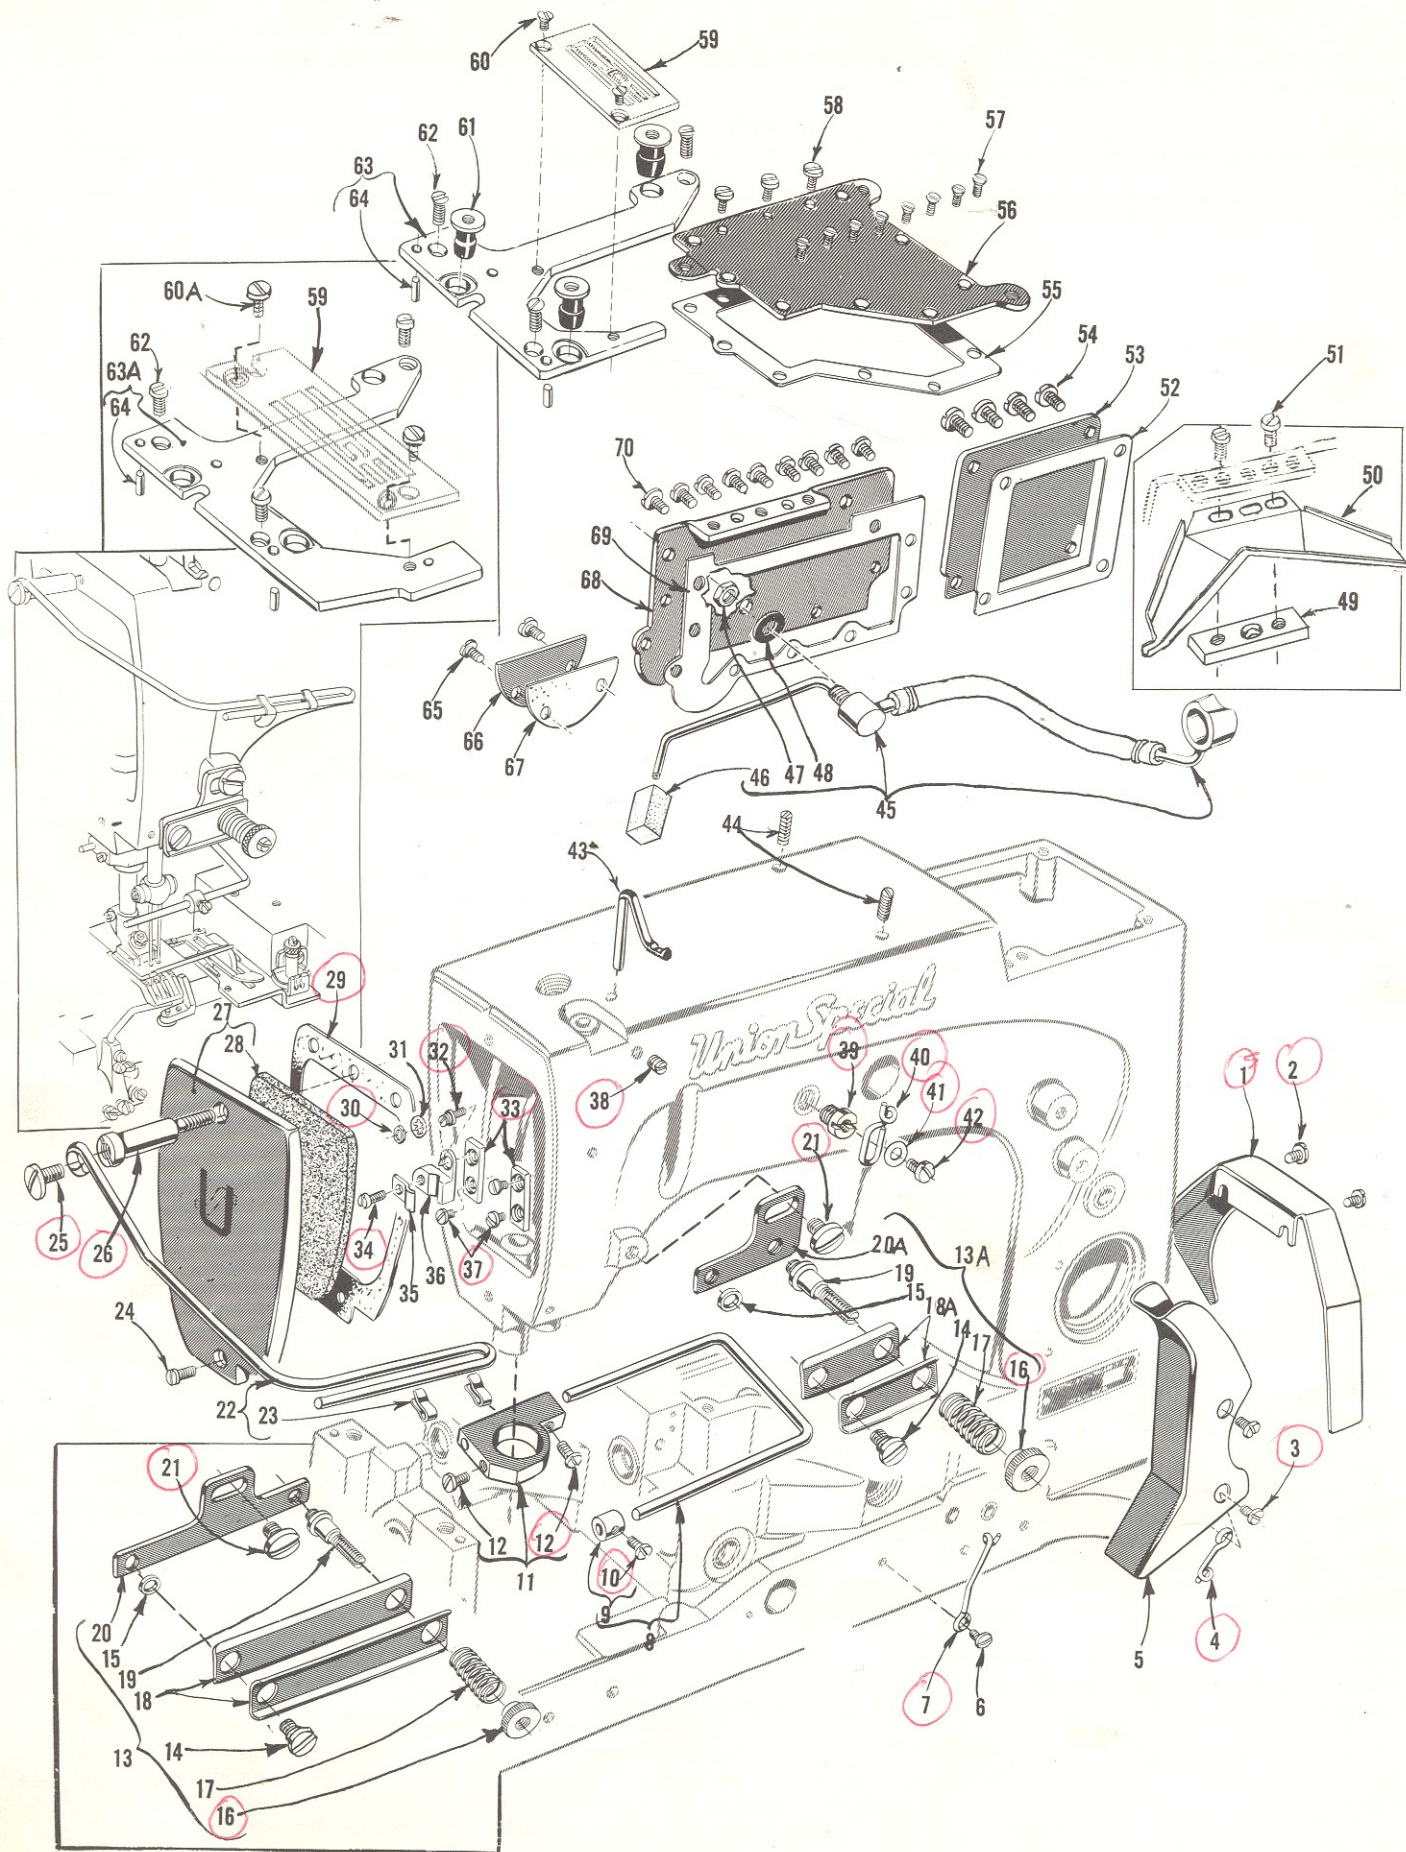

MAIN FRAME, THROAT PLATE SUPPORTS, STRIP TENSION PARTS,
MISCELLANEOUS COVERS AND OILING PARTS

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Amt. Req.</u>
1	21375 AV	Belt Guard -----	1
2	22829	Screw -----	1
3	98 A	Screw -----	2
4	52 A	Looper Thread Eyelet -----	2
5	56391	Looper Thread Guard -----	1
6	98 A	Screw -----	1
7	52958 B	Looper Thread Eyelet -----	1
8	23306 AR	Elastic Guide, for Style 57700 N, all gauges -----	1
9	39-79	Collar -----	1
10	18-355	Screw -----	1
11	23306 AT	Elastic Guide Bracket, for Style 57700 N, all gauges --	1
12	22768 B	Screw -----	1
13	23306 AH	Elastic Tension Assembly, for No. 16 gauge, Style 57700 N -----	2
13A	23306 AG	Elastic Tension Assembly, for Nos. 8 and 12 gauge, Style 57700 N -----	1
14	22845 N	Screw -----	1
15	54480 A	Washer -----	1
16	51292 C	Lock Nut -----	1
17	51292 F-14	Tension Spring -----	1
18	23306 AJ	Tension Disc, for No. 23306 AH -----	1
18A	23306 AK	Tension Disc, for No. 23306 AG -----	2
19	23306 AN	Tension Post -----	2
20	23306 AL	Tension Bracket, for No. 23306 AH -----	1
20A	23306 AM	Tension Bracket, for No. 23306 AG -----	1
21	25 S	Screw, for tension assembly, Style 57700 N, all gauges -----	1
22	23306 AP	Head Cover Elastic Guide, for Style 57700 N, all gauges -----	1
23	23306 AS	Elastic Stop Guide -----	1
24	22569 C	Screw, for head cover, Style 57700 L, all gauges -----	2
-	22569 C	Screw, for head cover, Style 57700 N, all gauges -----	2
25	88 D	Screw, for Style 57700 N, all gauges -----	1
26	52782 C	Screw, for Style 57700 N, all gauges -----	1
27	56382	Head Cover -----	1
28	56382 A	Felt Liner -----	1
29	56382 N	Gasket -----	1
30	7947	Nut -----	1
31	660-342	Lockwasher -----	1
32	51294 R	Screw -----	1
33	35731 A	Presser Bar Connection Guide Plate -----	1
34	22585	Screw -----	2
35	56393 D	Head Oil Tube Clamp -----	1
36	56393 C	Head Oil Tube Mounting Block -----	1
37	22513	Screw -----	1
38	95	Screw -----	3
39	22889 A	Screw -----	1
40	51758	Needle Thread Frame Eyelet -----	1
41	20	Washer -----	1
42	22848	Screw -----	1
43 to 69		See following page -----	1

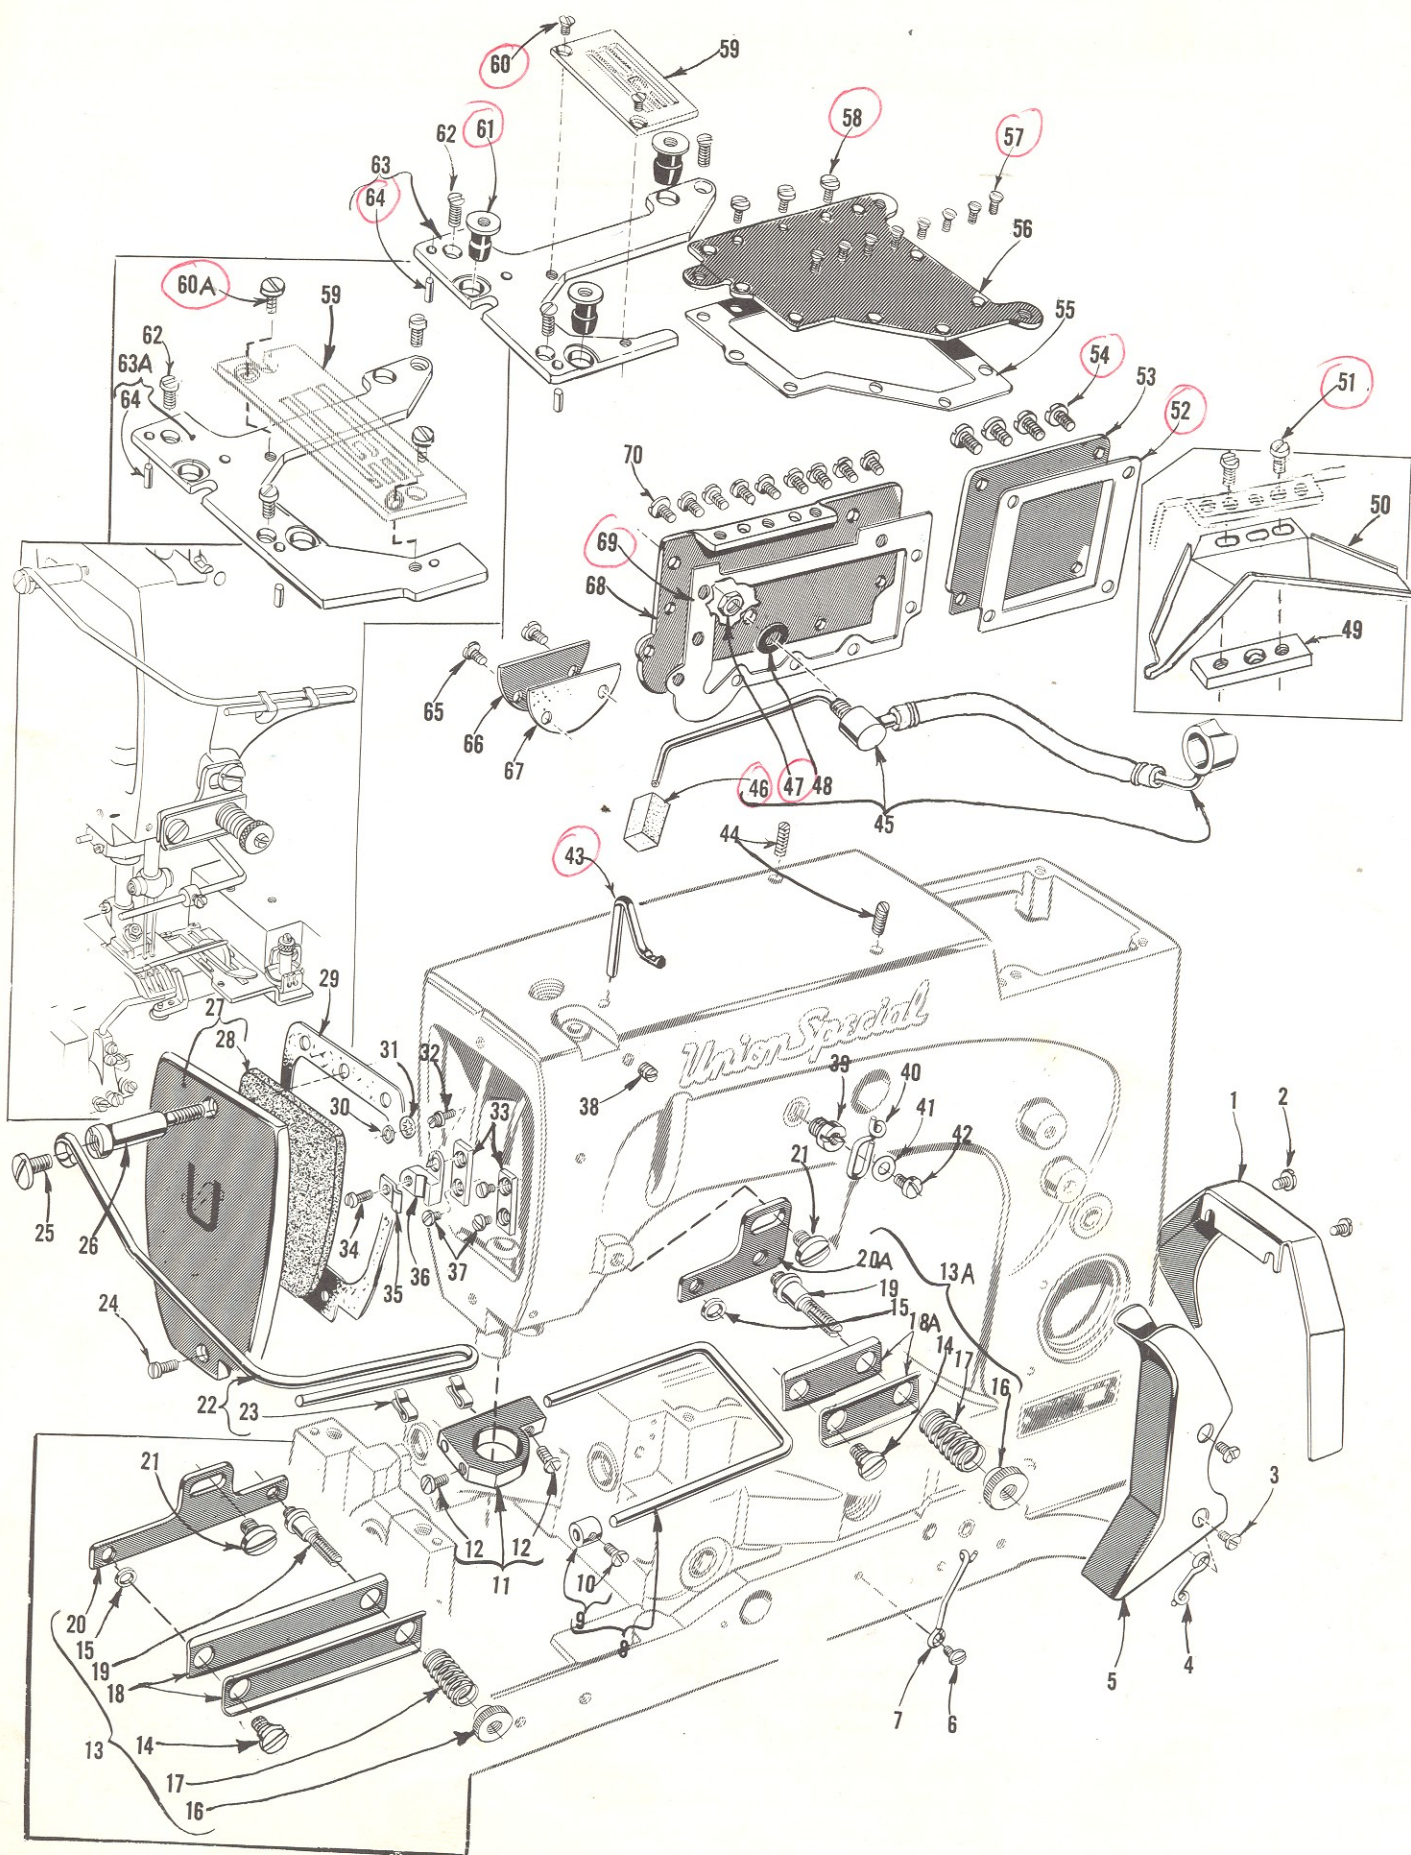

MAIN FRAME, THROAT PLATE SUPPORTS, STRIP TENSION PARTS,
MISCELLANEOUS COVERS AND OILING PARTS


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Amt. Req.</u>
1 to 42		See preceding page	
•43	57770	Needle Thread Take-up Wire -----	1
44	22894 E	Screw -----	2
45	56393 AC	Base Oil Tube Assembly -----	1
•46	666-214	Intake Felt -----	1
•47	258 A	Nut -----	1
48	666-230	Gasket -----	1
49	56382 Y	Oil Drip Plate Clamping Block -----	1
50	56382 AB	Oil Drip Plate -----	1
•51	357	Screw -----	2
•52	56382 E	Gasket -----	1
53	56382 D	Crank Chamber Cover, lower -----	1
•54	22548	Screw -----	4
55	56382 H	Gasket -----	1
56	56382 G	Oil Reservoir Top Cover -----	1
•57	22524	Screw -----	8
•58	22585 A	Screw -----	3
59		Throat Plate (See Page 31) -----	1
•60	87	Screw, for throat plate, Style 57700 N, all gauges ----	2
•60A	22570	Screw, for throat plate, Style 57700 L, all gauges ----	2
•61	660-313	Well Nut -----	3
•*62	22839	Screw, for throat plate support -----	3
*63	57780	Throat Plate Support, for Style 57700 N, all gauges---	1
63A	56480	Throat Plate Support, for Style 57700 L, all gauges---	1
•64	51280 J	Dowel Pin -----	2
65	22829	Screw -----	2
66	56382 J	Looper Drive Shaft Reservoir Cover -----	1
67	56382 K	Gasket -----	1
68	56382 AA	Oil Reservoir Back Cover -----	1
•69	56382 L	Gasket -----	1
70	22848	Screw -----	9

* For old Style 57780 use countersunk head screw No. 80 on Style 57700 N, all gauges.

MAIN FRAME, THROAT PLATE SUPPORTS, STRIP TENSION PARTS,
MISCELLANEOUS COVERS AND OILING PARTS

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Amt. Req.</u>
1 to 42		See preceding page	
•43	57770	Needle Thread Take-up Wire -----	1
44	22894 E	Screw -----	2
45	56393 AC	Base Oil Tube Assembly -----	1
•46	666-214	Intake Felt -----	1
•47	258 A	Nut -----	1
48	666-230	Gasket -----	1
49	56382 Y	Oil Drip Plate Clamping Block -----	1
50	56382 AB	Oil Drip Plate -----	1
•51	357	Screw -----	2
•52	56382 E	Gasket -----	1
53	56382 D	Crank Chamber Cover, lower -----	1
•54	22548	Screw -----	4
55	56382 H	Gasket -----	1
56	56382 G	Oil Reservoir Top Cover -----	1
•57	22524	Screw -----	8
•58	22585 A	Screw -----	3
59		Throat Plate (See Page 31) -----	1
•60	87	Screw, for throat plate, Style 57700 N, all gauges ----	2
•60A	22570	Screw, for throat plate, Style 57700 L, all gauges ----	2
•61	660-313	Well Nut -----	3
•*62	22839	Screw, for throat plate support -----	3
*63	57780	Throat Plate Support, for Style 57700 N, all gauges---	1
63A	56480	Throat Plate Support, for Style 57700 L, all gauges---	1
•64	51280 J	Dowel Pin -----	2
65	22829	Screw -----	2
66	56382 J	Looper Drive Shaft Reservoir Cover -----	1
67	56382 K	Gasket -----	1
68	56382 AA	Oil Reservoir Back Cover -----	1
•69	56382 L	Gasket -----	1
70	22848	Screw -----	9


* For old Style 57780 use countersunk head screw No. 80 on Style 57700 N, all gauges.

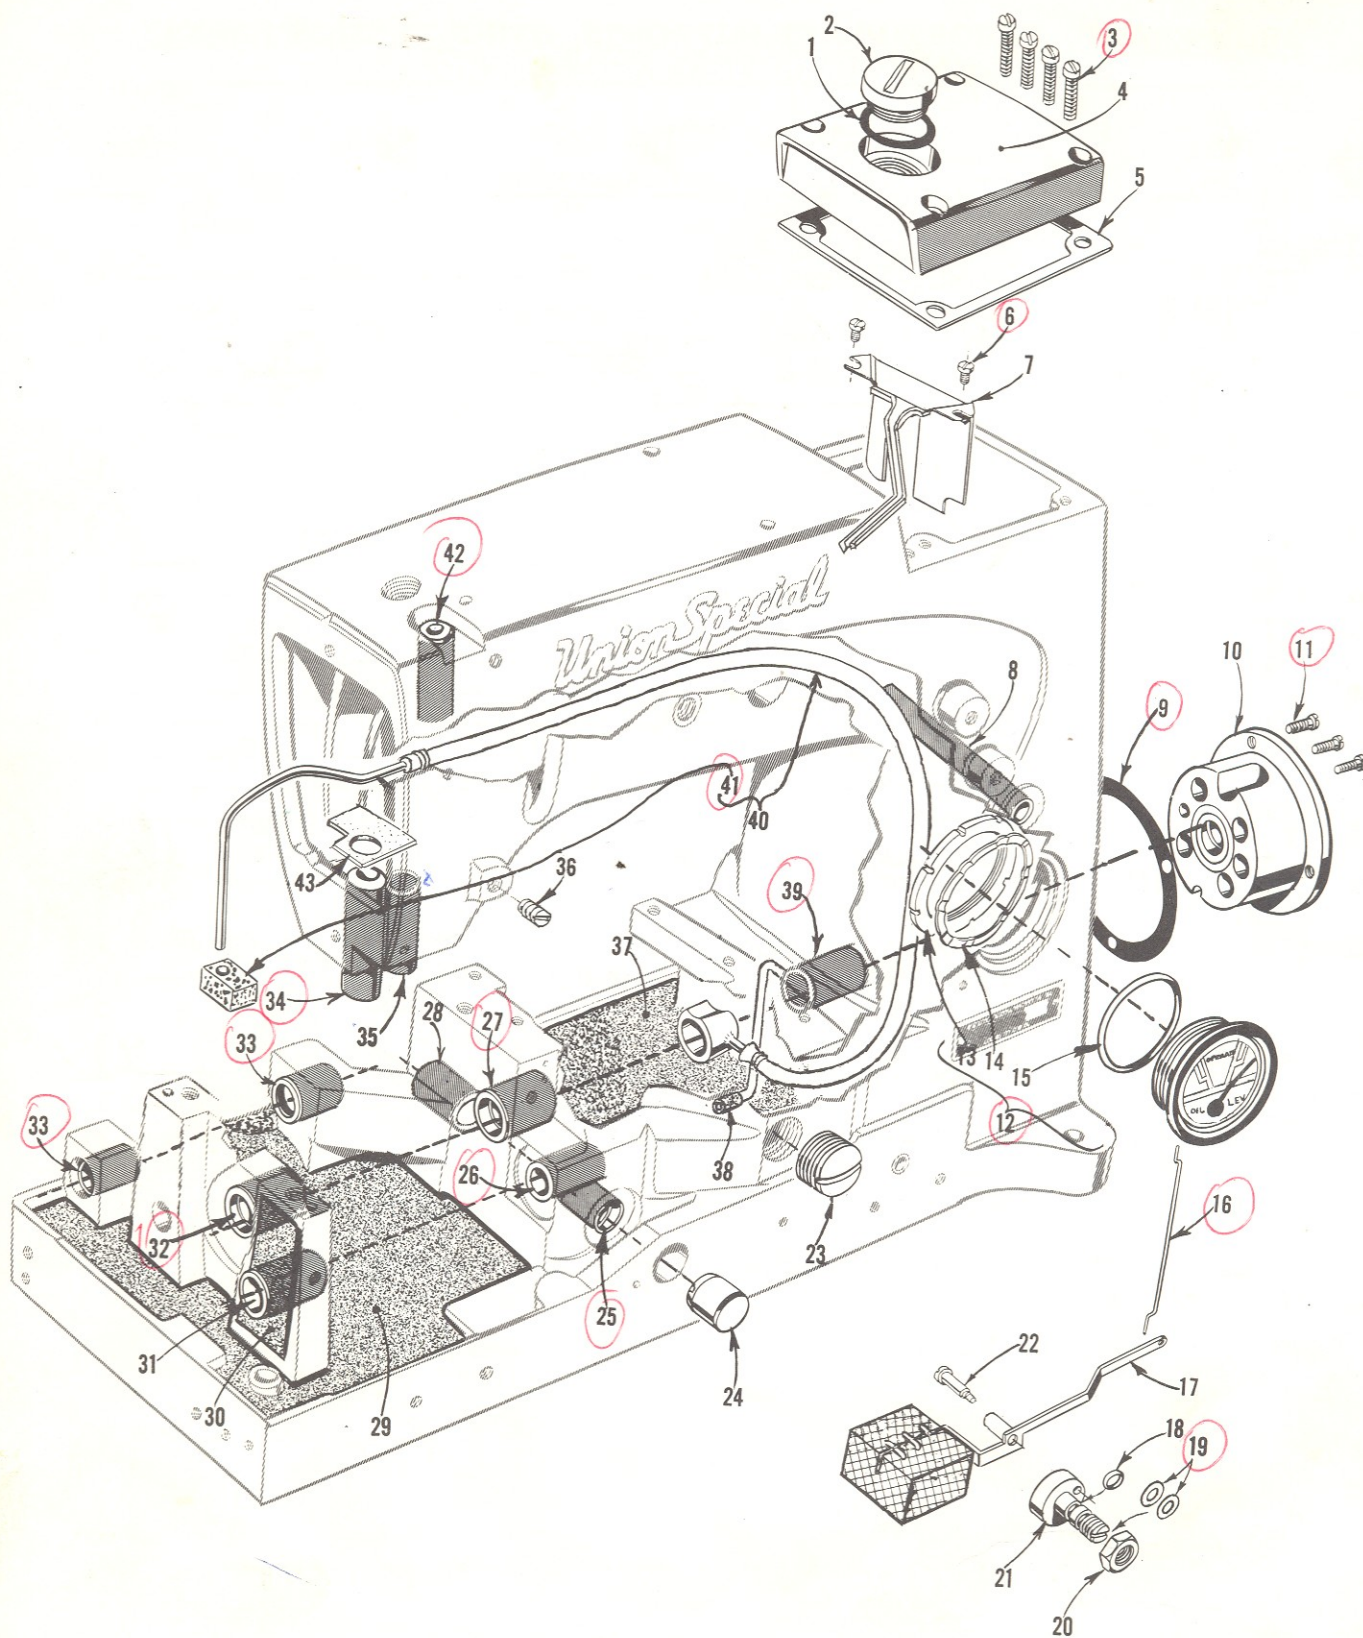

MAIN FRAME, BUSHING, OIL GAUGE AND MISCELLANEOUS OILING PARTS

Ref. No.	Part No.	Description	Amt. Req.
1	56382 M	Gasket -----	1
2	22733 E	Oil Filler Plug Screw -----	1
• 3	22541 C	Screw -----	4
4	56382 B	Upper Crank Chamber Cover -----	1
5	56382 C	Gasket -----	1
• 6	90	Screw -----	2
7	56382 AC	Needle Lever Bearing Oiler and Baffle Plate Assembly -----	1
8	21657 X	Tension Release Lever Shaft Bushing -----	1
• 9	56390 E	Gasket -----	1
10	56390 B	Crankshaft Bushing Housing -----	1
• 11	22569 B	Screw -----	3
• 12	63494 K	Oil Gauge Assembly -----	1
13	63494 F	Nut -----	1
14	63494 G	Spring Washer -----	1
15	660-455	"O" Ring -----	1
• 16	56394 B	Oil Gauge Connecting Rod -----	1
17	56394 C	Oil Gauge Float Assembly -----	1
18	660-221	Oil Retaining Ring -----	1
• 19	61256 G	Washer -----	2
20	11635 B	Nut -----	1
21	56394 A	Oil Gauge Adjusting Shaft -----	1
*22	22793	Screw -----	1
23	22539 R	Plug Screw -----	1
24	52942 Y	Synchronizing Stud -----	1
• 25	52942 W	Looper Drive Lever Shaft Bushing, front -----	1
• 26	50-895 Blk.	Looper Rocker Shaft Bushing -----	1
• 27	56190	Main Shaft Bushing, middle -----	1
28	52942 X	Looper Drive Lever Shaft Bushing, rear -----	1
29	56393 P	Base Felt, front -----	1
30	666-259	Felt -----	1
31	50-895 Blk.	Looper Rocker Shaft Bushing -----	1
• 32	56390	Main Shaft Bushing, left -----	1
• 33	57836 B	Feed Rocker Shaft Bushing -----	2
• 34	51257 AA	Presser Bar Bushing, lower -----	1
• 35	56354 C	Needle Bar Bushing, lower -----	1
36	95	Plug Screw, for Style 57700 L only -----	1
37	56393 Q	Base Felt, rear -----	1
38	35897 BV	Oil Intake Filter -----	1
• 39	56390 G	Main Shaft Bushing, right -----	1
40	56393 T	Head Oil Pump Assembly -----	1
• 41	56393 L	Intake Felt -----	1
• 42	51154 E	Needle Bar Bushing, upper -----	1
43	56393 W	Oil Attraction Felt -----	1


* On late model machines screw No. 22793 is used in place of part Nos. 27-527 Blk. and 61494 G.

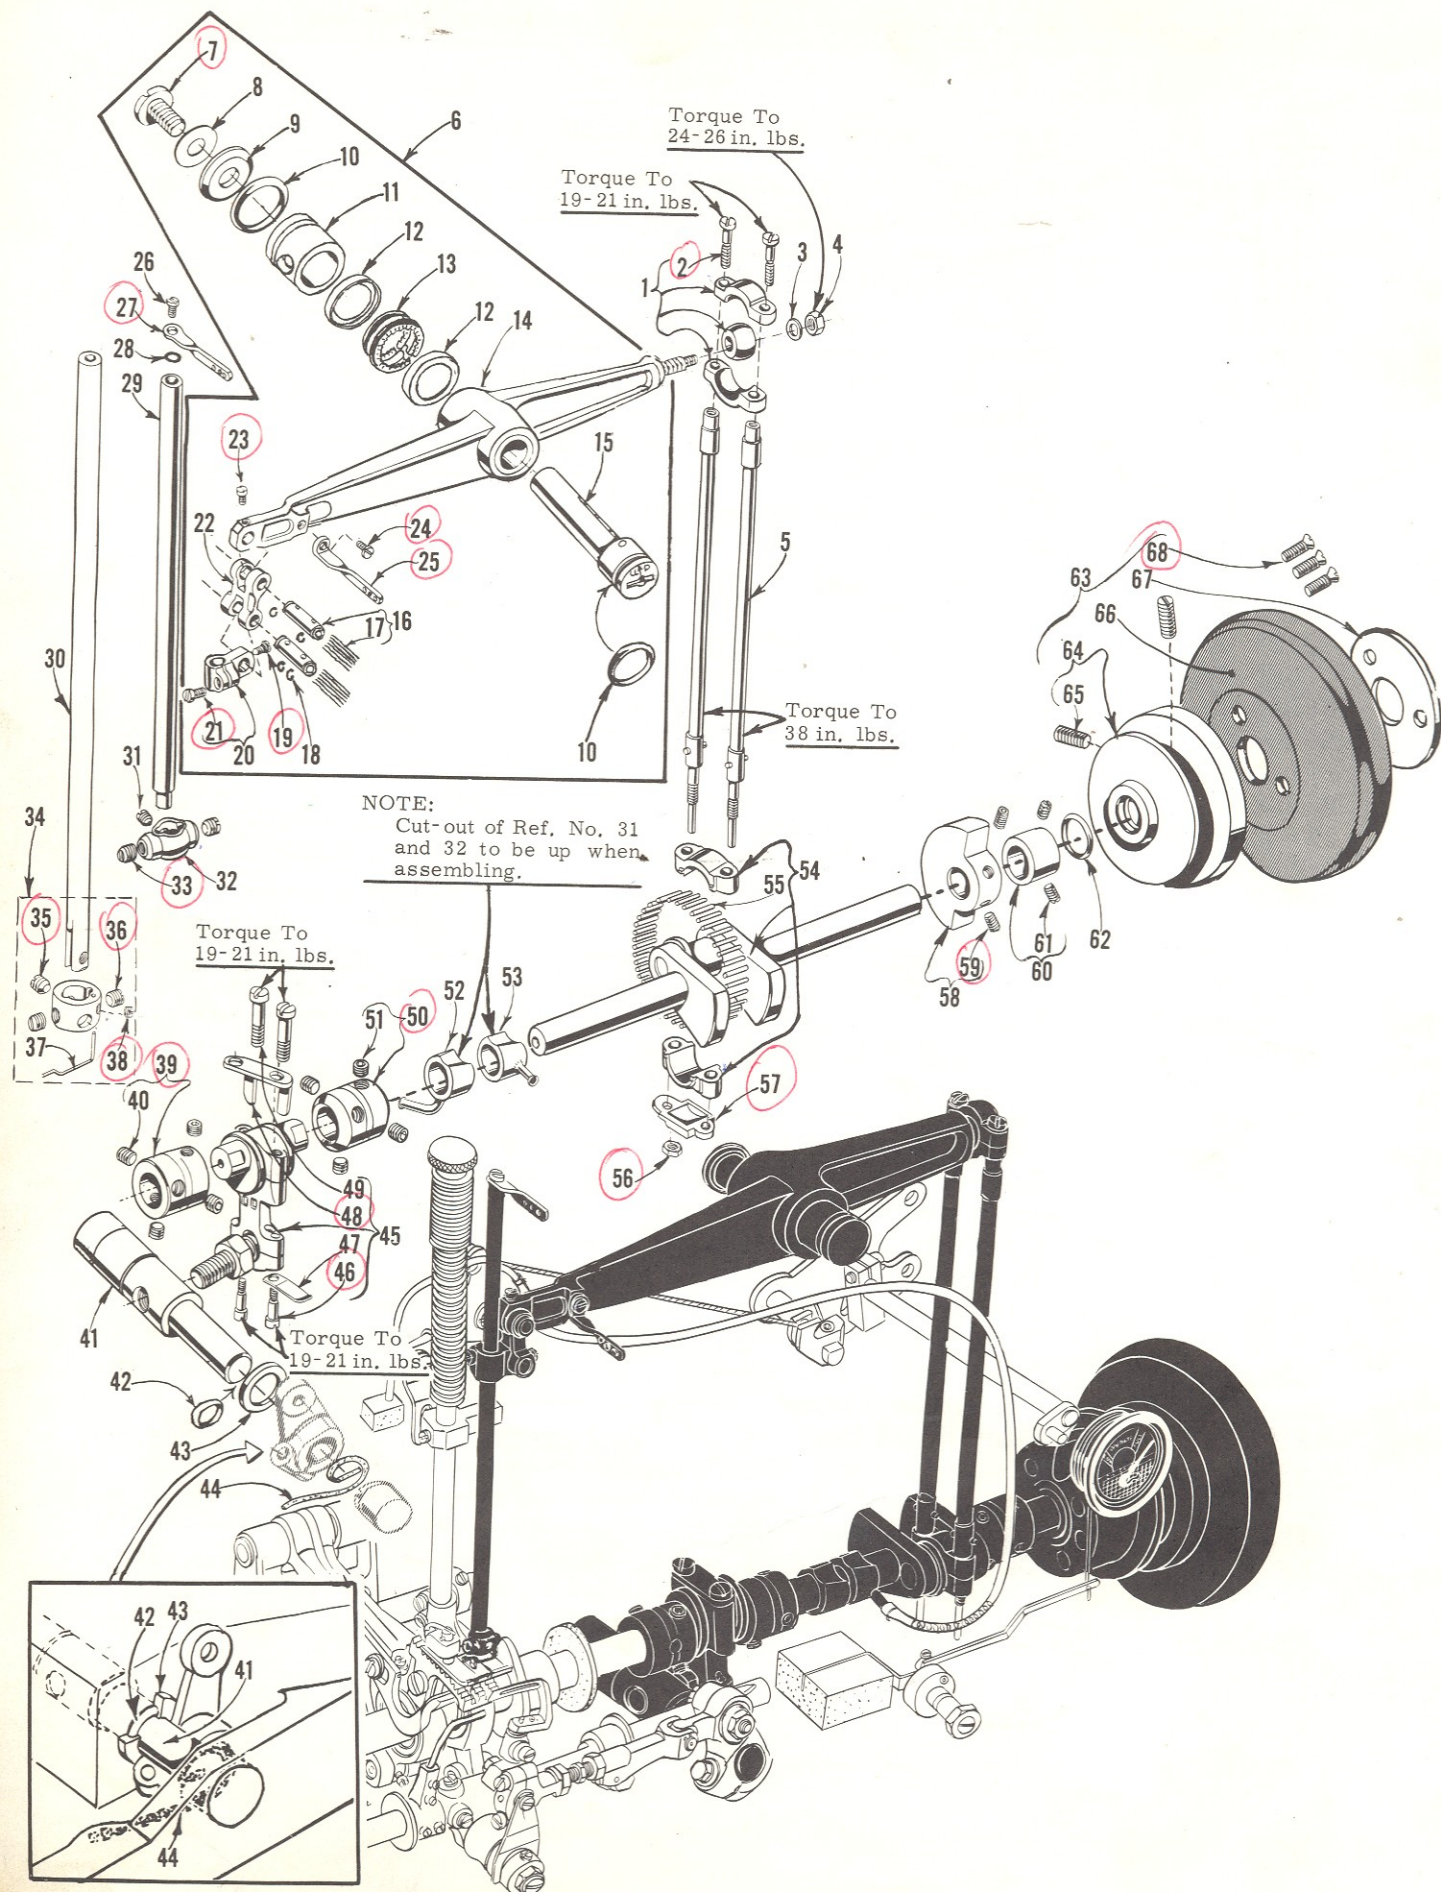

CRANKSHAFT, NEEDLE LEVER, NEEDLE BARS AND LOOPER DRIVE PARTS


Ref. No.	Part No.	Description	Amt. Req.
1	29066 R	Needle Lever Connecting Rod Upper Ball Joint Assembly -----	1
2	22559 G	Screw -----	2
3	51216 N	Washer -----	1
4	51216 P	Nut -----	1
5	56316	Needle Lever Connecting Rod -----	2
6	29348 AF	Needle Lever Assembly -----	1
7	22586 R	Screw -----	1
8	51250 F	Gasket -----	1
9	51250 D	Washer -----	1
10	660-212	Oil Seal Ring -----	2
11	56350 E	Needle Lever Thrust Collar -----	1
12	56350 F	Thrust Washer -----	2
13	660-614	Temper Load Ring -----	1
14	56315 A	Needle Lever -----	1
15	56350 D	Needle Lever Stud -----	1
16	52336 A	Connection Pin -----	2
17	WO-3	Columbia Yarn (6 strands) -----	-
18	660-215	Retaining Ring -----	4
19	22564	Screw -----	1
20	51254 K	Needle Bar Connection -----	1
21	22562 A	Screw -----	1
22	56354 D	Connection Link -----	1
23	77	Screw -----	1
24	22768	Screw -----	1
25	56958	Needle Lever Thread Eyelet -----	1
26	22768	Screw -----	1
27	56958 A	Needle Bar Thread Eyelet -----	1
28	27-435 Blk.	Needle Bar Eyelet Lockwasher -----	1
29	52717 E-12	Needle Bar, marked "EJ-12", for No. 12 gauge, Styles 57700 L and N -----	1
-	52817-16	Needle Bar, marked "BD-16", for No. 16 gauge, Styles 57700 L and N -----	1
30	52817 E-8	Needle Bar, marked "BG-8", for No. 8 gauge, Style 57700 N -----	1
31	89	Spot Screw -----	1
32	52718-12	Needle Holder, marked "F-12", for Nos. 12 and 16 gauge, Styles 57700 L and N -----	1
33	98	Set Screw -----	2
34	52818-8	Needle Holder, for No. 8 gauge, Style 57700 N -----	1
35	89	Spot Screw -----	1
36	88 B	Set Screw -----	2
37	52842 G	Needle Thread Guide -----	1
38	28 B	Set Screw -----	1
39	56343 D	Looper Drive Lever Crank Connection, left -----	1
40	22894 X	Screw -----	4
41	52942 A	Looper Drive Lever Rocker Shaft -----	1
42	660-202	"O" Ring -----	1
43	56342 B	Spacing Collar -----	1
44	CL21	Oil Drain Wick -----	1
45	29105 AJ	Looper Driving Lever Crank Assembly -----	1
46	22559 A	Bearing Cap Screw, lower -----	2
47	56343 E	Oil Splasher -----	1
48	56343 C	Ball Joint Guide Fork -----	1
49	22587 K	Bearing Cap Screw, upper -----	2
50	52943 L	Looper Drive Lever and Crankshaft Connection, right -----	1
51	22894 X	Screw -----	4
52	56393 AB	Base Oil Pump -----	1
53	56393	Head Oil Pump -----	1
54	29476 LL	Crankshaft, marked "56322 A", .910 inch throw -----	1
55	51216 M	Needle Bearing -----	28
56	12934 A	Nut -----	1
57	56316 C	Connecting Rod Guide -----	1
58	51247	Counterweight -----	1
59	22894 J	Screw -----	2
60	51147	Thrust Collar -----	1
61	95	Set Screw -----	2
62	660-202	"O" Ring -----	1
63	56321 J	Handwheel Assembly -----	1
64	56321 H	Pulley -----	1
65	22894 AB	Screw -----	2
66	56321 D	Handwheel -----	1
67	61321 L	Retaining Plate -----	1
68	22574	Screw -----	3

* Details Nos. 24 and 25 are not components of No. 29348 AF Needle Lever Assembly.

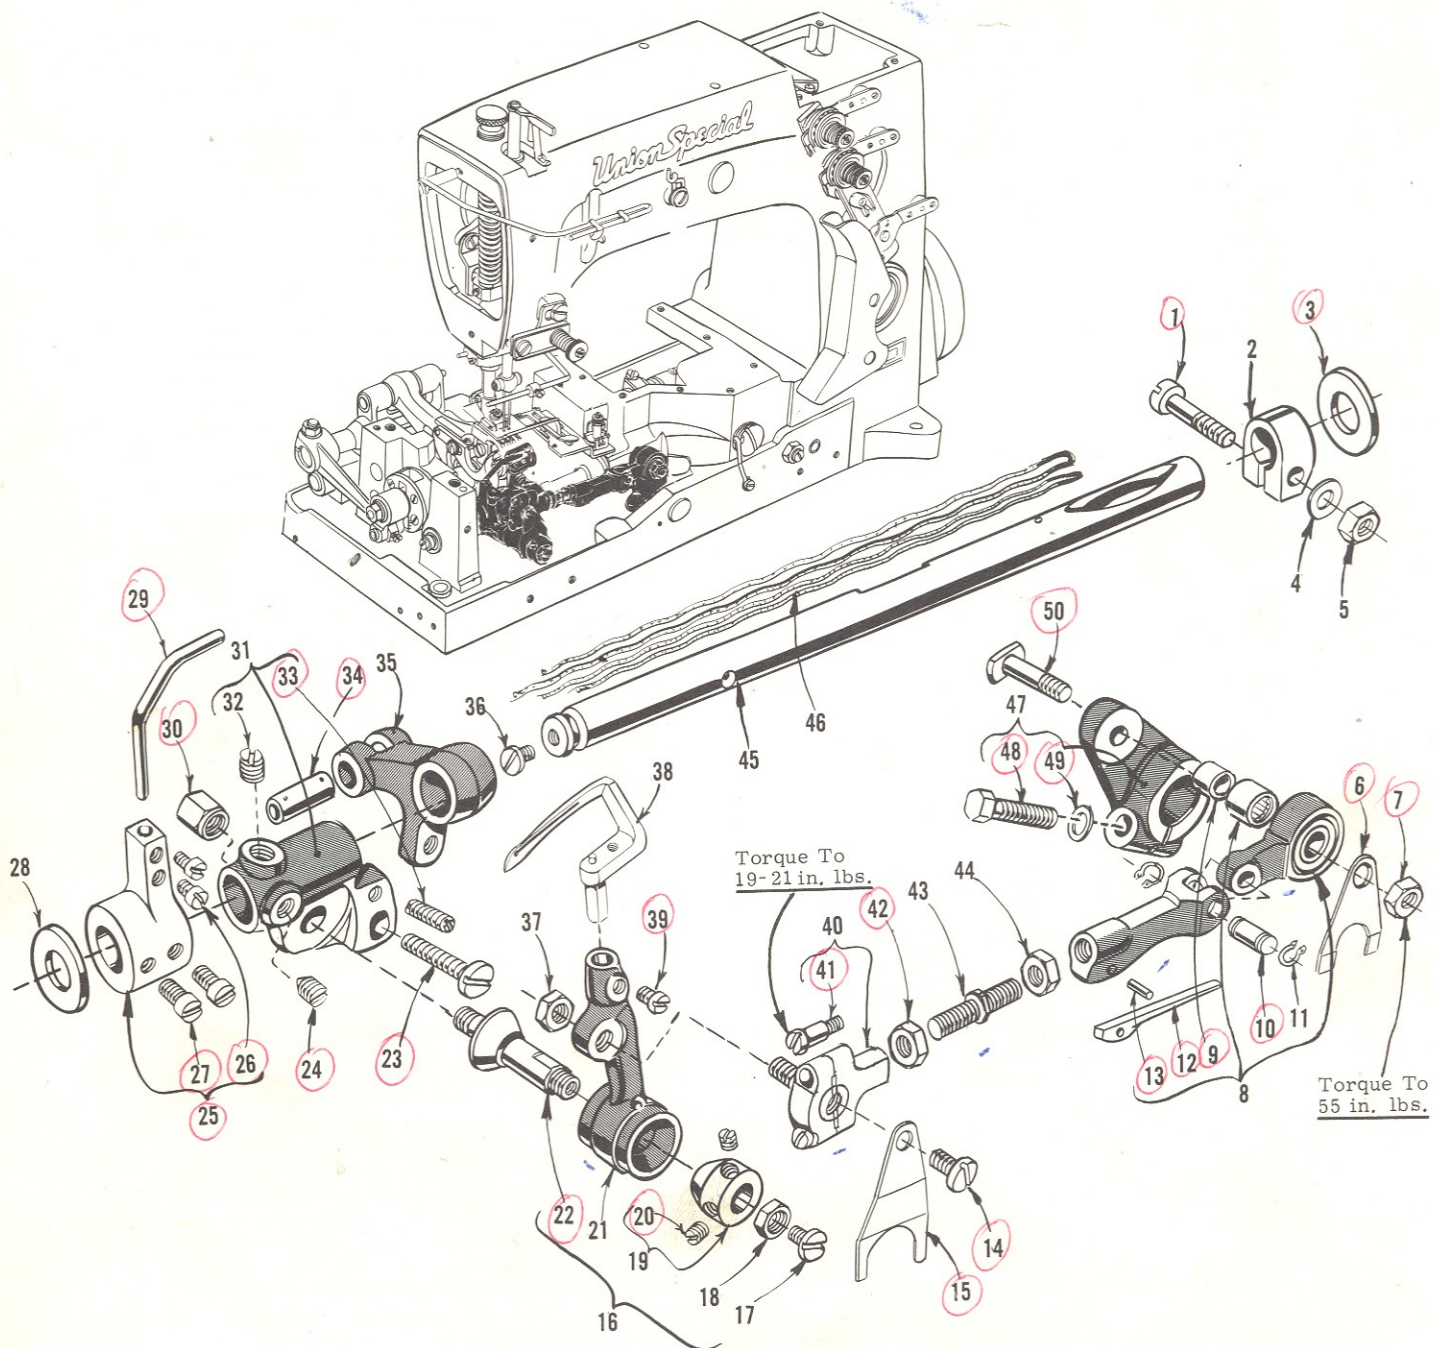


LOOPER ROCKER AND CONNECTING ROD PARTS

Ref. No.	Part No.	Description	Amt. Req.
1	55244 G	Looper Rocker Shaft Collar Stud -----	1
2	51244 N	Looper Rocker Shaft Clamp -----	1
3	51244 L	Thrust Washer -----	1
4	51216 N	Washer -----	1
5	18	Nut -----	1
6	56393 K	Washer -----	1
7	18	Nut -----	1
8	56341 M	Looper Connecting Rod Jointed Section, right -----	1
9	56341 F	Ferrule -----	1
10	56341 E	Hinge Pin -----	1
11	660-310	Truarc Ring -----	2
12	56341 G	Spring -----	1
13	50-458 Blk.	Spring Pin -----	1
14	87 U	Screw -----	1
15	56393 J	Looper Connecting Rod Ball Joint Oiler, left -----	1
16	29192 Z	Looper Rocker Assembly -----	1
17	22829	Lock Nut Screw -----	1
18	258 A	Lock Nut -----	1
19	15465 F	Looper Rocker Cone -----	1
20	88	Screw -----	2
21	57713	Looper Rocker, marked "W" -----	1
22	51745	Looper Rocker Cone Stud -----	1
23	22874	Looper Rocker Frame Lock Screw -----	1
24	96	Screw -----	1
25	52825 D	Looper Needle Guard Holder -----	1
26	22563	Screw -----	2
27	33174 B	Screw -----	2
28	51244 L	Thrust Washer -----	1
29	52825 C	Looper Needle Guard -----	1
30	51246	Looper Rocker Stud Nut -----	1
31	57744 A	Looper Rocker Frame -----	1
32	98	Set Screw -----	1
33	719	Stop Screw -----	1
34	51236 A	Looper Avoid Link Pin -----	1
35	56344 B	Looper Rocker Shaft Arm -----	1
36	22513	Screw -----	1
37	18	Nut -----	1
38	52708 B.	Looper -----	1
39	73	Screw -----	1
40	57841	Looper Connecting Rod Ball Joint, left -----	1
41	22729 C	Screw -----	2
42	269	Nut, left hand thread -----	1
43	51240 E	Looper Connecting Rod -----	1
44	18	Nut, right hand thread -----	1
45	57744	Looper Rocker Shaft -----	1
46	WO-3	Columbia Yarn (4 strands 8 inches long) -----	-
47	56342	Looper Drive Lever, marked "A" -----	1
48	22882 C	Screw -----	1
49	51242 M	Washer -----	1
50	52942 R	Looper Lever Stud -----	1

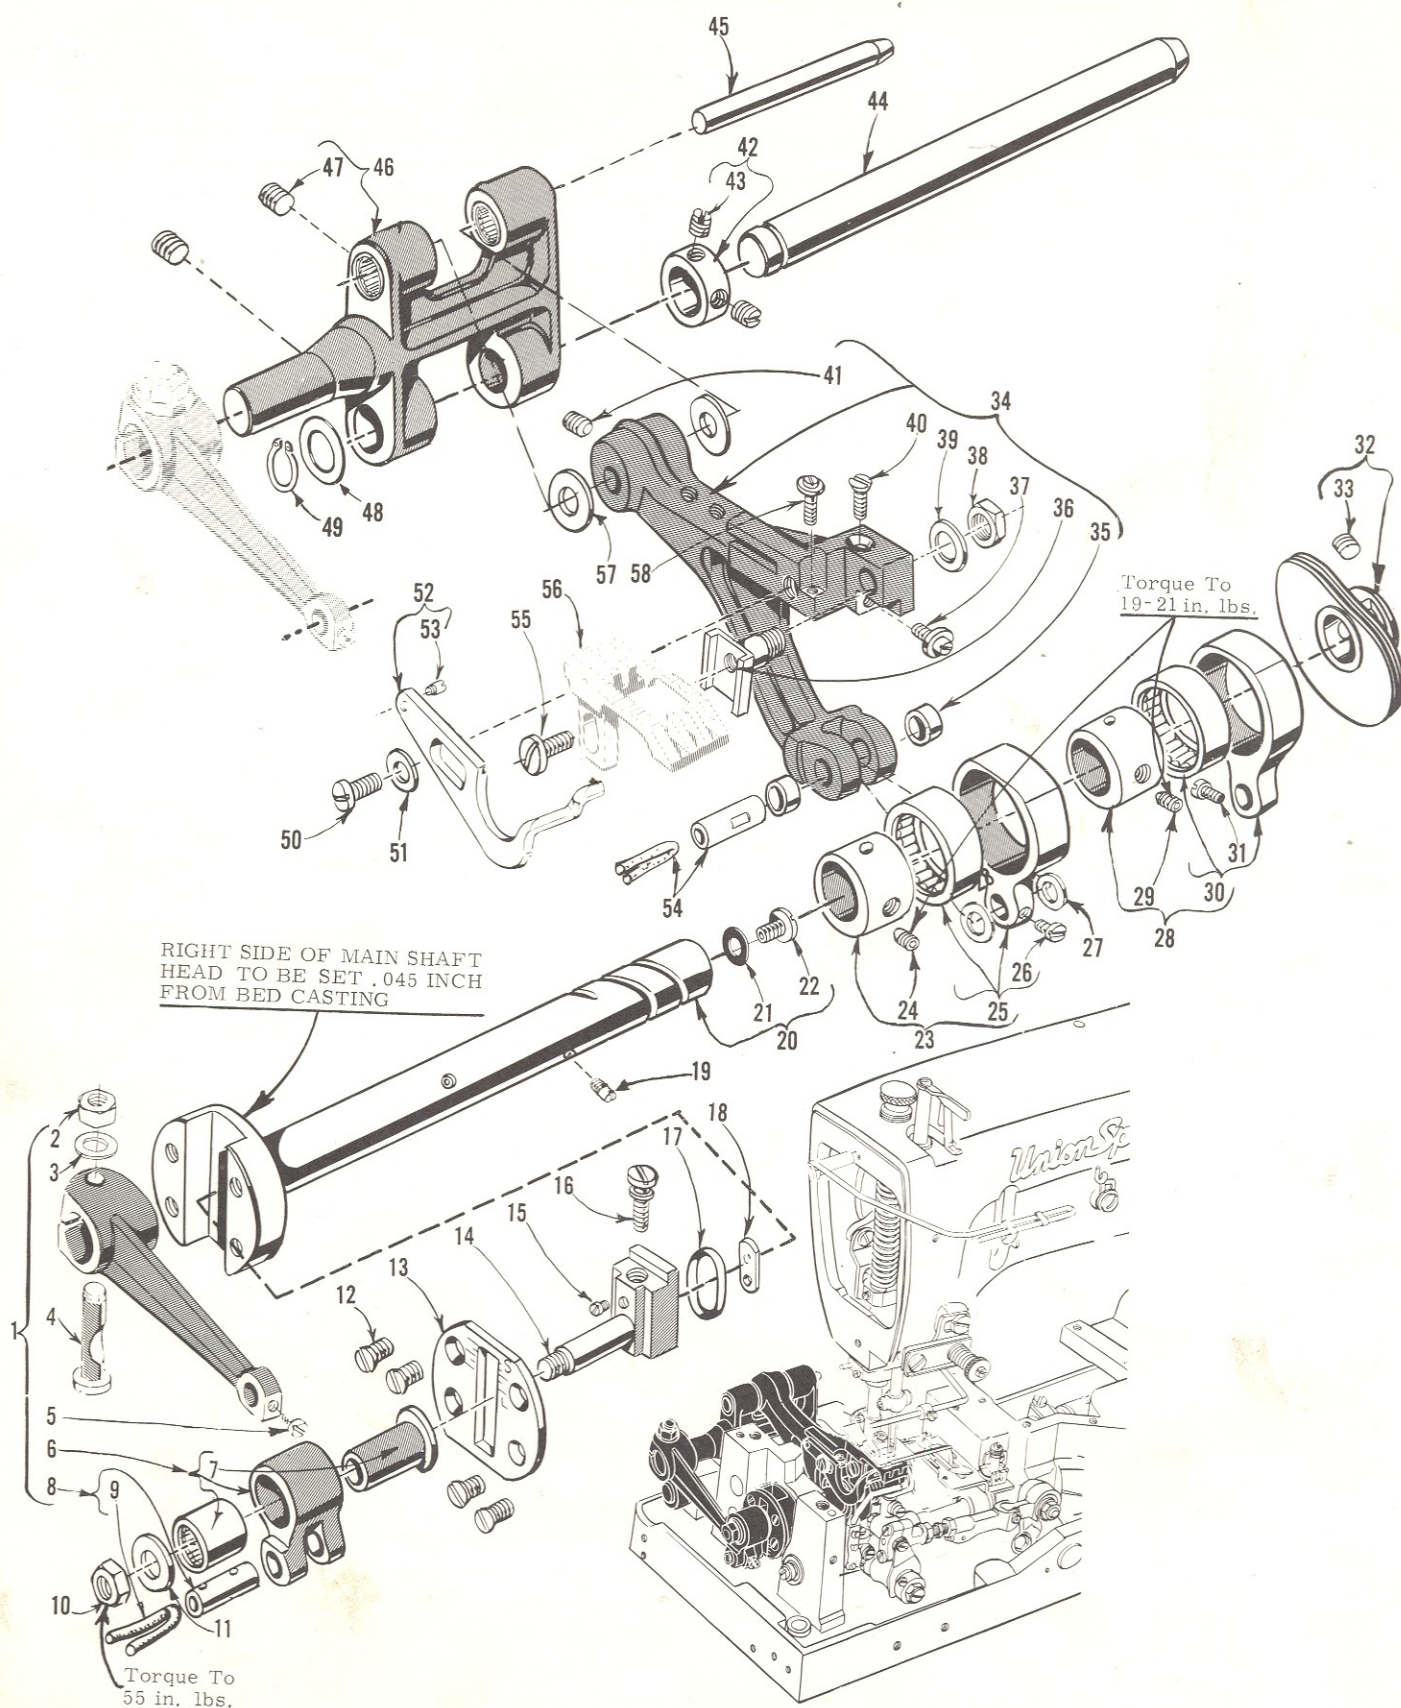


MAIN SHAFT, TAKE-UP AND FEED DRIVING PARTS

Ref. No.	Part No.	Description	Amt. Req.
1	29476 MJ	Feed Rocker Arm and Feed Crank Link Sub-Assembly-----	1
• 2	55235 E	Nut -----	1
3	6042 A	Washer -----	1
• 4	55235 D	Locking Stud -----	1
5	77	Screw, for link pin -----	1
6	56336 B	Feed Crank Link -----	1
• 7	56336 C	Feed Crank Link Ferrule-----	1
8	51054	Feed Crank Link Pin-----	1
9	666-149	Oil Wick-----	1
10	269	Nut, left thread -----	1
11	21657 E	Washer-----	1
• 12	22525 A	Screw -----	4
• 13	56322 C	Main Shaft Head Plate -----	1
14	56336 C	Feed Crank Stud, marked "A"-----	1
15	22798 C	Screw -----	1
• 16	22543 A	Stitch Regulating Screw -----	1
17	660-269 B	Quad Ring -----	1
• 18	56336 D	Feed Crank Stud Insert -----	1
• 19	22801	Screw, for take-up -----	1
20	57722 E	Main Shaft-----	1
21	56322 B	Gasket -----	1
22	22891 B	Oil Flow Regulating Screw-----	1
23	29476 NM-062	Feed Lift Eccentric Assembly, .062 inch throw-----	1
24	22894 AA	Screw -----	1
25	57845 B	Eccentric Link Assembly-----	1
26	77	Screw -----	1
27	39543 N	Thrust Washer, for feed bar -----	2
28	29476 NM-062	Looper Avoid Eccentric Assembly, .062 inch throw, for Style 57700 N, all gauges -----	1
-	29476 NM-072	Looper Avoid Eccentric Assembly, .072 inch throw, for Style 57700 L, all gauges -----	1
• 29	22894 AA	Screw -----	1
30	57845 B	Eccentric Link Assembly-----	1
31	77	Screw -----	1
32	52923 D	Looper Thread Take-up -----	1
• 33	22580 D	Screw -----	2
34	56334 N	Feed Bar -----	1
35	57834 G	Bushing -----	2
• 36	56334 L	Feed Dog Holder -----	1
• 37	22863 C	Feed Dog Holder Adjusting Screw -----	1
38	258 A	Nut -----	1
• 39	6042 A	Feed Dog Holder Washer -----	1
• 40	22637 P-24	Feed Dog Height Adjusting Screw-----	1
41	22651 CB-4	Screw -----	1
42	56335 D	Feed Rocker Shaft Collar -----	1
43	98	Screw -----	2
44	56335 L	Feed Rocker Shaft -----	1
• 45	56334 B	Feed Bar Shaft -----	1
46	56335 G	Feed Rocker -----	1
47	22651 CD-4	Screw -----	2
• 48	41391	Feed Rocker Shaft Thrust Washer -----	1
49	660-438	Retaining Ring -----	1
50	22875 H	Screw, for needle guard -----	1
• 51	21657 E	Washer-----	1
52	57725	Needle Guard -----	1
53	22801	Screw -----	1
54	51236 A	Link Pin-----	1
• 55	22528	Screw, for feed dog-----	1
56		Feed Dog (See Page 31)-----	1
• 57	61341 J	Feed Bar Washer-----	2
• 58	22834 A	Needle Guard Adjusting Screw -----	1

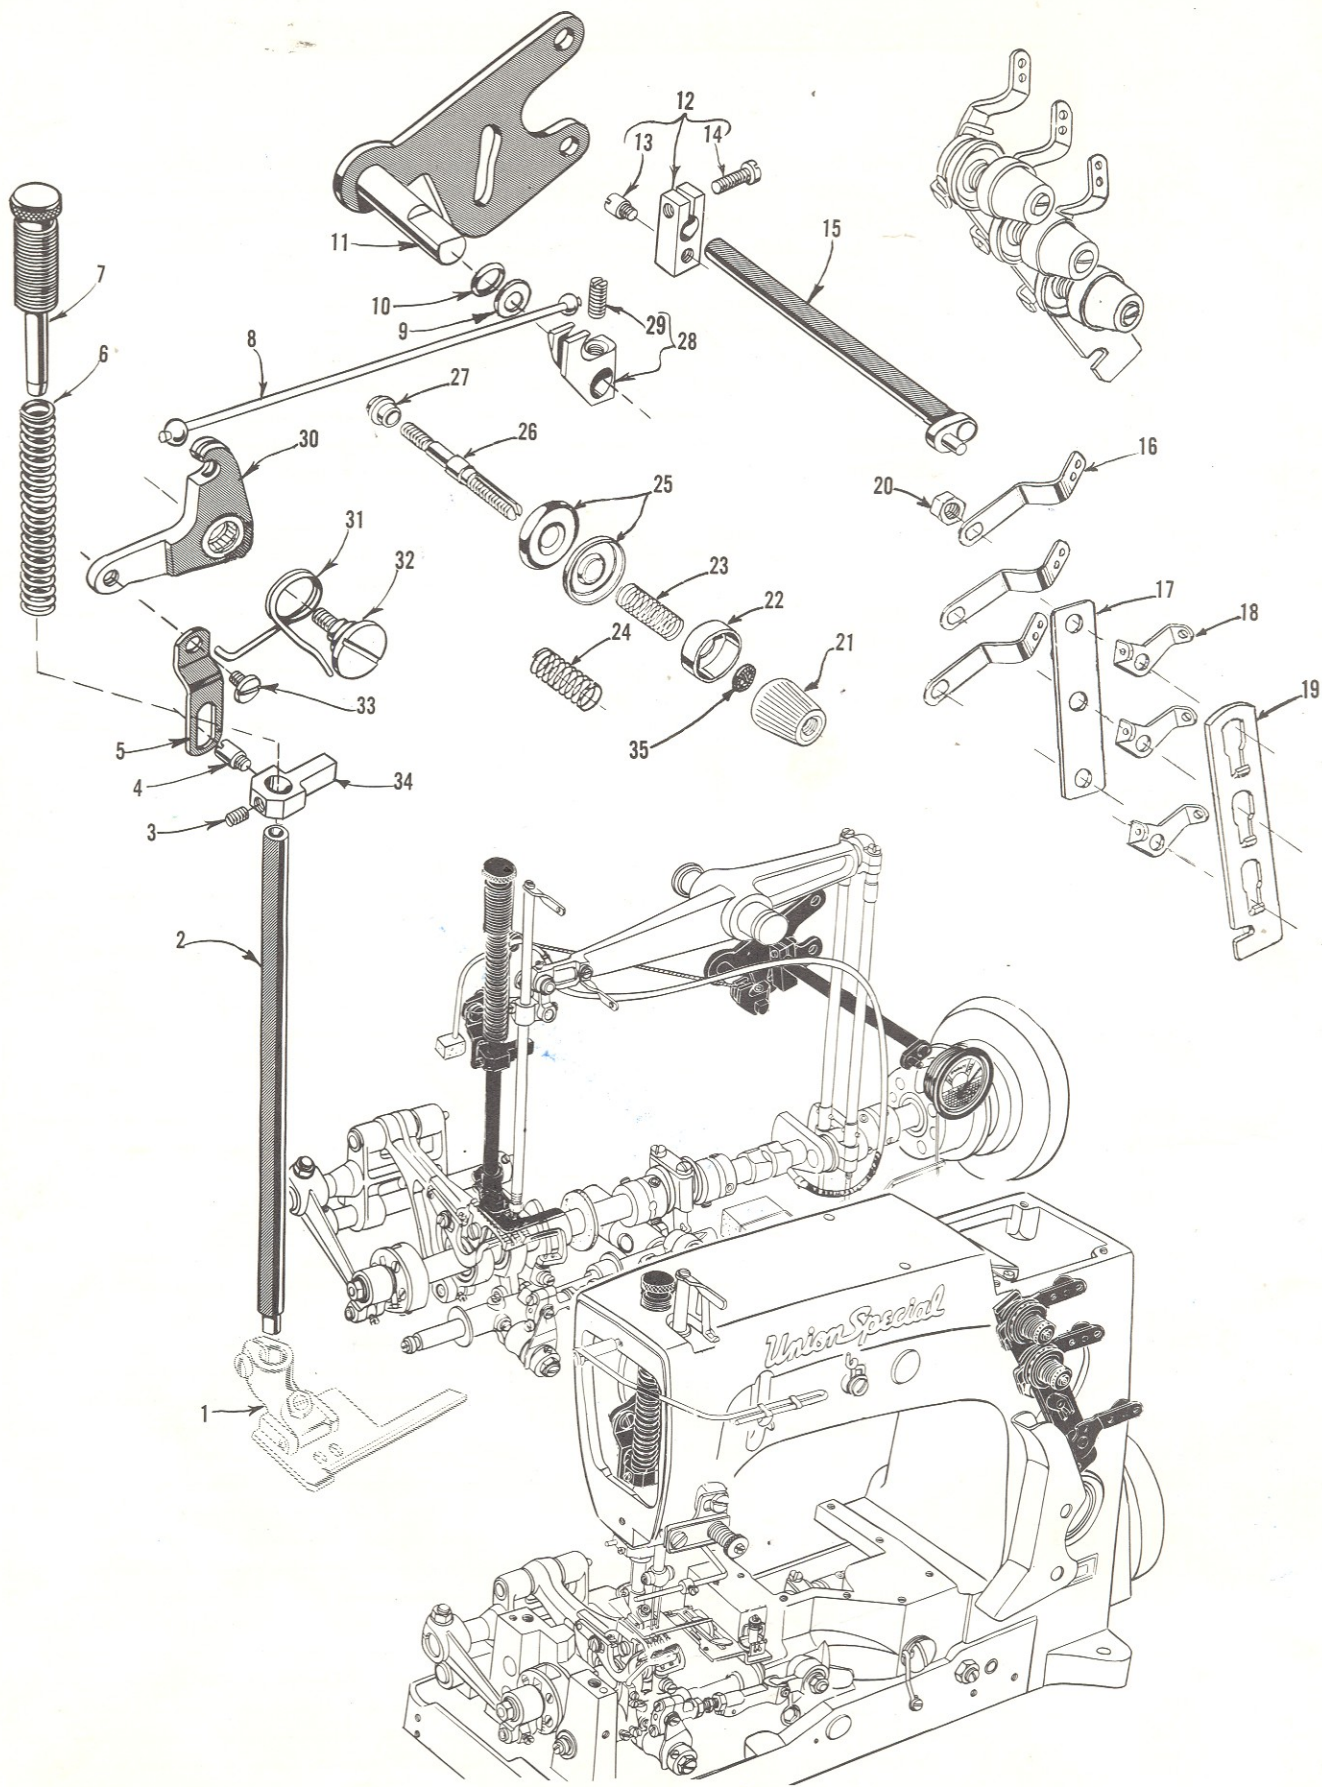




THREAD TENSION AND LIFTER LEVER PARTS

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Amt. Req.</u>
1		Presser Foot (See Page 31) -----	1
2	51257 K	Presser Bar -----	1
3	531	Screw -----	1
4	402	Screw -----	1
5	56383 A	Lifter Lever Link -----	1
6	51256 C	Presser Spring -----	1
7	56356	Presser Spring Regulator -----	1
8	56383 W	Lifter Lever Cable -----	1
9	39552 C	Washer -----	1
10	660-207	Oil Seal Ring -----	1
11	51283 H	Lifter Lever -----	1
12	21657 Y	Tension Release and Lifter Lever Shaft Connection -----	1
13	402	Screw -----	1
14	22596	Screw -----	1
15	21657 W	Tension Release and Lifter Lever Shaft -----	1
16	51491 C	Thread Lead-in Guide -----	3
17	52892	Tension Post Support -----	1
18	51292 D	Tension Thread Eyelet -----	3
19	21657-3	Tension Disc Separator -----	1
20	43266	Nut -----	1
21	39592 Z	Tension Nut -----	3
22	56392 F	Spring Shield -----	3
23	51292 F-1	Looper Thread Tension Spring -----	1
24	51292 F-5	Needle Thread Tension Spring -----	2
25	109	Tension Disc -----	6
26	56392 E	Tension Post -----	3
27	51292 A	Tension Post Ferrule -----	3
28	56383 X	Lifter Lever Connection -----	1
29	74 E	Screw -----	1
30	56383 Y	Lifter Lever Bell Crank -----	1
31	56383 D	Lifter Lever Bell Crank Spring -----	1
32	22557 G	Screw -----	1
33	22758 C	Screw -----	1
34	51257 M	Presser Bar Connection and Guide -----	1
35	39592 AK	Tension Spring Ferrule -----	3

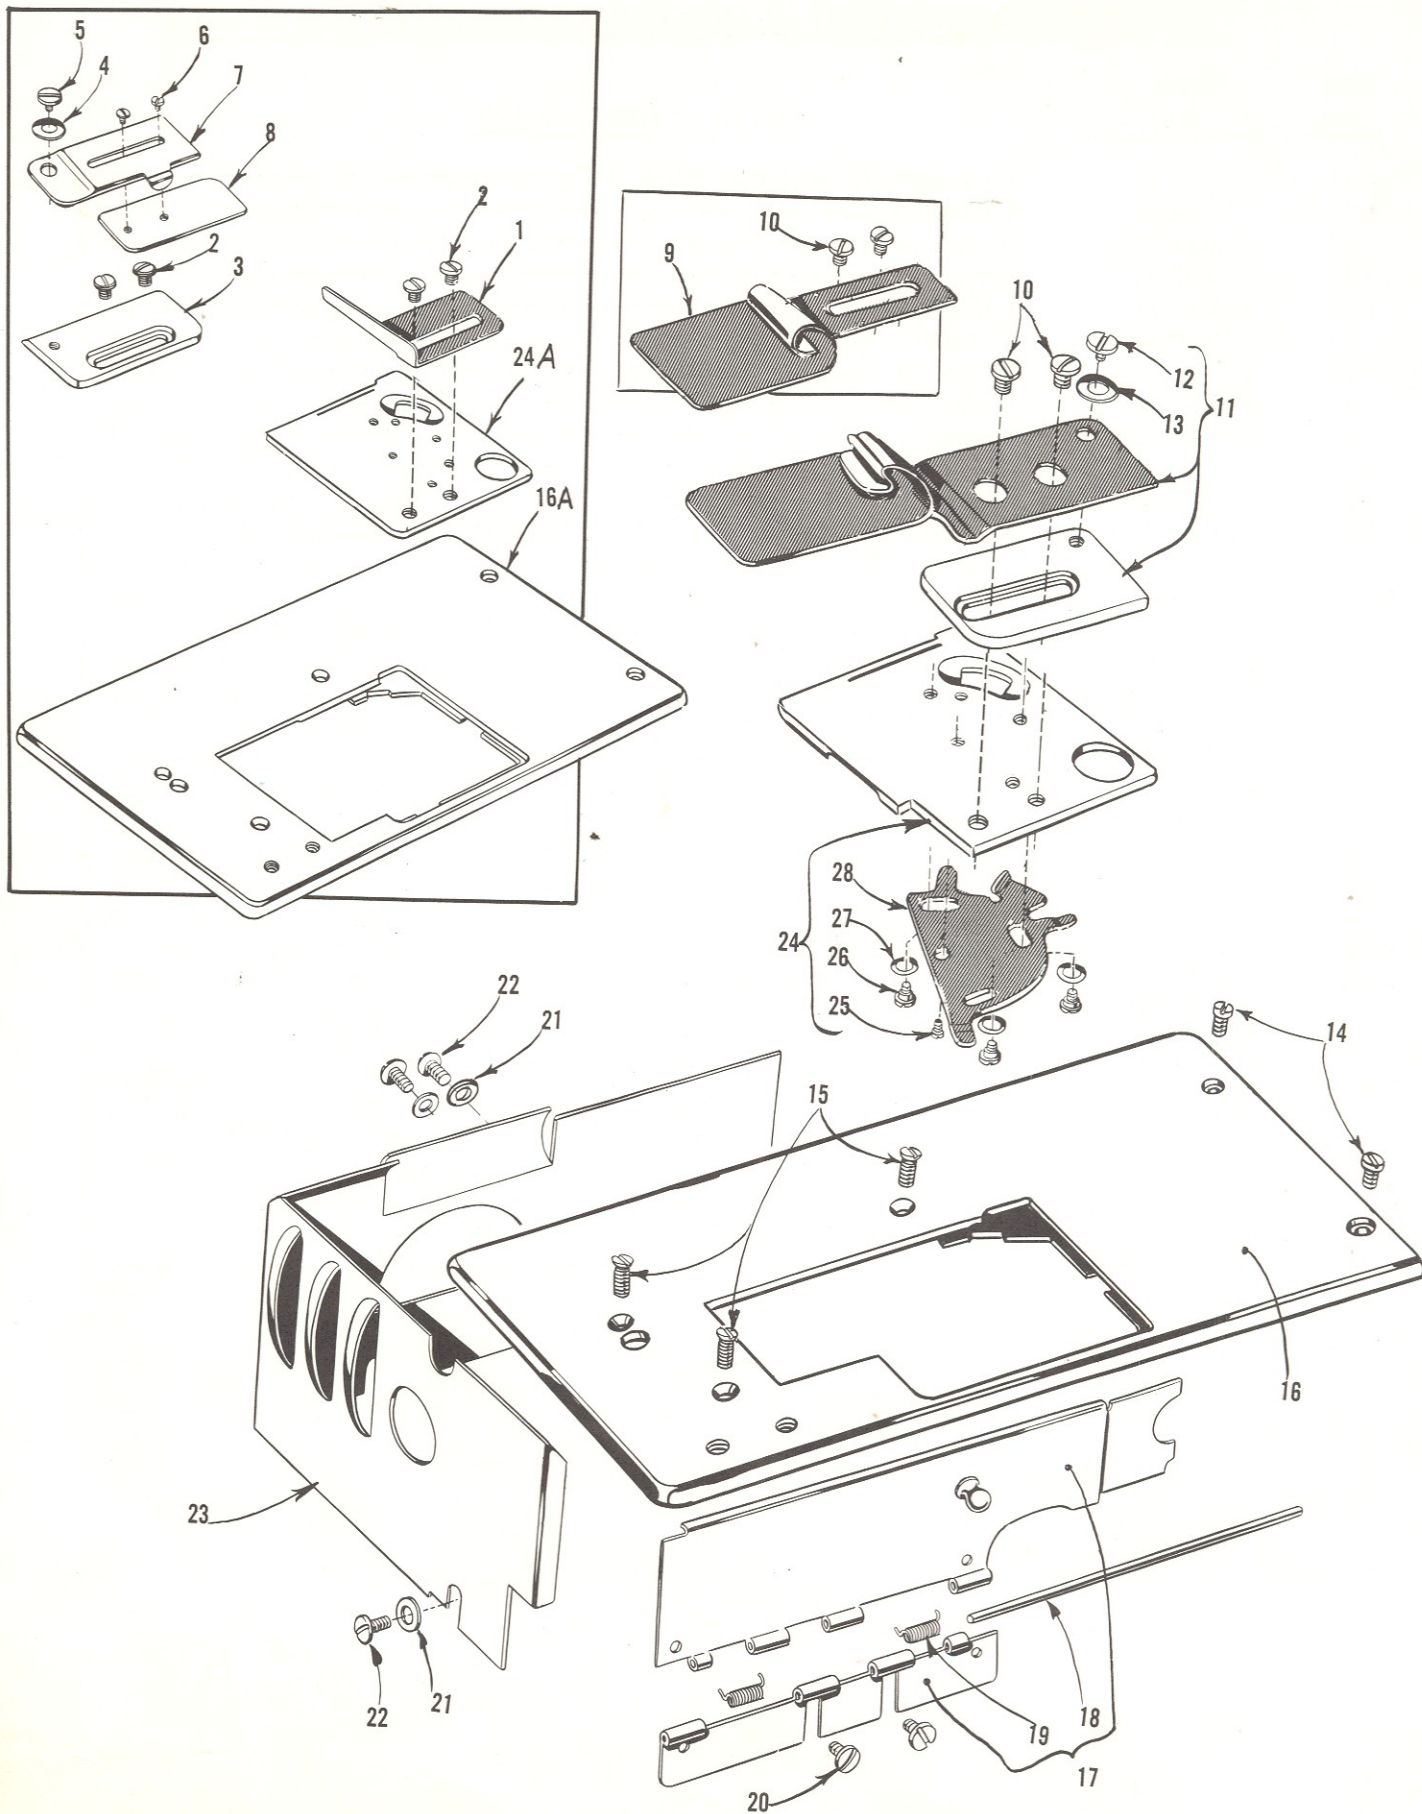


CLOTH PLATES, CLOTH PLATE COVERS AND ATTACHMENTS

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Amt. Req.</u>
1	23440 D	Hemmer Scroll Guide, for Style 57700 L-----	1
• 2	25 C	Screw-----	4
3	23440 A	Hemmer Base, for Style 57700 L -----	1
4	12957 E	Spring Washer, for Style 57700 L -----	1
5	22726	Screw, for Style 57700 L -----	1
• 6	187 A	Screw, for Style 57700 L -----	2
7	23440 B	Hemmer Swing Arm, for Style 57700 L -----	1
8	23440 C	Hemmer Blade, for Style 57700 L-----	1
9	23405 V	Folder, 1/16 inch capacity, 1/8 inch fold turned upwardly, for Nos. 8 and 12 gauge, Style 57700 N -----	1
10	25 C	Screw-----	1
11	23405 T	Folder, 1/16 inch capacity, 1/8 inch fold turned upwardly, for No. 16 gauge, Style 57700 N-----	1
12	22726	Screw-----	1
13	12957 E	Spring Washer-----	1
• 14	22839 C	Screw-----	2
• 15	22526 C	Screw-----	3
16	56301	Cloth Plate, for Style 57700 N-----	1
16A	56401	Cloth Plate, for Style 57700 L-----	1
17	51282 AJ	Hinged Oil Shield, front-----	1
18	52978 G	Hinge Pin -----	1
19	51282 AK	Spring -----	2
20	25 S	Screw-----	2
21	20	Washer -----	3
22	22848	Screw-----	3
23	51282 AH	Oil Shield, left end and back-----	1
24	56381-219	Cloth Plate Cover, for Style 57700 N-----	1
24A	56381-207	Cloth Plate Cover, for Style 57700 L-----	1
• 25	22845 B	Pivot Screw -----	1
26	22760 A	Screw-----	3
• 27	35772 H	Washer -----	3
28	51281 AC	Cloth Plate Cover Spring-----	1

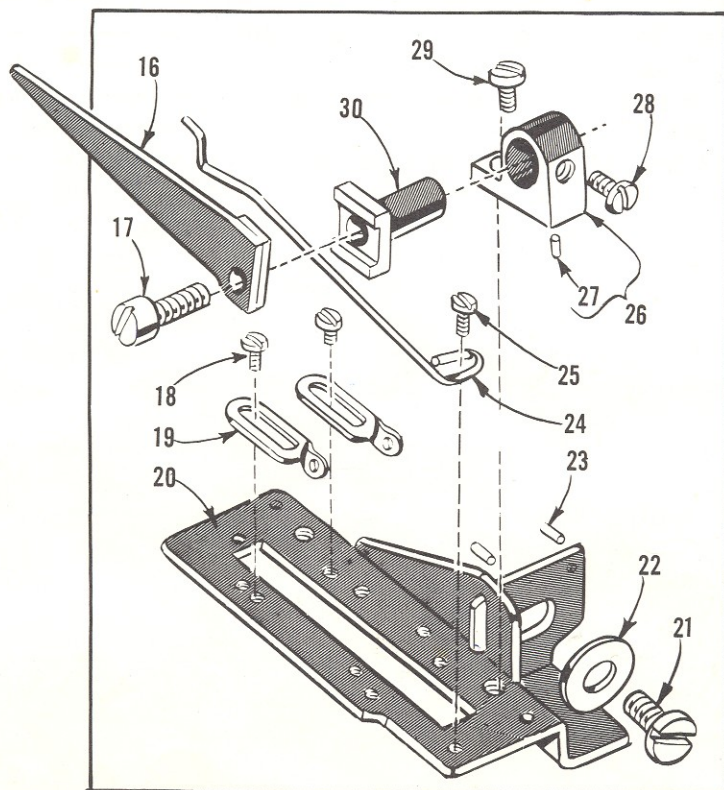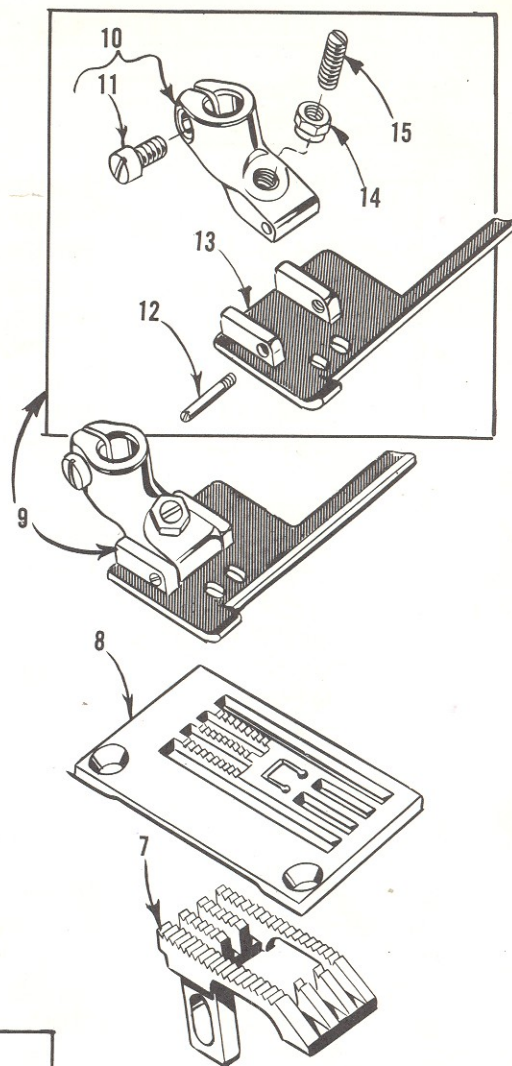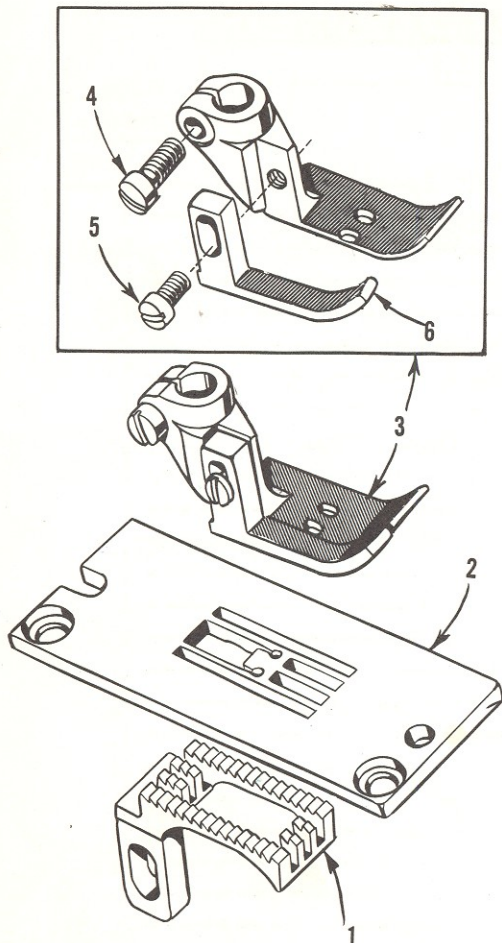

FEED DOGS, THROAT PLATE, PRESSER FEET AND LOOPER THREAD TAKE-UP PARTS

Ref. No.	Part No.	Description	Amt. Req.
1	7205 A	Feed Dog, 16 teeth per inch, for No. 12 gauge, Style 57700 L-----	1
-	22 JE	Feed Dog, 16 teeth per inch, for No. 16 gauge, Style 57700 L-----	1
2	52724 B-12	Throat Plate, for No. 12 gauge, Style 57700 L-----	1
-	52724 B-16	Throat Plate, for No. 16 gauge, Style 57700 L-----	1
3	52720 B-12	Presser Foot, for No. 12 gauge, Style 57700 L-----	1
-	52720 B-16	Presser Foot, for No. 16 gauge, Style 57700 L-----	1
4	91	Screw-----	1
5	22593	Screw-----	1
6	52730 B	Adjustable Section-----	1
7	57705 M	Feed Dog, 16 teeth per inch, for all gauges, Style 57700 N-----	1
8	57724-8	Throat Plate, for No. 8 gauge, Style 57700 N-----	1
-	57724-12	Throat Plate, for No. 12 gauge, Style 57700 N-----	1
-	57724-16	Throat Plate, for No. 16 gauge, Style 57700 N-----	1
9	57720-8	Presser Foot, for No. 8 gauge, Style 57700 N-----	1
-	57720-12	Presser Foot, for No. 12 gauge, Style 57700 N-----	1
-	57720-16	Presser Foot, for No. 16 gauge, Style 57700 N-----	1
10	51430 D	Shank-----	1
11	91	Screw-----	1
12	22799 B	Screw-----	1
13	57730-8	Presser Foot Bottom, for No. 57720-8-----	1
-	57730-12	Presser Foot Bottom, for No. 57720-12-----	1
-	57730-16	Presser Foot Bottom, for No. 57720-16-----	1
14	51430 F	Nut-----	1
15	22840 A	Screw-----	1
16	52904 B	Retaining Finger-----	1
17	22516	Screw-----	1
18	73 A	Screw-----	1
19	52958 D	Looper Thread Eyelet-----	2
20	52957 C	Cast-off Support Plate-----	2
21	22528	Screw-----	1
22	21657 E	Washer-----	1
23	50-216 Blk.	Dowel Pin-----	1
24	52904 G	Cast-off Wire-----	2
25	73 A	Screw-----	1
26	52904 E	Retaining Finger Support Bracket-----	1
27	50-216 Blk.	Dowel Pin-----	1
28	87 U	Screw-----	1
29	22768	Screw-----	1
30	52804 E	Retaining Finger Support-----	1

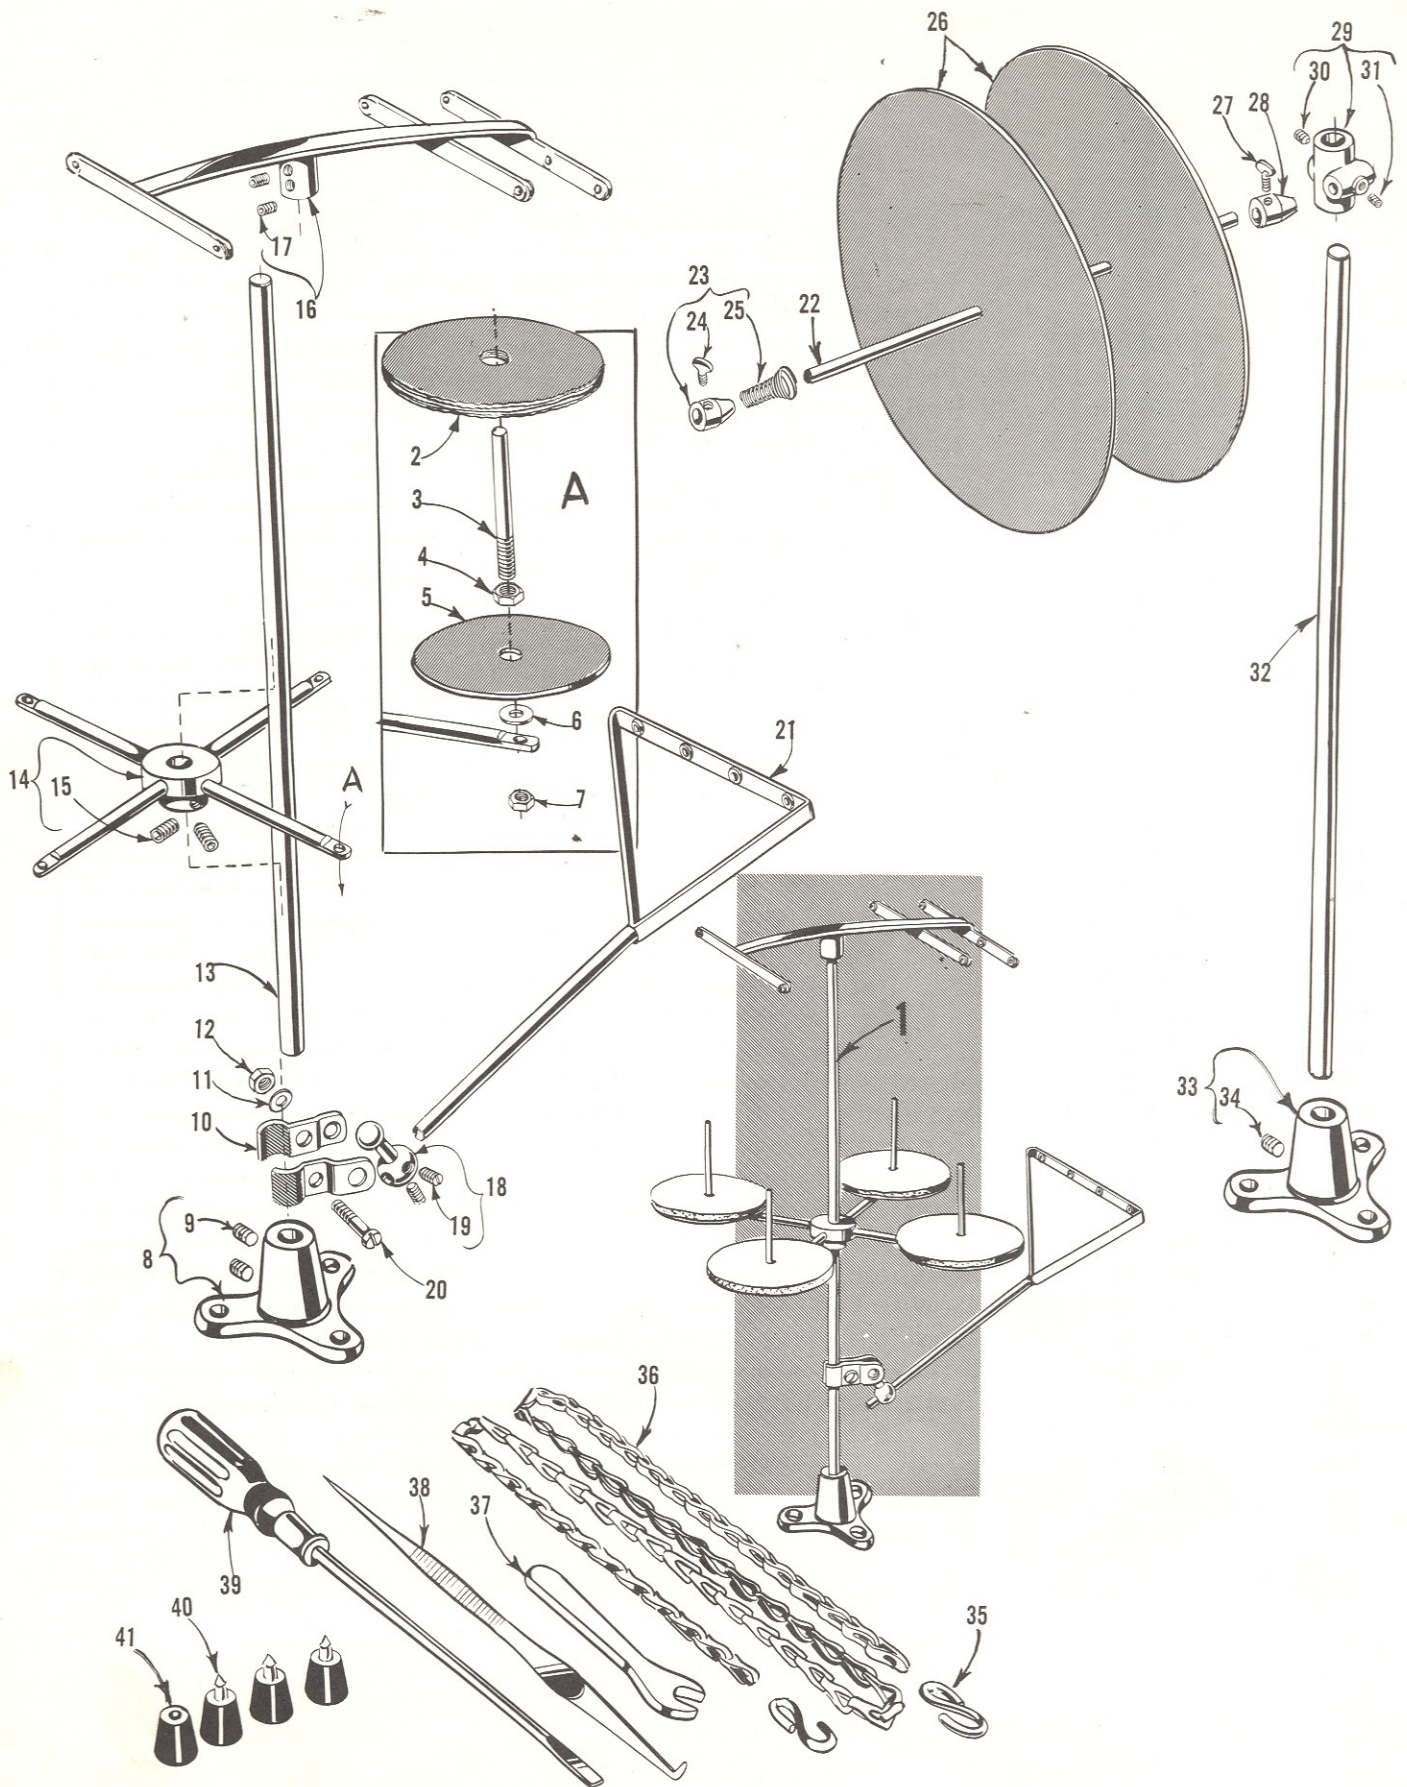

THREAD STAND, ACCESSORIES AND TAPE REEL

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Amt. Req.</u>
1	21101 H-4	Thread Stand, complete-----	1
2	21104 V	Pad, for thread cone -----	4
3	21114 W	Spool Pin -----	4
4	258 A	Nut -----	4
5	21114	Spool Seat Disc -----	4
6	652-16	Washer -----	4
7	258 A	Nut -----	4
8	21114 A	Thread Stand Base -----	1
9	22651 CD-3	Screw-----	1
10	21114 U	Lead Eyelet Ball Split Socket -----	2
11	652-16	Washer -----	1
12	21104 H	Nut -----	1
13	21104 B-24	Thread Stand Rod -----	1
14	21114 D-4	Spool Seat Support-----	1
15	22651 CD-5	Screw-----	2
16	21114 H-4	Eyelet Support -----	1
17	22651 CD-4	Screw-----	2
18	21114 T	Lead Eyelet Socket Ball-----	1
19	22651 CD-4	Screw-----	2
20	22810	Screw-----	1
21	21114 S-4	Lead Eyelet -----	1
*22	21102 B	Tape Reel Rod-----	1
*23	21177 A	Tape Reel Collar-----	1
*24	22647 K-24	Screw-----	1
*25	1349 A-5	Spring -----	1
*26	21178 A	Tape Holder Disc -----	2
*27	188 D	Screw-----	1
*28	753	Axle Cone -----	1
*29	21217 A	Rod Support -----	1
*30	22651 CD-4	Screw-----	1
*31	22650 CB-4	Screw-----	1
*32	21104 B-20	Tape Reel Support Rod-----	1
*33	21114 A	Tape Holder Base -----	1
*34	22651 CD-3	Screw-----	1
35	660-264	"S" Hook -----	2
36	421 D-34	Treadle Chain, 34 inches long -----	1
37	21388	Wrench, 3/8 inch open end -----	1
38	660-240	Thread Tweezers -----	1
39	21201	Screwdriver, 9/64 inch round blade, length overall 7 5/8 inches -----	1
40	51295 B	Isolator -----	3
41	51295 A	Isolator -----	1

*Available as an extra send and charge item, for use on Style 57700 N.

NUMERICAL INDEX OF PARTS

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
WO-3	21, 23	753.....	33	22651 CD-3.....	33
18	23	1349 A-5.....	33	22651 CD-4.....	25, 33
18-355	15	6042 A.....	25	22651 CD-5.....	33
20	15, 29	7205 A.....	31	22726	29
CL21	21	7947.....	15	22729 C	23
22 JE	31	11635 B.....	19	22733 E	19
25 C	29	12934 A.....	21	22758 C	27
25 S	15, 29	12957 E.....	29	22760 A	29
27-435 Blk.....	21	15465 F.....	23	22768	21
28 B	21	21101 H-4.....	33	22768 B	15
39-79.....	15	21102 B.....	33	22793	19
50-216 Blk.....	31	21104 B-20.....	33	22798 C	25
50-458 Blk.....	23	21104 B-24.....	33	22799 B	31
50-895 Blk.....	19	21104 H.....	33	22801	25
52 A	15	21104 V.....	33	22810	33
73	23	21114.....	33	22829	15, 17, 23
73 A.....	31	21114 A.....	33	22834 A	25
74 E.....	27	21114 D-4.....	33	22839	17
77.....	21, 25	21114 H-4.....	33	22839 C	29
87.....	17	21114 S-4.....	33	22840 A	31
87 U	23, 31	21114 T.....	33	22845 B	29
88.....	23	21114 U.....	33	22845 N	15
88 B.....	21	21114 W	33	22848	15, 17, 29
88 D.....	15	21177 A.....	33	22863 C	25
89.....	21	21178 A.....	33	22874	23
90.....	19	21201.....	33	22875 H	25
91.....	31	21217 A.....	33	22882 C	23
95.....	15, 19, 21	21375 AV	15	22889 A	15
96.....	23	21388	33	22891 B	25
98.....	21, 23, 25	21657-3.....	27	22894 E	17
98 A.....	15	21657 E.....	25, 31	22894 J	21
109.....	27	21657 W	27	22894 X	21
187 A.....	29	21657 X	19	22894 AA.....	25
188 D.....	33	21657 Y.....	27	22894 AB.....	21
258 A.....	17, 23, 25, 33	22513.....	15, 23	23306 AG.....	15
269.....	23, 25	22516.....	31	23306 AH.....	15
357.....	17	22524.....	17	23306 AJ.....	15
402.....	27	22525 A.....	25	23306 AK.....	15
421 D-34.....	33	22526 C.....	29	23306 AL.....	15
531.....	27	22528.....	25, 31	23306 AM	15
604.....	19	22539 R.....	19	23306 AN.....	15
652-16.....	33	22541 C.....	19	23306 AP.....	15
660-202.....	21	22543 A.....	25	23306 AR.....	15
660-207.....	27	22548.....	17	23306 AS.....	15
660-212.....	21	22557 G.....	27	23306 AT.....	15
660-215.....	21	22559 A.....	21	23405 T	29
660-221.....	19	22559 G.....	21	23405 V	29
660-240.....	33	22562 A.....	21	23425 V	29
660-264.....	33	22563.....	23	23440 A	29
660-269 B.....	25	22564.....	21	23440 B	29
660-310.....	23	22569 B.....	19	23440 C	29
660-313.....	17	22569 C.....	15	23440 D	29
660-342.....	15	22570.....	17	29066 R	21
660-359.....	25	22574.....	21	29105 AJ	21
660-438.....	25	22580 D.....	25	29192 Z	23
660-455.....	19	22585.....	15	29348 AF	21
660-614.....	21	22585 A.....	17	29476 LL.....	21
666-149.....	25	22586 R.....	21	29476 MJ.....	25
666-214.....	17	22587 K.....	21	29476 NM-062	25
666-230.....	17	22593.....	31	29476 NM-072	25
666-259.....	19	22596.....	27	33174 B	23
719.....	23	22637 P-24.....	25	35731 A	15
		22647 K-24.....	33	35772 H	29
		22650 CB-4	33	35897 BV.....	19
		22651 CB-4	25	39543 N	25
				39552 C	27

NUMERICAL INDEX OF PARTS

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
39592 Z.....	27	52942 A.....	21	56382 N.....	15
39592 AK.....	27	52942 R.....	23	56382 Y.....	17
41391.....	25	52942 W.....	19	56382 AA.....	17
43266.....	27	52942 X.....	19	56382 AB.....	17
51054.....	21, 25	52942 Y.....	19	56382 AC.....	19
51147.....	21	52943 L.....	21	56383 A.....	27
51154 E.....	19	52957 C.....	31	56383 D.....	27
51216 M.....	21	52958 B.....	15	56383 W.....	27
51216 N.....	21, 23	52958 D.....	31	56383 X.....	27
51216 P.....	21	52978 G.....	29	56383 Y.....	27
51236 A.....	23, 25	54480 A.....	15	56390.....	19
51240 E.....	23	55235 D.....	25	56390 B.....	19
51242 M.....	23	55235 E.....	25	56390 E.....	19
51244 L.....	23	55244 G.....	23	56390 G.....	19
51244 N.....	23	56190.....	19	56391.....	15
51246.....	23	56301.....	29	56392 E.....	27
51247.....	21	56315 A.....	21	56392 F.....	27
51250 D.....	21	56316.....	21	56393.....	21
51250 F.....	21	56316 C.....	21	56393 C.....	15
51254 K.....	21	56321 D.....	21	56393 D.....	15
51256 C.....	27	56321 H.....	21	56393 J.....	23
51257 K.....	27	56321 J.....	21	56393 K.....	23
51257 M.....	27	56322 B.....	25	56393 L.....	19
51257 AA.....	19	56322 C.....	25	56393 P.....	19
51280 J.....	17	56334 B.....	25	56393 Q.....	19
51281 AC.....	29	56334 L.....	25	56393 T.....	19
51282 AH.....	29	56334 N.....	25	56393 W.....	19
51282 AJ.....	29	56335 D.....	25	56393 AB.....	21
51282 AK.....	29	56335 G.....	25	56393 AC.....	17
51283 H.....	27	56335 L.....	25	56394 A.....	19
51292 A.....	27	56336.....	25	56394 B.....	19
51292 C.....	15	56336 B.....	25	56394 C.....	19
51292 D.....	27	56336 C.....	25	56401.....	29
51292 F-1.....	27	56336 D.....	25	56480.....	17
51292 F-5.....	27	56341 E.....	23	56958.....	21
51292 F-14.....	15	56341 F.....	23	56958 A.....	21
51294 R.....	15	56341 G.....	23	57705 M.....	31
51295 A.....	33	56341 M.....	23	57713.....	23
51295 B.....	33	56342.....	23	57720-8.....	31
51430 D.....	31	56342 B.....	21	57720-12.....	31
51430 F.....	31	56343 C.....	21	57720-16.....	31
51491 C.....	27	56343 D.....	21	57722 E.....	25
51745.....	23	56343 E.....	21	57724-8.....	31
51758.....	15	56344 B.....	23	57724-12.....	31
52708 B.....	23	56350 D.....	21	57724-16.....	31
52717 E-12.....	21	56350 E.....	21	57725.....	25
52718-12.....	21	56350 F.....	21	57730-8.....	31
52720 B-16.....	31	56350 C.....	19	57730-12.....	31
52724 B-12.....	31	56354 D.....	21	57730-16.....	31
52724 B-16.....	31	56356.....	27	57744.....	23
52730 B.....	31	56381-207.....	29	57744 A.....	23
52782 C.....	15	56381-219.....	29	57770.....	17
52804 E.....	31	56382.....	15	57780.....	17
52817-16.....	21	56382 A.....	15	57834 G.....	25
52817 E-8.....	21	56382 B.....	19	57836 B.....	19
52818-8.....	21	56382 C.....	19	57841.....	23
52825 C.....	23	56382 D.....	17	57845 B.....	25
52825 D.....	23	56382 E.....	17	61256 G.....	19
52842 G.....	21	56382 G.....	17	61321 L.....	21
52892.....	27	56382 H.....	17	61341 J.....	25
52904 B.....	31	56382 J.....	17	63494 F.....	19
52904 E.....	31	56382 K.....	17	63494 G.....	19
52904 G.....	31	56382 L.....	17	63494 K.....	19
52923 D.....	25	56382 M.....	19		



Union Special[®]
INDUSTRIAL SEWING MACHINES

UNION SPECIAL maintains sales and service facilities throughout the world. These offices will aid you in the selection of the right sewing equipment for your particular operation. Union Special representatives and service men are factory trained and are able to serve your needs promptly and efficiently. Whatever your location, there is a Union Special Representative to serve you. Check with him today.

ATLANTA, GA.

BOSTON, MASS.

CHICAGO, ILL.

DALLAS, TEXAS

LOS ANGELES, CAL.

NEW YORK, N. Y.

PHILADELPHIA, PA.

MONTREAL, CANADA

TORONTO, CANADA

BRUSSELS, BELGIUM

LEICESTER, ENGLAND

LONDON, ENGLAND

PARIS, FRANCE

STUTTGART, GERMANY

Representatives and distributors in all important industrial cities throughout the world.

UNION SPECIAL CORPORATION
400 N. FRANKLIN ST., CHICAGO, ILL. 60610